

# Assembly Instructions

Caution : You must read this before you proceed

## Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside . For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.
- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

# KING BED

## N758P507995



### WARNING

#### STRANGULATION HAZARD.

NEVER place bed near windows where cords from blinds or drapes may strangle a child.  
NEVER suspend strings over bed.  
NEVER place items with a string, cord, or ribbon, such as hood strings or pacifier cords, around a child's neck. These items may catch on bed parts.  
ALWAYS follow assembly instructions.



### WARNING!

Not intended for children under the age of six. **INFANTS HAVE DIED FROM BECOMING ENTRAPPED IN BEDS.** Openings in and between bed parts can entrap the neck and head of a small child. NEVER use bed for child under the age of six.


The mattress must be appropriately sized for the bed. If the mattress is undersized, dangerous gaps can exist and a person can become entrapped or entangled in the frame and suffocate.

**Note: This Bed is NOT a TOY.**

**Keep your child/children at bay during the assembly process.**



**The BED is HEAVY.**

**To prevent injury to yourself or damage to the product a minimum of two adults are required whenever moving or lifting it.**

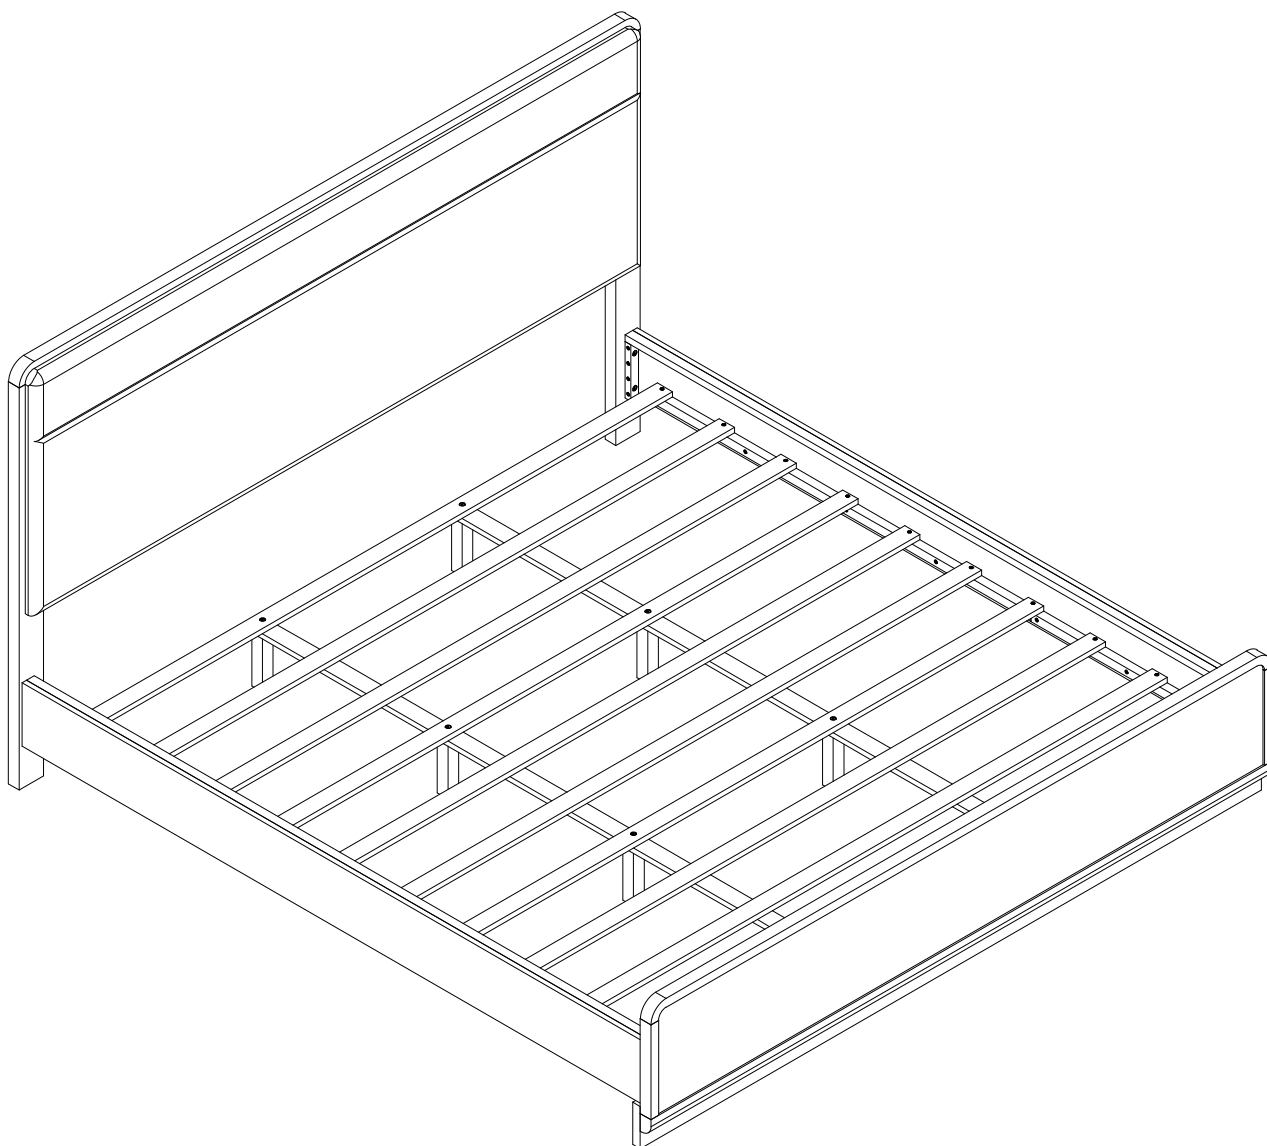






# PARTS LIST

## N758P507995

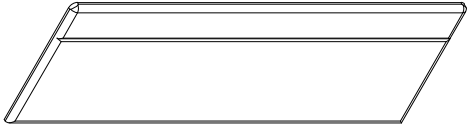
|   |                                                                                                                   |      |   |                                                                                                               |      |
|---|-------------------------------------------------------------------------------------------------------------------|------|---|---------------------------------------------------------------------------------------------------------------|------|
| ① | Left Headboard Post<br>          | 1PC  | ⑦ | Side Rails<br>              | 2PCS |
| ② | Right Headboard Post<br>         | 1PC  | ⑧ | Slats Support<br>           | 2PCS |
| ③ | Headboard Top Rail<br>           | 1PC  | ⑨ | Slats 1<br>                 | 4PCS |
| ④ | Upholstered Headboard Panel<br> | 1PC  | ⑩ | Slats 2<br>               | 6PCS |
| ⑤ | Headboard Bottom Rail<br>      | 1PC  | ⑪ | Footboard<br>             | 1PC  |
| ⑥ | Middle Leg<br>                 | 8PCS | ⑫ | Footboard Bottom Rail<br> | 1PC  |

# HARDWARE LIST

## N758P507995

|   |                                                                                                                                   |             |                                                                                                                                     |                                                                                                                                   |             |
|---|-----------------------------------------------------------------------------------------------------------------------------------|-------------|-------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|-------------|
| Ⓐ | Allen Wrench<br>                                 | 2PCS        | Ⓔ                                                                                                                                   | Bolts + Flat Washer<br>1/4*50mm + 2*8*15mm<br> | 8PCS<br>+1  |
| Ⓑ | Bolts<br>1/4*45mm / R35mm<br>                    | 4PCS<br>+1  | Ⓕ                                                                                                                                   | Bolts<br>1/4*35mm<br>                          | 12PCS<br>+1 |
| Ⓒ | Wooden Dowel<br>Ø 8 * 30mm<br>                   | 12PCS<br>+1 | Ⓖ                                                                                                                                   | Bolts<br>1/4*45mm<br>                          | 8PCS<br>+1  |
| Ⓓ | Bolts + Flat Washer<br>1/4*30mm + 2*8*15mm<br> | 4PCS<br>+1  | Ⓗ                                                                                                                                   | Screw 4*30 mm<br>                            | 20PCS<br>+1 |
|   |                                                                                                                                   |             | ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)<br><br> |                                                                                                                                   |             |

PRODUCT DETAILS

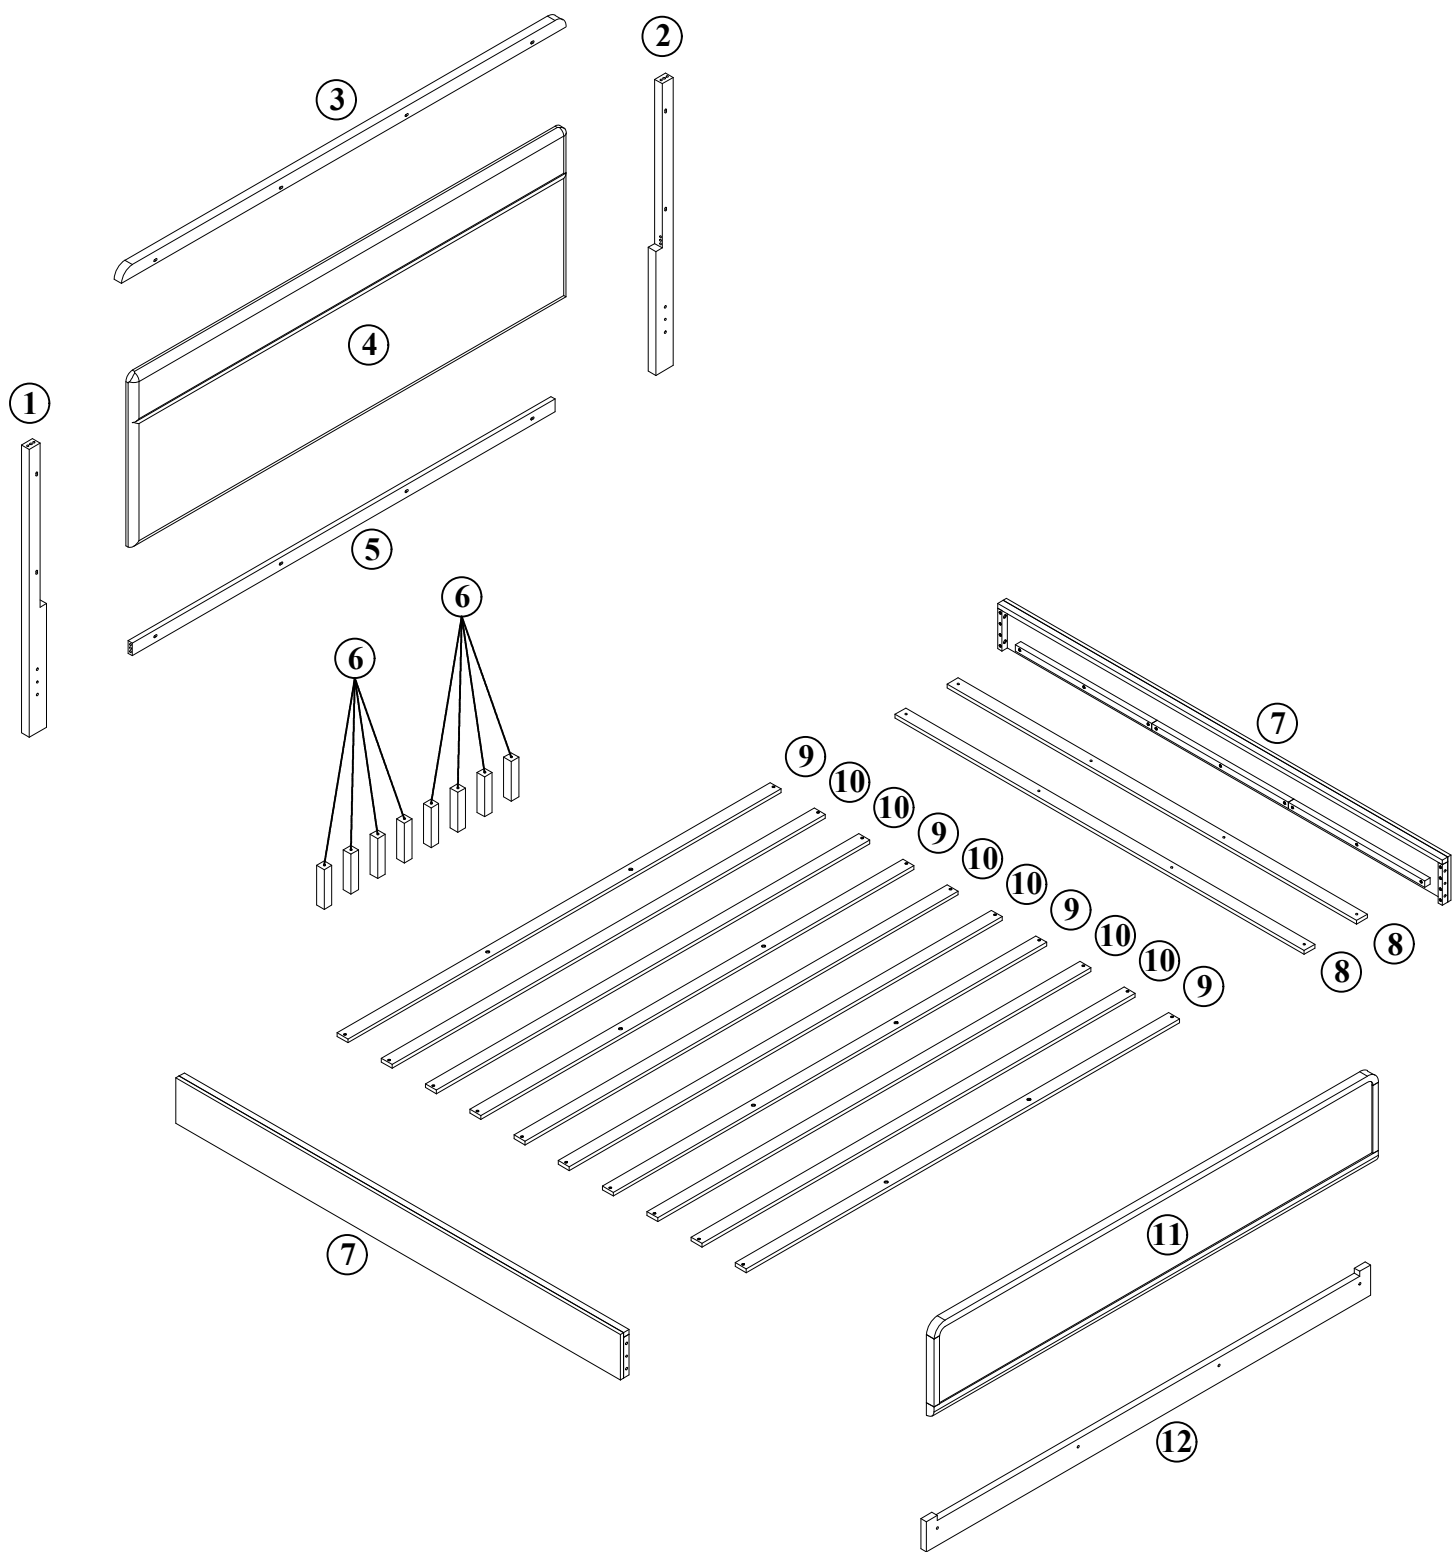

# ASSEMBLY PREPARATION


① 1PC



⑦ 2PCS




② 1PC



⑧ 2PCS




③ 1PC




⑨ 4PCS



④ 1PC

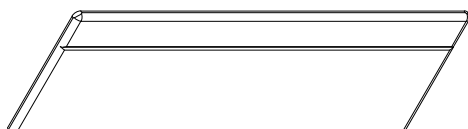

⑩ 6PCS



⑤ 1PC




⑪ 1PC



⑥ 8PCS



⑫ 1PC



|   |                                                                                                                                     |             |
|---|-------------------------------------------------------------------------------------------------------------------------------------|-------------|
| Ⓐ | Allen Wrench<br>                                 | 2PCS        |
| Ⓑ | Bolts<br>1/4*45mm / R35mm<br>                    | 4PCS<br>+1  |
| Ⓒ | Wooden Dowel<br>Ø 8 * 30mm<br>                   | 12PCS<br>+1 |
| Ⓓ | Bolts + Flat Washer<br>1/4*30mm + 2*8*15mm<br>   | 4PCS<br>+1  |
| Ⓔ | Bolts + Flat Washer<br>1/4*50mm + 2*8*15mm<br> | 8PCS<br>+1  |
| Ⓕ | Bolts<br>1/4*35mm<br>                          | 12PCS<br>+1 |
| Ⓖ | Bolts<br>1/4*45mm<br>                          | 8PCS<br>+1  |
| Ⓗ | Screw 4*30 mm<br>                              | 20PCS<br>+1 |



• Read instructions, cover to cover-



• Have 2 adults on hand for assembly-



• Do not assemble on flooring or carpet-




• Assemble on a clean non-marring surface (packing foam)-



• Save all packaging until finished-


# ASSEMBLY STEPS

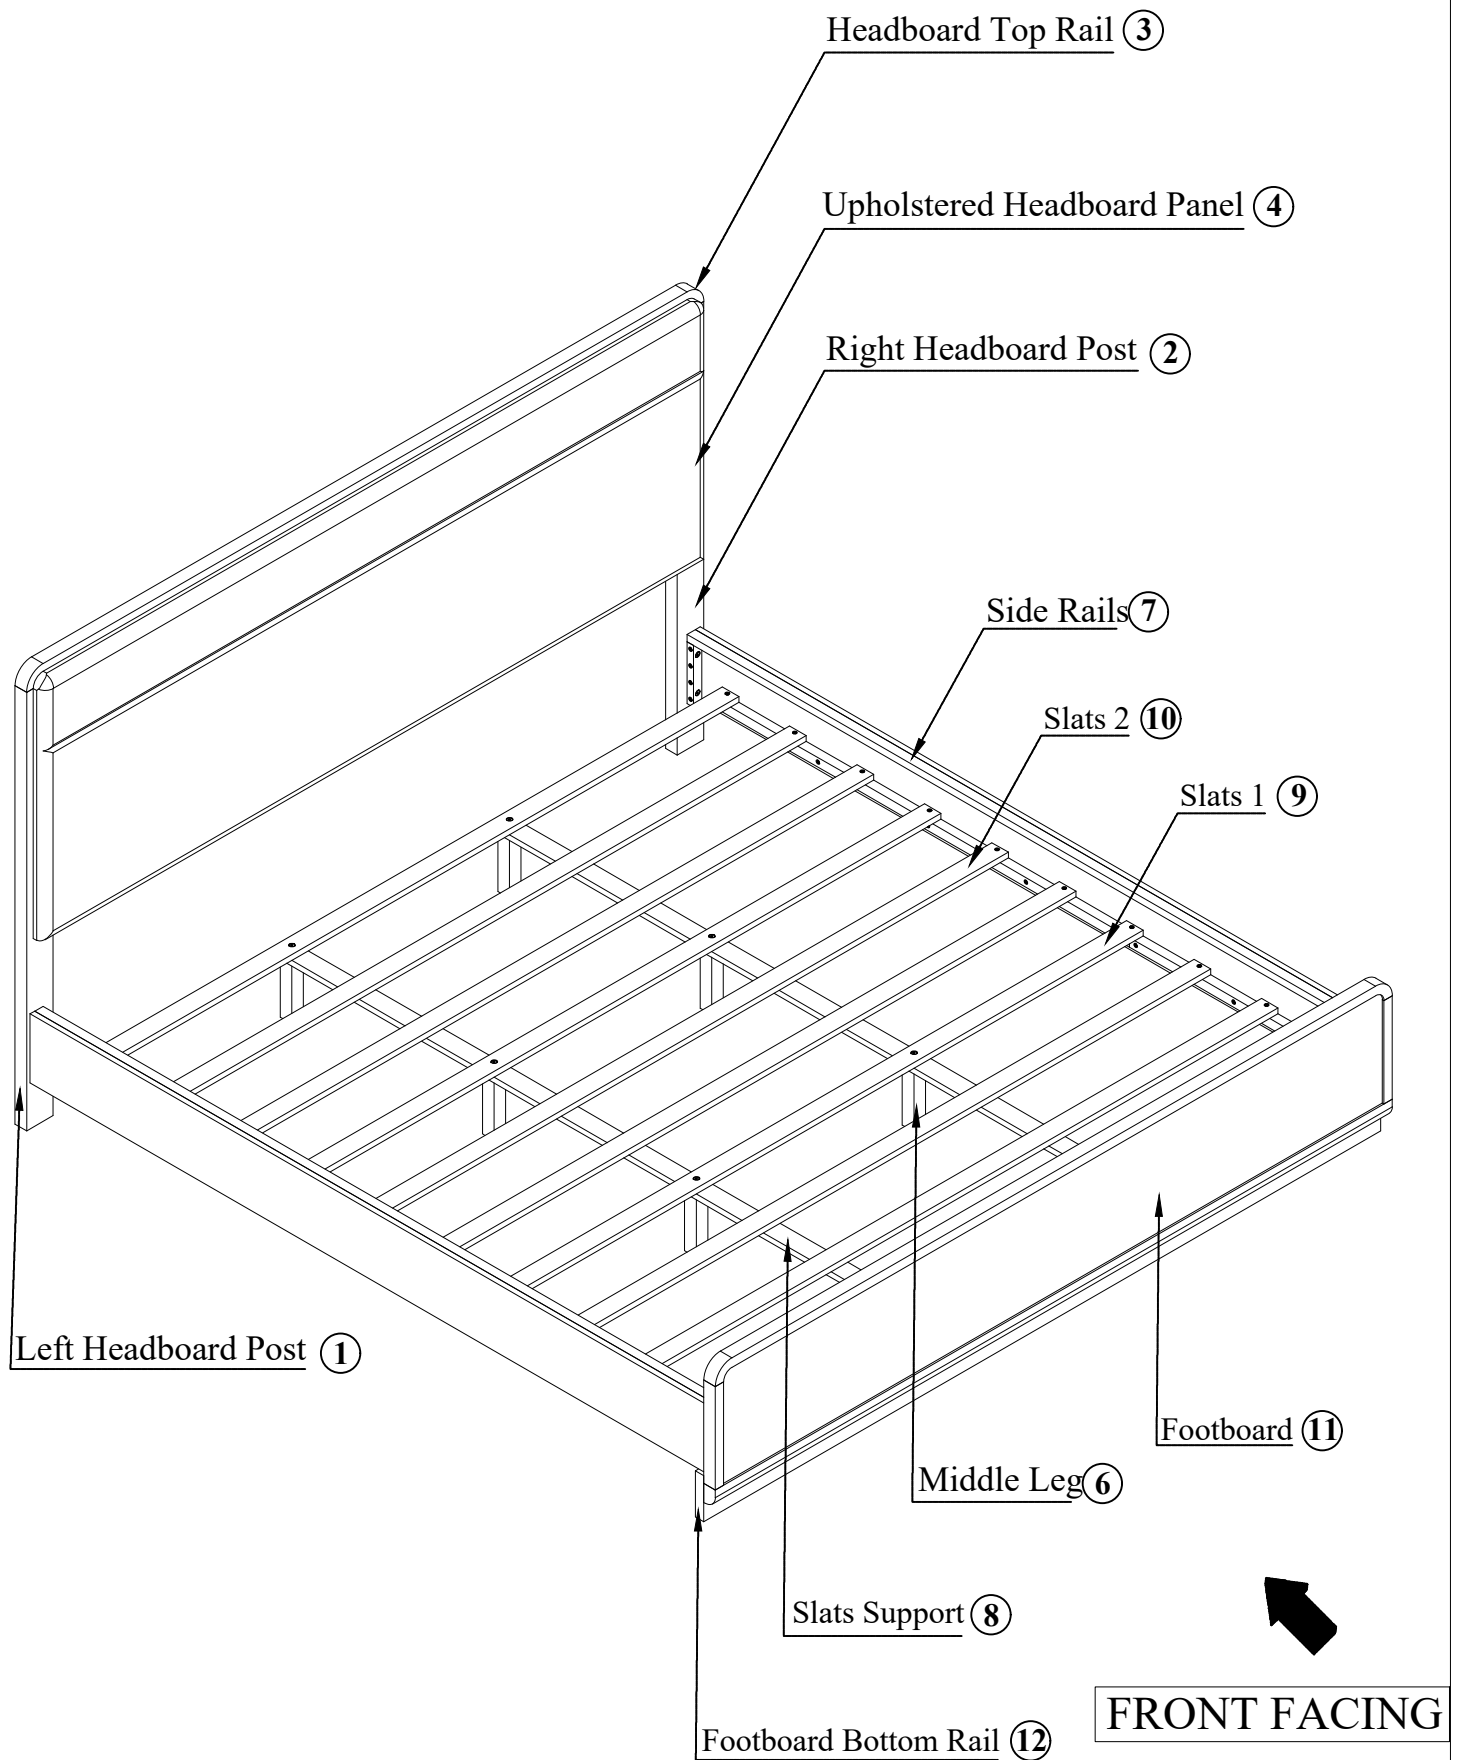


This bed has multiple parts and may require up to some 30 minutes - 1 hour to assemble. To give you an overview of the upholstered bed parts, the above picture is to help you put the various parts into perspective. please read through the instructions below to familiarise yourself with the parts and steps before assembly.

STEP 1


1



2



3




4




5




6




7




8



9




10

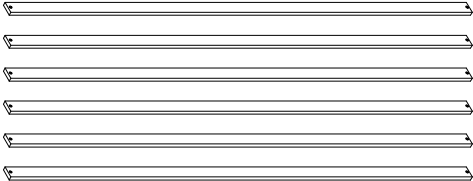

11




12




Unpack and place all part on a clean, non-marring surface

|        |     |              |                                                                                  |     |     |                            |                                                                                     |      |
|--------|-----|--------------|----------------------------------------------------------------------------------|-----|-----|----------------------------|-------------------------------------------------------------------------------------|------|
| STEP 2 | (A) | Allen Wrench |  | 1PC | (B) | Bolts<br>1/4*45mm / R35mm  |   | 2PCS |
|        |     |              |                                                                                  |     | (C) | Wooden Dowel<br>Ø 8 * 30mm |  | 4PCS |

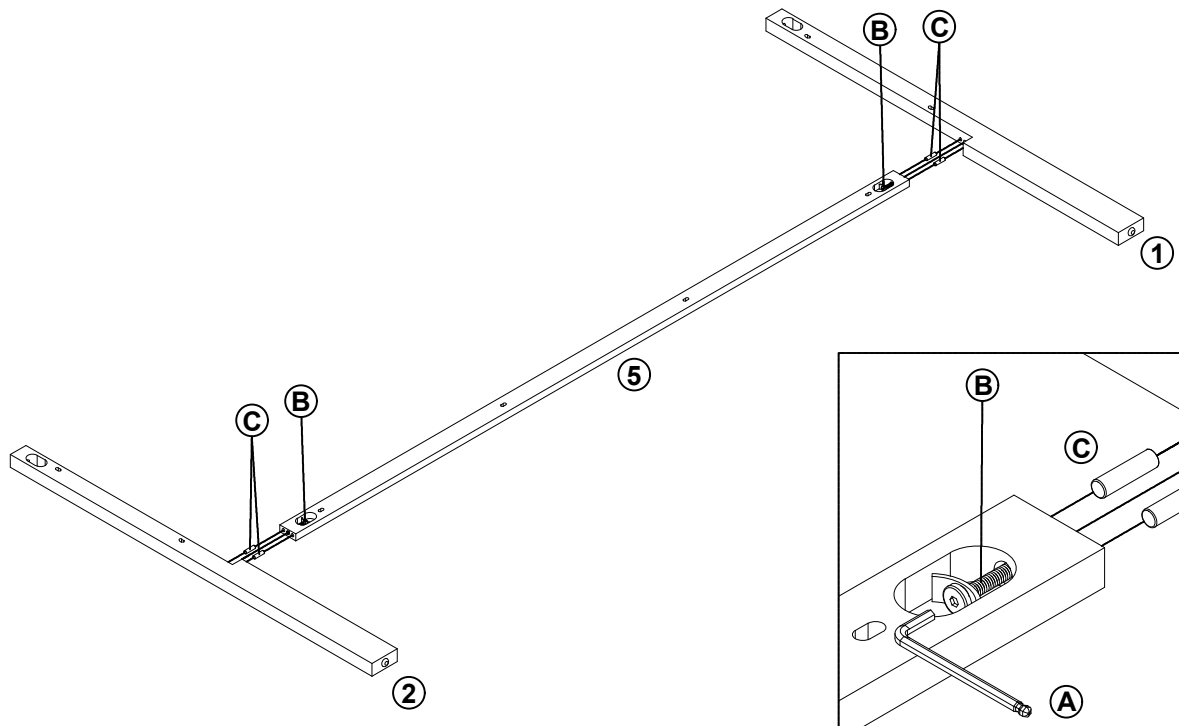

Step2 : Attach Left Headboard Post (1) & Right Headboard Post (2) to Headboard Bottom Rail (5) at the same time by using Wooden Dowel (C) and Bolts+Flashers (B) with Allen Wrench (A) as shown above.

|        |     |                            |                                                                                     |      |     |                           |                                                                                       |      |
|--------|-----|----------------------------|-------------------------------------------------------------------------------------|------|-----|---------------------------|---------------------------------------------------------------------------------------|------|
| STEP 3 | (C) | Wooden Dowel<br>Ø 8 * 30mm |  | 4PCS | (B) | Bolts<br>1/4*45mm / R35mm |  | 2PCS |
|        |     |                            |                                                                                     |      |     |                           |                                                                                       |      |

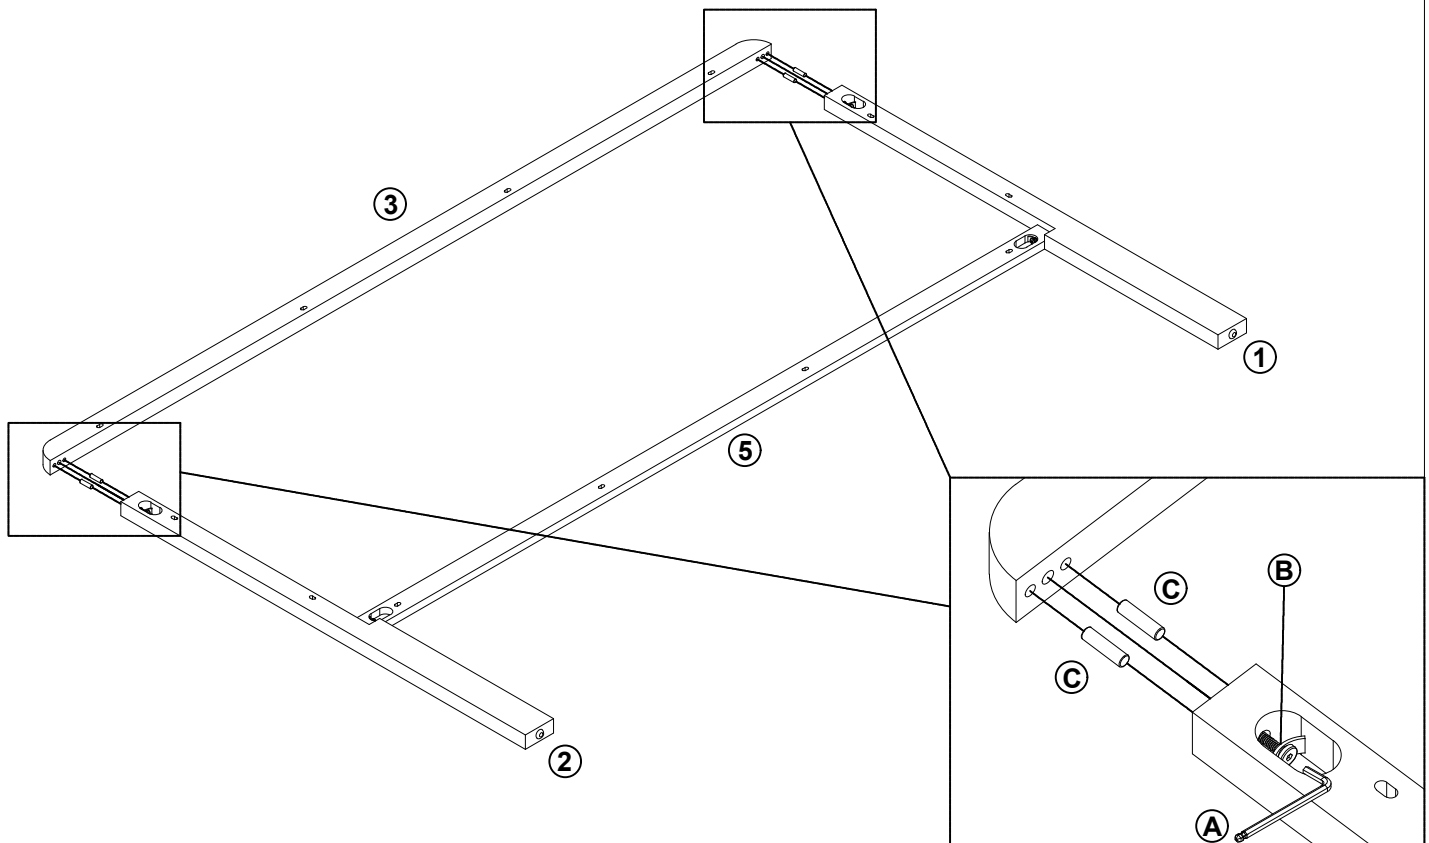


Step3 : Attach Headboard Top Rail (3) to Left Headboard Post (1) & Right Headboard Post (2) at the same time by using Wooden Dowel (C) and Bolts+Flashers (B) with Allen Wrench (A) as shown above.

STEP 4

(D)

Bolts + Flat Washer  
1/4\*30mm + 2\*8\*15mm





4PCS

(E)

Bolts + Flat Washer  
1/4\*50mm + 2\*8\*15mm



8PCS

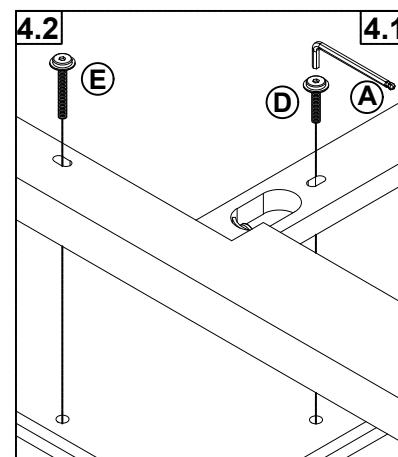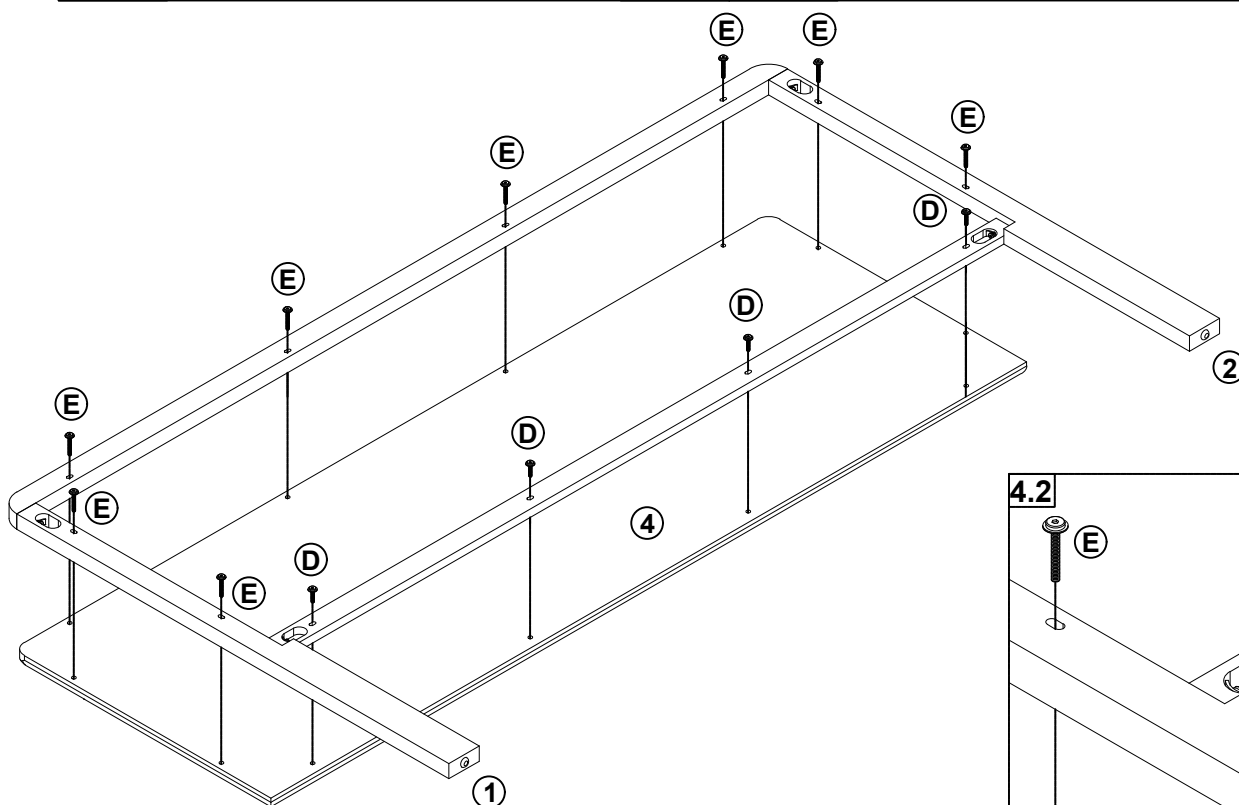

Step4 :

4.1:Attach Upholstered Headboard Panel (4) to Headboard Bottom Rail (5) by using Bolts+Flashers (D) with Allen Wrench (A) as shown above.

4.2:Attach Upholstered Headboard Panel (4) to Left Headboard Post (1)& Right Headboard Post (2)&Headboard Top Rail (3) by using Bolts+Flashers (E) with Allen Wrench (A) as shown above.



STEP 5

(F)

Bolts  
1/4\*35mm



4PCS

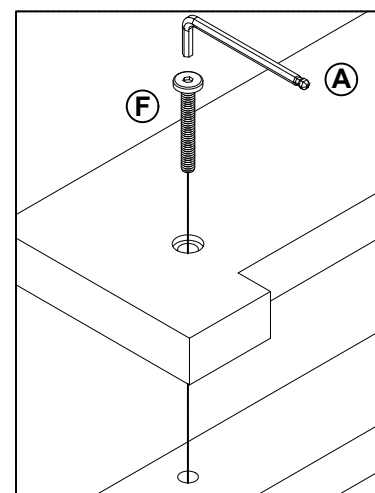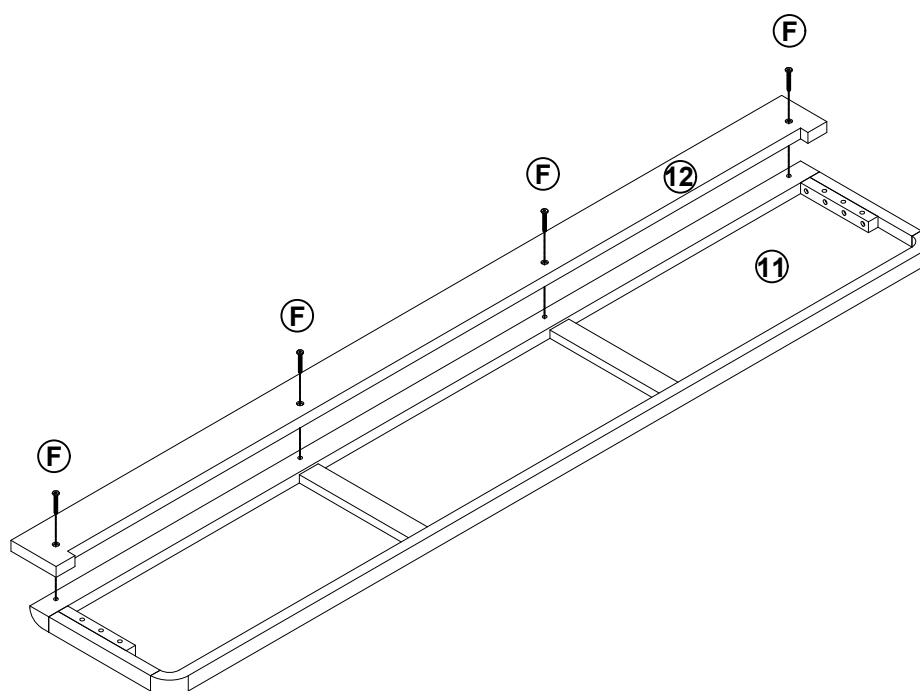

Step5 : Attach Footboard Bottom Rail (12) to Footboard (11) by using Bolts (F) with Allen Wrench (A) as shown above.

# STEP 6

(C)


Wooden Dowel  
Ø 8 \* 30mm




4PCS

(F)

Bolts  
1/4\*35mm



8PCS

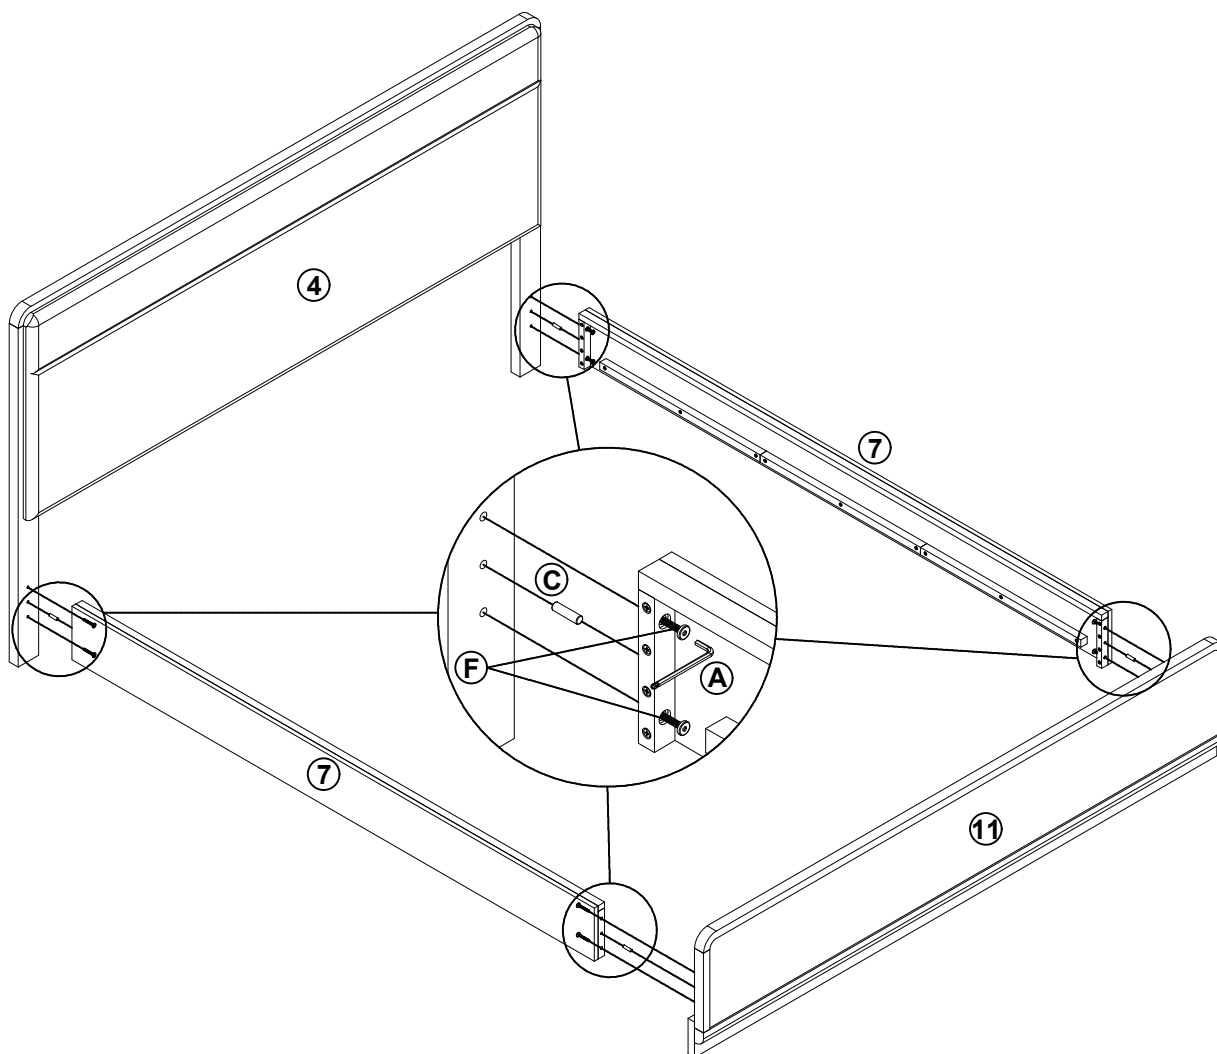

Step6:Attach Side Sails (7) to assembled Headboard Leg(1&2) and Footboard (11) by using Wooden Dowel (C),Bolts (F) with Allen Wrench (A) as shown above.



# STEP 7

(G)

Bolts  
1/4\*45mm




8PCS

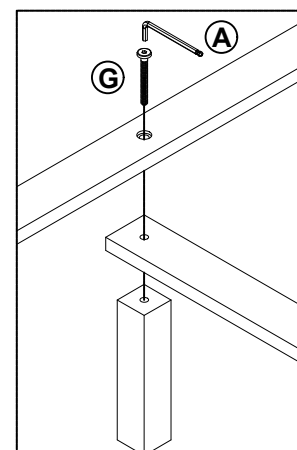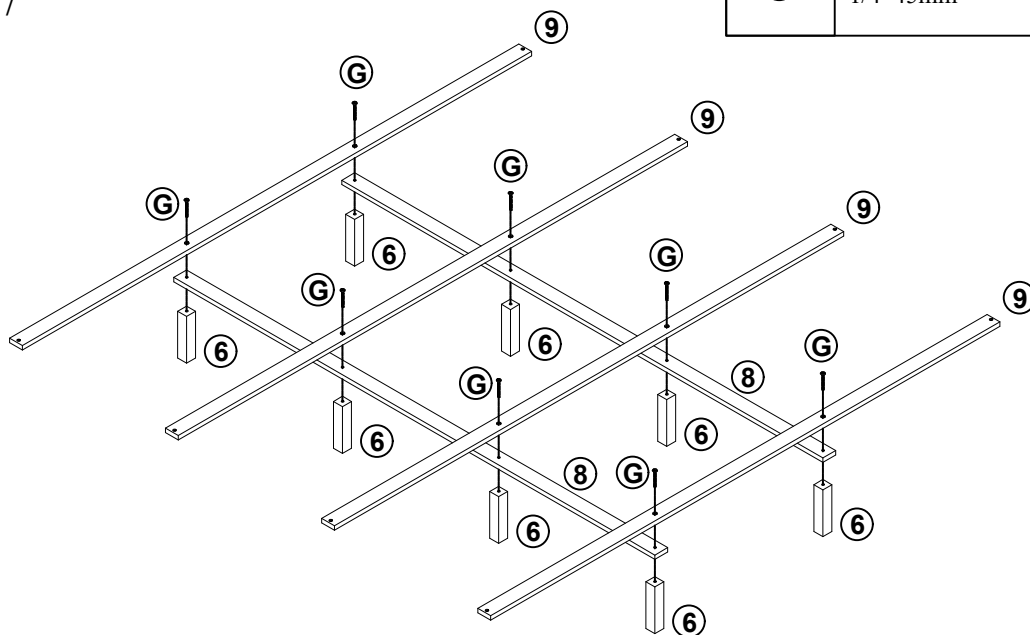

Step7:Attach Support Legs (6) ,Slats 1 (9) to Slats support (8) by using bolts (G) with Allen Wrench (A) as shown above.

STEP 8


|     |               |                                                                                    |      |
|-----|---------------|------------------------------------------------------------------------------------|------|
| (H) | Screw 4*30 mm |  | 8PCS |
|-----|---------------|------------------------------------------------------------------------------------|------|

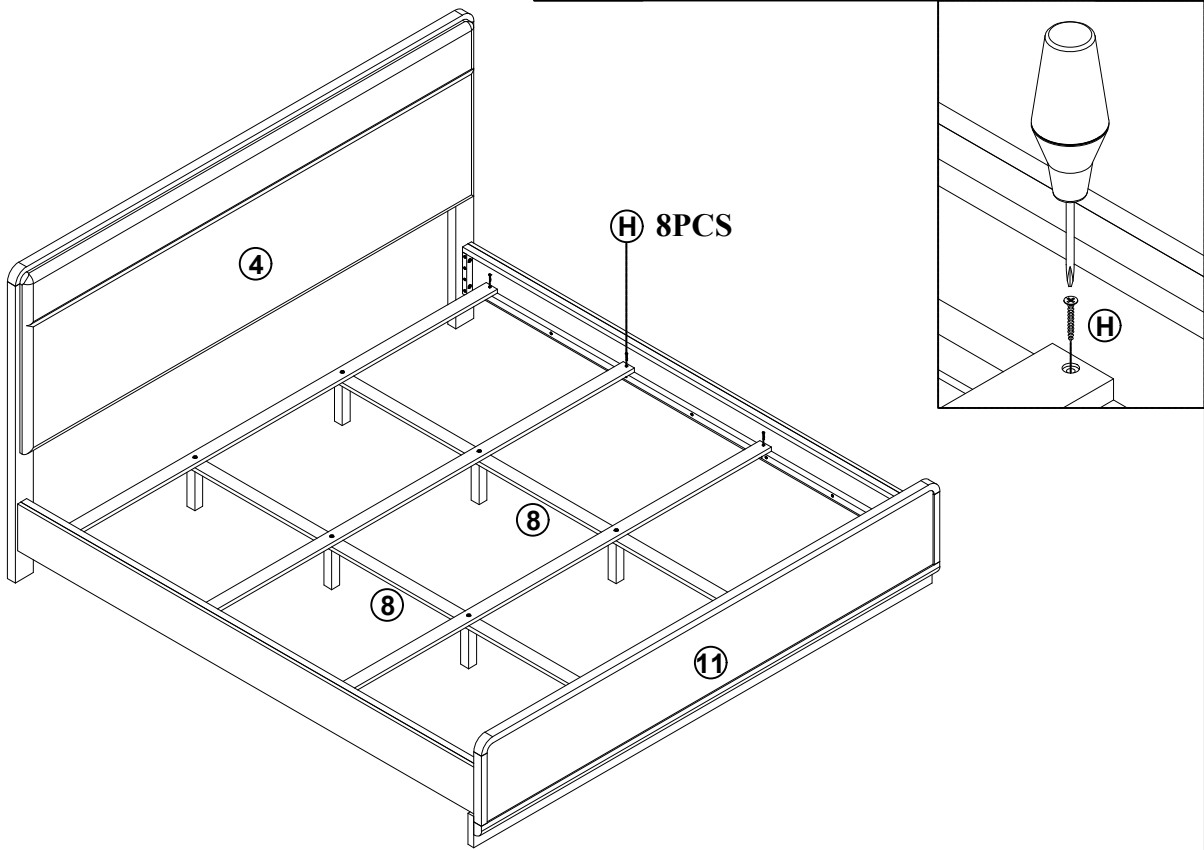

Step 8 : Attach assembled Slats (8) to Side Sails (11) by using Screw (H) with Screwdriver ( not provided ) as shown above.


STEP 9

|     |               |                                                                                       |       |
|-----|---------------|---------------------------------------------------------------------------------------|-------|
| (H) | Screw 4*30 mm |  | 12PCS |
|-----|---------------|---------------------------------------------------------------------------------------|-------|

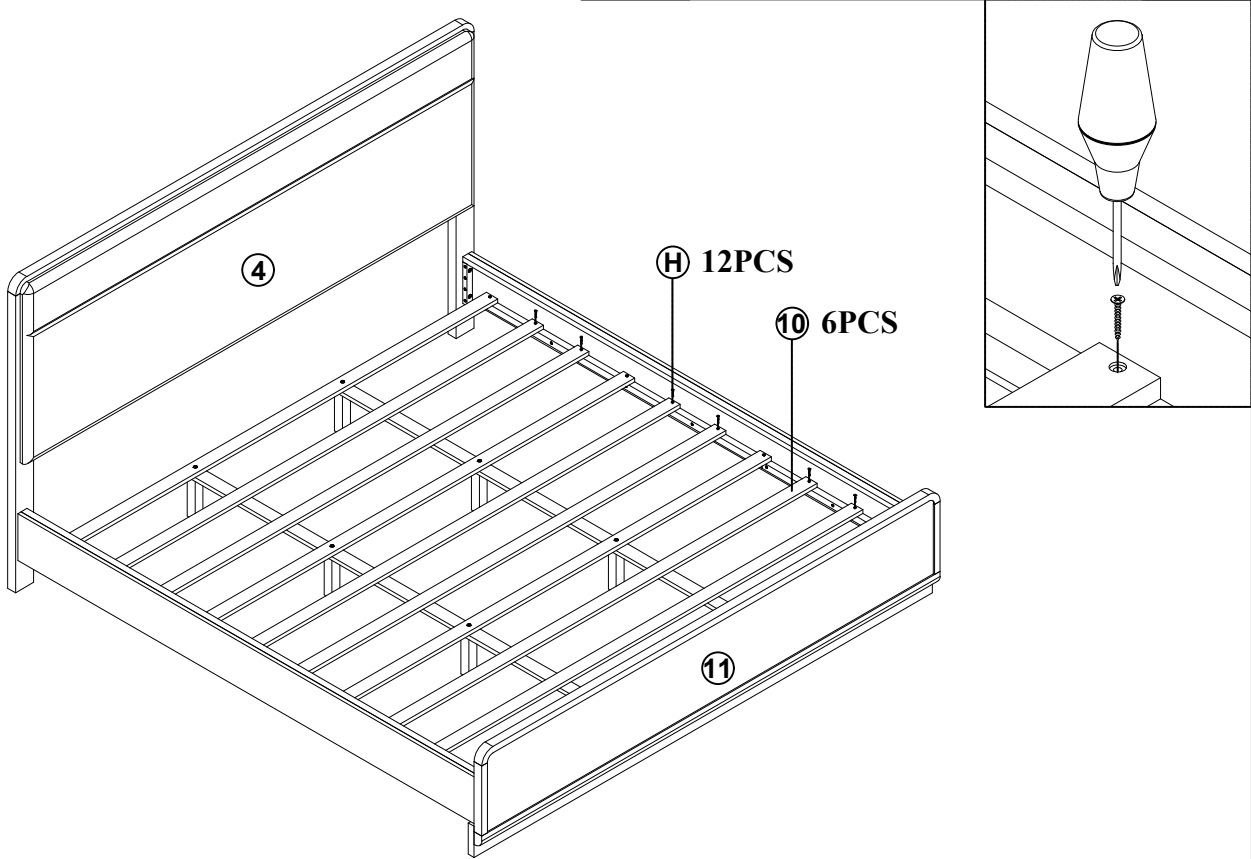


Step 9 : Attach Slats2 (10) to assembled Side Sails (11) by using Screw (H) with Screwdriver ( not provided)as shown above.

## STEP 10

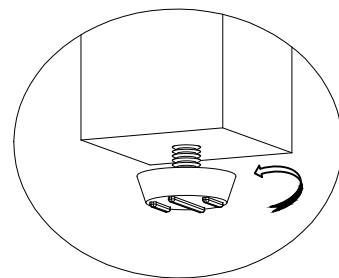

Adjust the feet to be level with the floor.

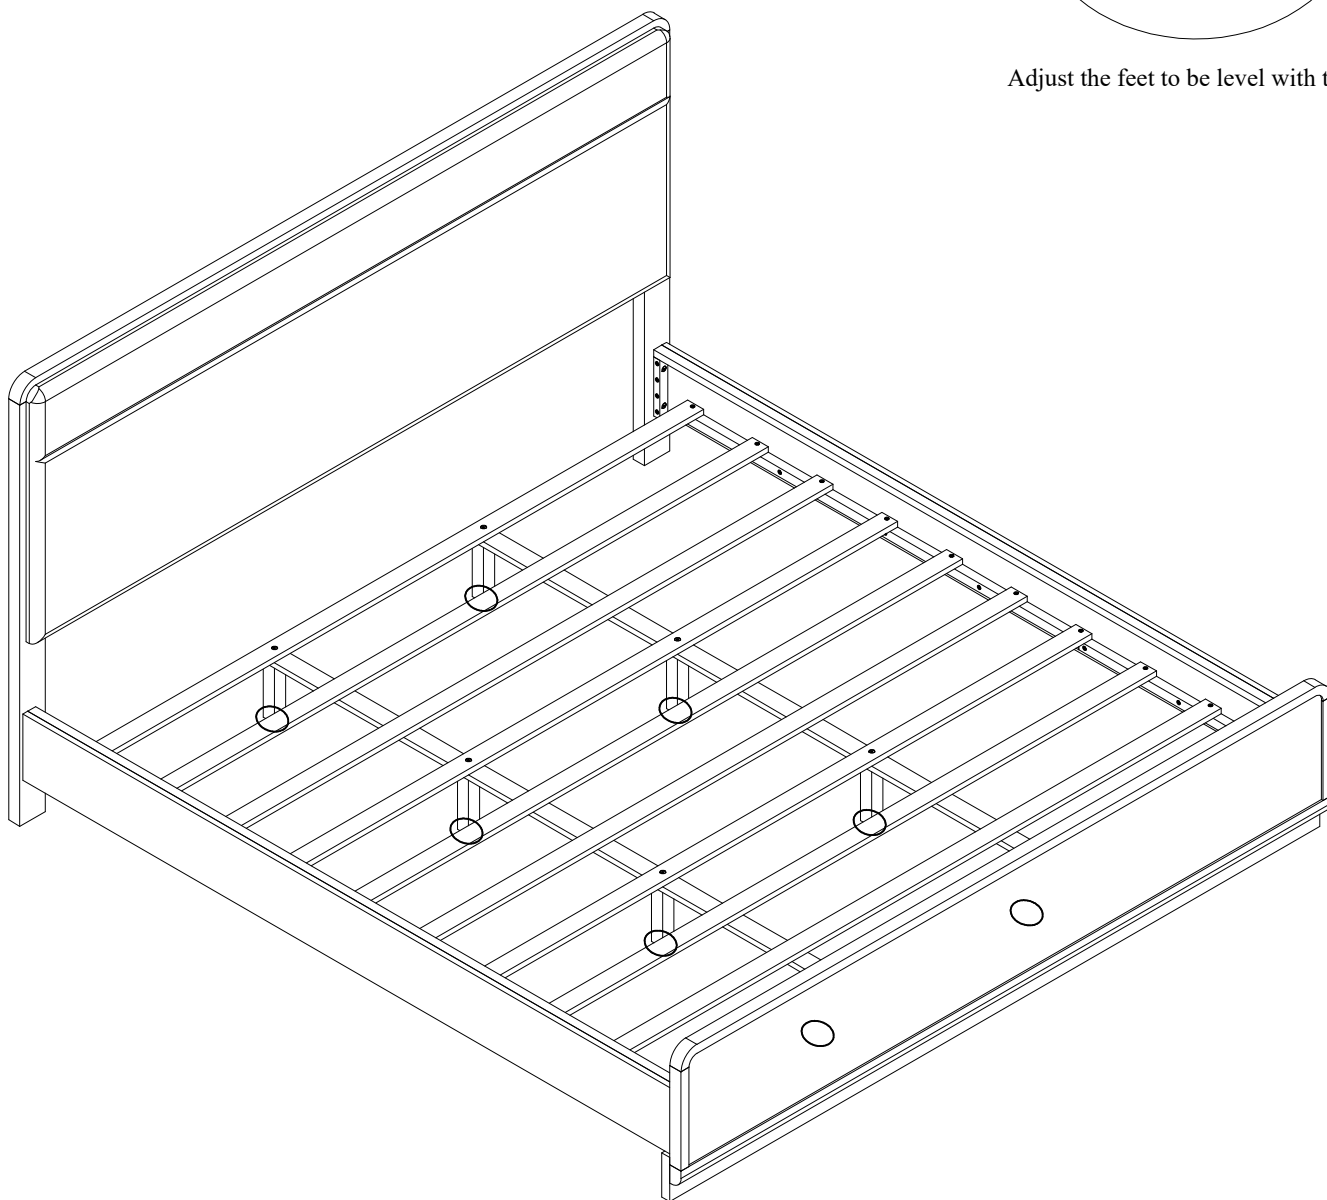

Check for wobbles.

In a sequential manner, gradually tighten all Bolts until evenly secured.

Inspect the Bed and make sure all parts are adequately connected.

With assistance from your adult partner, adjust the Levelers to desired height to avoid wobbles

To adjust the Levelers, get assistance from an adult partner to lift/ lean and hold the Bed while you are working.

Your Bed is ready for use.

**This Bed can only be used on a flat, level surface**