


INSTALLATION INSTRUCTIONS

10X12Windproof blind

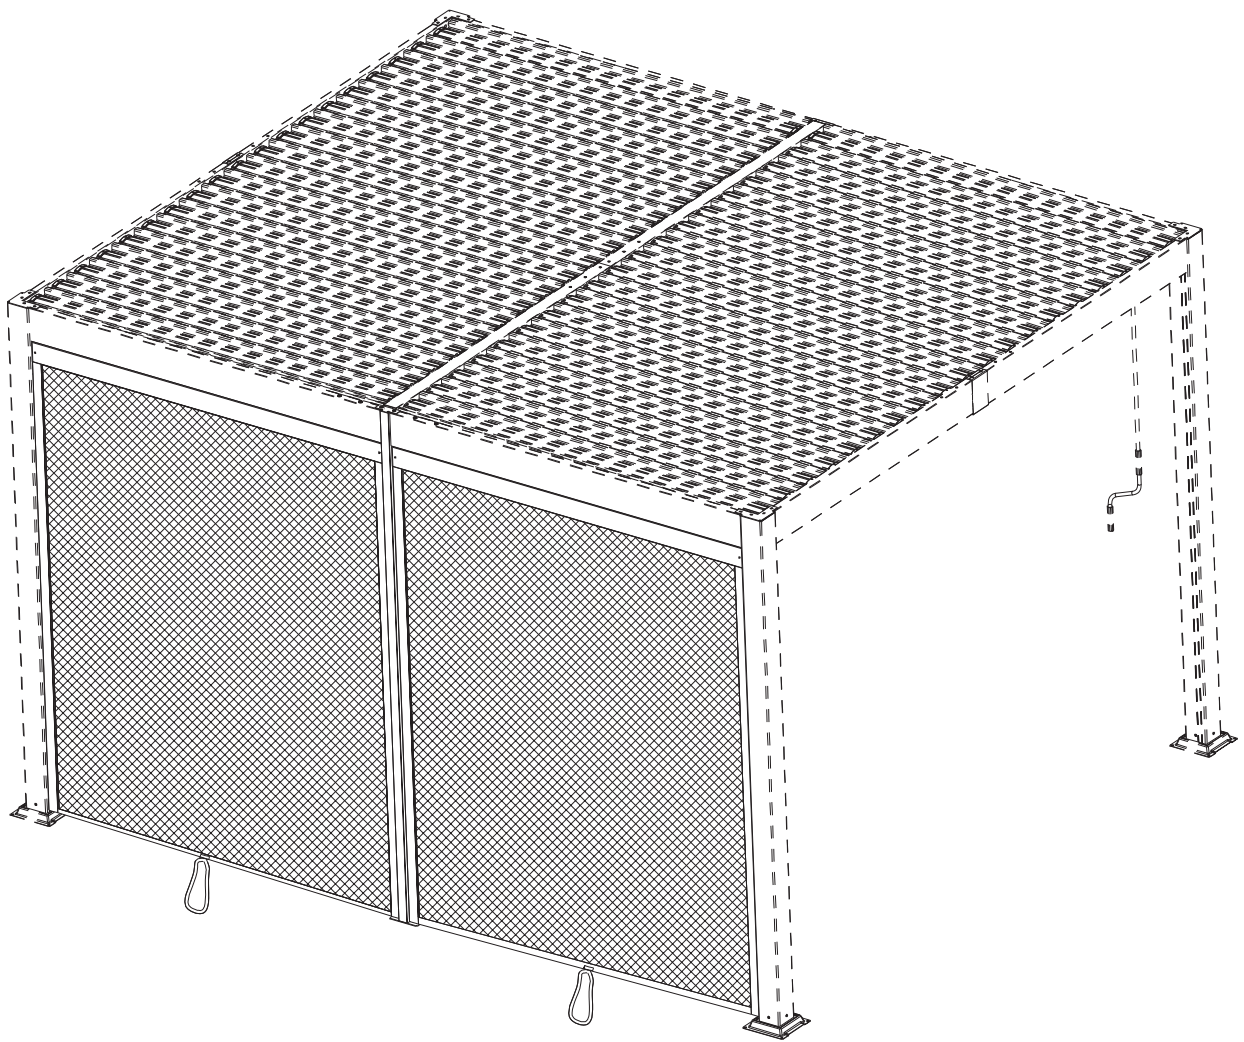

Our team is available 24/7 to help with any product questions. Contact us anytime!

Warning

- Please read and understand this manual carefully before assembly. Before starting to assemble the product, please ensure that all parts are present. Please check the parts against the packing list. If you find any missing parts, please contact us.
- Any assembly or maintenance work on this product must be performed by adults. We recommend that at least two adults be involved.
- Please check your state and local regulations before purchasing. Some areas may require a permit for the installation and use of this product. There may be specific procedures in your area.
- Please install the Pergola on a flat surface. Ground stakes are included with the product to secure the Pergola to the ground.
- Do not assemble the Pergola on sandy, muddy, or loose soil, as the ground stakes will not provide sufficient anchoring in these types of soil.
- If you wish to secure the Pergola to a wooden deck or concrete surface, please use anchor bolts suitable for these surfaces.
- Some parts may contain sharp edges. Protective gloves are recommended.
- Keep children and pets away while assembling the Pergola.
- Regularly check all nuts and bolts to ensure they are tightened.
- Before starting assembly, carefully read each step and ensure you understand each step.
- Please refer to the diagrams. Place all parts from the box in a clean area and lay them flat on the floor in front of you.
- Remove all packaging materials and place them back in the box. Do not discard the packaging materials until assembly is complete.

Maintenance

- Snow must be removed regularly during snowy weather. Remove snow when the snow accumulation on the roof exceeds 2 inches (5 cm). To avoid damage, use a plastic snow rake to remove excess snow and ice from the roof, and be careful to stay clear of falling debris.
- This Pergola is for decorative and shading purposes only and is not designed to withstand severe weather conditions, including strong winds, heavy rain, and heavy snow.
- The steel components of this Pergola are coated with rust-resistant paint. However, due to the inherent properties of steel, oxidation (rusting) may still occur on the surface if the protective coating is scratched. This is not a product defect and is therefore not covered under warranty.
- To minimize this occurrence, it is recommended to handle the product carefully during assembly and handling to avoid scratching the paint. If any scratches or damage occur, it is recommended to immediately repair the scratches with rust-resistant paint (not included).
- Do not use bleach, acid, or other abrasive cleaners on the roof or frame components.
- Please keep these instructions for future reference.

Pre-assembly

TOOLS THAT MAY BE REQUIRED (included in boxes)


***NOTE: Tools /equipment are not shown to actual size and scale.**



Screwdriver



Hex key




Wrench

EQUIPMENT REQUIRED (Not included in boxes)


***NOTE: Equipment are not shown to actual size and scale.**



LEVEL

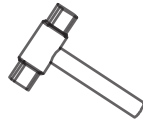

RUBBER Mallet

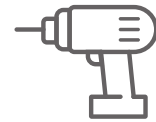

DRILL



SAFETY HAT



SAFETY GOGGLES



STEPLADDER

Matters needing attention



1. Two or more people are required for assembly.



2. Do not fully tighten screws prior to complete assembly.



3. Use a spirit level. Before proceeding, check that the device or component is perfectly level.





4. Use a square to check: Before tightening the bolts, check that the assembly is square.




5. Do not overtighten the mounting bolts. Overtightening can cause the wood to crack, splinter, and result in other structural damage.

Part Lists




Part Number	Part Image	Description	QTY
A		Roller box	2
A2		Column	1
B1		rails	2
B2		rails	2
C1		Cover plate	2
C2		Cover plate	2
D1		Slot	2
D2		Slot	2
G		Stopper	16
H		Screwdriver	1
V1		foot pad	1
V2		Cover plate	1
P2	 M6	Hex key	1
L	 M6x62	Anchor bolt	2
O		Wrench	1

Hardware Pack

Part Number	Part Image	Description	QTY
E	 ST4.8x25	self-tapping screw	20
F	 ST3.5X13	Flat head hexagonal screw	16
K	 ST4.2x25	expansion bolt	2
J	 ST4.2x25	Countersunk hexagonal screw	2
S	 M6x15	High foot screw	2

STEP 1: Remove existing fittings.

1. Remove existing screws and bottom rail brackets.

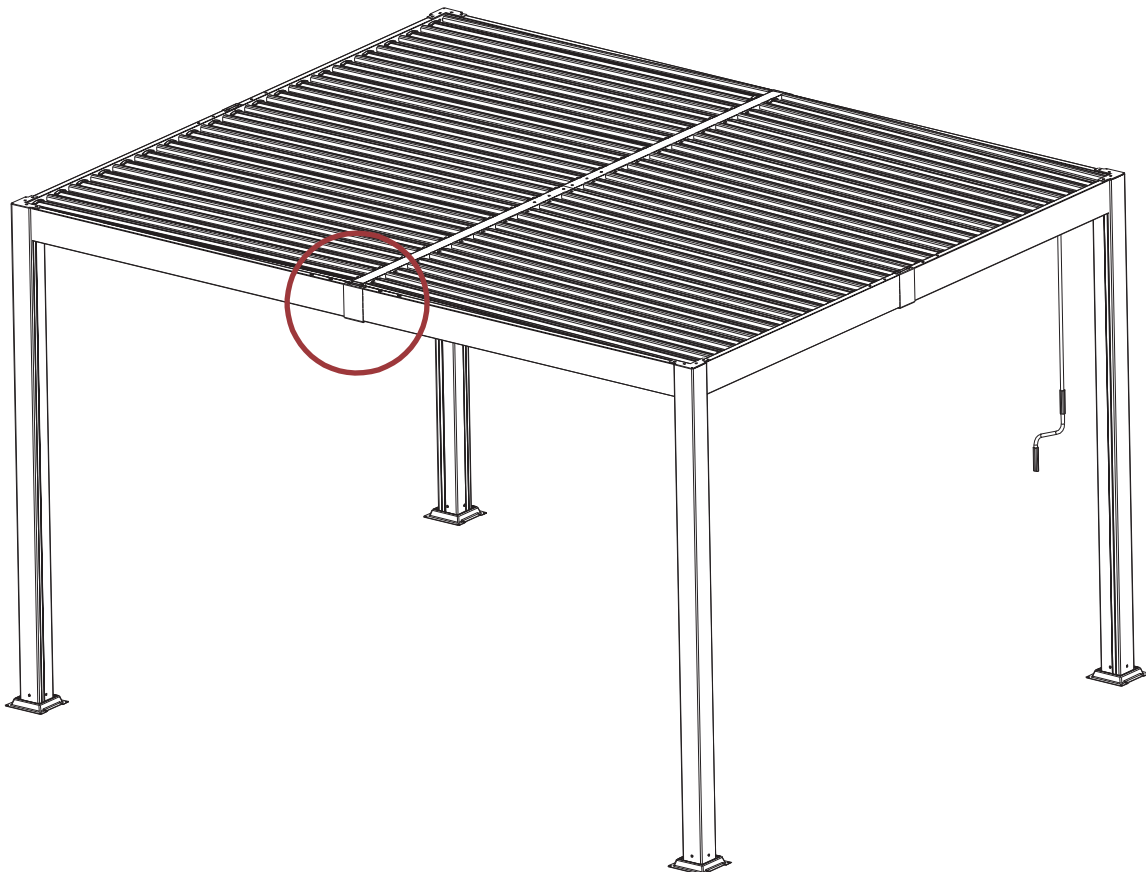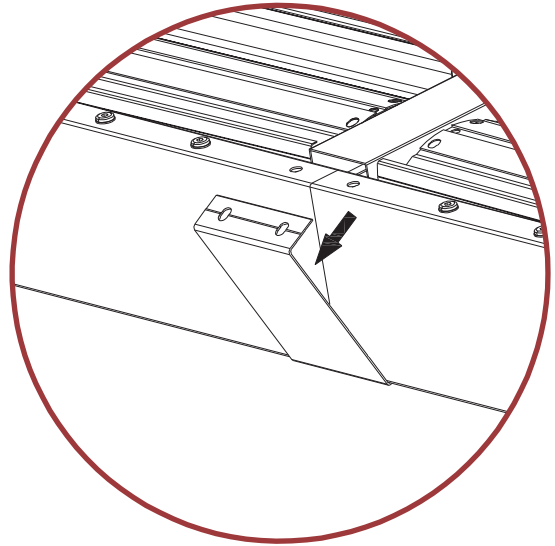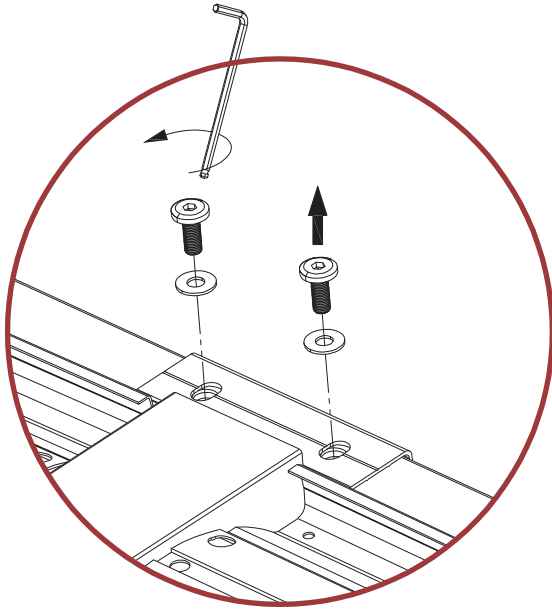


STEP 2: Install columns

A2:1PC


V1:1PCS

K:2PCS
ST4.2X25

1. Secure foot pad V1 (1pc) to column A2 (1pc) with countersunk self-tapping screws K (2pcs) .

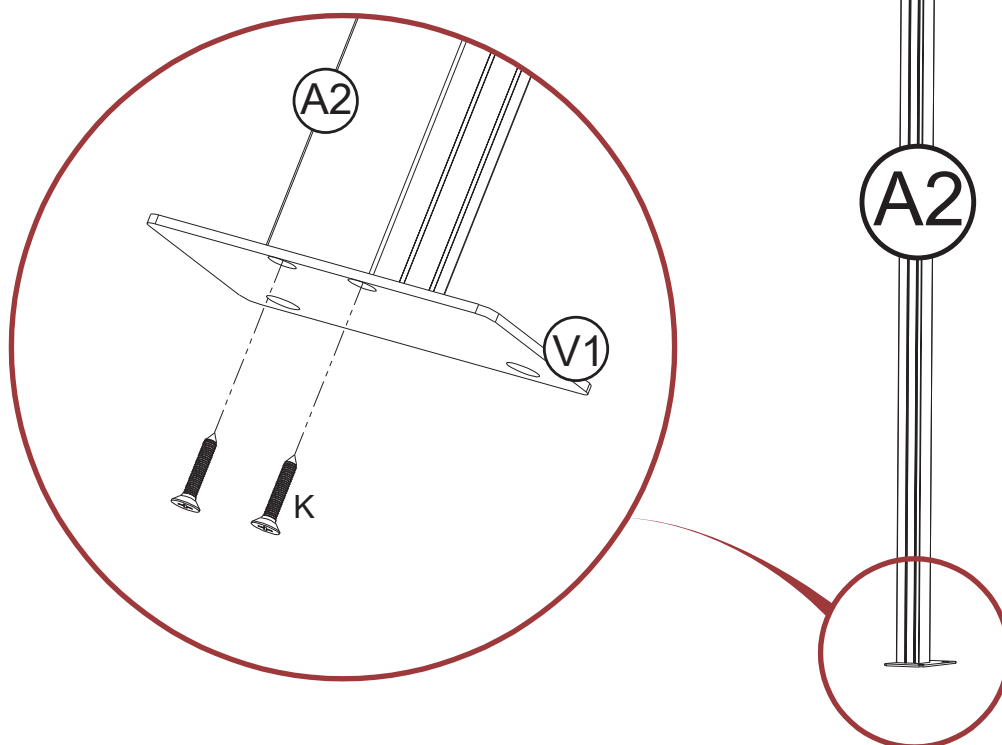

STEP 3: Install frame



V2:1PCS





J:2PCS

ST4.2X25






S:2PCS


M6X15

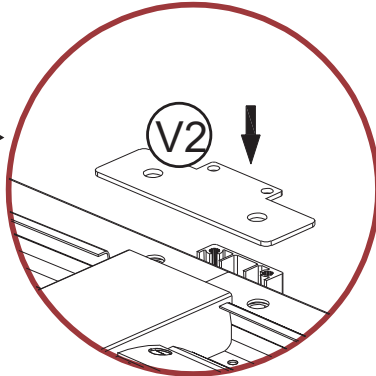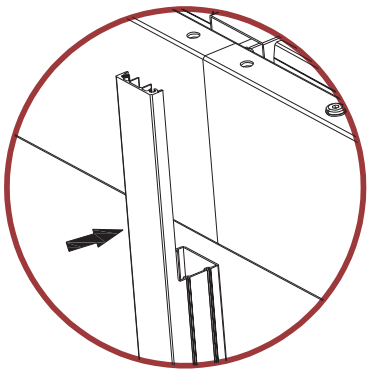


1. Secure cover plate V2 (1pc) to center column A2 (1pc) with self-tapping screw J (2pcs) , and to the beam with flat hex screw S (2pcs) .

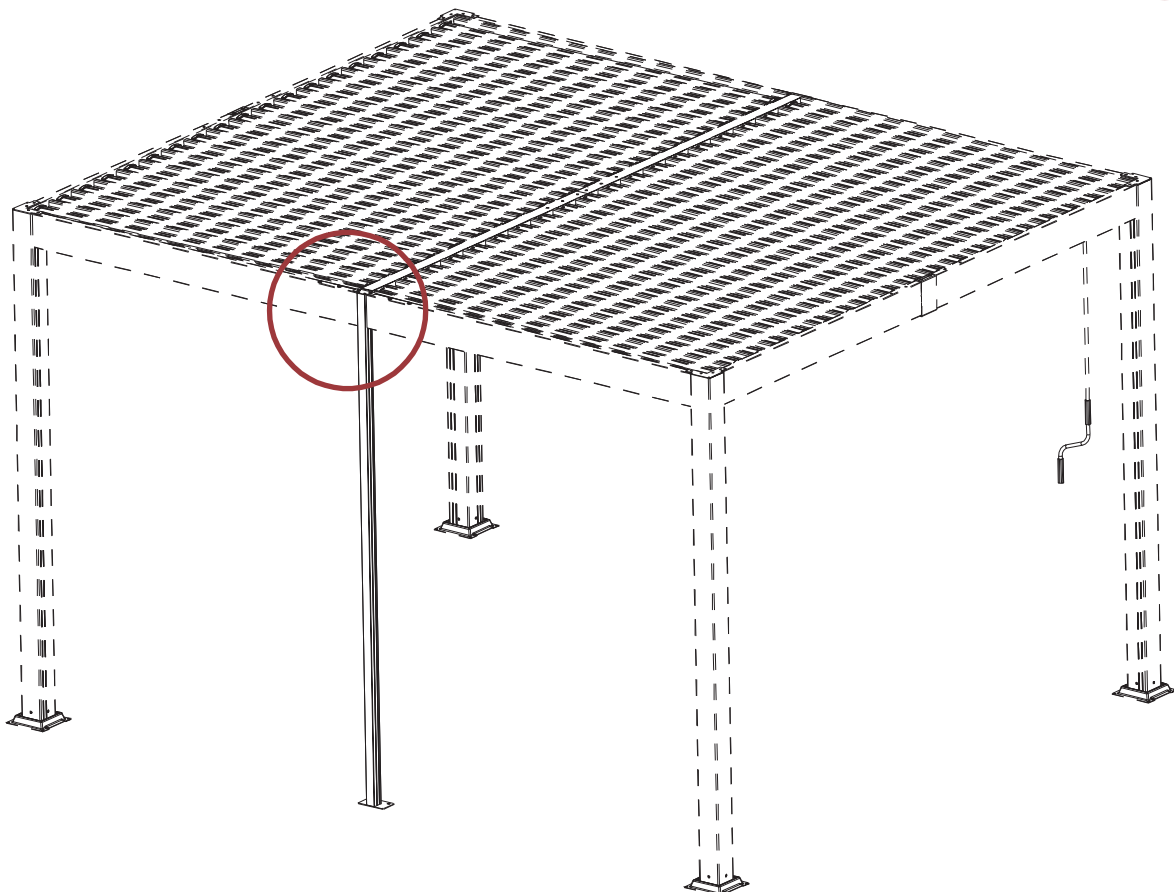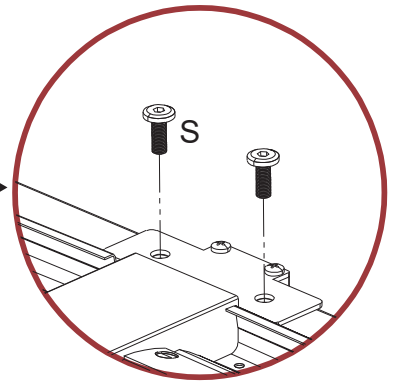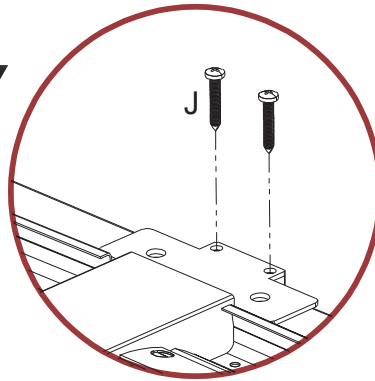


STEP 4: Install frame

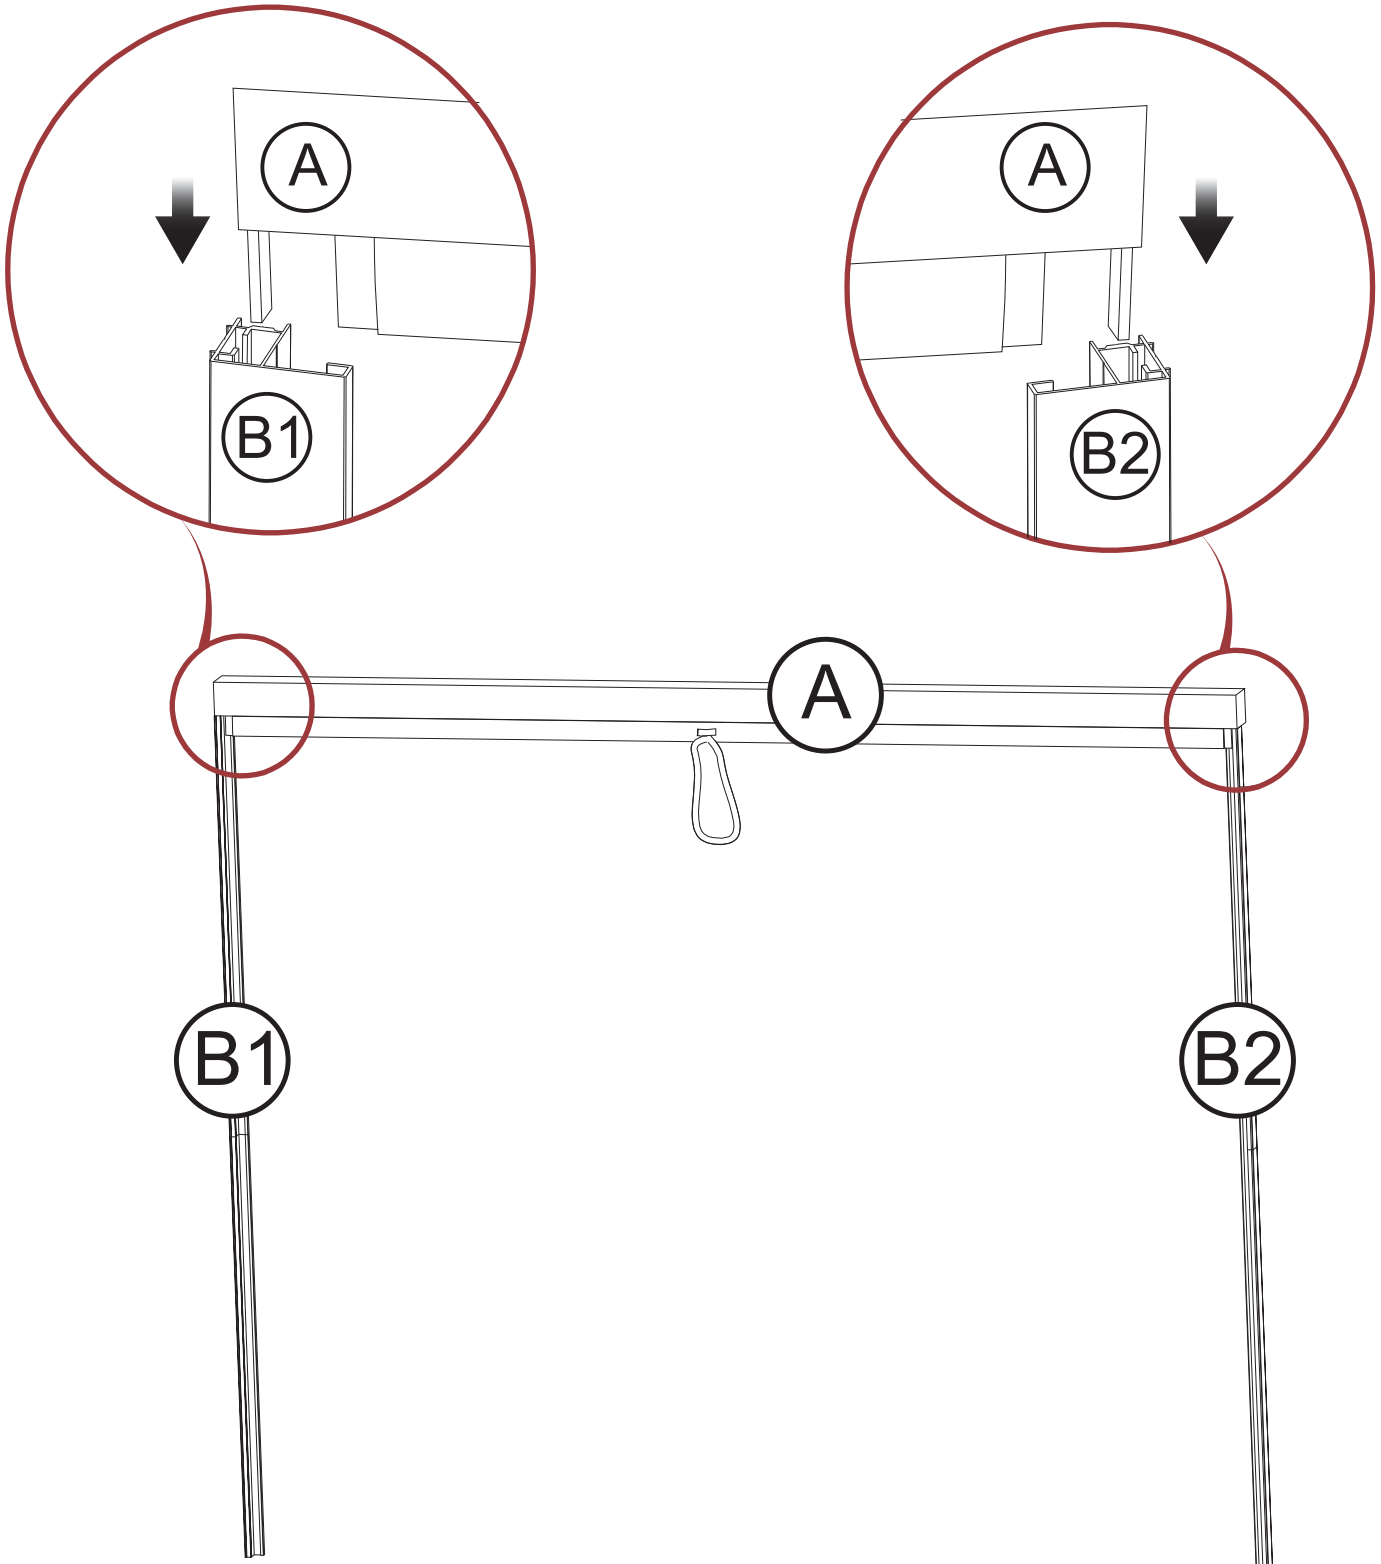

STEP 5: Install frame

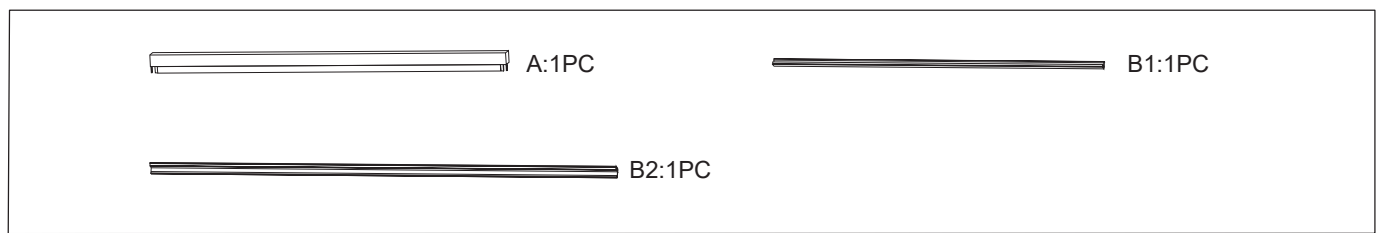


1. Insert rails B1 (1pc) and B2 (1pc) into the bracket on roller box A (1pc) .

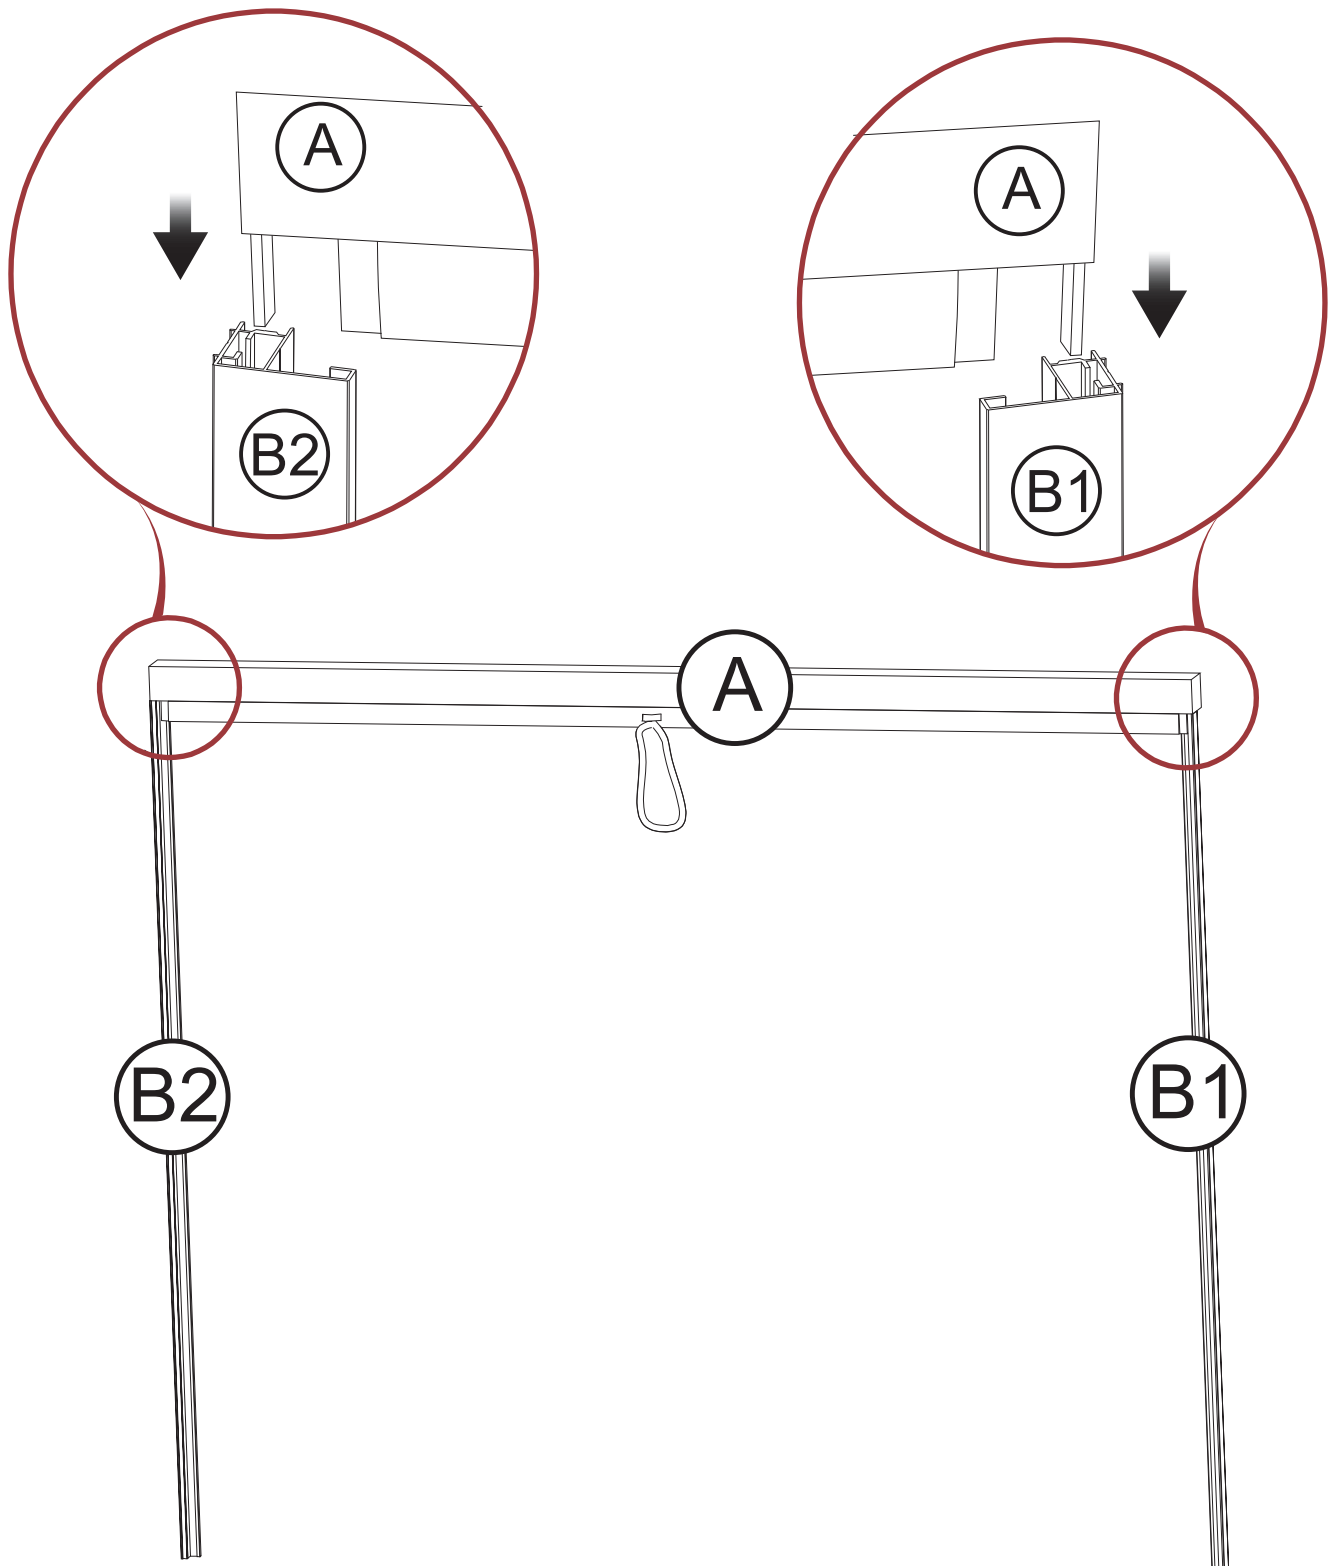

STEP 6: Secure the windproof blind




1. Slide pre-assembled windproof blind into the awning.

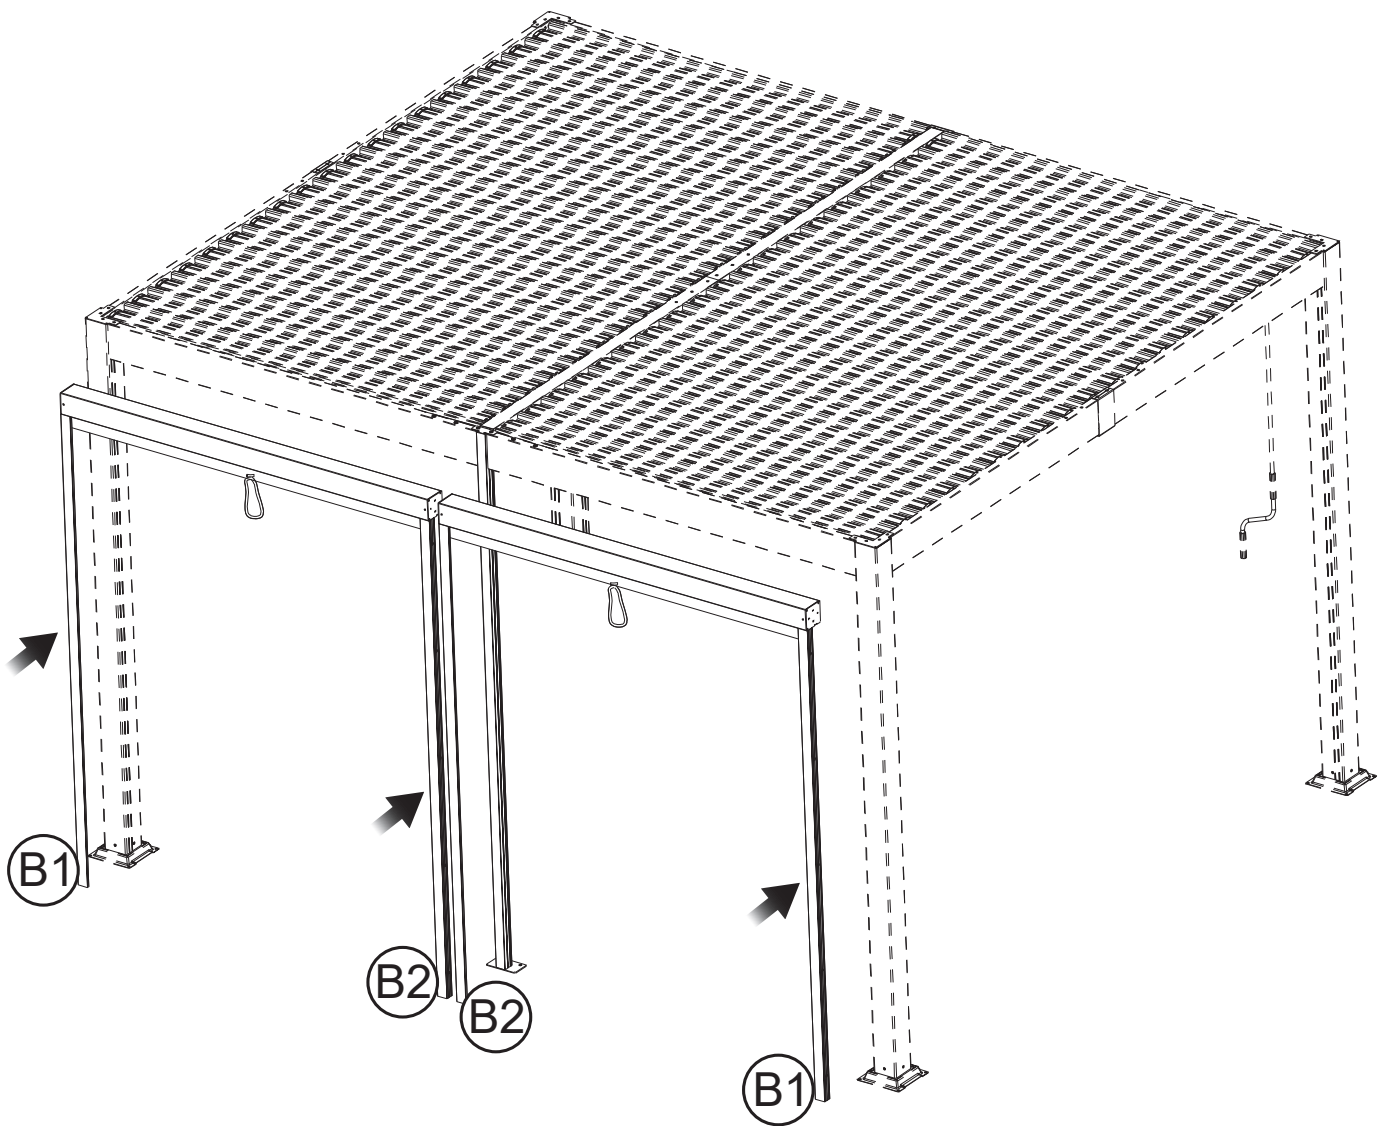

STEP 7:Secure the windproof blind




1. Secure rails B1 (1pc) and B2 (1pc) to column with screw E (20pcs) .

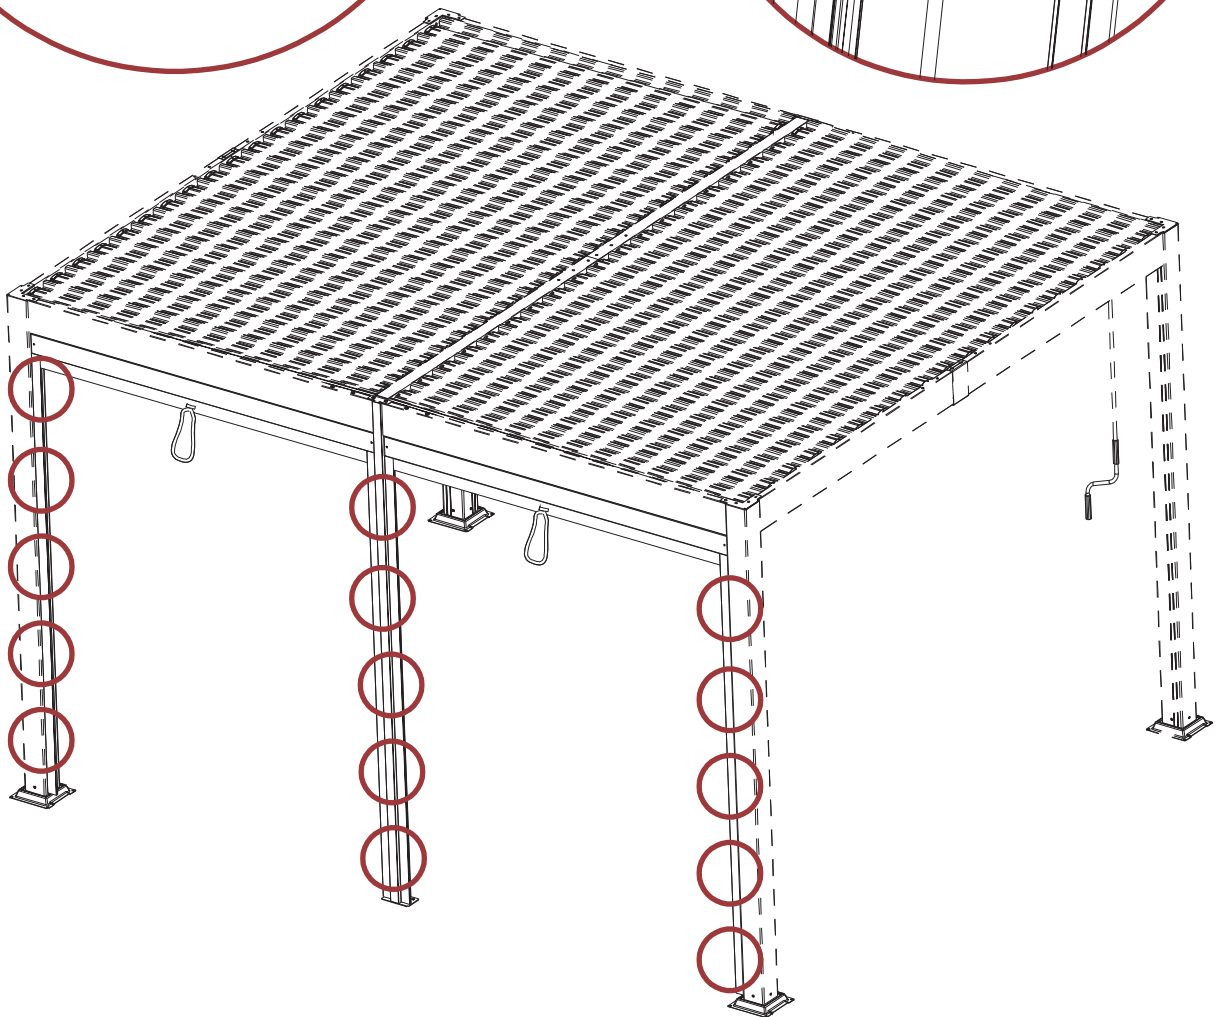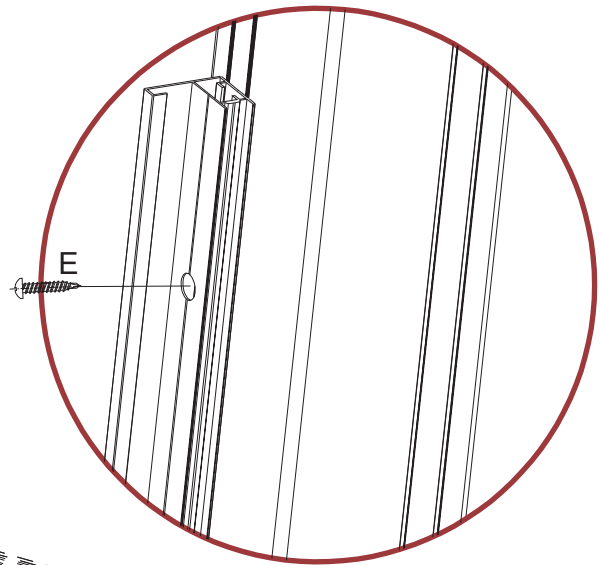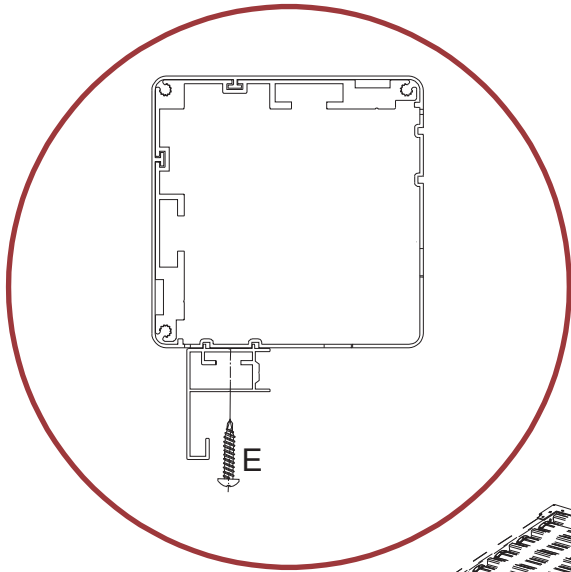




STEP 8: Install rails

D1:2PCS


D2:2PCS

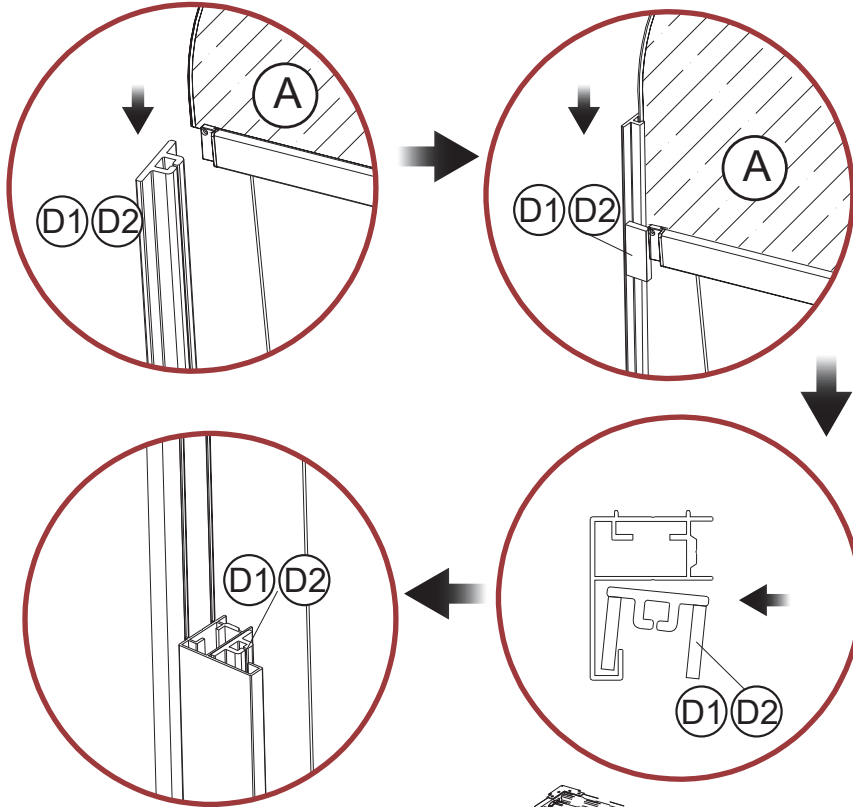


- 1.Zip the windproof blind from the roller box A (1pc) into slots D1 (2pcs) and slots D2 (2pcs)
- 2.Then push the zipper slot into the slide base.

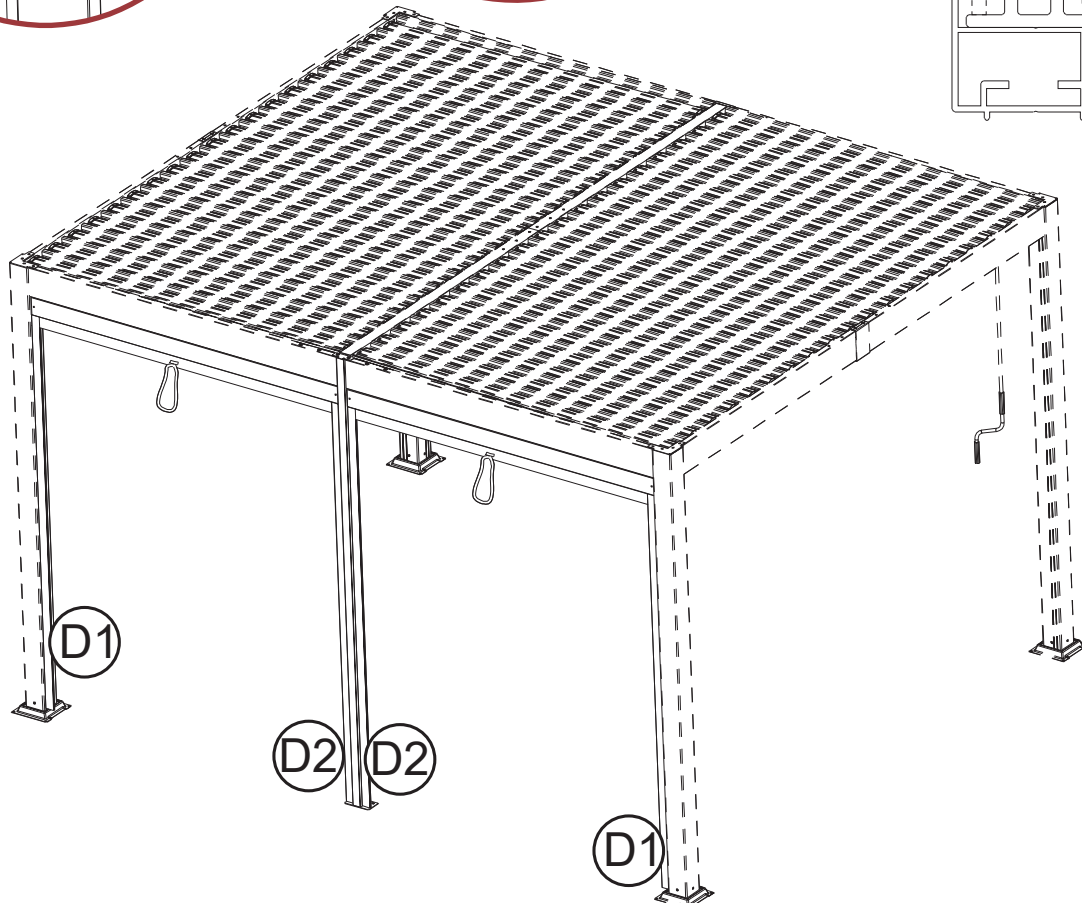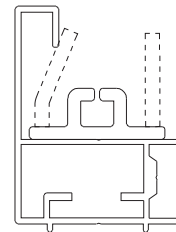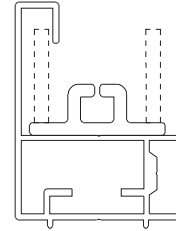


STEP 9: Install rails

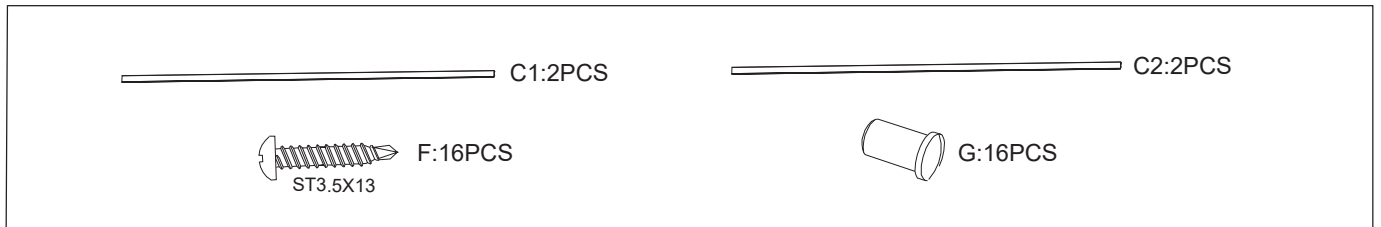

1. Insert covers C1 and C2 into rails B1 and B2 and secure with screws F (16pcs) .
2. Cover holes on C1 and C2 with stoppers G (16pcs) .


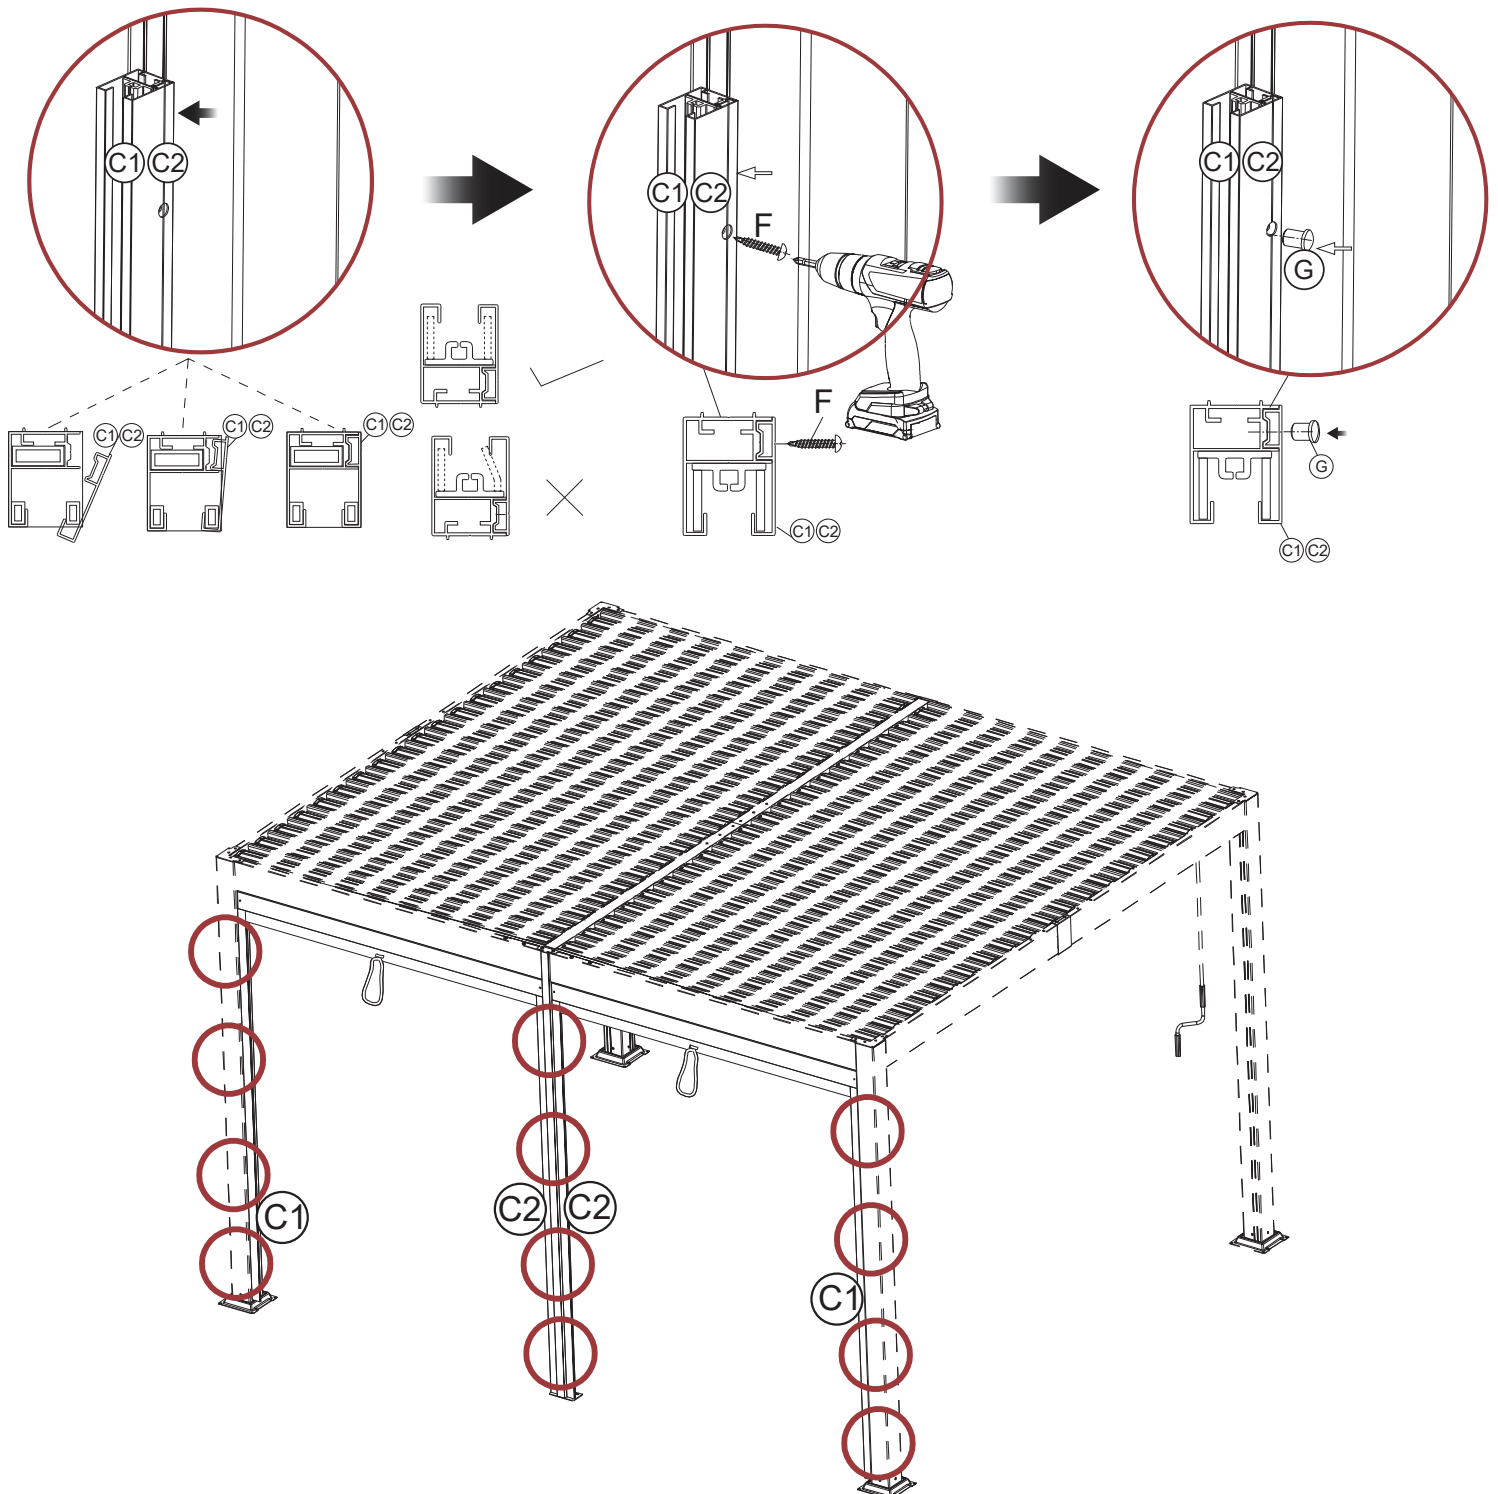


STEP 10: Fix in position.





L:2PCS

1. Secure foot pad V1 to the ground with anchor bolts L (2pcs) and tighten them with wrench O (1pc)

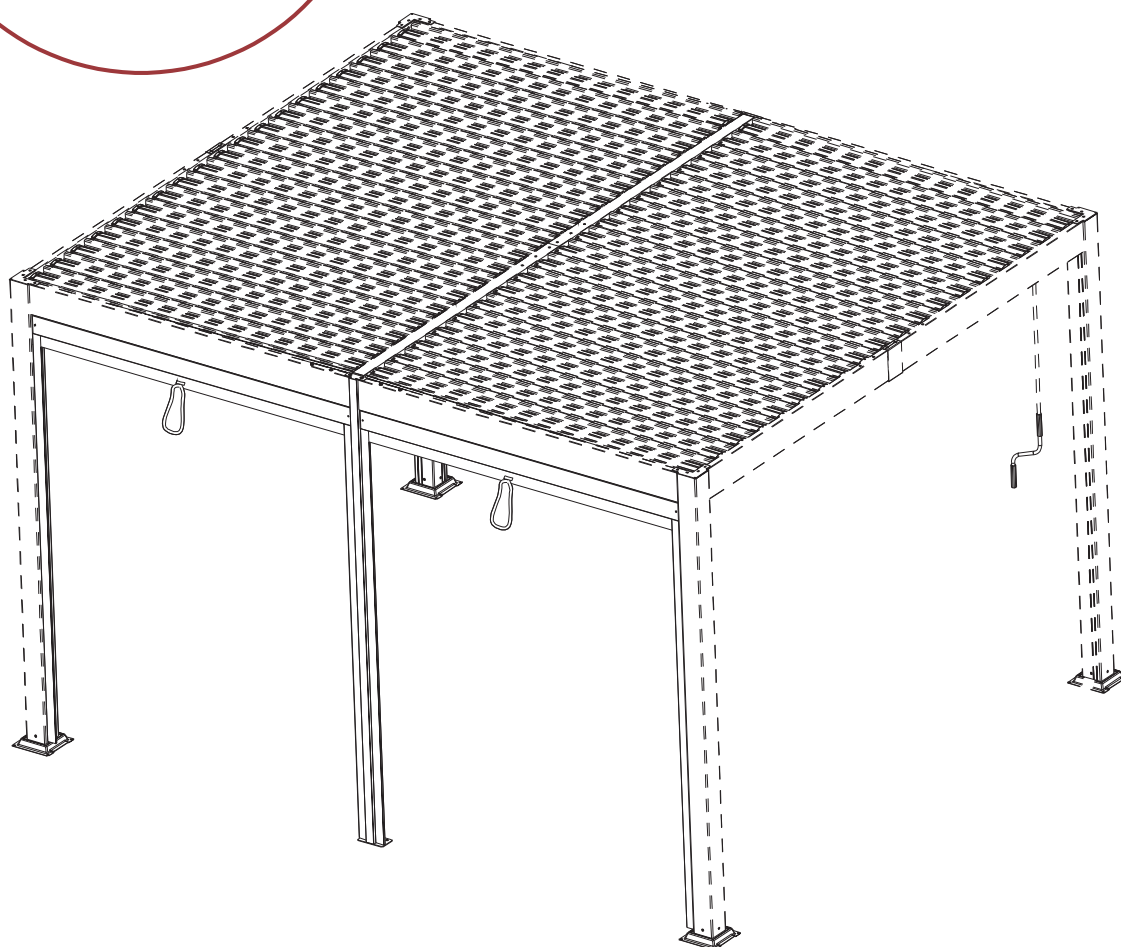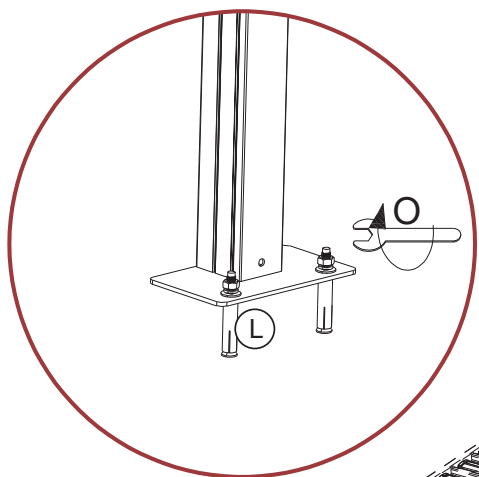

STEP 11

1. Keep tolerance between A and B within 3mm.
2. Diagonal tolerance within 5mm.

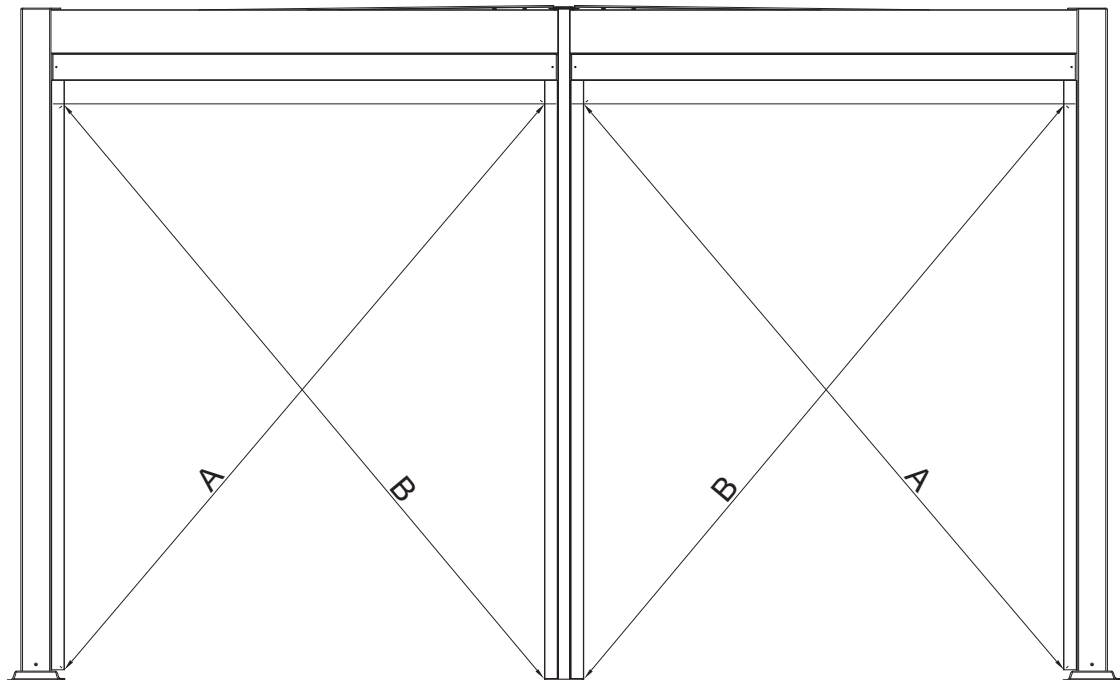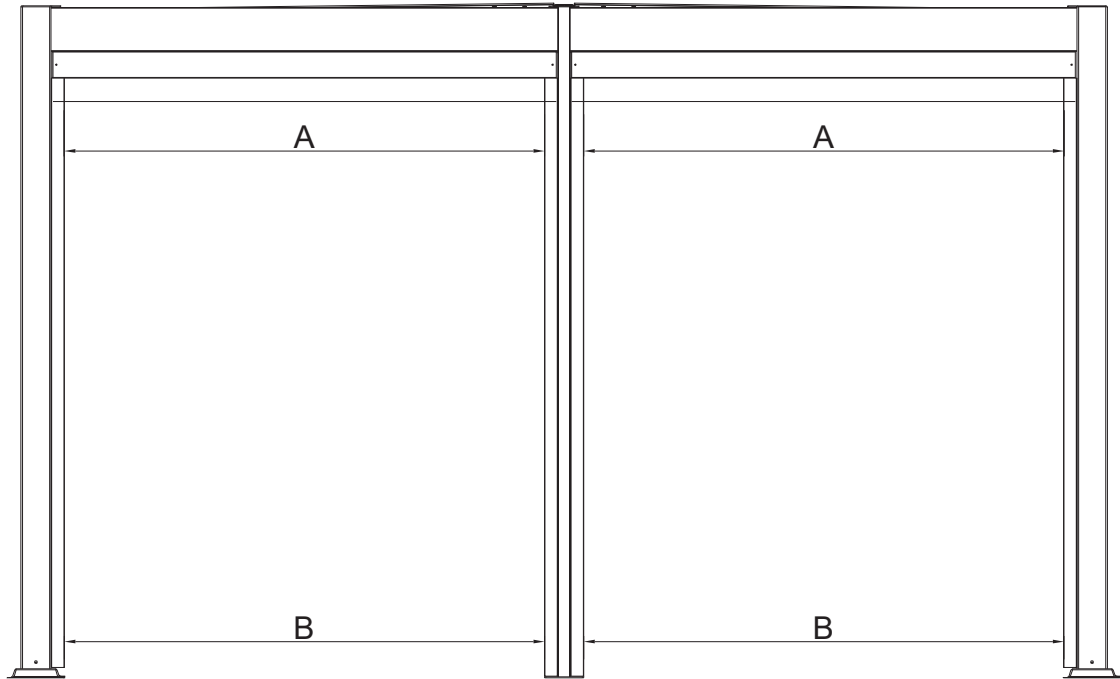

STEP 12

1.Pull the cord down.

