




Installation Instructions

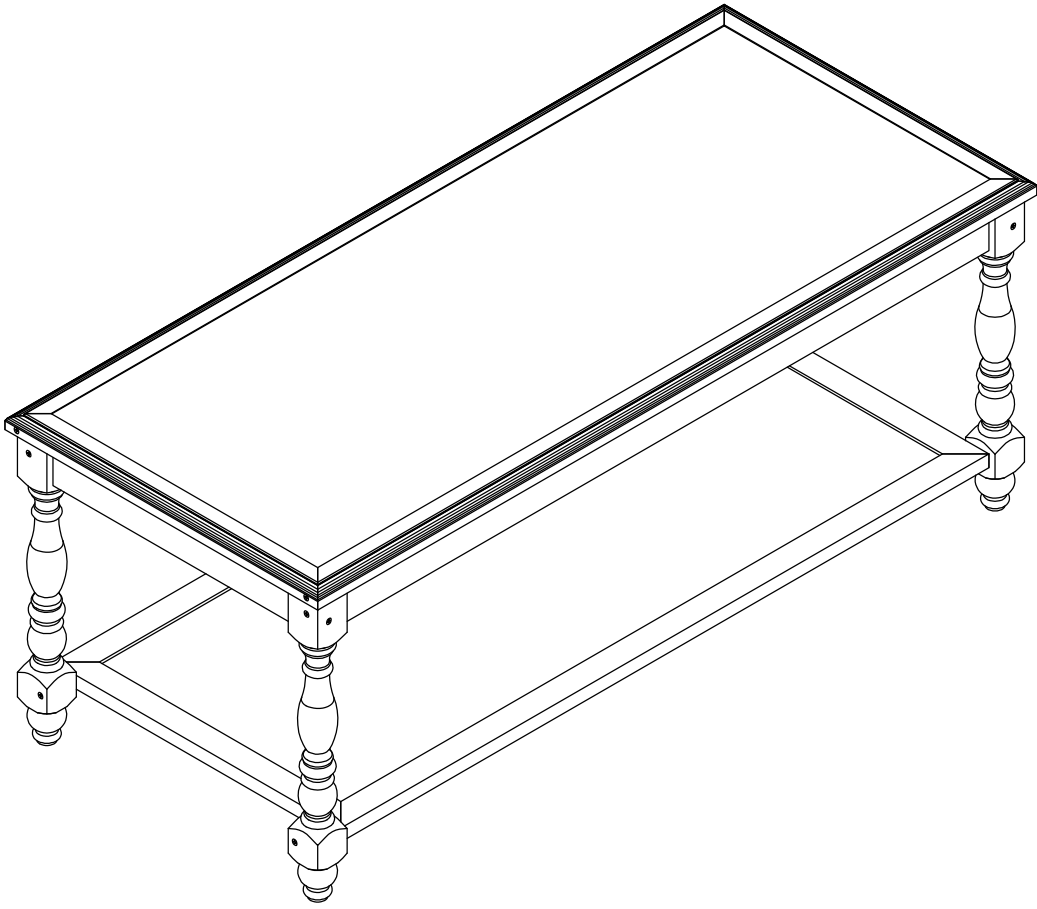


Board Identification

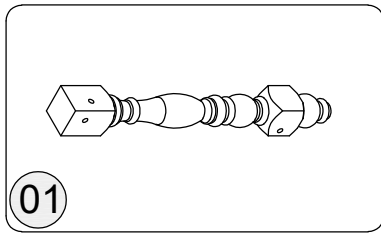


left foot
Qty:2

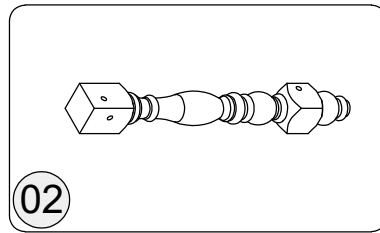


right foot
Qty:2

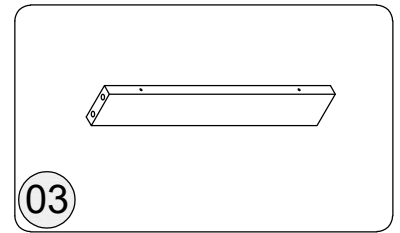


Short pull board
Qty:2

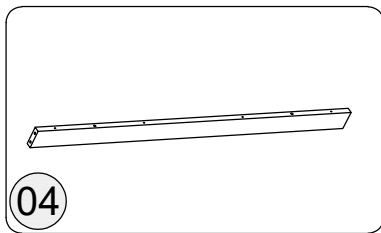

Long pull board
Qty:2

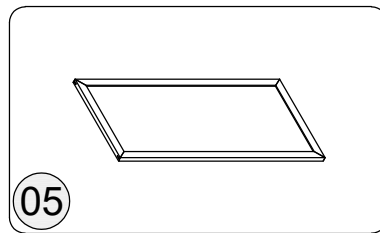


base
Qty:1

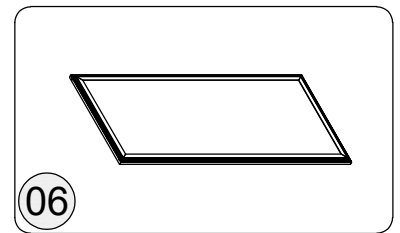


panel
Qty:1


Hardware Identification

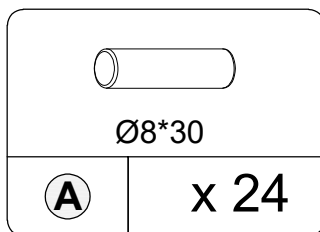


Wooden tenons

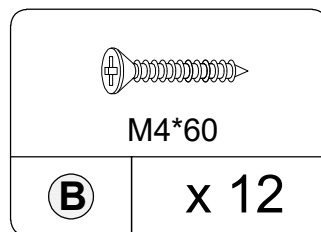

Screw


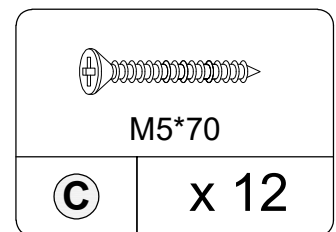



Screw

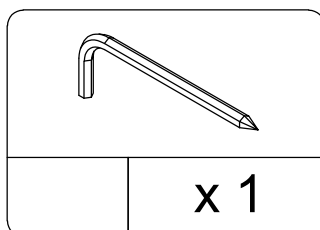



Hex key


Step 1

	
Ø8*30	
(A)	x 4
	
M5*70	
(C)	x 2

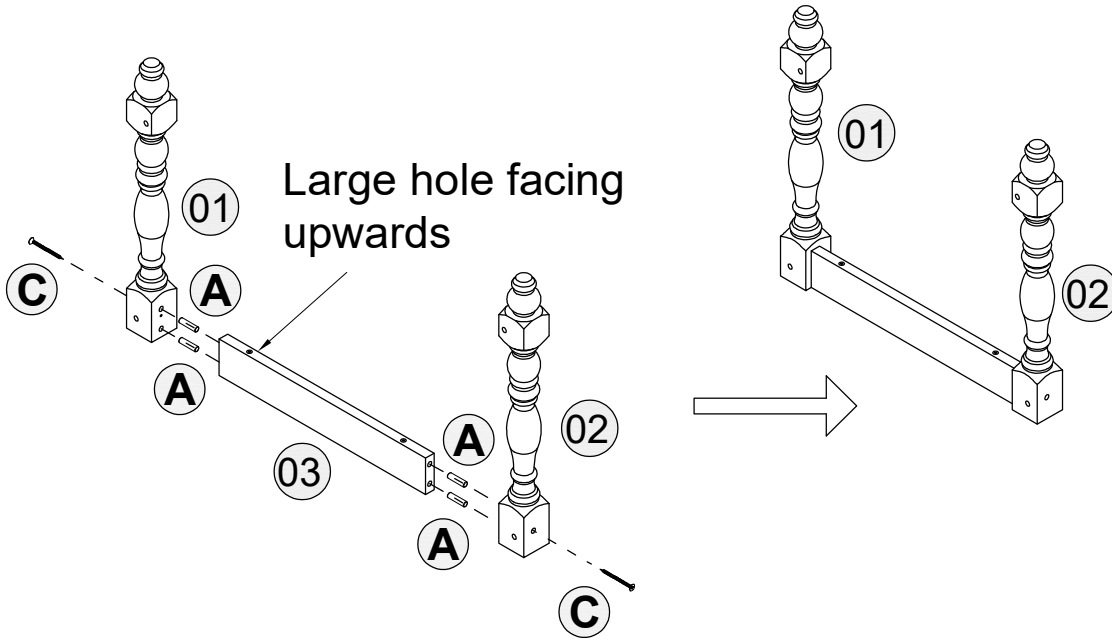




Step 2

	
Ø8*30	
(A)	x 4
	
M5*70	
(C)	x 2

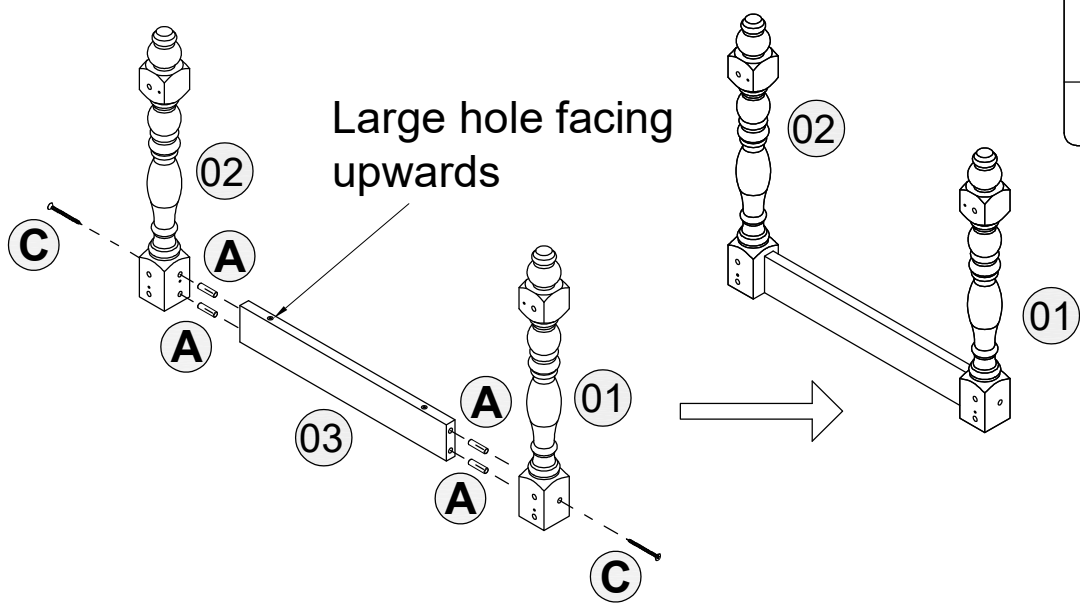




Step 3

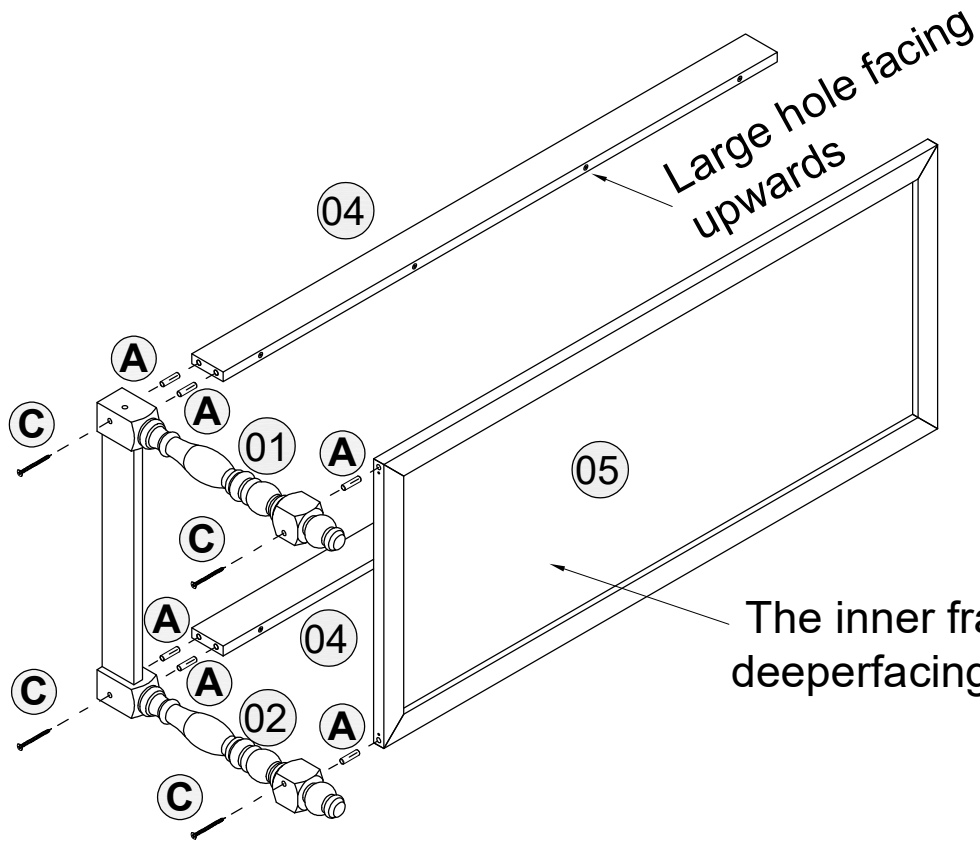


	
Ø8*30	
A	x 6
	
M5*70	
C	x 4

Step 4

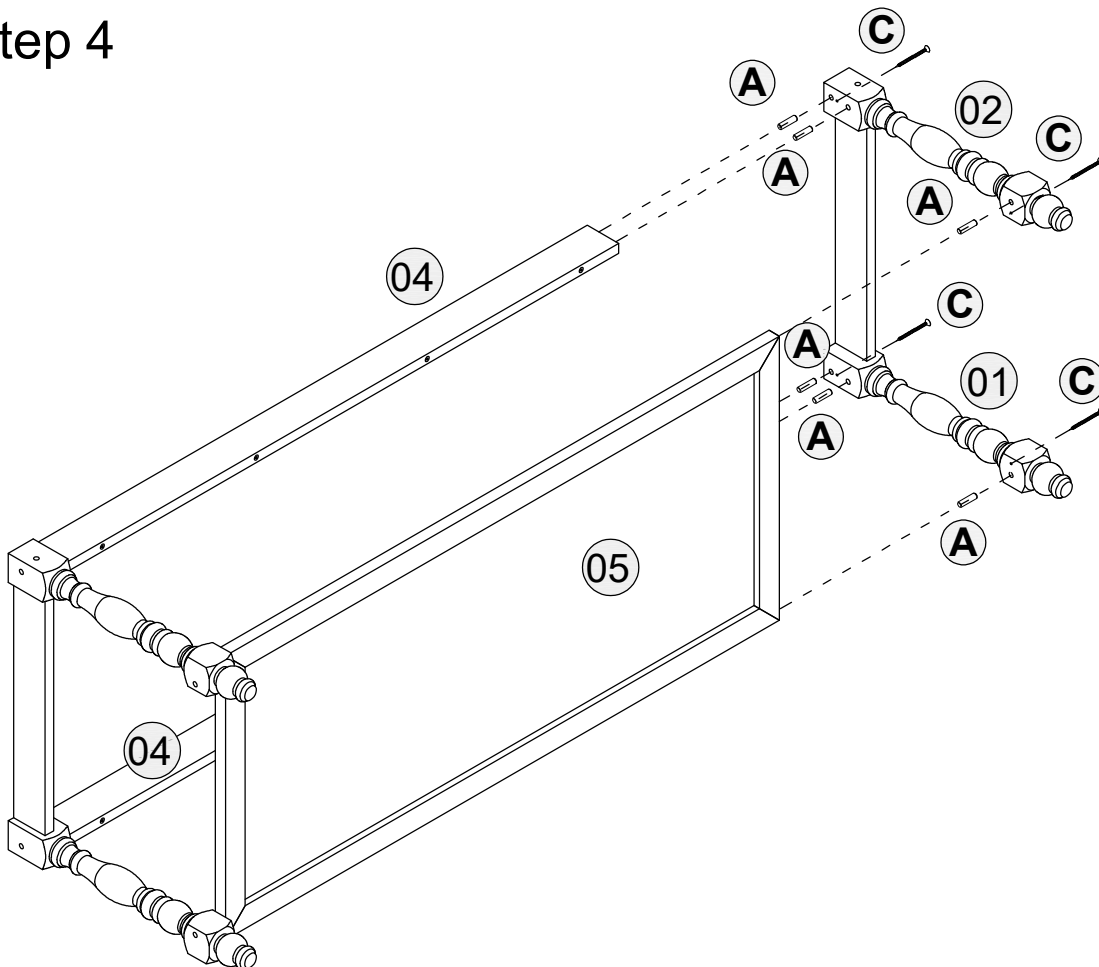

	
Ø8*30	
A	x 6
	
M5*70	
C	x 4

Step 5

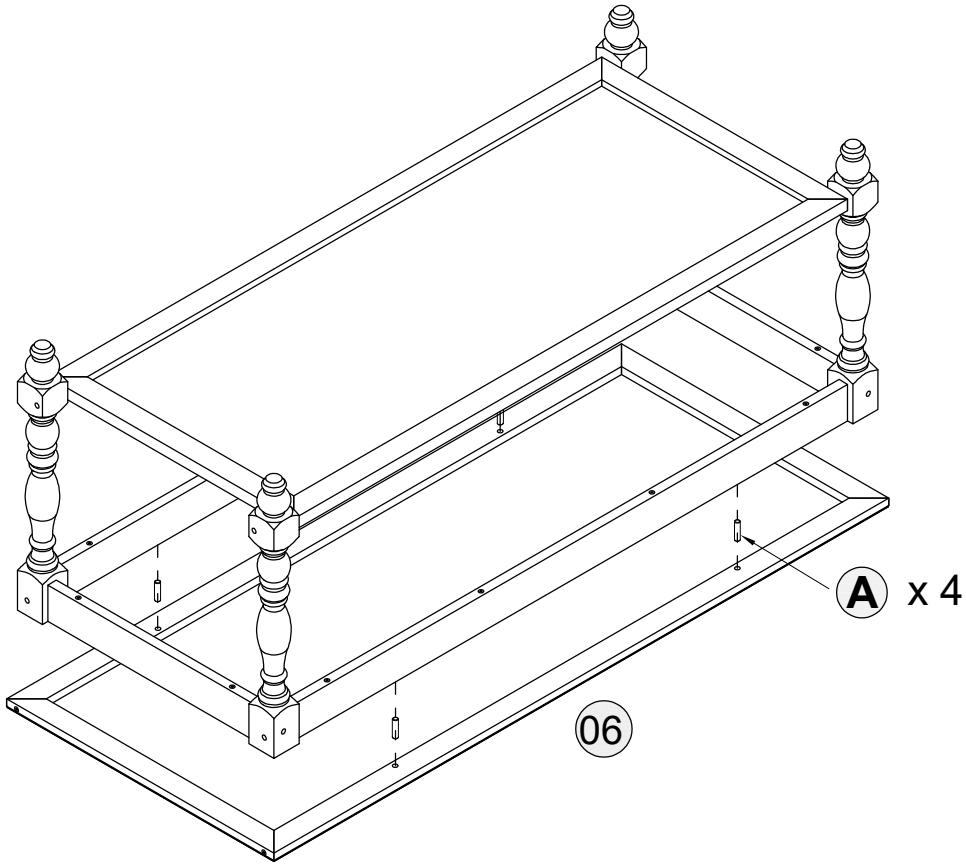

Step 6

