Bar Height Surfboard Stool

Assembly Guide

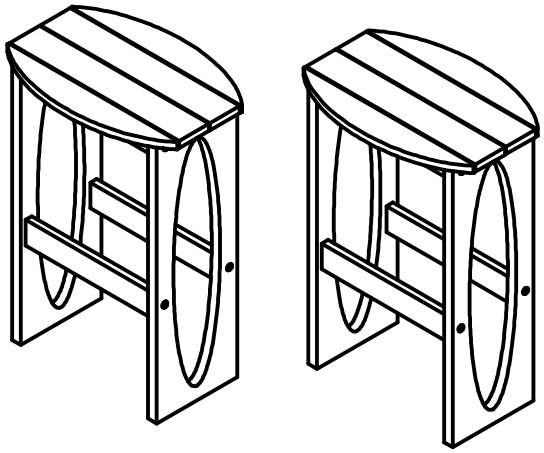

*Actual Style May Vary from the One Pictured in this Guide

CHR-SB301

HARDWARE INCLUDED

A 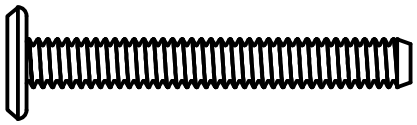 Qty: 16

(1/4-20 x 2")

TOOLS INCLUDED

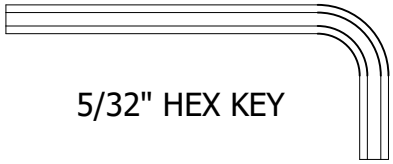

5/32" HEX KEY

IMPORTANT!

DO NOT fully tighten bolts until all bolts are started.

STEP 1

Connect (2) Braces to the Leg as shown using (2) A bolts.

STEP 2

Repeat STEP 1 on the other side.

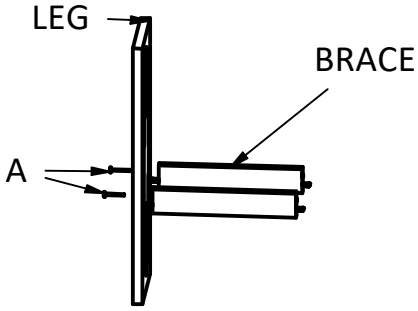

STEP 3

Connect the Seat to the Leg Assembly as shown using (2) A bolts.

STEP 4

Repeat STEP 3 on the other side.

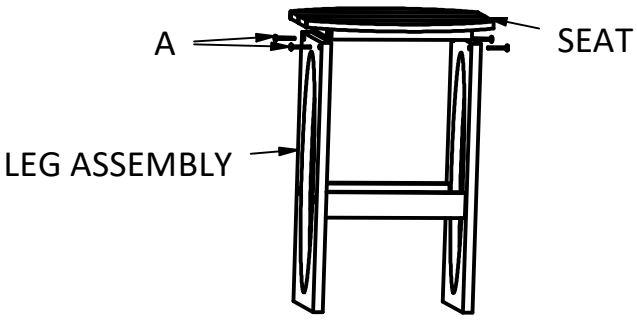

STEP 5

Repeat STEPS 1-4 for the other Stool

For information on Care and Cleaning or to Register your product, please visit www.bahiaverdeoutdoors.com.

HDK-0086

08/19/2024