


*Anchor the gazebo once finish **Step2**.



STEP 2



K × 1




13# × 1

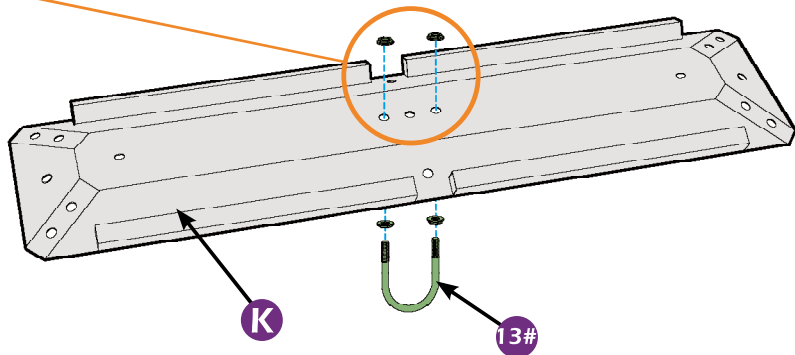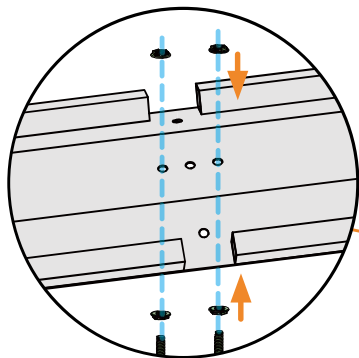


STEP 2



K × 1



K1 × 1






1# × 3




12# × 2



K2 × 2

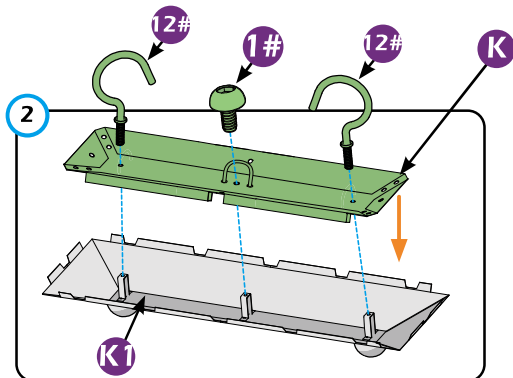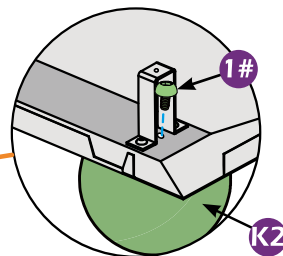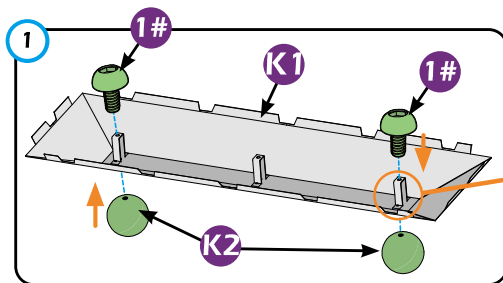

Don't fully tighten the screw **1#** and **12#** . It might cause problems on roof's installation.

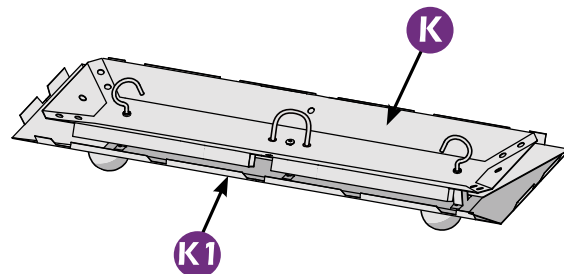

STEP 2




M × 4



M1 × 4



Z# × 8

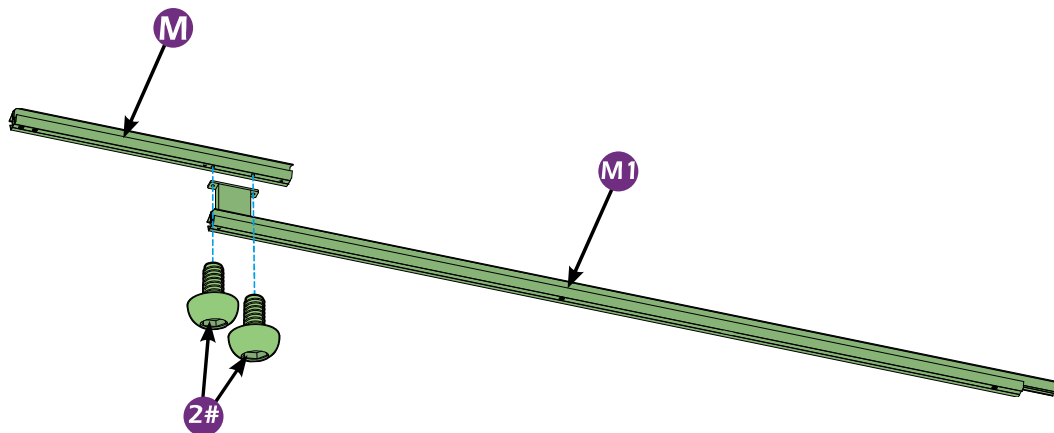

STEP 2



M × 1




N × 1



M1 × 1



1# × 3

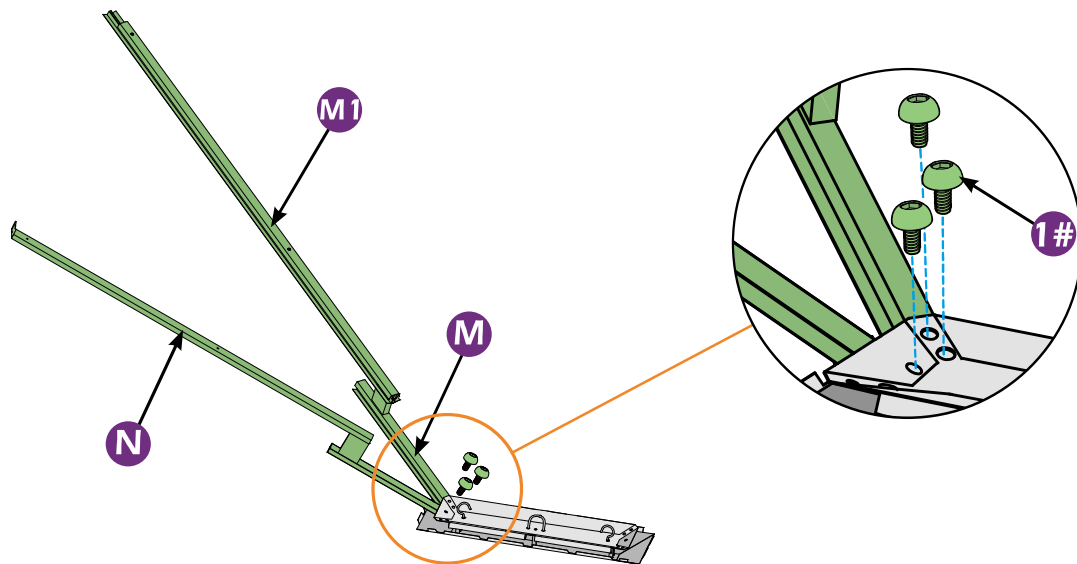


STEP 2



1# × 3



One person needs to hold the part **K** & **K1** as picture shows.

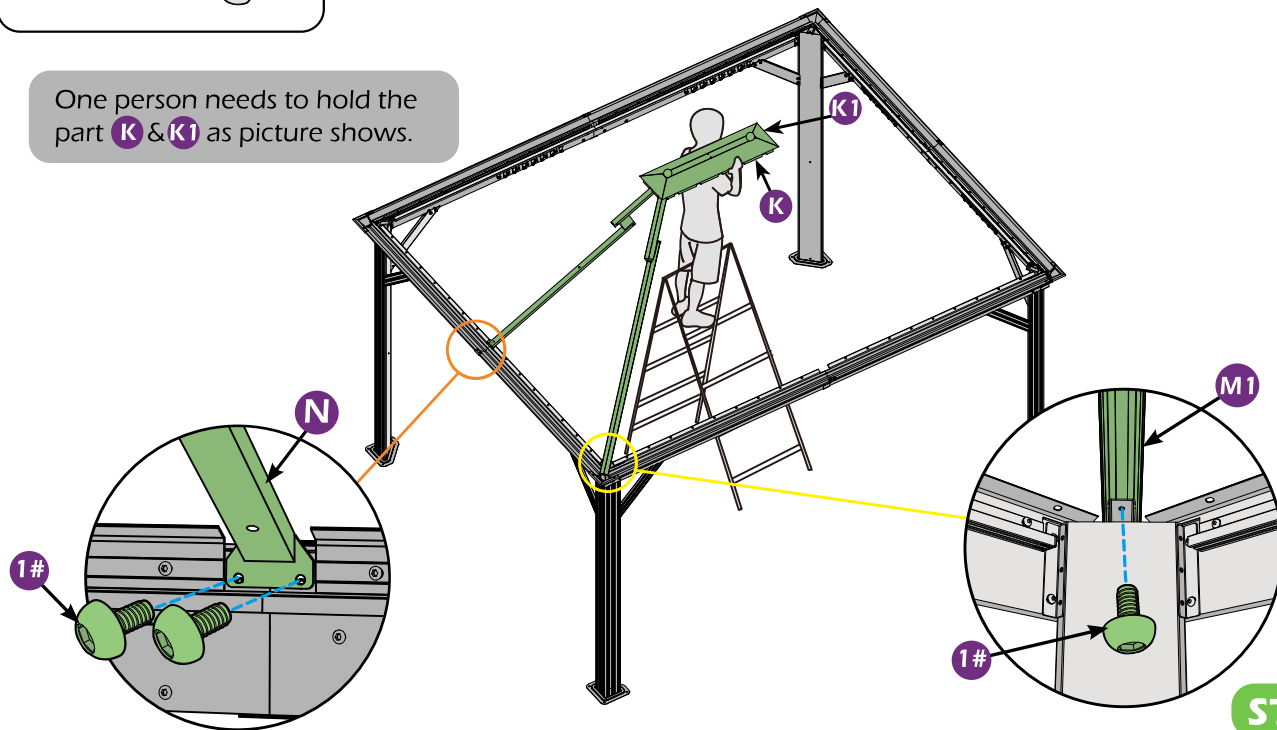

STEP 2




M × 3



M1 × 3



1# × 9

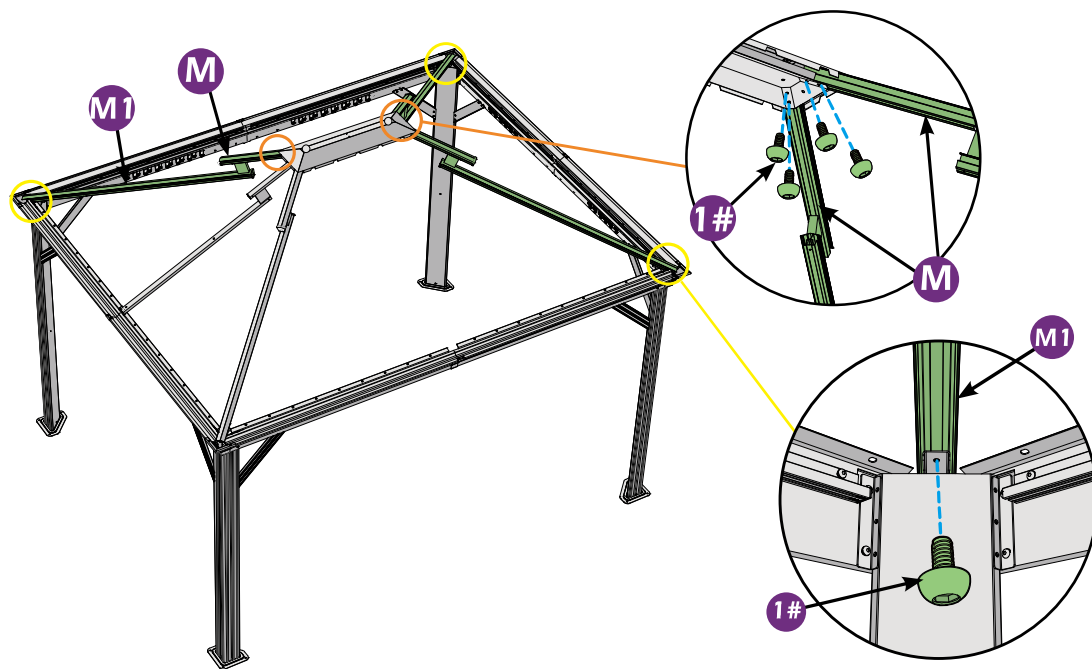




STEP 2



N × 1



1# × 3

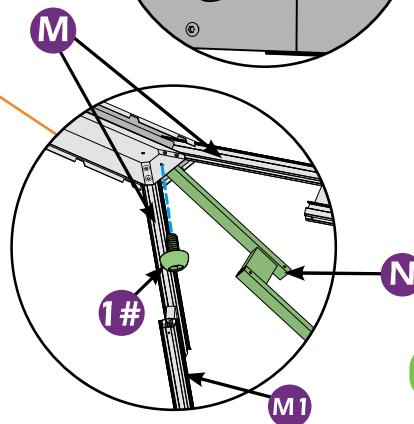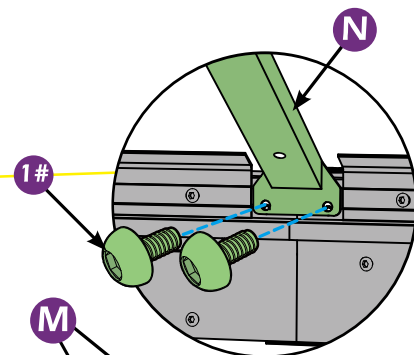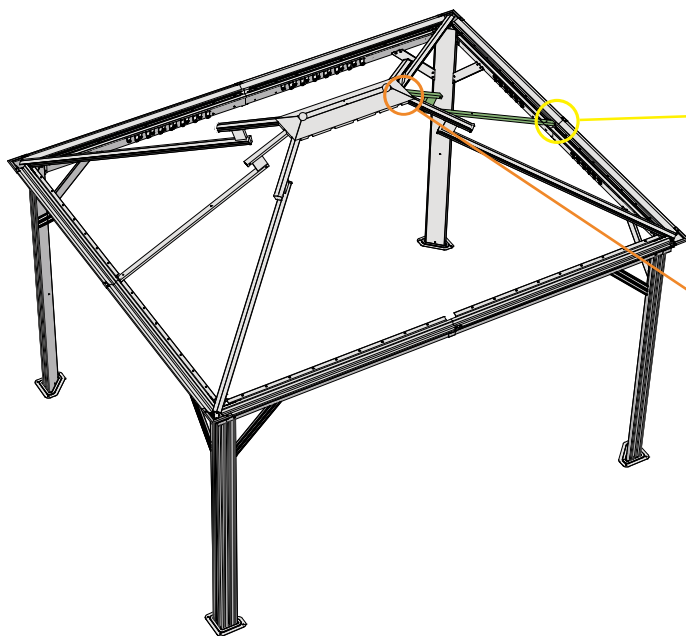


STEP 2



N × 2




1# × 6

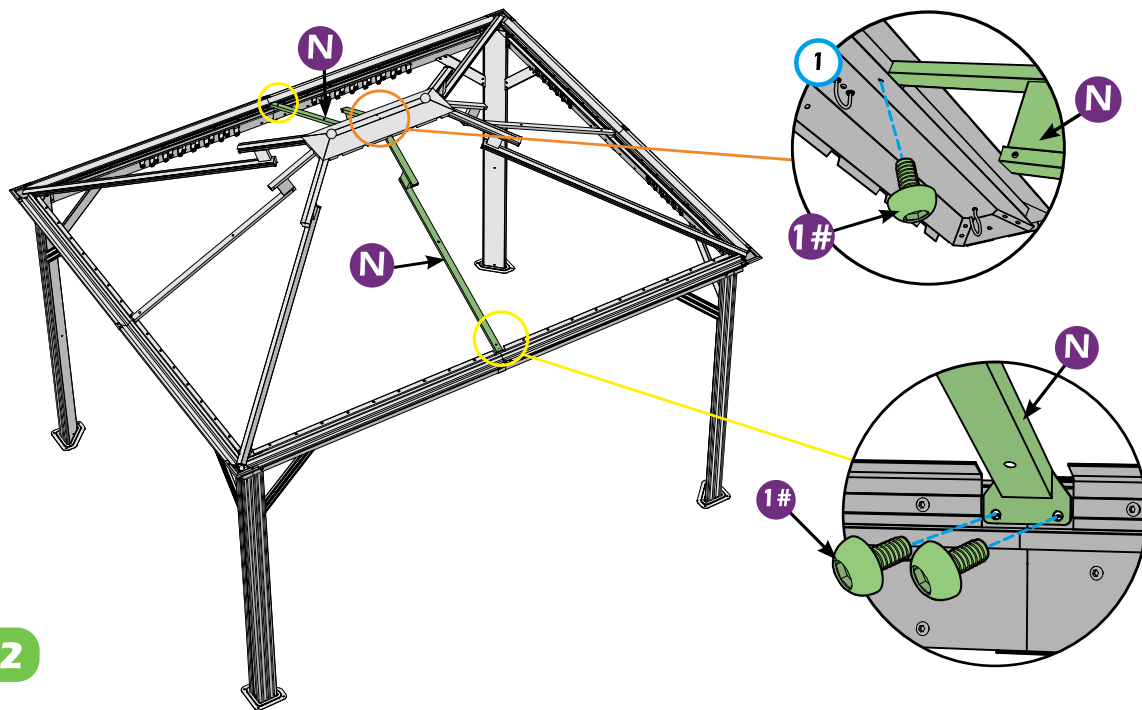


STEP 2

Check if the frame shows as pictures below.

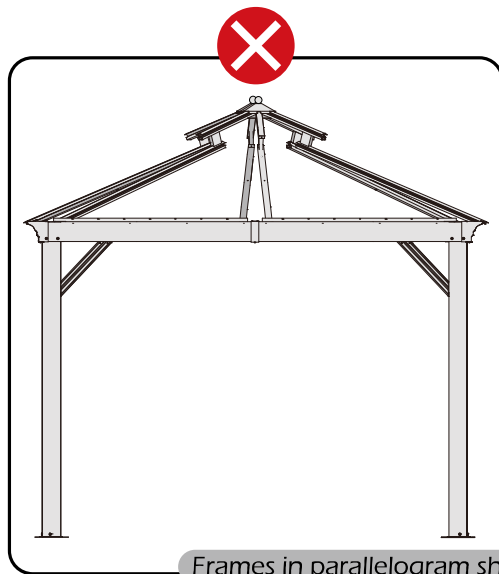

Frames in parallelogram shape.

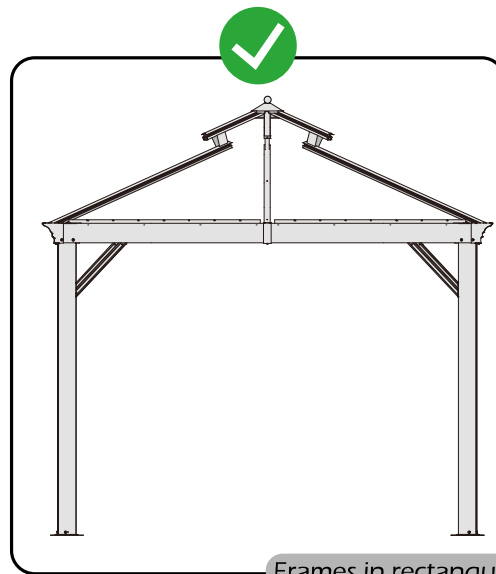


Frames in rectangular shape.

STEP 2



P × 2




R × 4



1# × 4



Q × 2

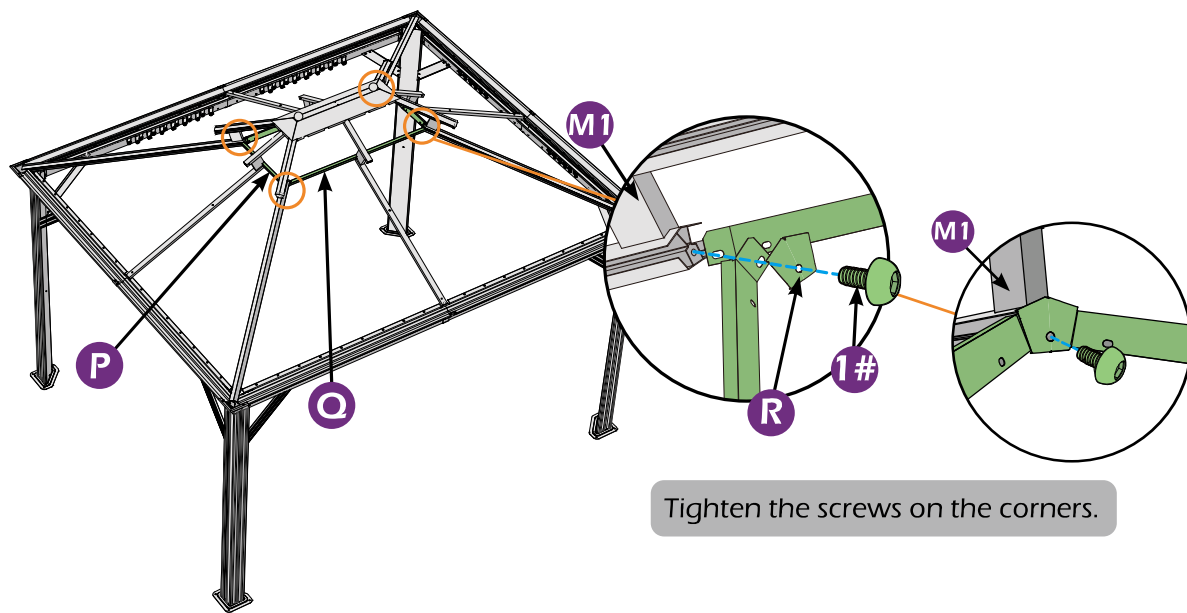

STEP 2



P1×2



Q1×2




Q2×2




1#×4




11#×12

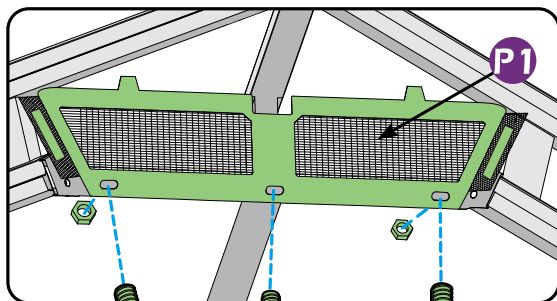



Install the nettings and the screws in the middle.

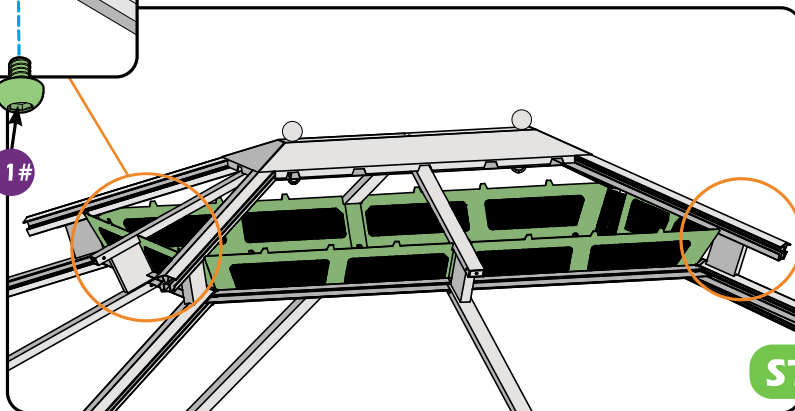

STEP 2

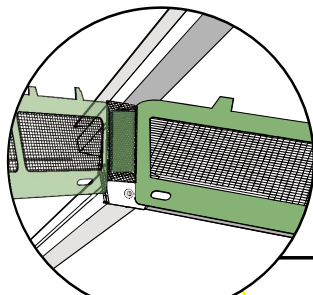

Don't forget to stick the velcro between the bug nettings.

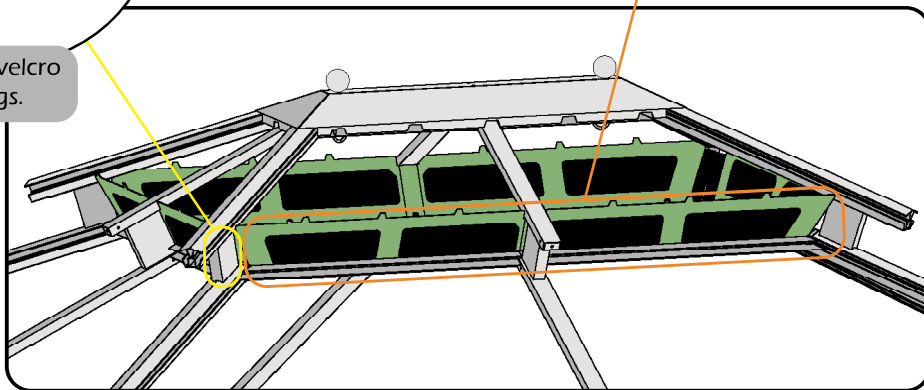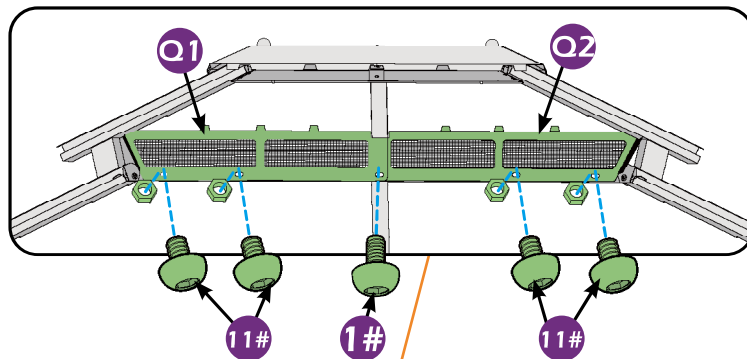


STEP 2



T × 2




1# × 8



R × 4



T1 × 2

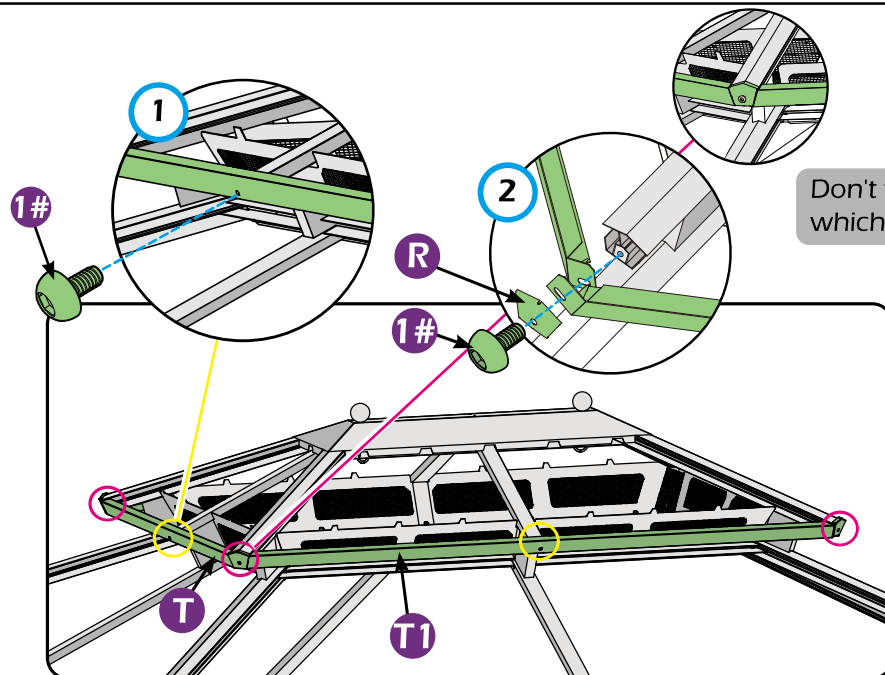

Don't fully tighten the screws which picture indicates.

STEP 2



STEP 3



V1 × 2



V2 × 2



V3 × 2



Z × 8



V4 × 2





V5 × 2




V6 × 2




Z1 × 8

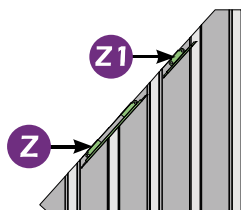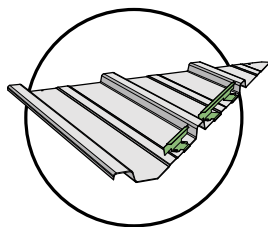


V1

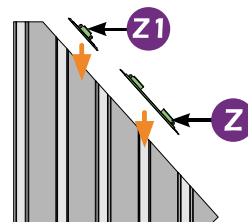


V2

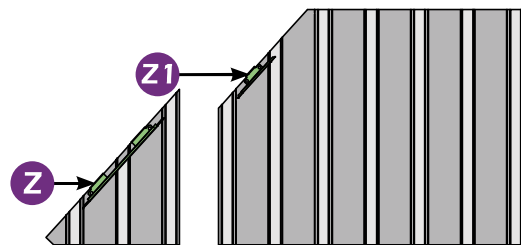


V3

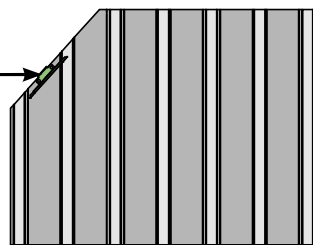

V4

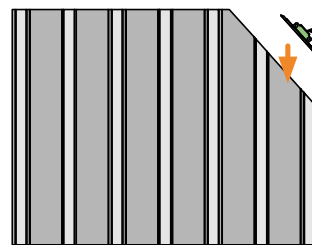


V5

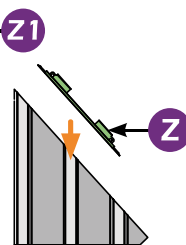


V6


STEP 3

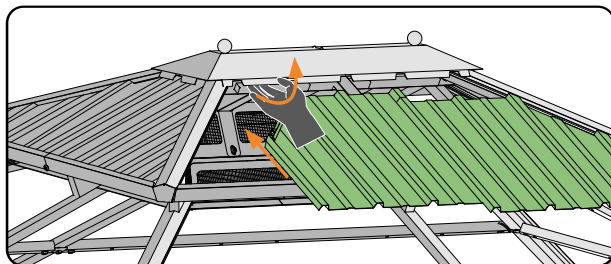


If you can't install **V4** or **V5**, push the part **K1** up and try to insert them again.

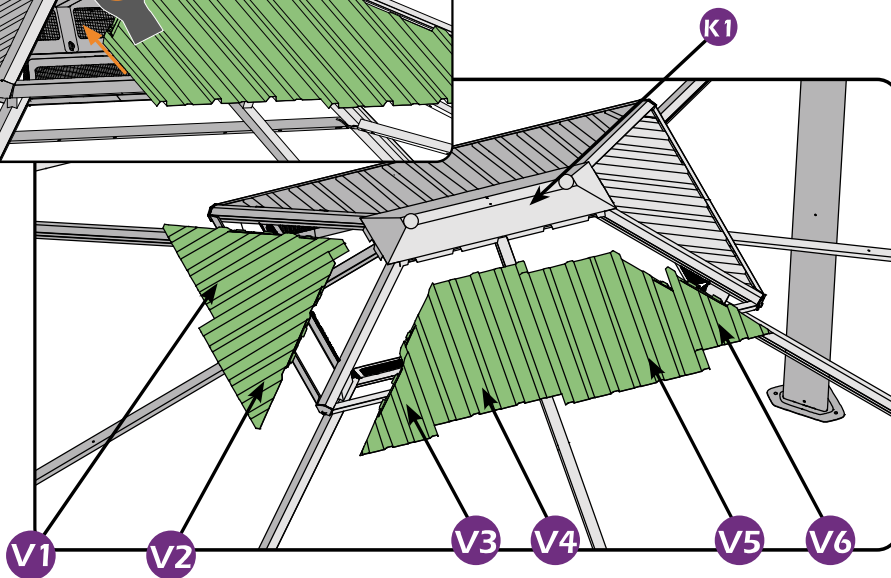

STEP 3

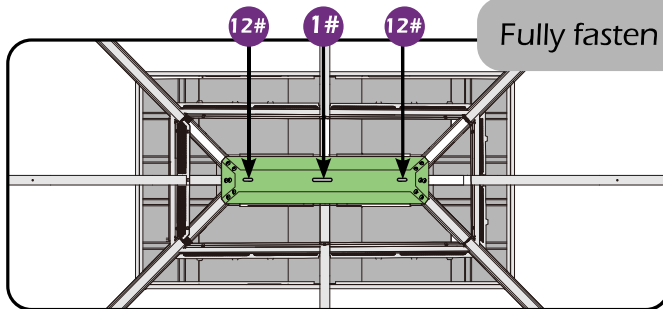

Fully fasten the 1# & 12# bolts in K & K1.

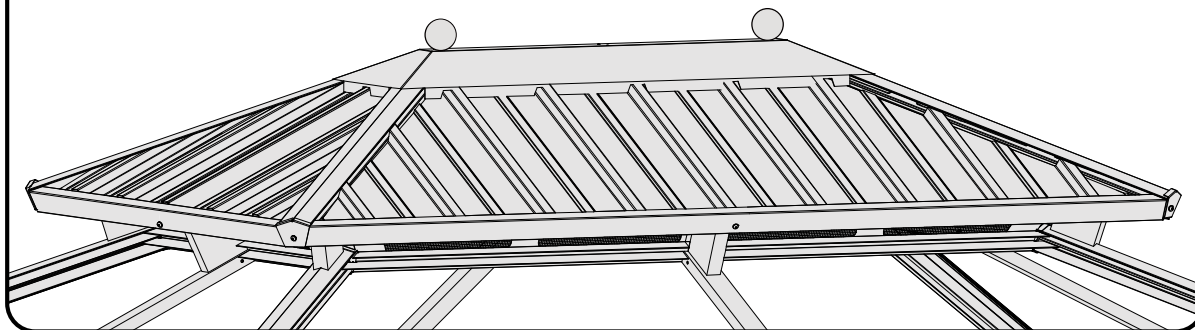

STEP 3




U1×4



U4×4




U5×4




U2×4



1#×24

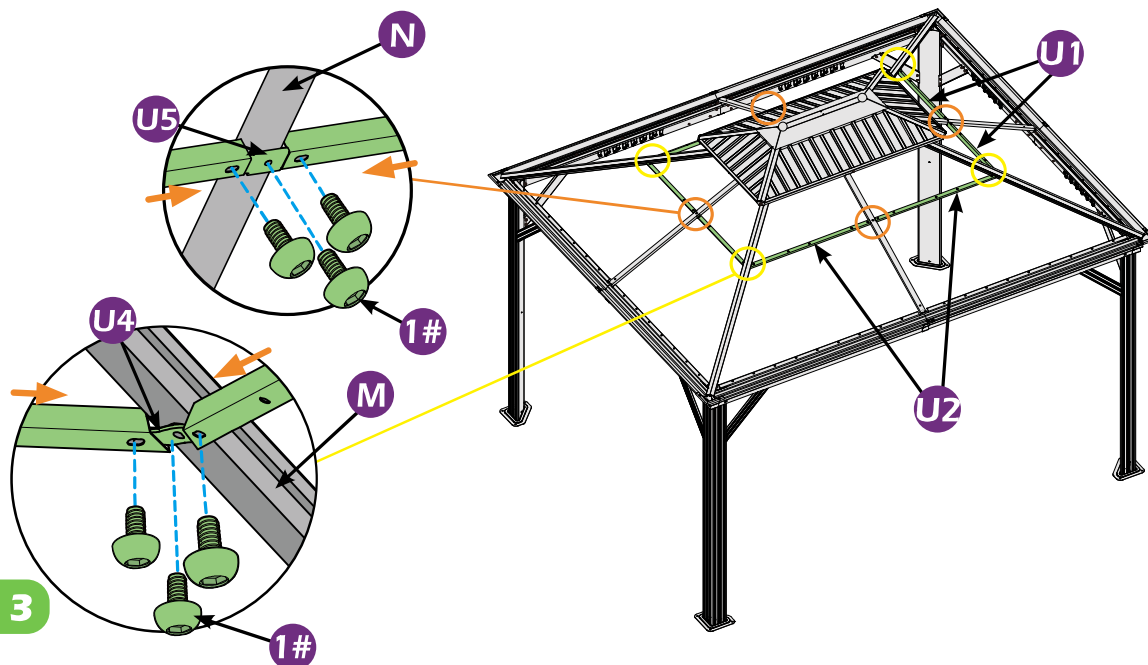

STEP 3

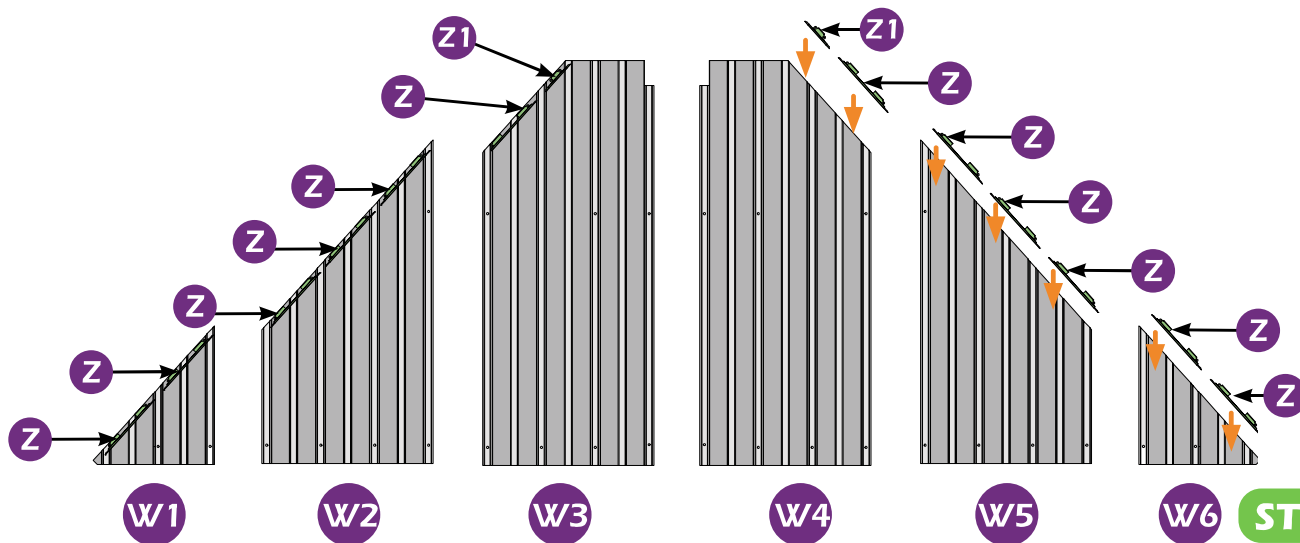

STEP 3



X1 × 2

X2 × 2

X3 × 2

X4 × 2

Z × 24


X8 × 2

X7 × 2


X6 × 2

X5 × 2

Z1 × 4

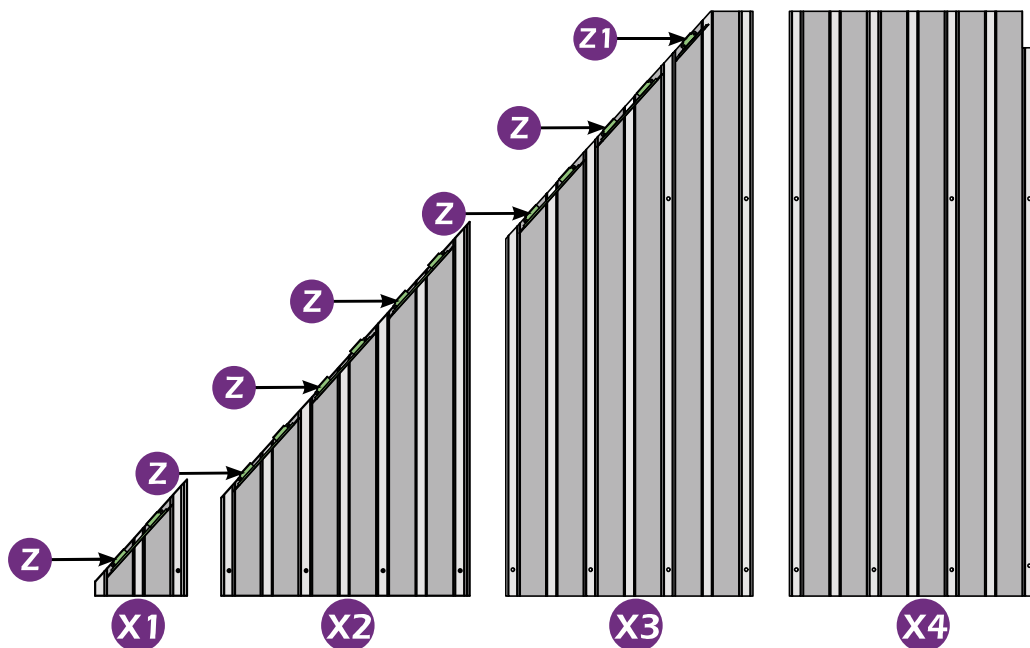


STEP 3

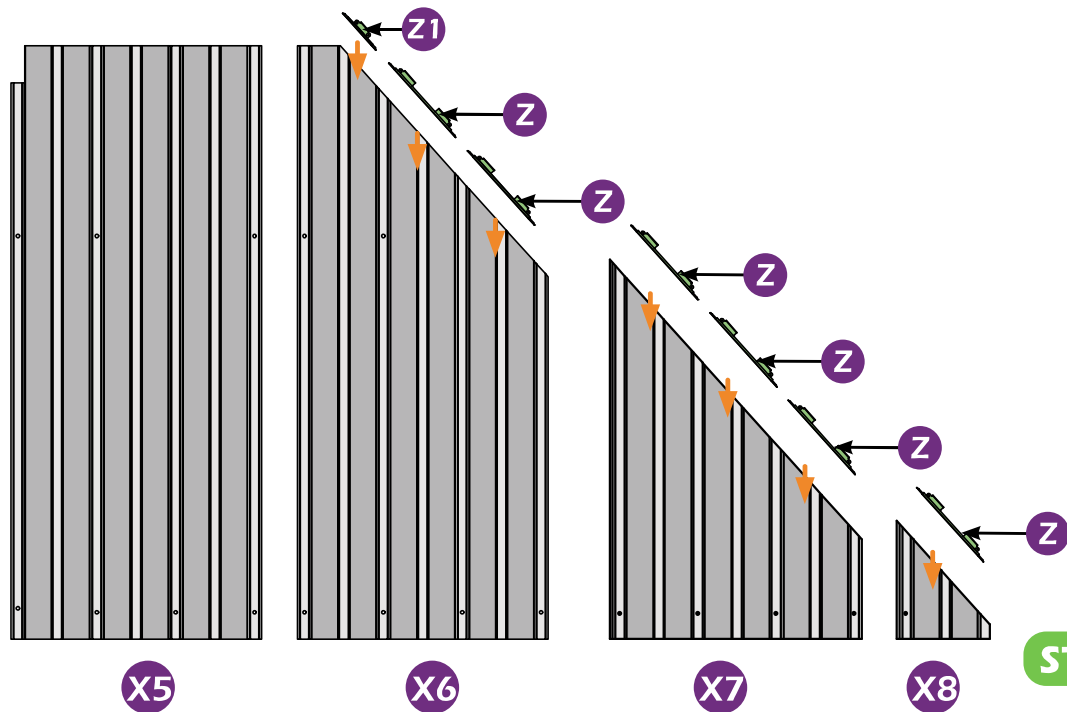

STEP 3

Install the middle panels first (**X4** , **X5** or **W3** , **W4**) then the small panels on the edge. Overlap panels by one single.

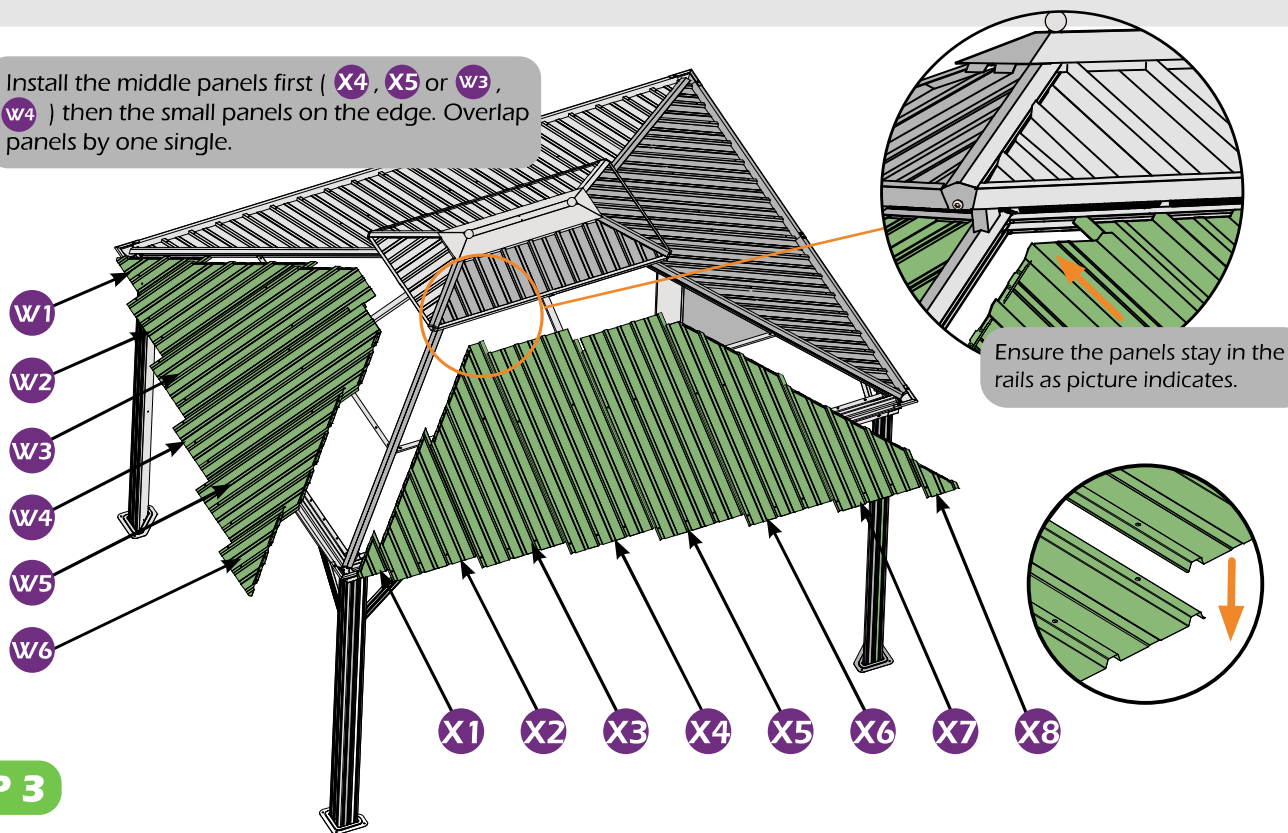

STEP 3






5#×64



10#×4



S×68

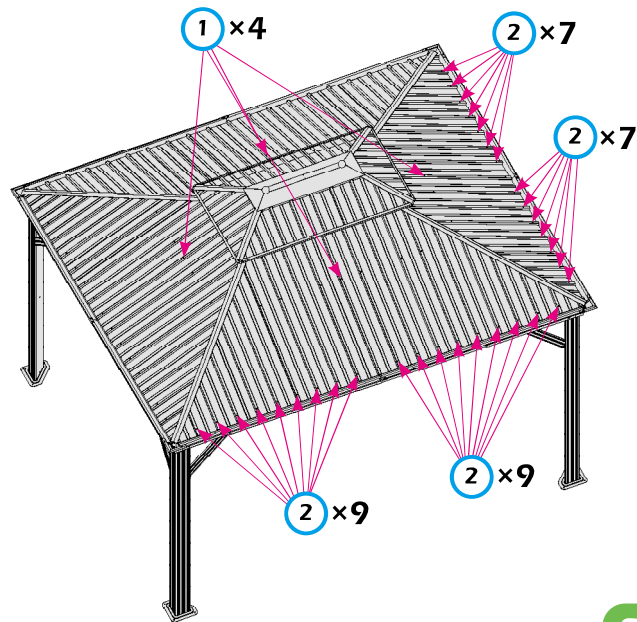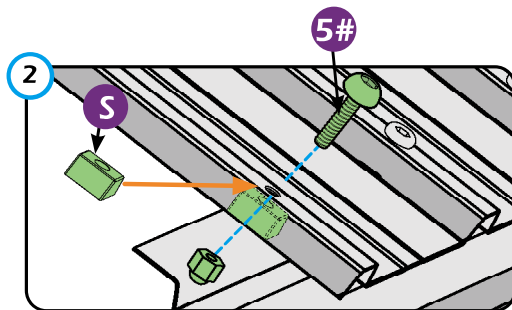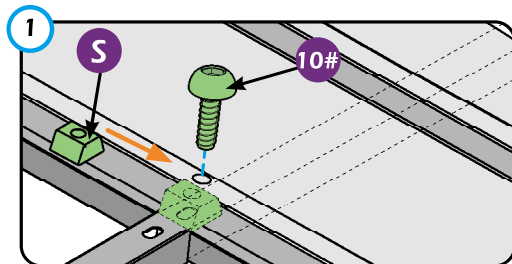




STEP 3



6# × 24



S × 24

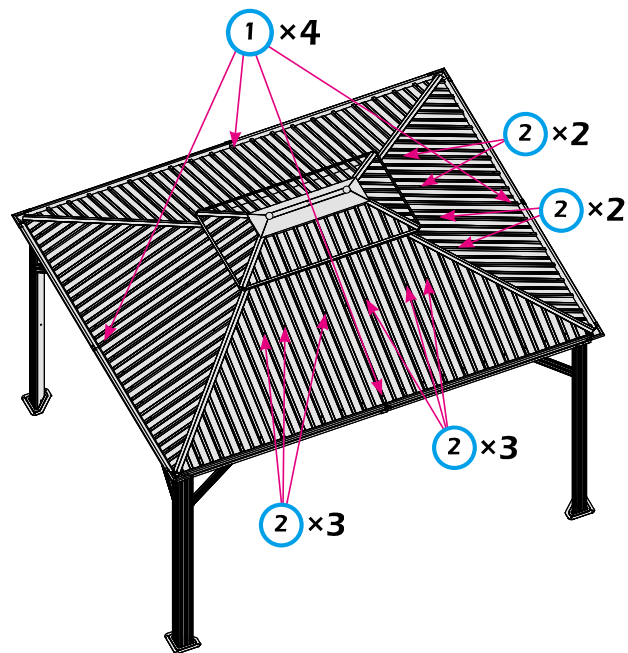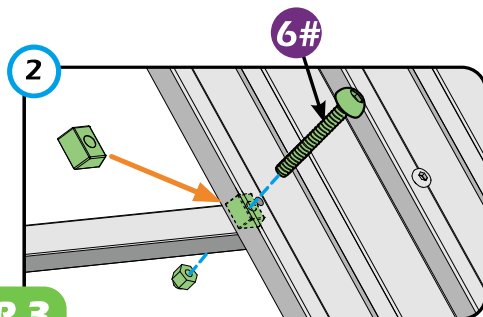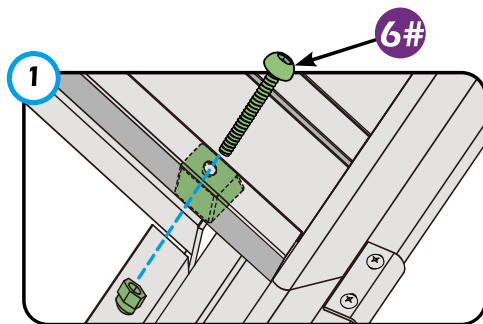

STEP 3