

# ROD/POLE POCKET DRAPERY INSTALLATION INSTRUCTIONS


## Getting started:

Please read through all instructions carefully before you begin installation. carefully remove your new draperies from their packaging.


## Installing Your rod Pocket Draperies:

You are now ready to hang your draperies.

1. insert your drapery pole through the pocket at the top of the drapery.

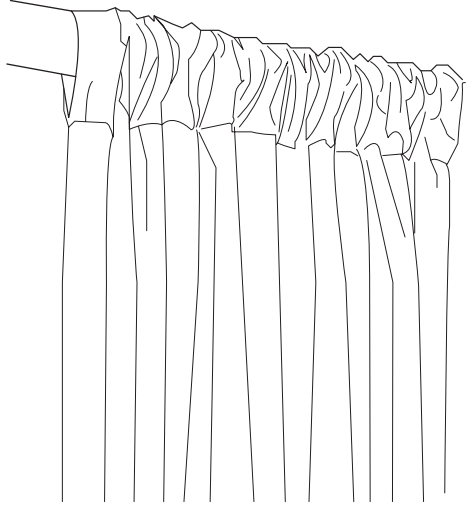

3. Repeat the same steps for all other panels.

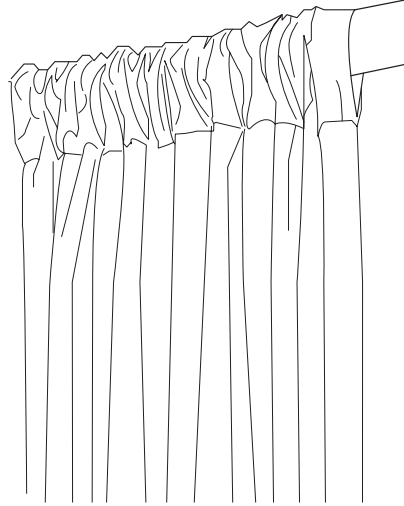

2. once you have inserted the pole through the pocket, let your drapery hang.

4. with draperies in place, install rod.

## Dressing Your Drapery:

Once your draperies are installed, most wrinkles and folds will hang out on their own. You may also use a garment / commercial steamer to help eliminate wrinkles. Please keep in mind the silks and linens in particular will characteristically have wrinkles regardless of steaming or pressing.

**NOTE:** Item Indicated as Ready Made online: Due to transit, some additional wrinkling may occur. Prior to hanging your draperies you may want to lay them out and press out wrinkles gently with a cool iron.

Items Indicated as Custom Made Size or Made to Measure online: All of our Custom Made Size & Made to Measure draperies are hand-pressed prior to shipping, however due to transit, some additional wrinkling may occur. Prior to hanging your draperies you may want to lay them out and press out wrinkles gently with a cool iron.

## Care & Cleaning:

If the drapery is dusty, simply vacuum over it using an upholstery attachment. For stubborn stains or overall deep cleaning, professional on-site service is recommended.