


FLOOR MOUNT TUB FILLER ROUGH WITH CONCRETE FLOOR INSTALLATION BOX





RHBX

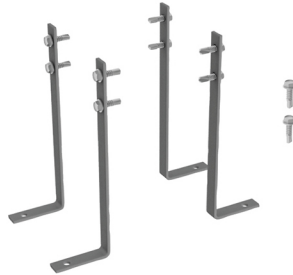


9976

Adjustable legs also available

QUICK GUIDE

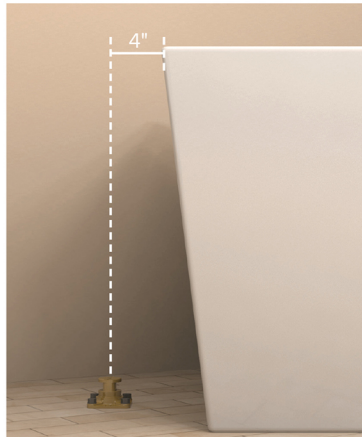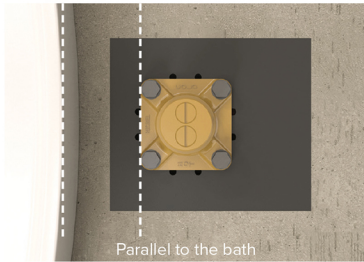


INSTALLATION STEPS

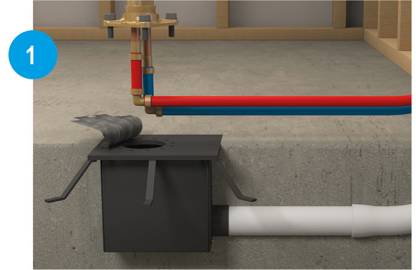

Pour the concrete so that it is flush with the top of the box and the PVC pipe exits in the wall division



Remove the tape and insert the rough on which you preinstalled the piping

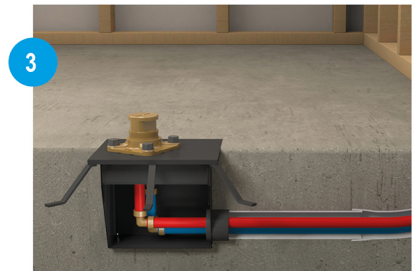

You are now ready to continue your project