





AJ-DJ505670

Computer Desk

Installation Option I

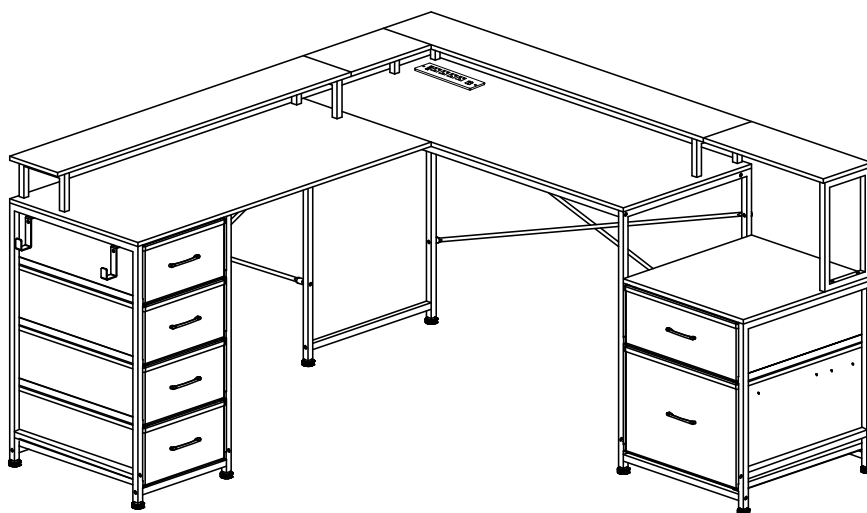

Installation Option II

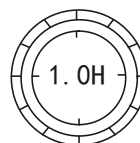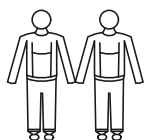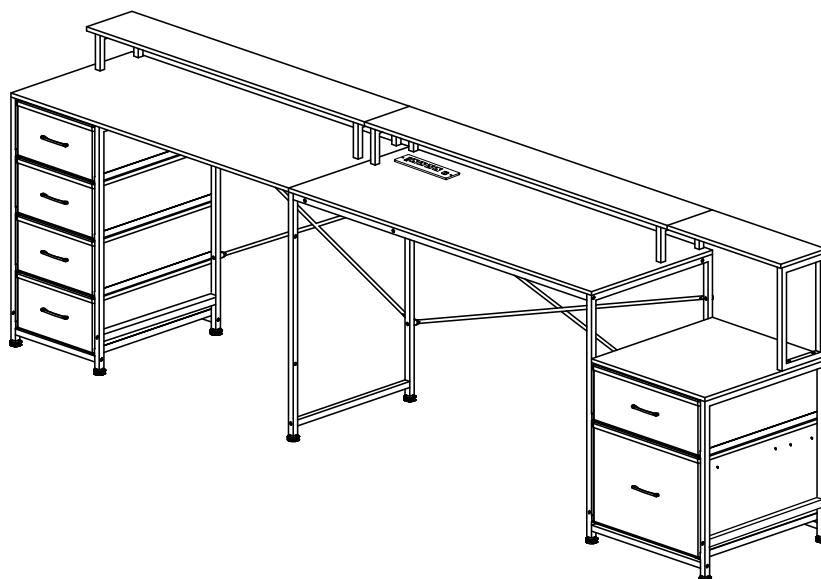



GAUTION : When tightening the screws , tighten sequentially .
Do not tighten any screws fully and then towards the next one .
When every part is OK , then tighten all the screws







friendly reminder


To avoid errors and confusion during the installation of accessories, use the type and quantity of hardware accessories according to the installation procedure described in the instructions. First, unroll the accessories bag and lay out the hardware accessories, cut holes in the side, and take out the hardware accessories.

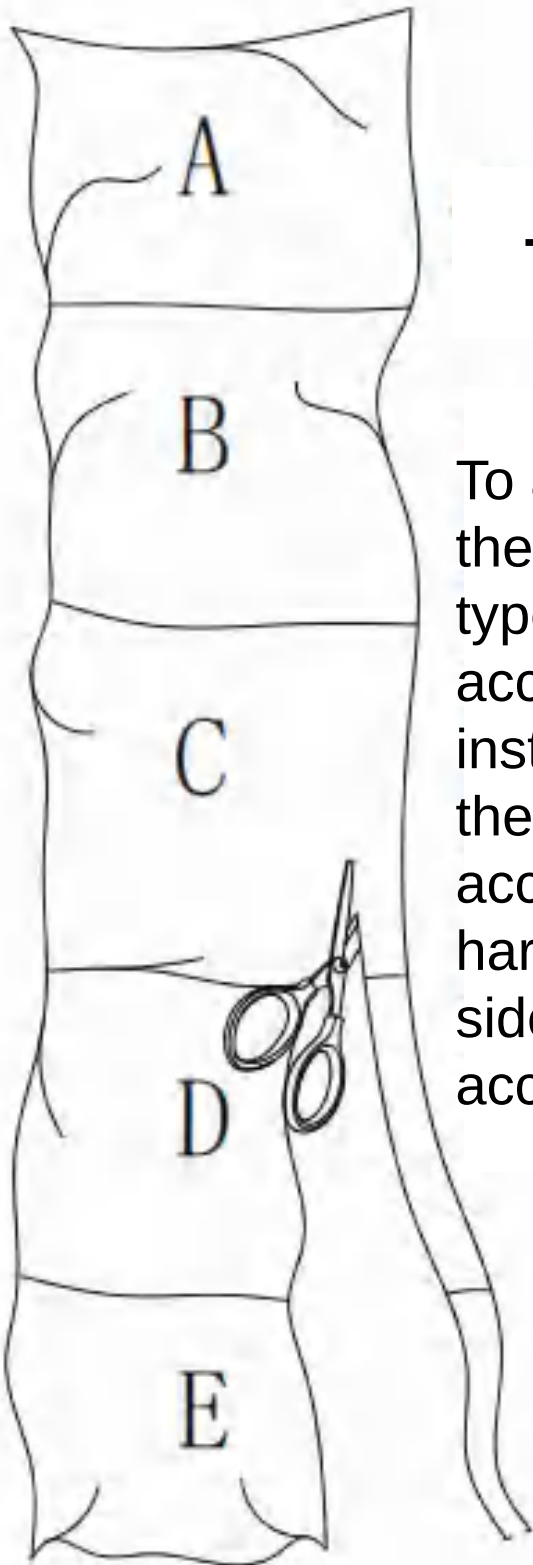

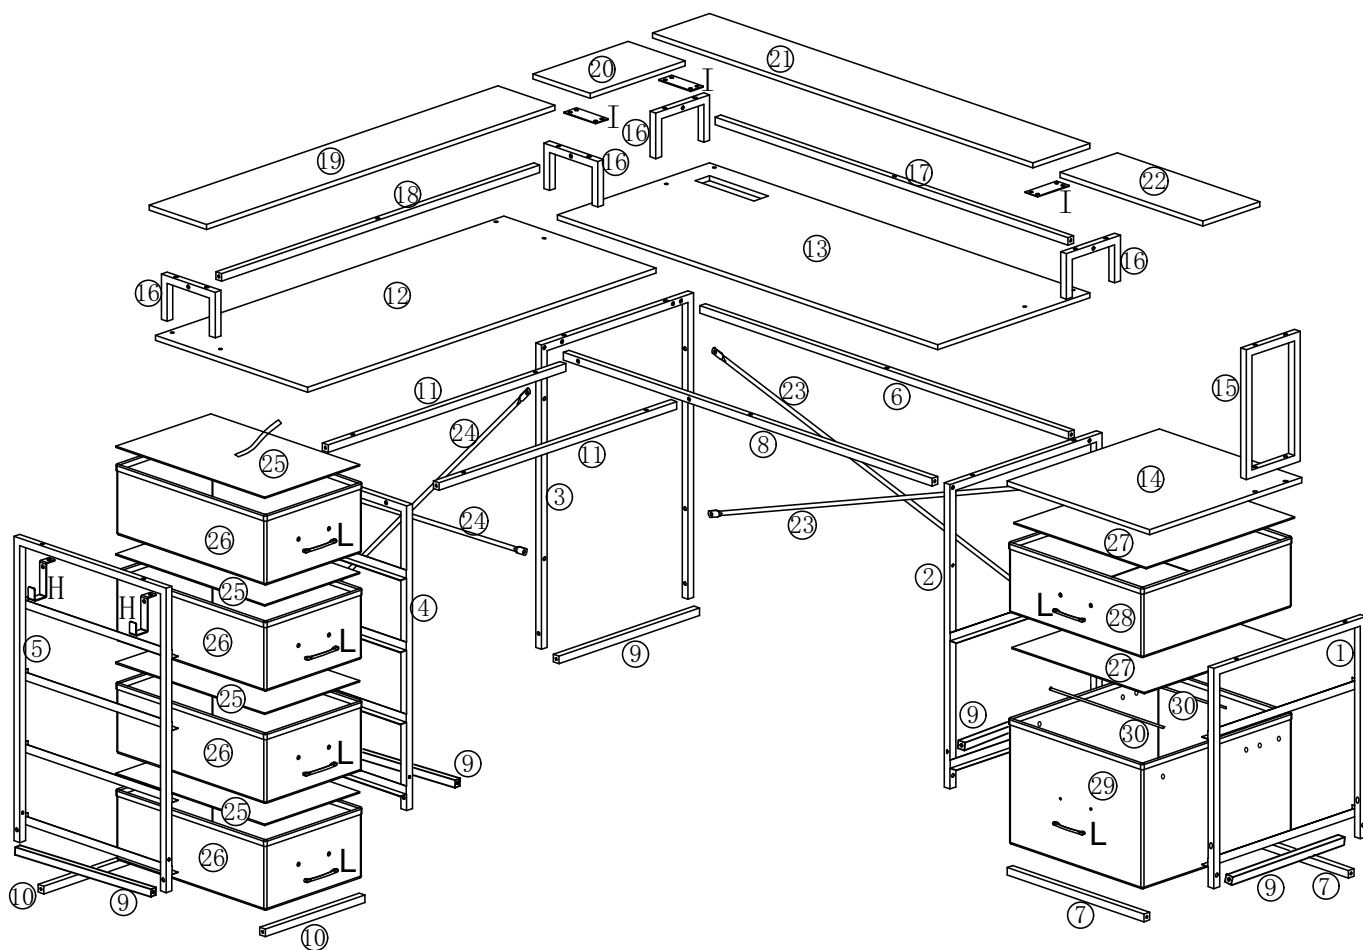


A	x10	B	x30	C	x44	D	x2	E	x2	F	x12
											
		M6x35		M6x28		M5x40		ST3.5x12		M6x10	
G	x8	H	x2	I	x3	J	x8	K	x1	L	x6
										 L  L1	
		M6								M4x8	
M	x1	N	x4		x1		x1		x1		
		 M4x12		 M3		 M4		 			

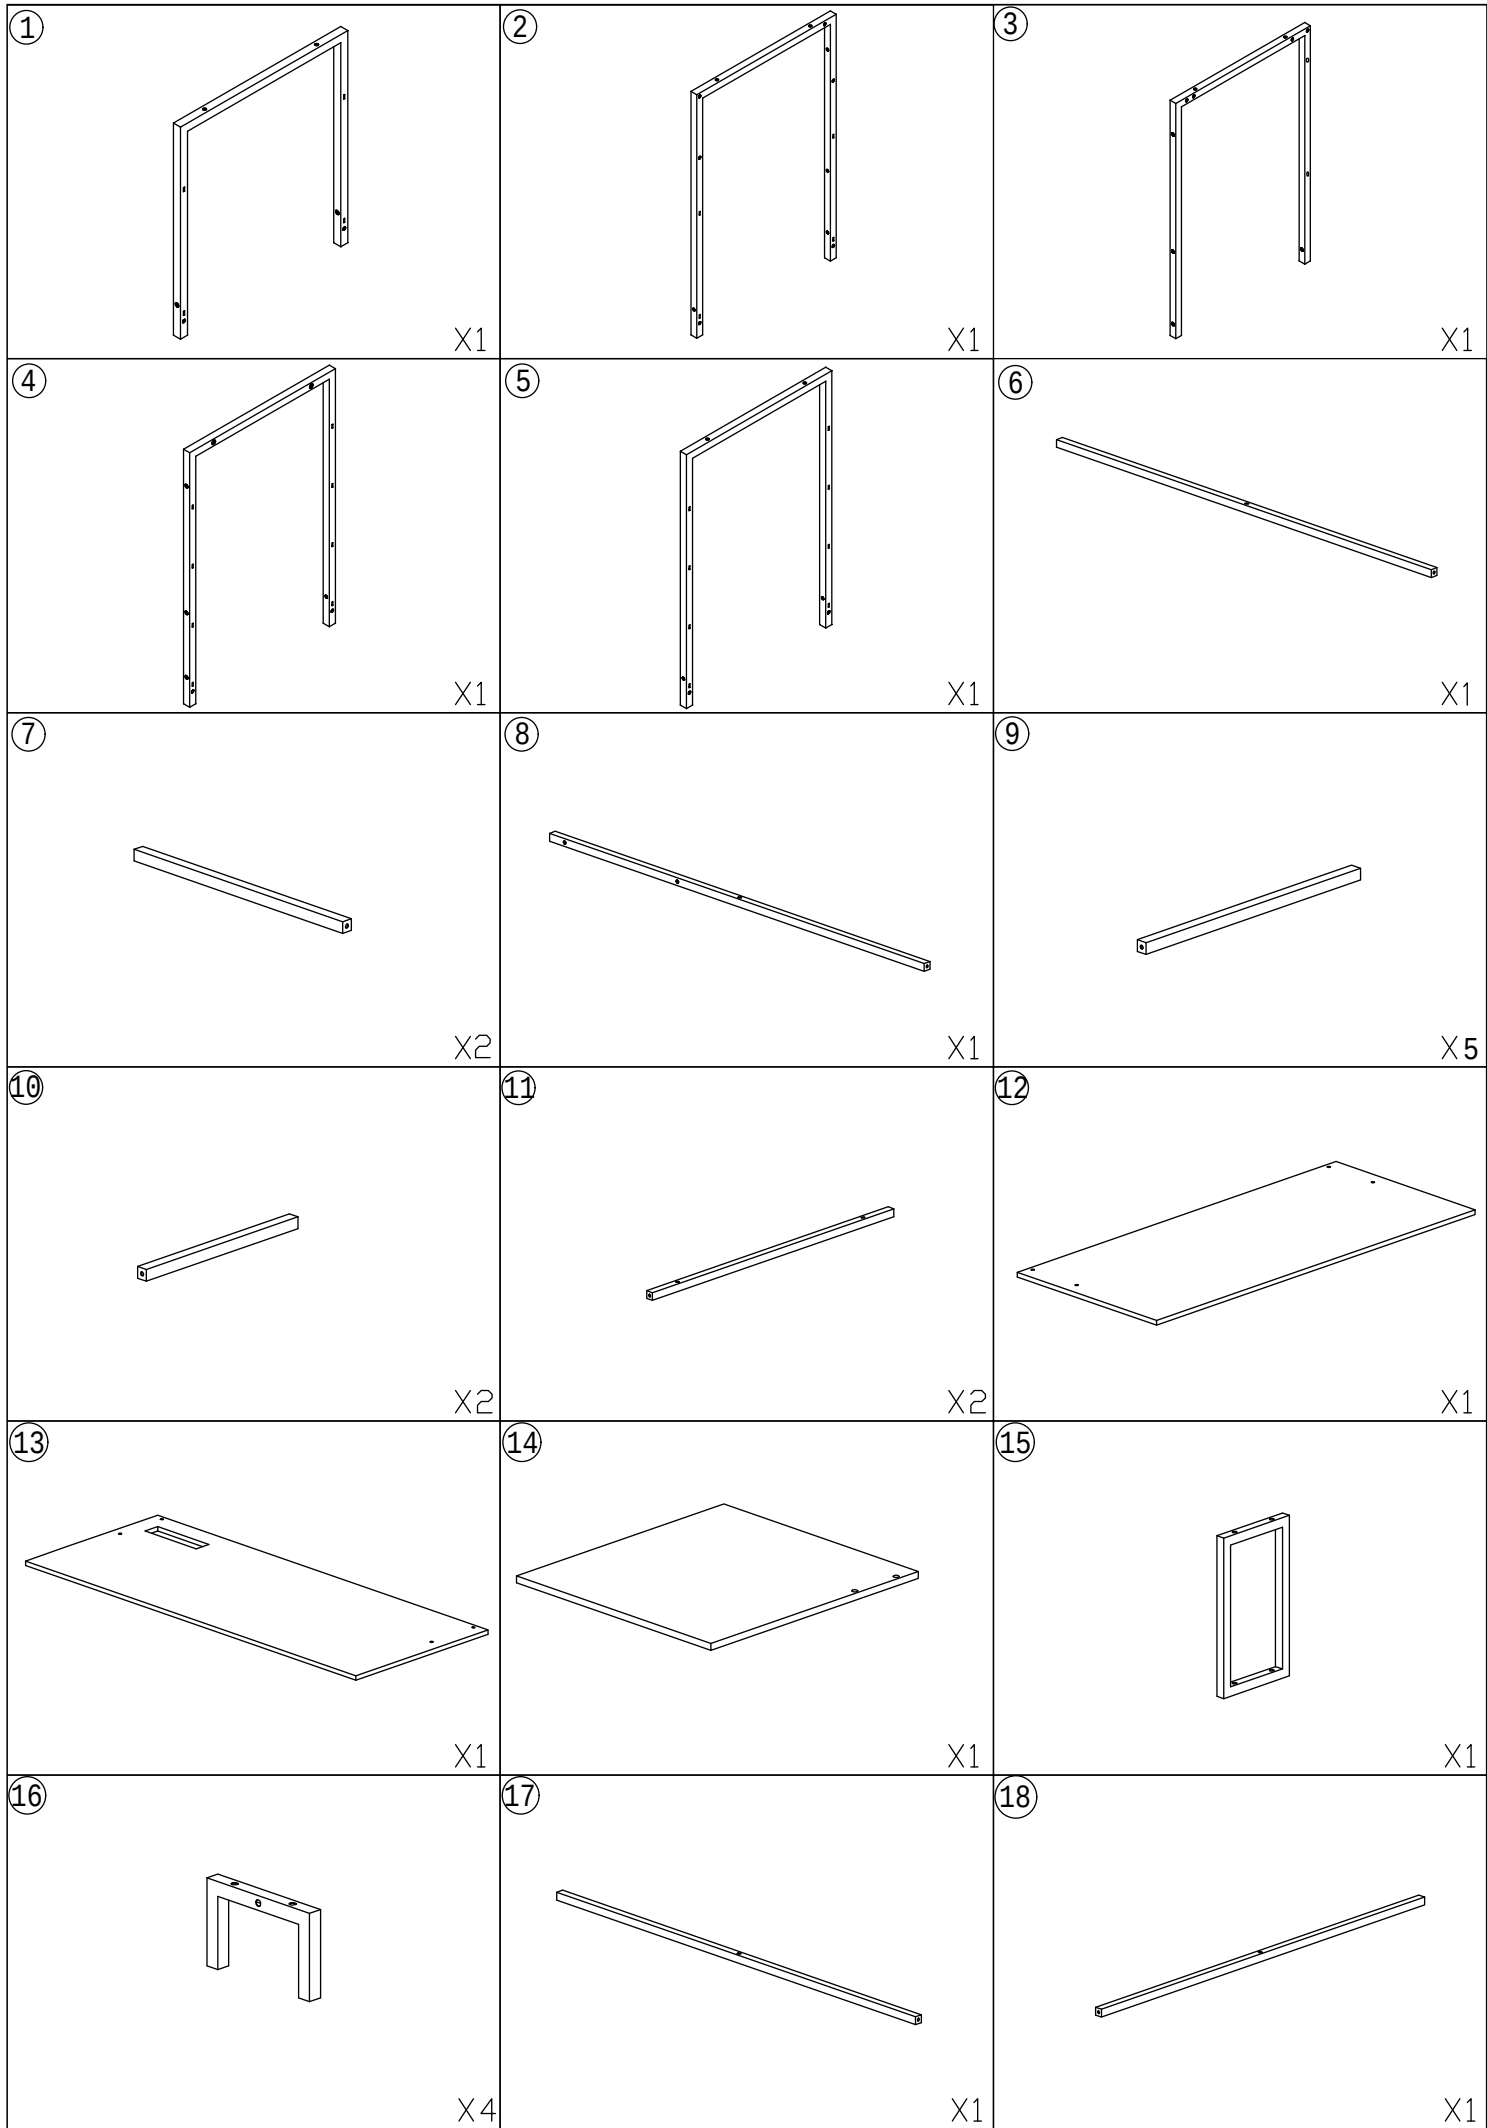


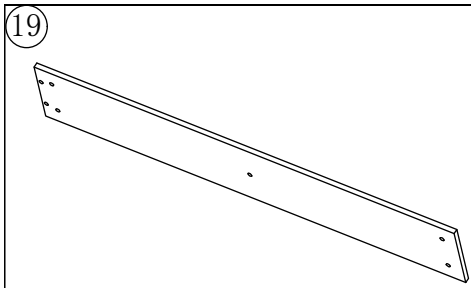


X1

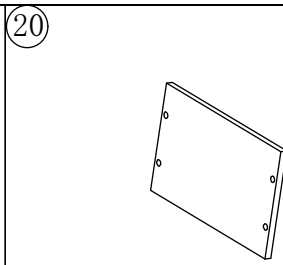


X1

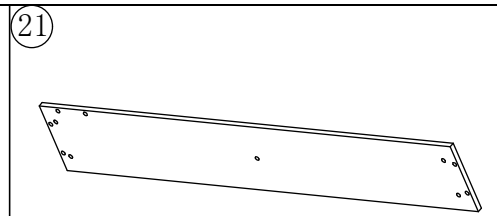


X1

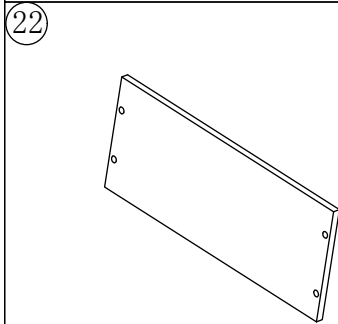


X1

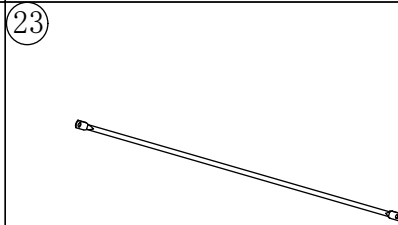


X2

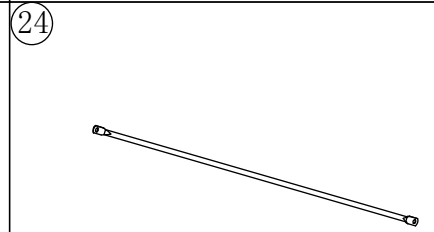


X2

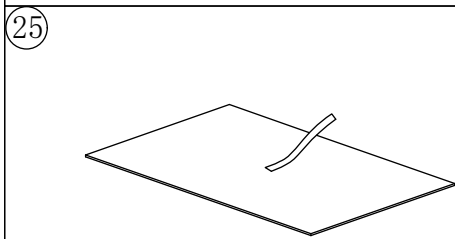


X4

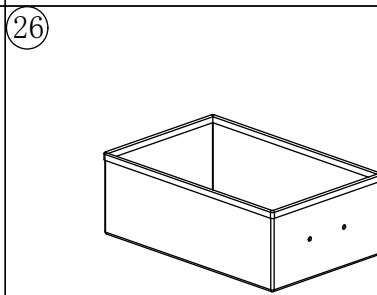


X4

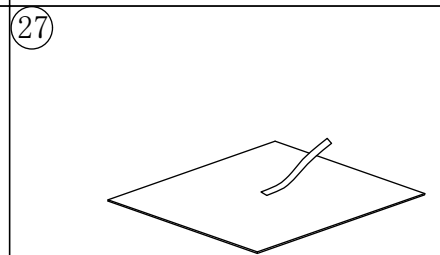


X2

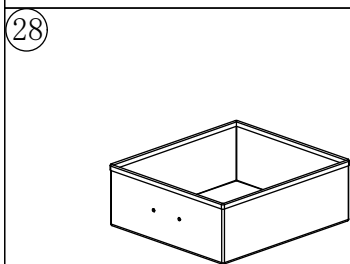


X1

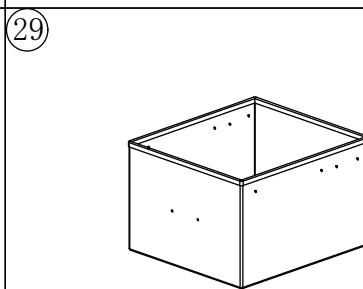

X1

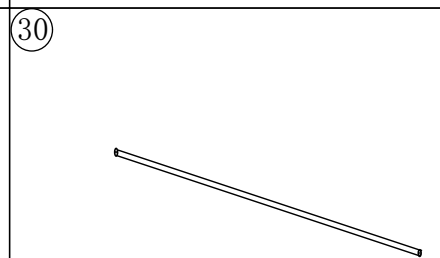


X2

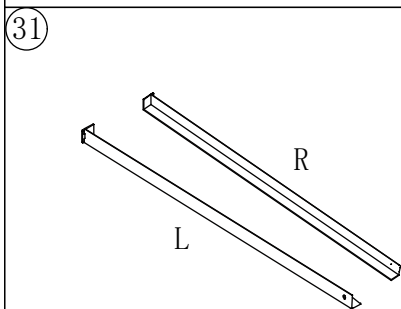


X6

Step 1

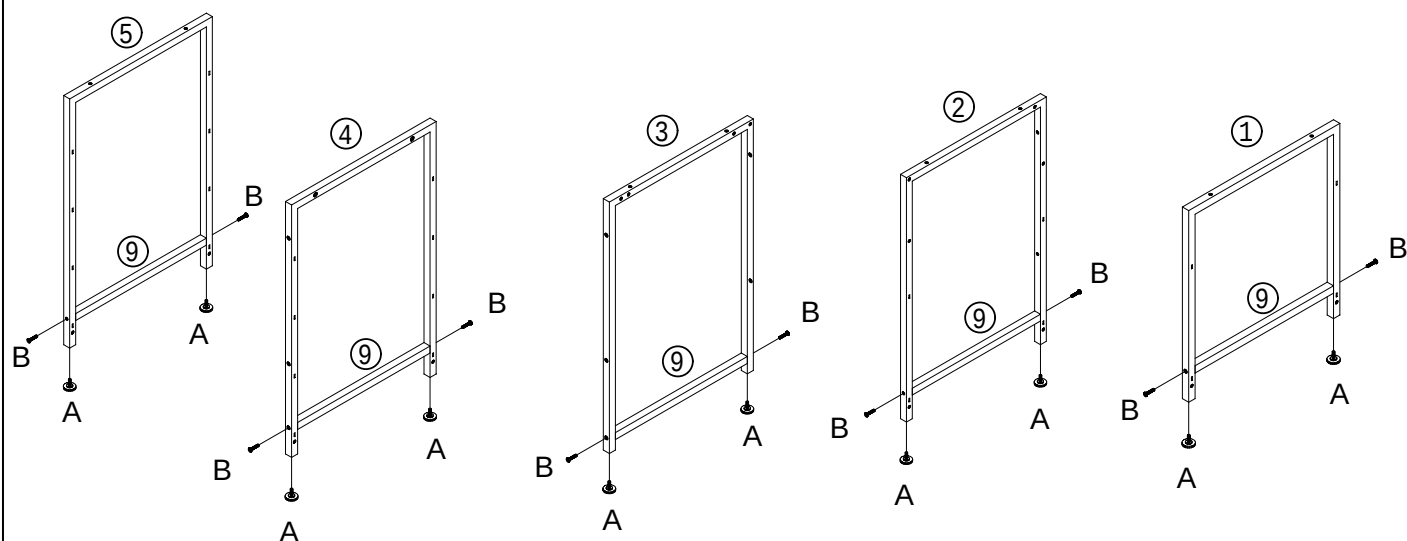


B	X10	A	X10
			
M6x35			

Step 2

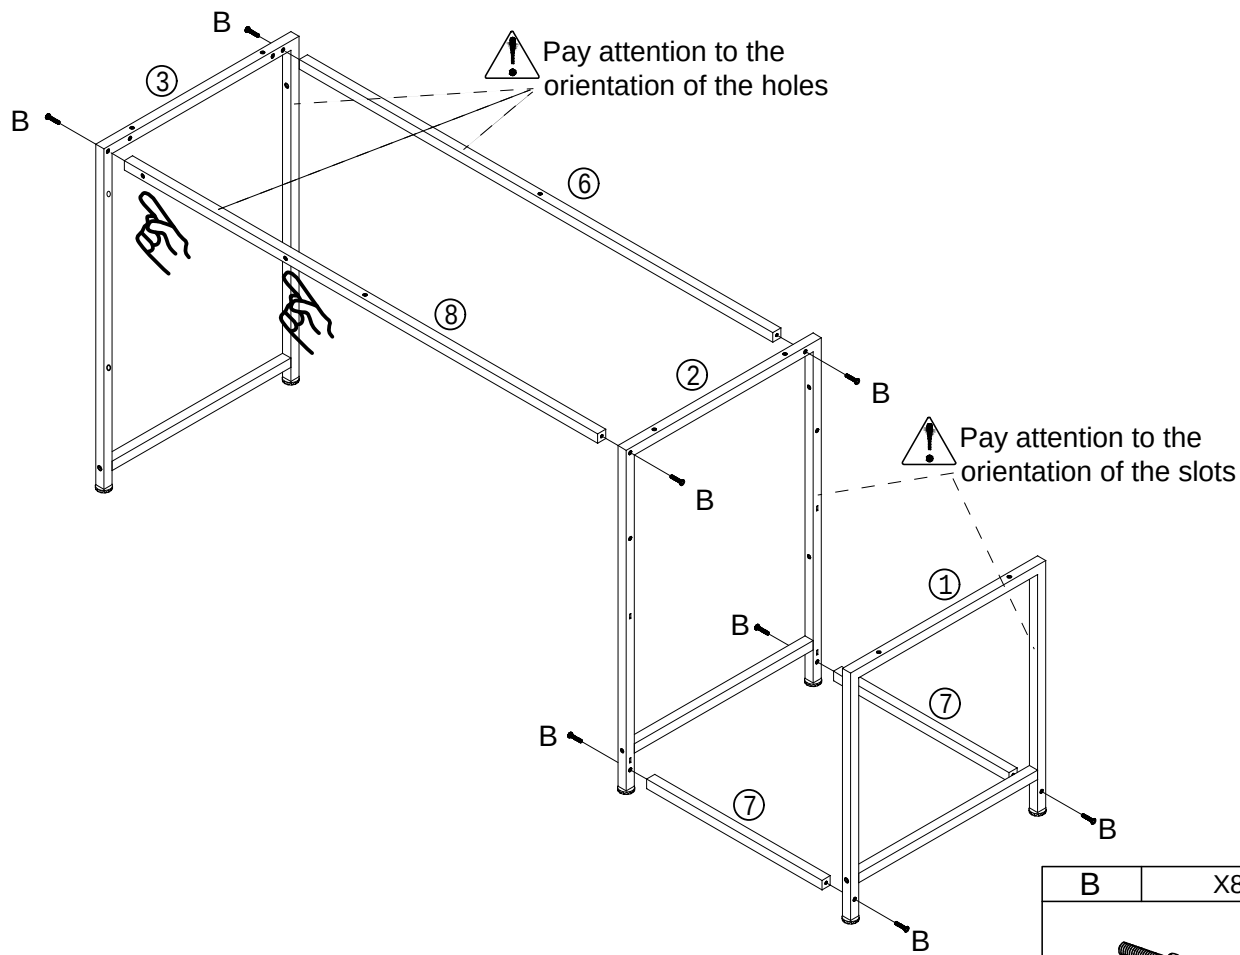


B	X8
	
M6x35	

Step 3

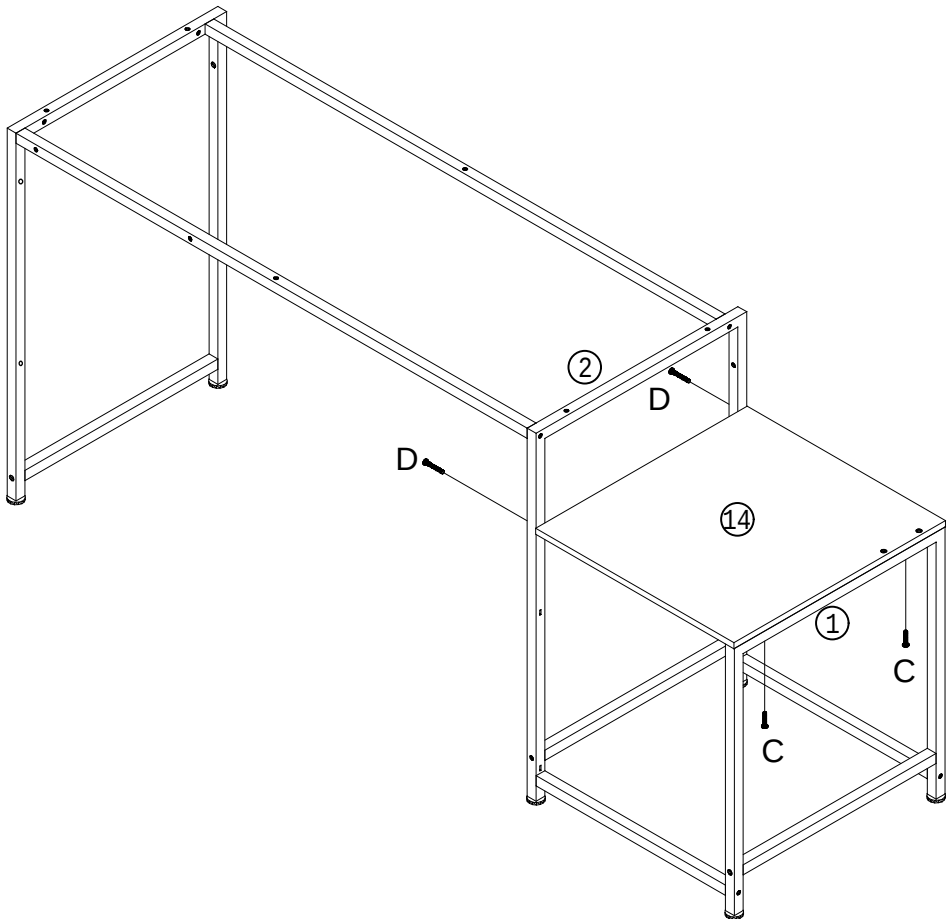

C	X2
	
M6x28	
D	X2
	
M5x40	



Step 4

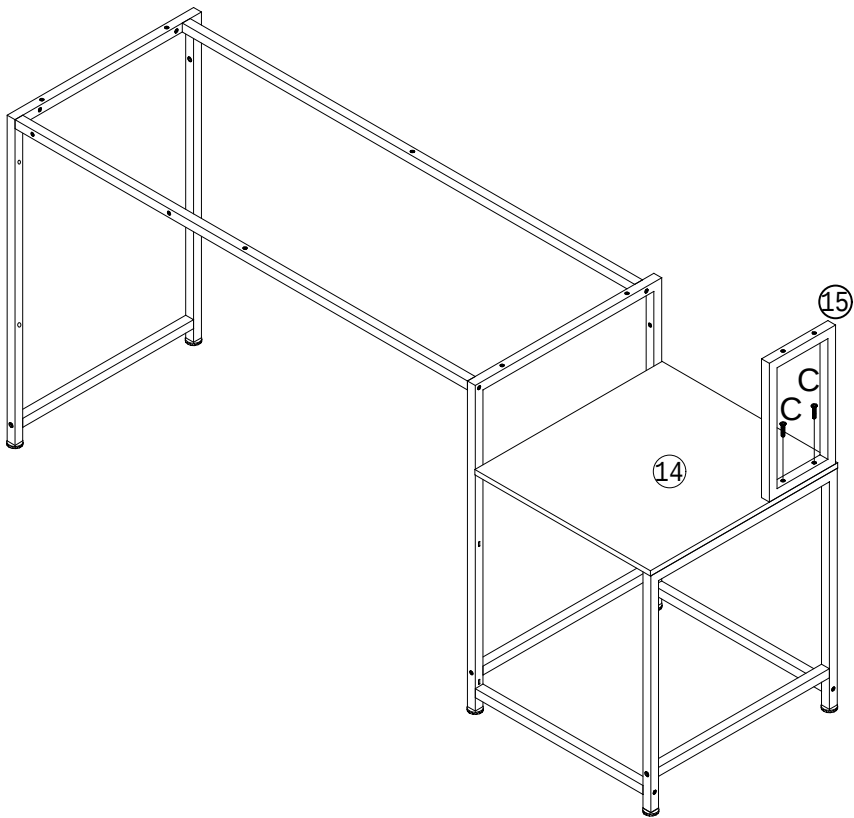

C	X2
	
M6x28	


Step 5

X4

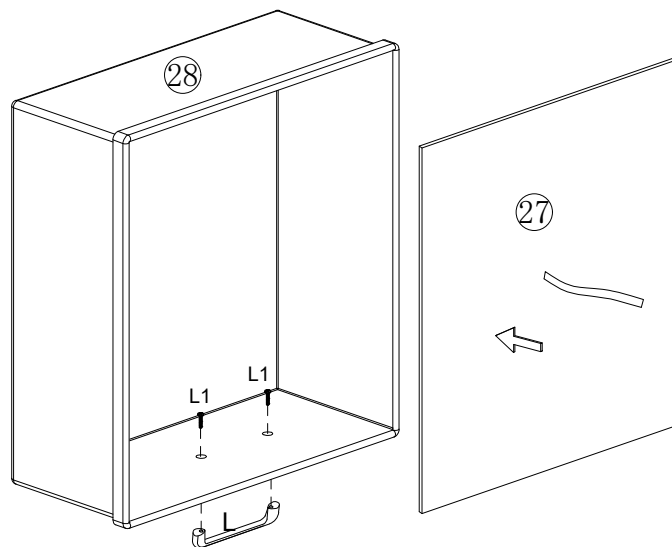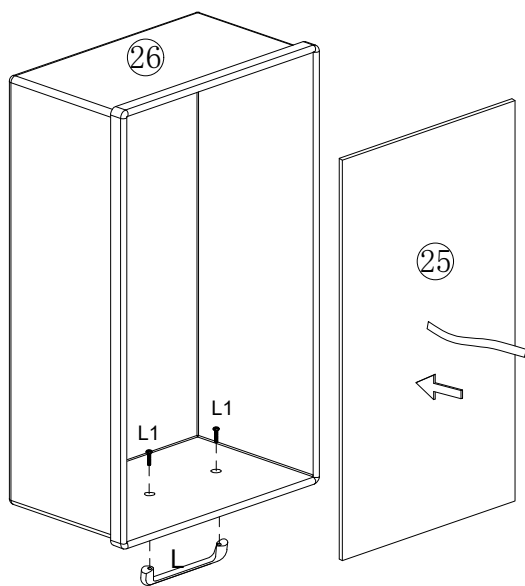


L	X5
	
L	L1
M4x8	

Step 6

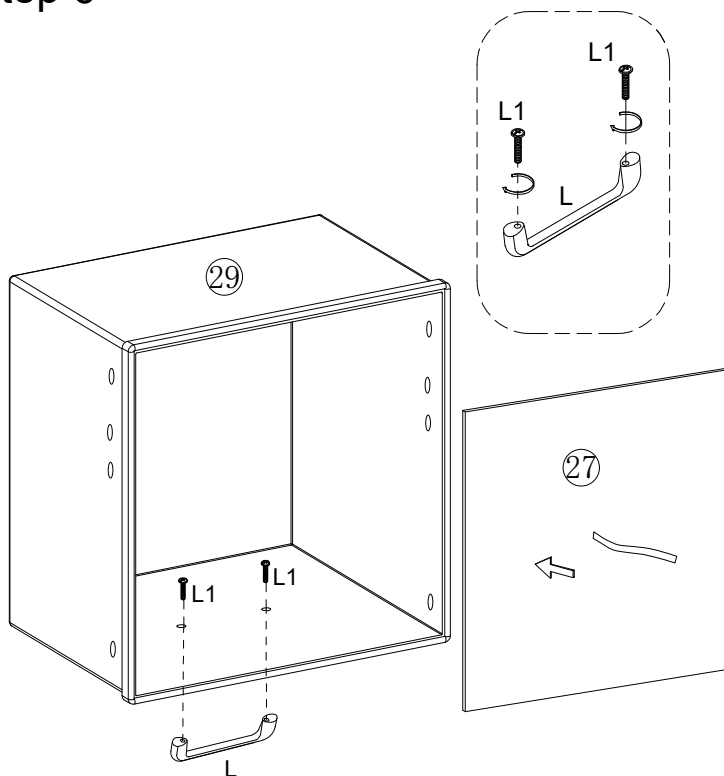


The round tube is adjustable and can be adjusted according to your own needs.

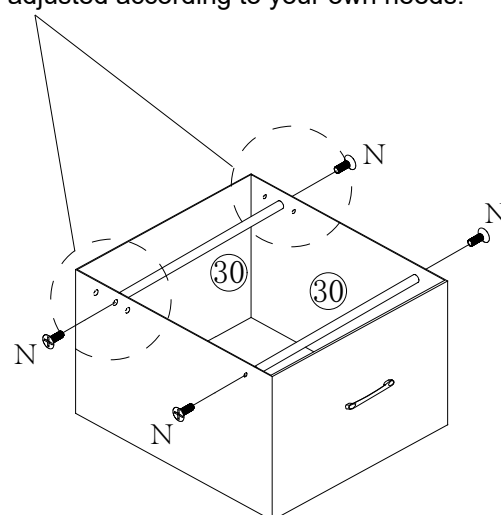

N	x4	L	X1
			
M4X12		L	L1
		M4x8	

Installation Option I

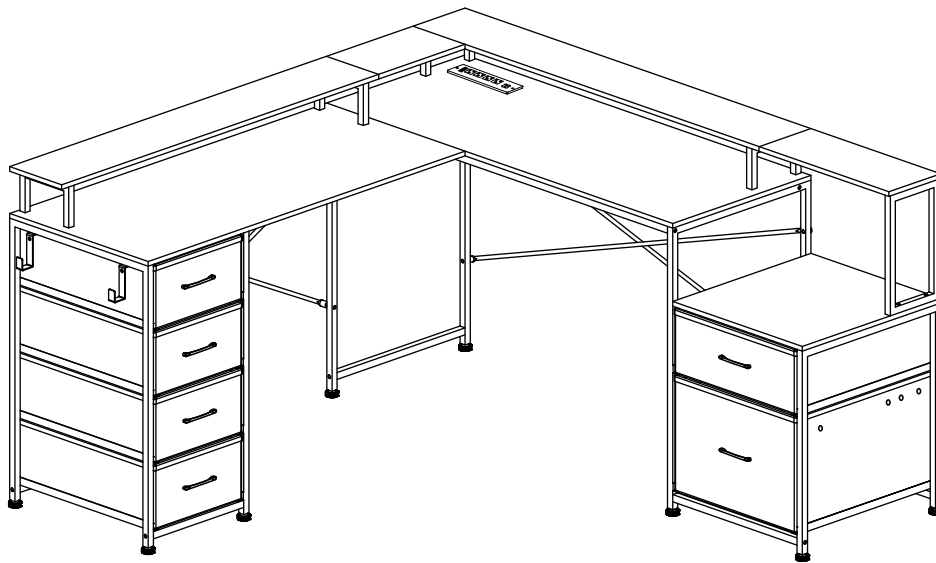


With the basic components of Step1-step6,
the following installation method is the first.

Step 7-1



Pay attention to the orientation of the holes

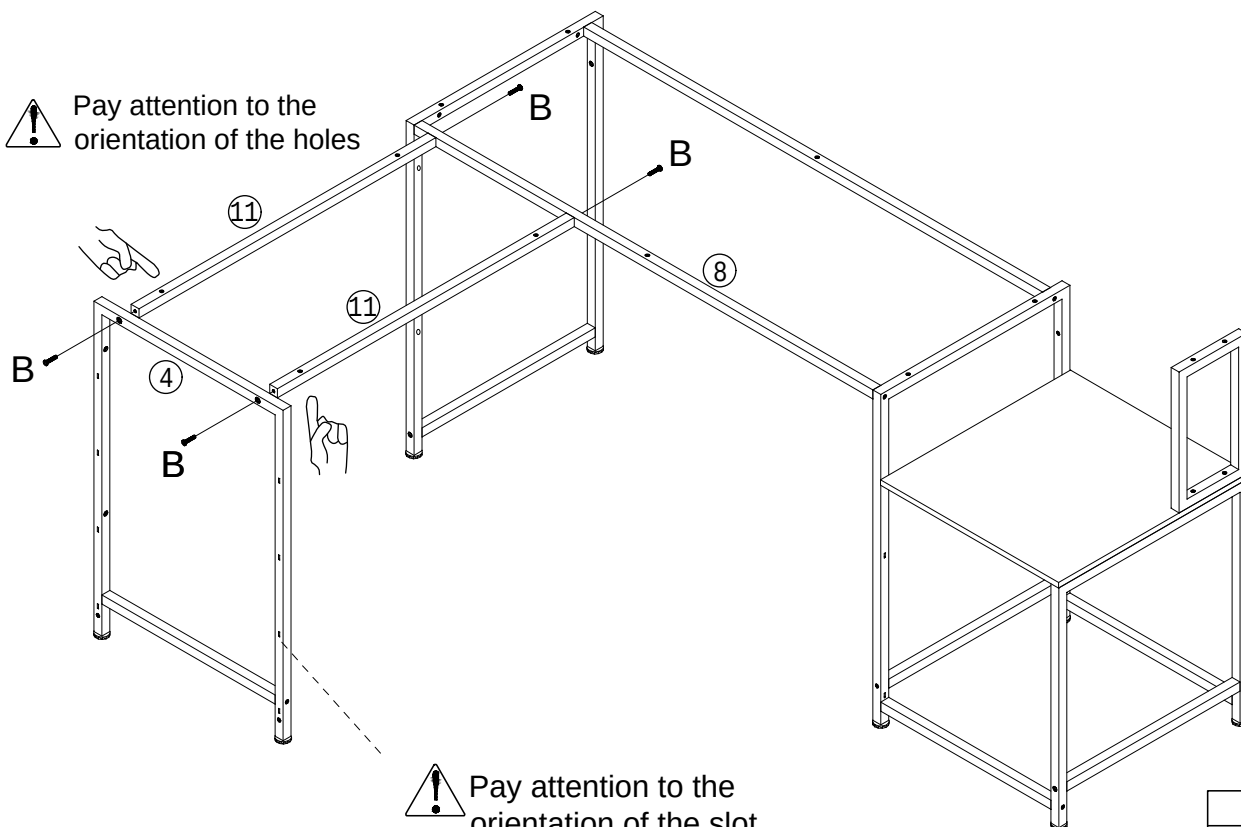


Pay attention to the orientation of the slot

B	X4
M6x35	

Step 8-1





Pay attention to the orientation of the slot

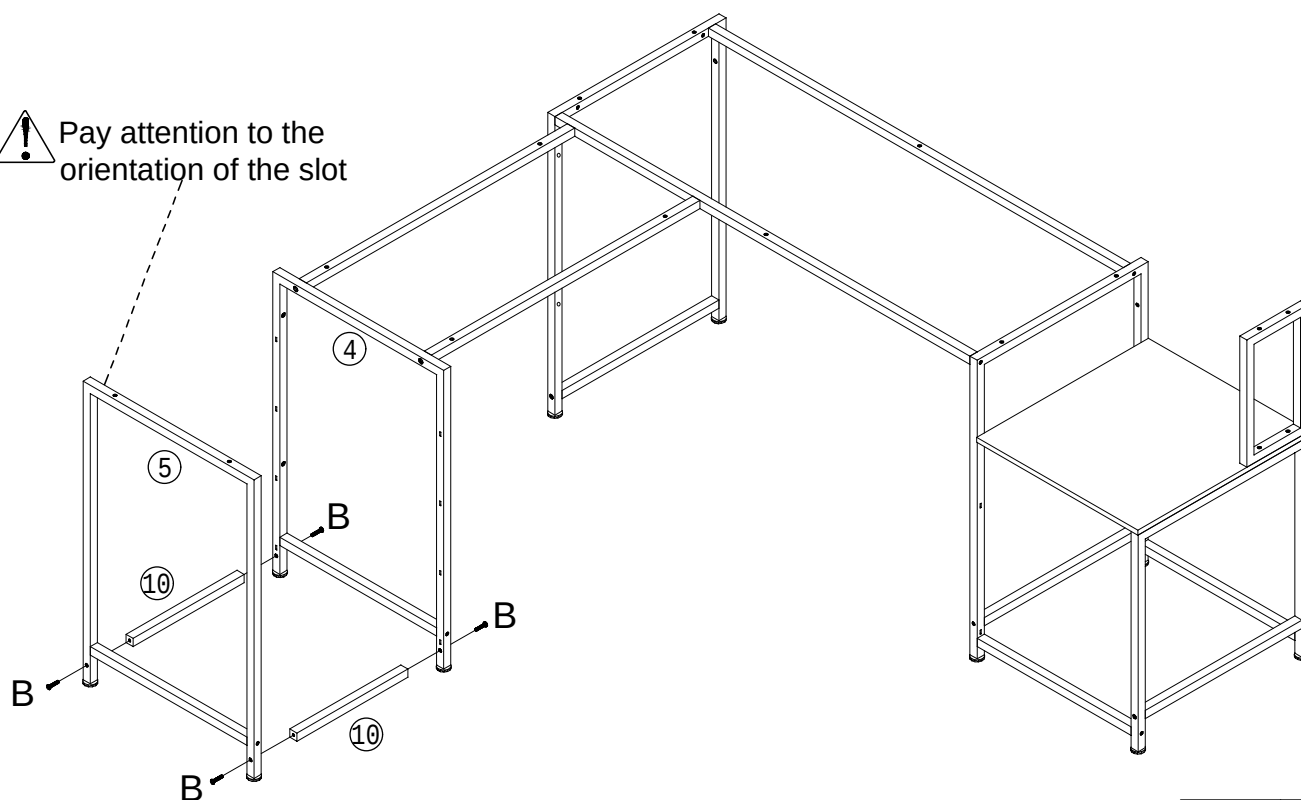



B	X4
M6x35	

Step 9-1

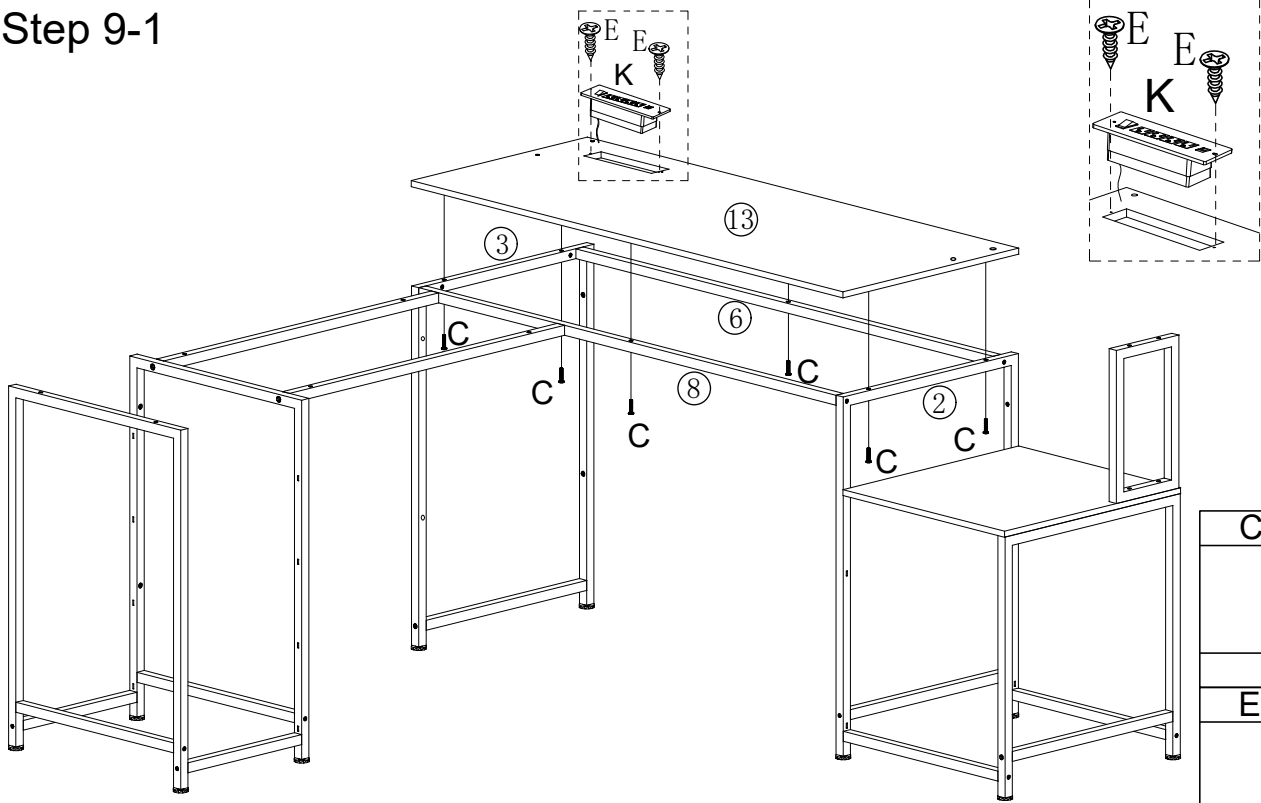


C	X6
	
M6x28	
E	X2
	
ST3.5X12	
K	X1
	


Step 10-1

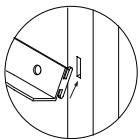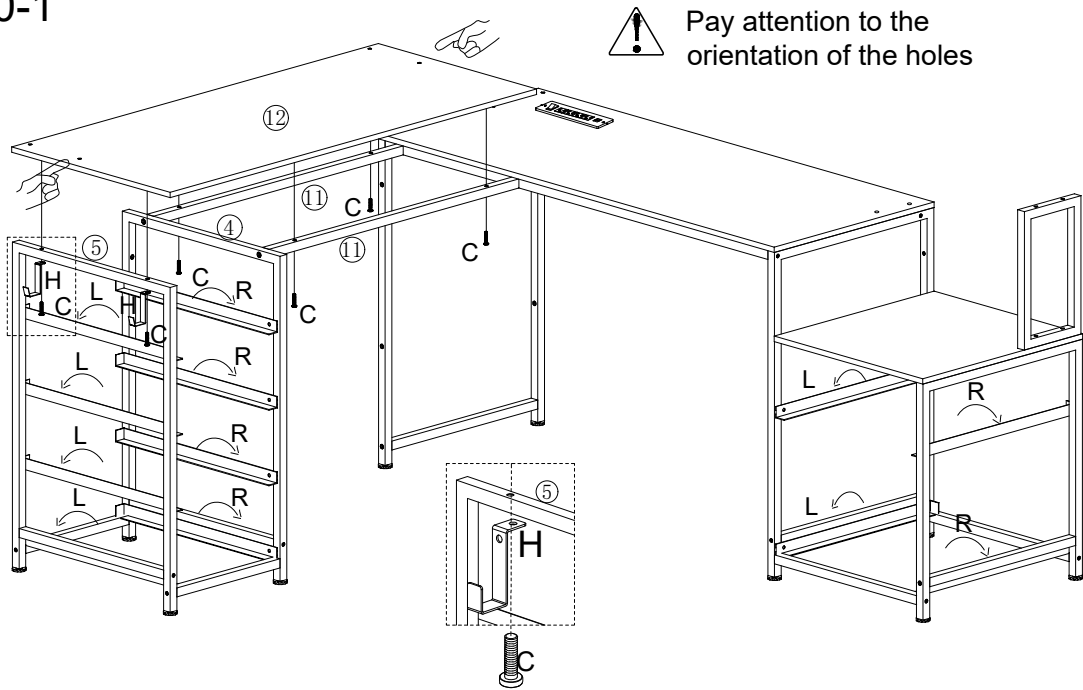


Insert the upper part into the square hole.

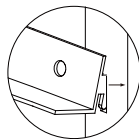


Then insert the rest part horizontally.

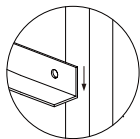

Press down the rail to ensure proper installation.


⑪	X6	H	X2	C	X6
					
				M6x28	

Step 11-1

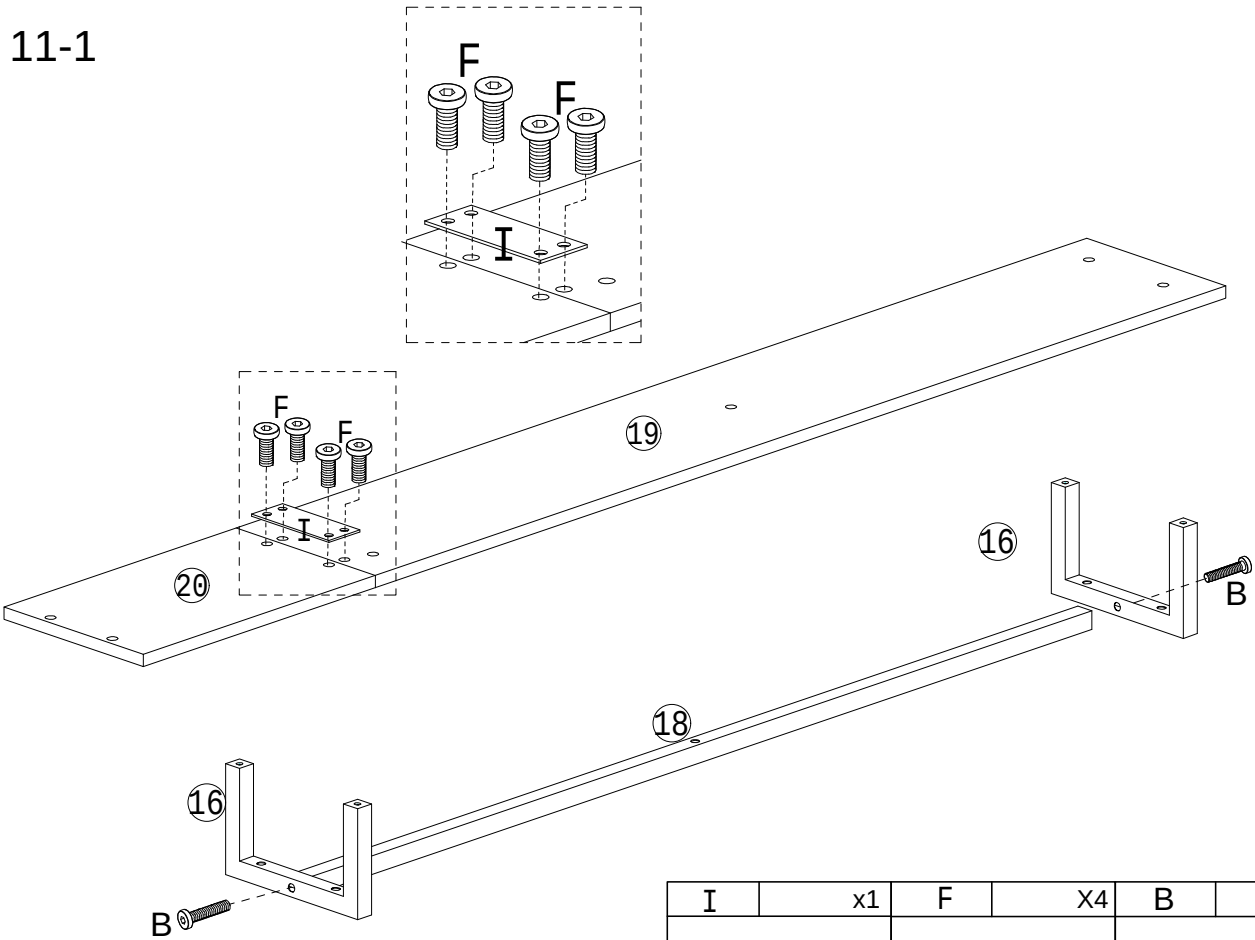


I	x1	F	x4	B	x2
					
		M6x10		M6x35	

Step 12-1

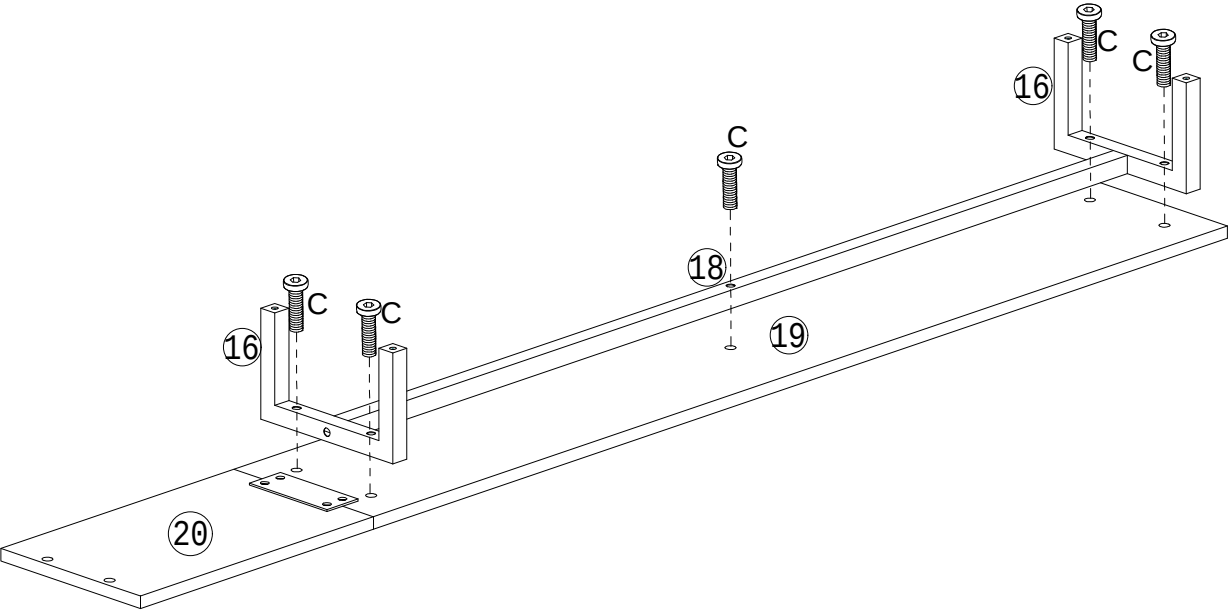


C	x5
	
M6x28	

Step 13-1

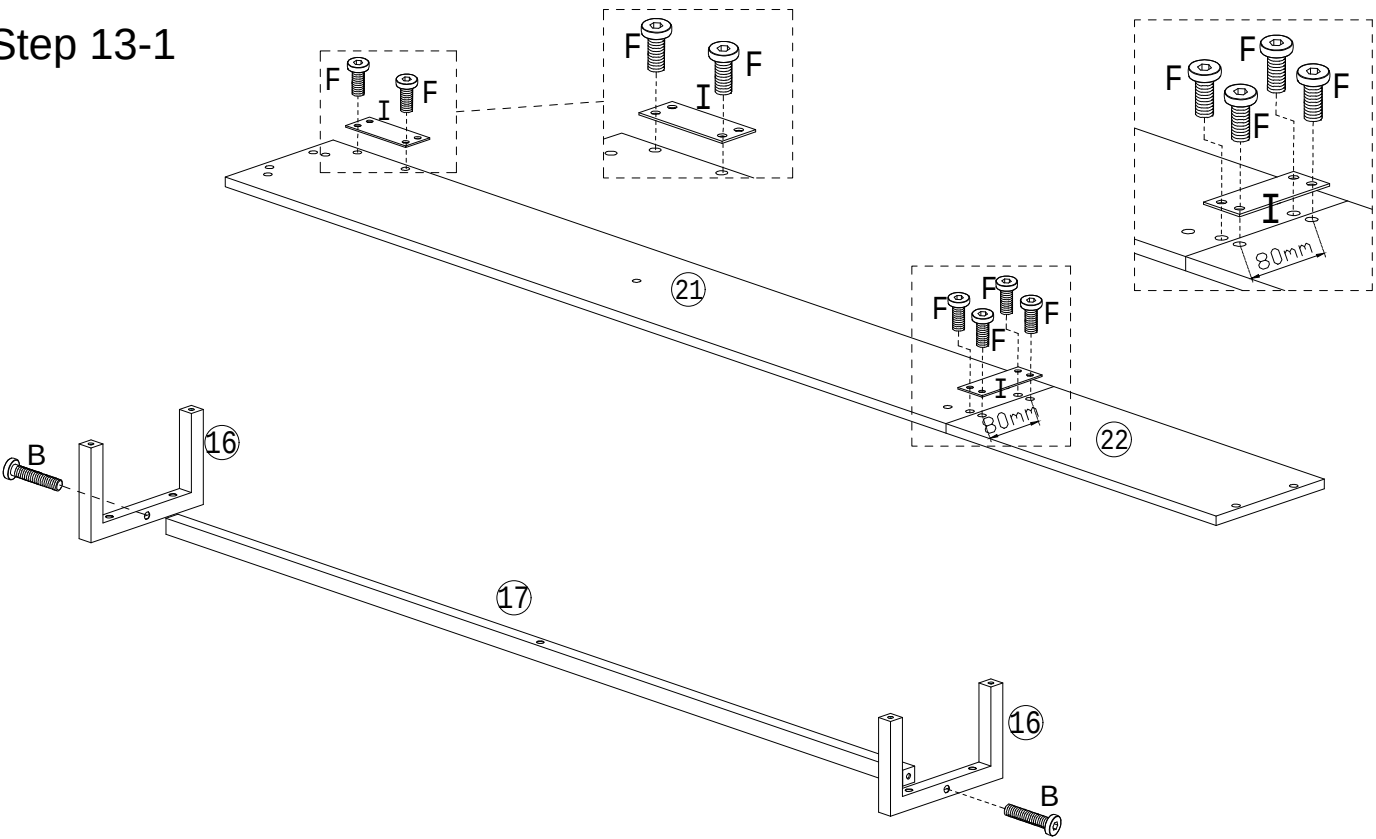


B	x2	I	x2	F	x6
					
M6x35				M6x10	

Step 14-1

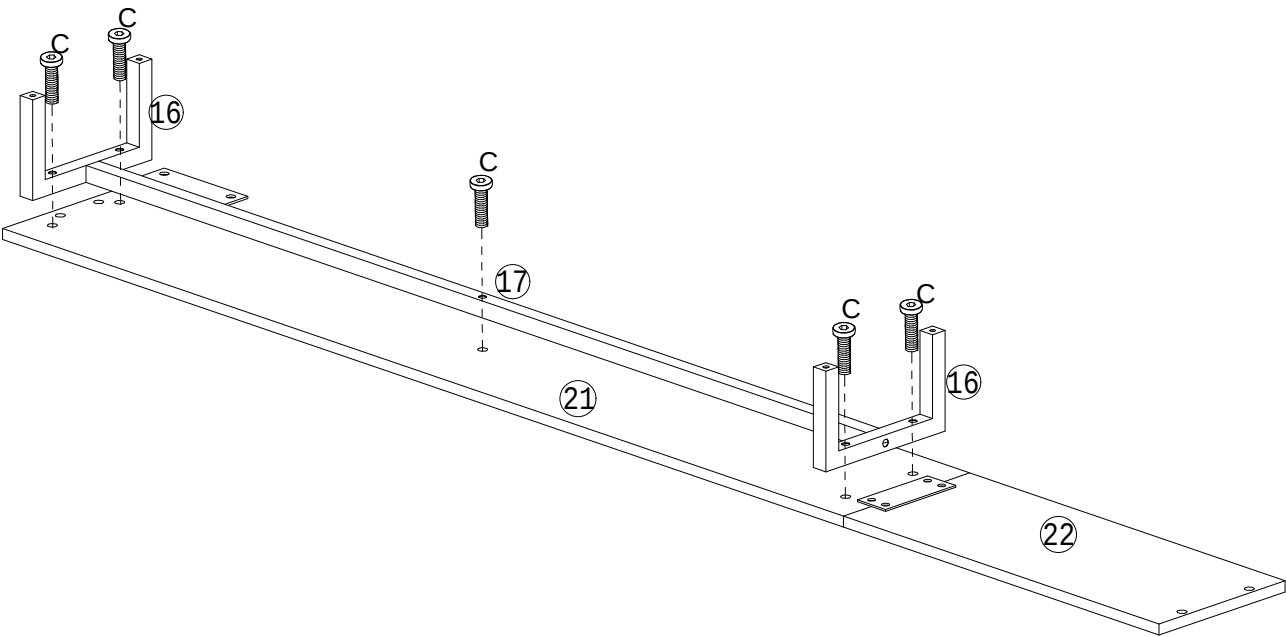


C	x5
	
M6x28	

Step 15-1

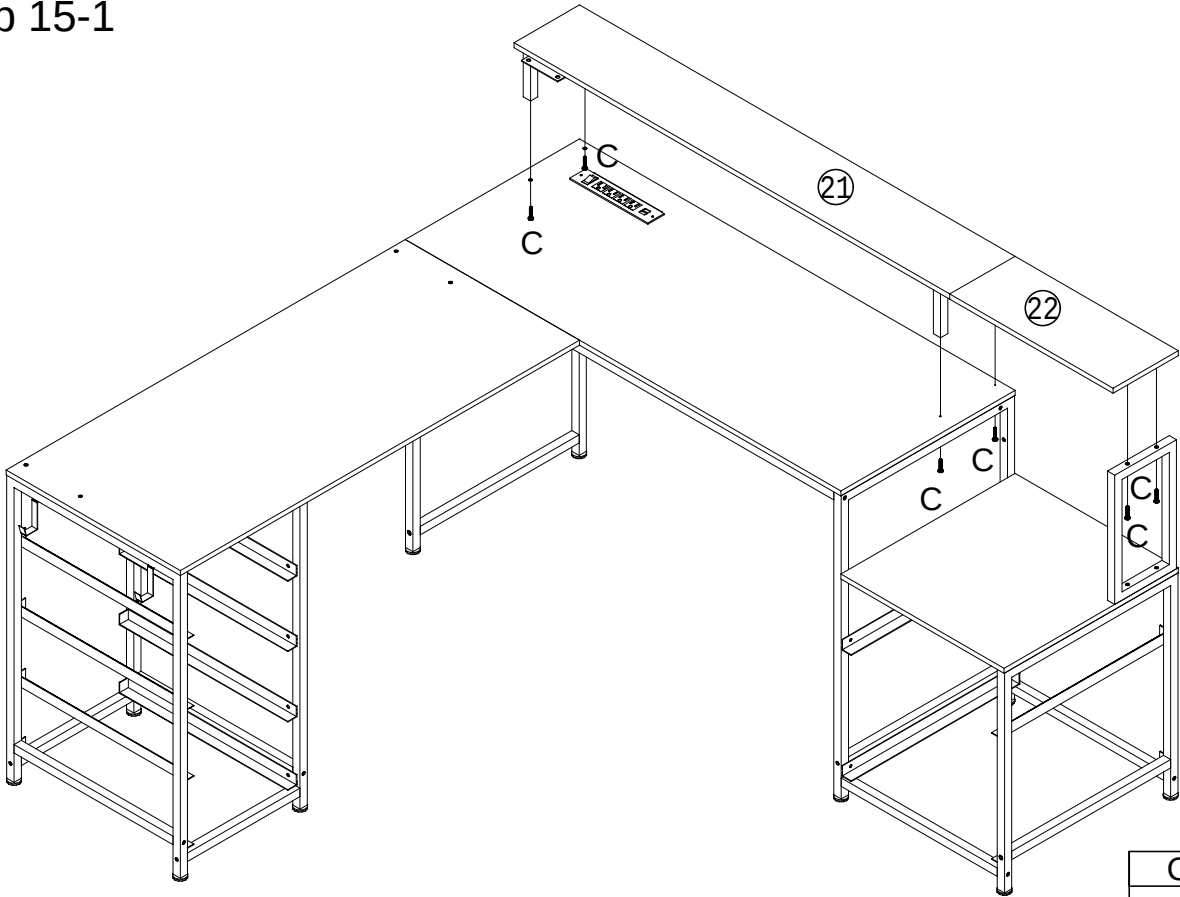


C	X6
	
M6x28	

Step 16-1

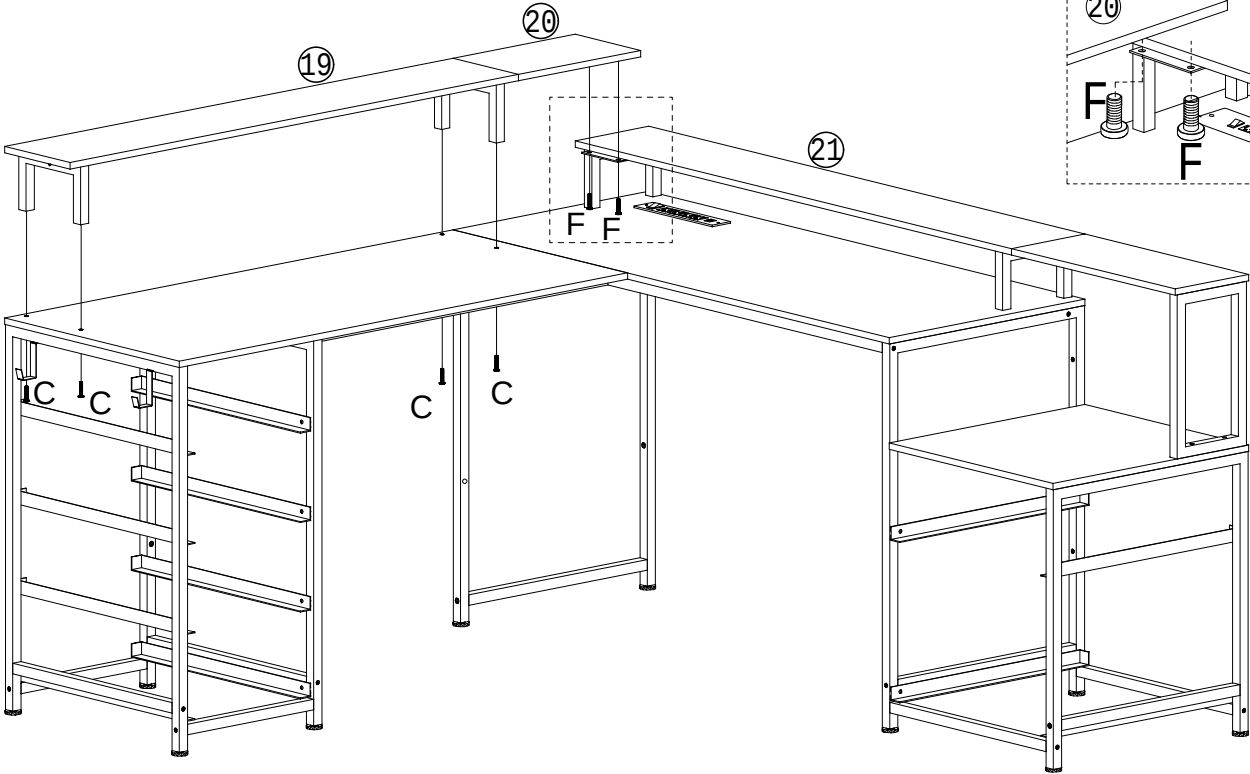


C	X4	F	X2
			
M6x28		M6x10	

Step 17-1

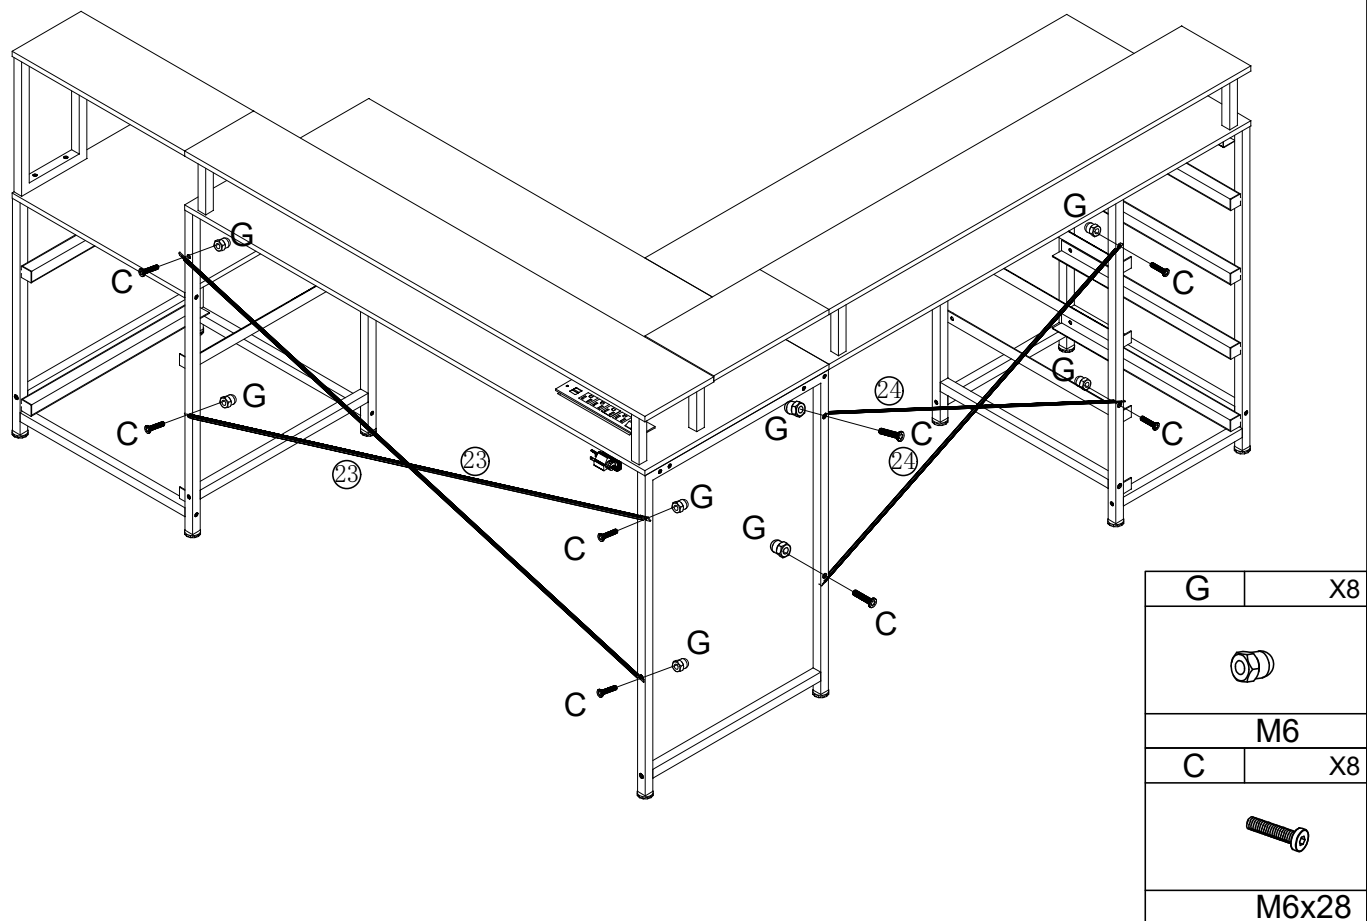


Step 18-1

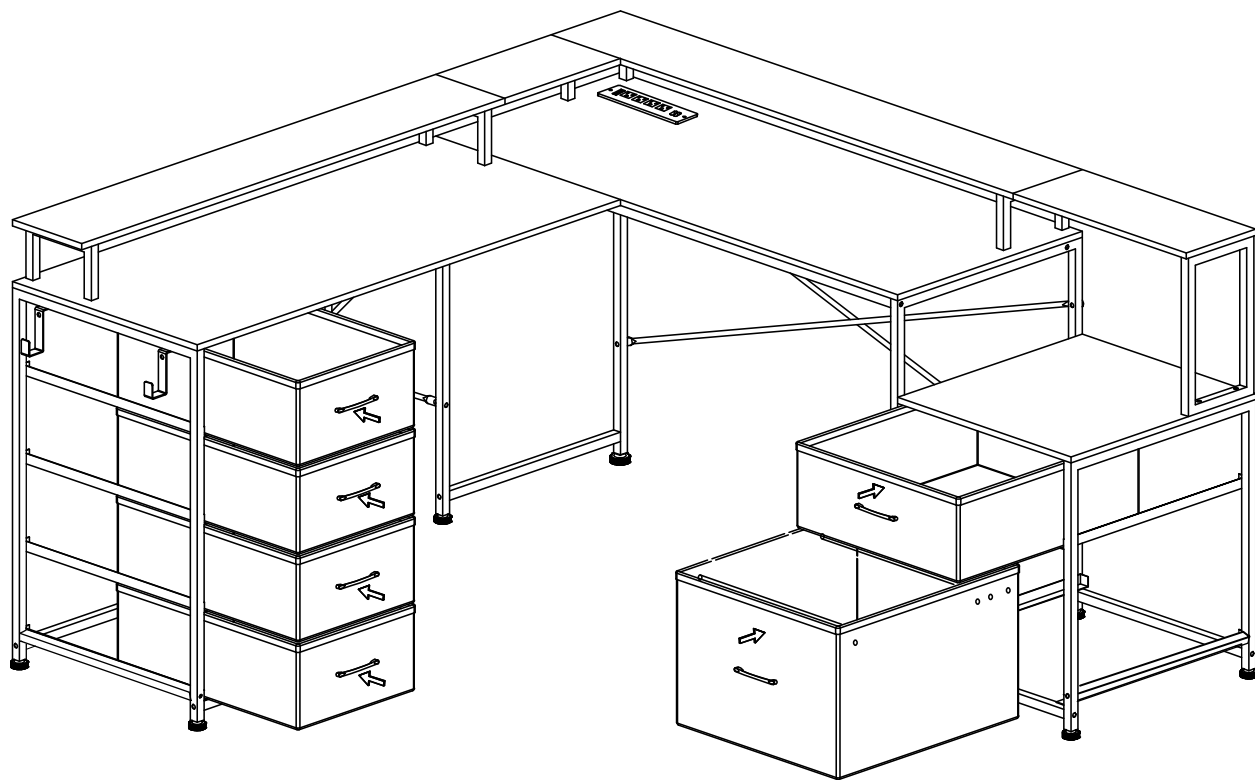

Step 19-1


Be careful to tear off the paper on the back of the light strip, Then press it firmly with your hand.

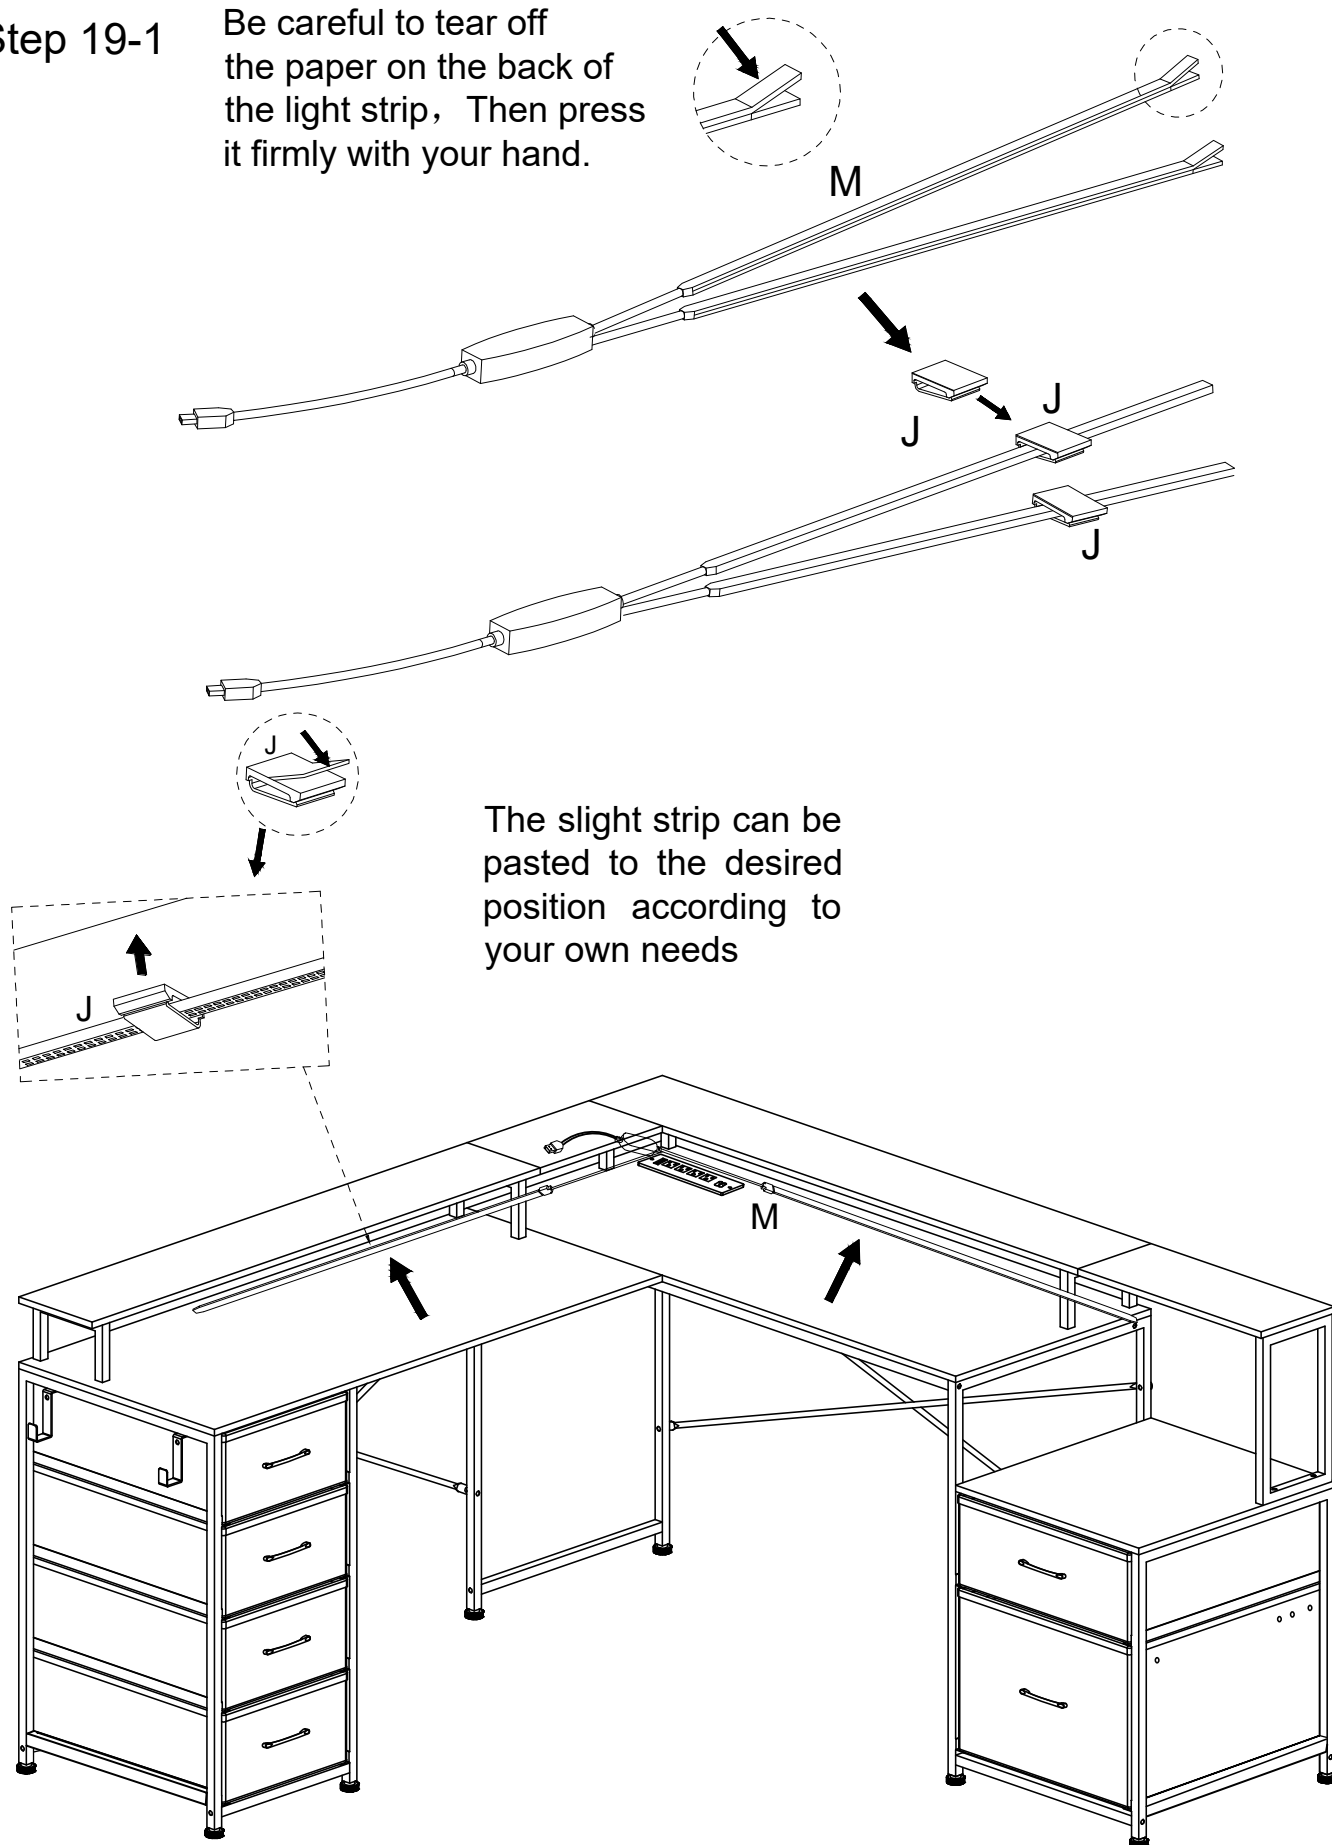

The slight strip can be pasted to the desired position according to your own needs

J	x8	M	x1
			


Installation Option II

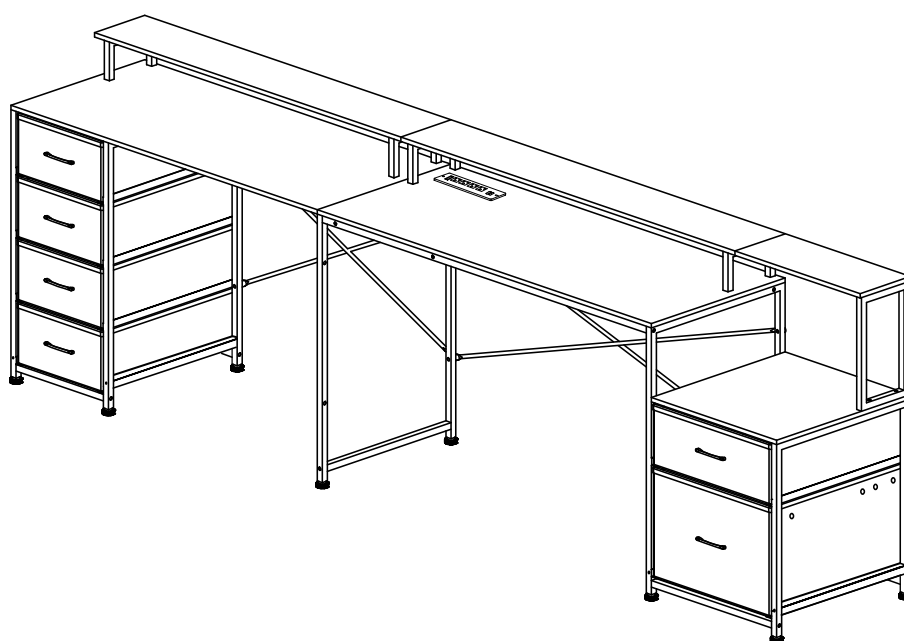

With the basic components of Step1-step6,
the following installation method is the second.

Step 7-2

⚠ Pay attention to the orientation of the holes

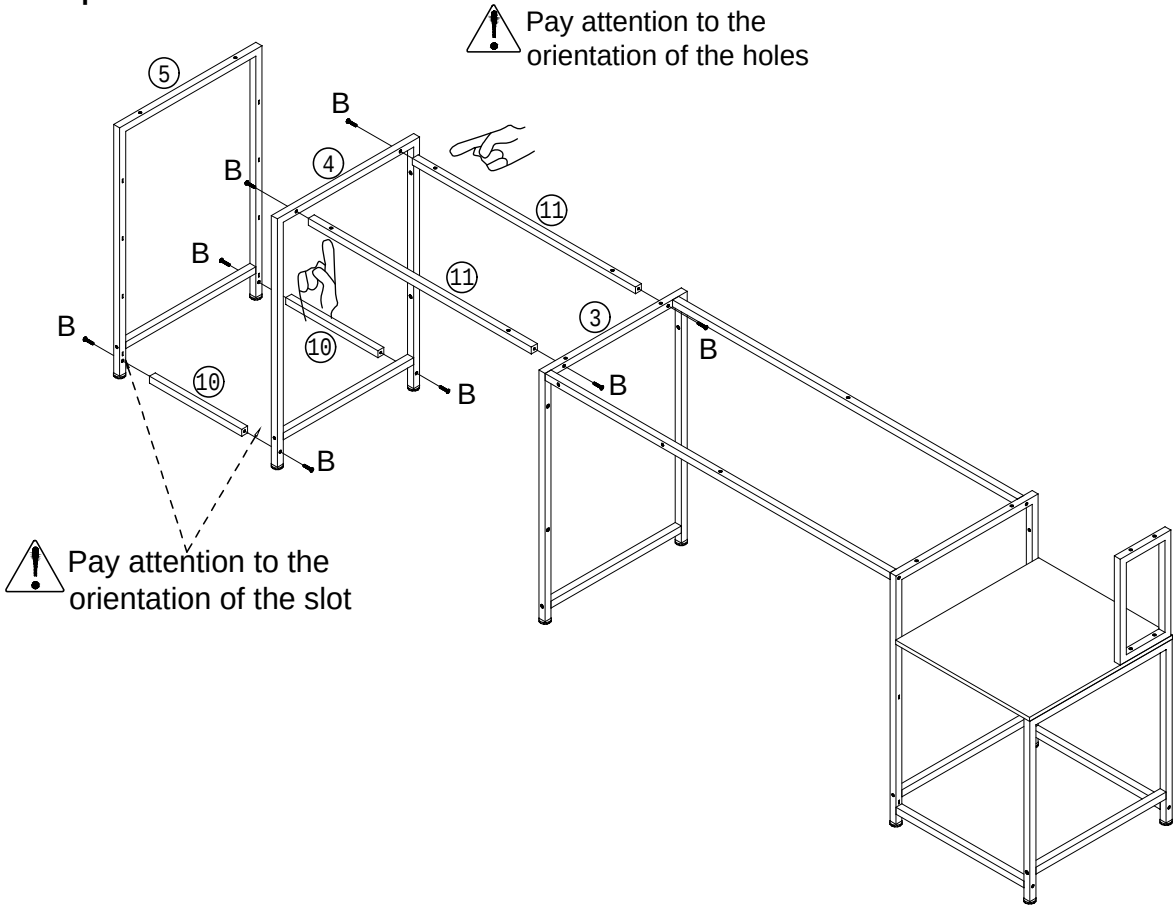


⚠ Pay attention to the orientation of the slot

B	X8
	
M6x35	


Step 8-2

⚠ Pay attention to the orientation of the holes

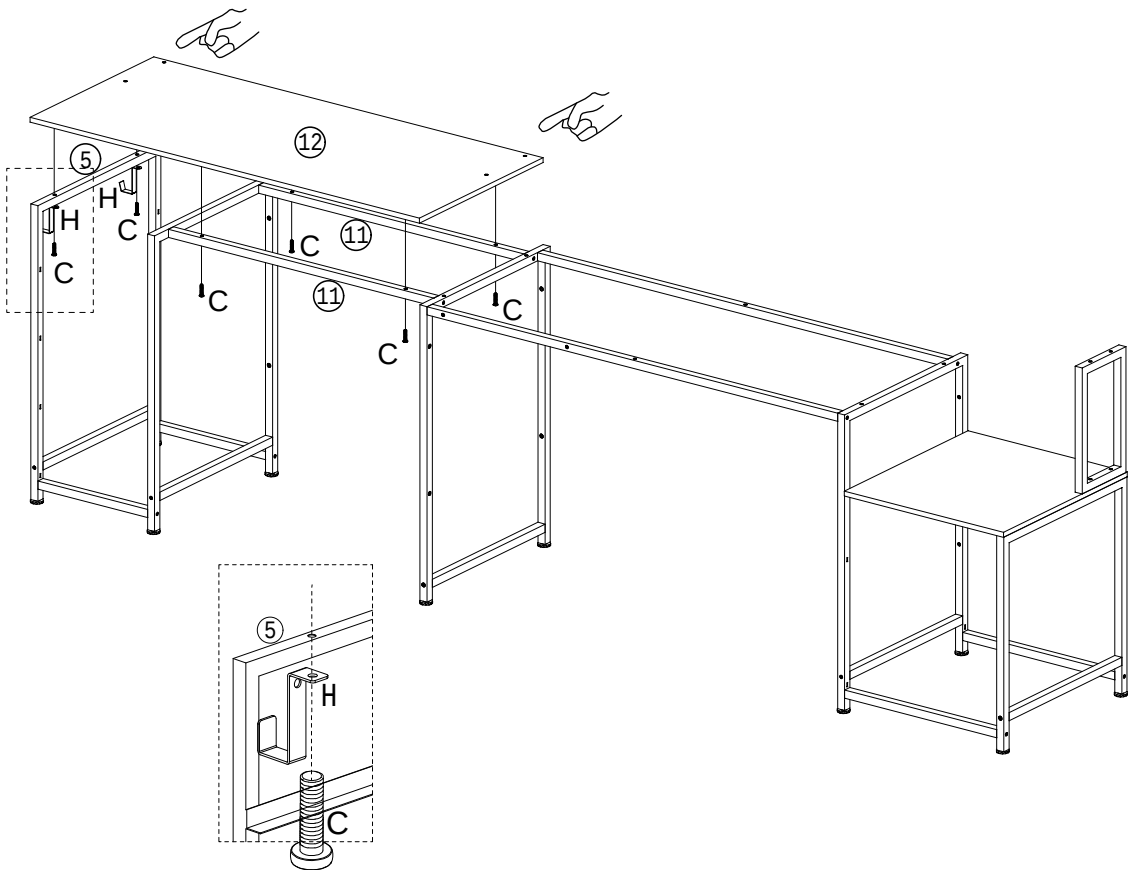

H	X2
	
C	X6
	
M6x28	

Step 9-2

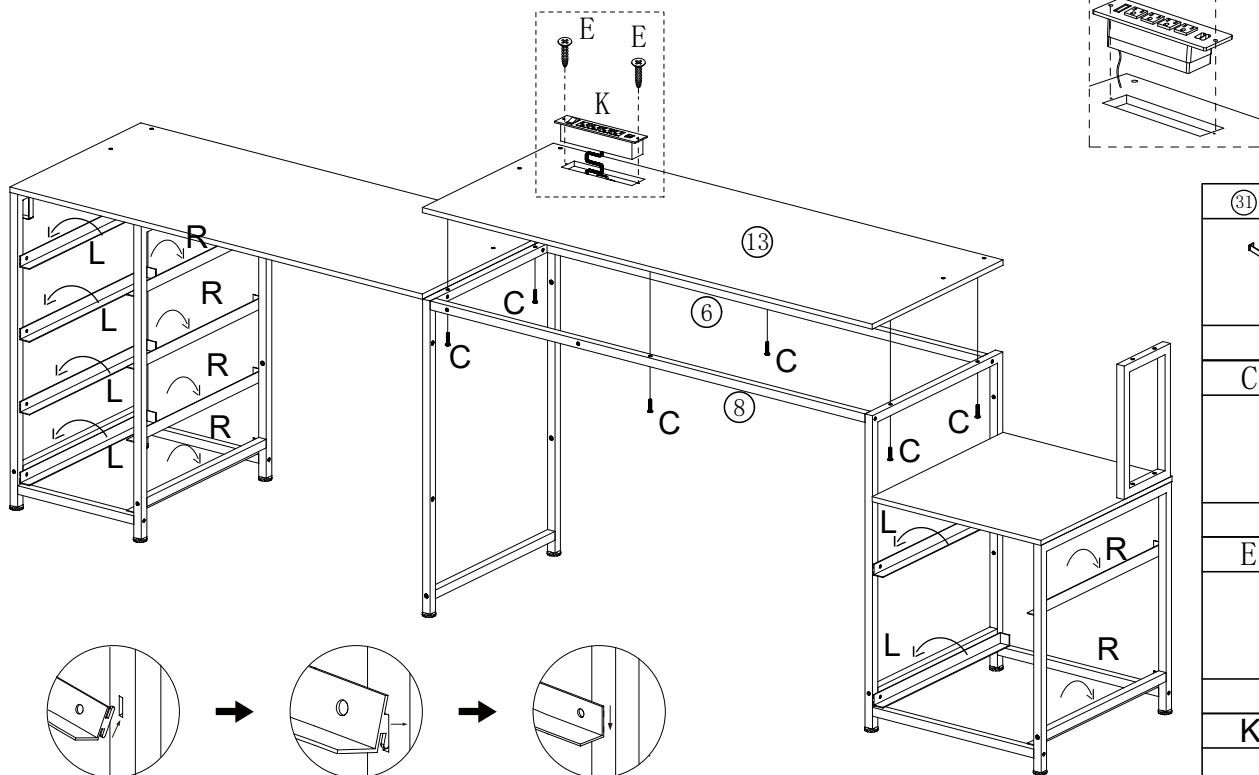


Insert the upper part
into the square hole.

Then insert the rest
part horizontally.

Press down the rail to
ensure proper installation.


(31)	X6
C	X6
M6x28	
E	X2
ST3.5X12	
K	X1

Step 10-2

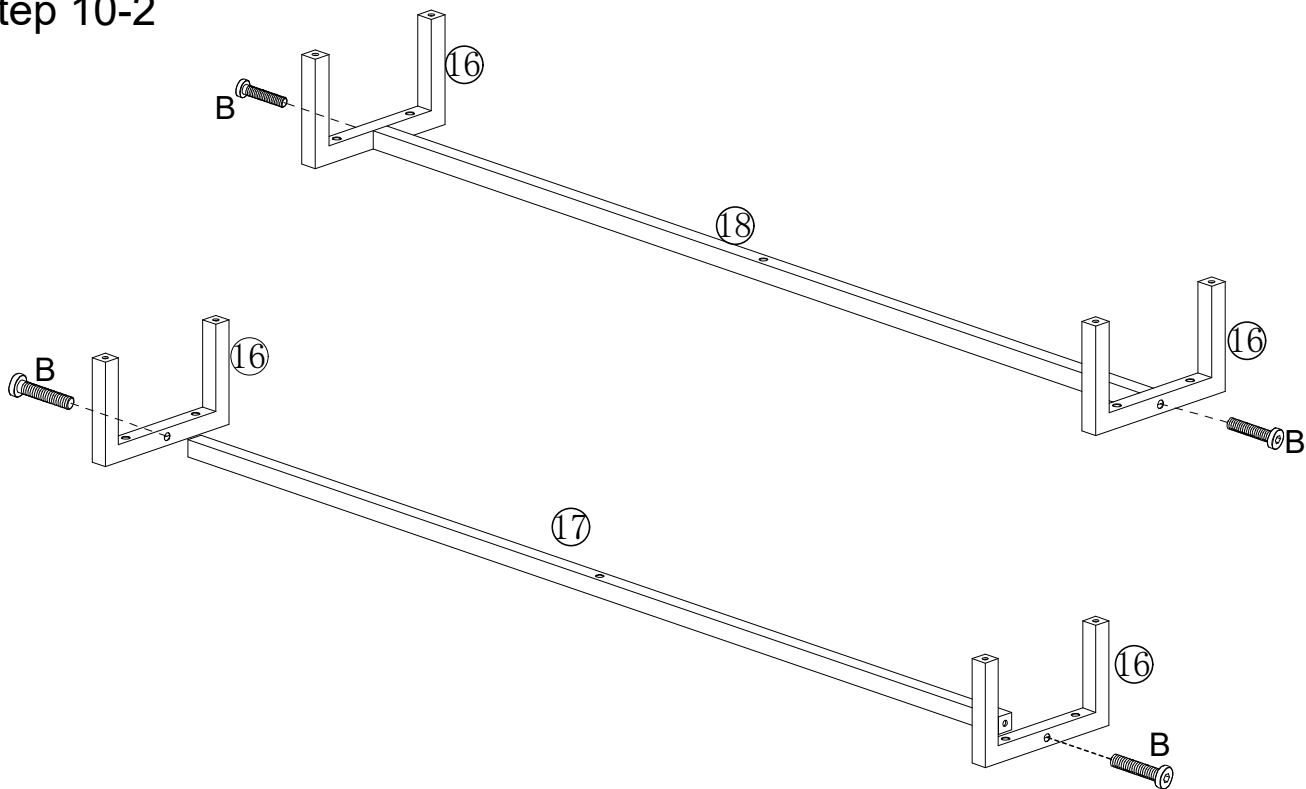


B	X4
M6x35	

Step 11-2

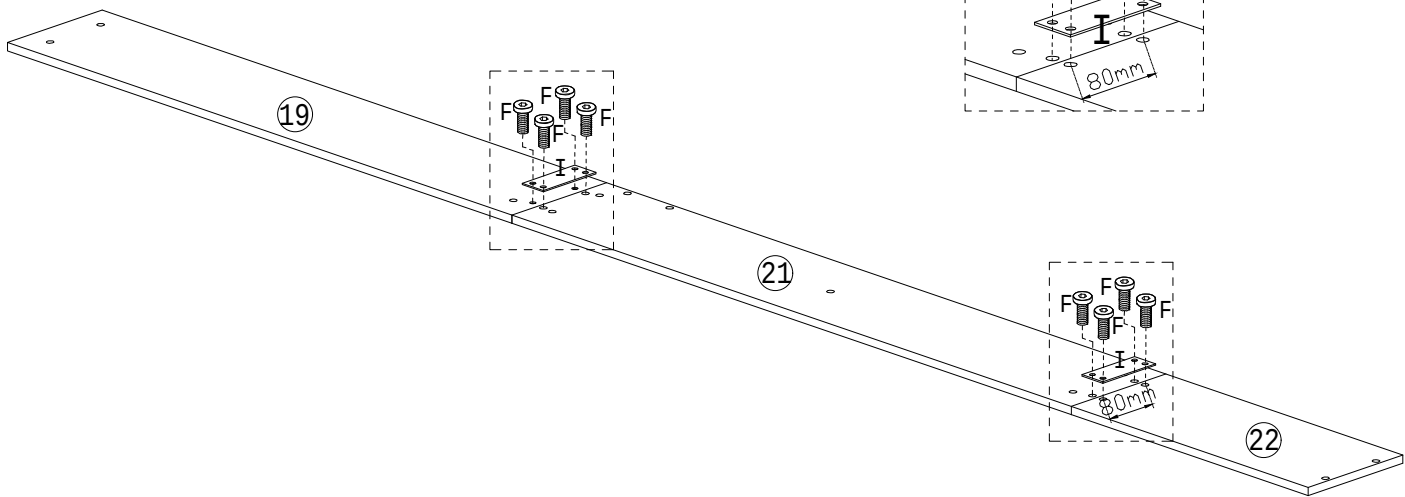


I	x2	F	x8
			
		M6x10	

Step 12-2

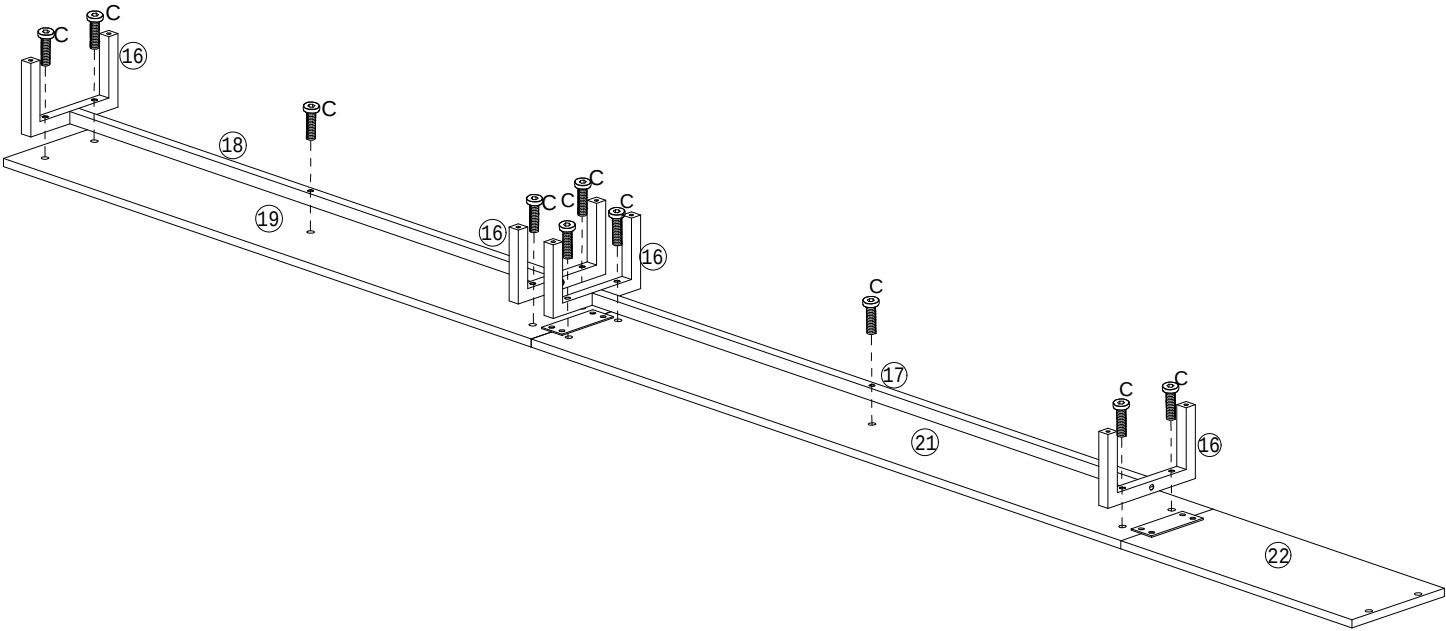


C	x10
	
M6x28	

Step 13-2

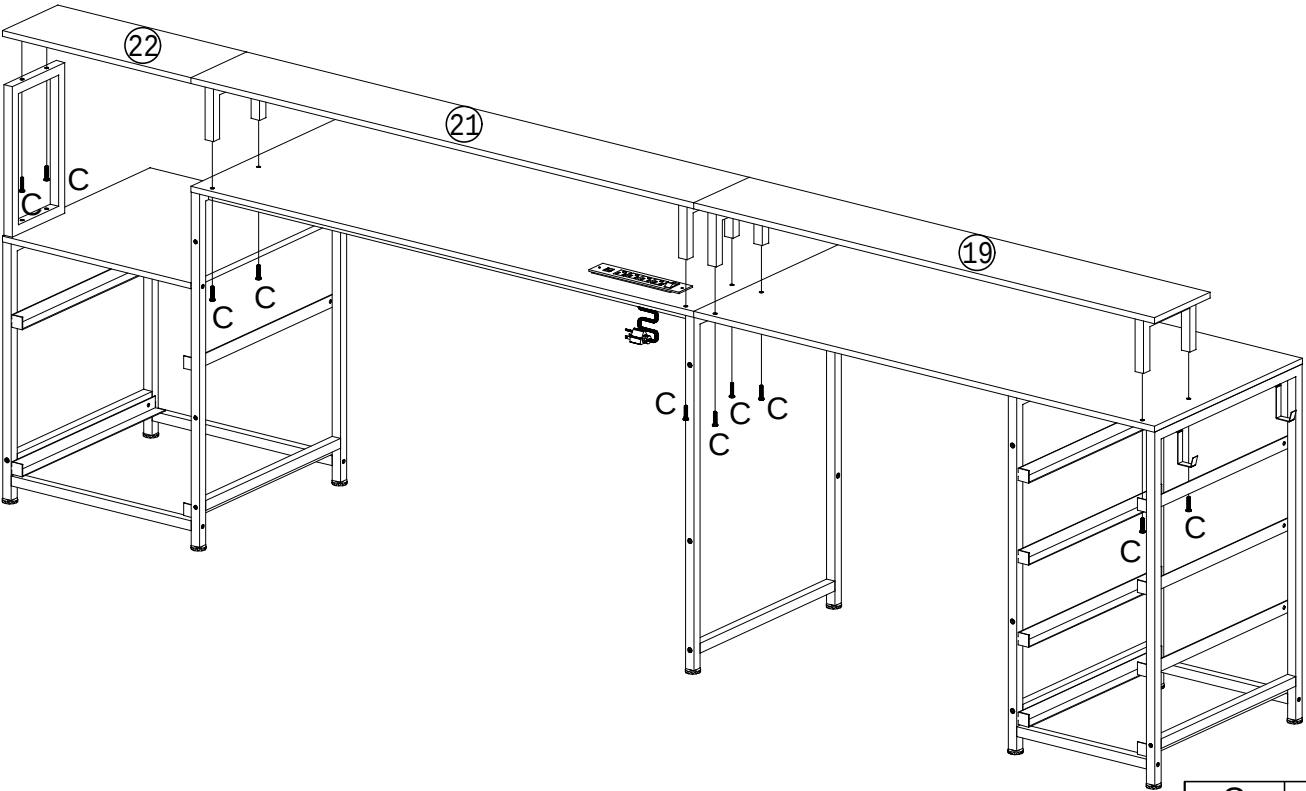


C	X10
	
M6x28	

Step 14-2

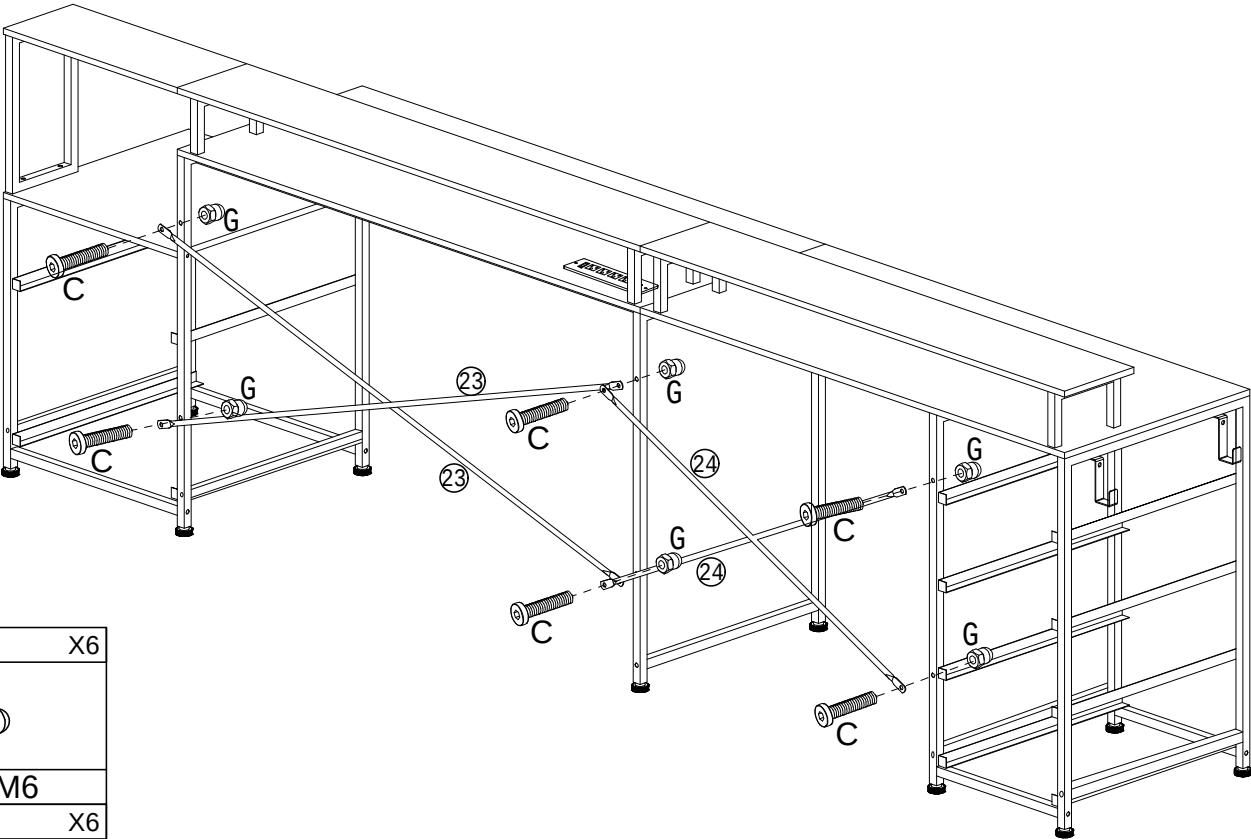


G	X6
	
M6	
C	X6
	
M6x28	

Step 15-2

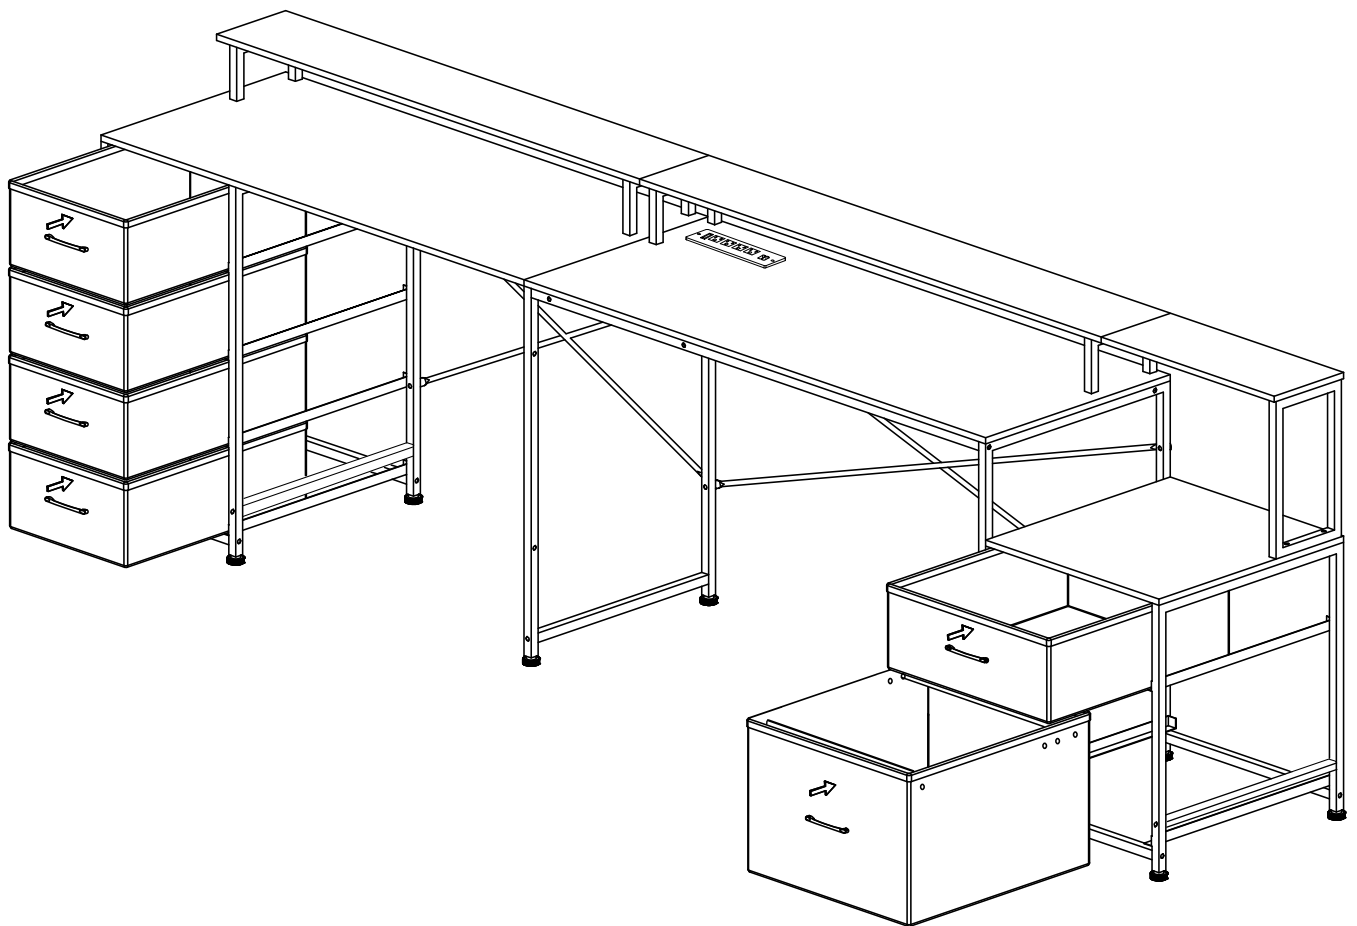

Step 16-2

Be careful to tear off the paper on the back of the light strip, Then press it firmly with your hand.

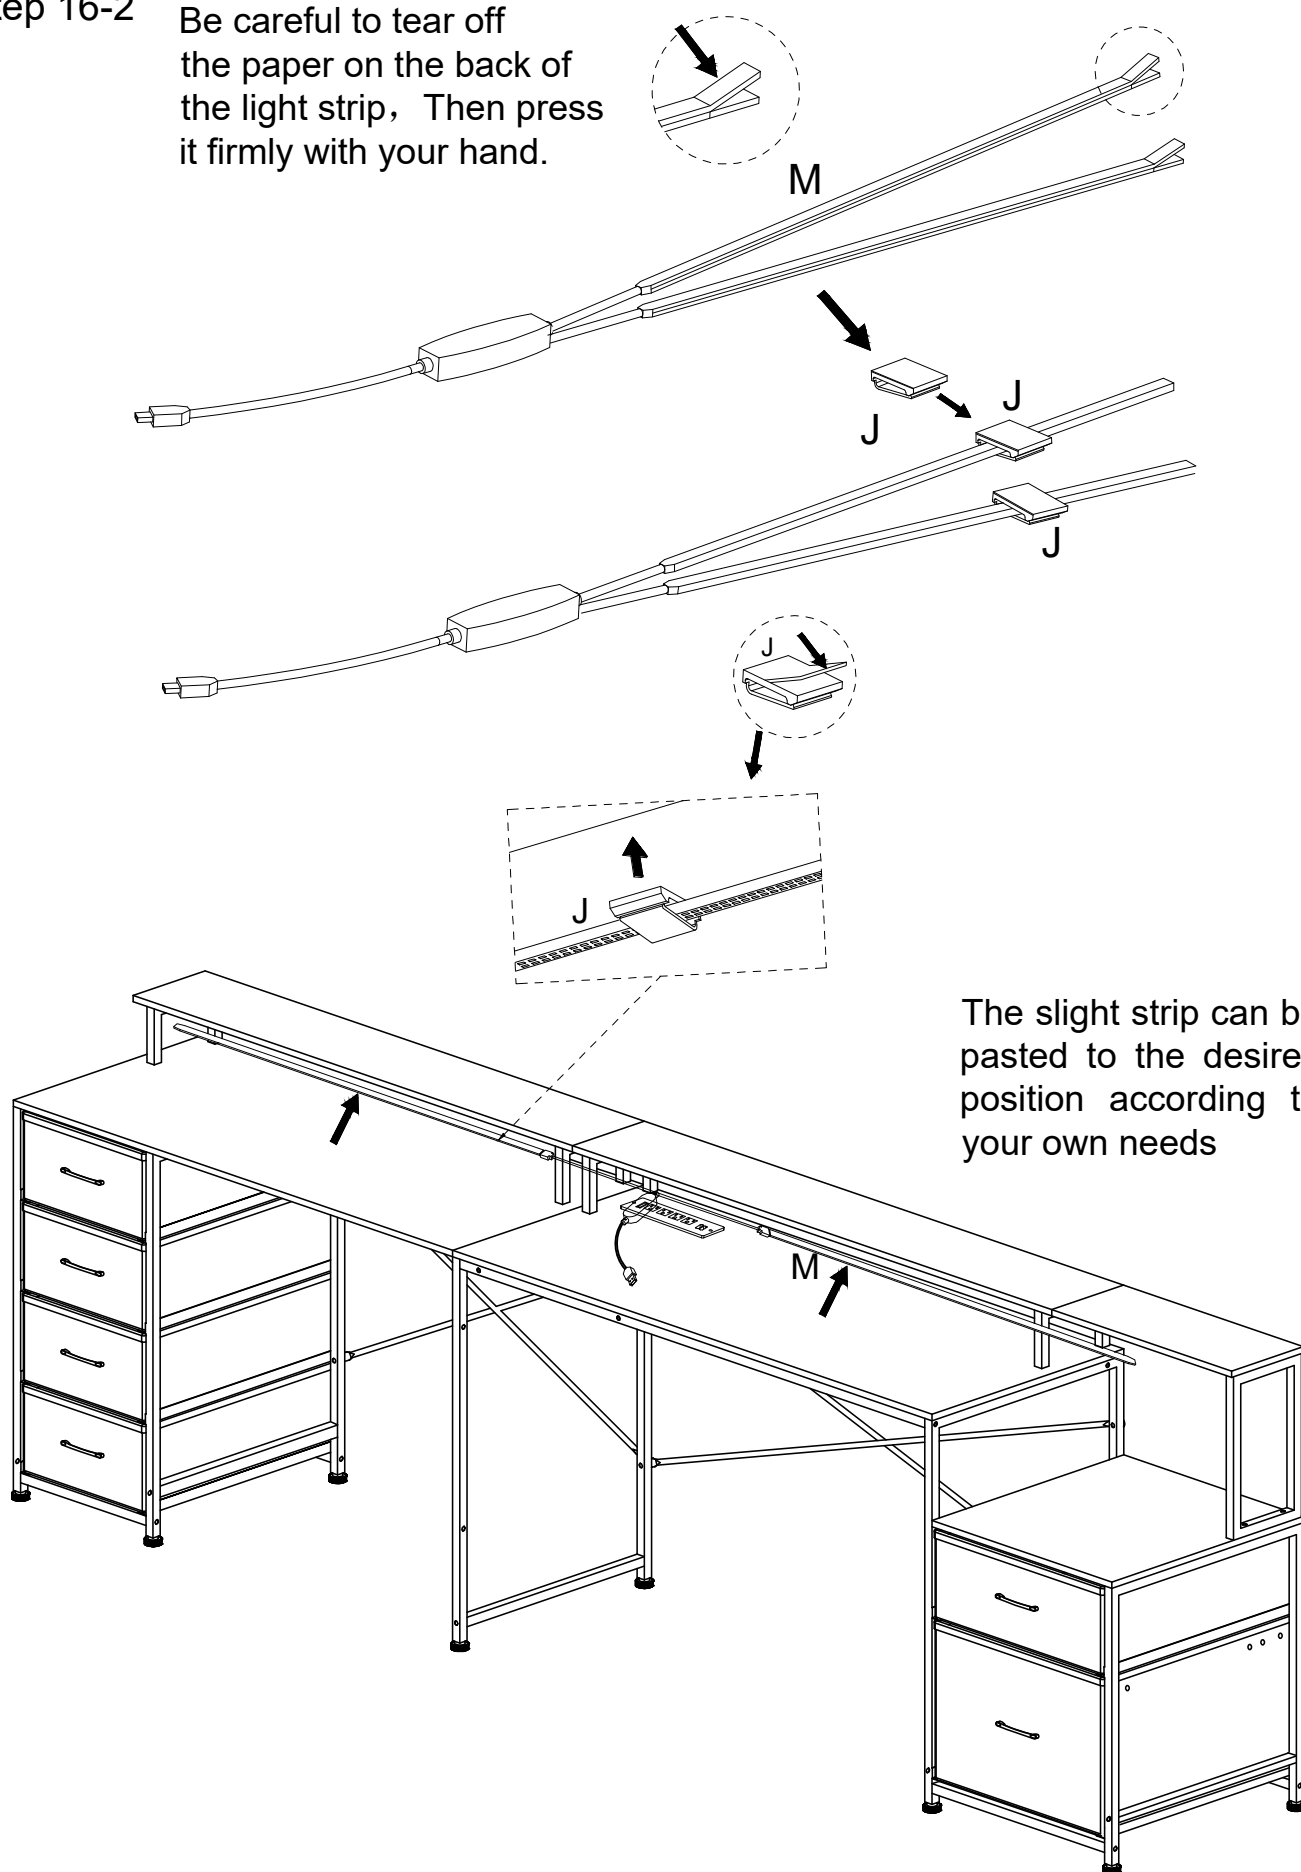

J	x8	M	x1
			