
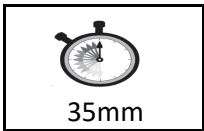


3 Drawer Desk/Dresser

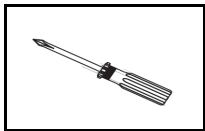

35mm

Thank you for choosing this furniture.
PLEASE RETAIN PACKAGING UNTIL YOU HAVE COMPLETED ASSEMBLY.
Information about your furniture.

Our furniture ranges have been carefully crafted from solid wood and natural wood veneers. Each piece of furniture has unique characteristics such as knots, variances and graining. These are part of the natural character of the furniture itself.

Caring for your furniture.
Extreme temperature can cause slight movements in the wood itself so please avoid placing your furniture close to radiators or other direct sources of heat. Humidity should also be avoided. Please avoid exposing your furniture to continued bright sunlight as it can affect the color. Any fluid should be removed as quickly as possible. Always lift your furniture when moving, as dragging can cause damage to your furniture or flooring. Extreme changes in temperature & humidity during transit may result in a powder residue forming so silica gel bags have been included to alleviate this natural occurrence. This residue is harmless and can easily be removed before assembly with a damp cloth and mild detergent.



After care.
Wipe the surfaces with a dry cloth and an occasional use of normal household polish. We also recommend you use household spray polish occasionally on the drawer grooves and runners as this will aid use. Please do not use detergents or chemicals on your furniture.

Before you start assembly.
Please check that you have all the correct parts and fittings as detailed above. In the unlikely event of a part being damaged or missing please mark the component or part on the diagrams above and email to us. Please provide the following information so that your request can be sent directly to you.
* Name * Address * Post Code * Telephone number * Batch number (to be found on the outer box)

Model without skirting board	
	 A = x38 Dowel
	 B = x28 40mm Screw
	 C = x64 25mm Screw
	 D = x20 Nail
	 E = x2 Large Screw
	 F= x3 Knob
or	
 H = x3 35mm Screw	 G = x3 Bolt



Model with skirting board (additional parts)	
	 B = x2 40mm Screw
	 N = x4 60mm Screw

**A = x14
Dowel**




**A = x24
Dowel**

This diagram shows an exploded perspective view of a cabinet assembly. The components are labeled with numbers in circles: 01 (top panel), 02 (right side panel), 03 (left side panel), 04 (top horizontal rail), 05 (middle horizontal rail), 06 (bottom horizontal rail), 07 (top vertical rail), 08 (middle vertical rail), 09 (bottom vertical rail), 10 (bottom horizontal rail), and 11 (bottom vertical rail). Dimension lines with arrows and the letter 'B' indicate the width of the side panels (02, 03) and the height of the vertical rails (07, 08, 09, 11). The assembly is shown in a disassembled state to illustrate the relationship between the parts.




5

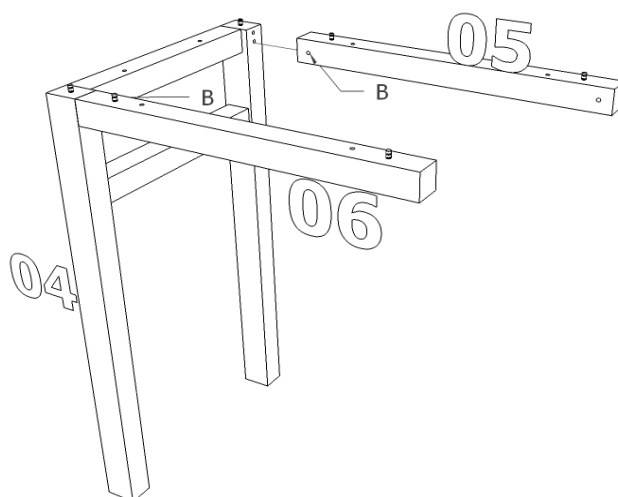

B = x2
40mm Screw


6

Note: drawer pedestal can be turned around allowing it to be positioned on the left or on the right of assembled desk/dressing table

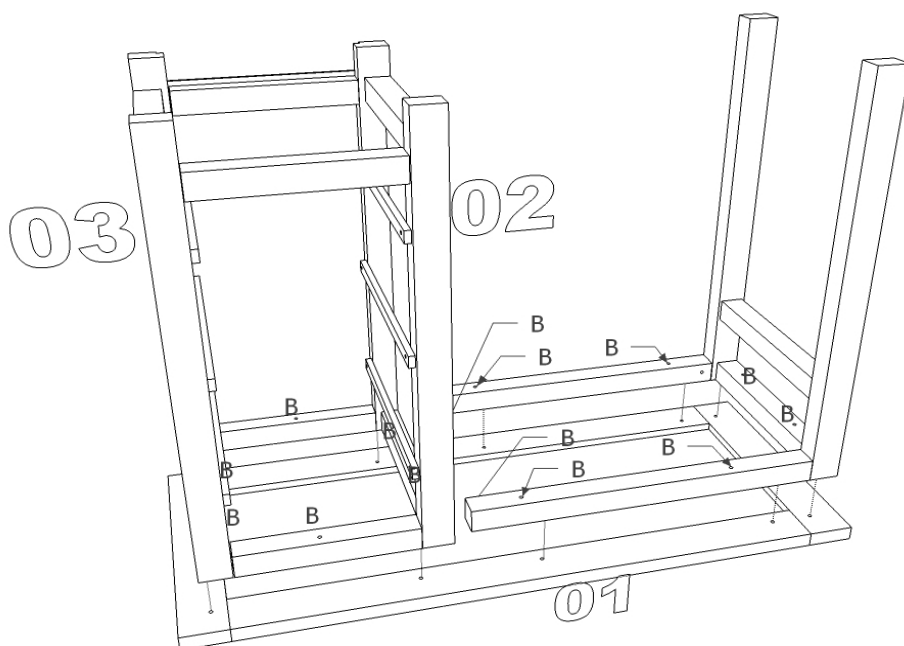

B = x14
40mm Screw

7

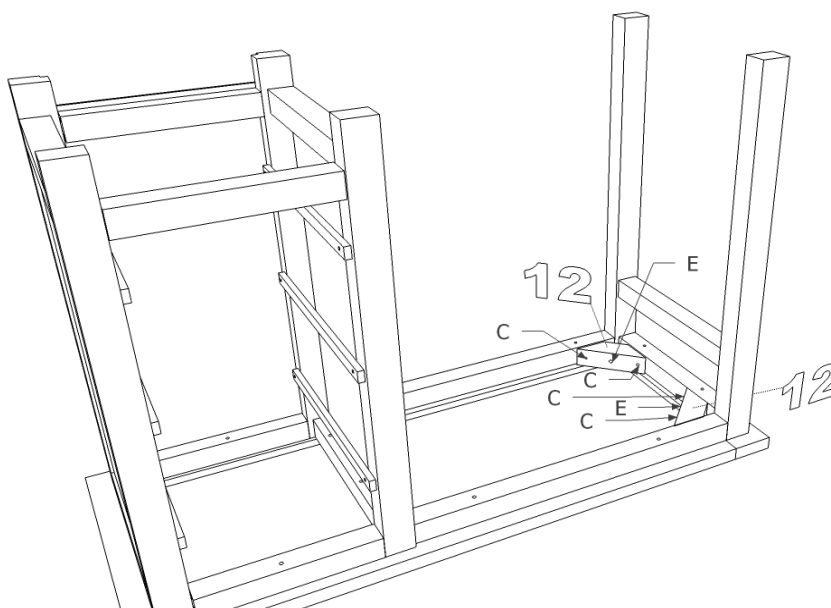

E = X2
Large Screw



C = x4
25mm Screw

8



H = x3
35mm Screw

or




G = x3
Bolt



F = x3
Knob



C = x48
25mm Screw

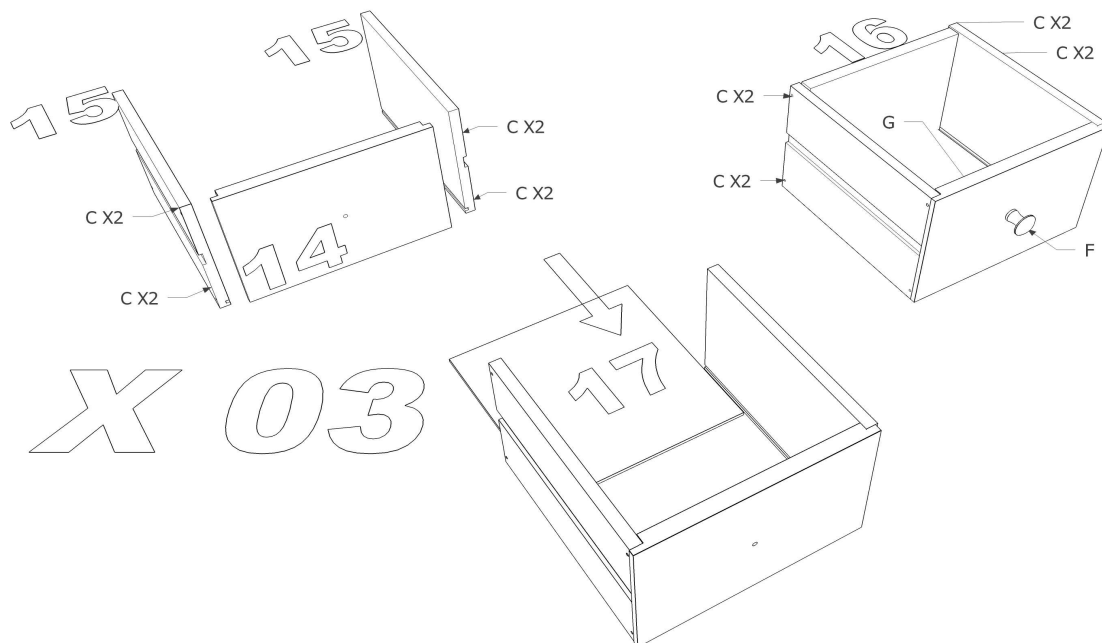

Extra step only applicable for model with a skirting board

9



B = x2
40mm Screw



N = x4
60mm Screw

