

ASSEMBLY INSTRUCTION

FARMHOUSE TABLE


IMPORTANT NOTE :

BEFORE YOU BEGIN, PLEASE READ AND FOLLOW THE ASSEMBLY INSTRUCTIONS CAREFULLY.

- IDENTIFY AND SEPARATE ALL PARTS BEFORE DISCARDING PACKAGING.
- PLACE WOODEN PARTS ON A CLEAN SOFT SURFACE TO AVOID SCRATCHING THE PARTS.
- DO NOT USE POWER TOOL FOR ASSEMBLY.
- AS WITH ALL FURNITURE , OCCASIONALLY CHECK TO INSURE HARDWARE IS TIGHT.


PARTS & HARDWARE LIST

NO	DESCRIPTION	QTY	
A	TABLE TOP	1 PC	BOX A
B	EXT. LEAF	1 PC	BOX B
C	BASE	1 PC	BOX C
D	EMPIRE LEG	4 PCS	BOX B
E	HEX NUT	12 PCS	BOX A
F	SPRING WASHER	12 PCS	
G	FLAT WASHER	12 PCS	
H	WRENCH	1 PC	
I	ADJUSTABLE	4 PCS	

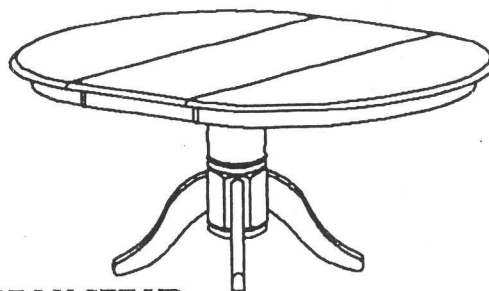


FULLY SET UP


STEP 1

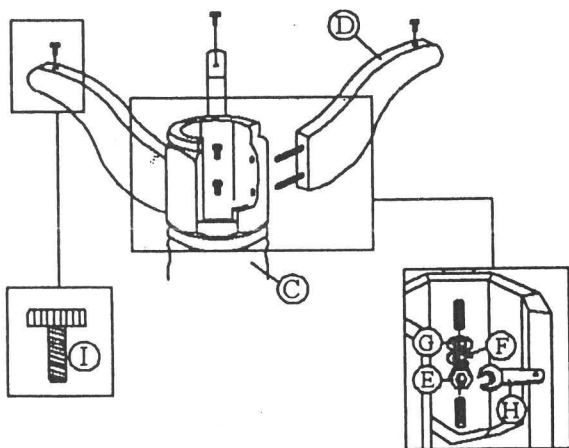


STEP 2

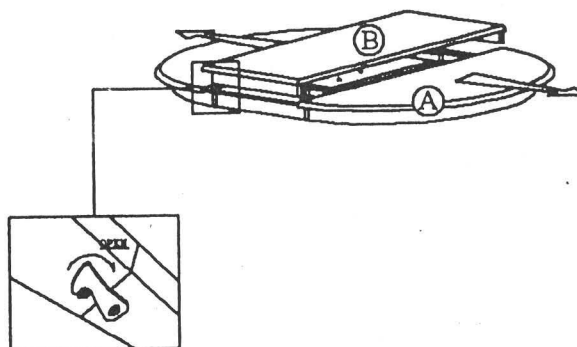

STEP 3

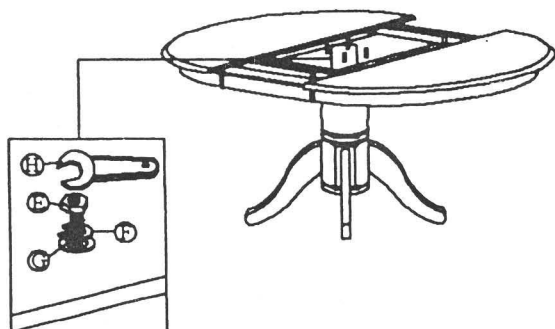

STEP 4

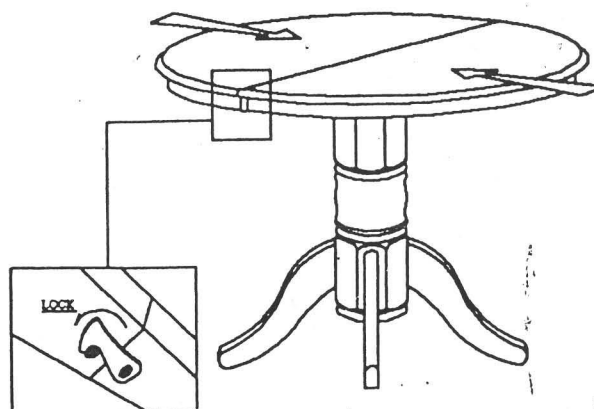

MADE IN MALAYSIA

MODEL : 18" LADDER BACK CHAIR **ASSEMBLY INSTRUCTION**

Dear Customer,




Thank you for purchasing our furniture products.

Read the instruction carefully. See hardware and furniture part list for guidance. Be sure all part is complete before assembly. Place all wooden parts on a clean and flat surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS!!!


1. DO NOT FULLY TIGHTEN THE NUT OR BOLTS UNTILL ALL THE NUTS OR BOLTS IS READY ASSEMBLED
2. DO NOT OVER TIGHTEN THE NUT OR BOLTS TO AVOID CAUSING DAMAGES TO THE THREAD.

NO	PARTS LIST	QTY
1	CHAIR BACK	1PC
2	SIDE RAIL (L/R)	2PCS
3	STRETCHER	2PCS
4	FRONT LEG	1PC
5	RUSH SEAT	1PC


NO	HARDWARE LIST	QTY
A	 JCBC BOLT M6 X 50MM	8PCS
B	 CSK SCREW M4 X 38MM	7PCS
C	 SPRING WASHER	8PCS
D	 M4 ALLEN KEY W/BALL	1PC

NOTE : THE LIST QUANTITY SHOW ABOVE IS FOR 1 UNIT ASSEMBLY.


STEP 1

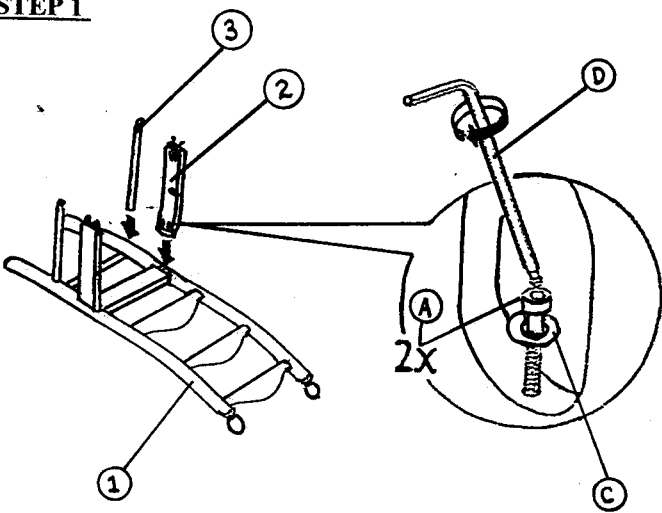


STEP 2

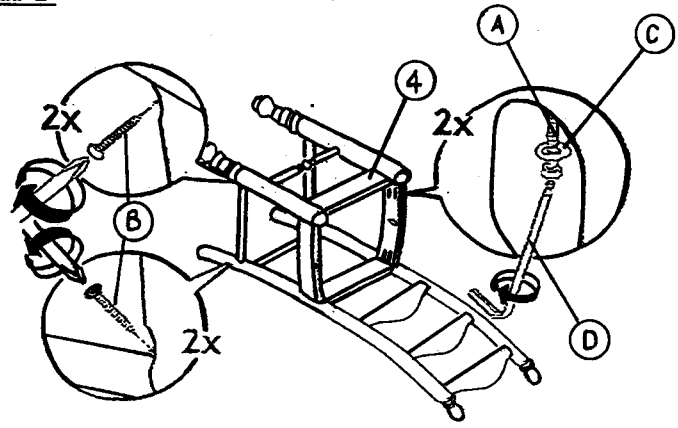

STEP 3

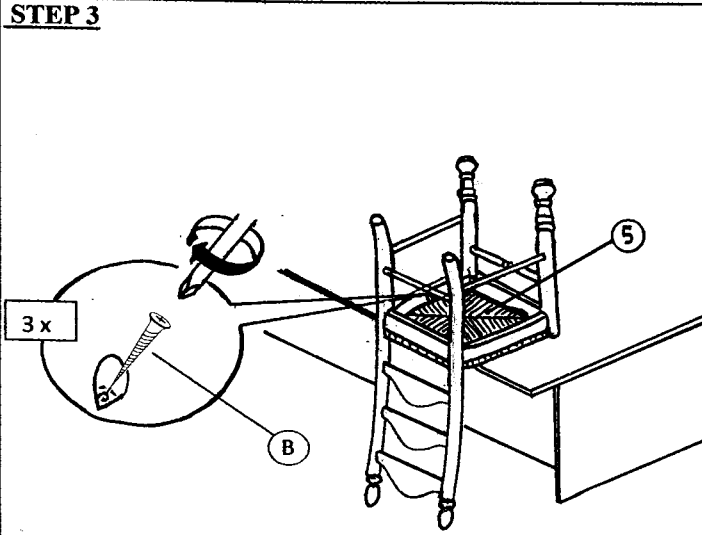

STEP 4

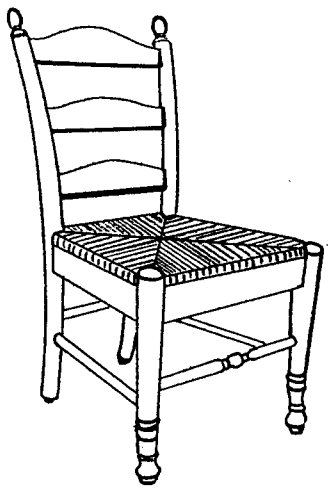

FULLY ASSEMBLY

NOTE : " AFTER A FEW DAYS OF INITIAL ASSEMBLY AND CHAIR HAVE ACCLIMATED TO NEW ENVIRONMENT, RETIGHTEN ALL HARDWARE "