
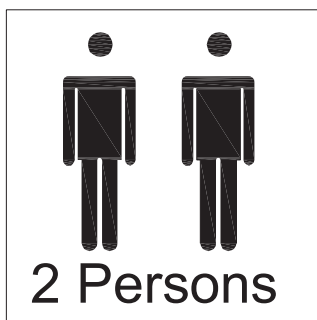



Installation

Product Manual

SKU: DS07-002-MT

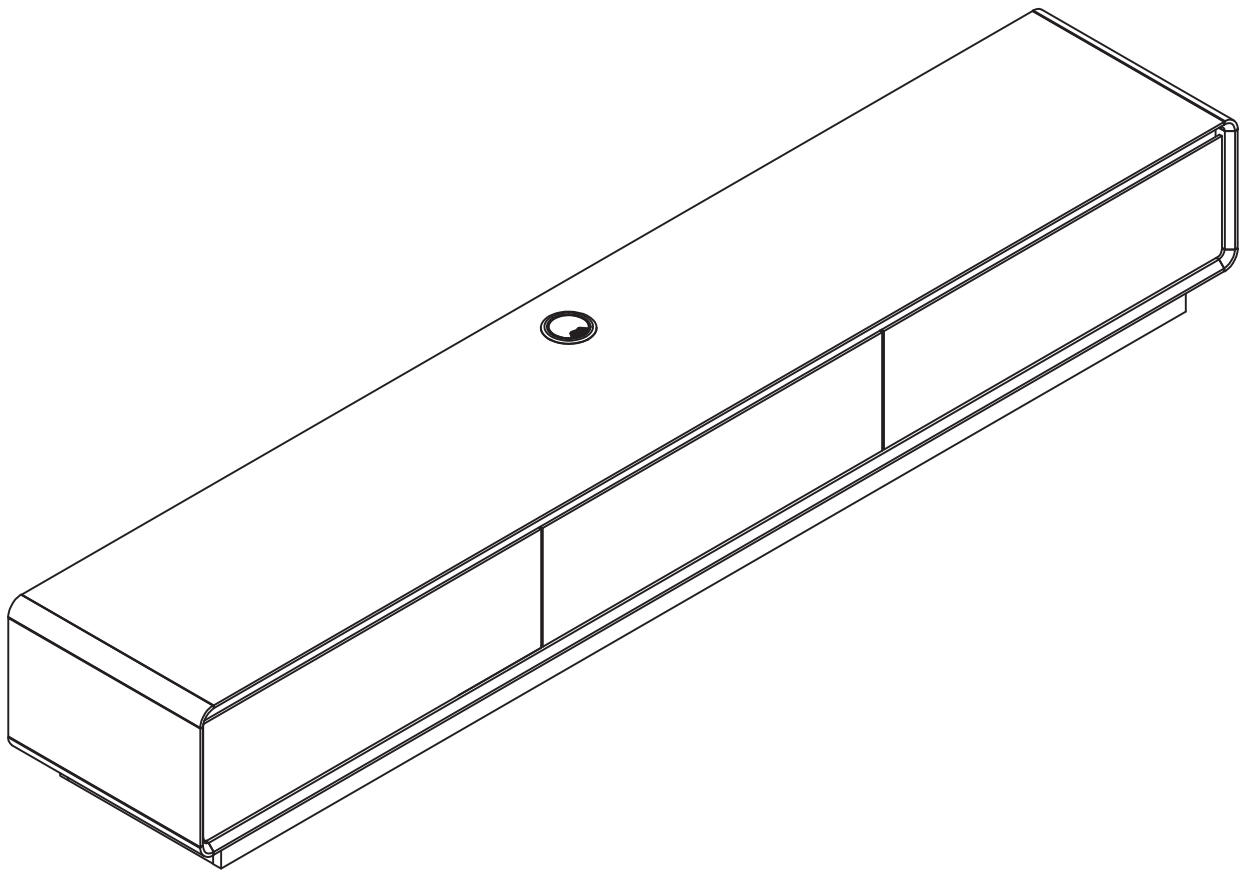

Tools



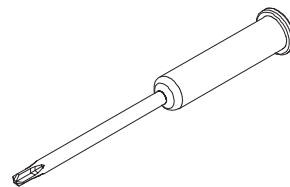





Cross Screwdriver



If you have any questions or concerns, please contact us:
Kevencindyyy@outlook.com

Hardware List

Tip: To avoid installation issues caused by missing parts, some spare parts are provided as backup

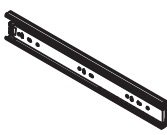
A	82 PCS	B	82 PCS	C	26 PCS	D	6 PCS
							
15*11mm		6*25mm		8*30mm		12"	

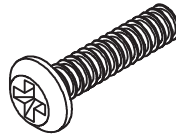E	24 PCS	F	36 PCS	G	36 PCS	H	13 PCS
							
M4*14mm		9*9mm		M5*50mm		M6*25mm	

I	8 PCS	J	4 PCS	K	8 PCS	L	1 PCS
							
8*38mm		M4*30mm		M4*50mm		60mm	

M	Spare Parts		
A*4	B*4	C*2	E*6
F*3	G*2	H*1	I*1
J*1	K*1		

Accessory D is not in the accessory bag but in the package due to its size

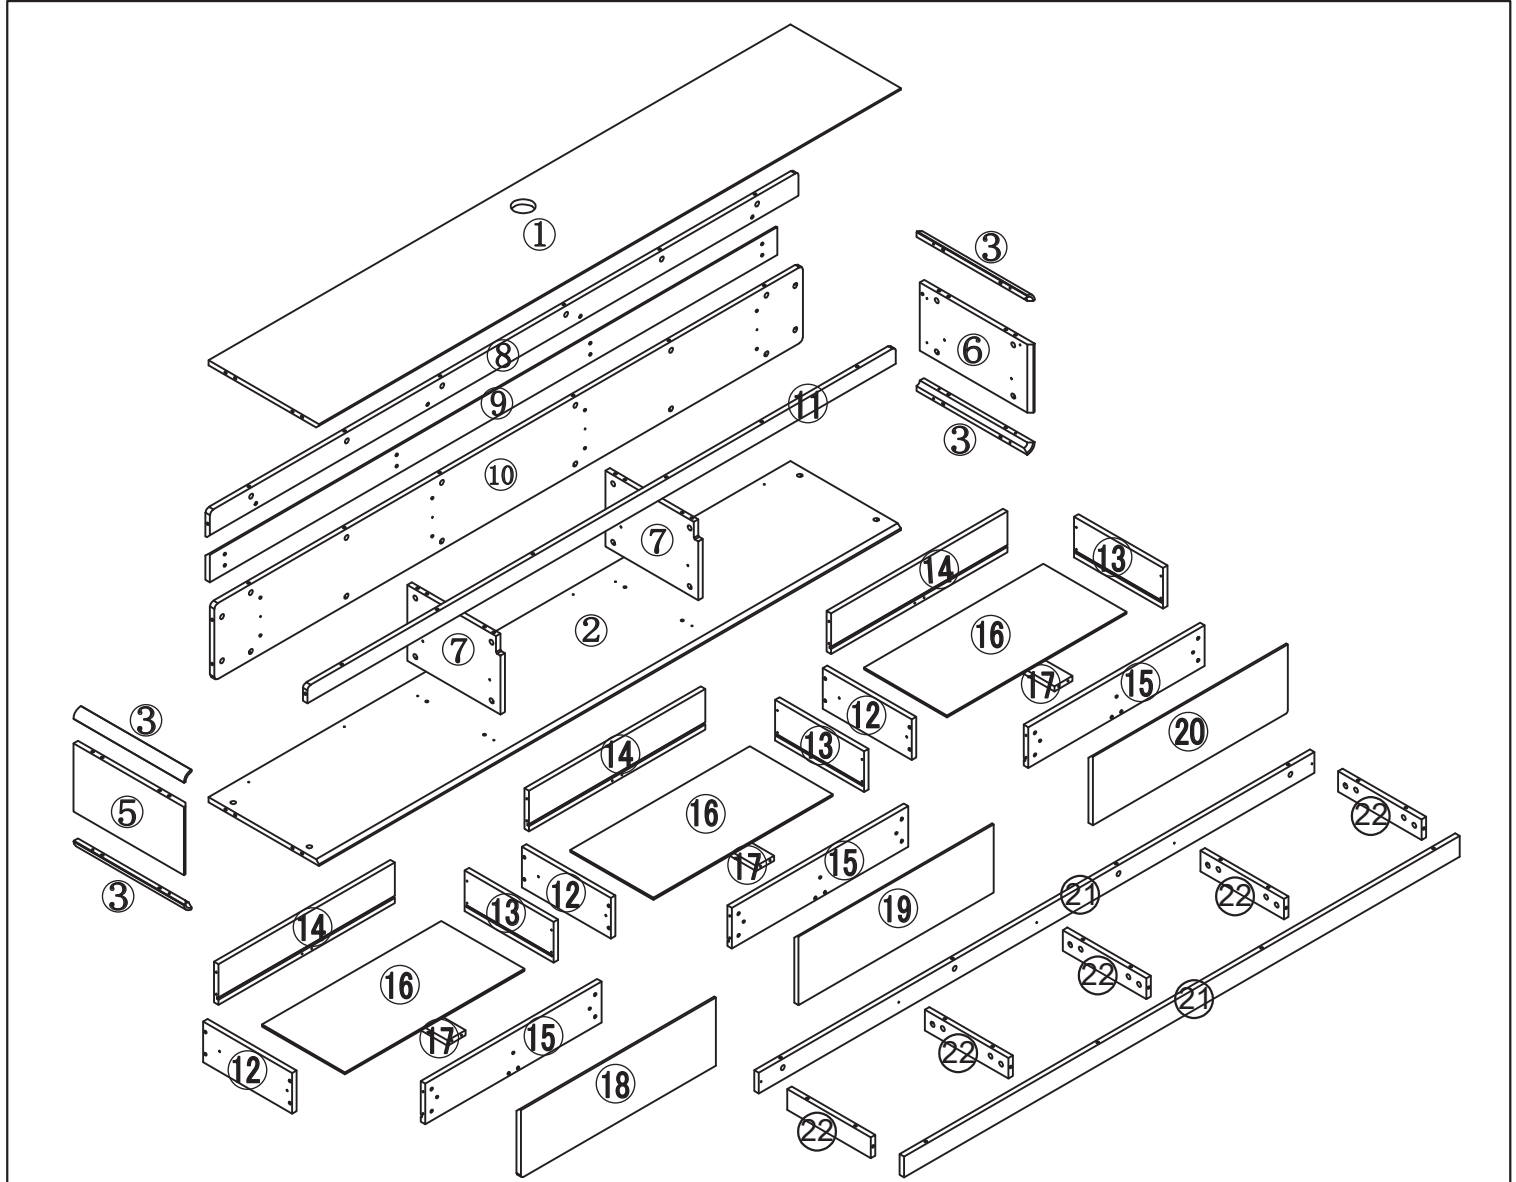

1 1 PC	2 1 PC	3 4 PCS	5 1 PC	6 1 PC
7 2 PCS	8 1 PC	9 1 PC	10 1 PC	11 1 PC
12 3 PCS	13 3 PCS	14 3 PCS	15 3 PCS	16 3 PCS
17 3 PCS	18 1 PC	19 1 PC	20 1 PC	21 2 PCS
22 5 PCS				

Matters Need Attention

If you have any questions or concerns, please contact us:
Kevencindyyy@outlook.com

During Installation


1. Do not discard packing material until assembly is complete, as small parts may loosen inside the carton during shipping. If there is a missing part, please contact our after-sales team.
2. Please assemble this item on soft surfaces such as carpets to protect the finish.
3. Pay attention to stability when assembling to avoid falling or scratching.

Cleaning and Maintenance

1. To protect the finish, avoid chemicals and household cleaners.
2. Keep away from the heat source to prolong the service life.
3. Wipe off any remaining liquid on the surface with a damp cloth.

Main Frame Assembly(STEP 1- STEP 18)

STEP 1 Split all 6 accessories D into D1 and D2 as shown. They will be installed separately in later steps

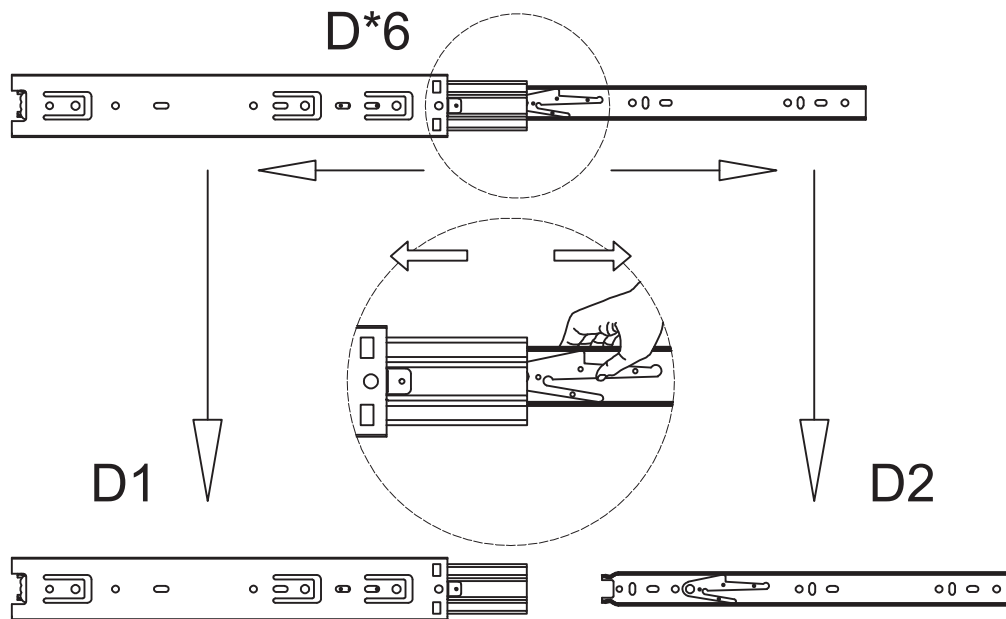

D	6 PCS
	
12"	

STEP 2 Install accessories D1 on both sides of board 7

Note: There is a plastic damper here

Back

D1

E

D1

E

7

E

D1

E

7

Rotate 180

E

E

D1

Tip: D1 hole installation diagram

Tip: Two Board 7s are required

E

E


D1

Tip: D1 hole installation diagram

D	4 PCS	E	8 PCS
			
12"		M3.5*14	

STEP 3


Attach accessories B and C to board 2

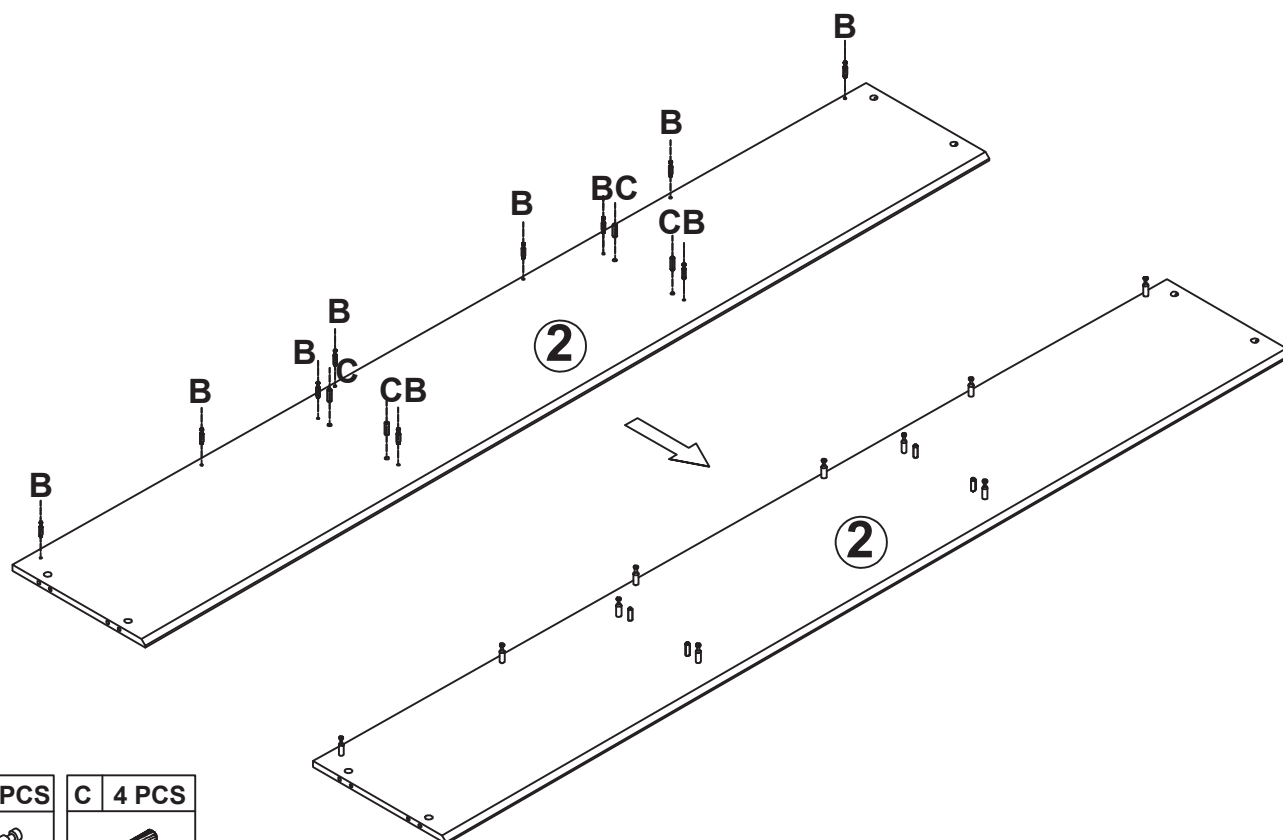

B 10 PCS	C 4 PCS
	
6*25mm	8*30mm


STEP 4

Install board 7 onto board 2 and secure with accessory A

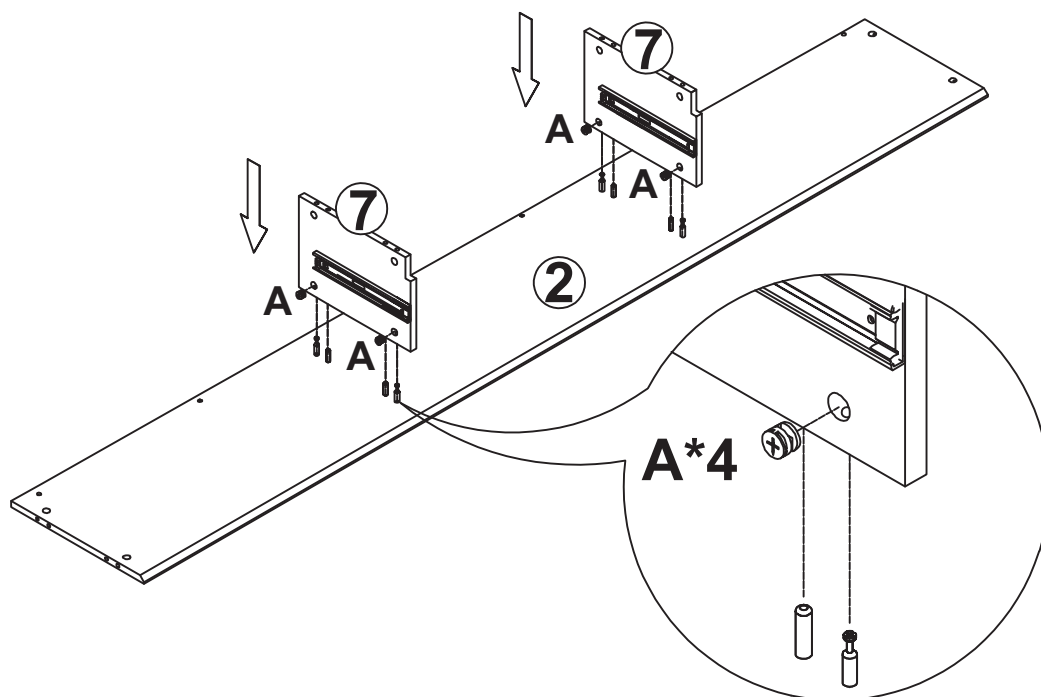


A 4 PCS

15*12mm

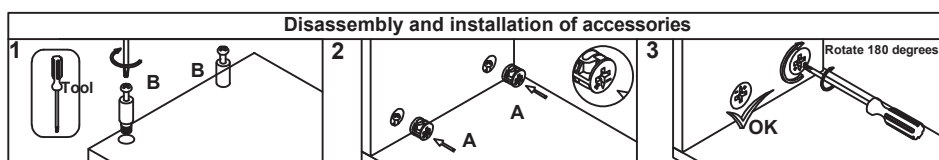


STEP 5

Install board 10 onto board 2 and secure with accessory A

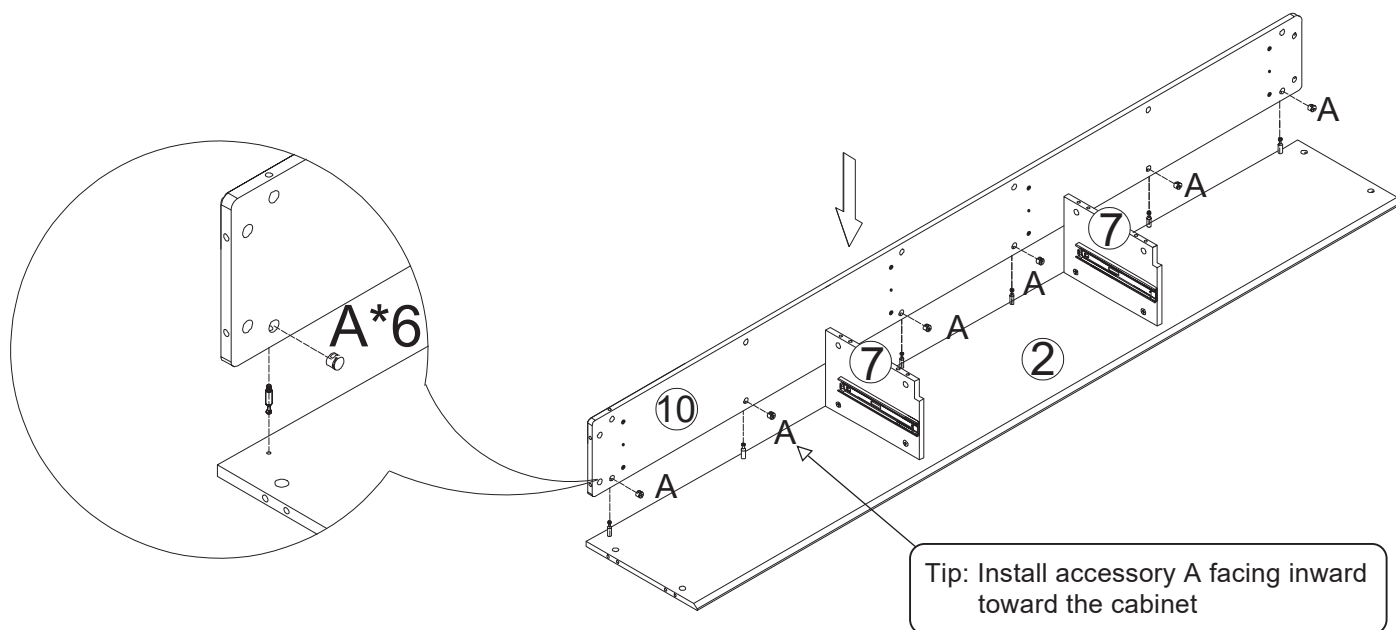


A	6 PCS
	
15*12mm	

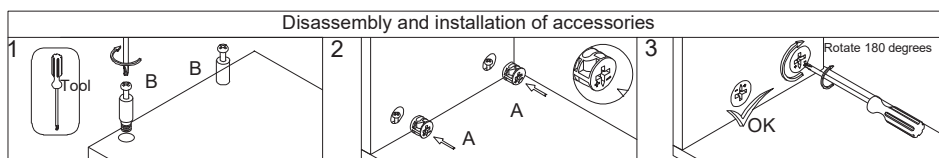

STEP 6


Attach accessories C to board 7

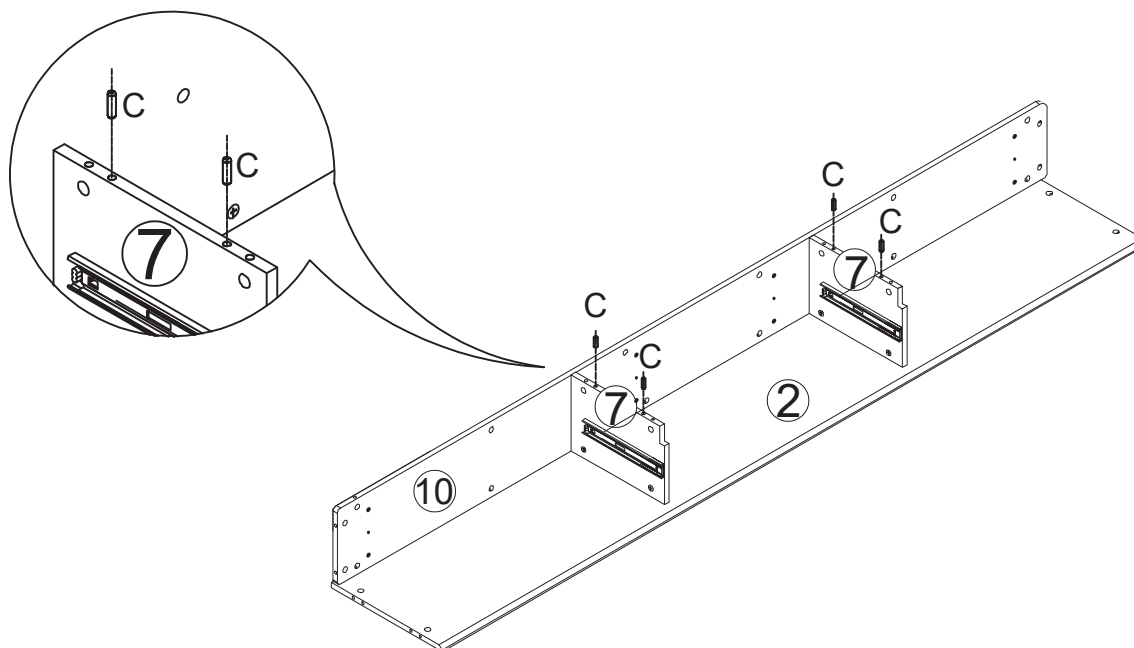

C	4 PCS
	
8*30mm	

STEP 7


Attach accessories B to board 1

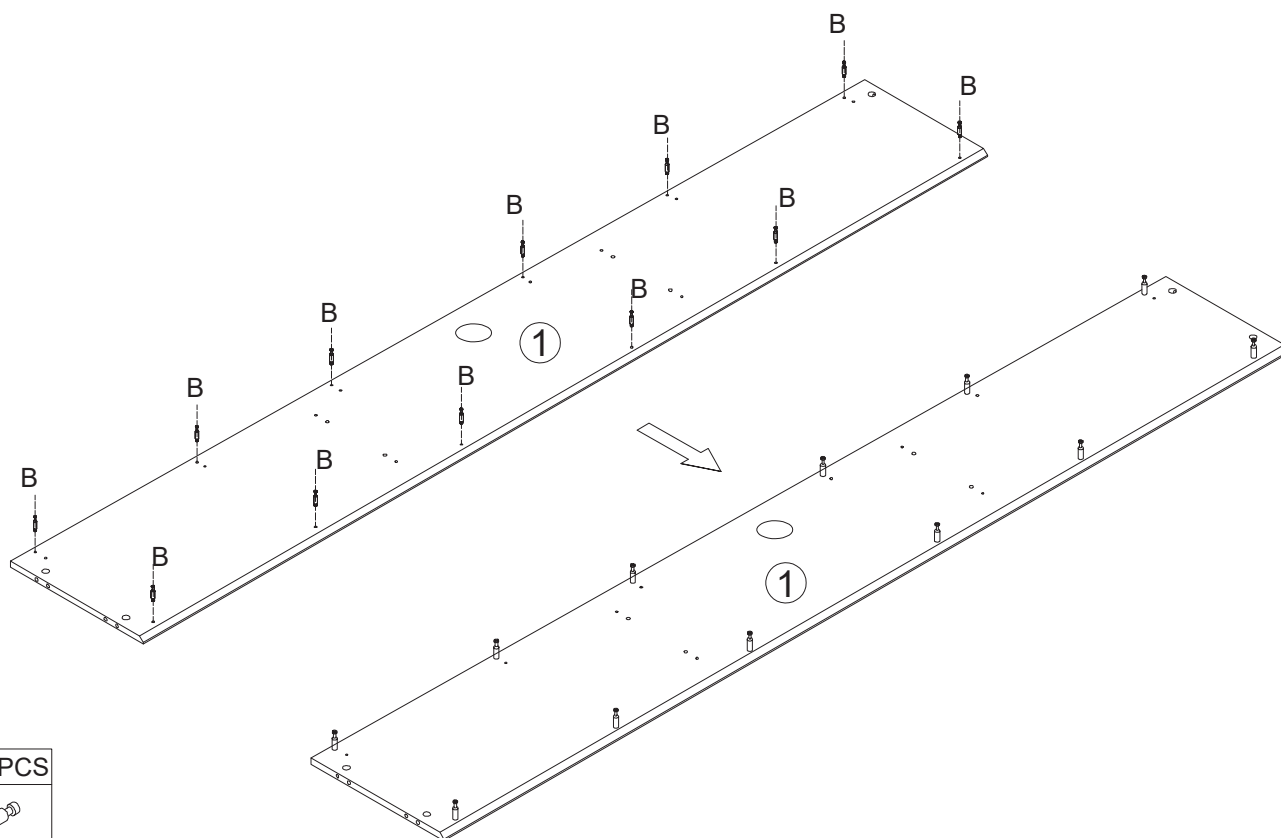

B	12 PCS
	
6*25mm	

STEP 8 Install boards 8 and 11 onto board 1, and secure with accessory A. Attach accessory C to both sides of board 8

Note: Board 8 has a beveled edge, which should face Board 11 during assembly. Incorrect orientation will affect the wall mounting of the TV stand

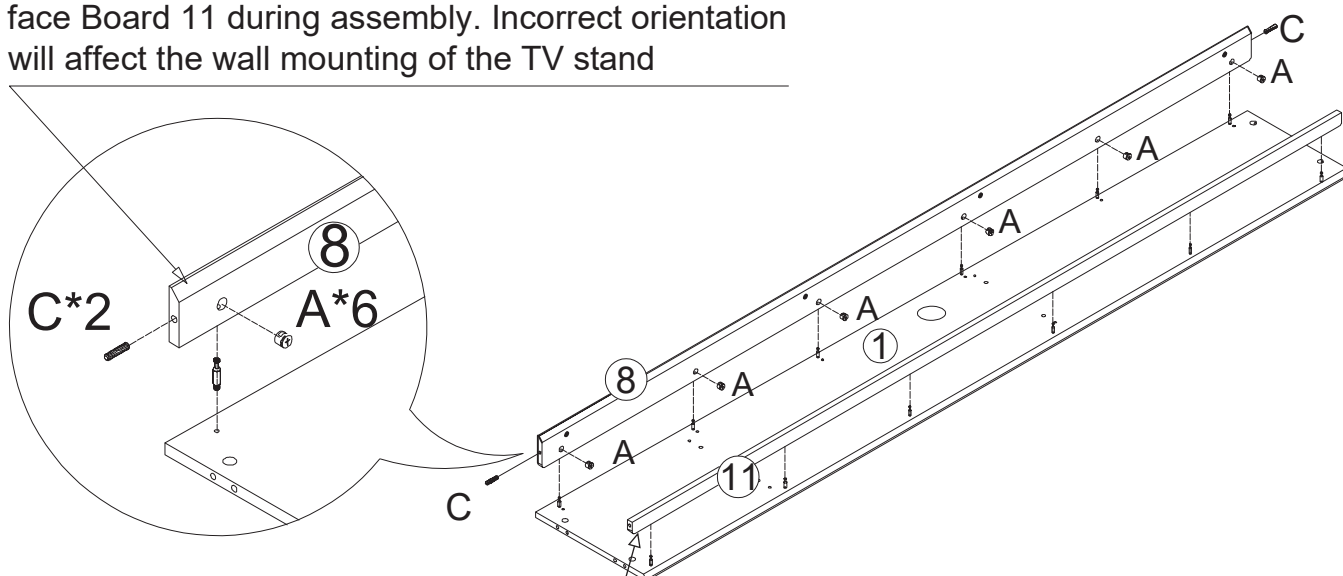


A	12 PCS	C	2 PCS
			
15*12mm		8*30mm	

Tip: Install the Accessory A on Board 11 facing toward Board 8

STEP 9

Attach accessories B to board 1

Note: For safer and smoother assembly, please do not attach accessories C to board 1 at this step

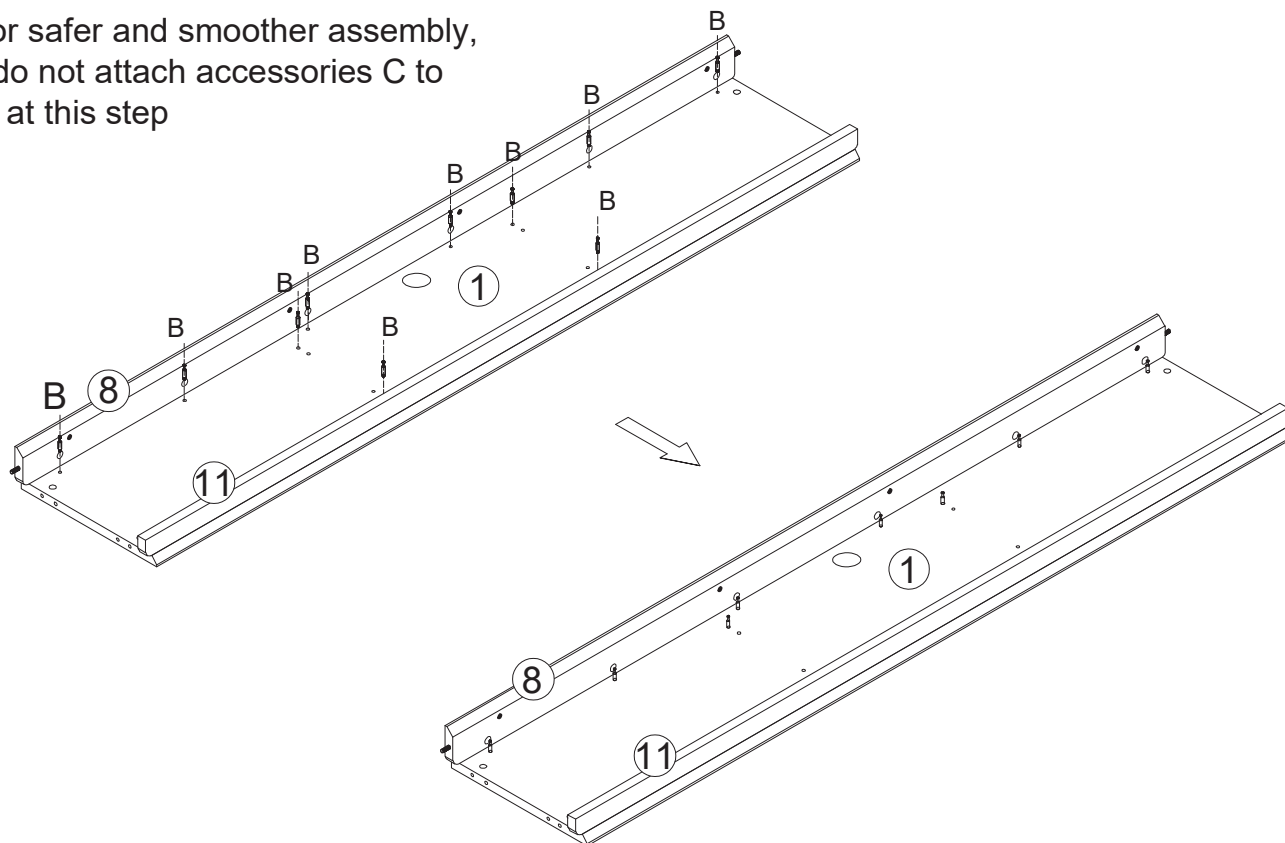

B 10 PCS




6*25mm

STEP 10

Install boards 1, 8, and 11 onto boards 7 and 10. Secure with accessory A

Important Tip: Align all accessories with the holes on the cabinet side panels first, then gently install. Do not force installation, as improper alignment or forcing may damage the panels. Please follow the instructions carefully.

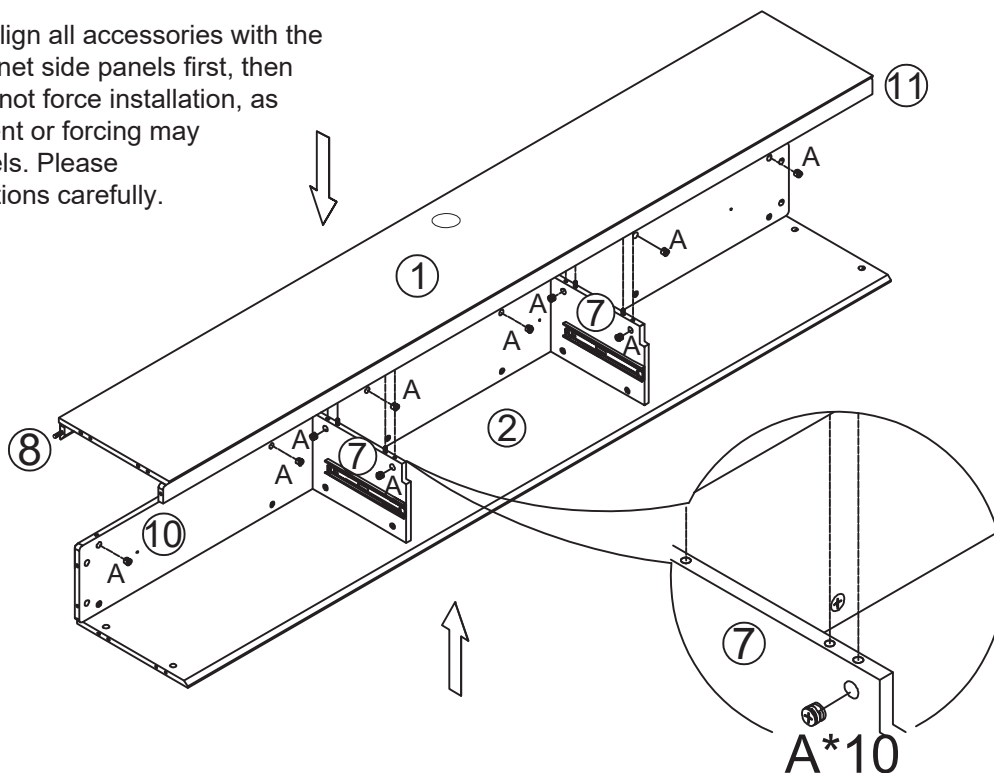


A 10 PCS




15*12mm

Disassembly and installation of accessories

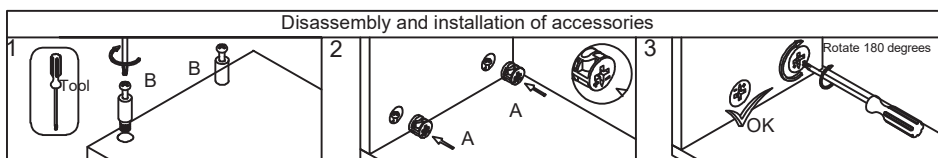

STEP 11


Attach accessory L to board 1, then attach accessory H to board 10 for reinforcement

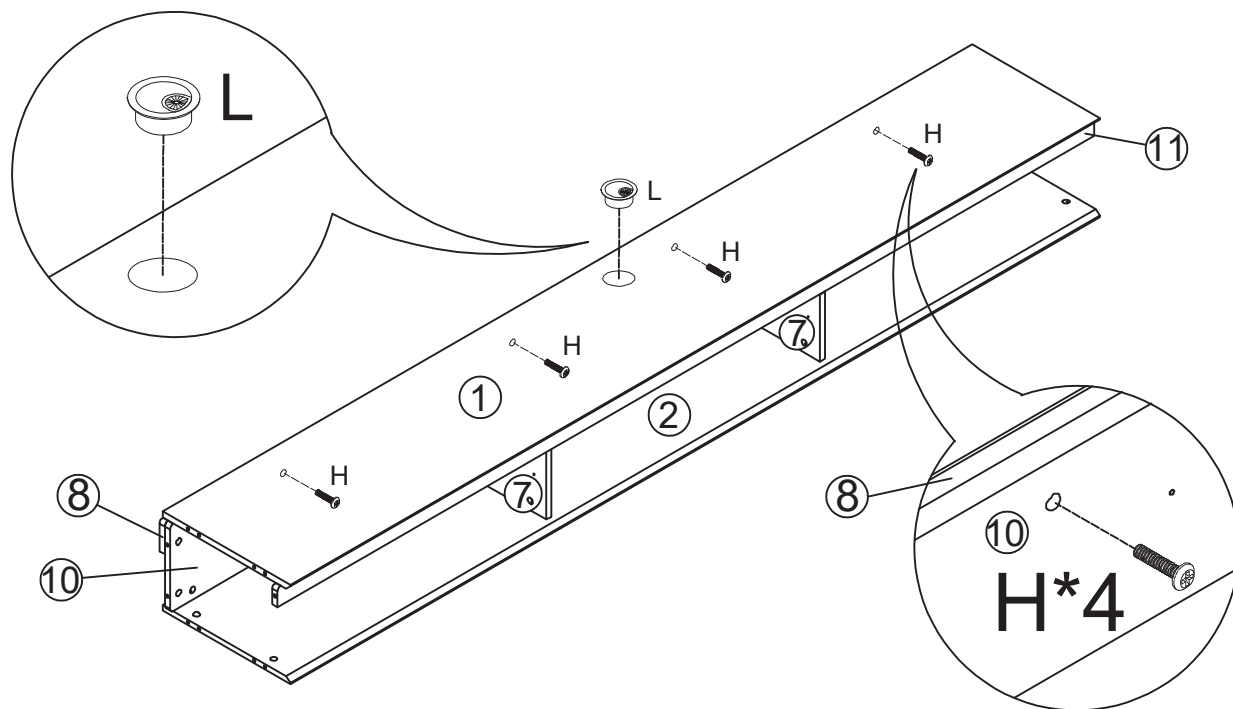

H 4 PCS	L 1 PC
	
M6*25mm	60mm

STEP 12

Attach accessories B to board 3

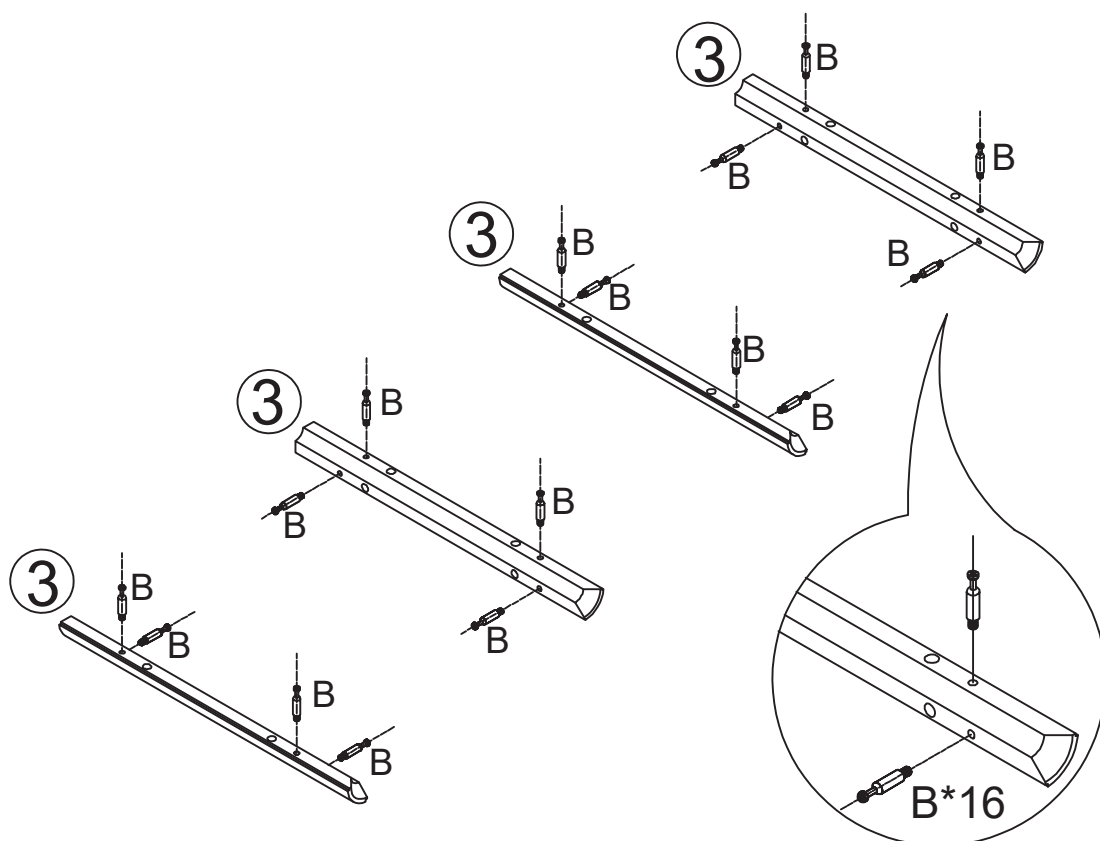


B 16 PCS

6*25mm

STEP 13


Attach accessories C to boards 5 and 6

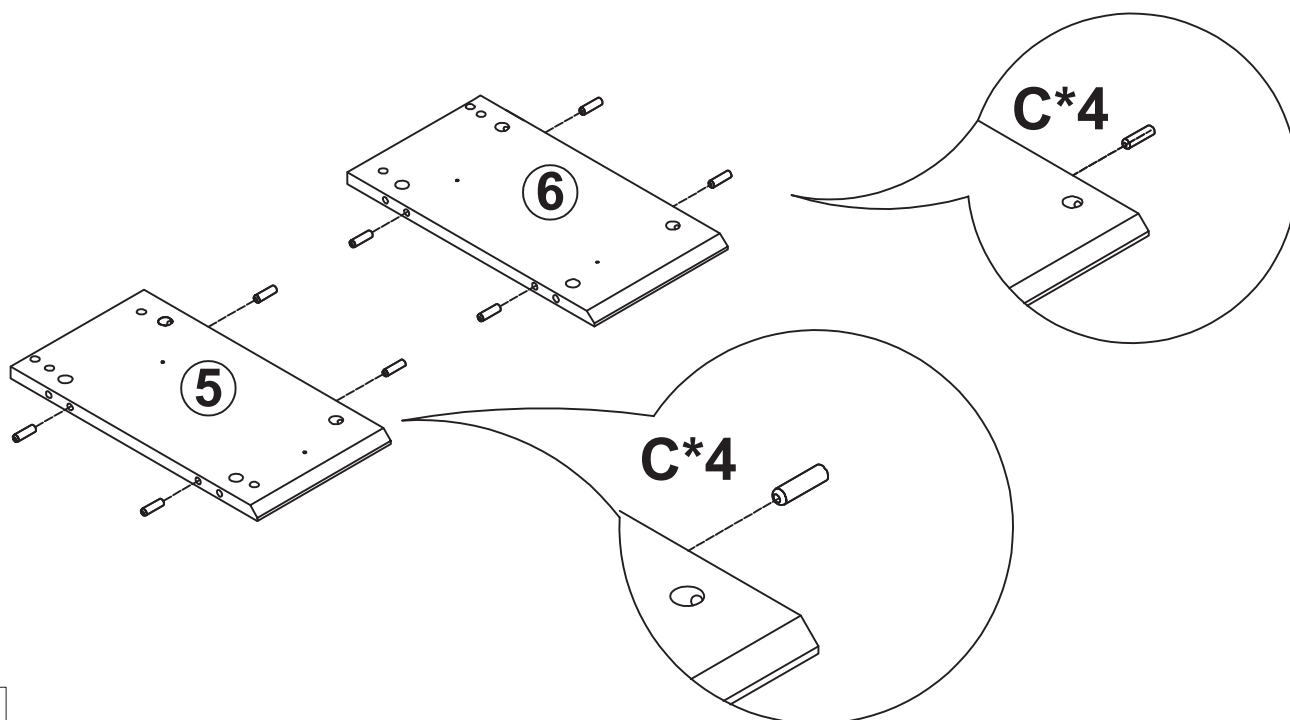


C	8 PCS
8*30mm	


STEP 14

Install board 3 on both sides of boards 5 and 6. Secure with accessory A

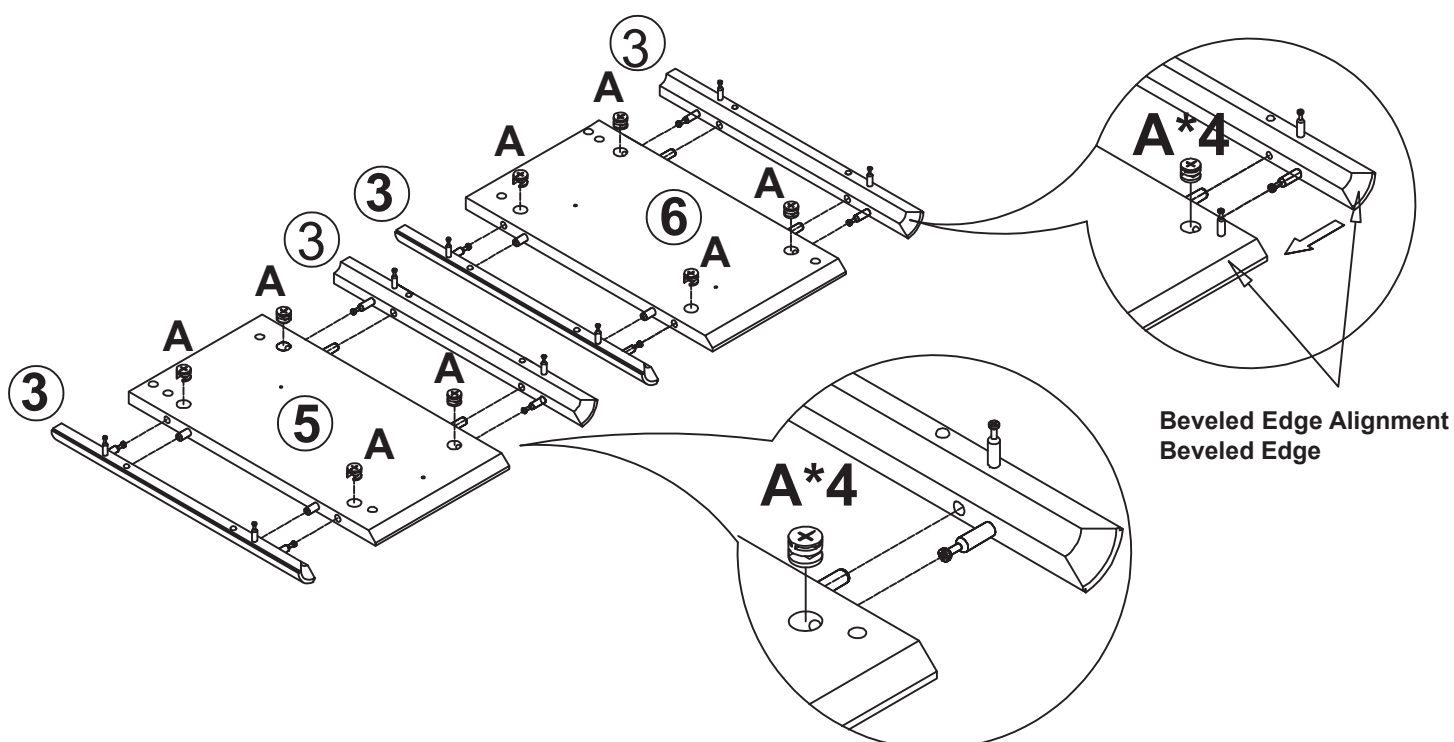


A	8 PCS
15*12mm	

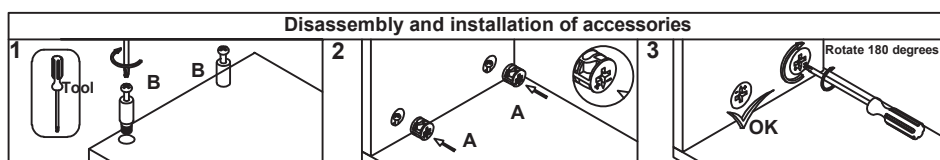

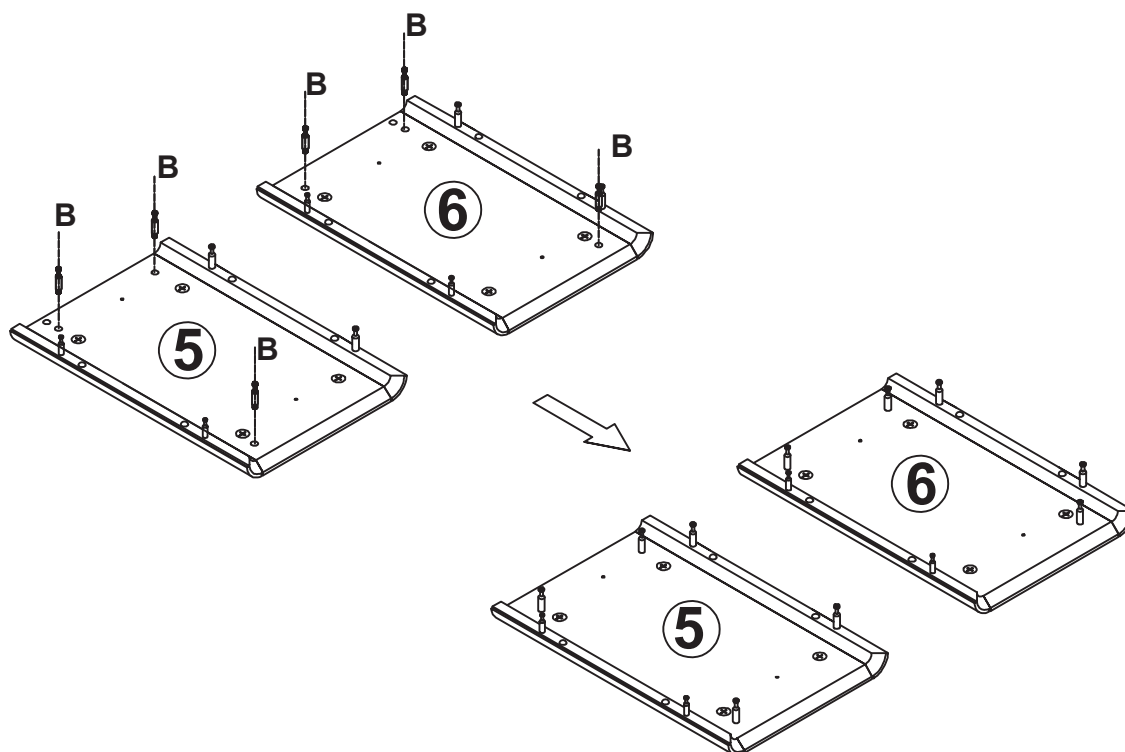STEP 15**Attach accessory B to boards 5 and 6**

B	6 PCS
	
6*25mm	


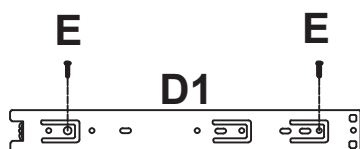
STEP 16**Attach accessory D1 to boards 5 and 6**

Tip: D1 hole installation diagram

Note: There is a plastic damper here


Back

D1

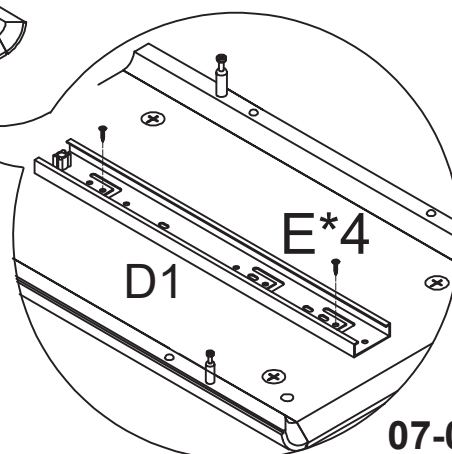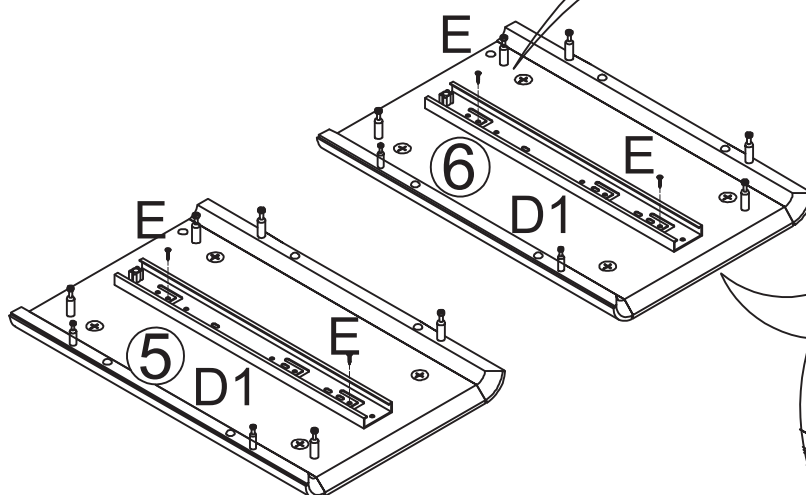


D1	2 PCS	E	4 PCS
			
12"		M3.5*14	

STEP 17 Attach accessories C to boards 1 and 2

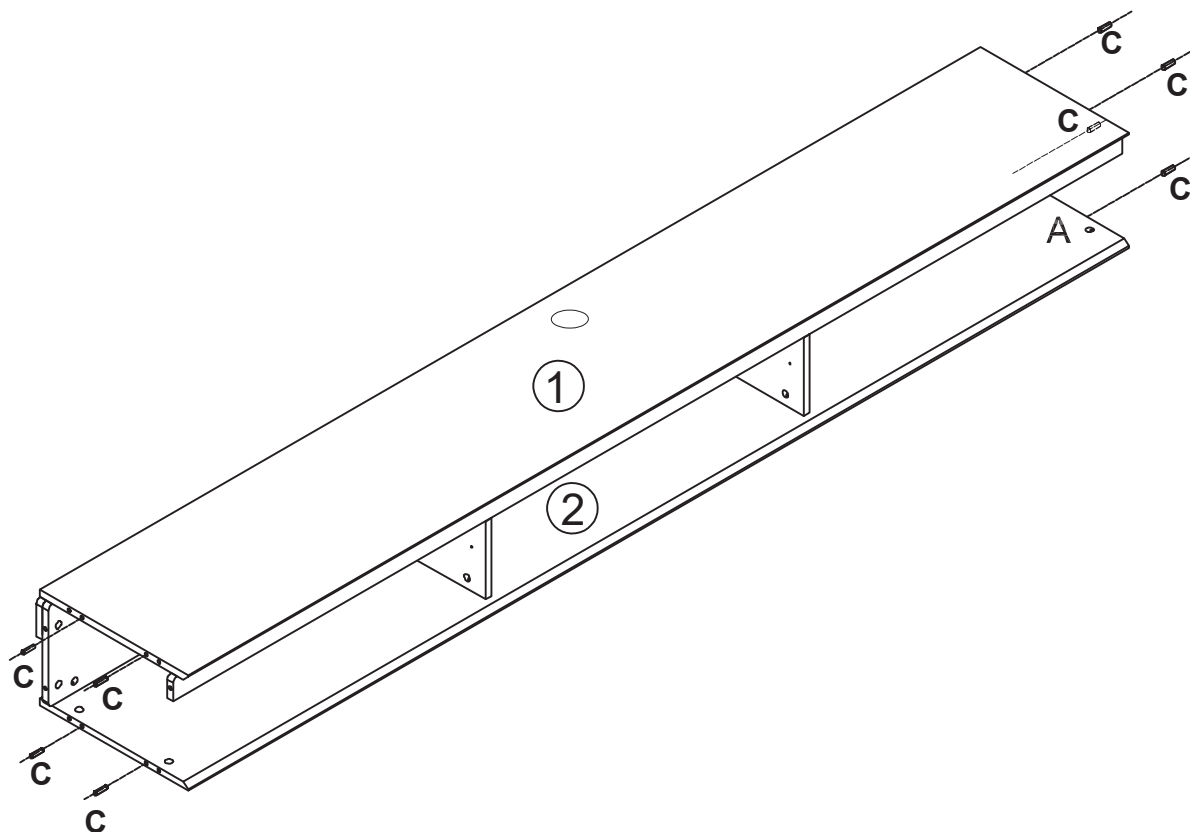


C	8 PCS
	
8*30mm	

STEP 18 Install boards 5 and 6 on boards 1 and 2. Secure with accessory A

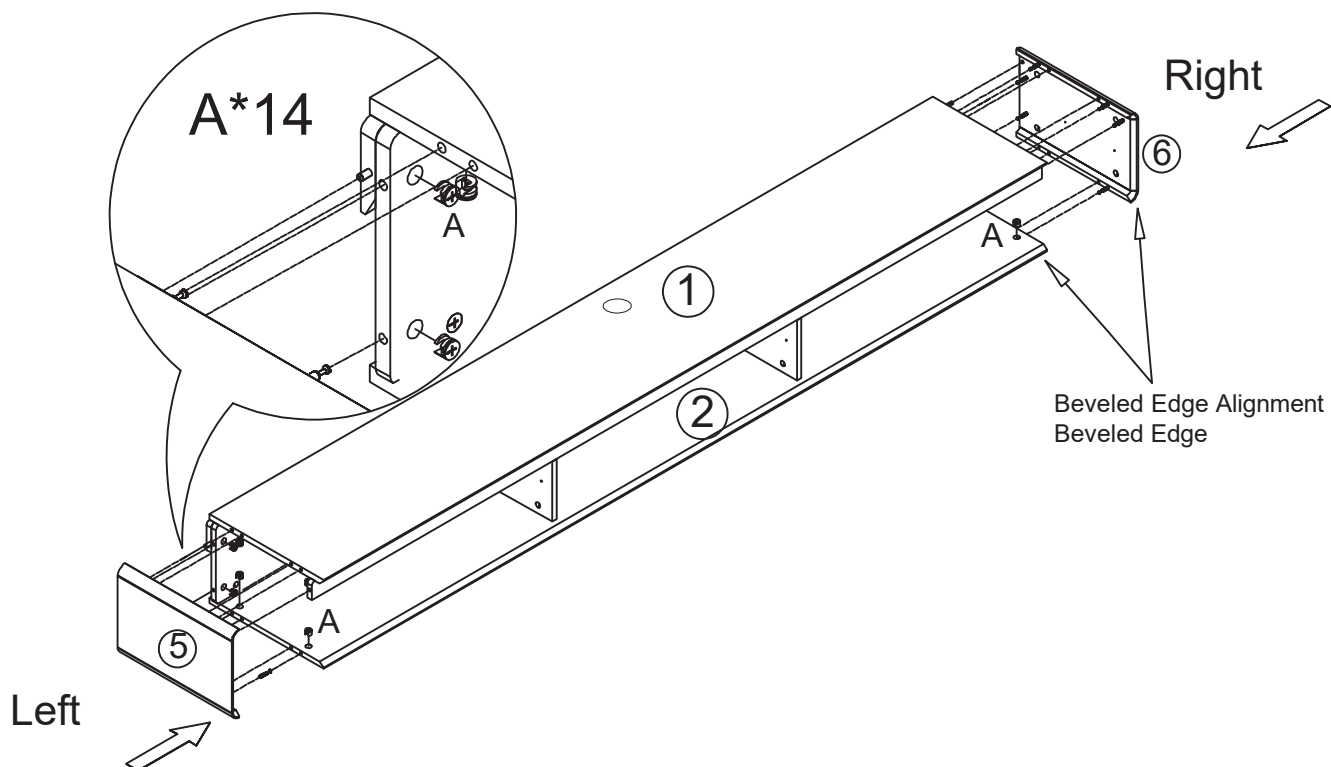


A	14 PCS
	
15*12mm	

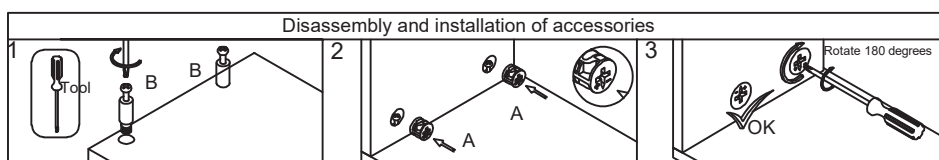


Drawer Assembly(STEP 19- STEP 25)

STEP 19 Install boards 14 and 15 on both sides of board 17.
Secure with accessories F and G

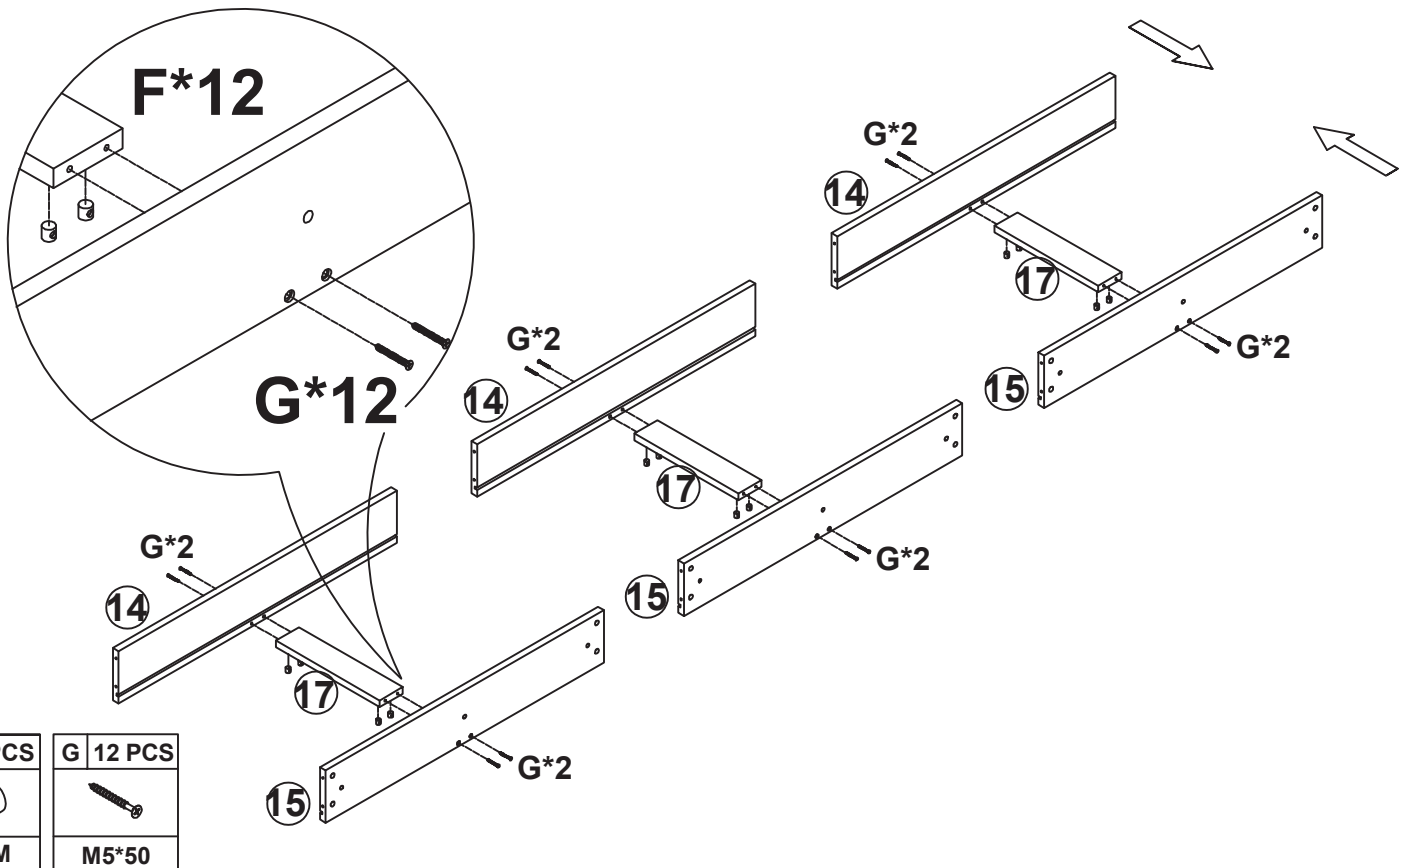

STEP 20 Insert board 16 into the grooves between boards 14 and 15

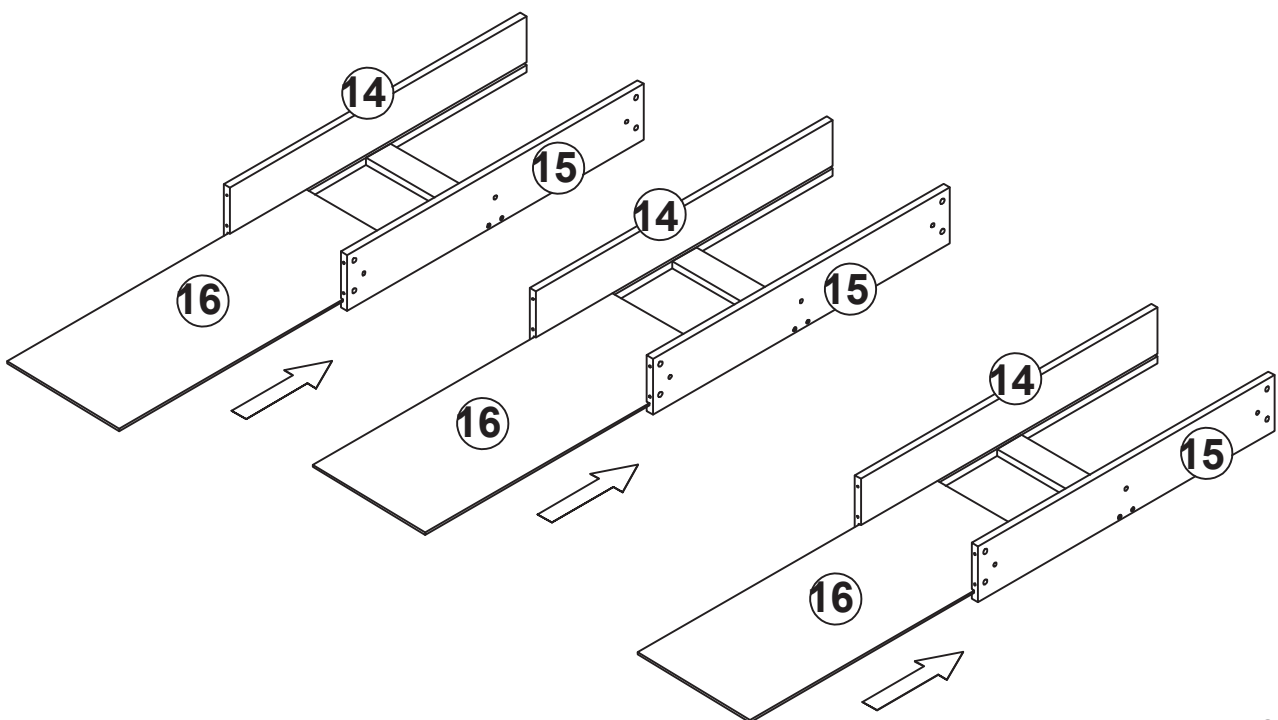


STEP 21

Attach accessory D2 to boards 12



Tip: D2 hole installation diagram

Tip: There is a U-shaped notch here
Back

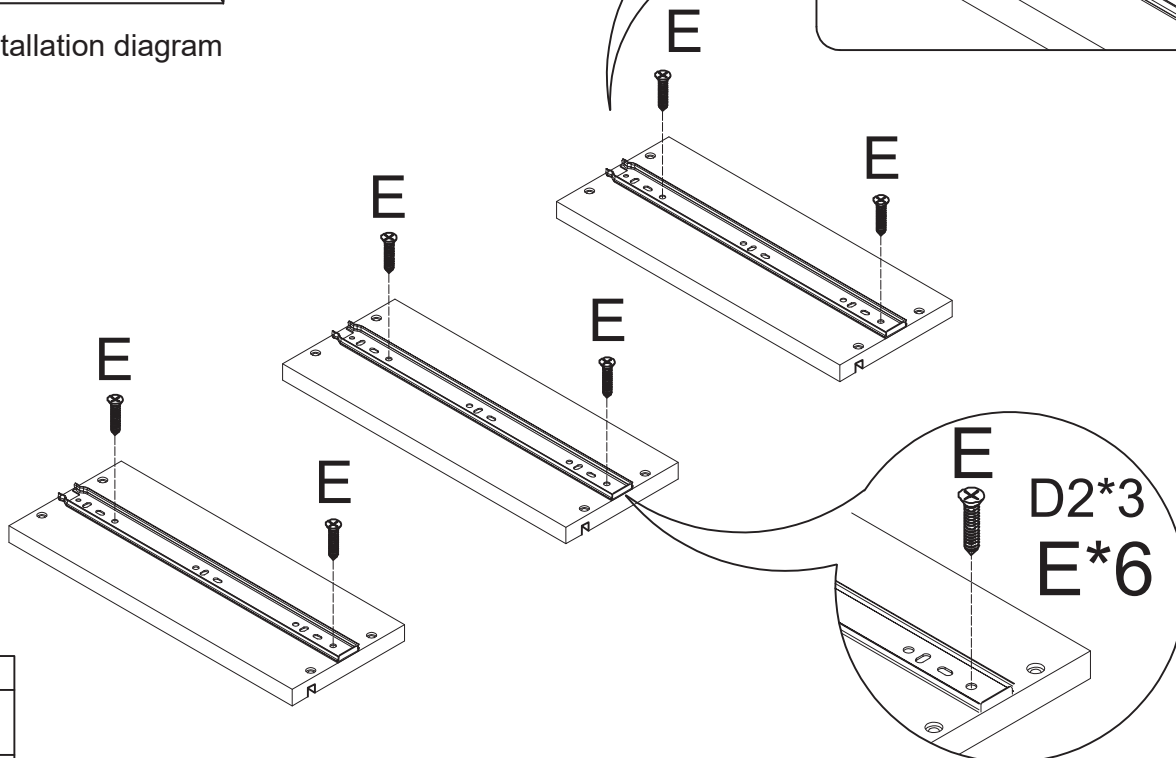

D2 3 PCS	E 6 PCS
12"	M3.5*14


STEP 22

Attach accessory D2 to boards 13




Tip: D2 hole installation diagram

Tip: There is a U-shaped notch here
Back

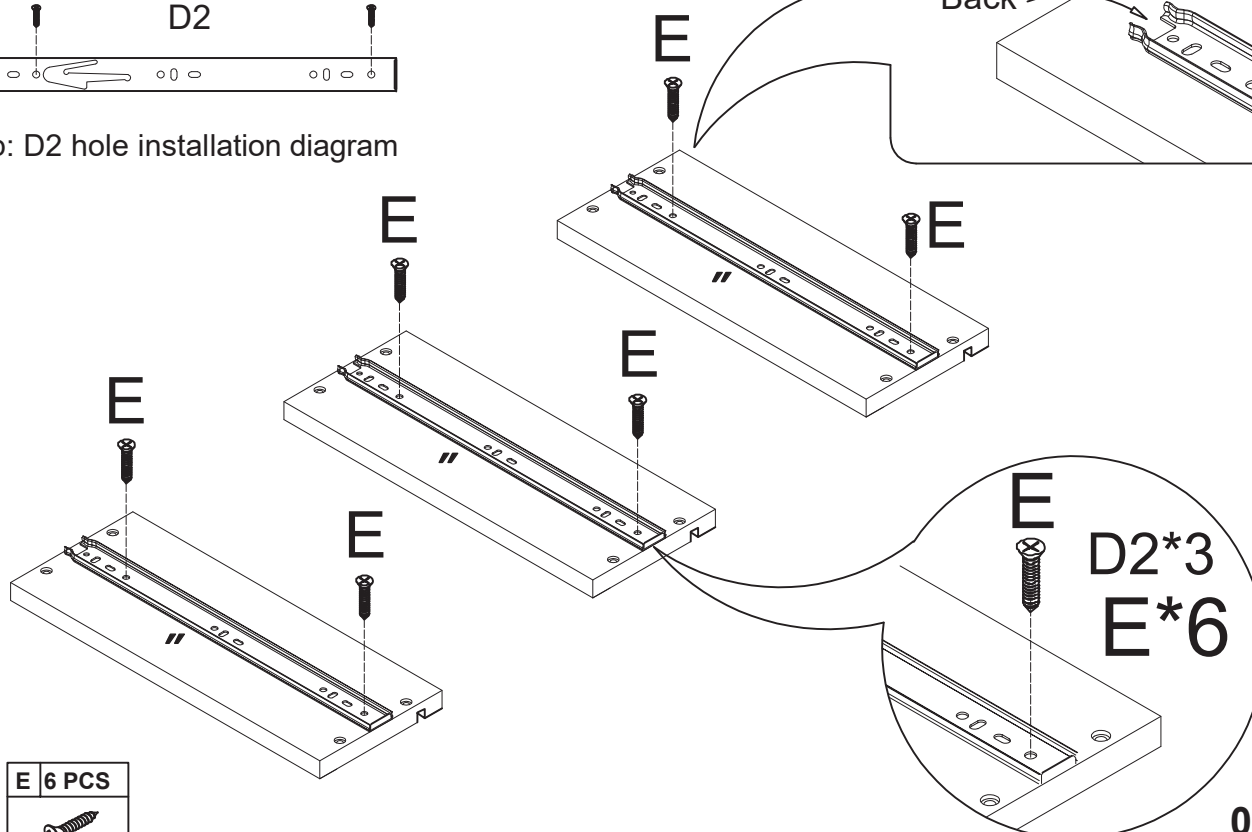


D2 3 PCS	E 6 PCS
12"	M3.5*14

STEP 23 Install boards 12 and 13 onto the sides of boards 14 and 15.
Secure with accessories F and G

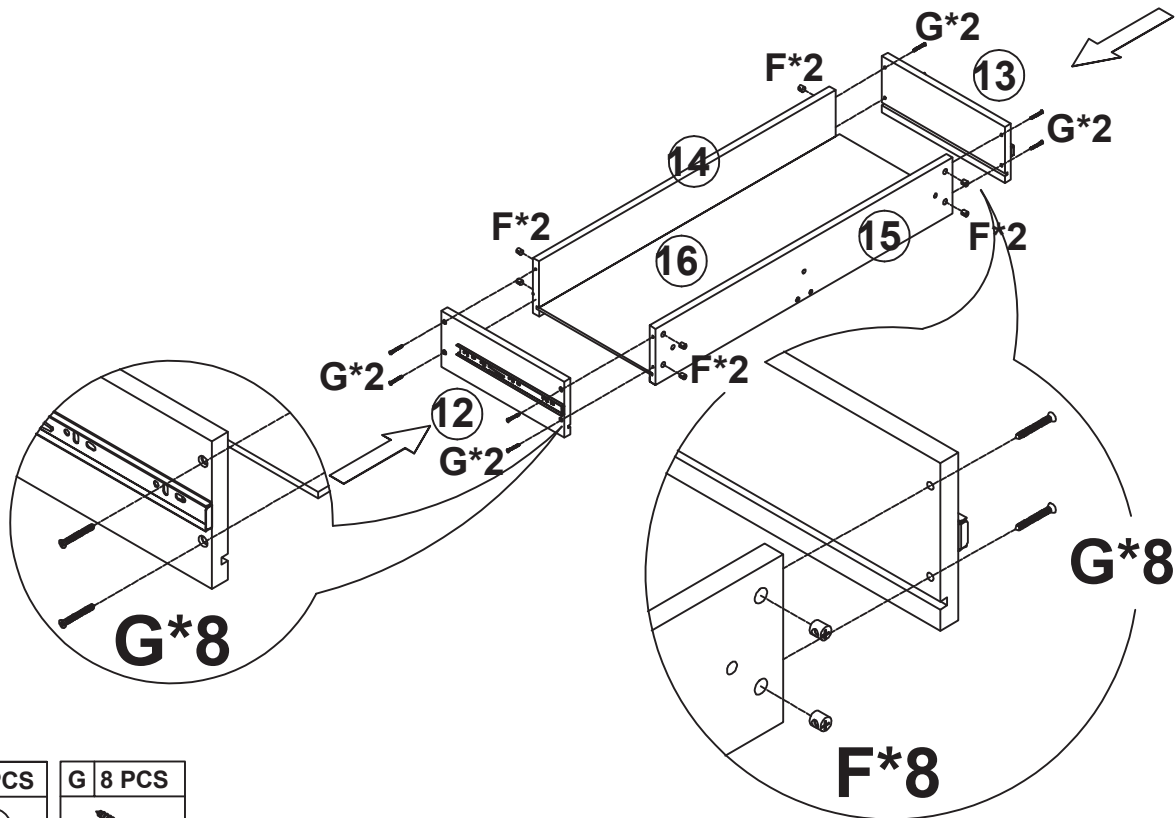


F 8 PCS	G 8 PCS
9*9MM	M5*50

STEP 24 Install boards 12 and 13 onto the sides of boards 14 and 15.
Secure with accessories F and G

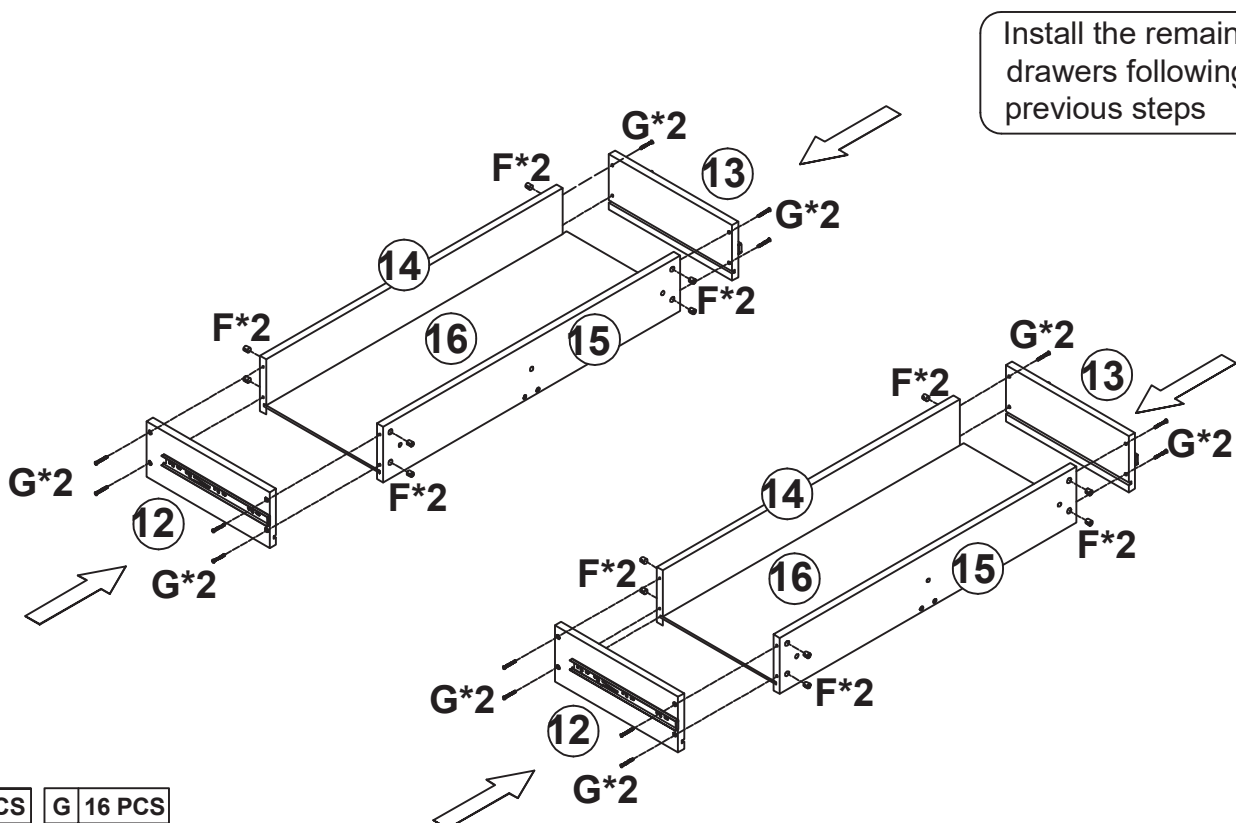



F 16 PCS	G 16 PCS
9*9MM	M5*50

STEP 25 Assemble drawer fronts 18, 19, and 20 with the beveled edge facing up. Secure with accessory H

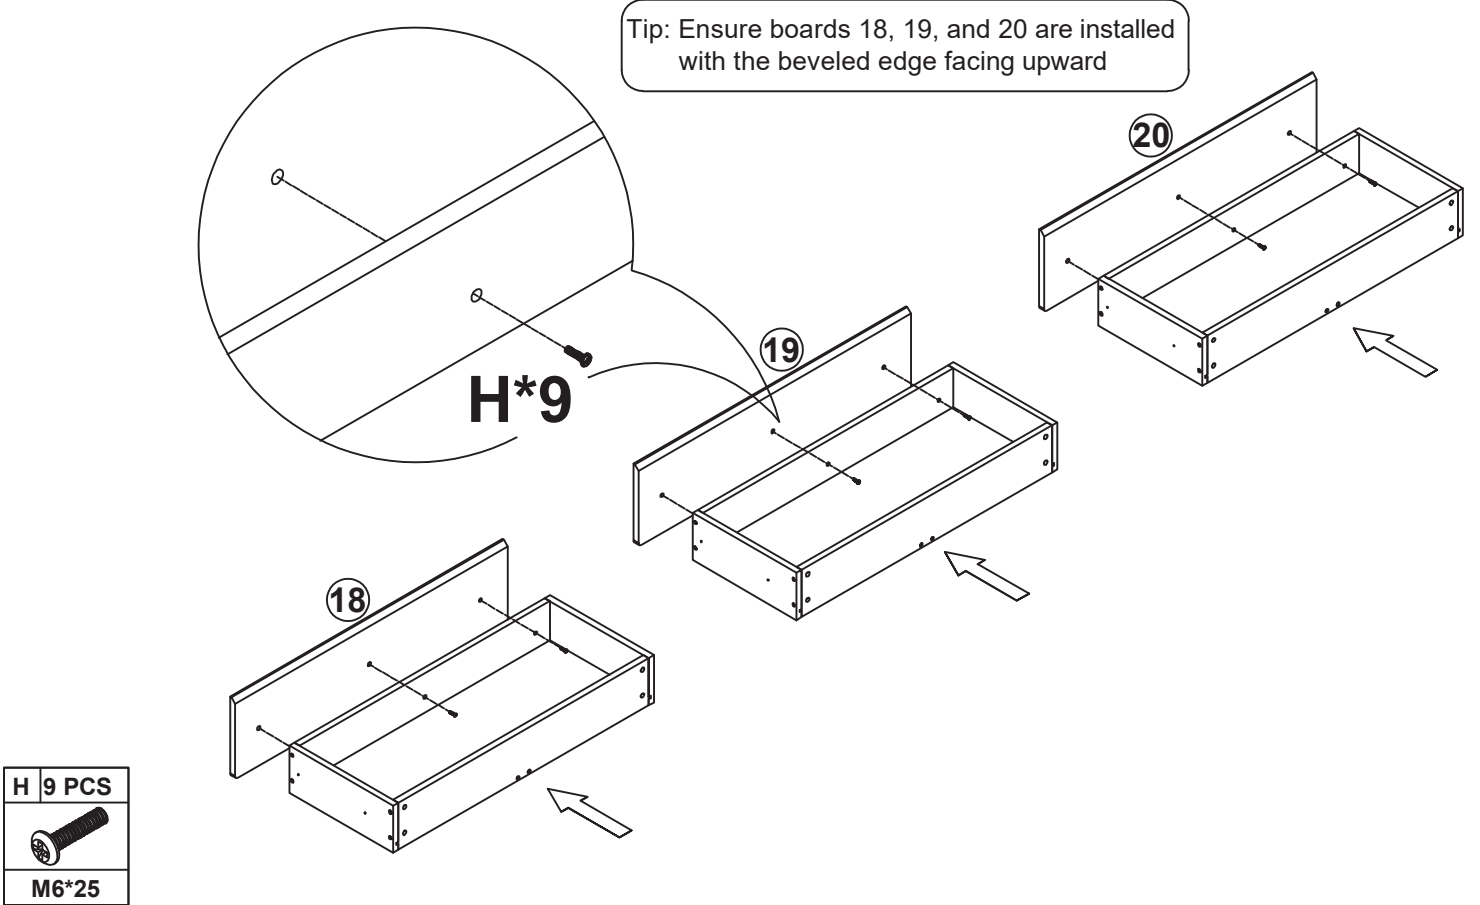

Installation options (wall or floor)

Option 1: Install the TV stand on the wall (the wall must be solid wall not hollow wall)	Option 2: Install base on TV stand for floor use
STEP 26 Drill holes in the wall according to the holes on board 9 and install accessories I	STEP 26 Attach accessory B to board 21

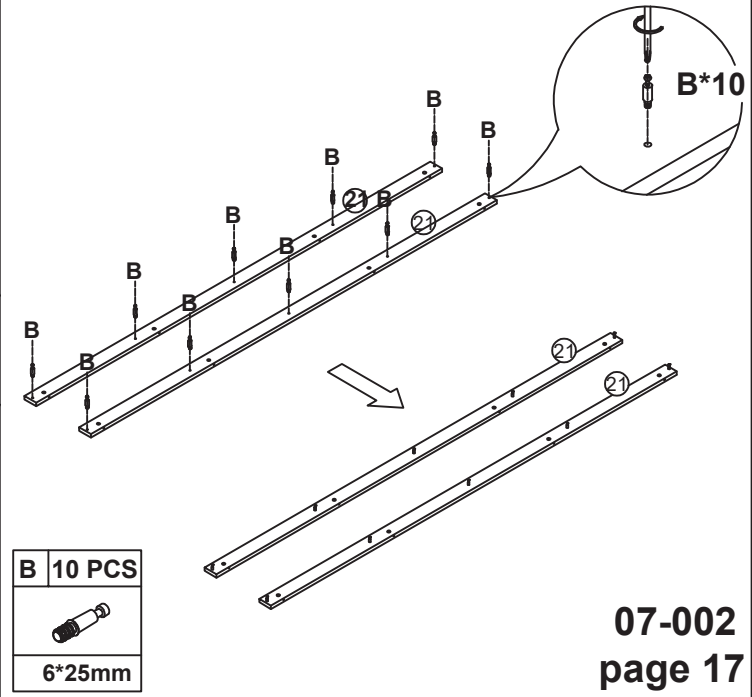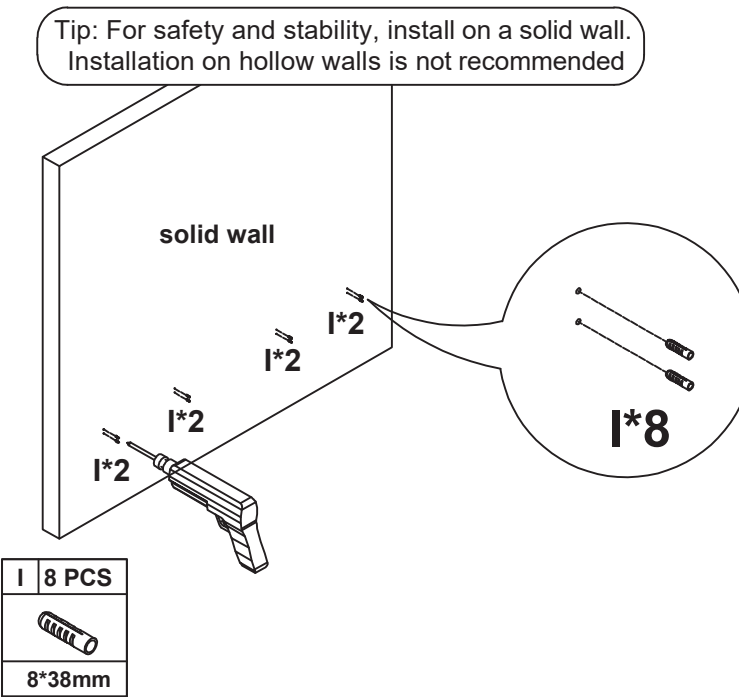


STEP 27

Install board 9 onto the wall using accessory K
(Suitable for solid concrete or brick walls only.)

Tip: For safety and stability, install on a solid wall.
Installation on hollow walls is not recommended

Note: Board 9 should be installed with the beveled edge facing the wall, functioning as a hook to secure the TV stand

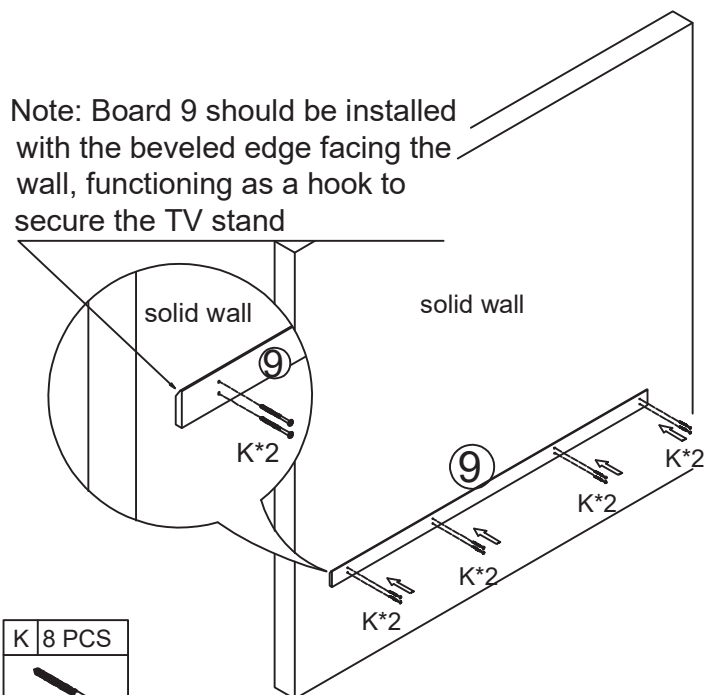


K 8 PCS



M4*50

STEP 27

Install board 21 onto both sides of board 22 and secure with accessory A

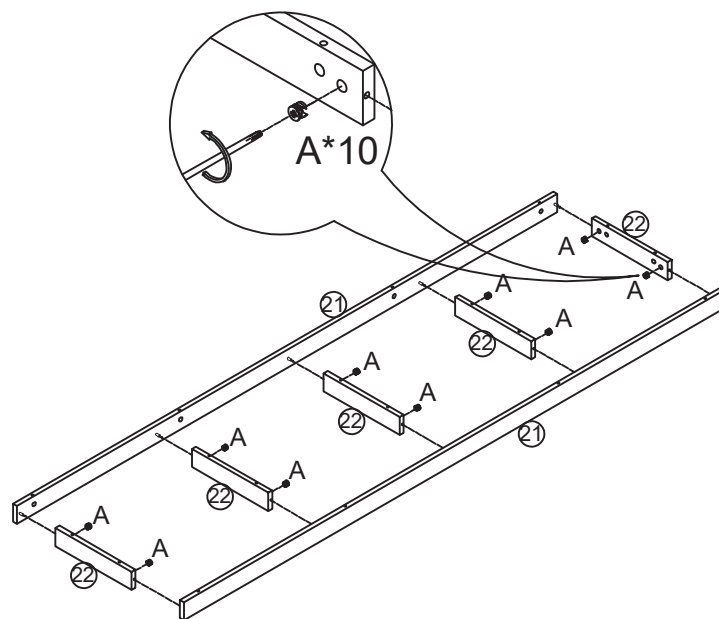


A 10 PCS



15*10mm

STEP 28

Hang the TV cabinet onto board 9 and secure with accessory J.

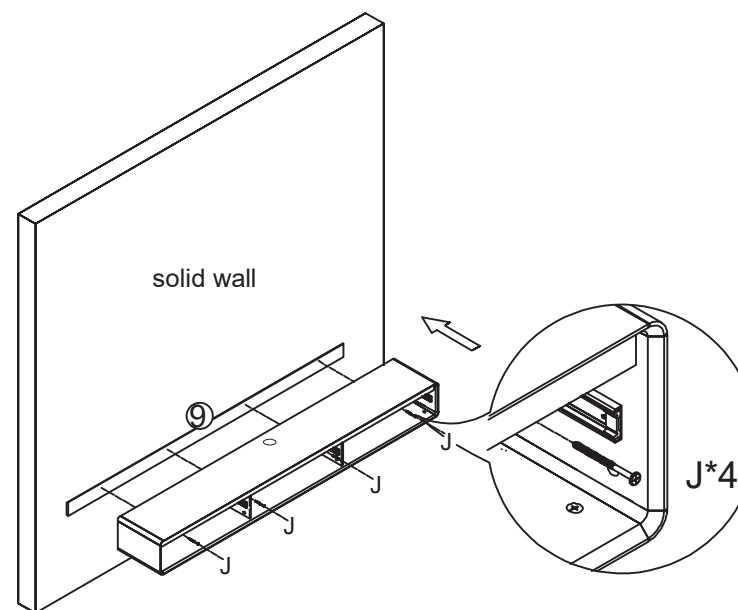


J 4 PCS



M4*30

STEP 28

Attach accessory B to board 2

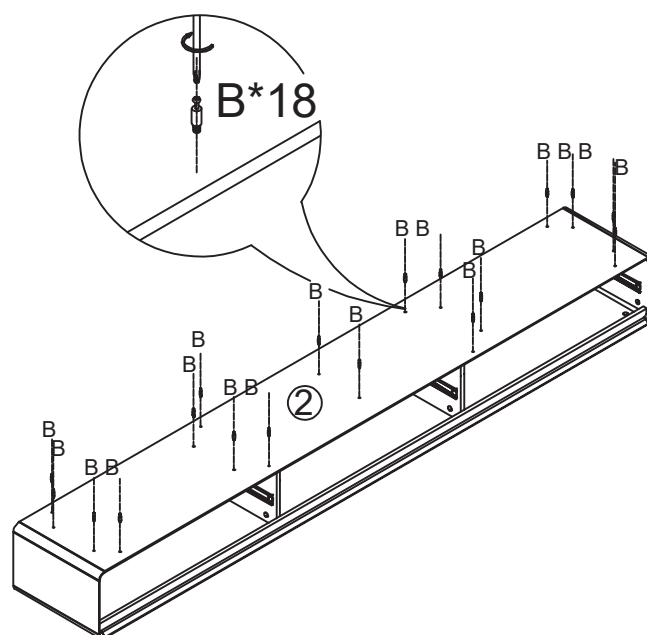

B 18 PCS




6*25mm


STEP 29

Install the 3 drawers in sequence inside the TV cabinet by connecting the rails D1 and D2

Tip: Drawers must be installed in the numbered order shown in the diagram. Incorrect order may affect proper function

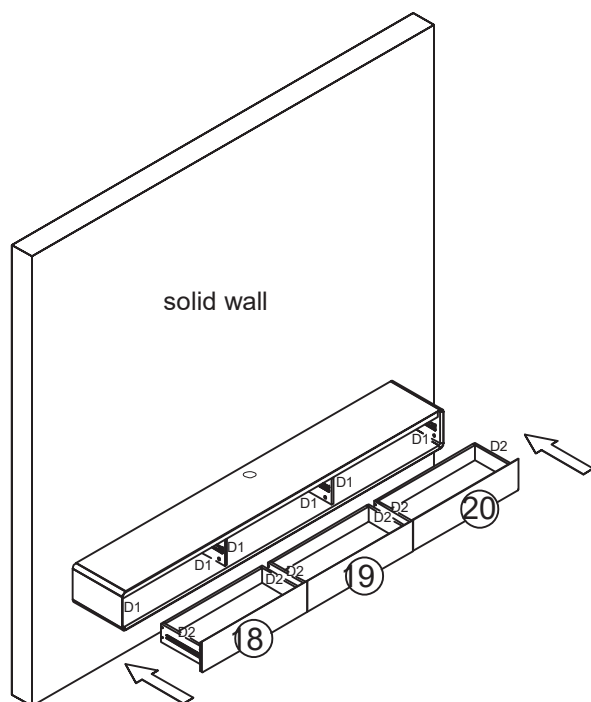**STEP 29**


Install board 21 and 22 onto board 2 and secure with accessory A

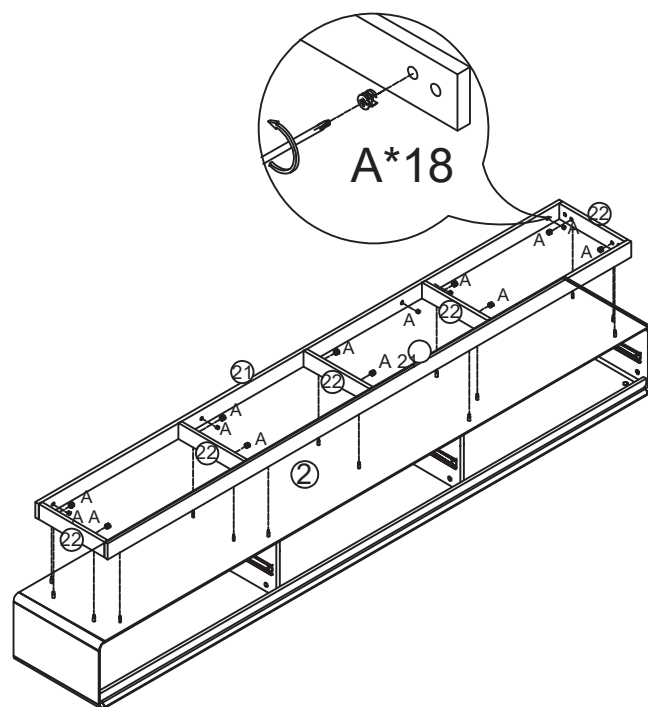

A	18 PCS
	
15*10mm	

STEP 30

Congratulations! The installation is complete.
Thank you for your effort

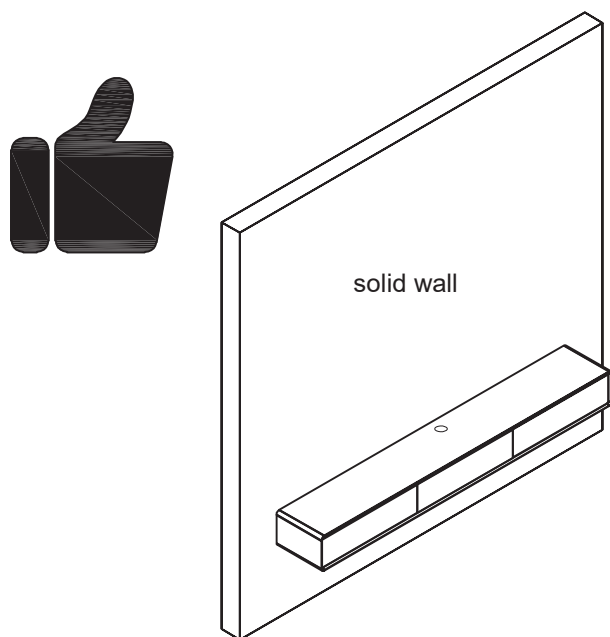

If you have any questions or concerns, please contact us!
Kevencindyyy@outlook.com

STEP 30

Install the 3 drawers in sequence inside the TV cabinet by connecting the rails D1 and D2

Tip: Drawers must be installed in the numbered order shown in the diagram. Incorrect order may affect proper function

