


ASSEMBLY INSTRUCTION

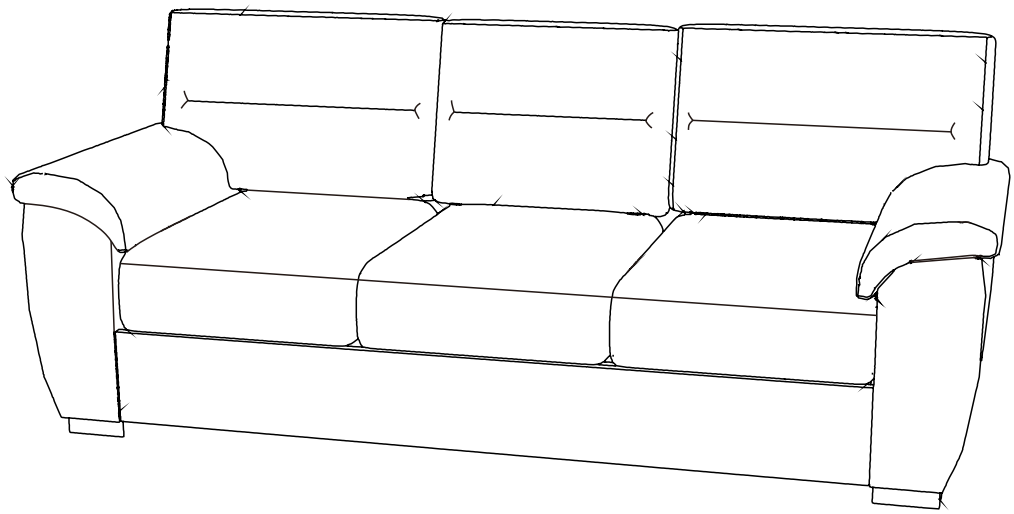


PARTS LIST

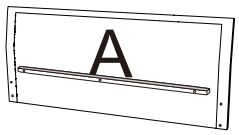

Backrest x1

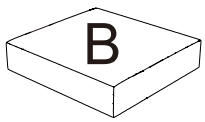


Seat cushion x3

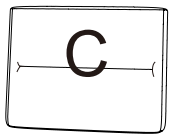

x1







Base Frame Front Panel x1

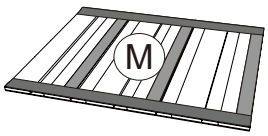


Slats x2

HARDWARE LIST


1	 1/4*2.2cm	x16	2	 5/16*8cm	x4	3	 19mm	x4	4	 40mm*100mm	x1
5		x4	6		x4						

PARTS LIST


BOX-ARM

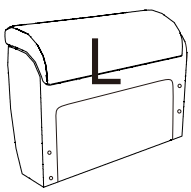


x1

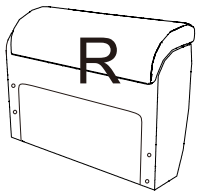

x1

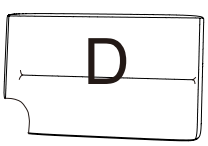

x1

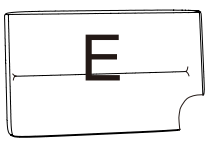

x1


BEFORE ASSEMBLY


Open up Velcro of Non-Woven Fabric cover
on the bottom to revove hardware 、 legs and parts.

1、Please open the black woven fabric with Velcro closure on the bottom of the frame then cut off the black straps before removing the parts for assembly.

2、After removing the cushion from the compress bag, please allow air to flow through the cushion for few days. You can try to fluff cushion by push in and push out on all four sides of the cushion. Hitting the top/front of the cushion with your hand to fluff them after installation.

3、Please allow at least 24 hours for the cushions to recover to its natural state after removing from the package.

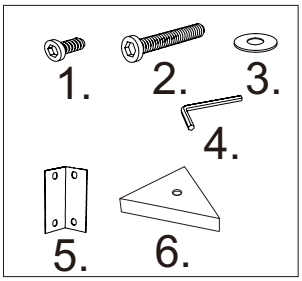

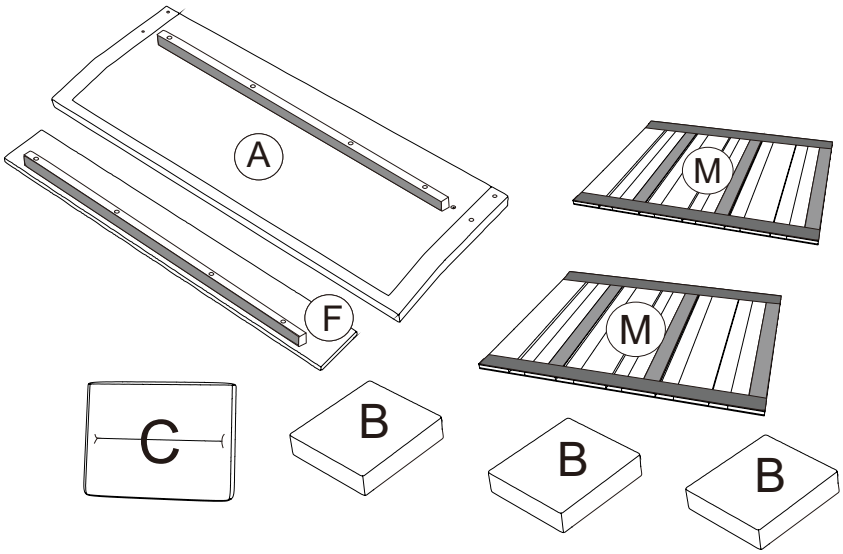



Open up Velcro of Non-Woven Fabric cover
on the bottom to revove hardware 、 legs and parts.

1、Please open the black woven fabric with Velcro closure on the bottom of the frame then cut off the black straps before removing the parts for assembly.


2、After removing the cushion from the compress bag, please allow air to flow through the cushion for few days. You can try to fluff cushion by push in and push out on all four sides of the cushion. Hitting the top/front of the cushion with your hand to fluff them after installation.

3、Please allow at least 24 hours for the cushions to recover to its natural state after removing from the package.

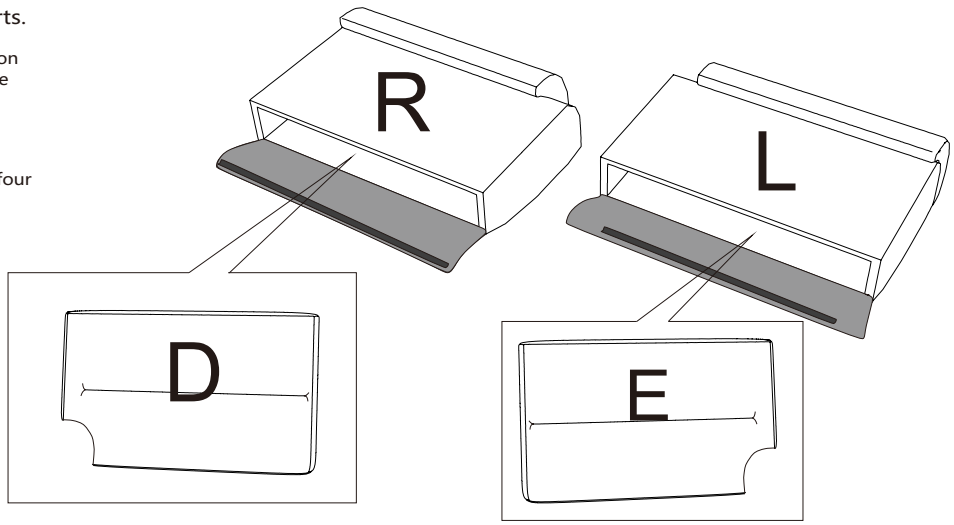


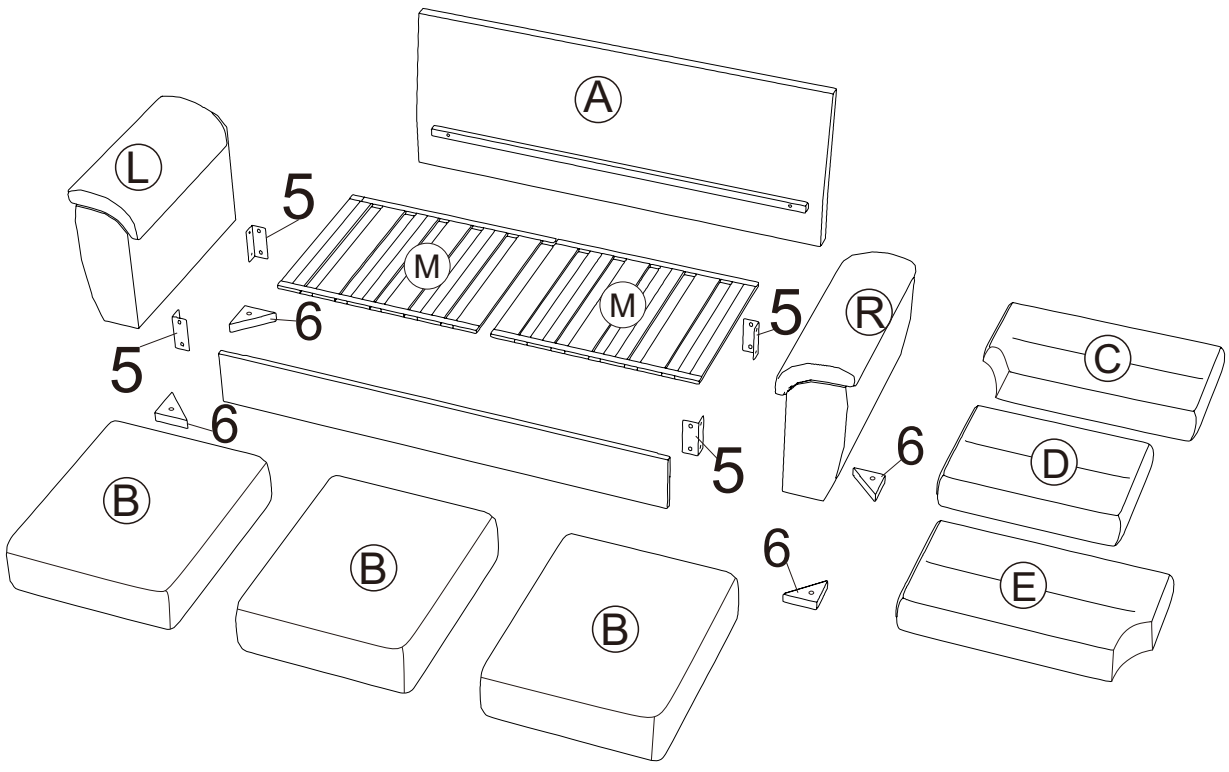


Step1

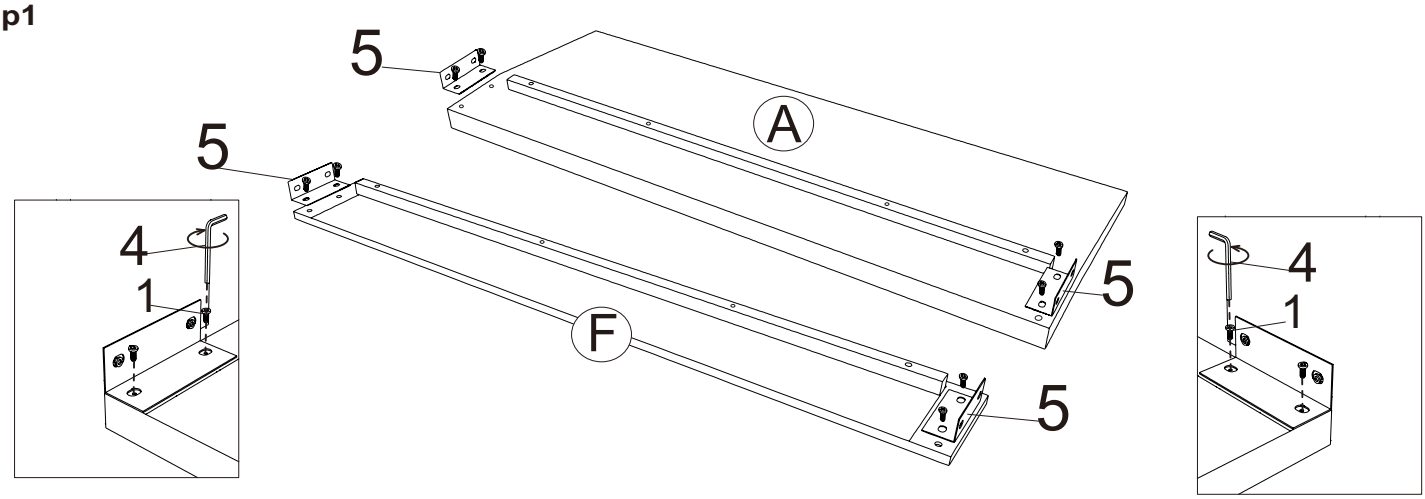


Step2

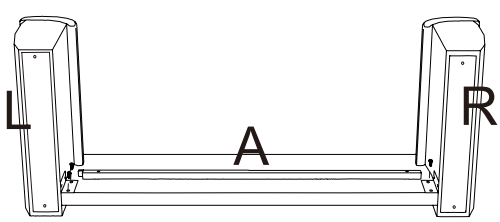


Make sure to align Part#L,R and A.5. at the same level. If there is any issue, use the oval screw holes to adjust.

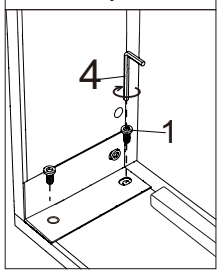



Step3

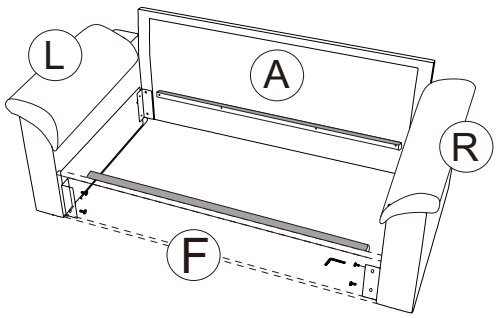

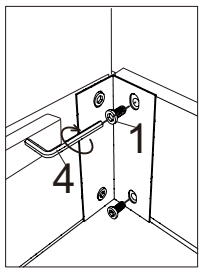


Step4

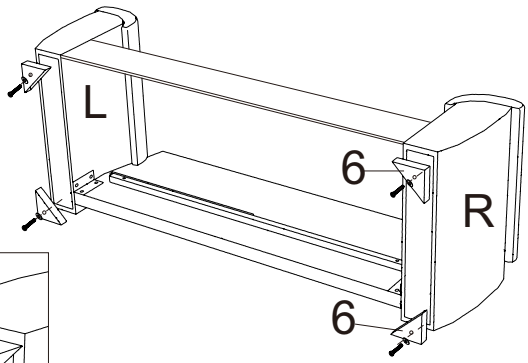

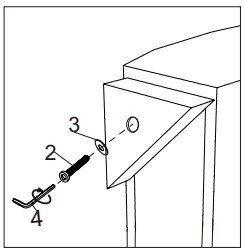

Step5

Face the Velcro upward.

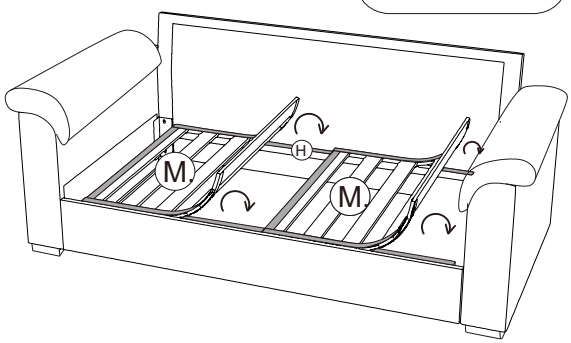

Step6

Face the Velcro upward.

