



Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

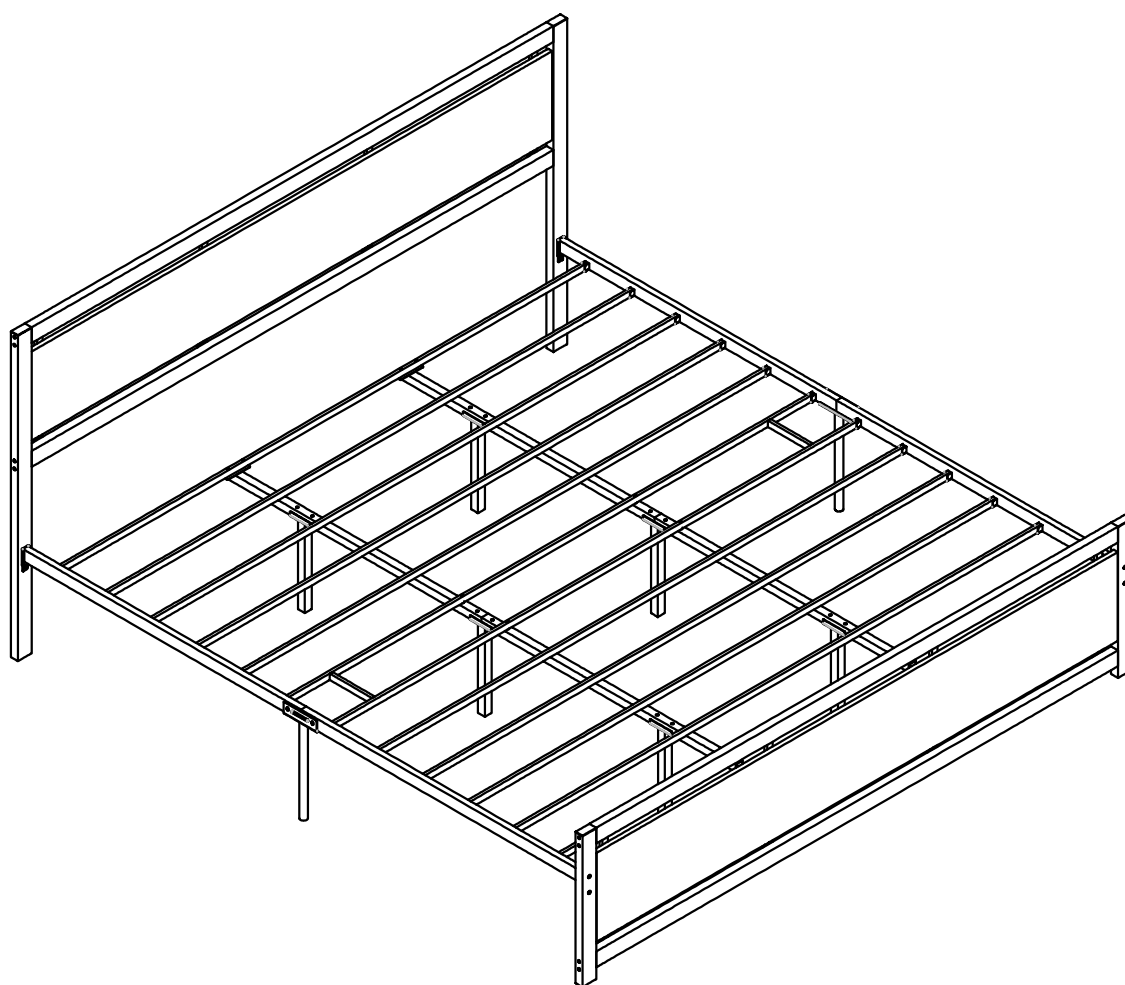


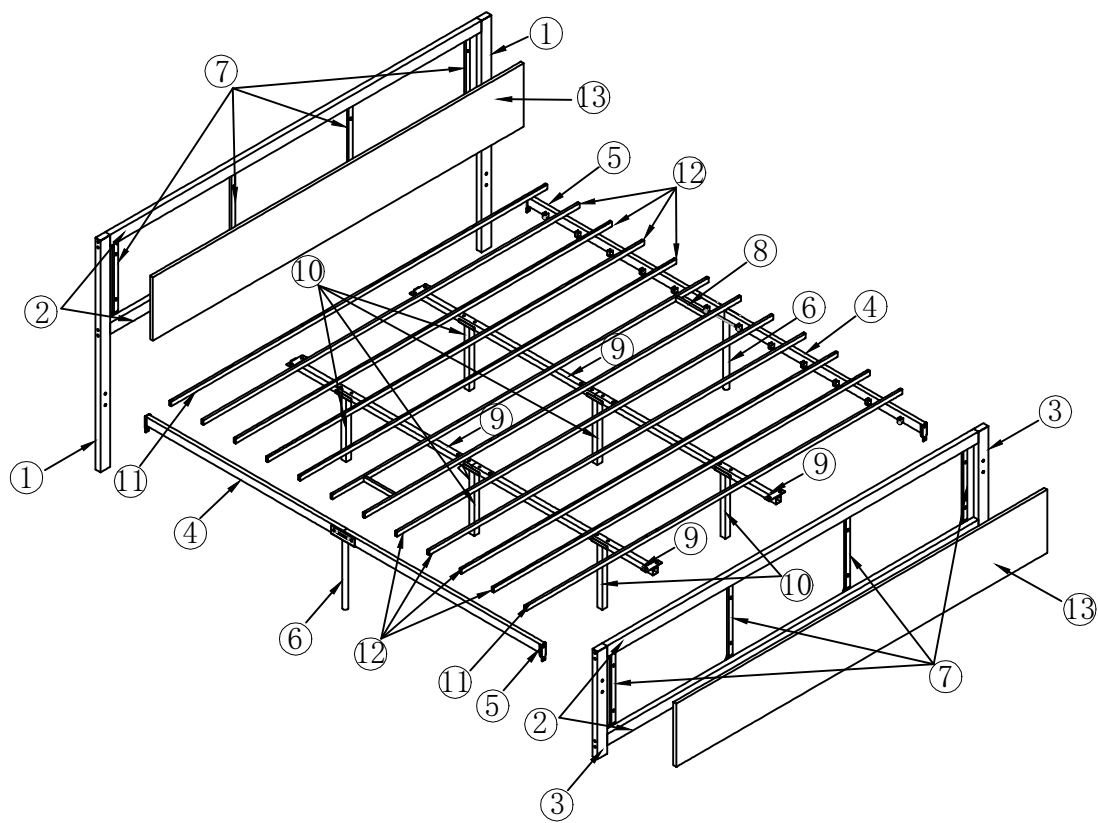


A		M8	4PCS	H		S4	1 PC
B		M6*15	24PCS	I			1 PC
C		M5*25	8PCS	J		M6*70	16PCS
E		M8*40	8PCS	K		ø6	36PCS
F		ø8	8PCS	L		M6*20	16PCS
G		M6*35	24 PCS	M		M6	20PCS

Step1


J		M6*70	8PCS
K		ø6	8PCS
H			

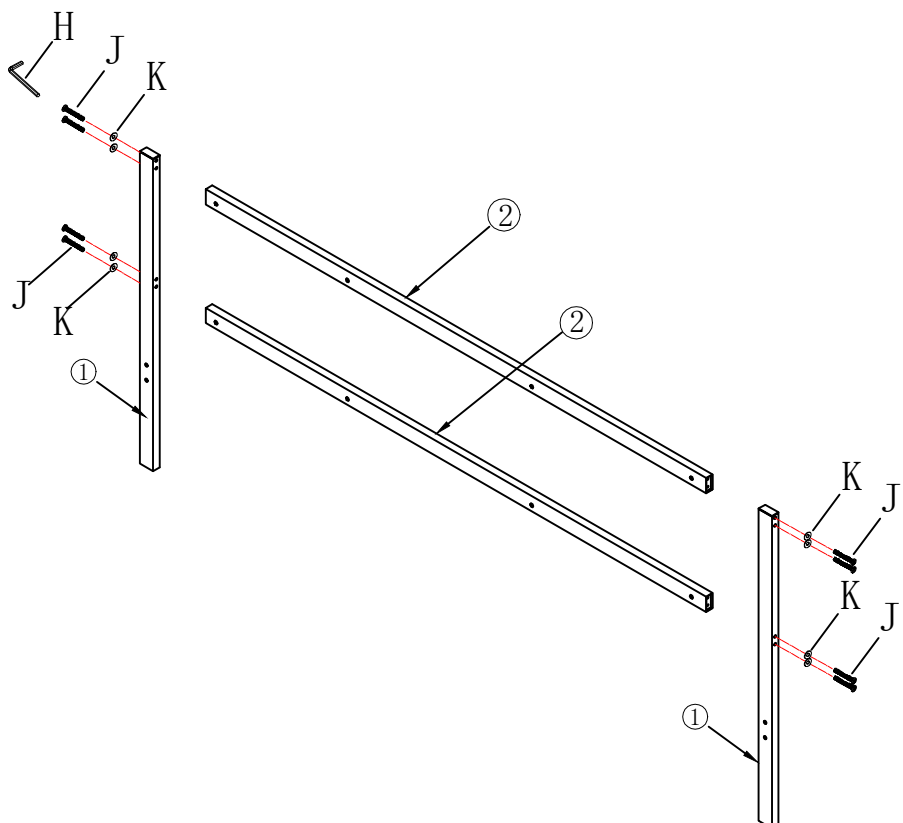


Step2			
B		M6*15	8PCS
H			

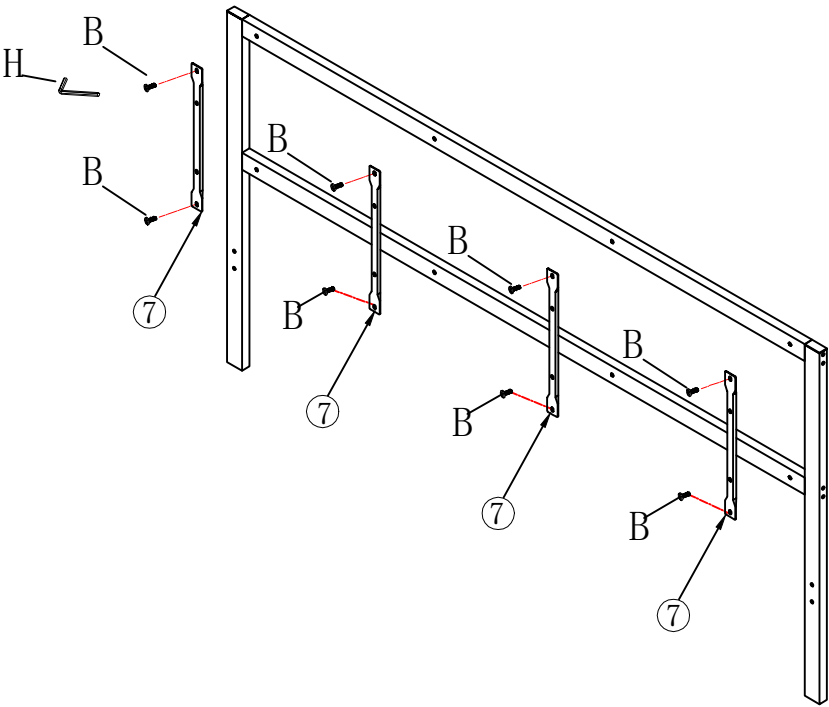


Step3			
L		M6*20	8PCS
H			

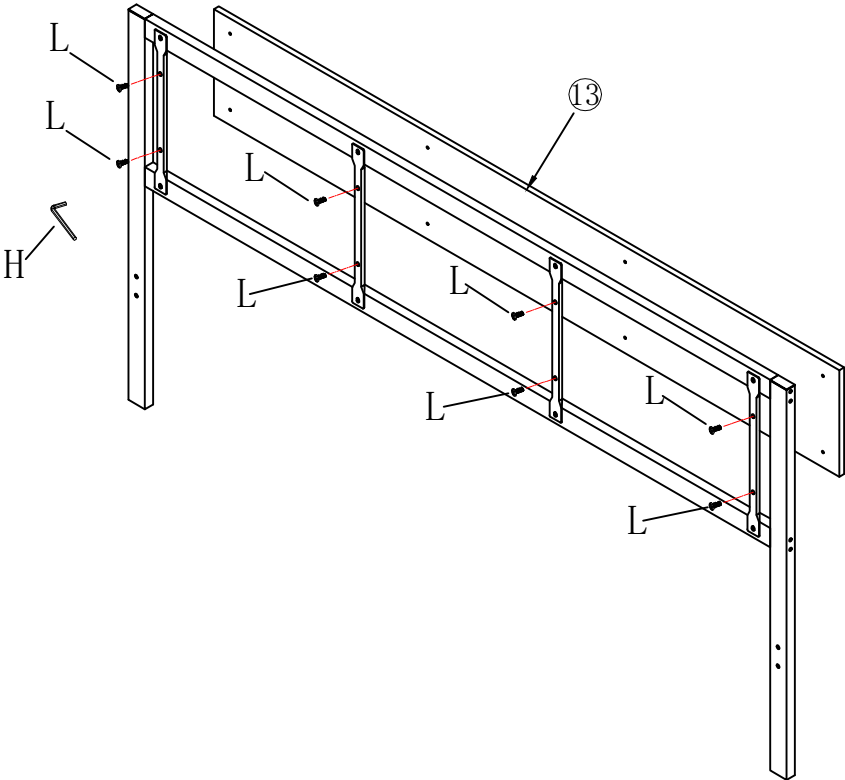


Step4			
J		M6*70	8PCS
K		φ6	8PCS
H			

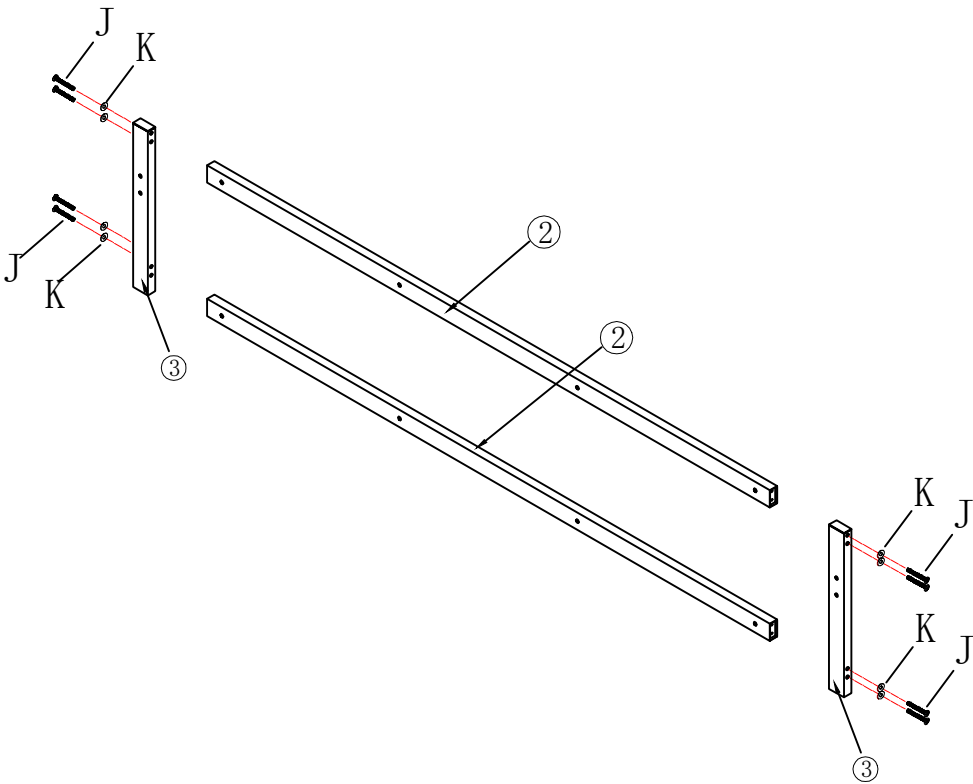


Step5			
B		M6*15	8PCS
H			

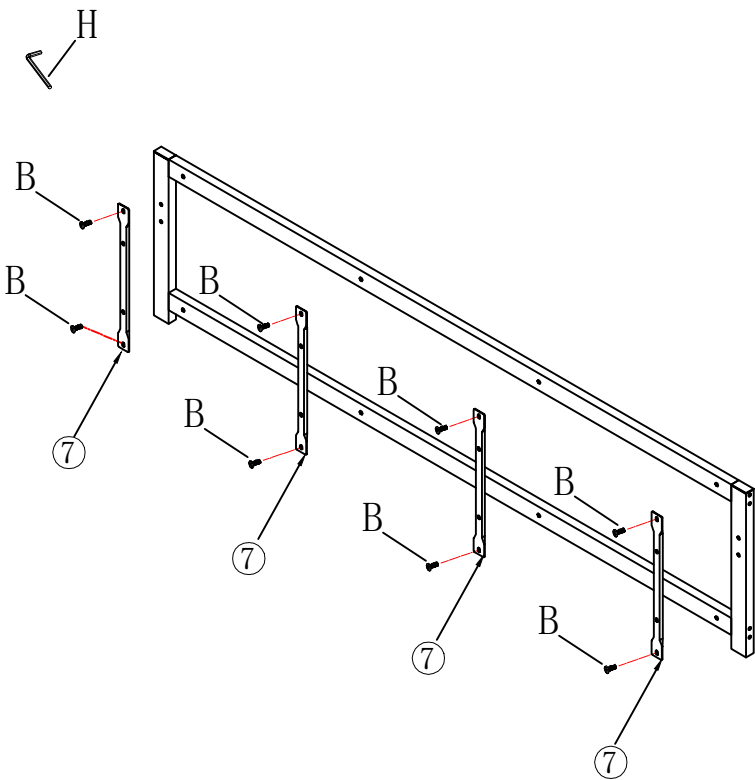


Step6			
L		M6*20	8PCS
H			

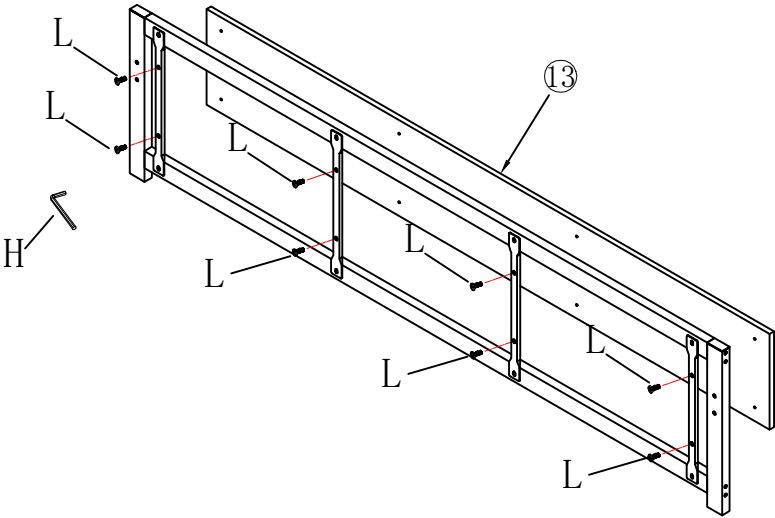

Step7			
B		M6*15	8PCS
H			

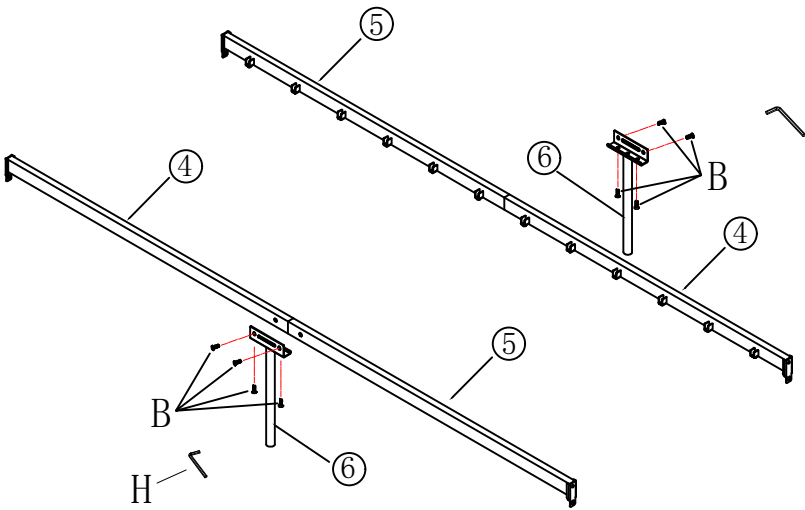


Step8			
E		M8*40	8PCS
F		φ8	8PCS
A		M8	4PCS
H			
I			

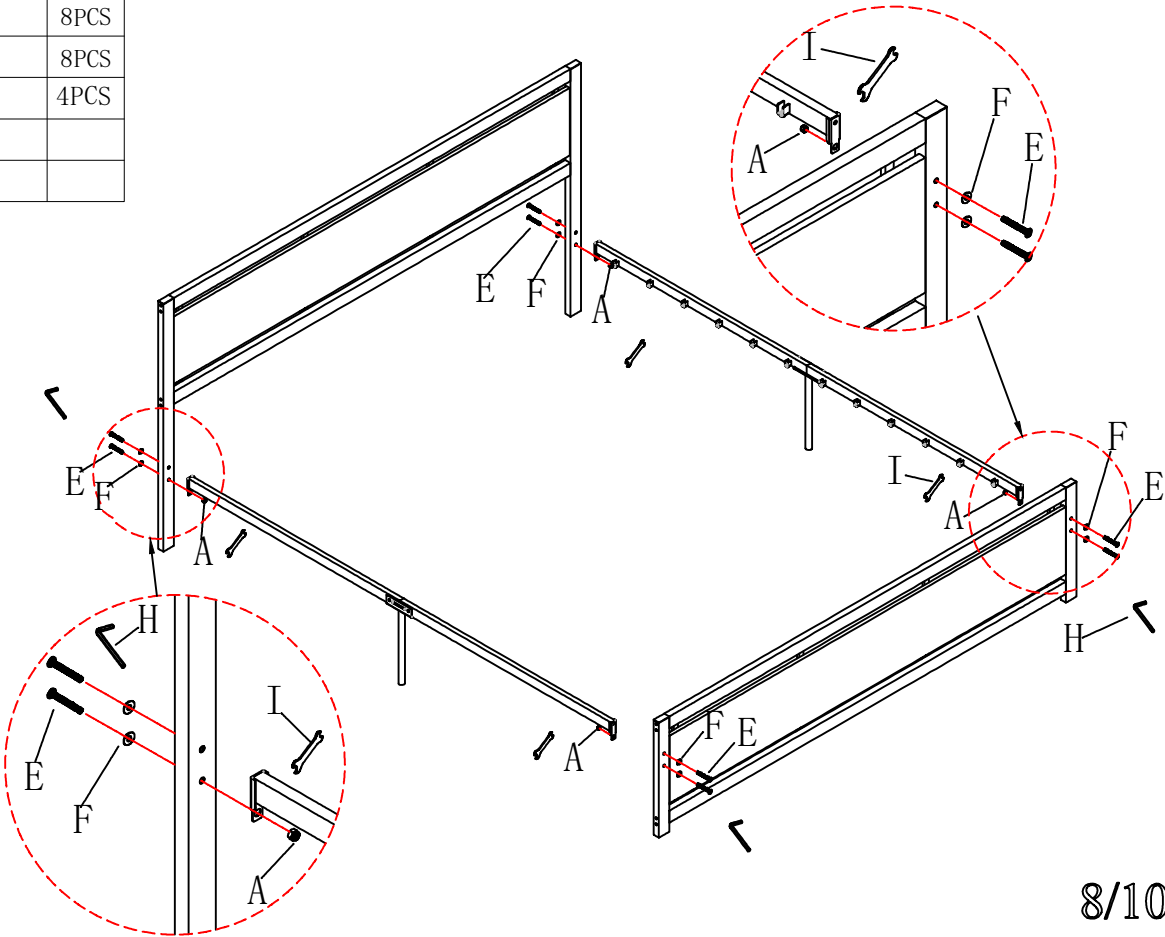


8/10

Step9			
G		M6*35	12PCS
K		φ6	12PCS
M		M6	12PCS
H			
I			

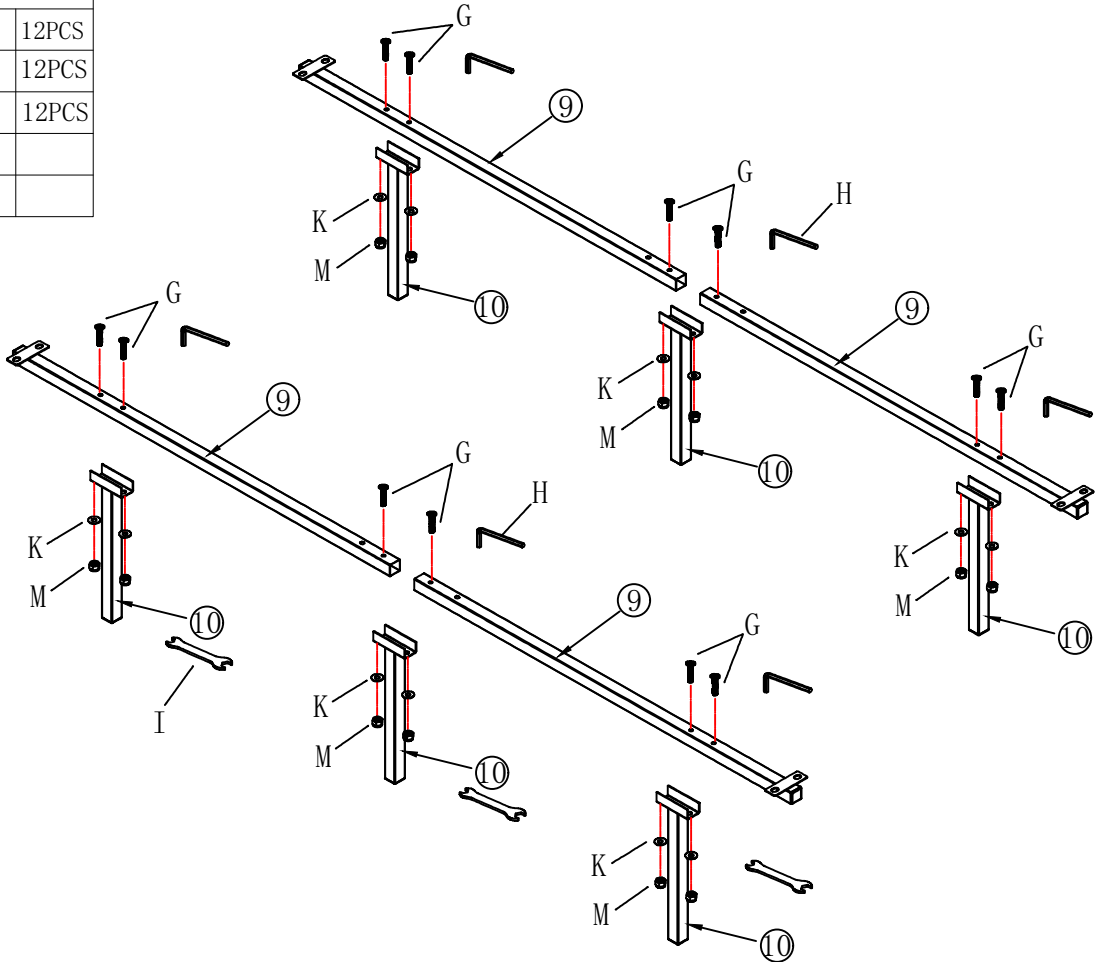


Step10

C		M5*30	4 PCS
G		M6*35	8 PCS
K		φ6	8 PCS
M		M6	8 PCS
H			
I			

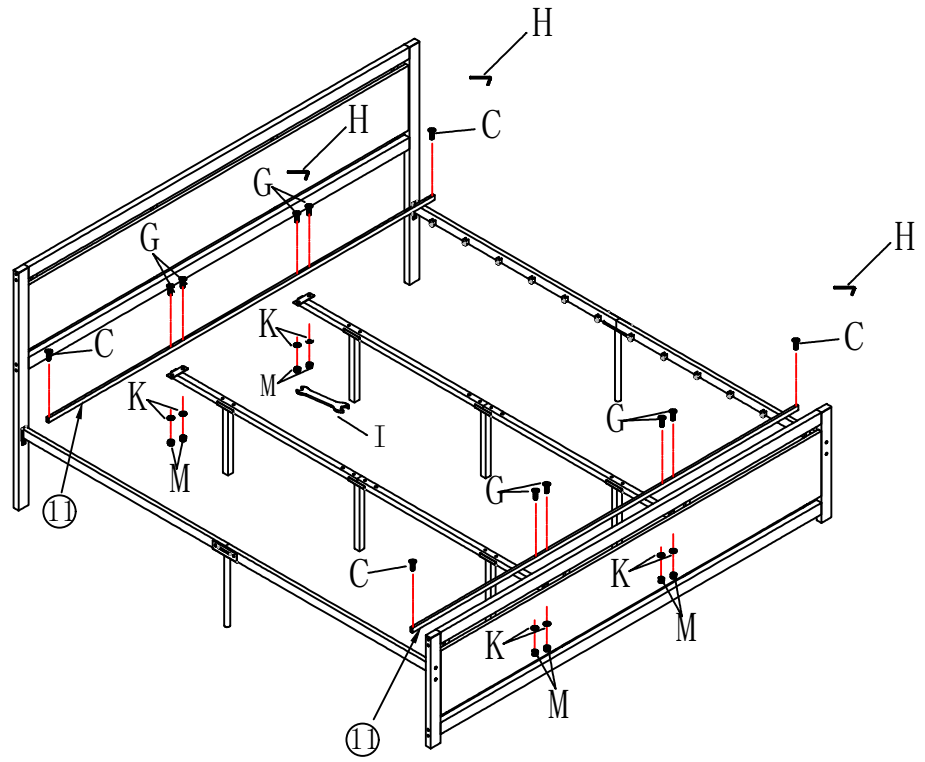


Step11



C		M5*30	4 PCS
G		M6*35	4 PCS
H			

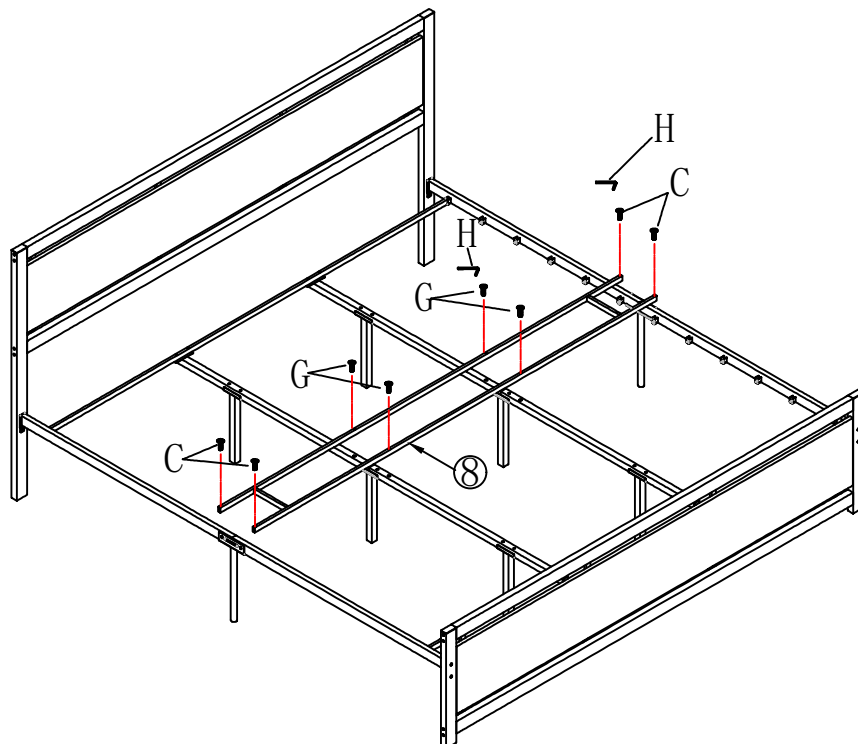

Step12

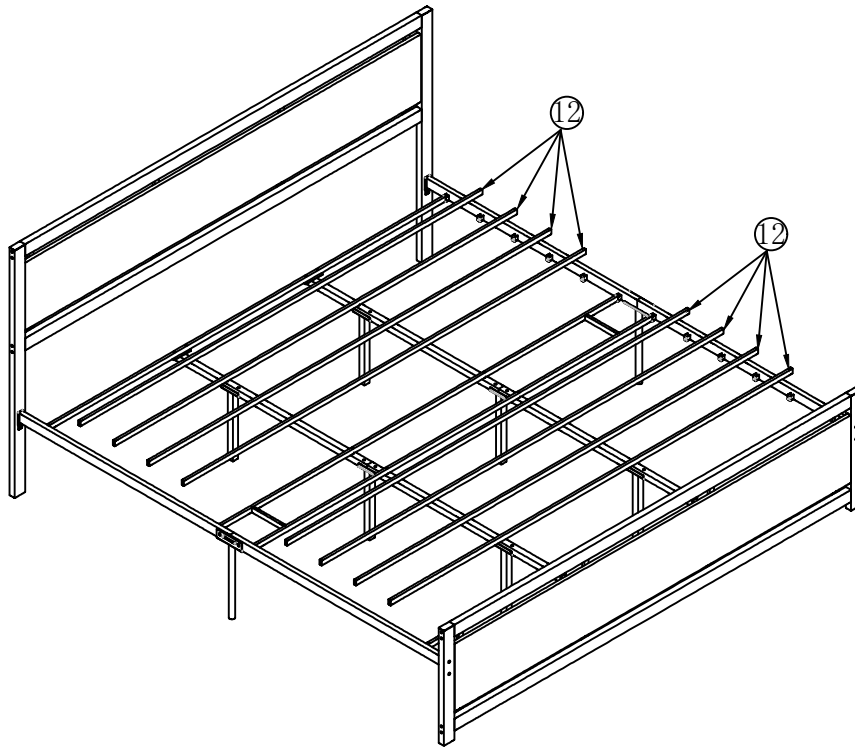

Step13

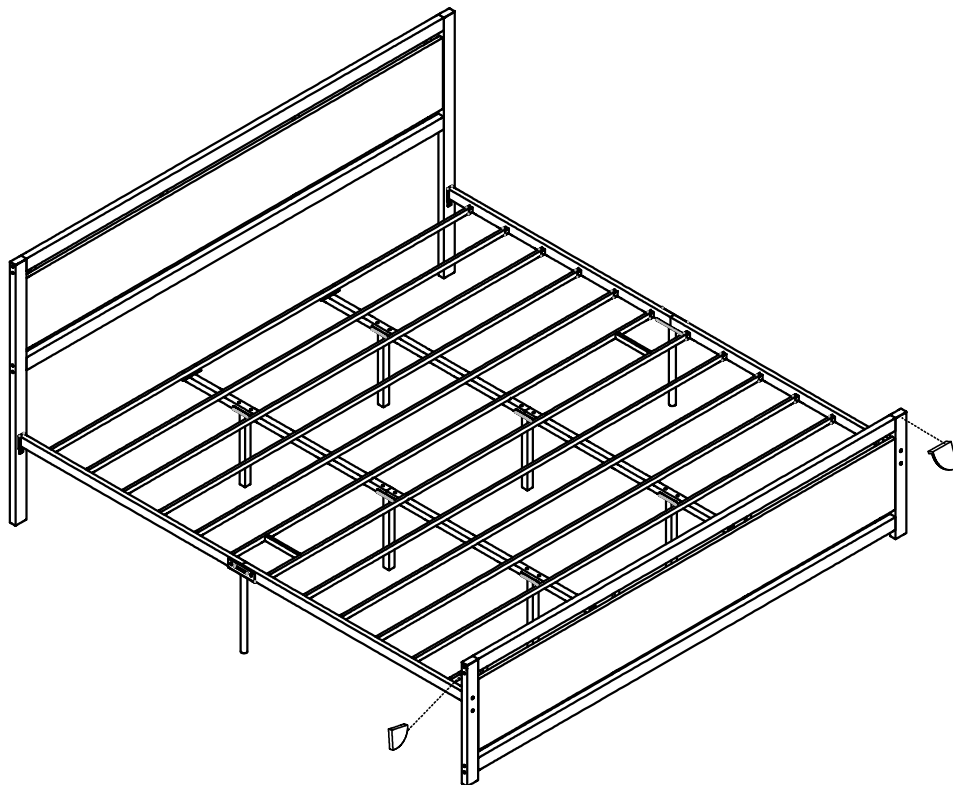

Turn over the rubber anti-collision block, tear off the paper, and stick 3M glue on the foot of the bed.