

## 1.fixed the handrail




**2.fixed the steps with the frame**



### 3. tighten the bracket



#### **4.fixed the Hydraulic rod**

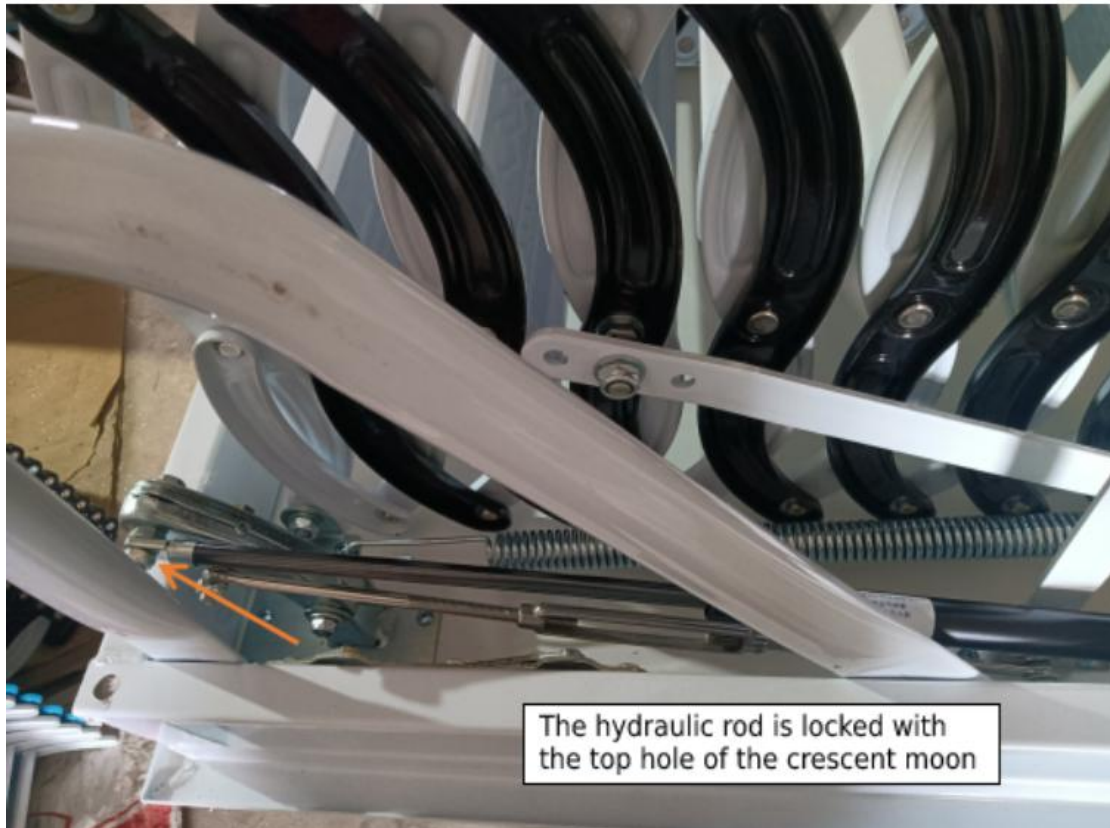



**5.Insert the pry bar into the middle of the crescent and the frame, move the crescent upward and insert the screw hole into the second fulcrum hole under the crescent and lock the nut with the fixing screw, and the installation is completed.**



# Installation Steps

1. Insert the cable rod into the lock hole



2. Lock the lever with the pin



3. Fasten the screws to the four corners of the frame and tighten



4. Use the rope to pull the ladder up and fasten the hole



5. Screw on the triangle plate and tighten the nut



6. Installed

