


Hall tree

Assembly Instructions - Please keep for future reference

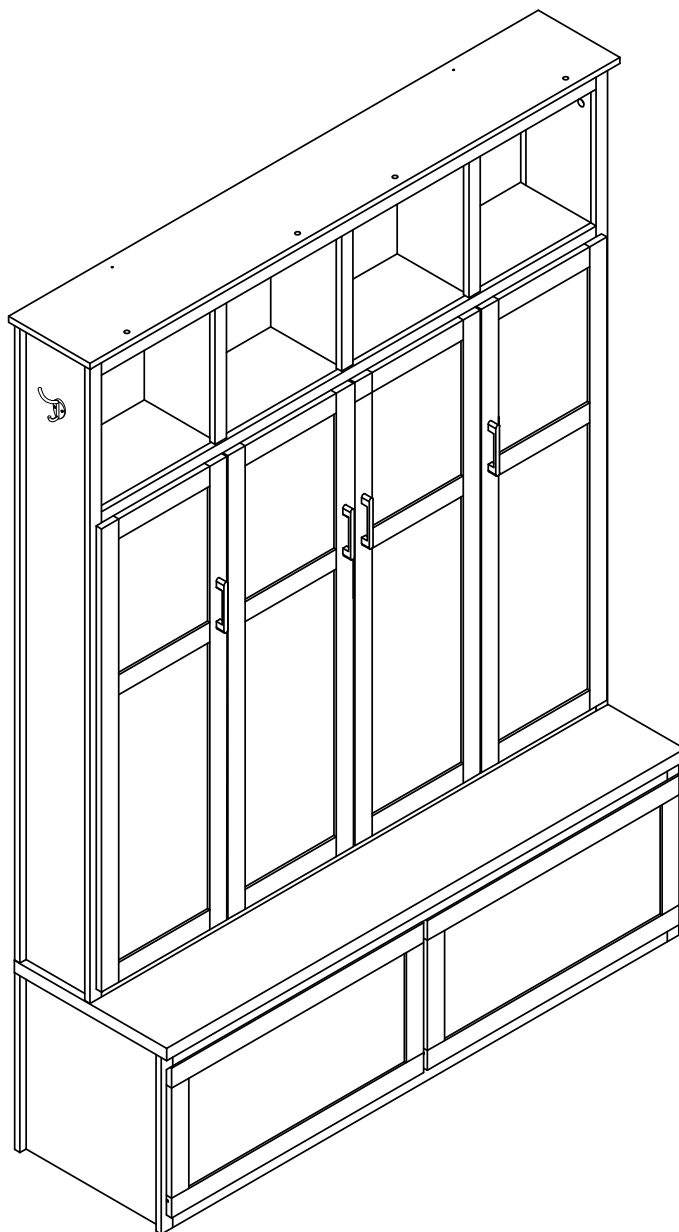

Dimensions

Width-54.72inch
Depth-15.75inch
Height-74.80inch



WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important-Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning –
please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti-tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

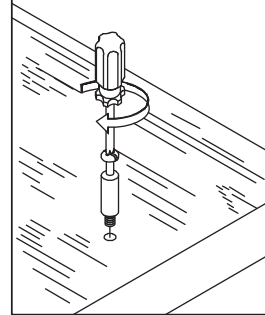

Step 2

Push the male camlock into the entry hole.

2

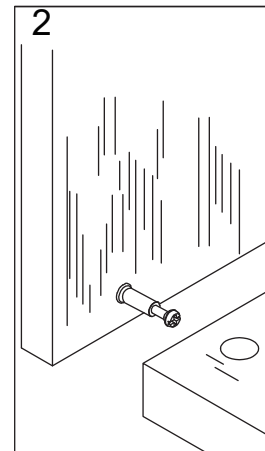


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

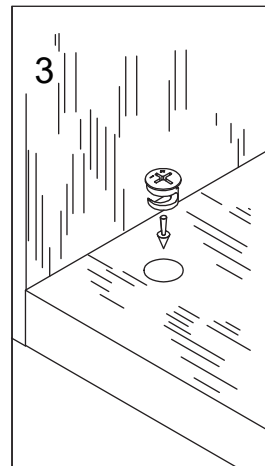


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

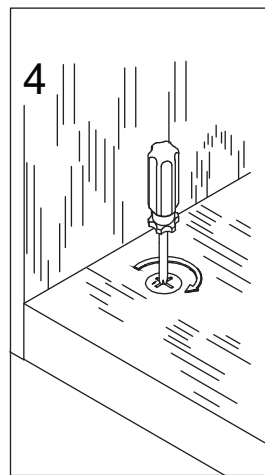













Assembly Instructions

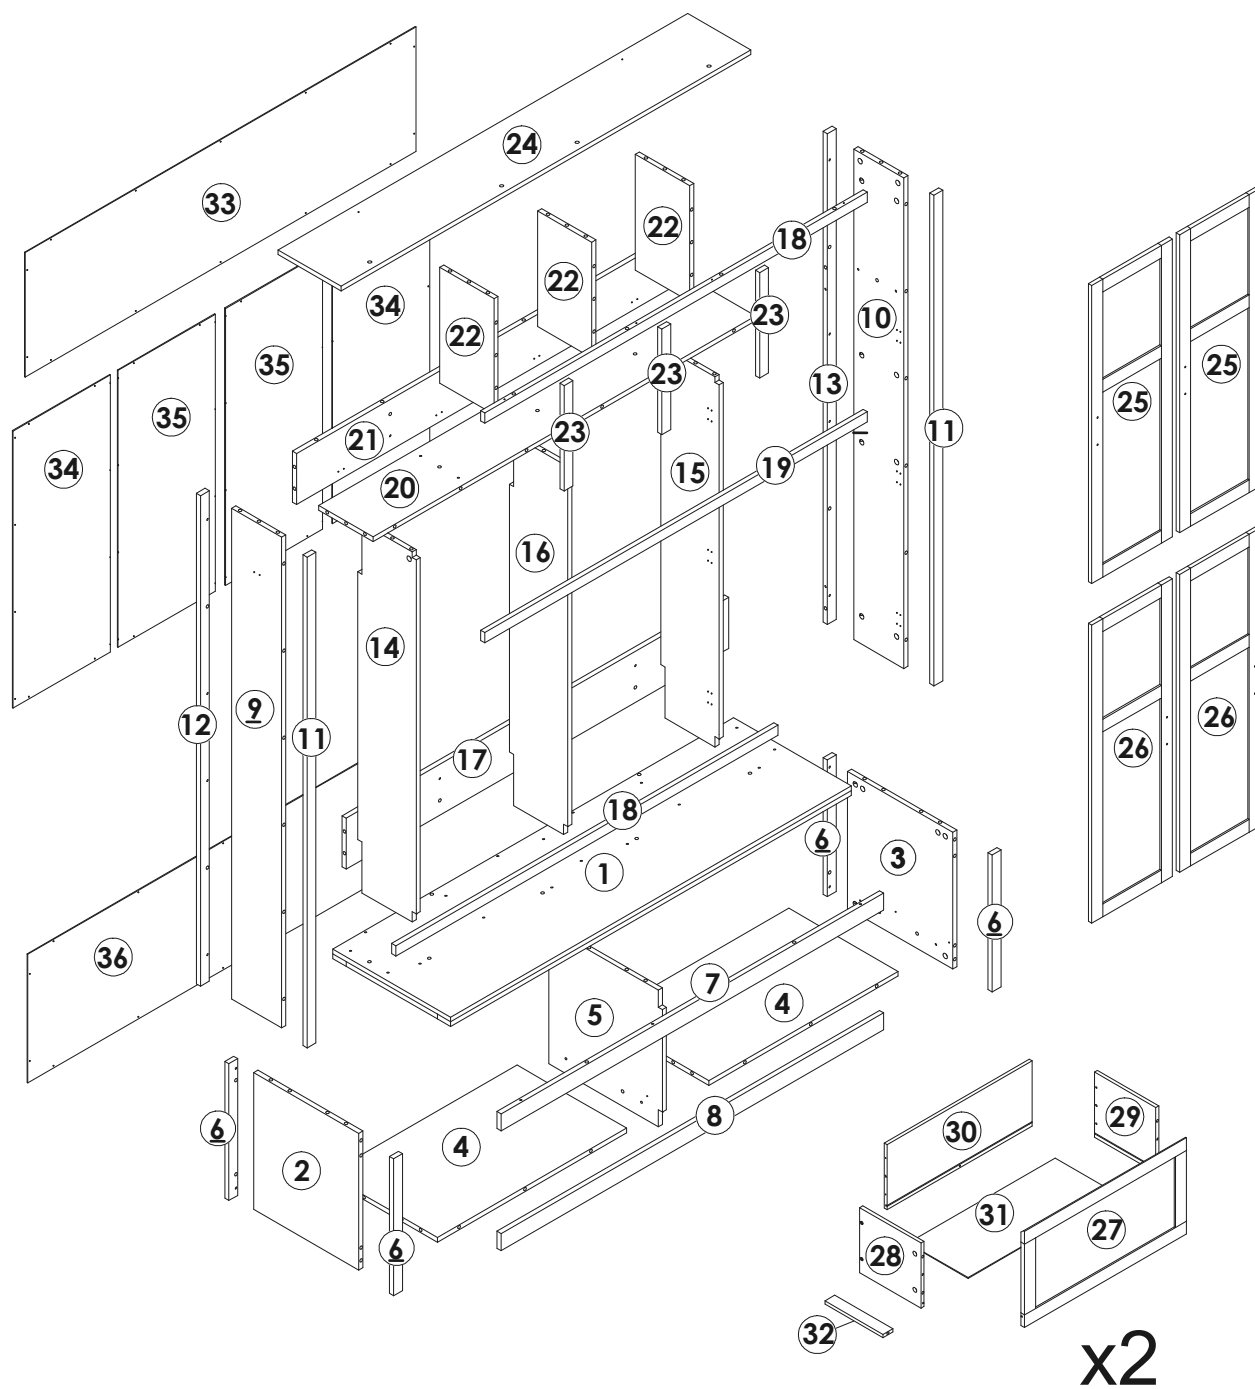

Components - Panels

Please check you have all the panels listed below









BOX1

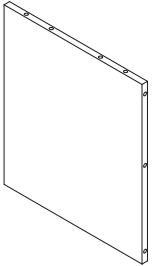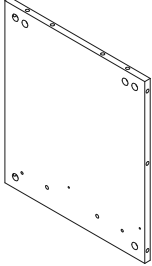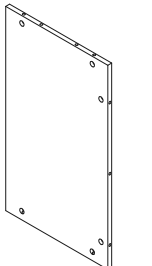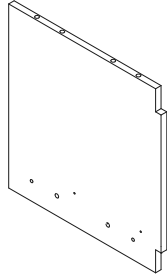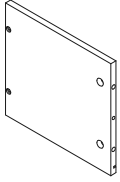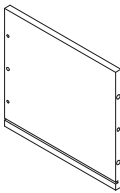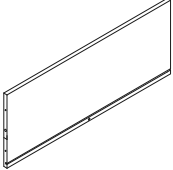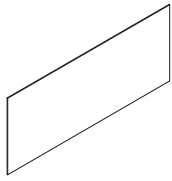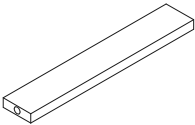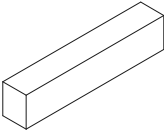				
② x1 402x357x14mm	③ x1 402x357x14mm	④ x2 642x371x14mm	⑤ x1 402x385x14mm	⑥ x4 402x30x14mm
				
⑭ x1 1088x198x14mm	⑮ x1 1088x198x14mm	⑯ x1 1088x198x14mm	⑳ x3 340x184x14mm	㉓ x3 310x30x14mm
				
㉘ x2 250x230x12mm	㉙ x2 250x230x12mm	㉚ x2 592x230x12mm	㉛ x2 600x245x2.5mm	㉜ x2 237x40x12mm
				
hardware kit x1				

Components - Panels

Please check you have all the panels listed below


BOX2

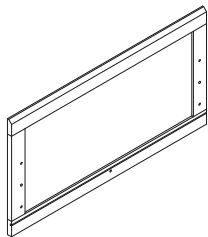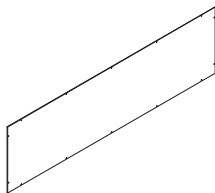				
① x1 1360x400x28mm	⑦ x1 1298x50x14mm	⑧ x1 1298x50x14mm	⑨ x1 1442x170x14mm	⑩ x1 1442x170x14mm
				
⑪ x2 1442x30x14mm	⑫ x1 1442x30x14mm	⑬ x1 1442x30x14mm	⑰ x1 1298x150x14mm	⑱ x2 1298x30x14mm
				
⑲ x1 1298x30x14mm	⑳ x1 1298x184x14mm	㉑ x1 1298x150x14mm	㉔ x1 1390x214x28mm	㉕ x2 1052x329x14mm
				
㉖ x2 1025x329x14mm	㉗ x2 661x340x14mm	㉓ x1 1326x366x2.5mm	㉔ x2 814x330x2.5mm	㉕ x2 814x330x2.5mm

Components - Fittinas

Please check you have all the panels listed below















BOX2

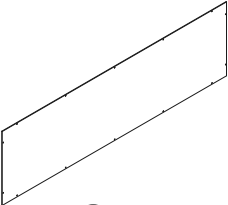 <p>36x1 1326x378x2.5mm</p>				
--	--	--	--	--

Components - Fittings




Please check you have all the fittings listed below

Note : The quantities below are the correct amount to complete the assembly . In some cases more fitting may be supplied than are required,

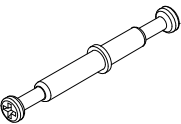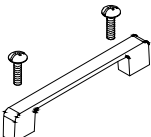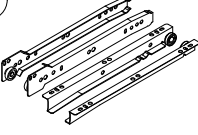

<p>(A)</p>  <p>Ø6*34mm Cam Bolt x 90+2</p>	<p>(B)</p>  <p>Ø15*9mm Cam lock x 94+2</p>	<p>(C)</p>  <p>Ø6*64mm Cam lock x 2</p>	<p>(D)</p>  <p>8*30mm Dowel x 75+2</p>	<p>(E)</p>  <p>8*50mm Dowel x 2</p>
<p>(F)</p>  <p>6*30mm Dowel x 8</p>	<p>(G)</p>  <p>4*50mm Screw x 30+2</p>	<p>(H)</p>  <p>4*35mm Screw x 14+2</p>	<p>(I)</p>  <p>Ø35 Hinge x 6</p>	<p>(J)</p>  <p>Ø35 Hinge x 6</p>
<p>(K)</p>  <p>3.5*15mm Screw x 72+2(for hinge)</p>	<p>(L)</p>  <p>Clothes-Hook x 6</p>	<p>(M)</p>  <p>3.5*15mm Screw x 12+1</p>	<p>(N)</p>  <p>4*18mm Handle x 4set</p>	<p>(O)</p>  <p>3.5*15mm Screw x64+2</p>
<p>(P)</p>  <p>Anti-Tip Kit x 2set</p>	<p>(Q)</p>  <p>3*12mm Screw x 16+2</p>	<p>(R)</p>  <p>250mm Drawer slides x 2</p>	<p>(S)</p>  <p>Allen key x 1</p>	

Assembly Instructions

Step 1

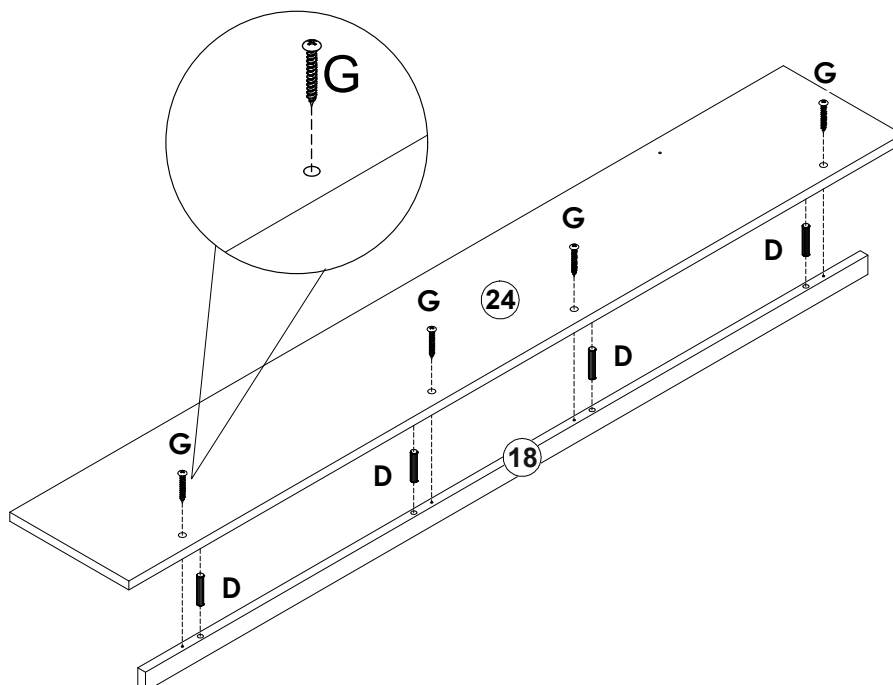


Step 2






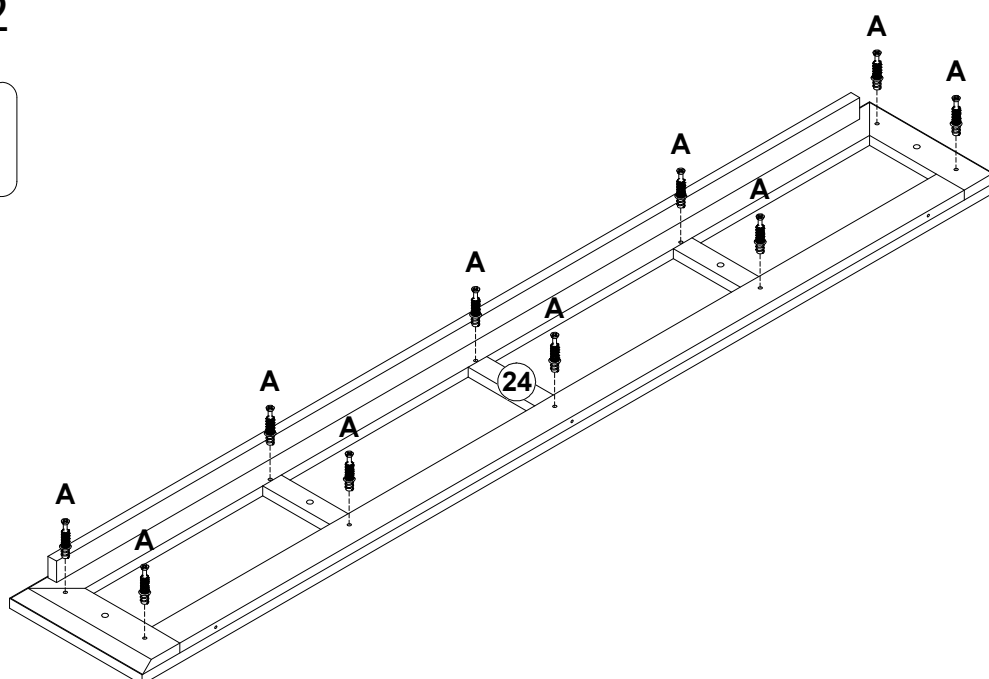


Assembly Instructions

Step 3


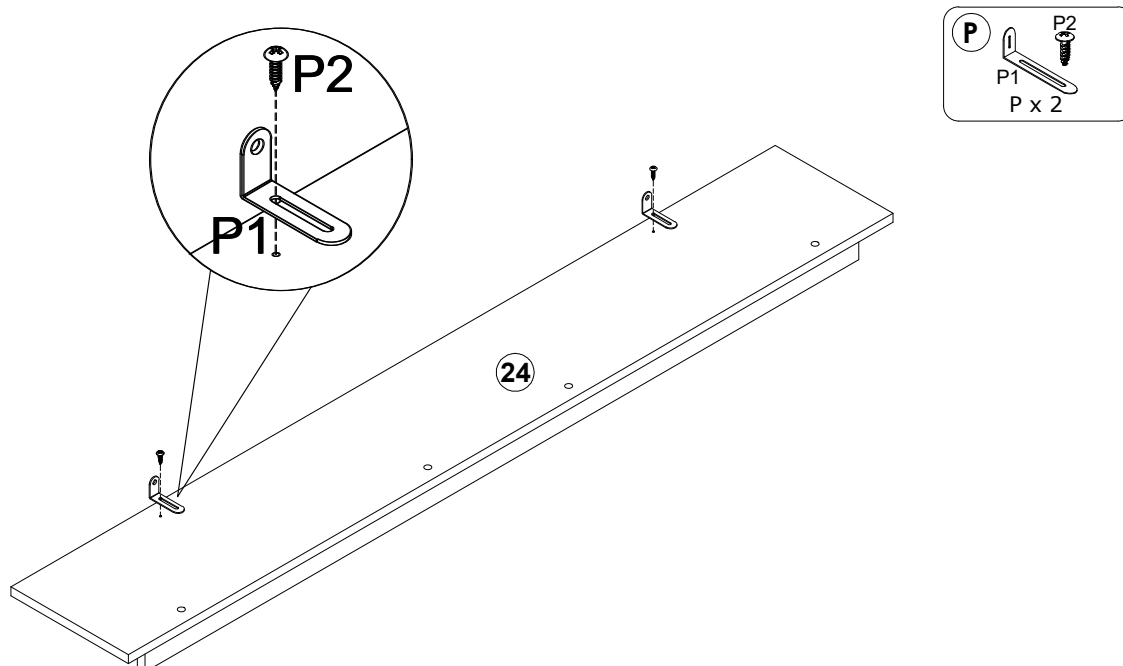


Step 4

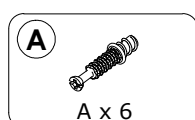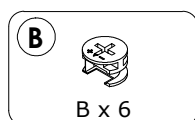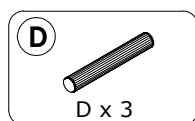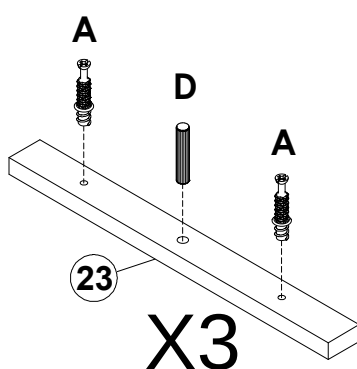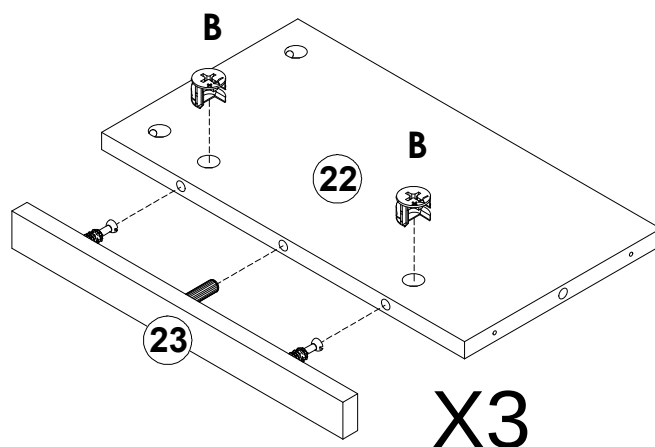
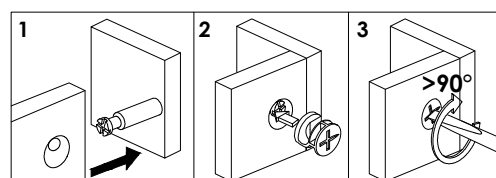


Assembly Instructions

Step 5




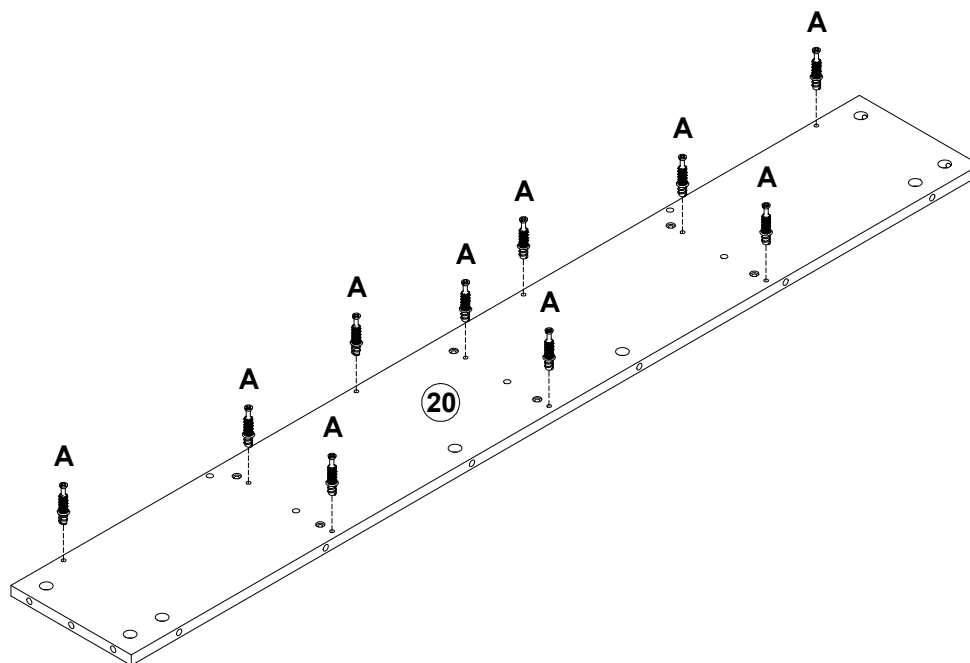


Step 6



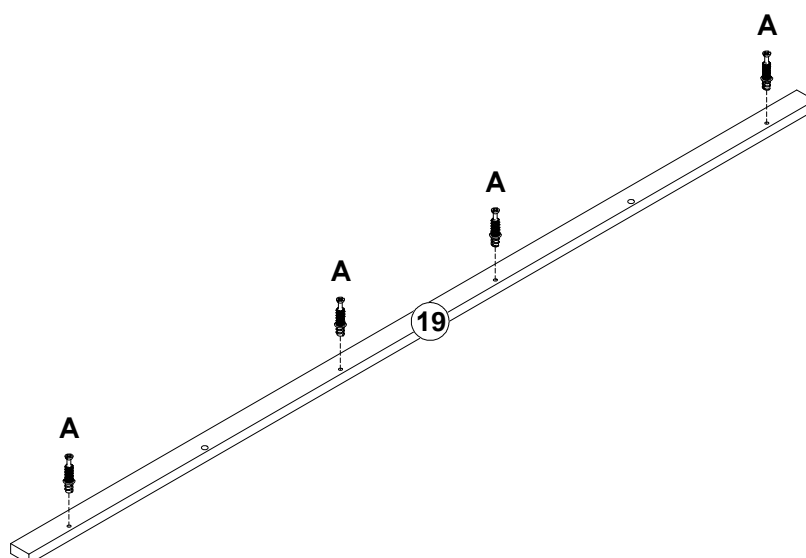


Assembly Instructions

Step 7

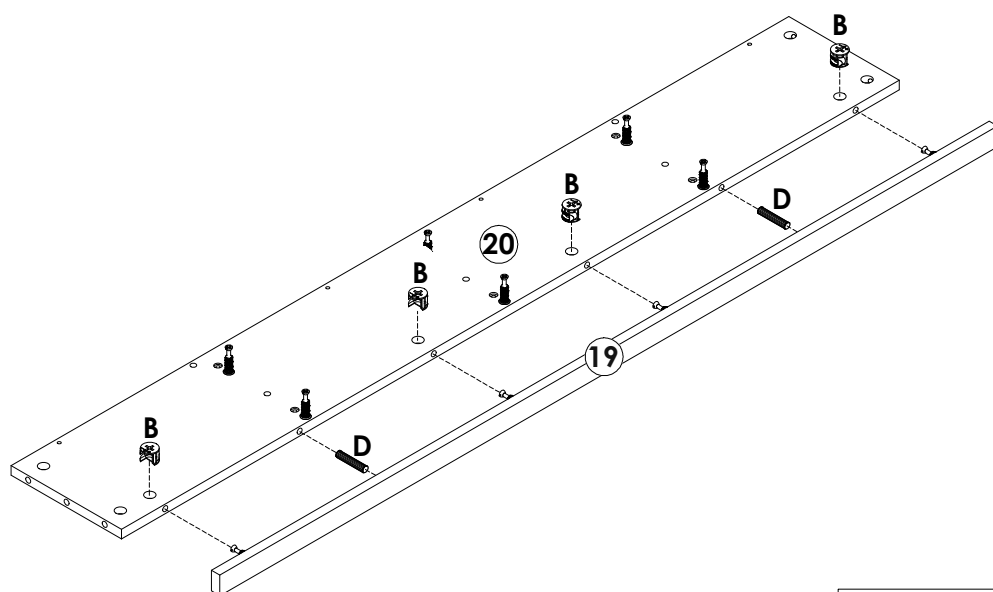

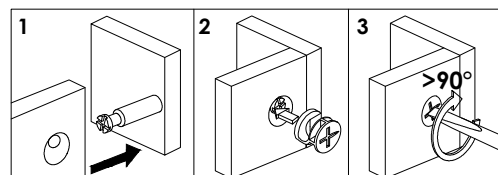


Step 8



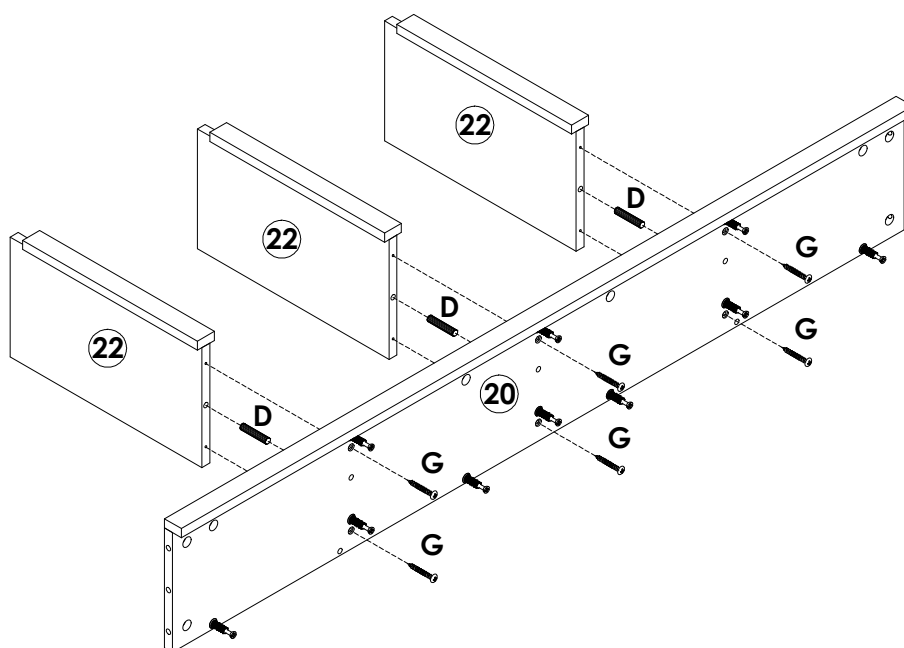


Assembly Instructions

Step 9

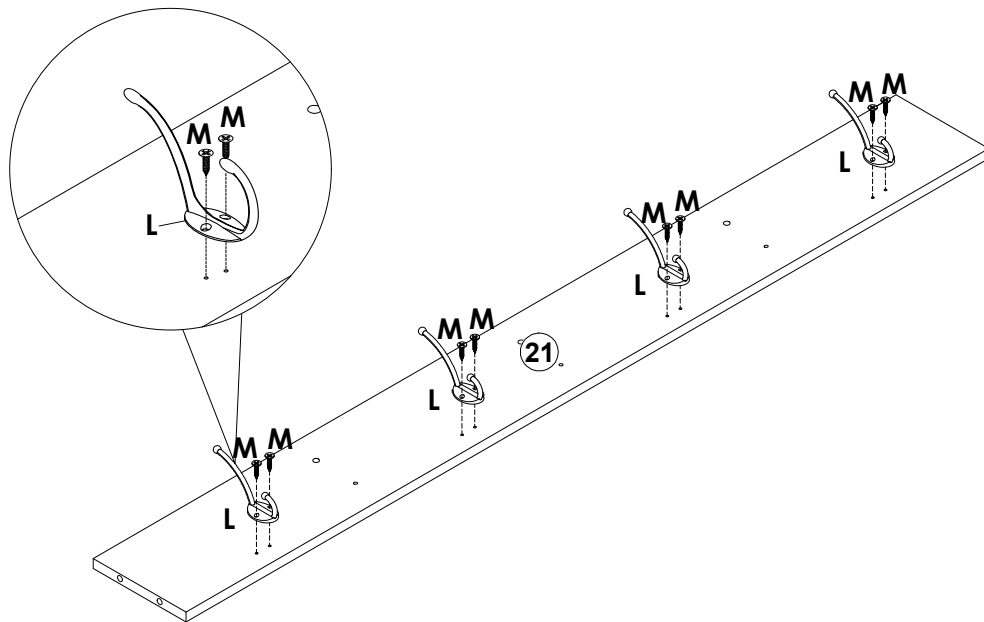





Step 10

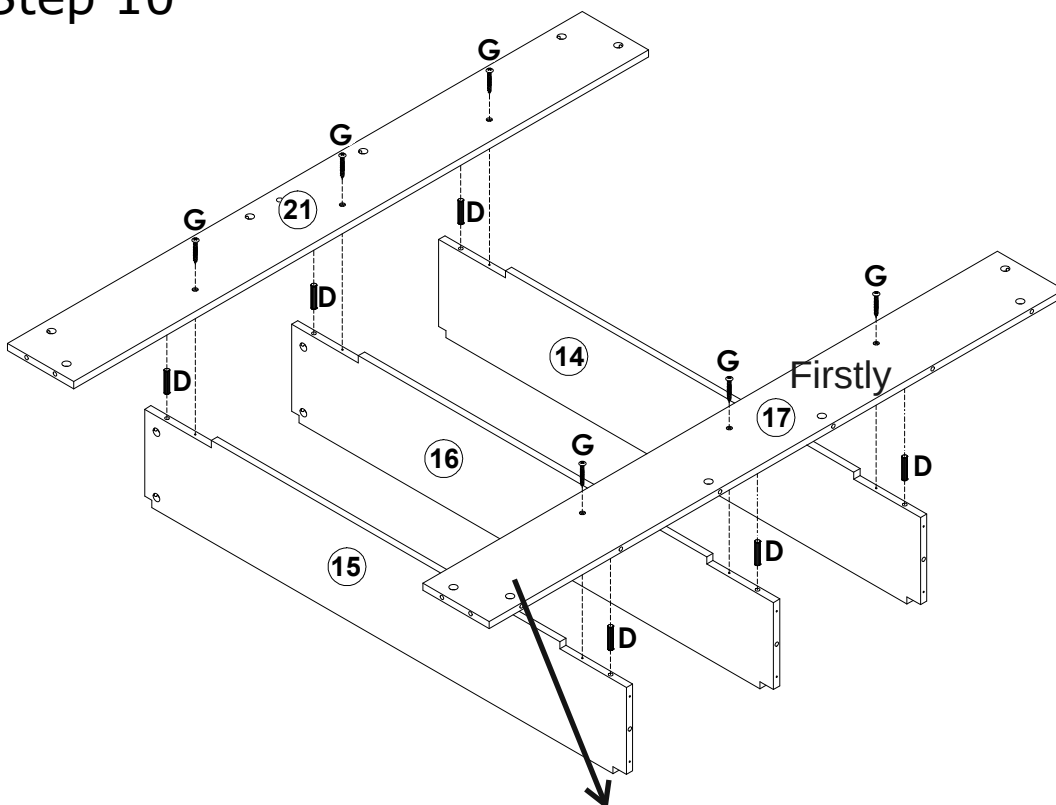

"Requires 2 people to assemble, install the wooden plug "D" to secure it firstly. Please be careful."



Assembly Instructions

Step 11



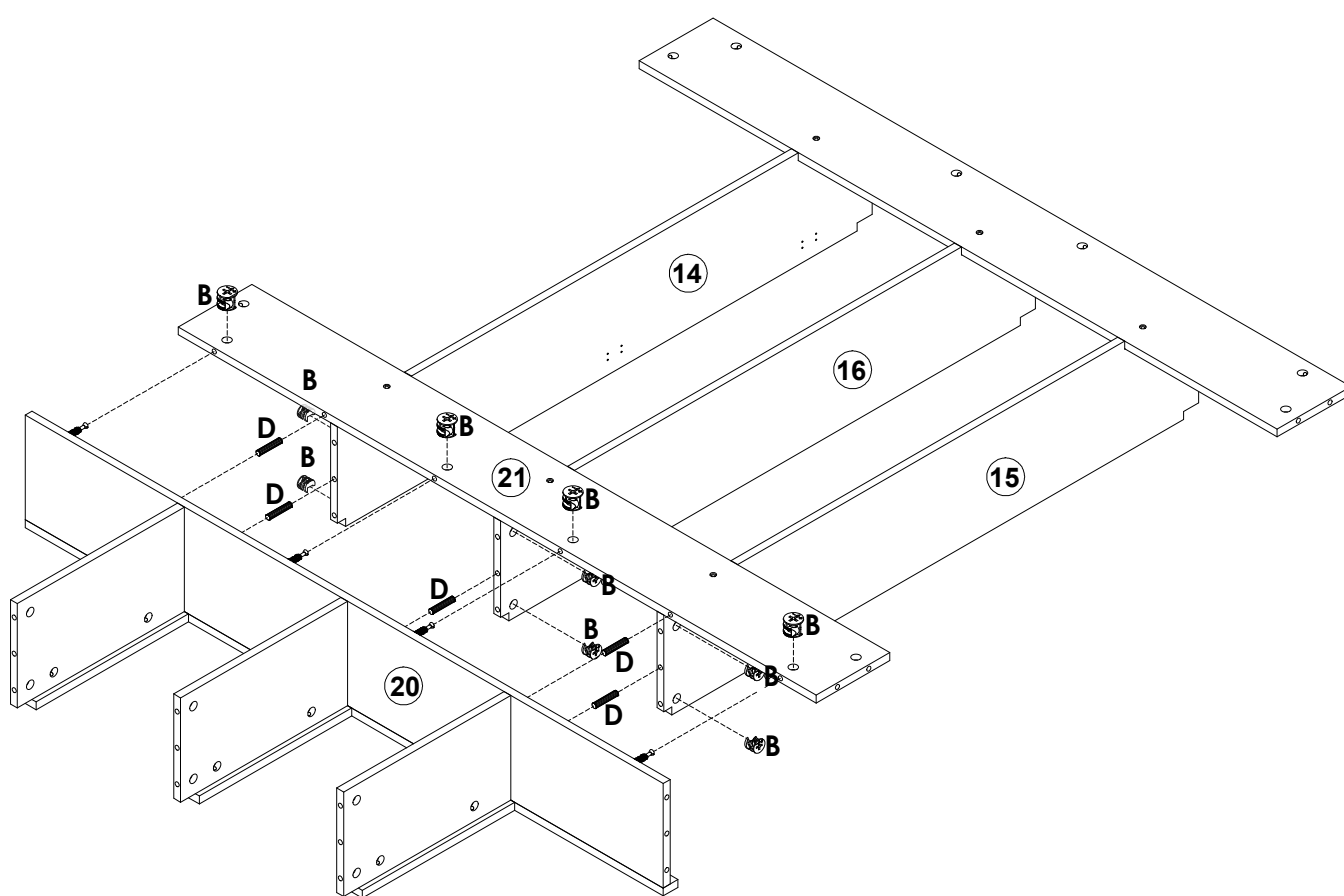
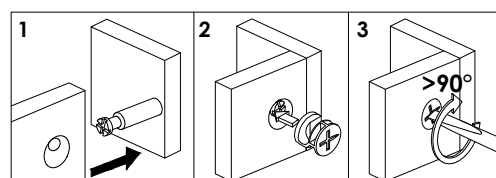


Assembly Instructions

Step 12



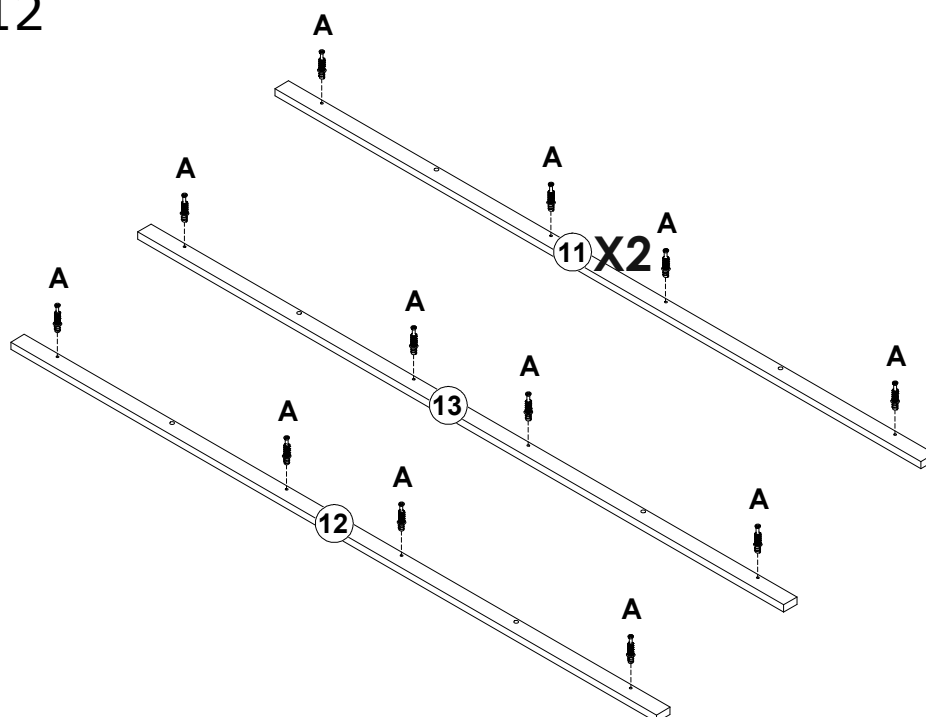



Step 13

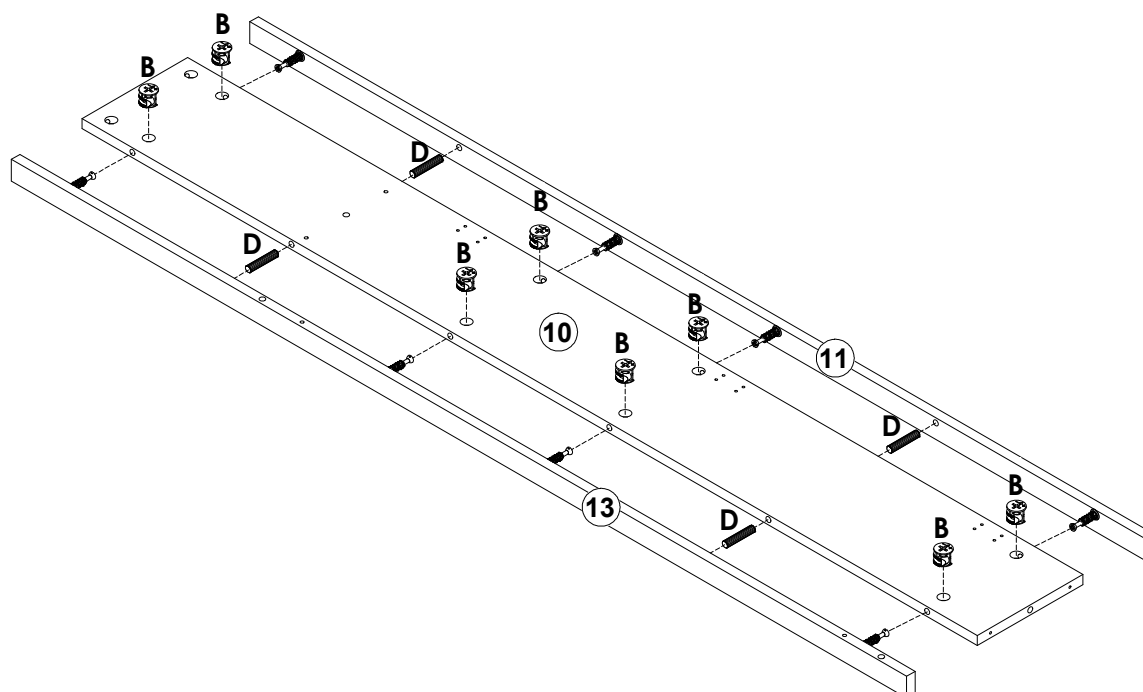
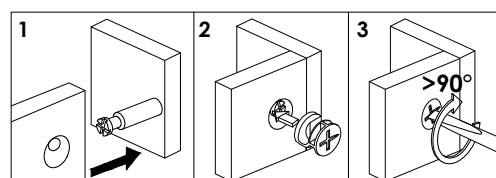


Assembly Instructions

Step 14

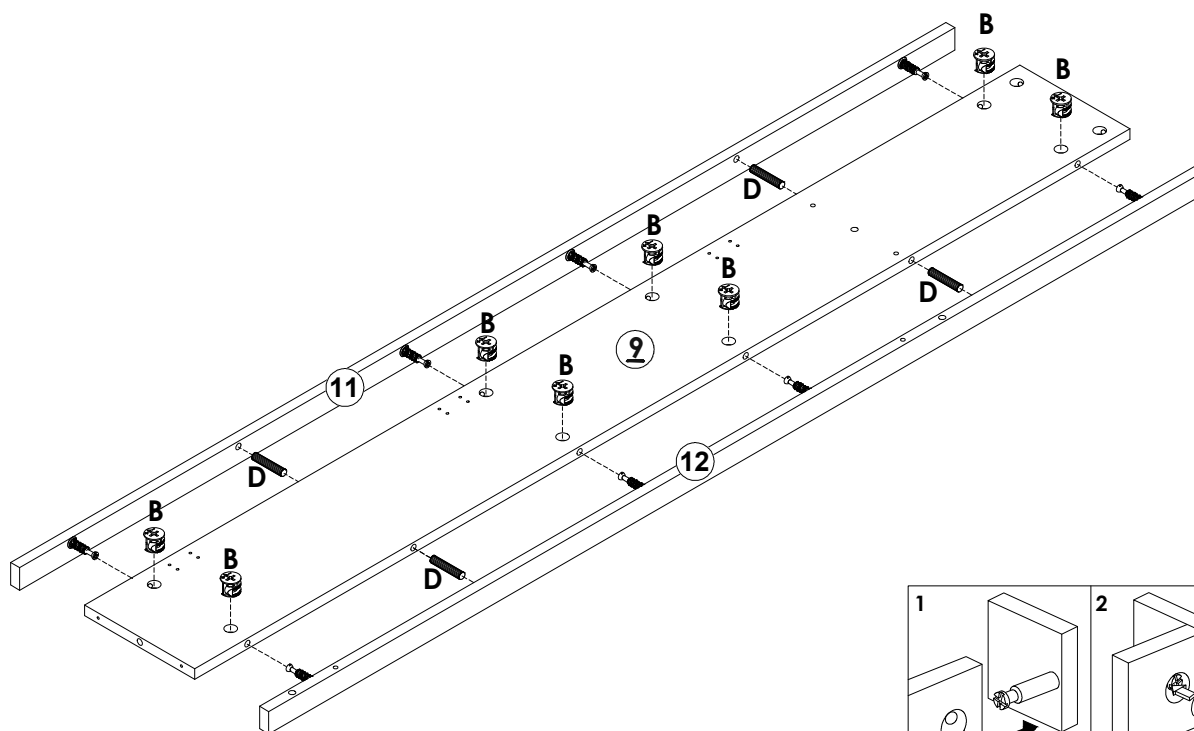

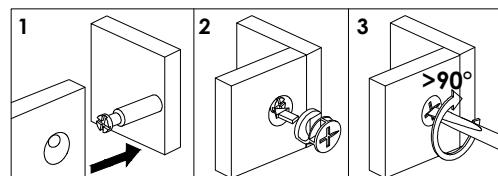


Step 15

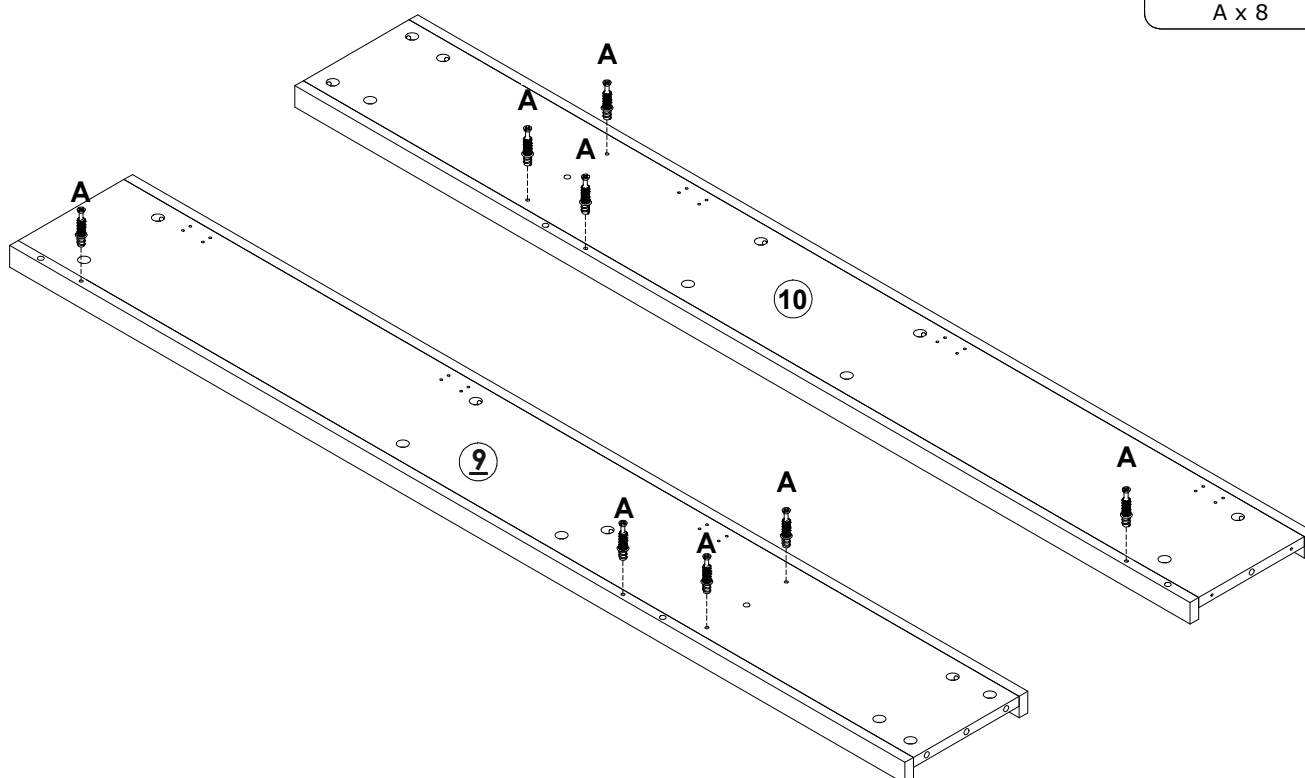


Assembly Instructions

Step 16




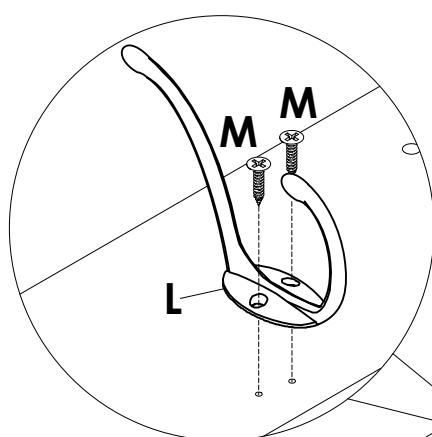


Pay attention to flipping the board to prevent damage.

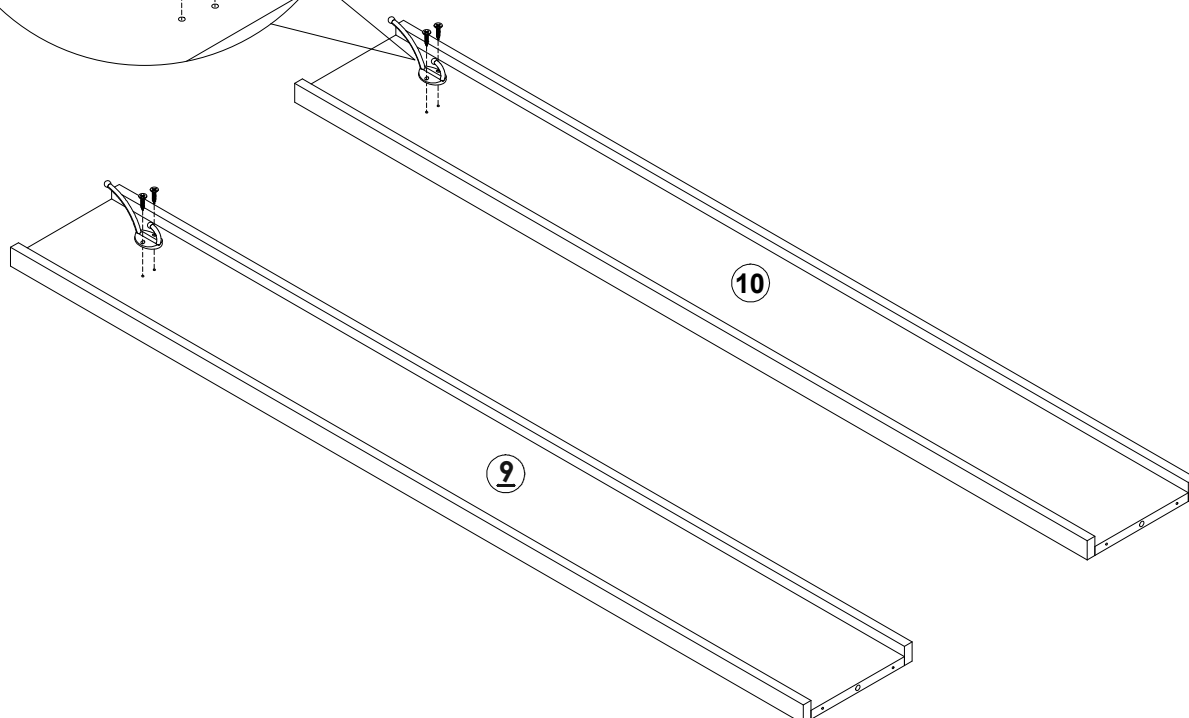





Assembly Instructions

Step 17

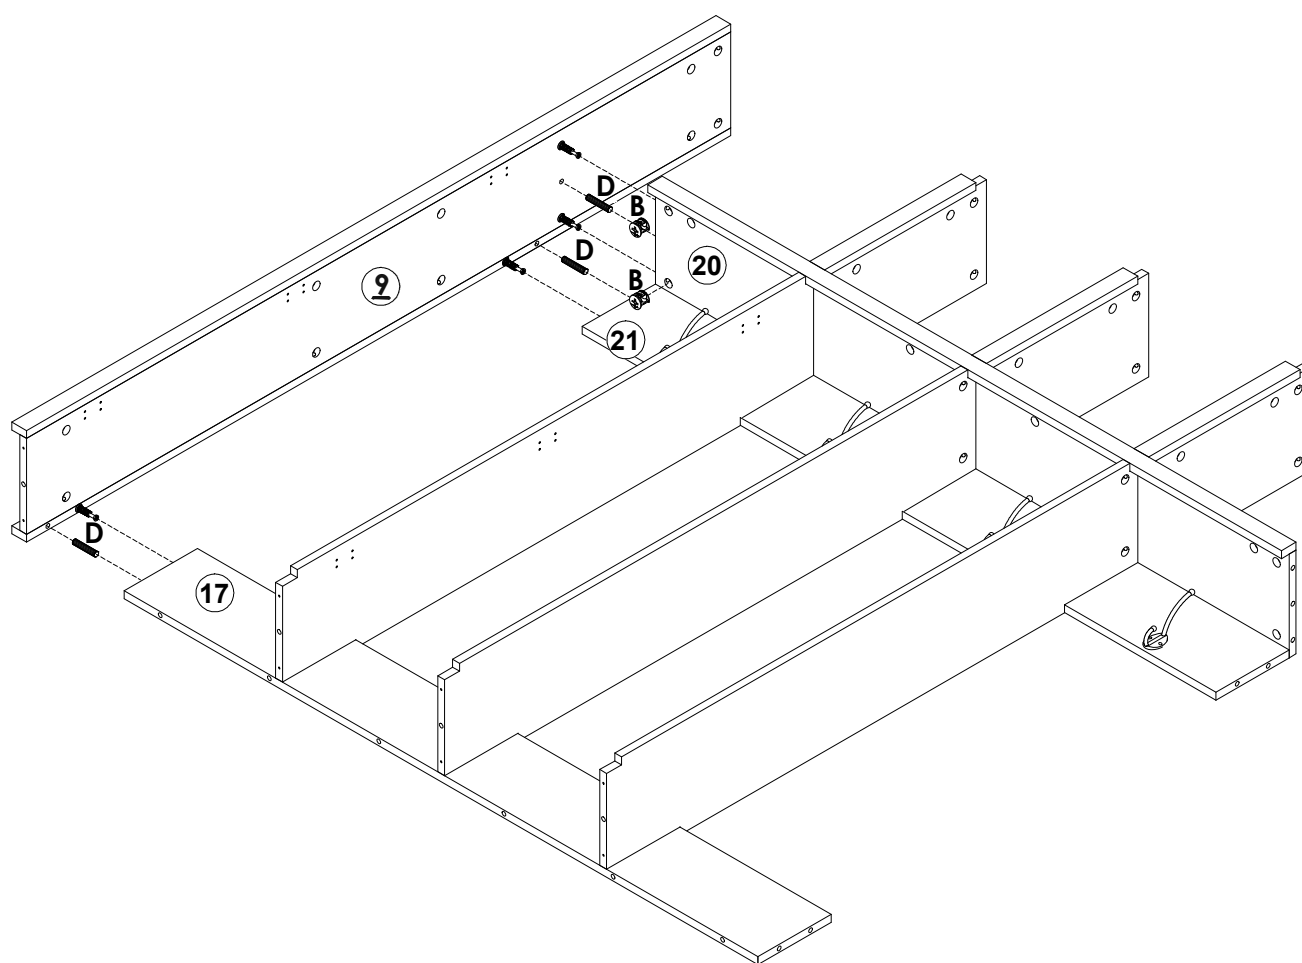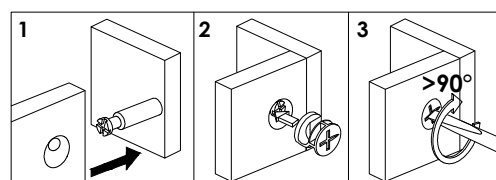





Assembly Instructions

Step 18

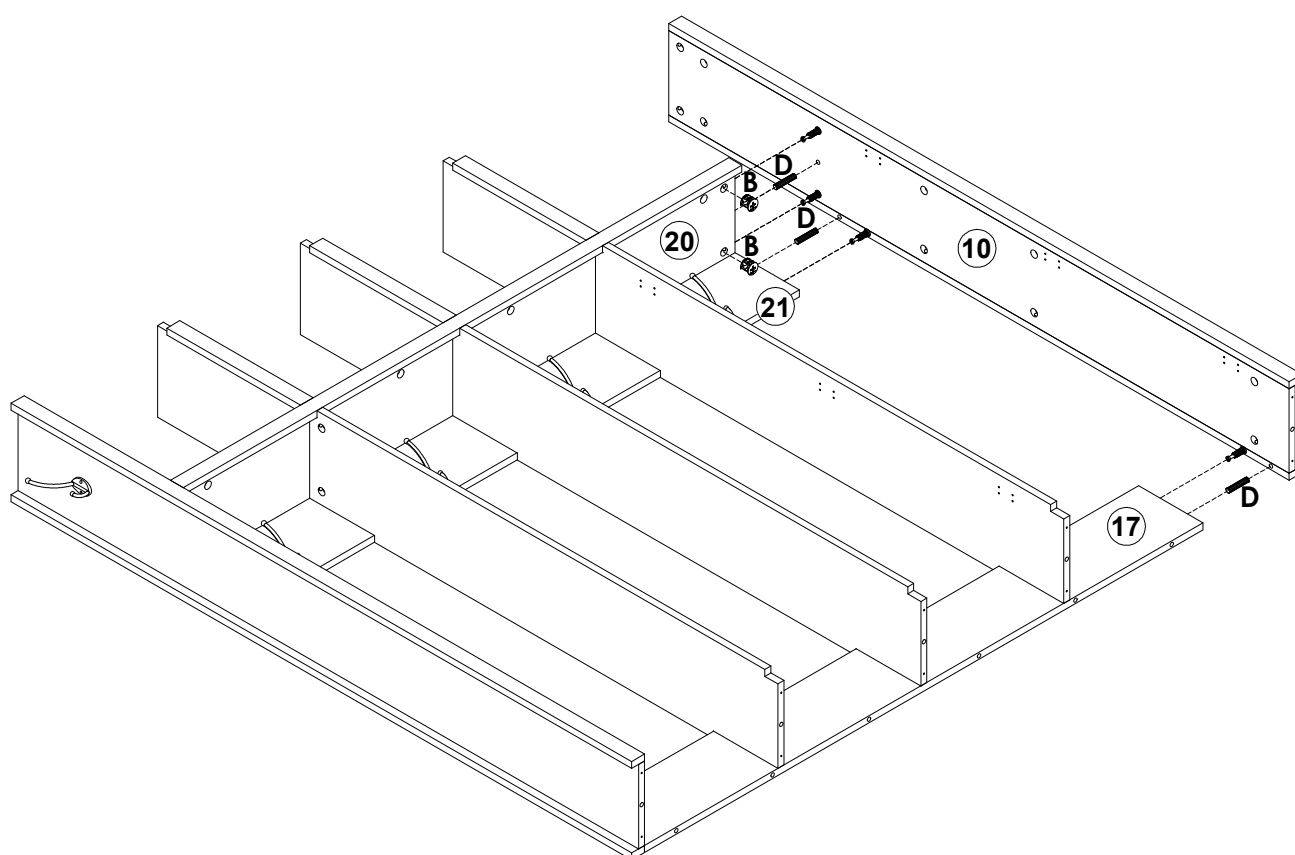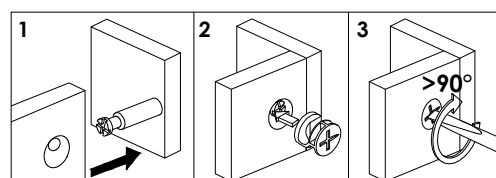



Assembly Instructions

Step 19

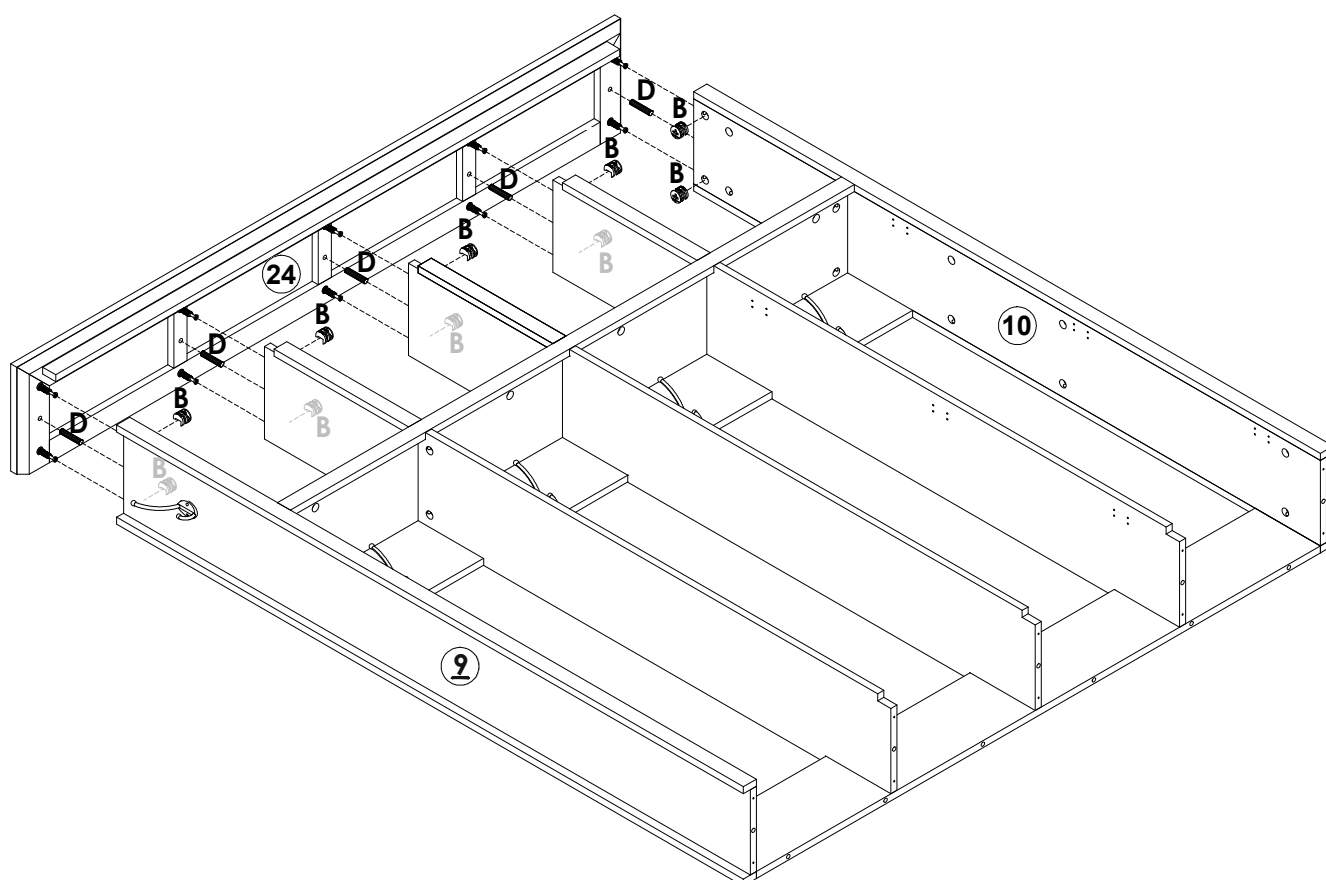
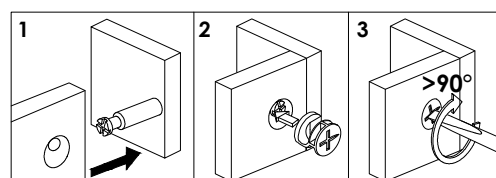


Assembly Instructions

Step 20



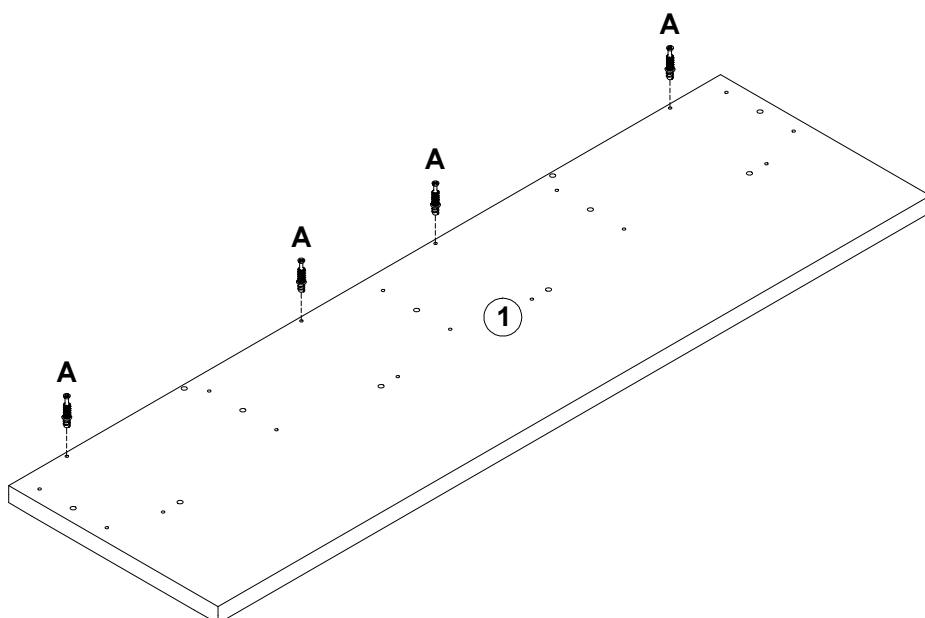


Step 21



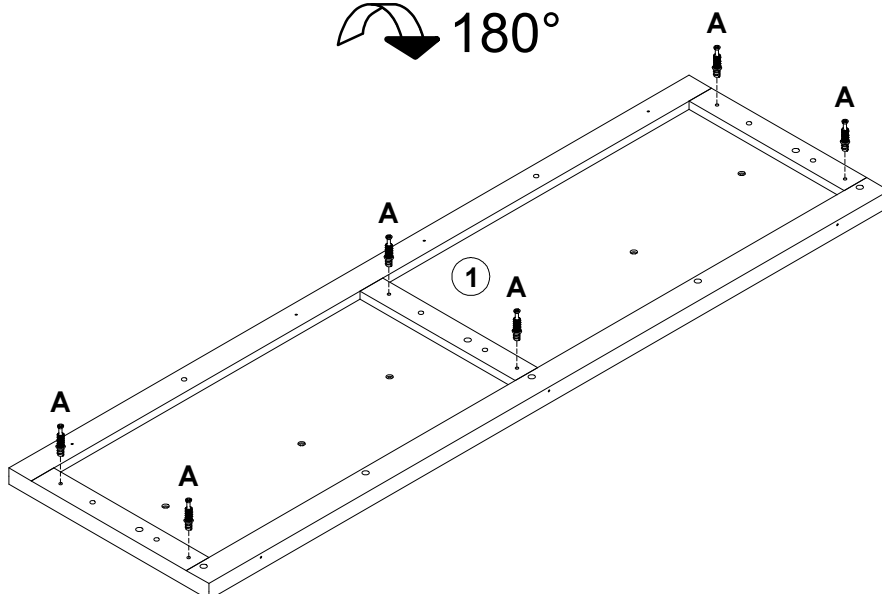


Assembly Instructions

Step 22

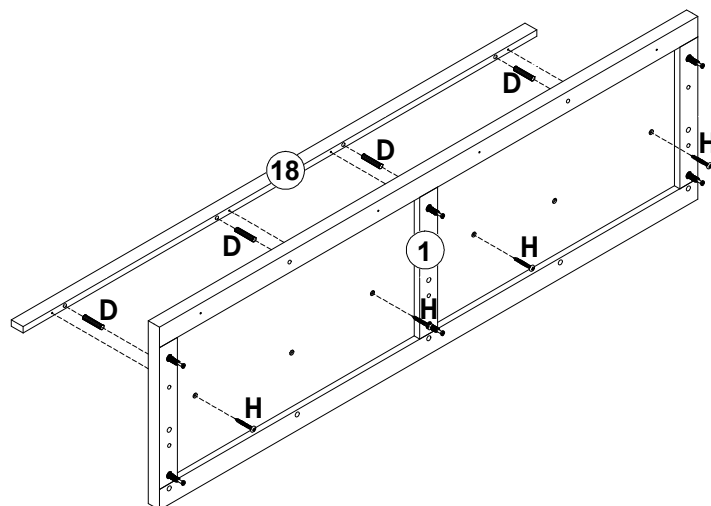

Step 23


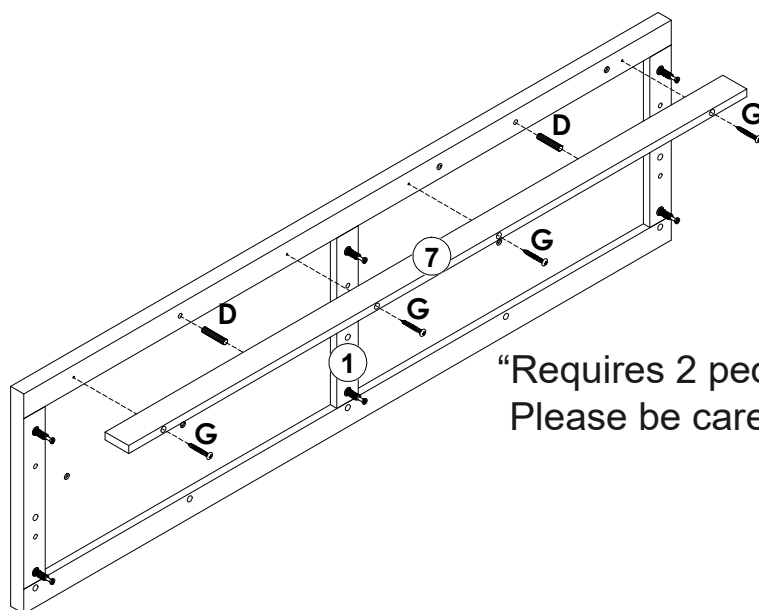


"Requires 2 people to assemble,
Please be careful."

Assembly Instructions



Step 24

"Requires 2 people to assemble,
Please be careful."




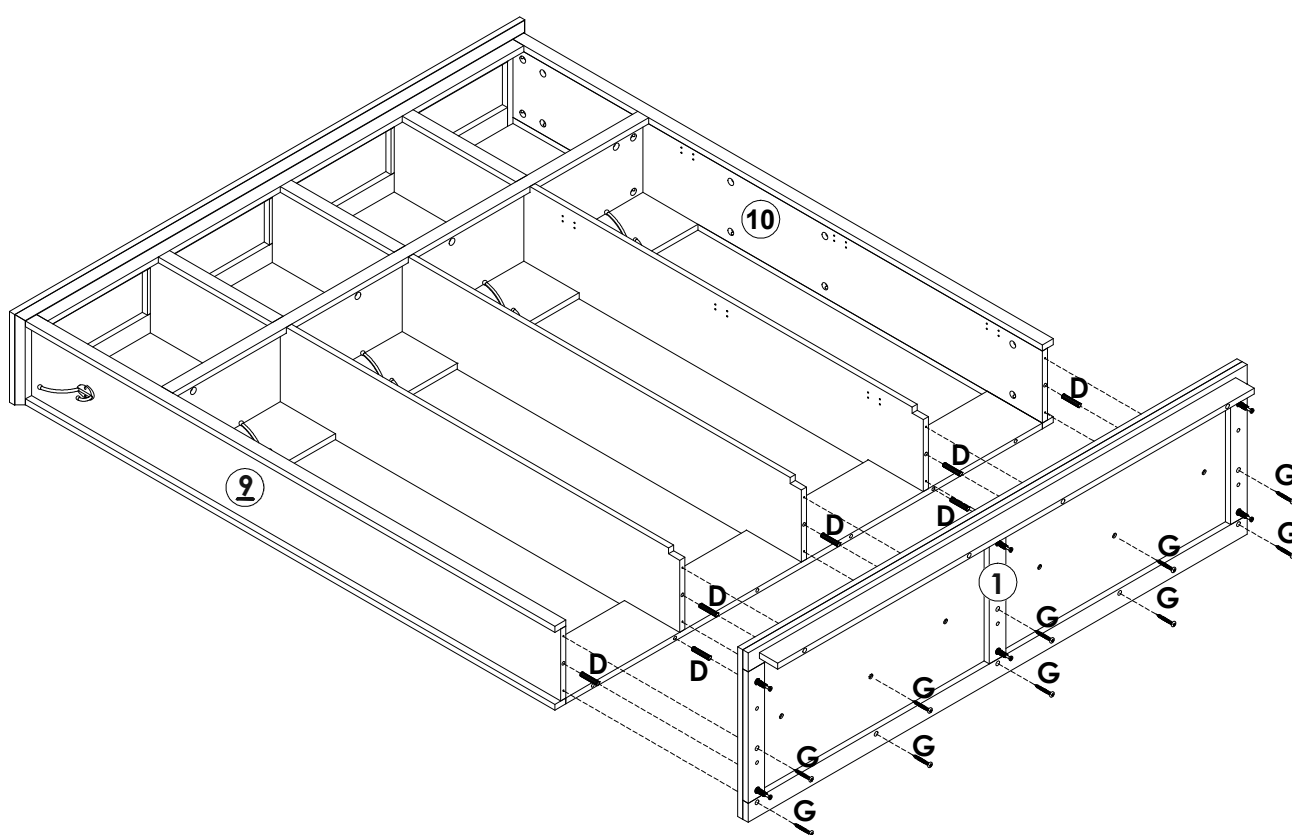


Assembly Instructions

Step 25




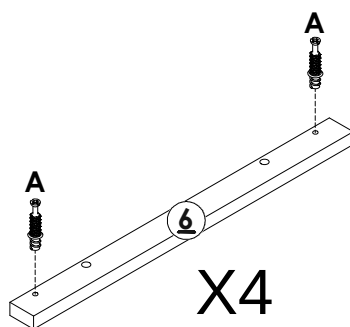


Step 26

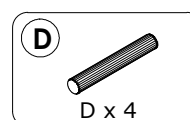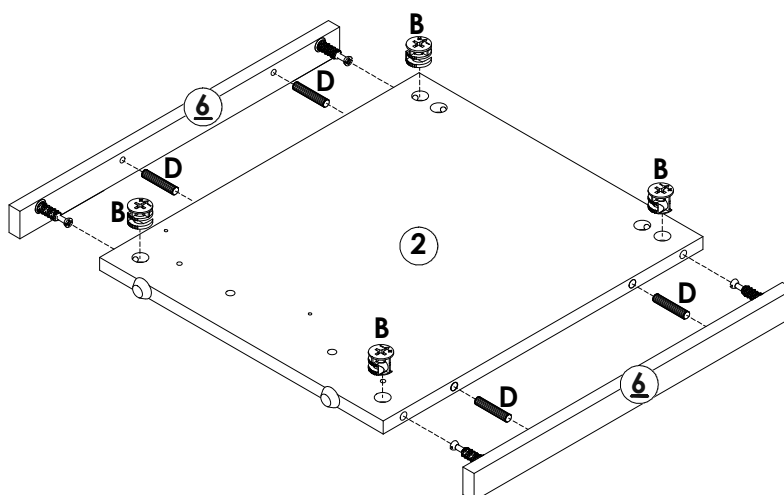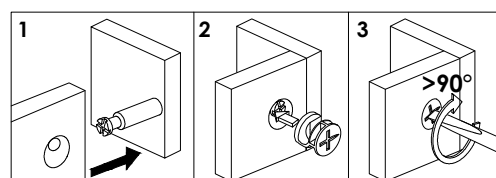







Assembly Instructions

Step 27

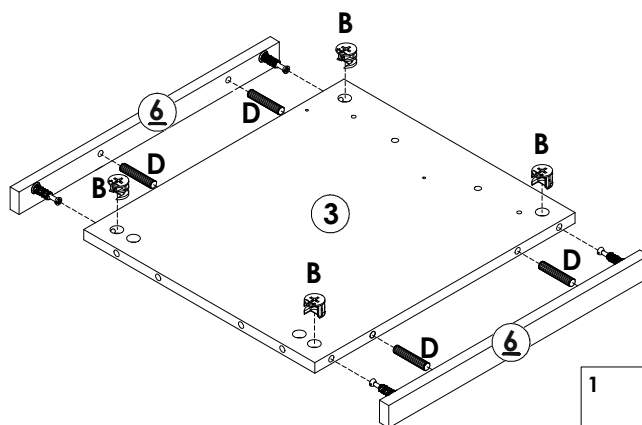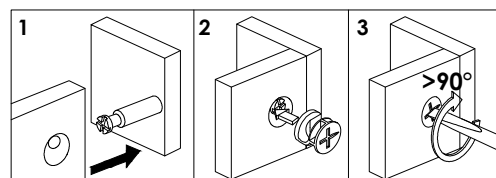



Step 28

"Assemble as shown."

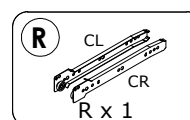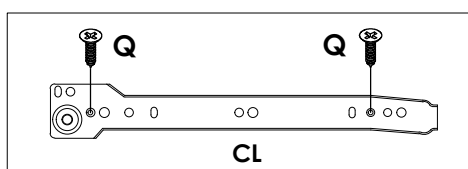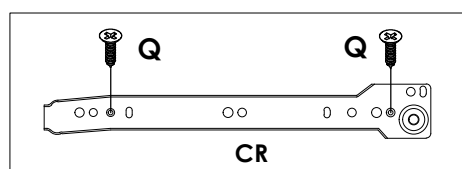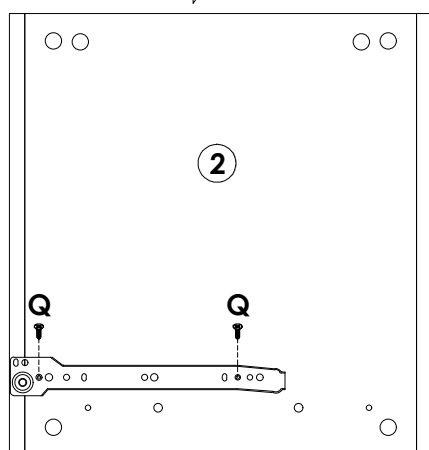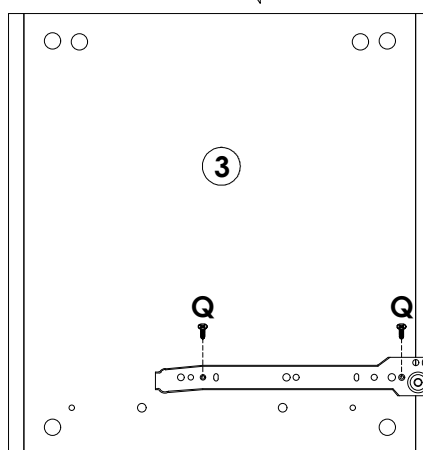

Assembly Instructions

Step 29



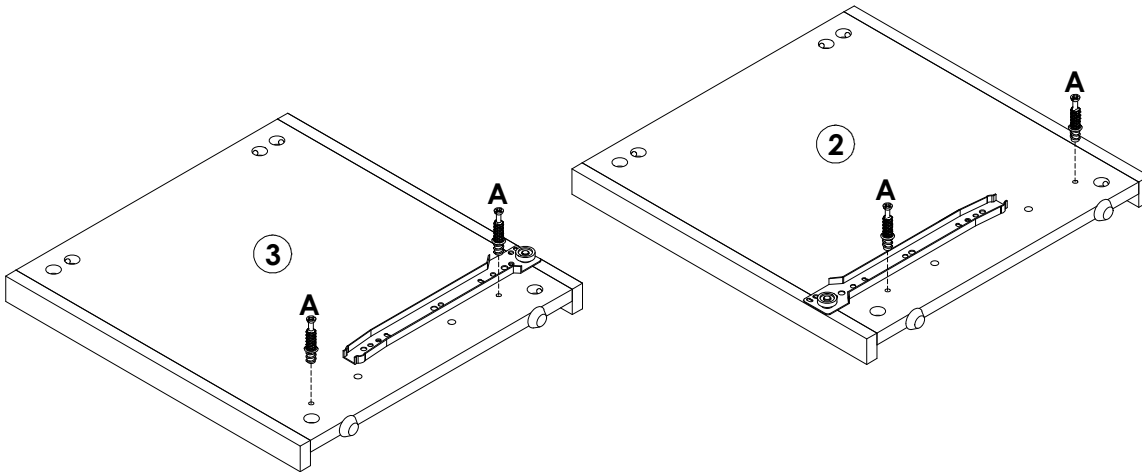


Step 30

“Assemble as shown.”







Turn over part ⑤ to install on the both sides.

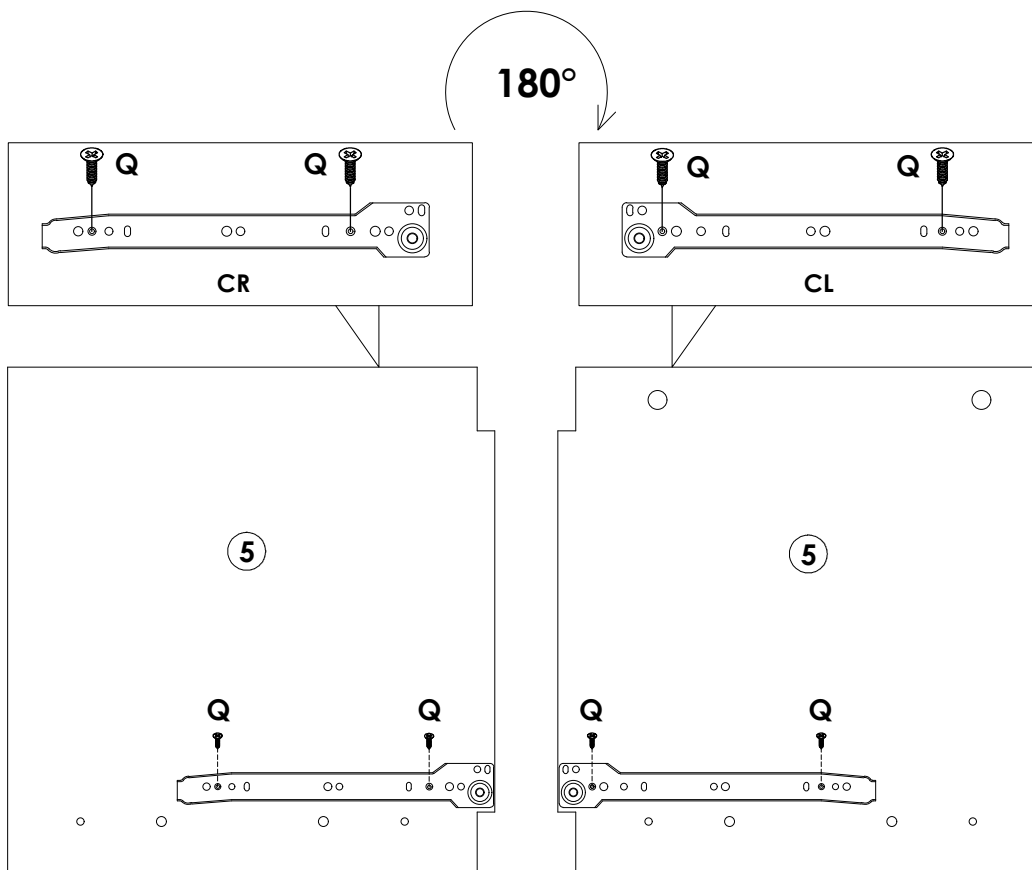






Assembly Instructions

Step 31

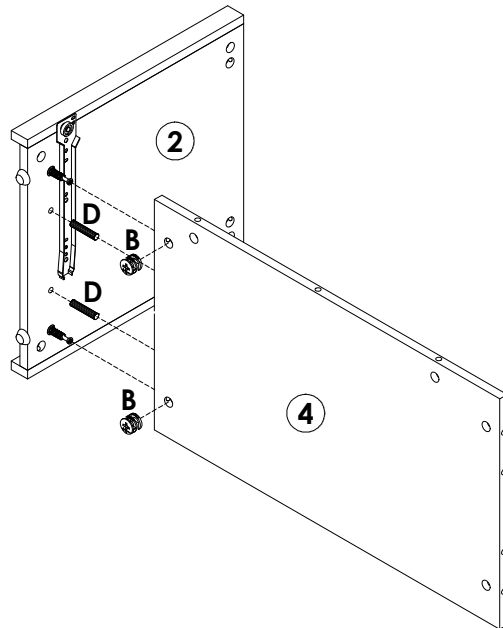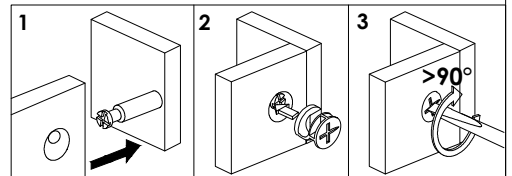




Step 32

Please Insert the long end from the right side first.

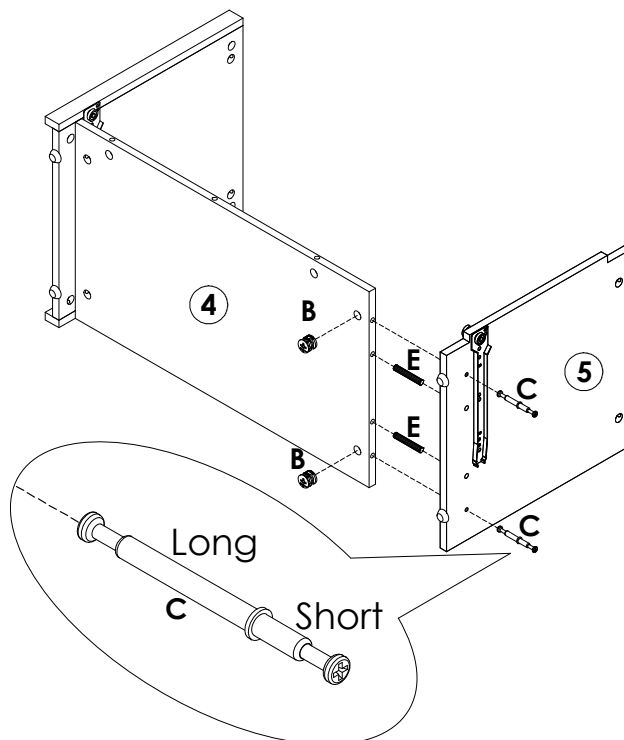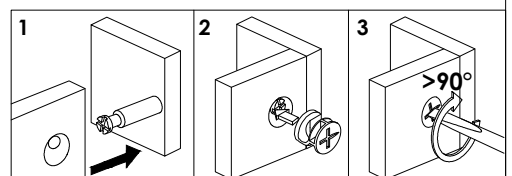





Assembly Instructions

Step 33

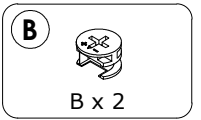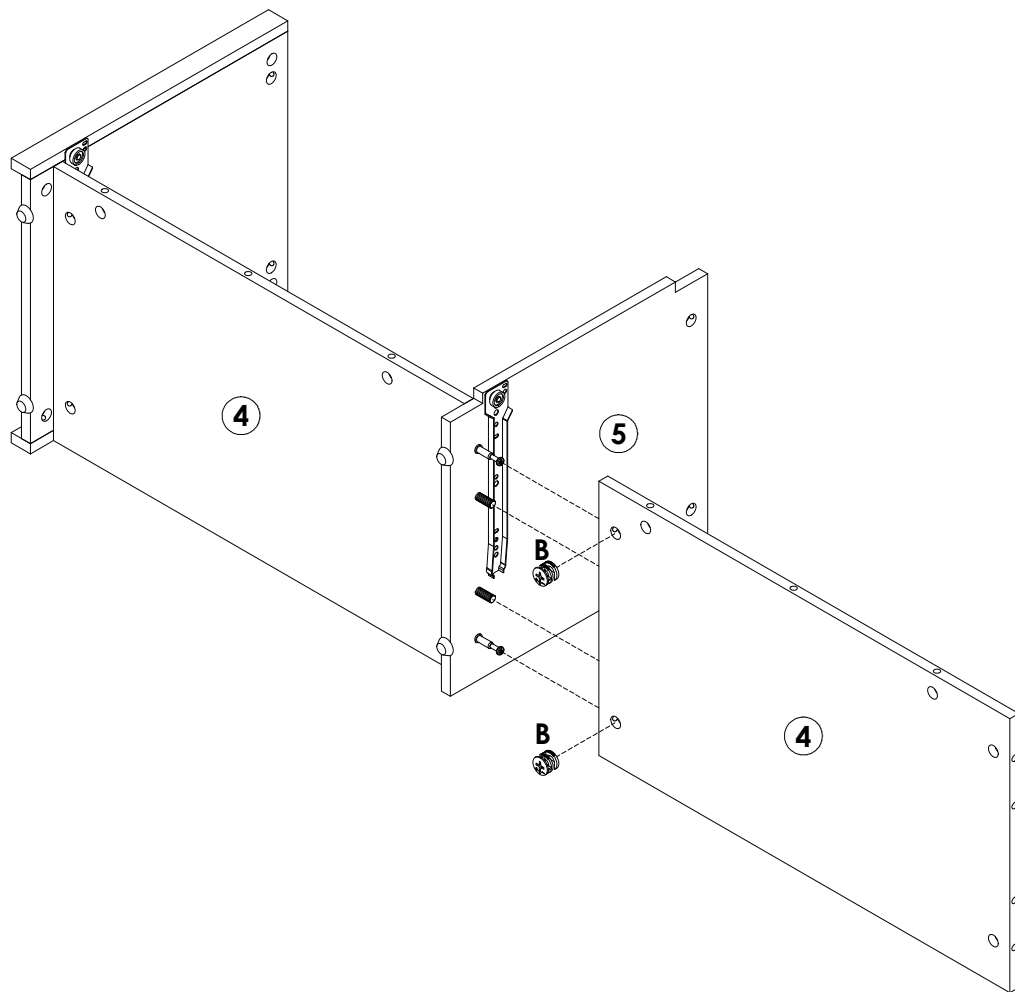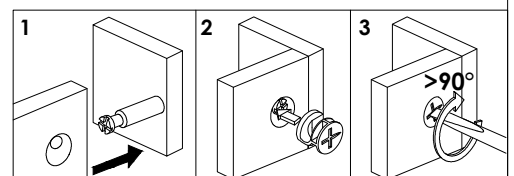



Assembly Instructions

Step 34



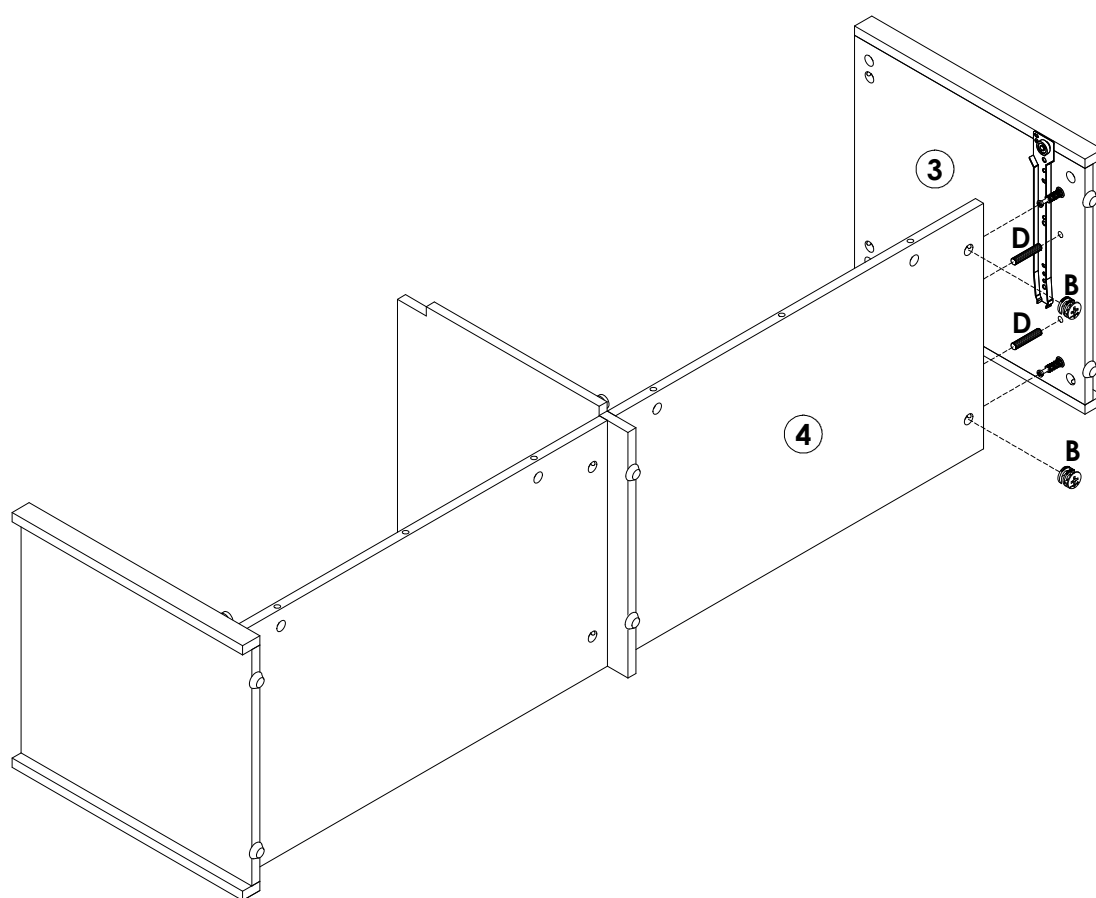
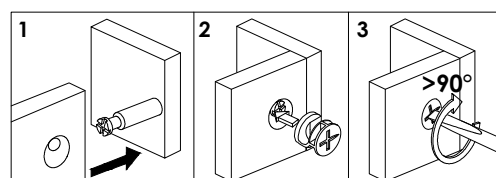


Assembly Instructions

Step 35



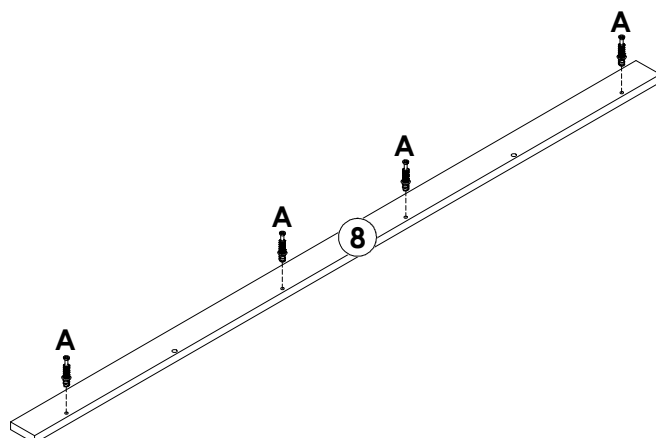



Step 36

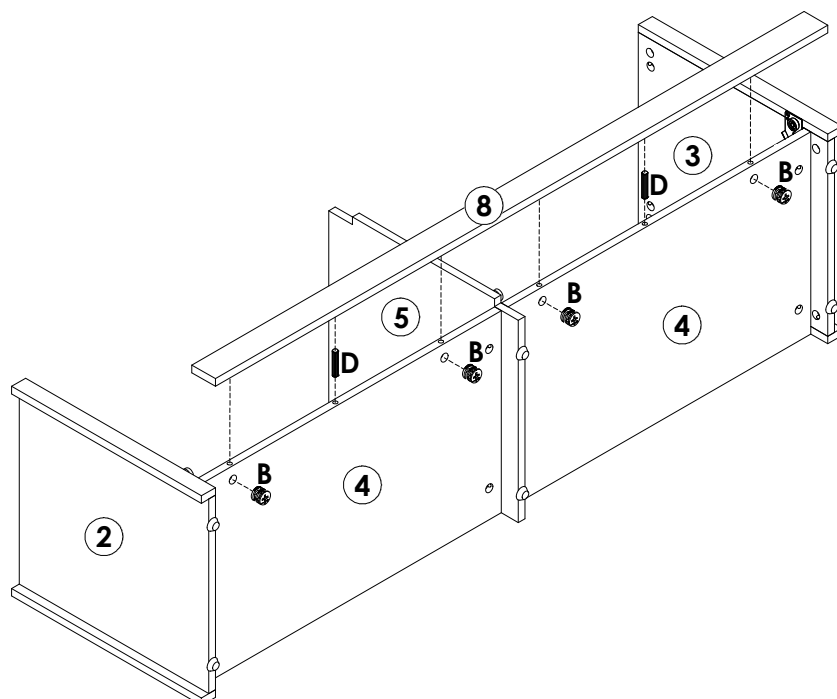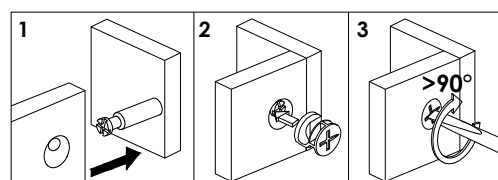


Assembly Instructions

Step 37

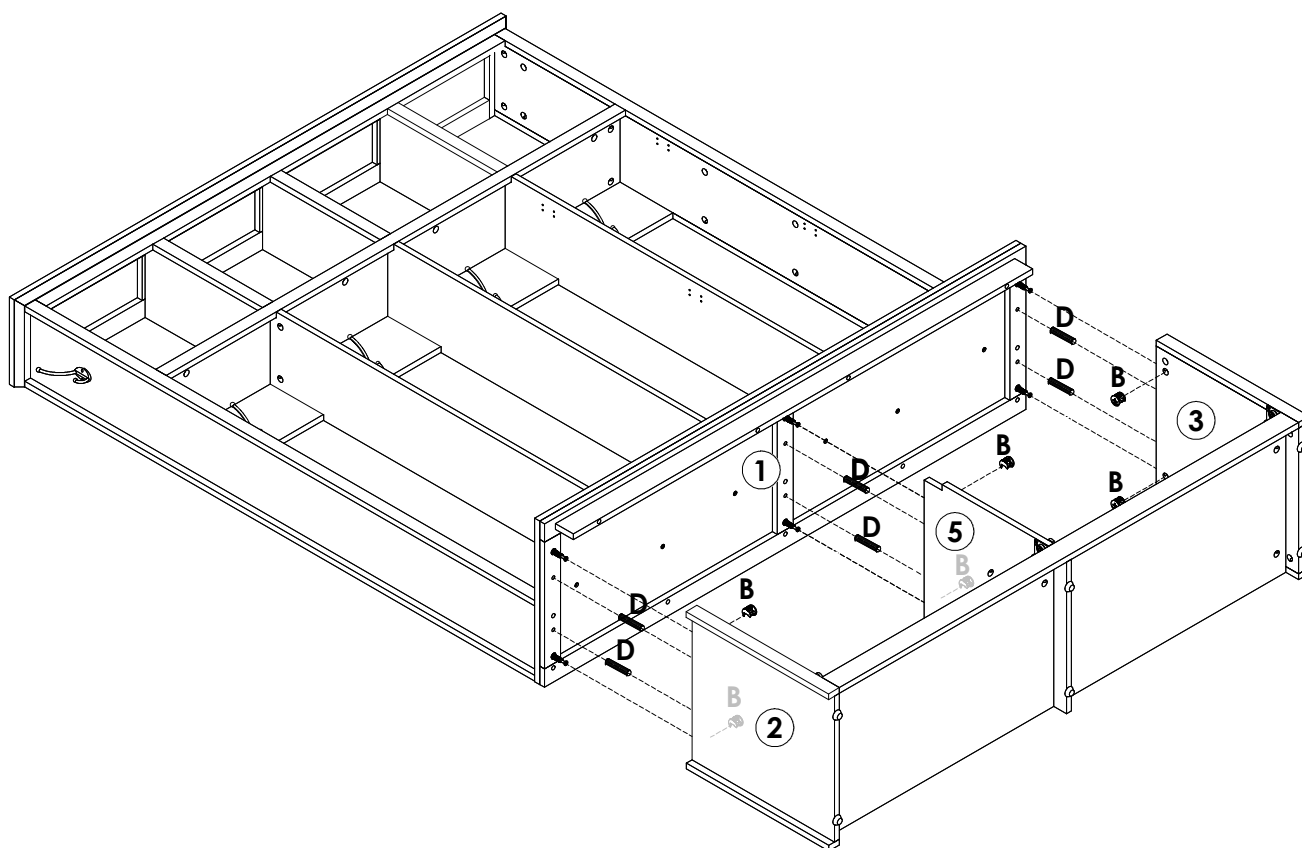
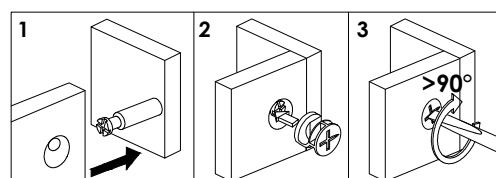


Assembly Instructions

Step 38





"Requires 2 people to assemble,
Please flip carefully."

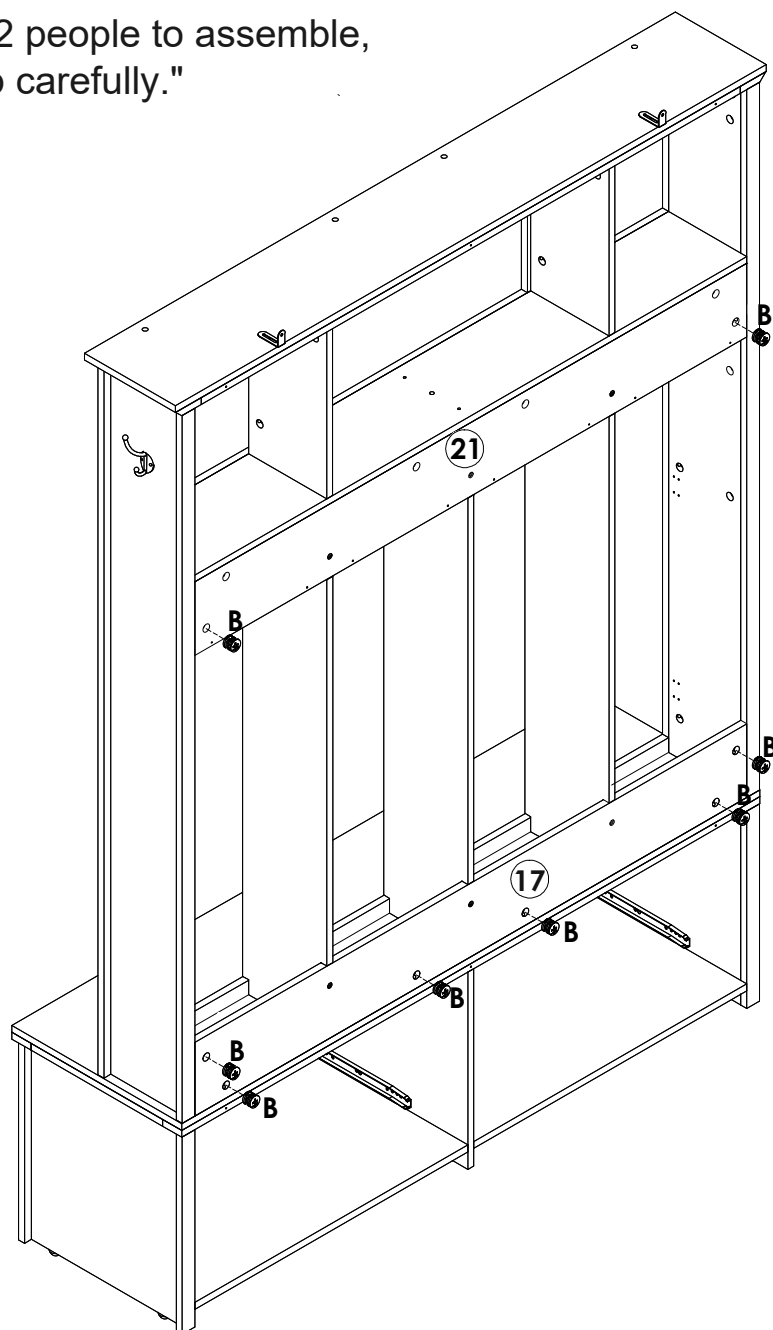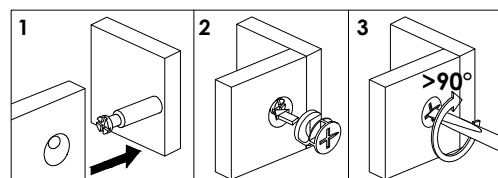



Assembly Instructions

Step 39

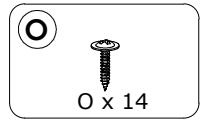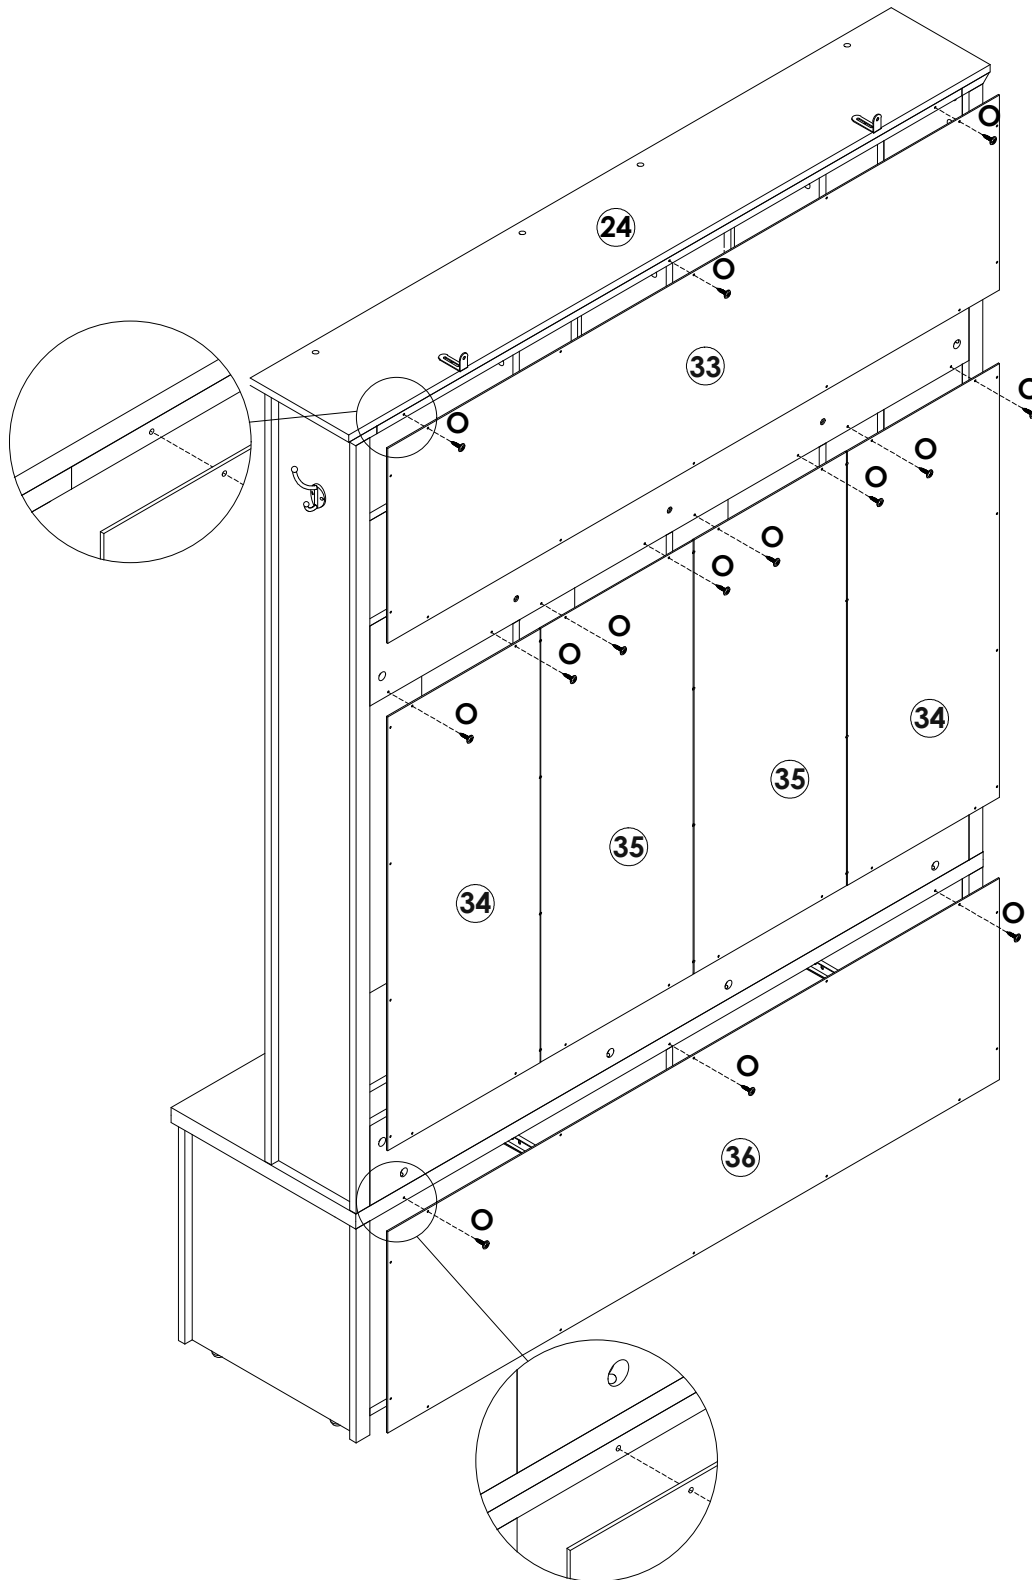




Assembly Instructions

Step 40




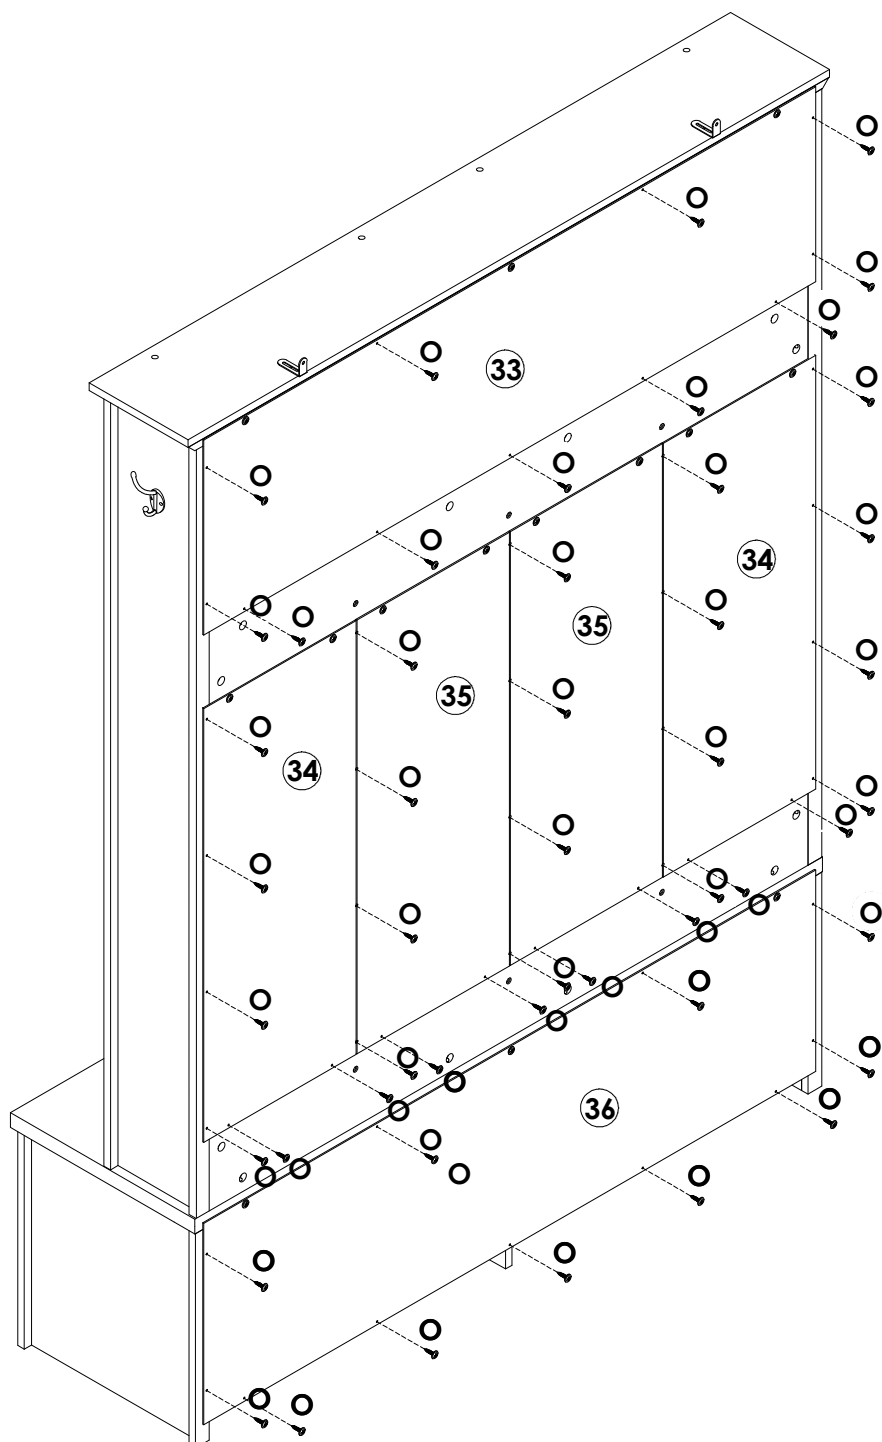


Assembly Instructions

Step 41

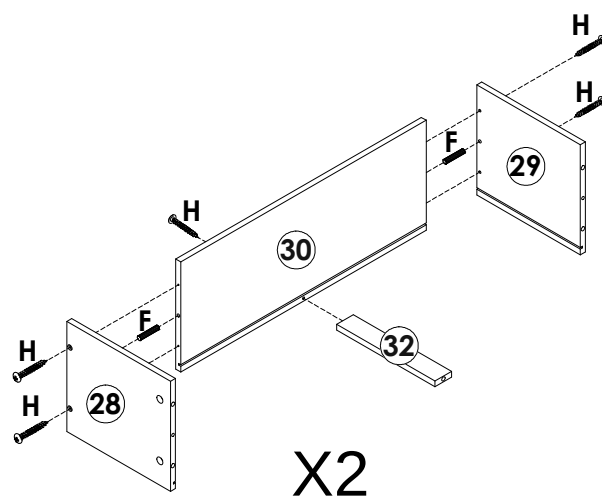



Step 42

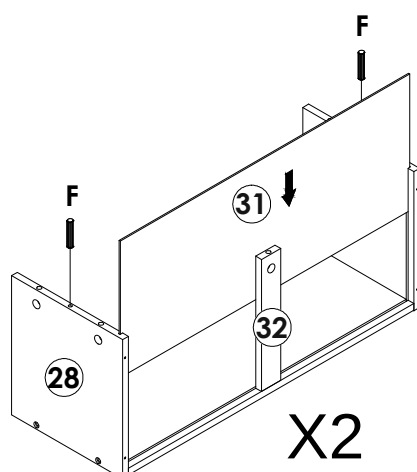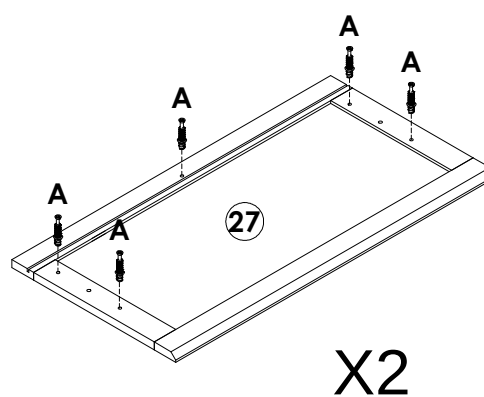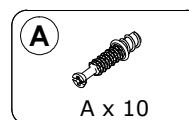


Assembly Instructions




Step 43

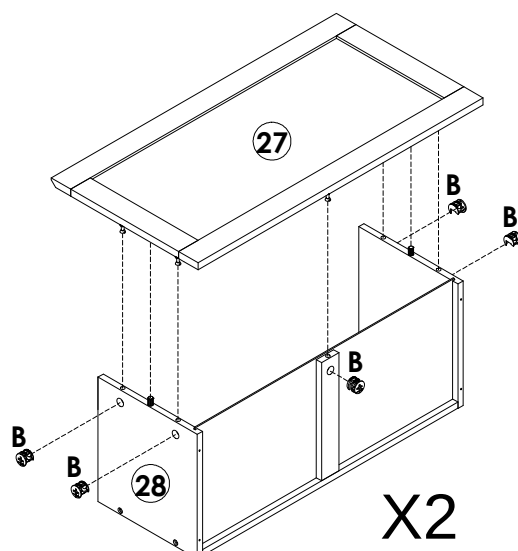

x2

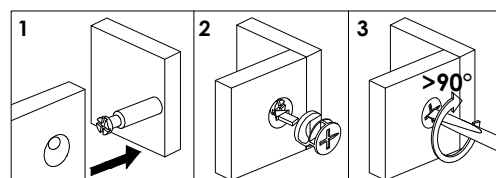


Step 44

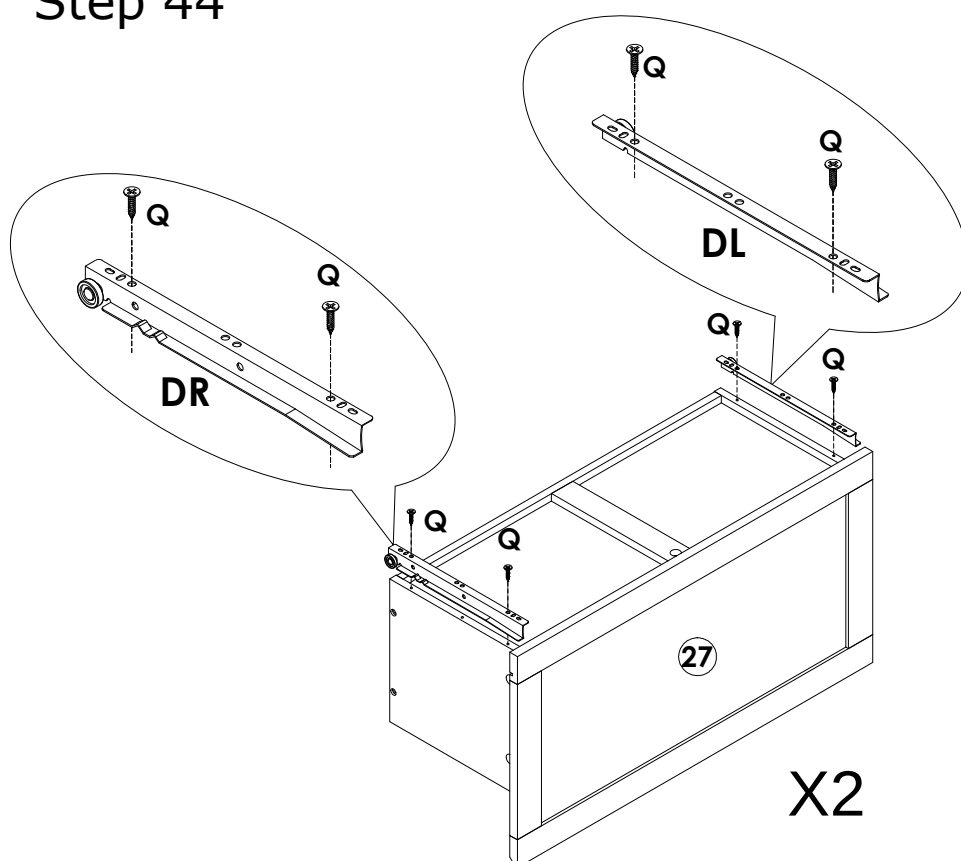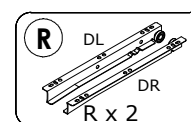

Assembly Instructions





Step 45

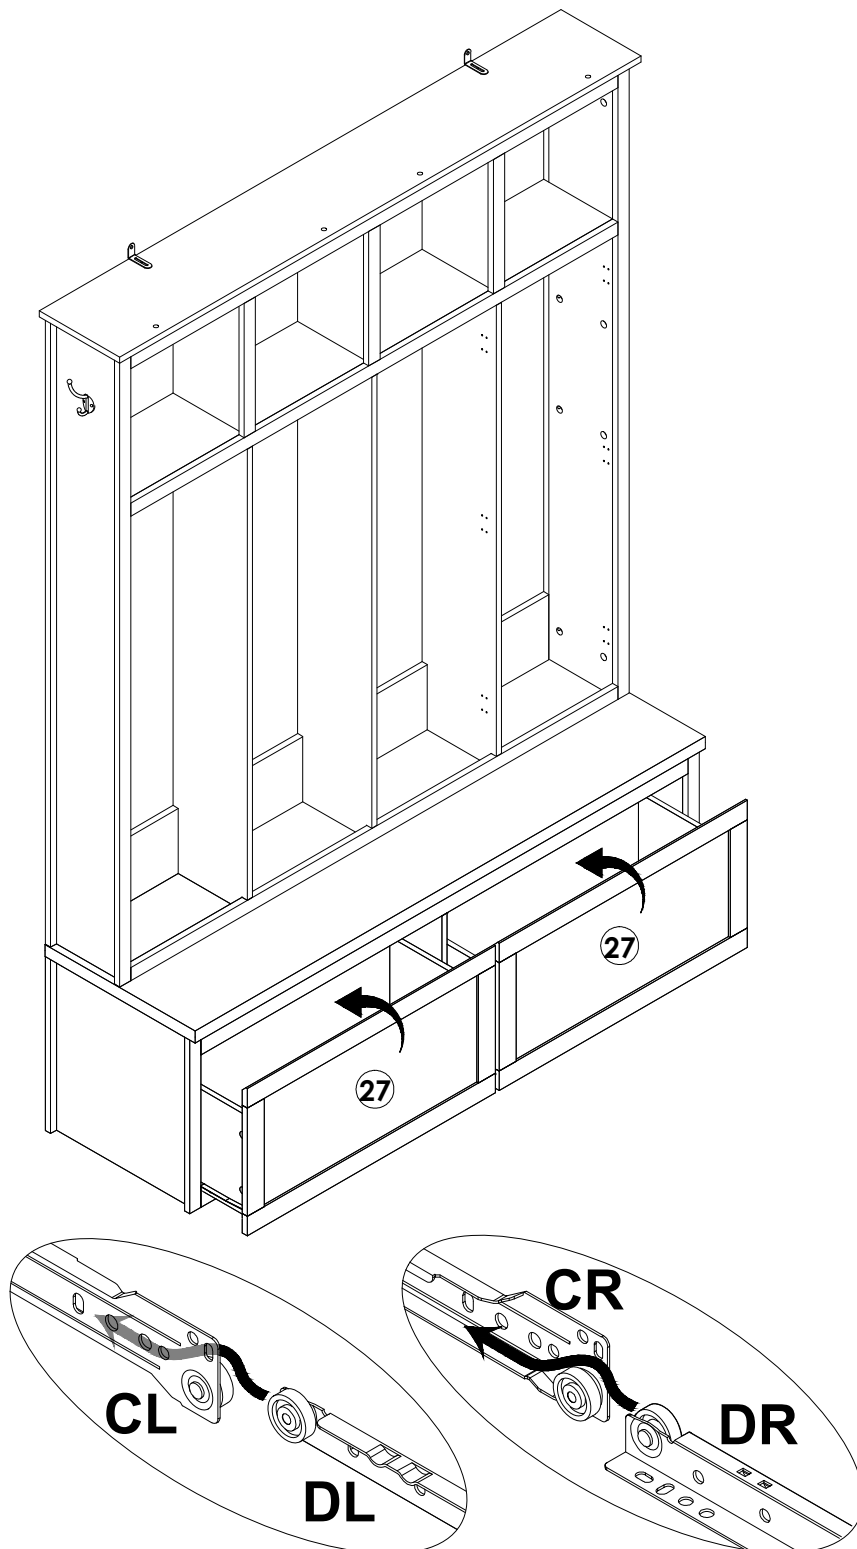

Assembly Instructions

Step 46

Note: Hinge "J" is installed in the following steps.

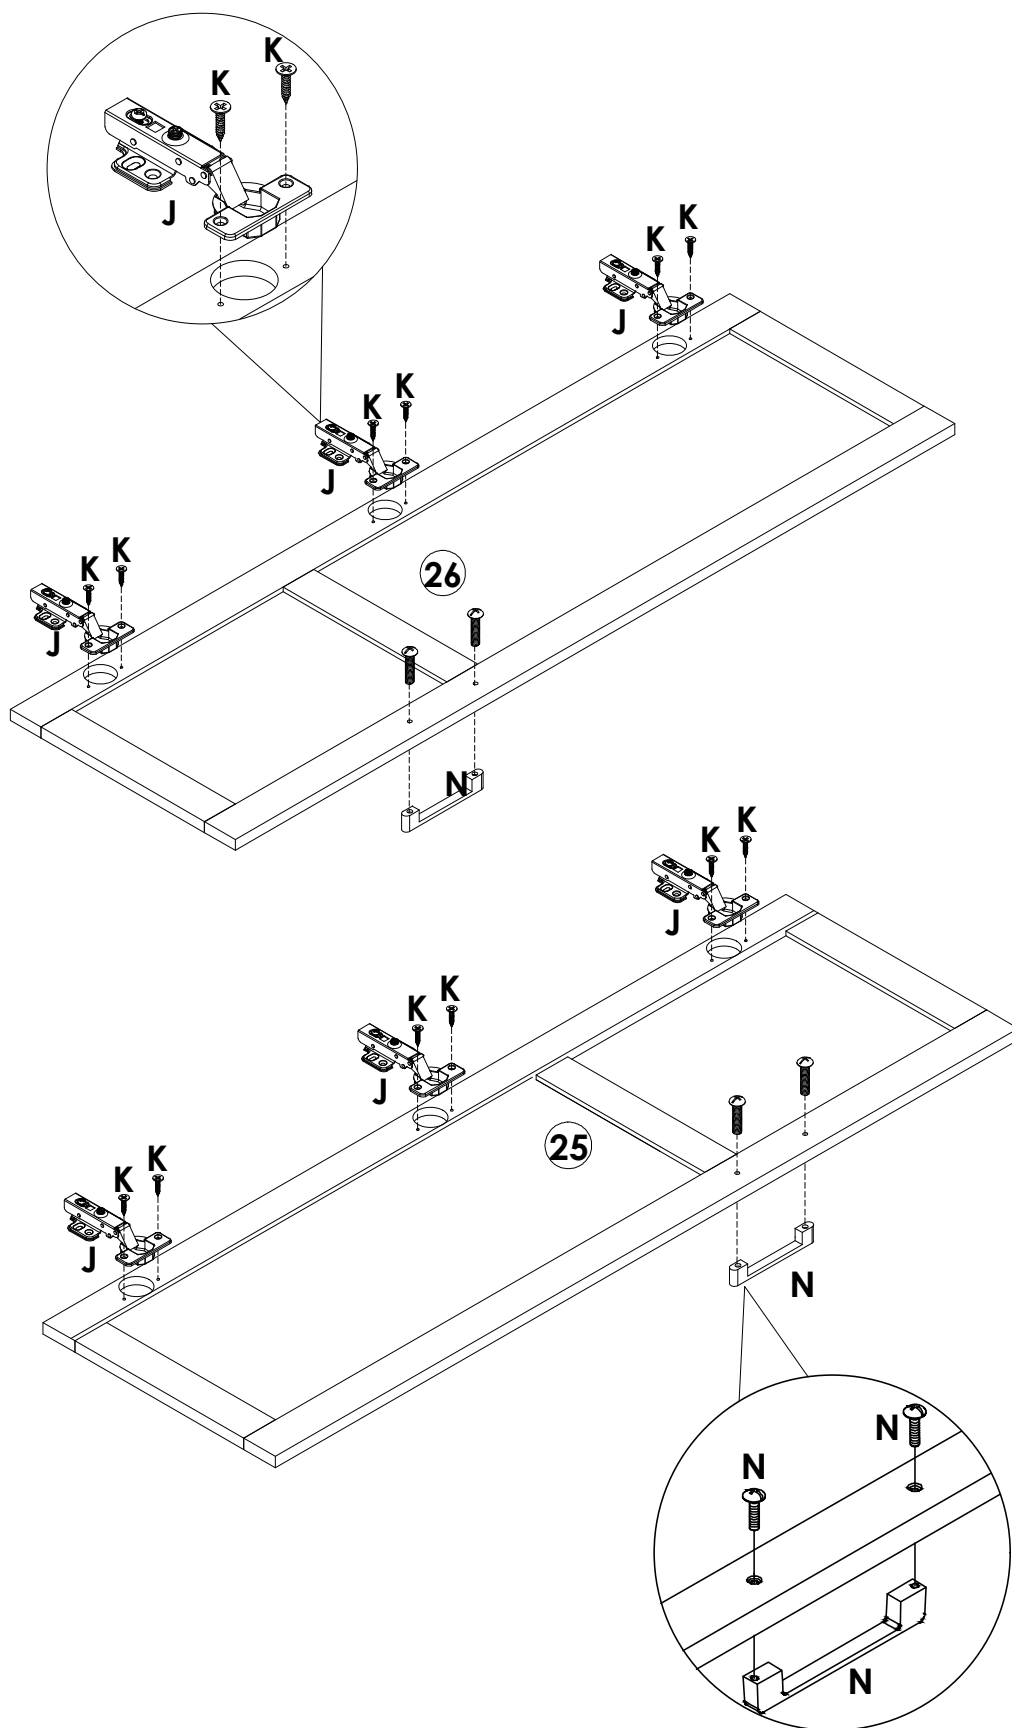


Assembly Instructions

Step 47

K







K x 24

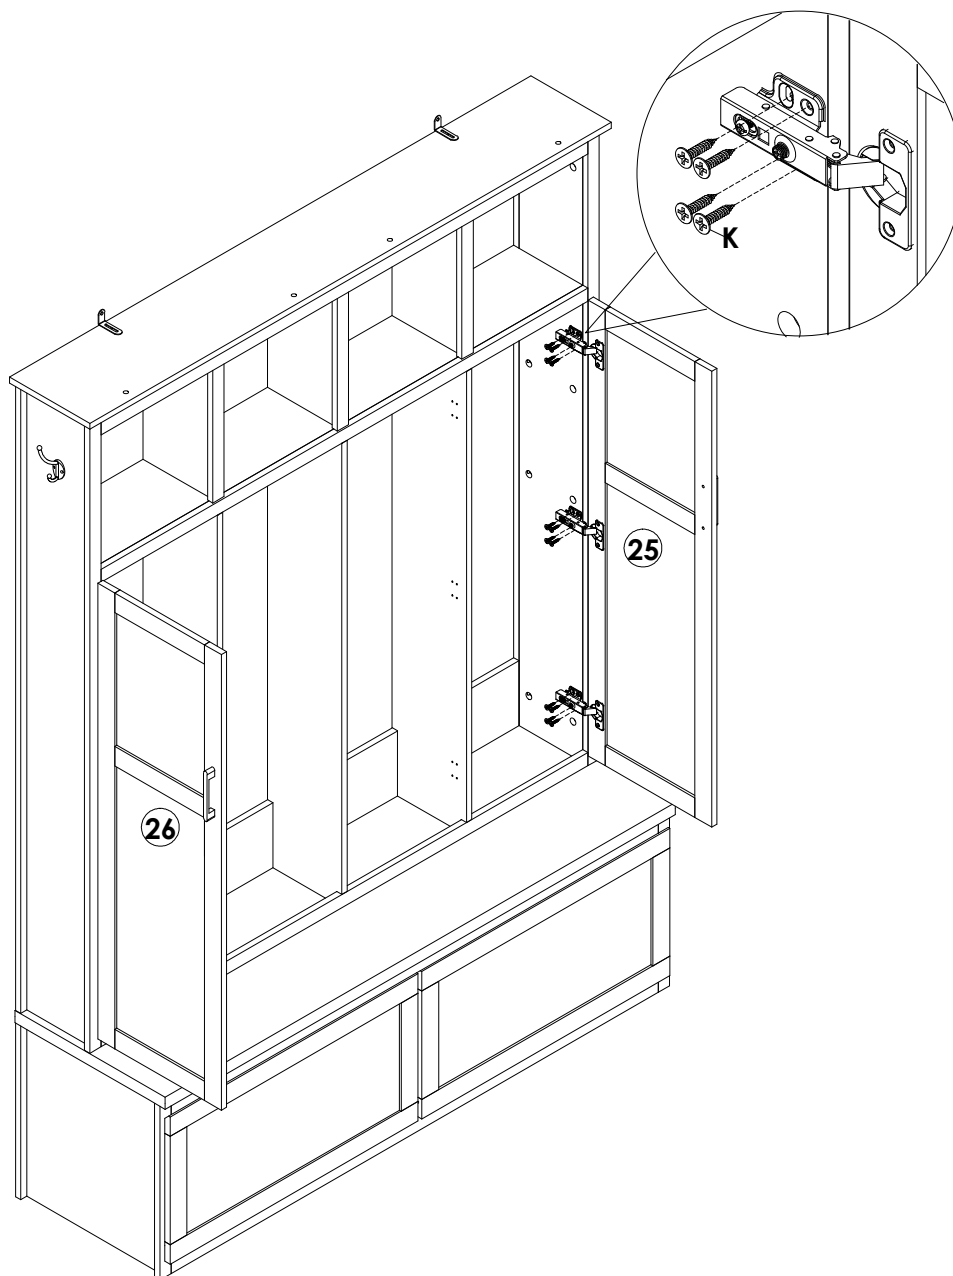



Assembly Instructions

Step 48 Note: Hinge "I" is installed in the following steps.

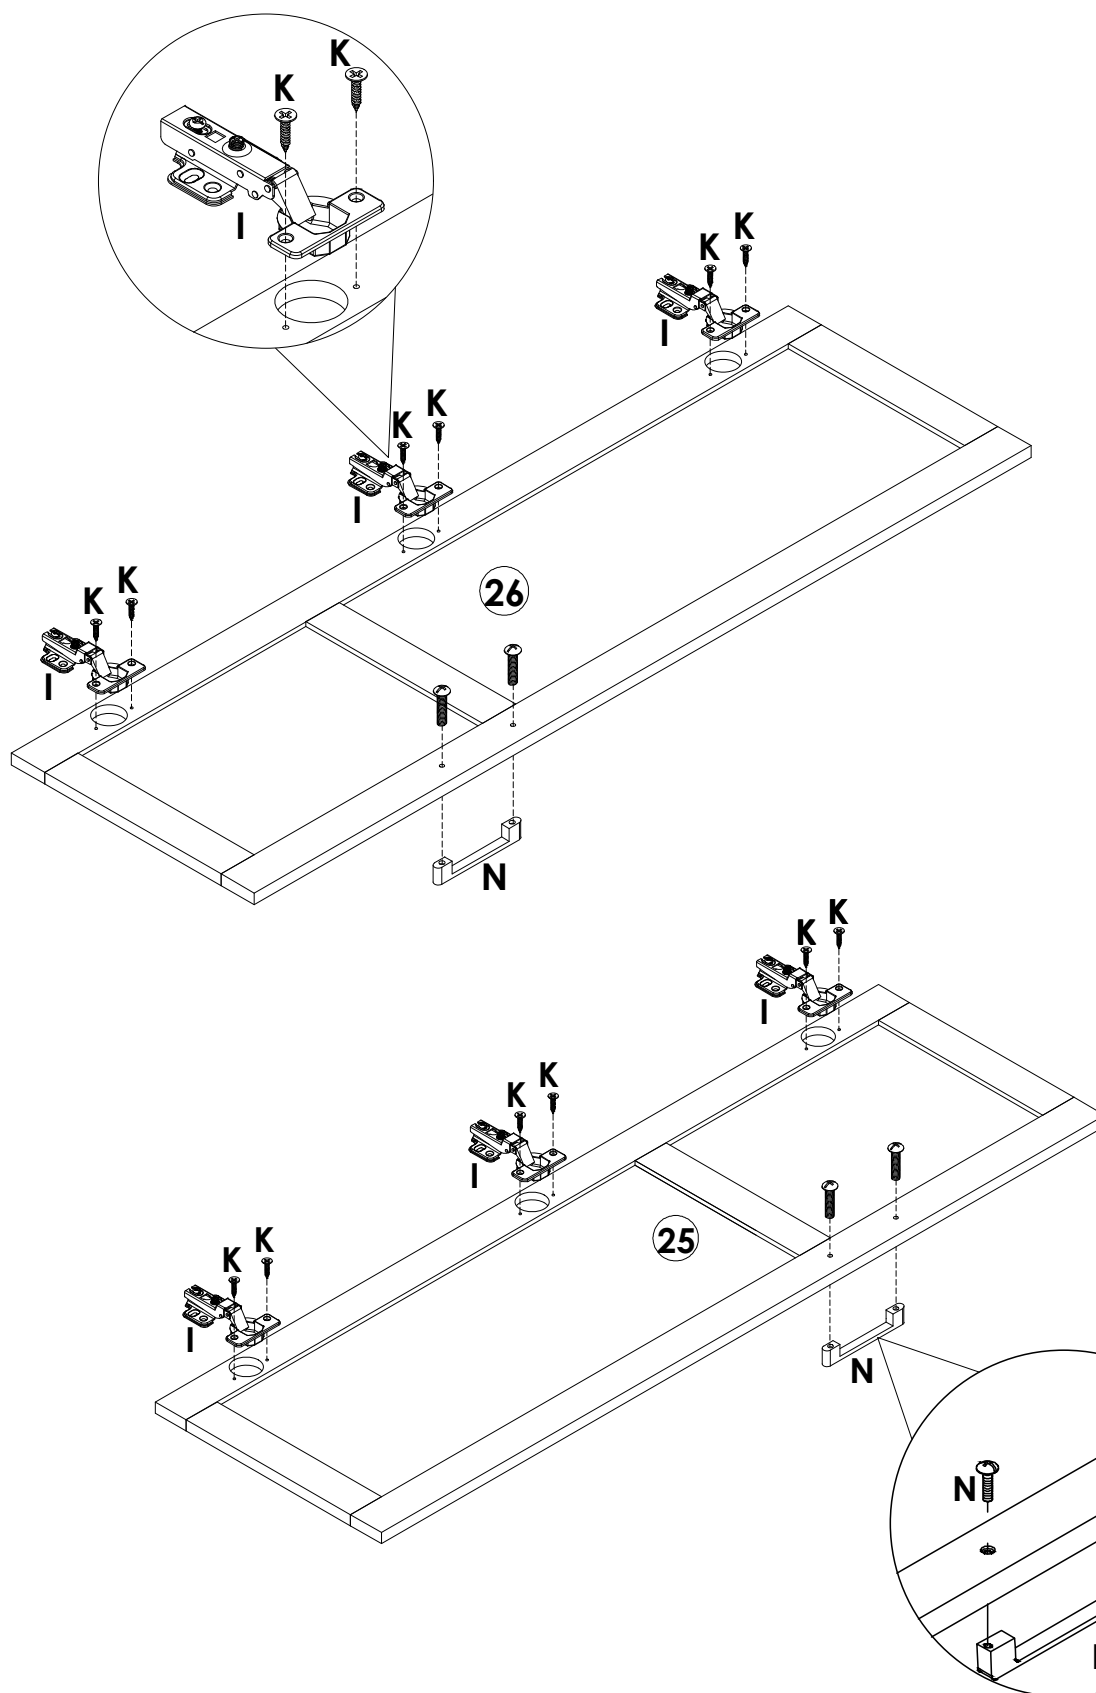

Assembly Instructions


Step 49

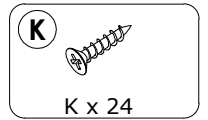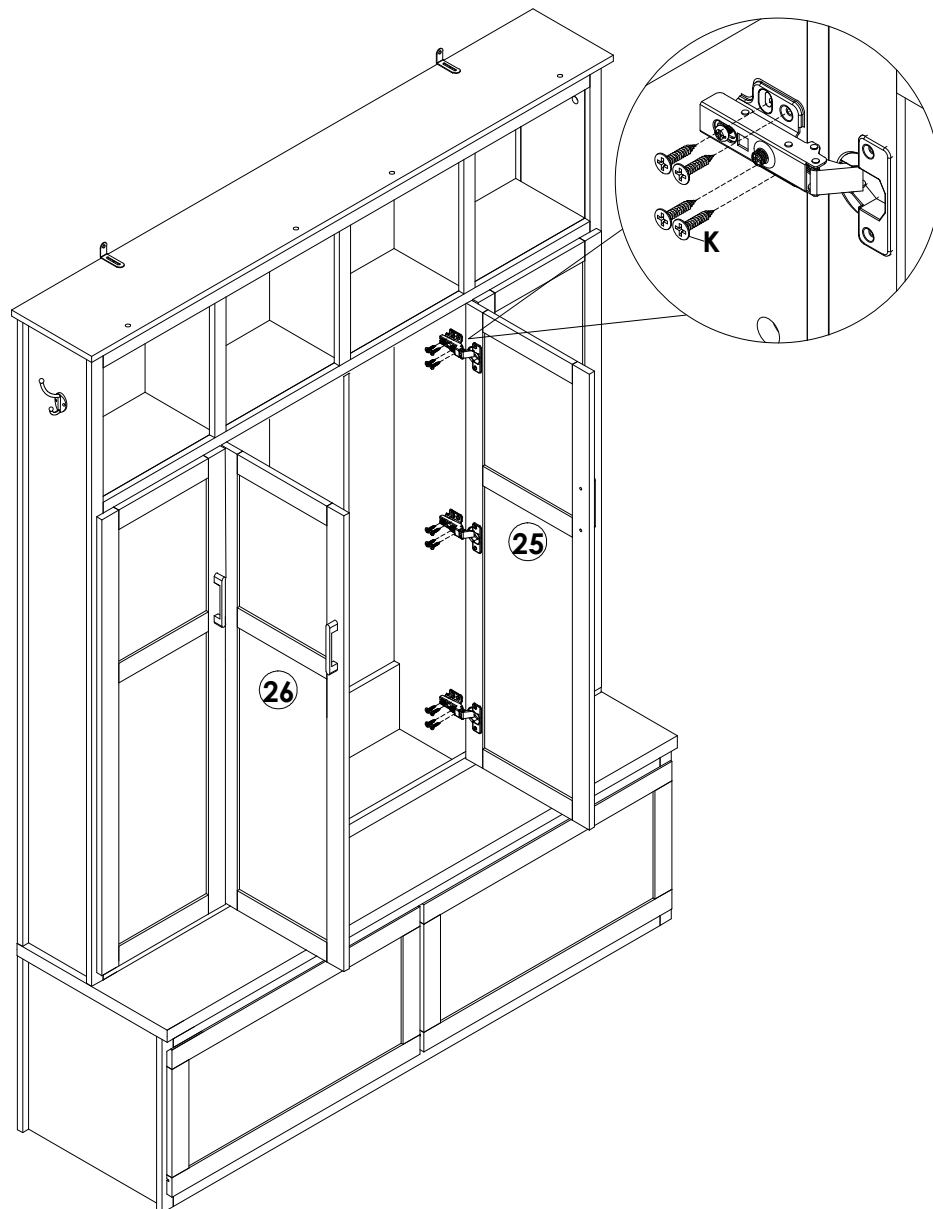



Assembly Instructions

Step 50



When the hinges are installed, you can refer to the pictures to adjust the screws of the doors till it's perfect.

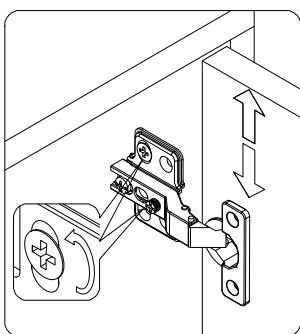



1. Adjust the screws shown in Figure 1 to adjust the door up and down.

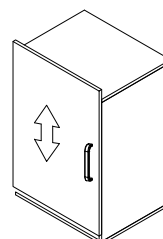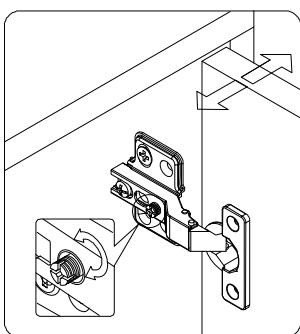

2. Adjust the screws shown in Figure 2 to adjust the door left and right to the right position.

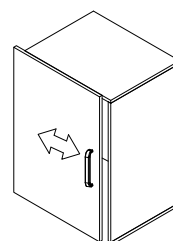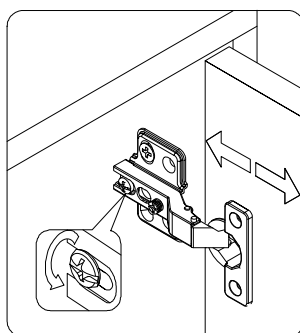


3. Adjust the screws shown in Figure 3 and pull the door back and forth so that it can be opened smoothly.

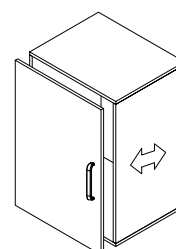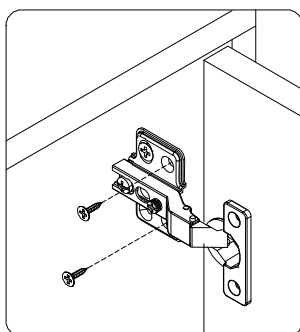


4. After the adjustment is complete, secure the remaining two screws to secure the door in place.

Assembly Instructions

Step 51

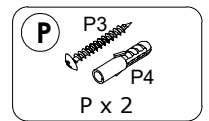

WALL

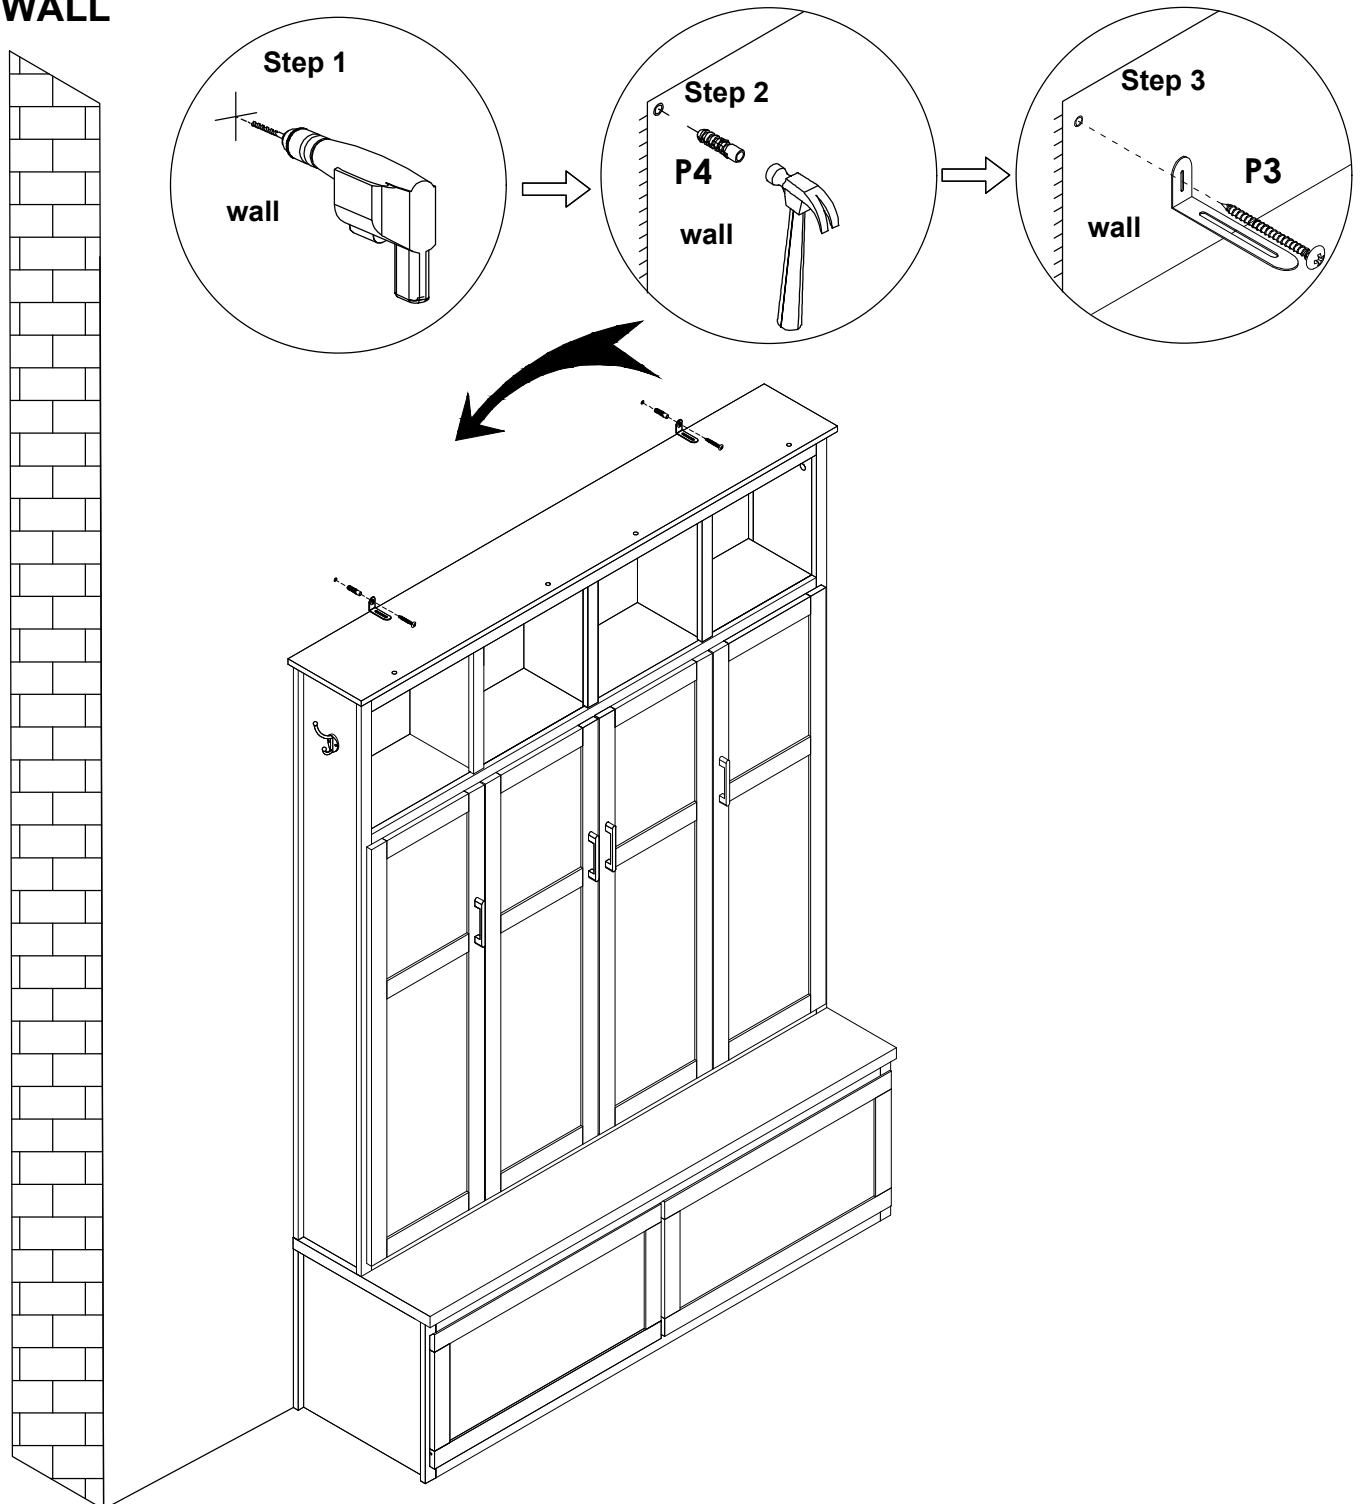

Assembly Instructions

COMPLETED

WALL

