



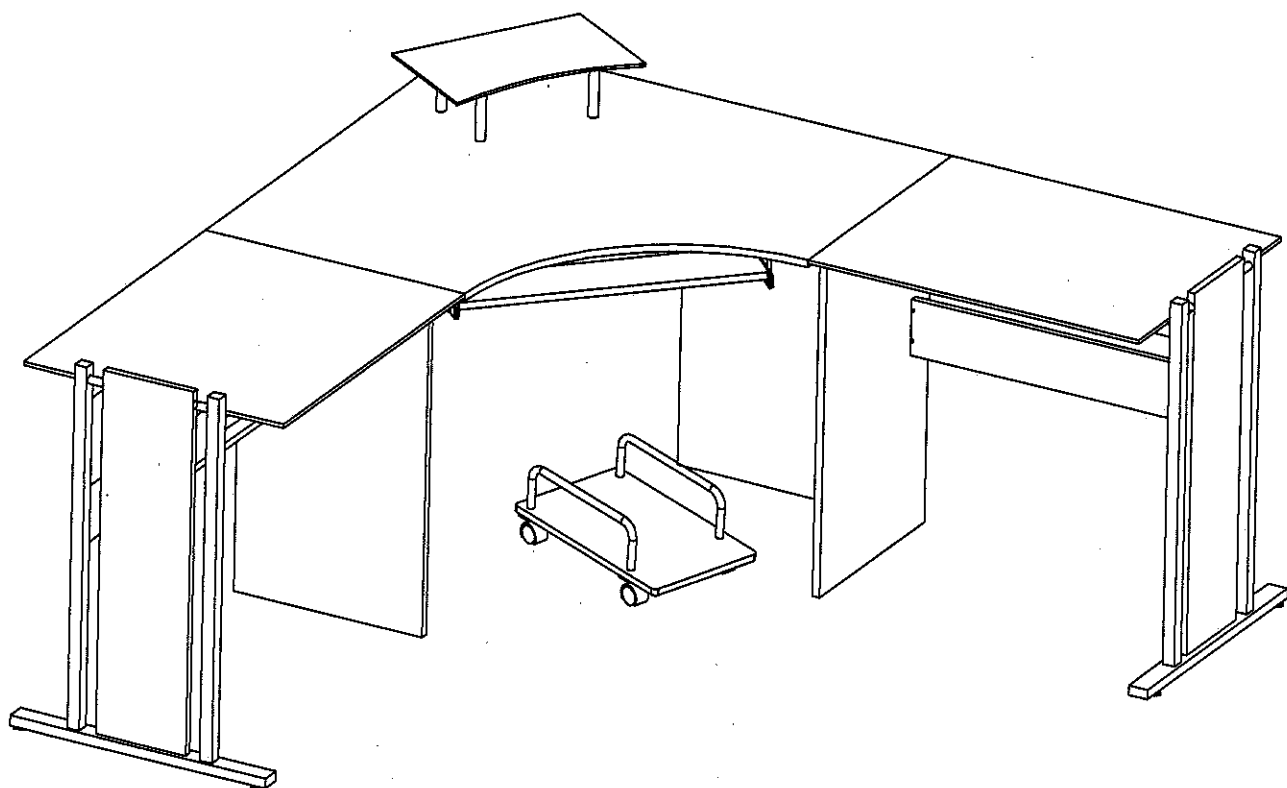

IMPORTANT: DON'T FASTEN BOLTS UNTIL ALL PARTS IN POSITION.


PART

A

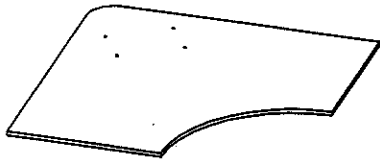


x1

B

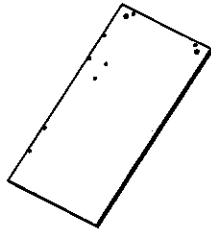


x1

C

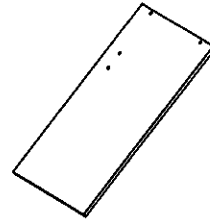


x1

D

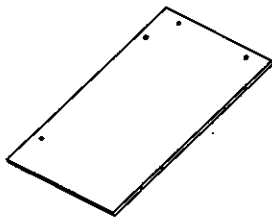


x1

E

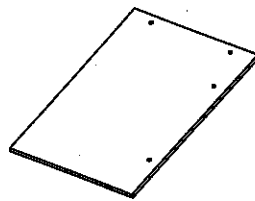


x1

F

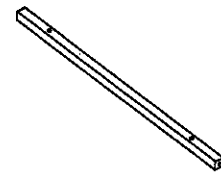


x4

G

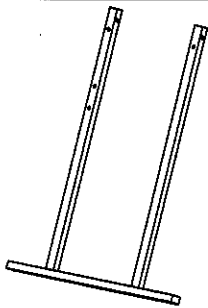


x2

H

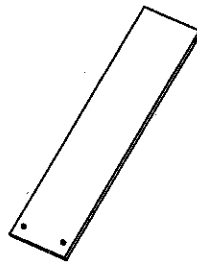


x2

I

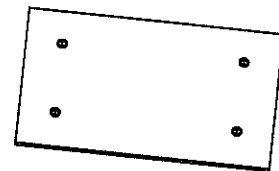


x2

J

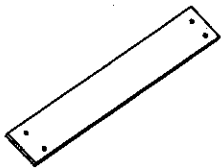

x2

K

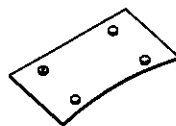


x1

L




x4

M




x1

N



x1

O




x2

P




x4

PARTS



①			12PCS	⑧		M6x40 8PCS
②			8PCS	⑨		M6x25 4PCS
③			M6X30 12PCS	⑩		M6X20 8PCS
④			M4X14 20PCS	⑪		M5x55 8PCS
⑤			4PCS	⑫		M6x12 8PCS
⑥			M8 4PCS	⑬		1SET
⑦			M6x35 4PCS	⑭		M5x70 4PCS

1

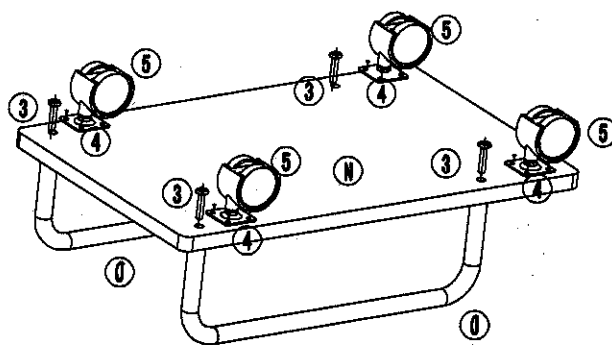



③ X4
④ X16
⑤ X4

2

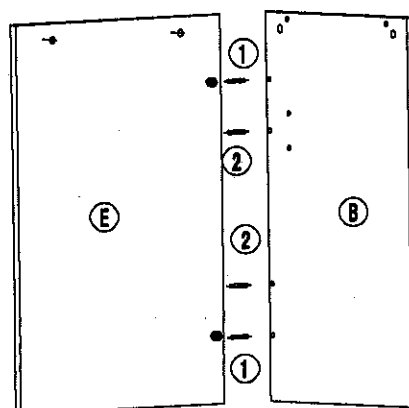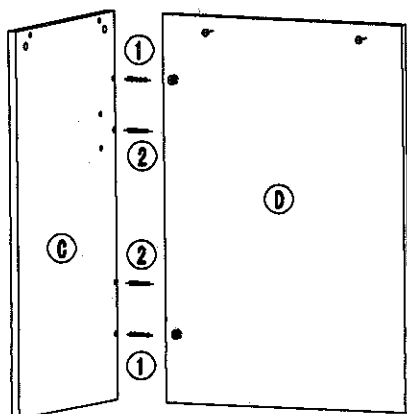



① X4
② X4

3

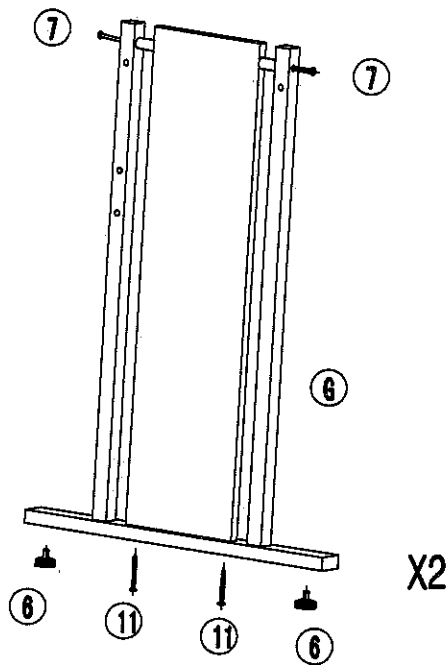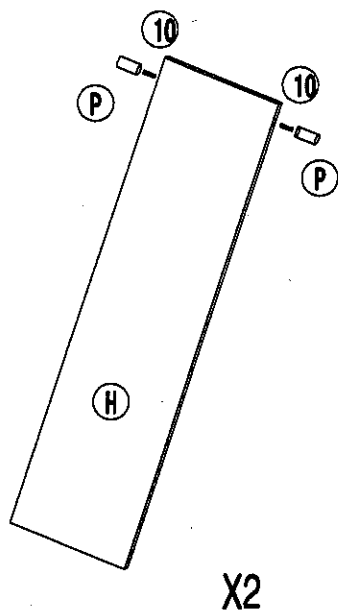


- 6** X2
- 7** X2
- 10** X2
- 11** X2

4

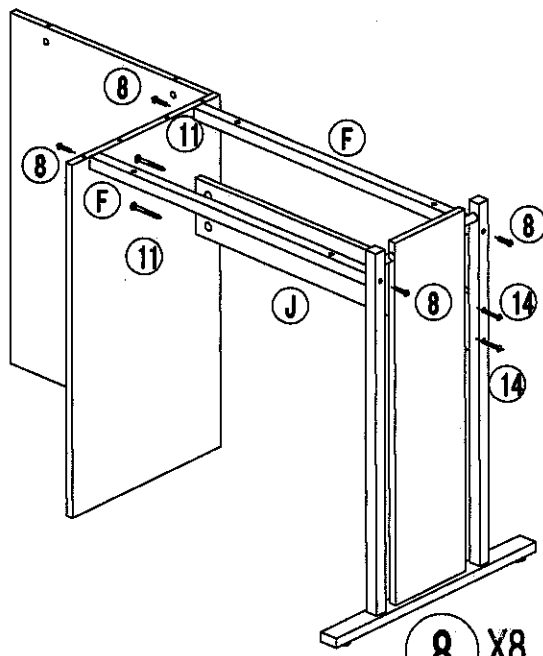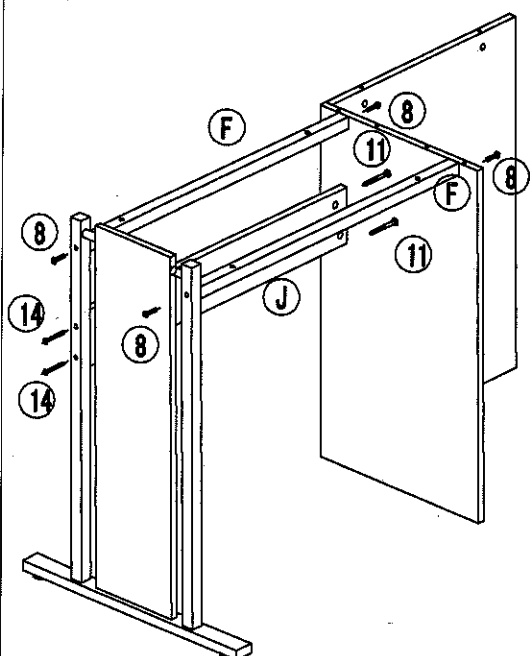

- 8** X8
- 11** X4
- 14** X4


5

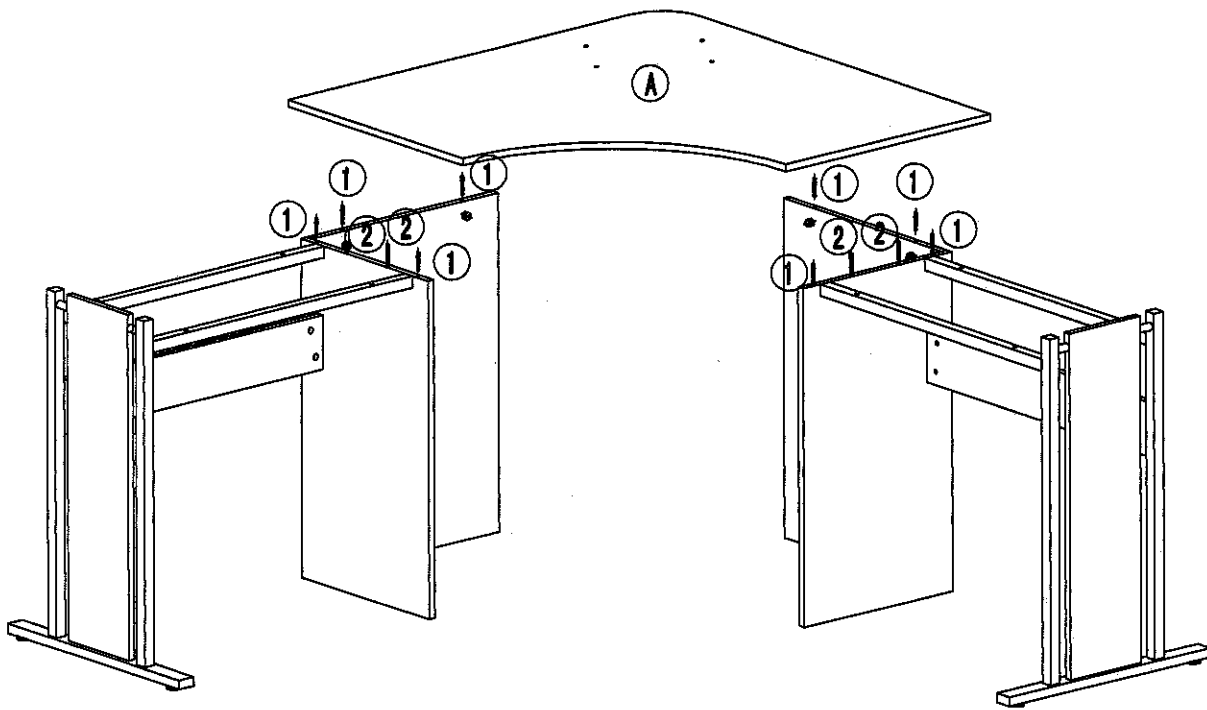

1 X8



2 X4

6

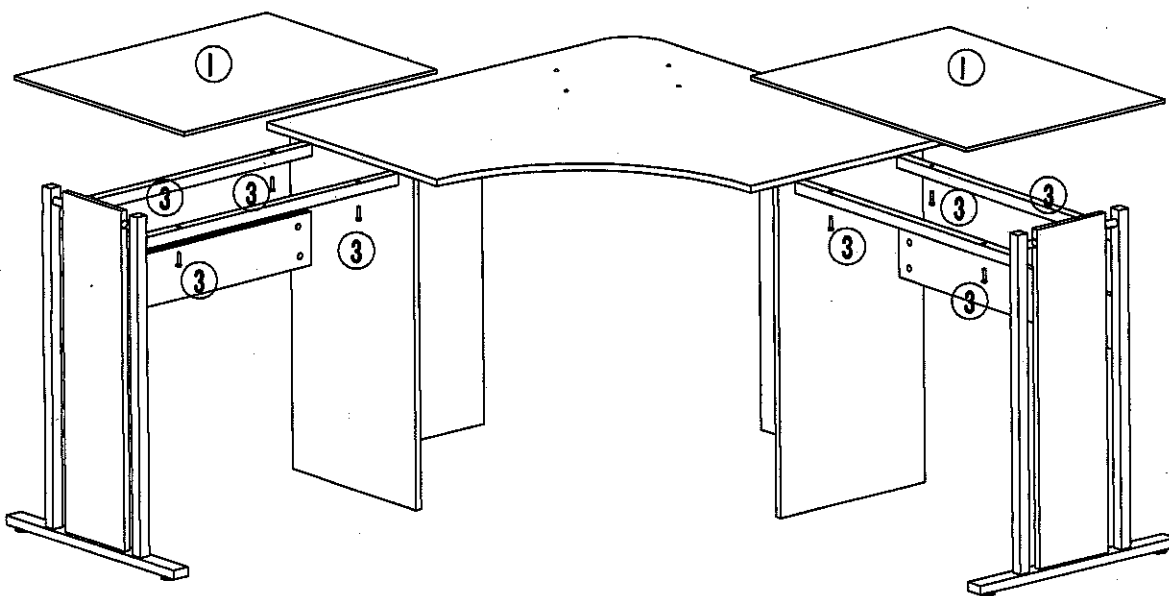

3 X8


7

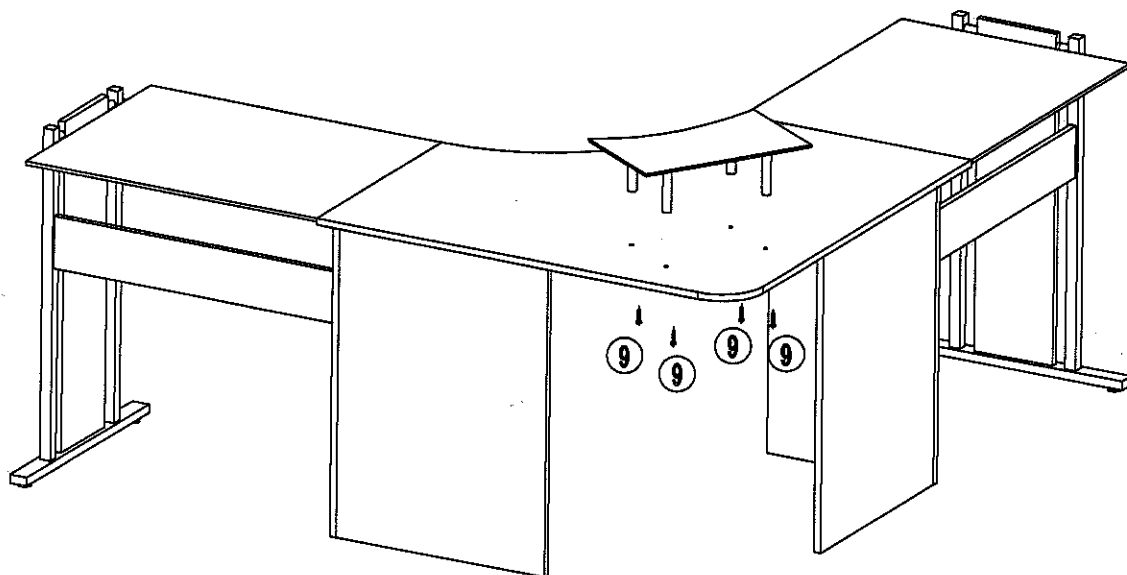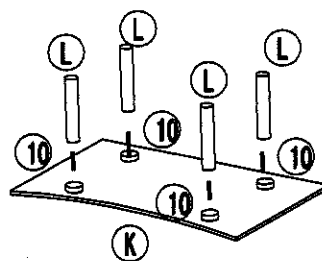

9 X4


10 X4

8

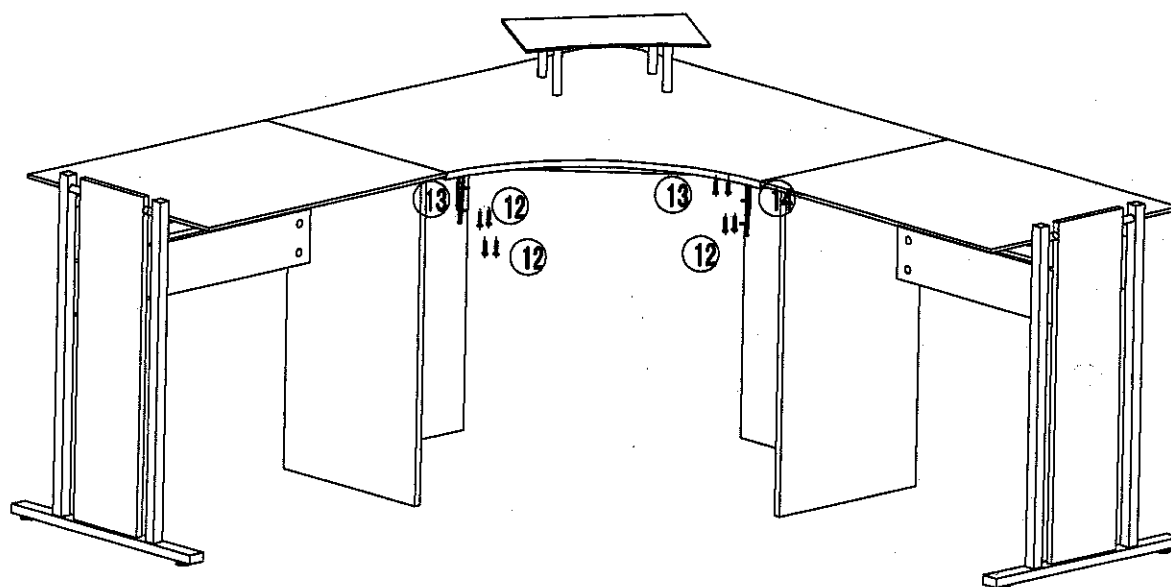

12 X8

9

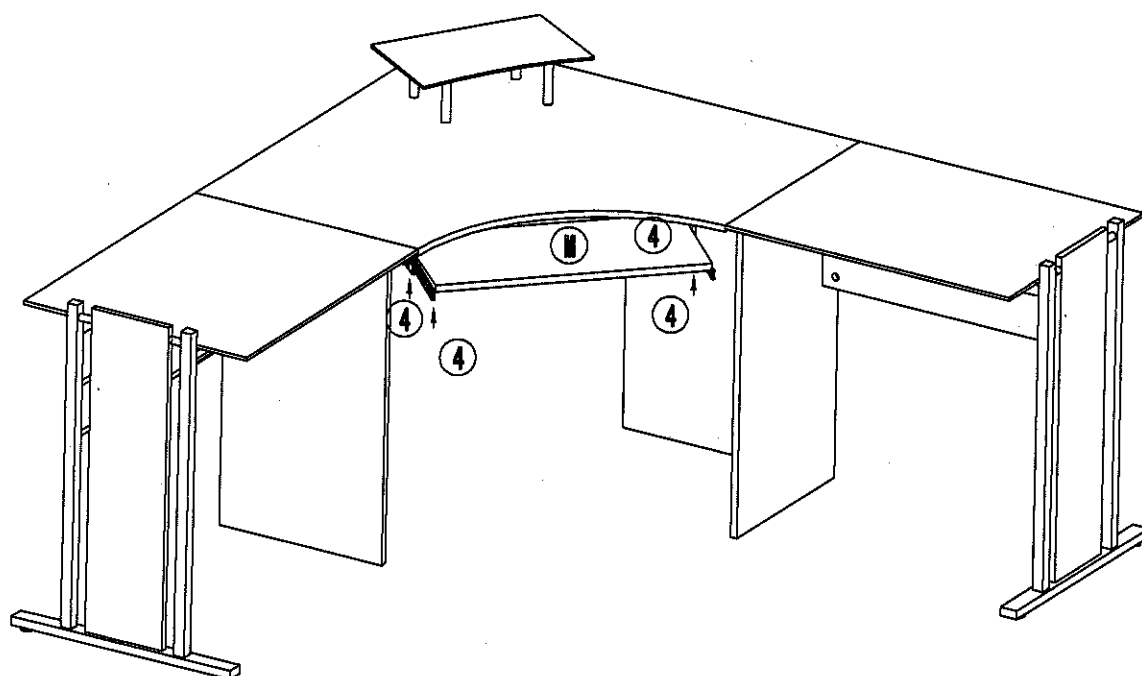

④ X4

10

