



Sideboard cabinet

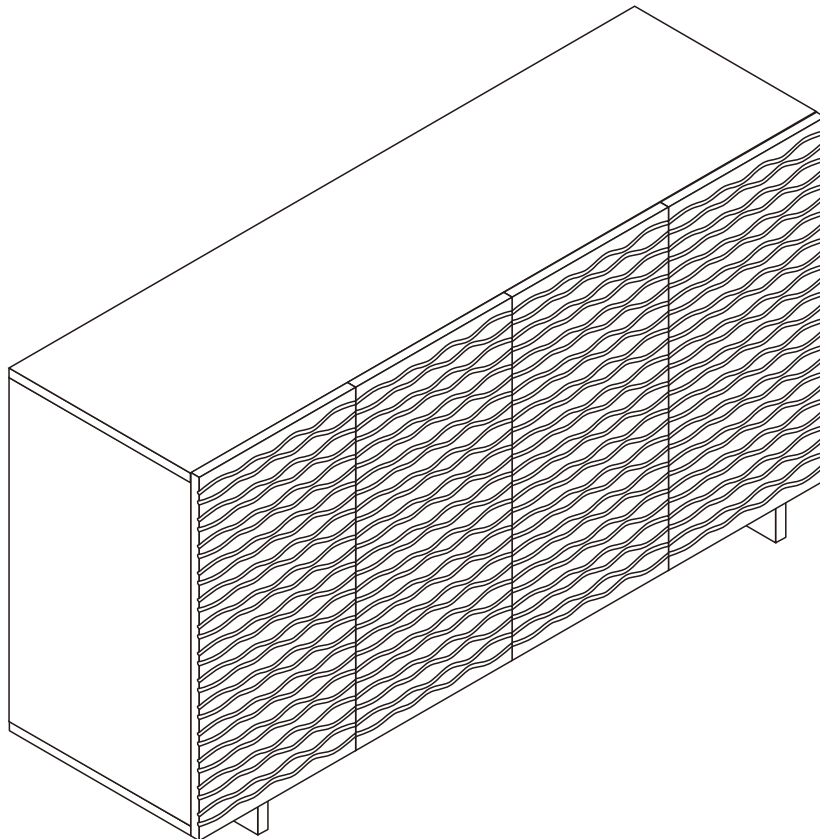


2 Persons





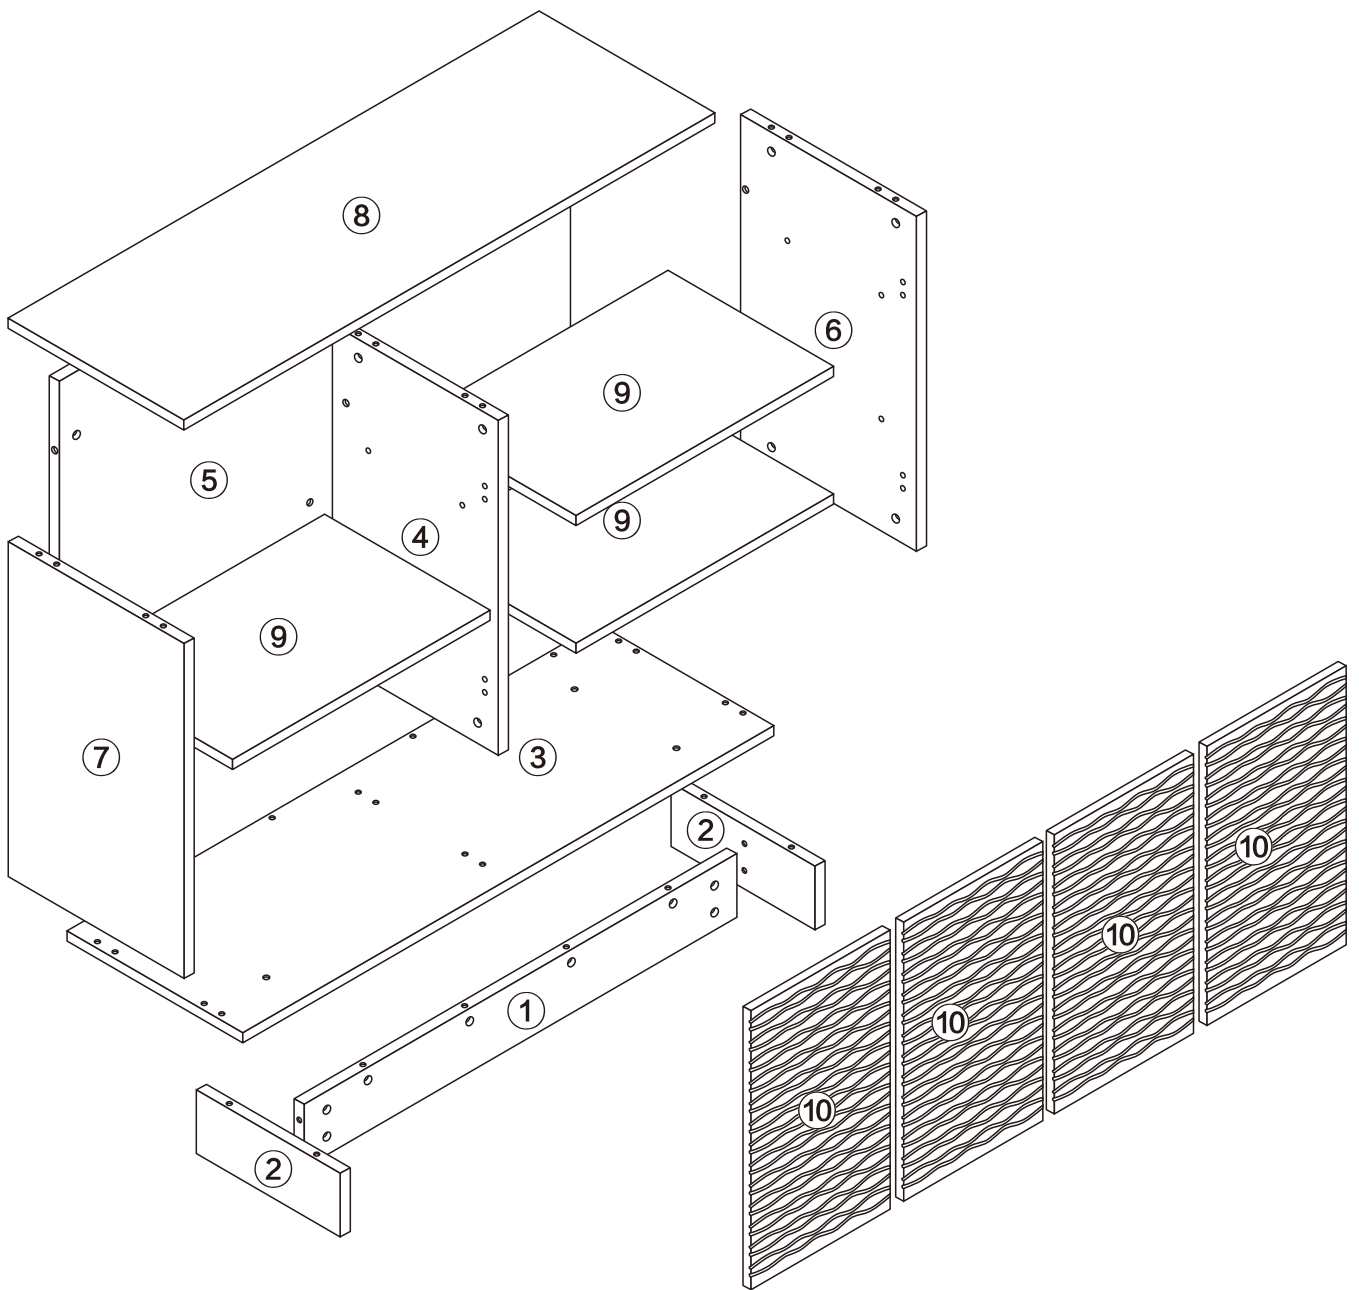


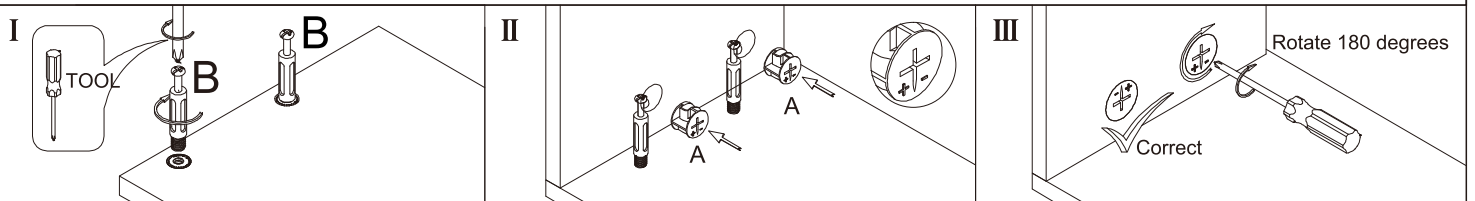



Installation Instructions









Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.




Disassembly and installation of accessories



A 34PCS  15*10mm	B 34PCS  6*28mm	C 16PCS  3.5*14mm	D 12PCS  8*30mm	E 12PCS  Φ5*8mm	F1 4PCS 	F2 4PCS 	 Tools Recommended	
G 7PCS  Φ15mm	H 32PCS  4*12mm	I 4PCS  6*35mm						

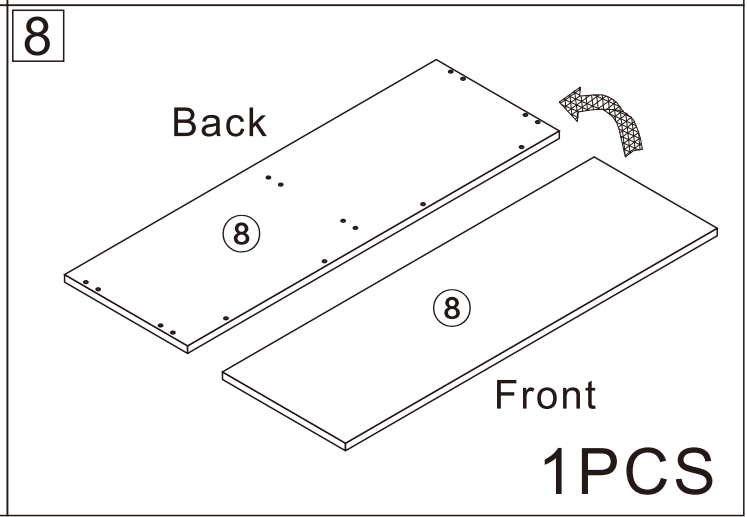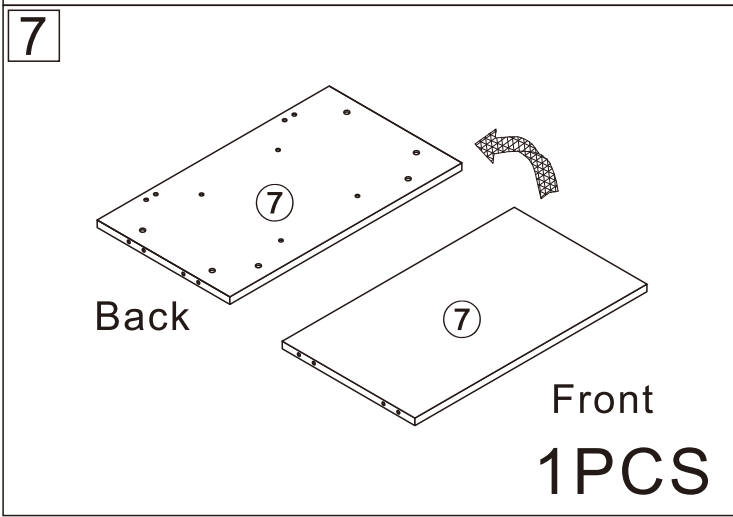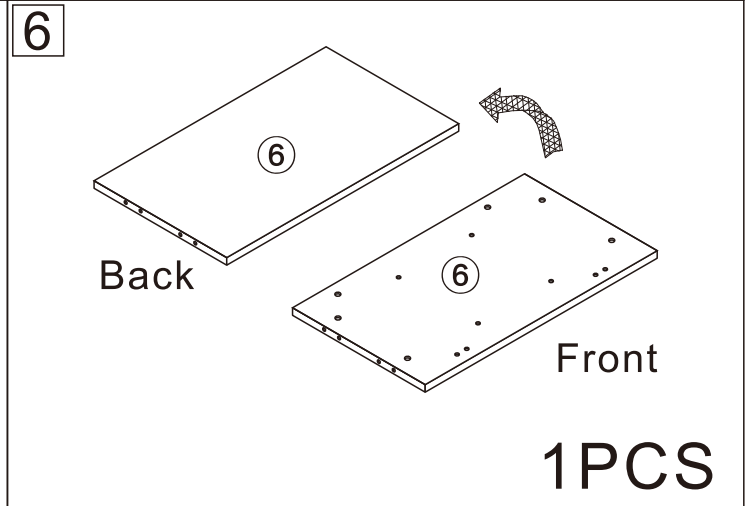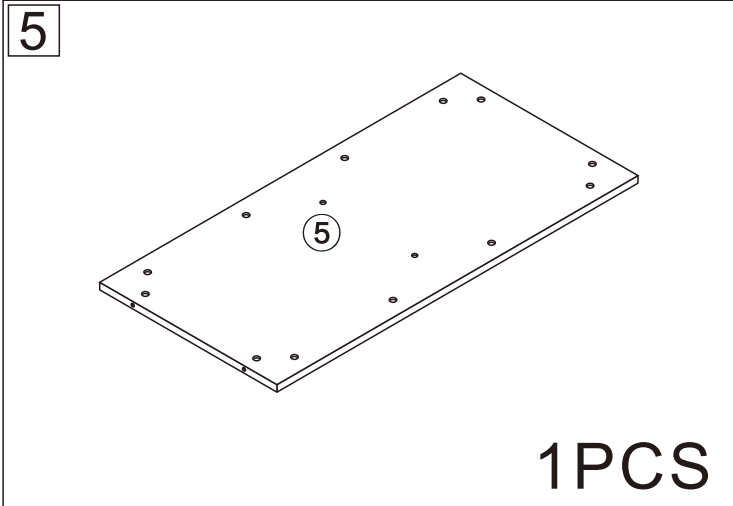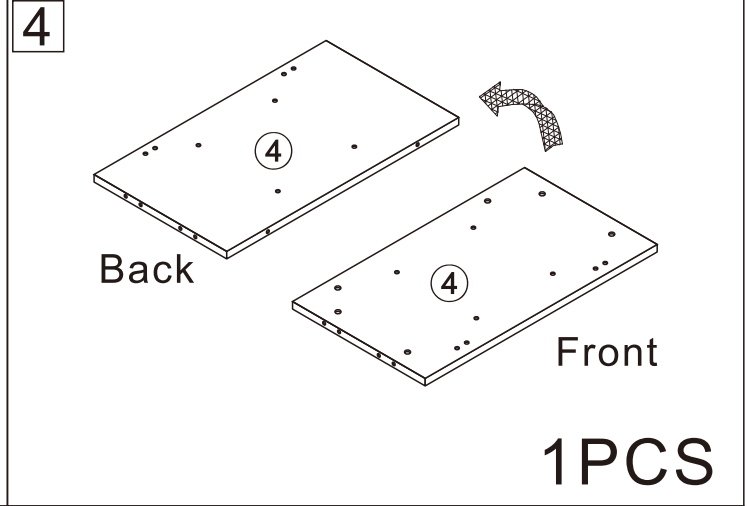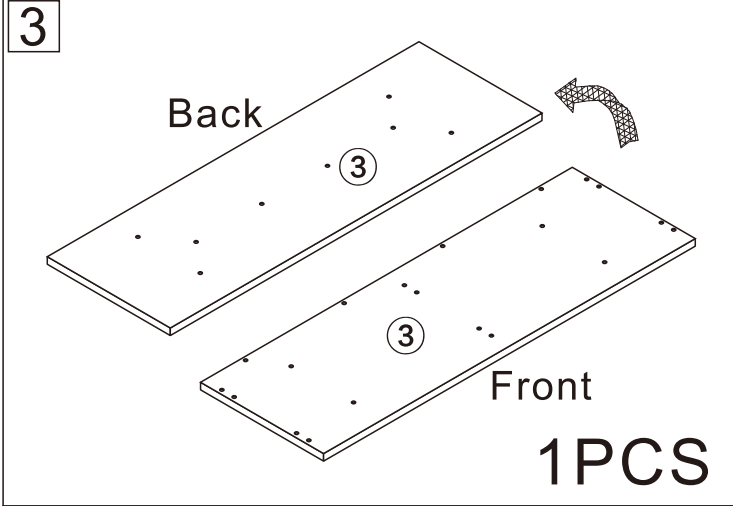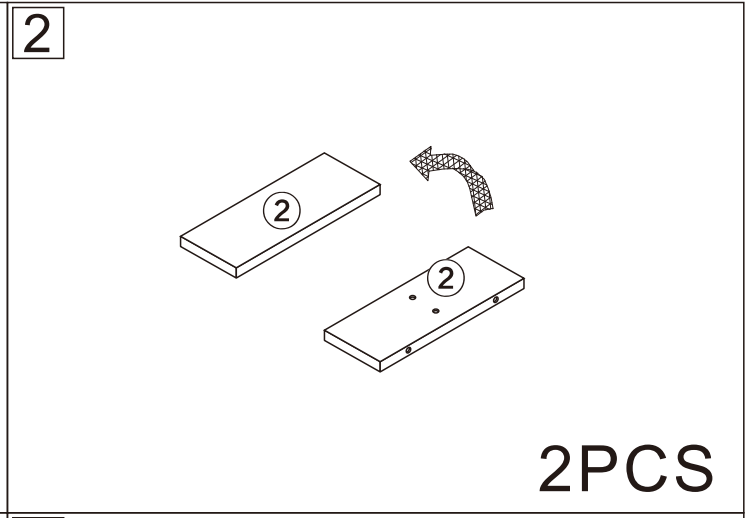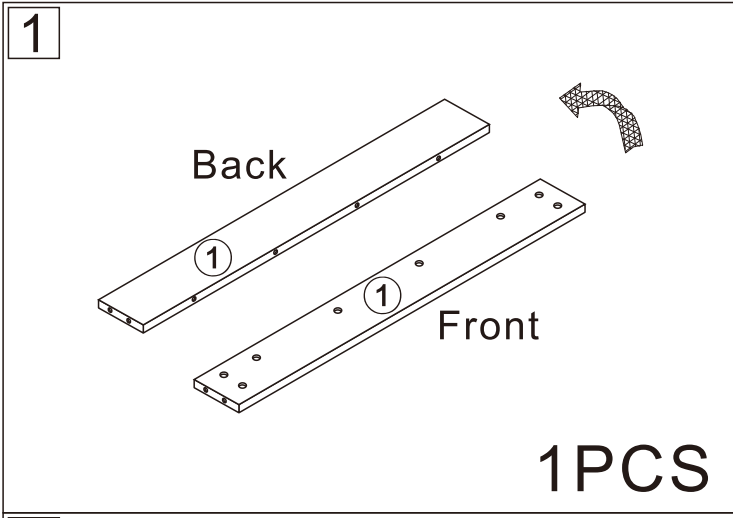


9

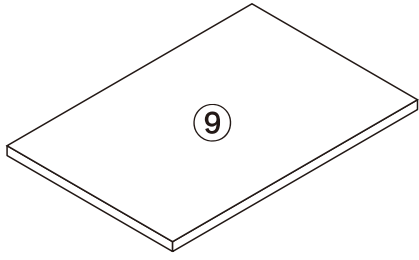







3PCS


10

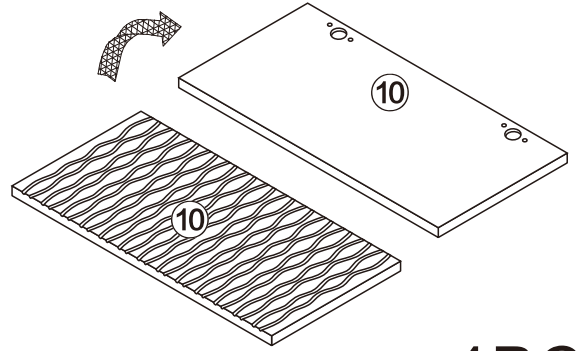


4PCS

1

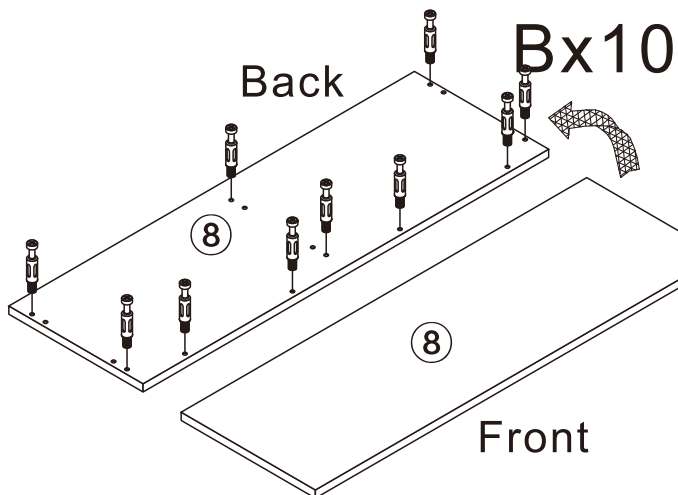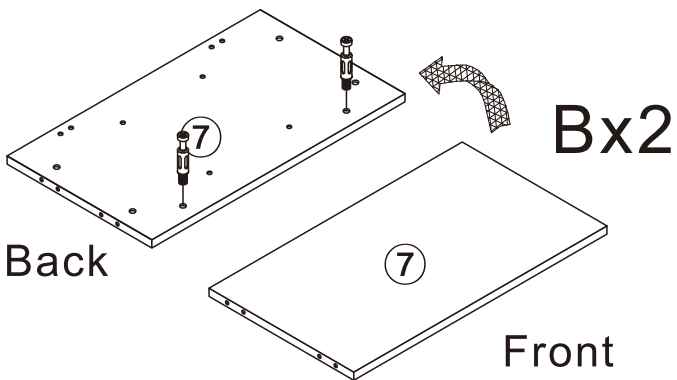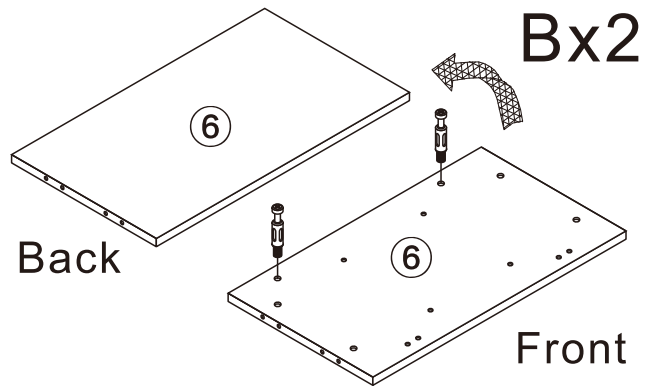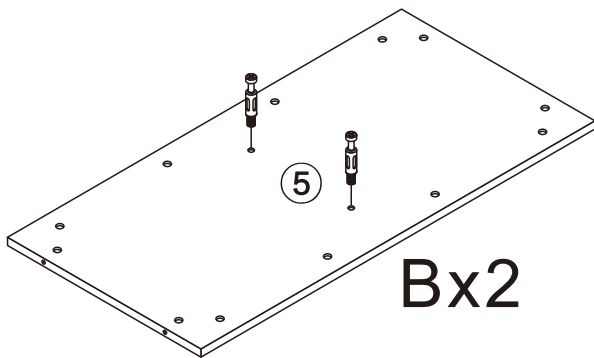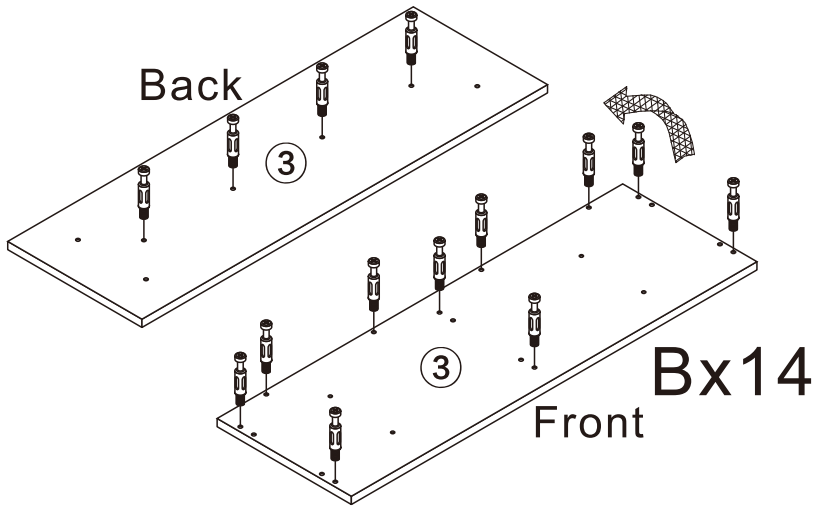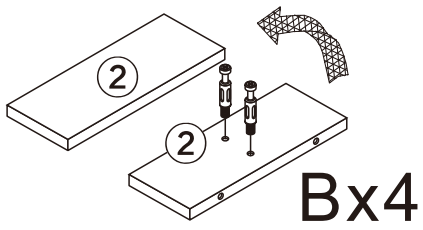


B	34PCS
	
6*28mm	


2

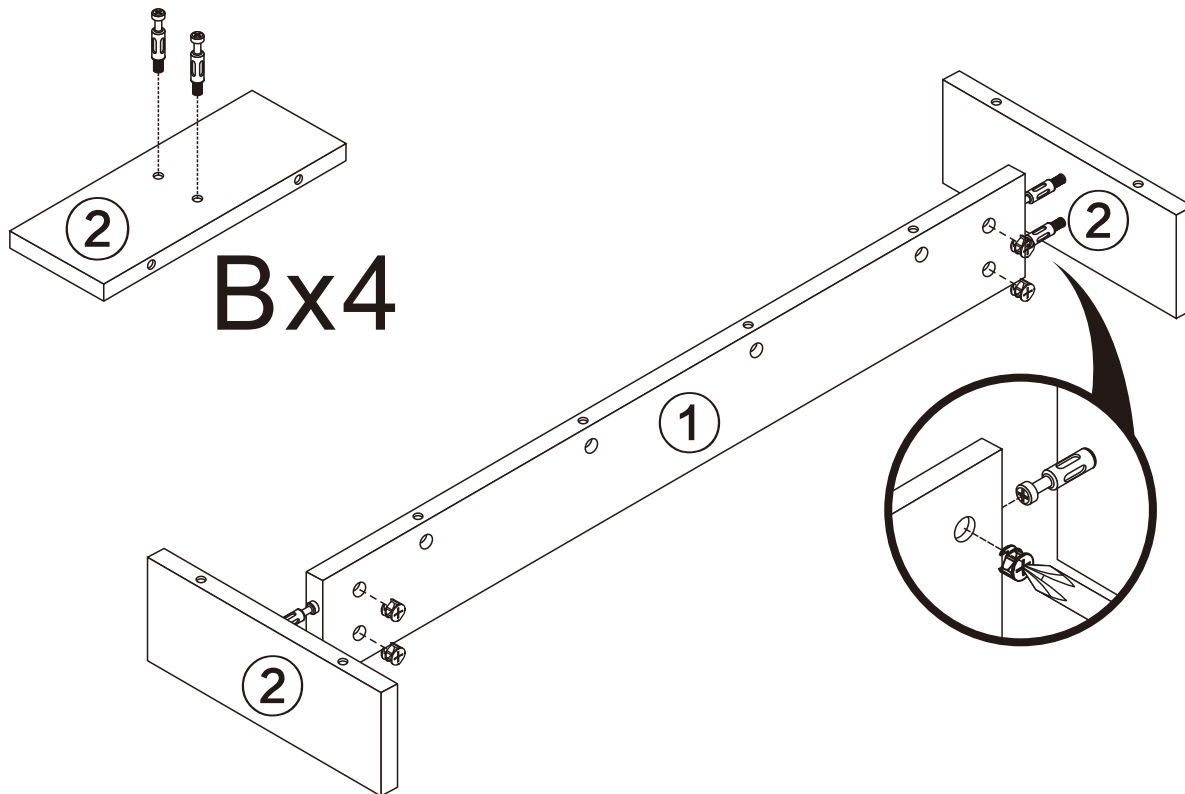


Bx4

A	4PCS
	
15*10mm	


3

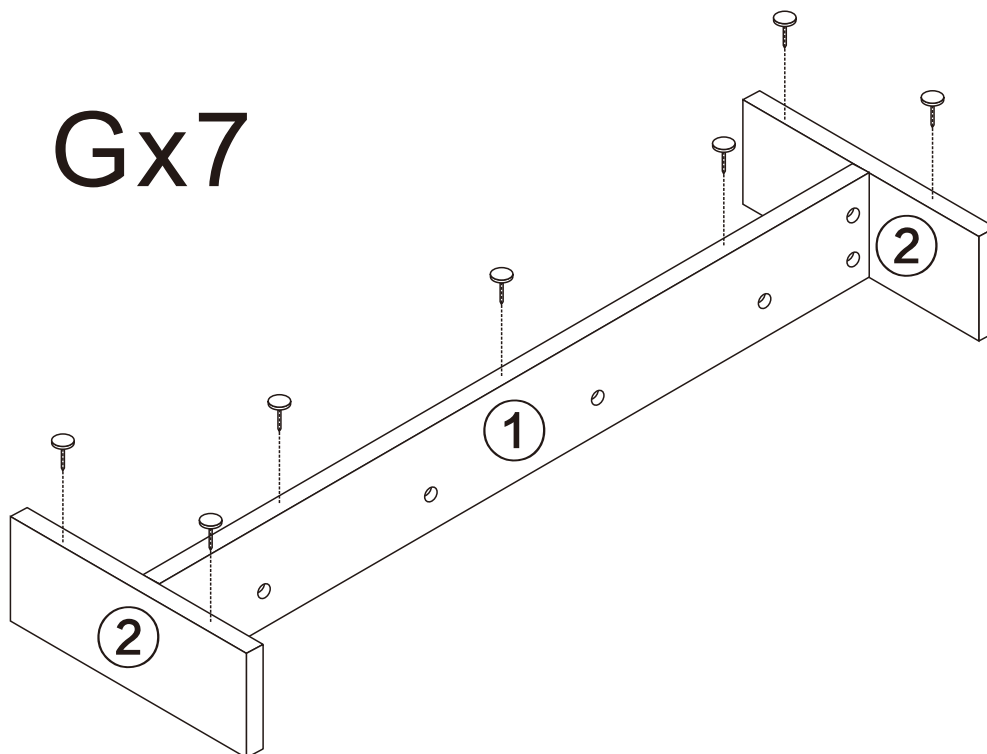


Gx7


G	7PCS
	
Φ 15mm	


4

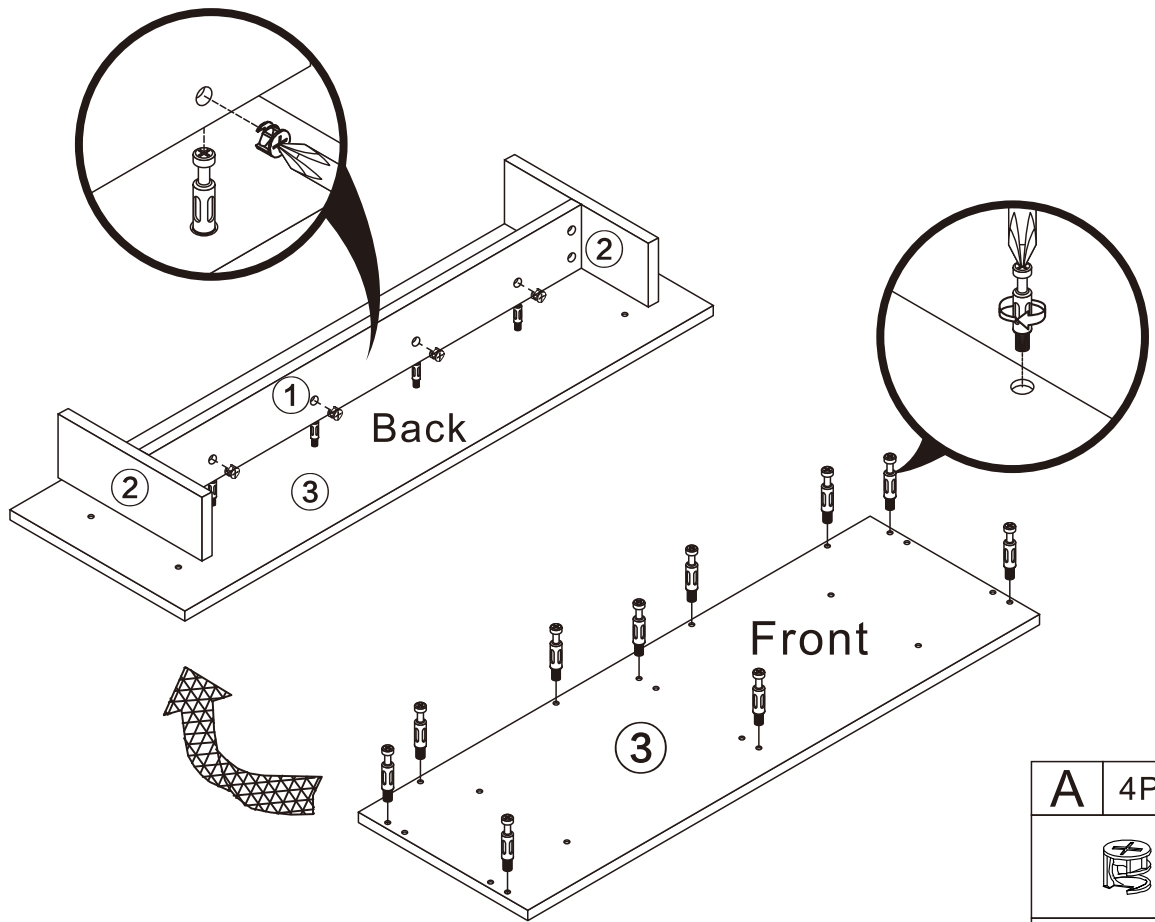


A	4PCS
	
15*10mm	


5

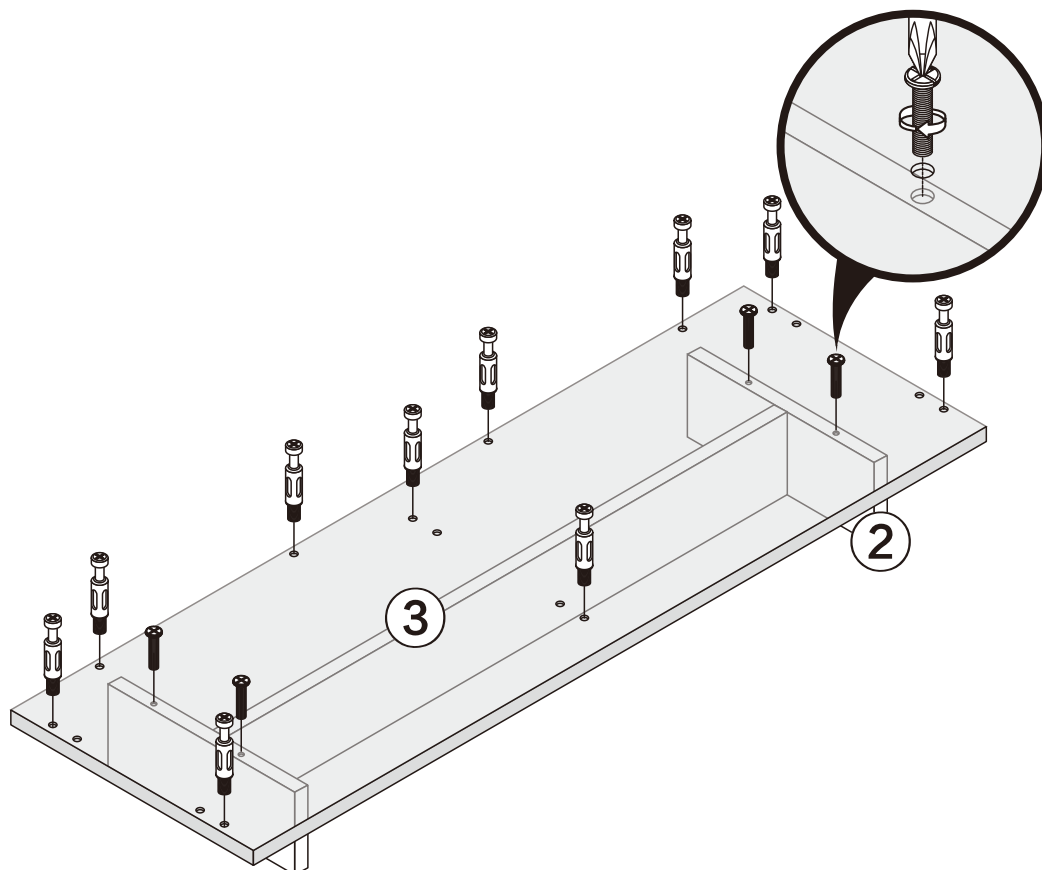


I	4PCS
	
6*35mm	


6


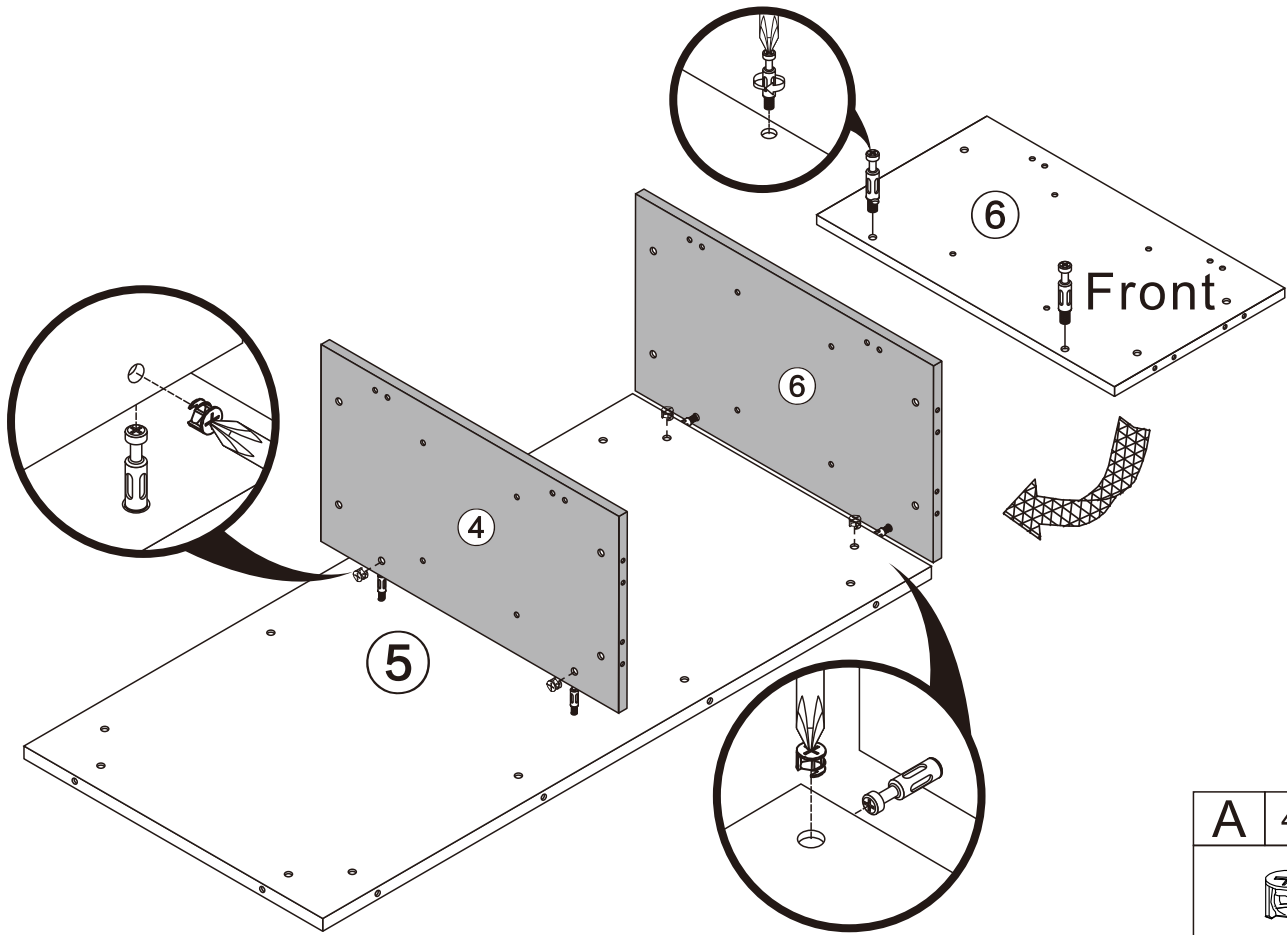




A	4PCS
	
15*10mm	

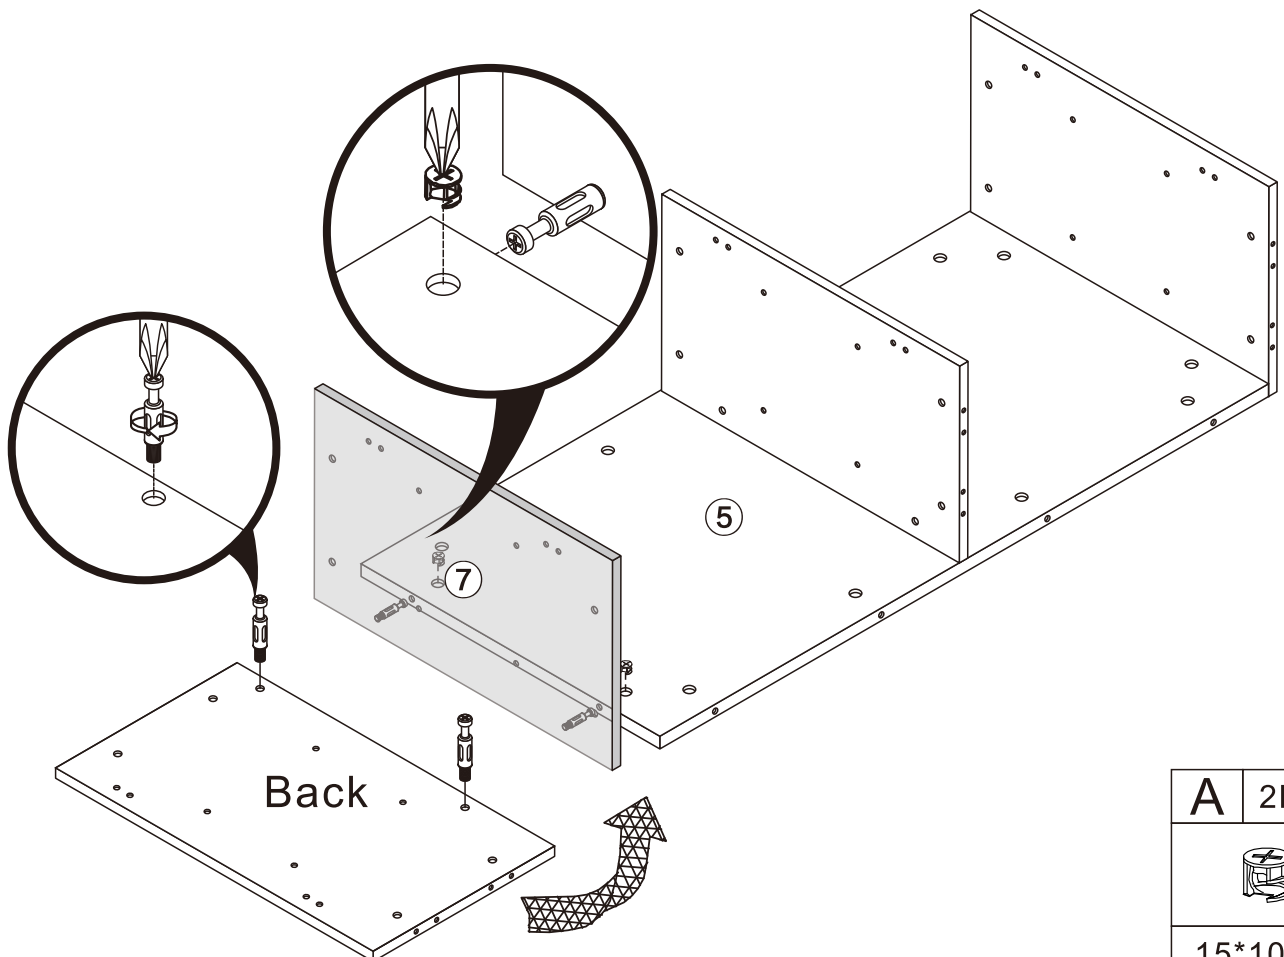
7



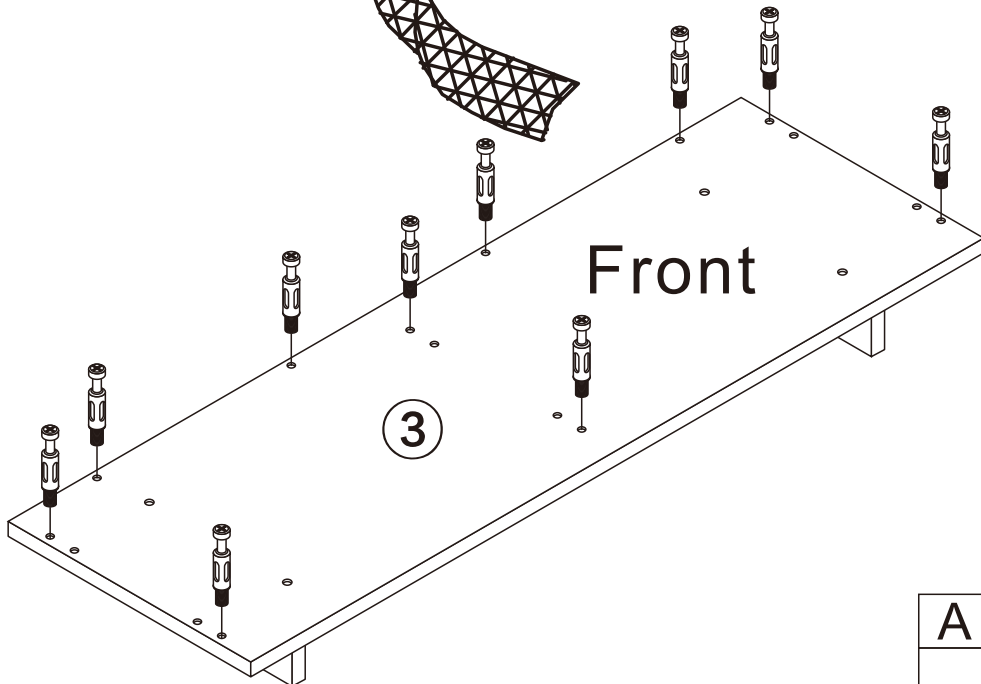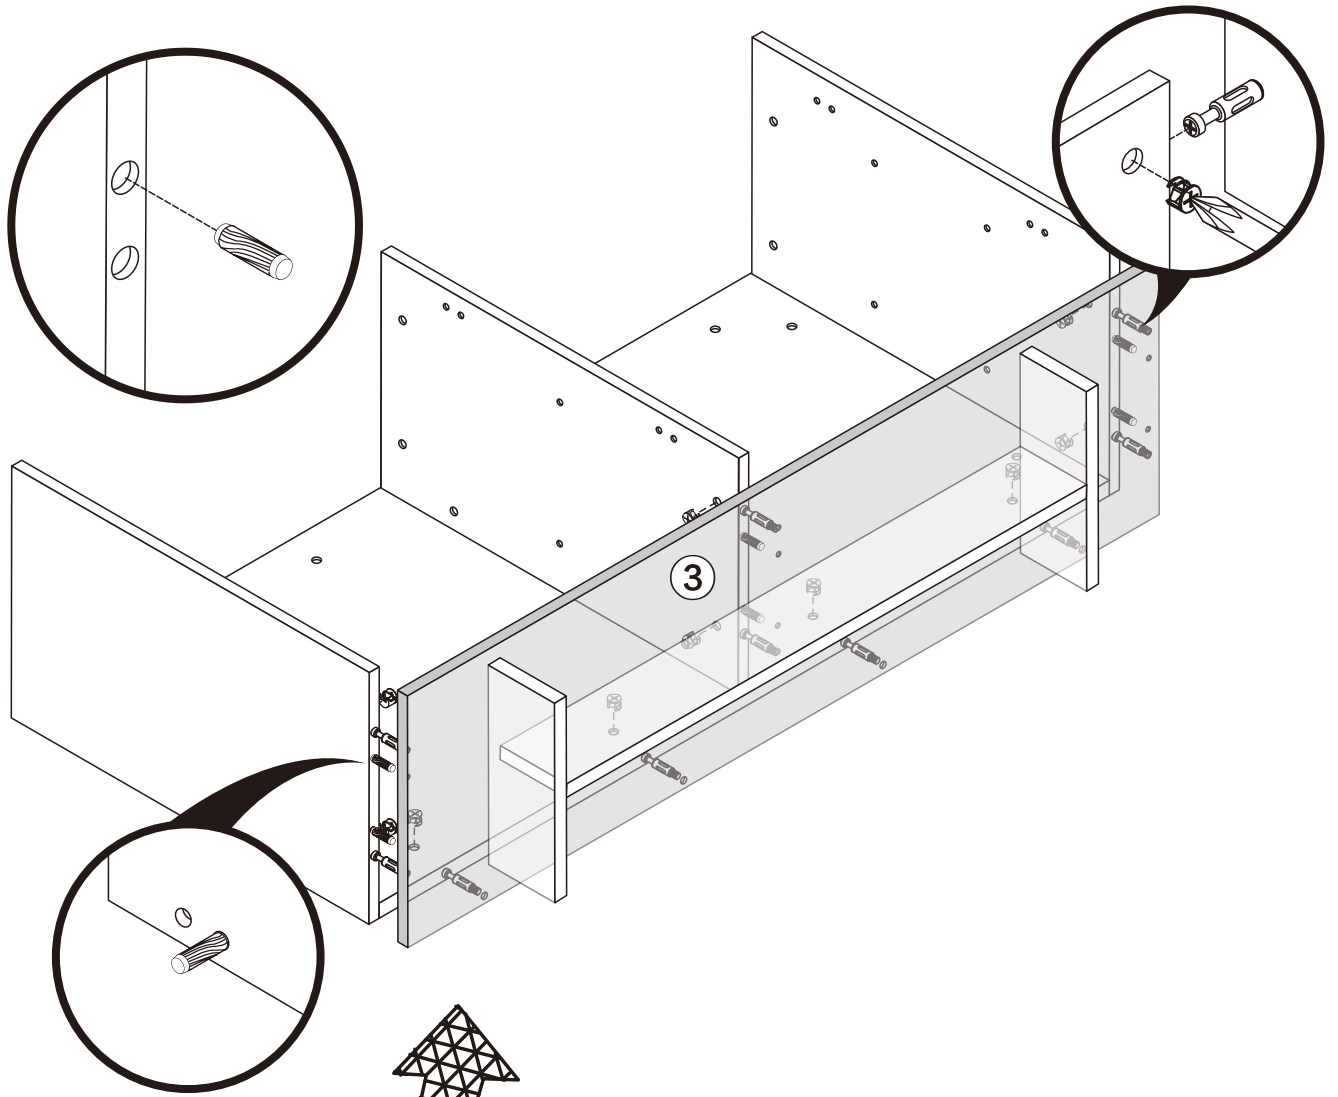


A	2PCS
	
15*10mm	

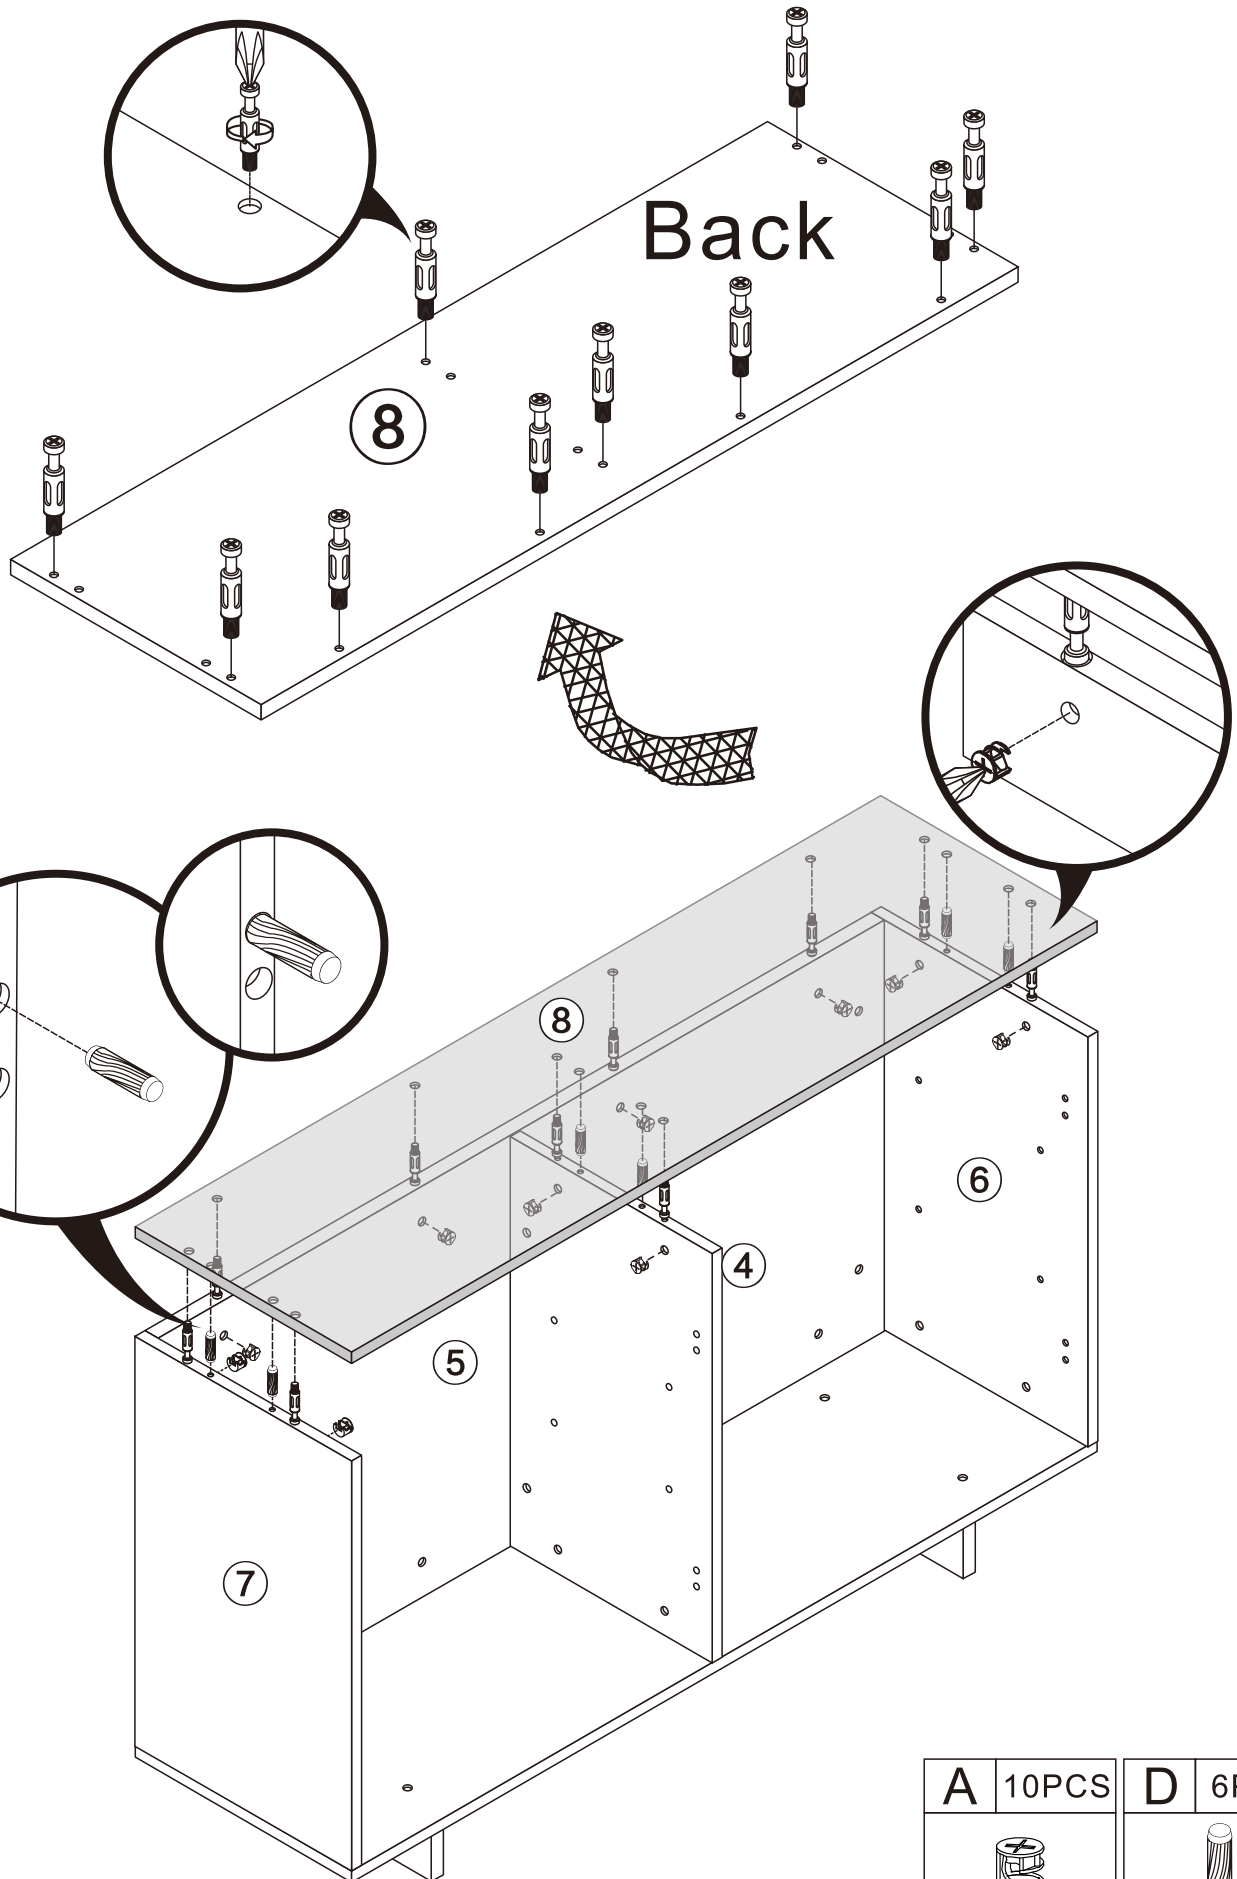



A	10PCS	D	6PCS
			
15*10mm		8*30mm	




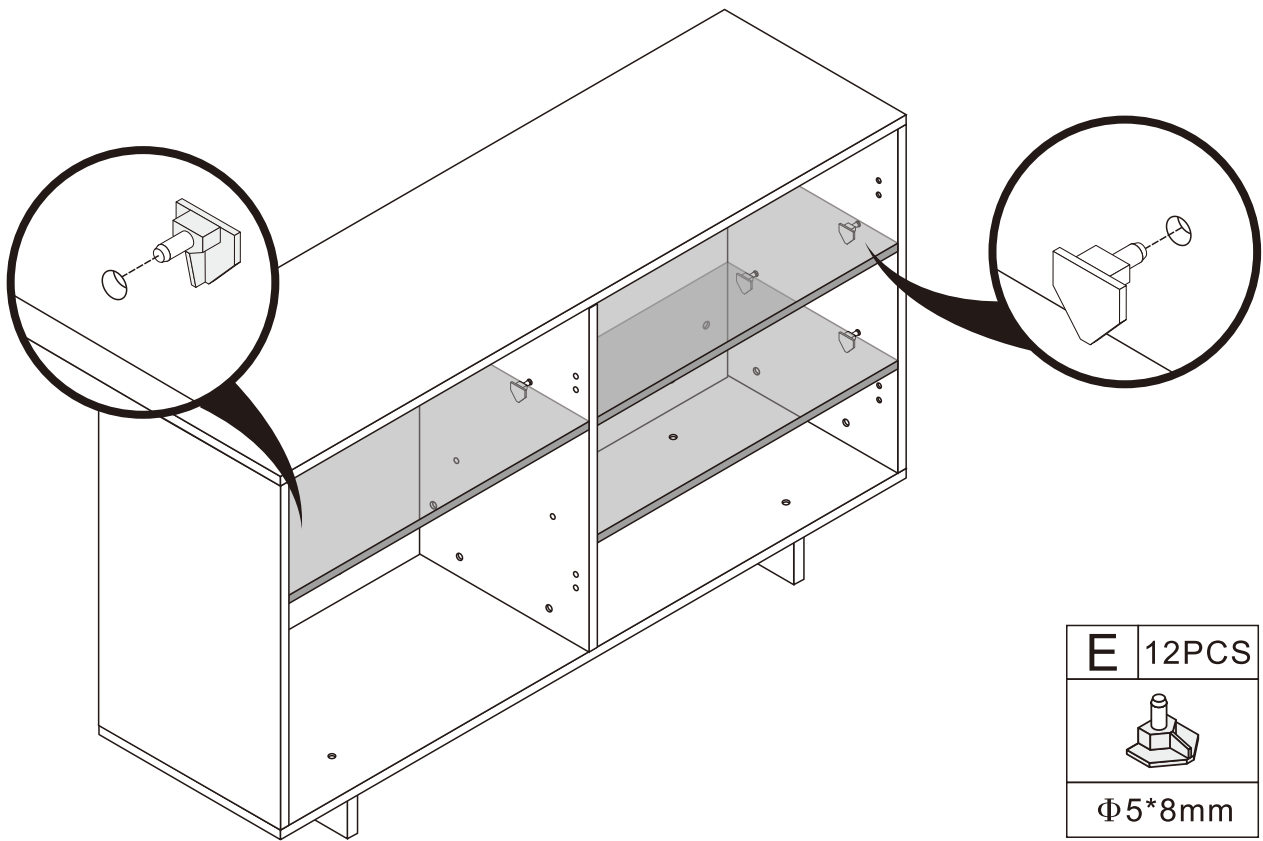



A	10PCS	D	6PCS
			
15*10mm		8*30mm	








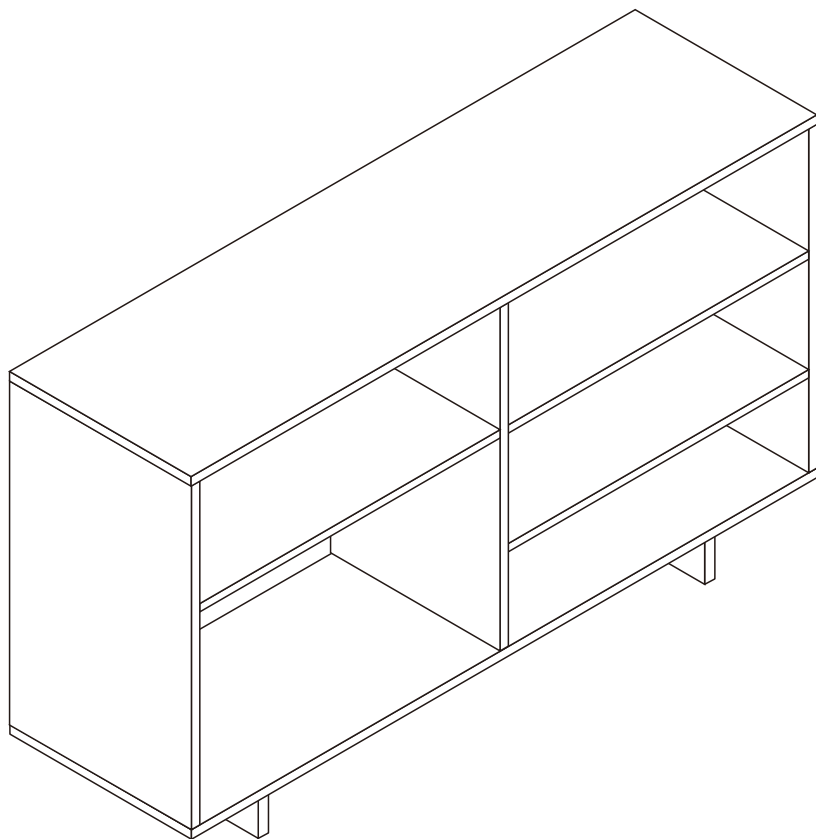E	12PCS
	
Φ5*8mm	

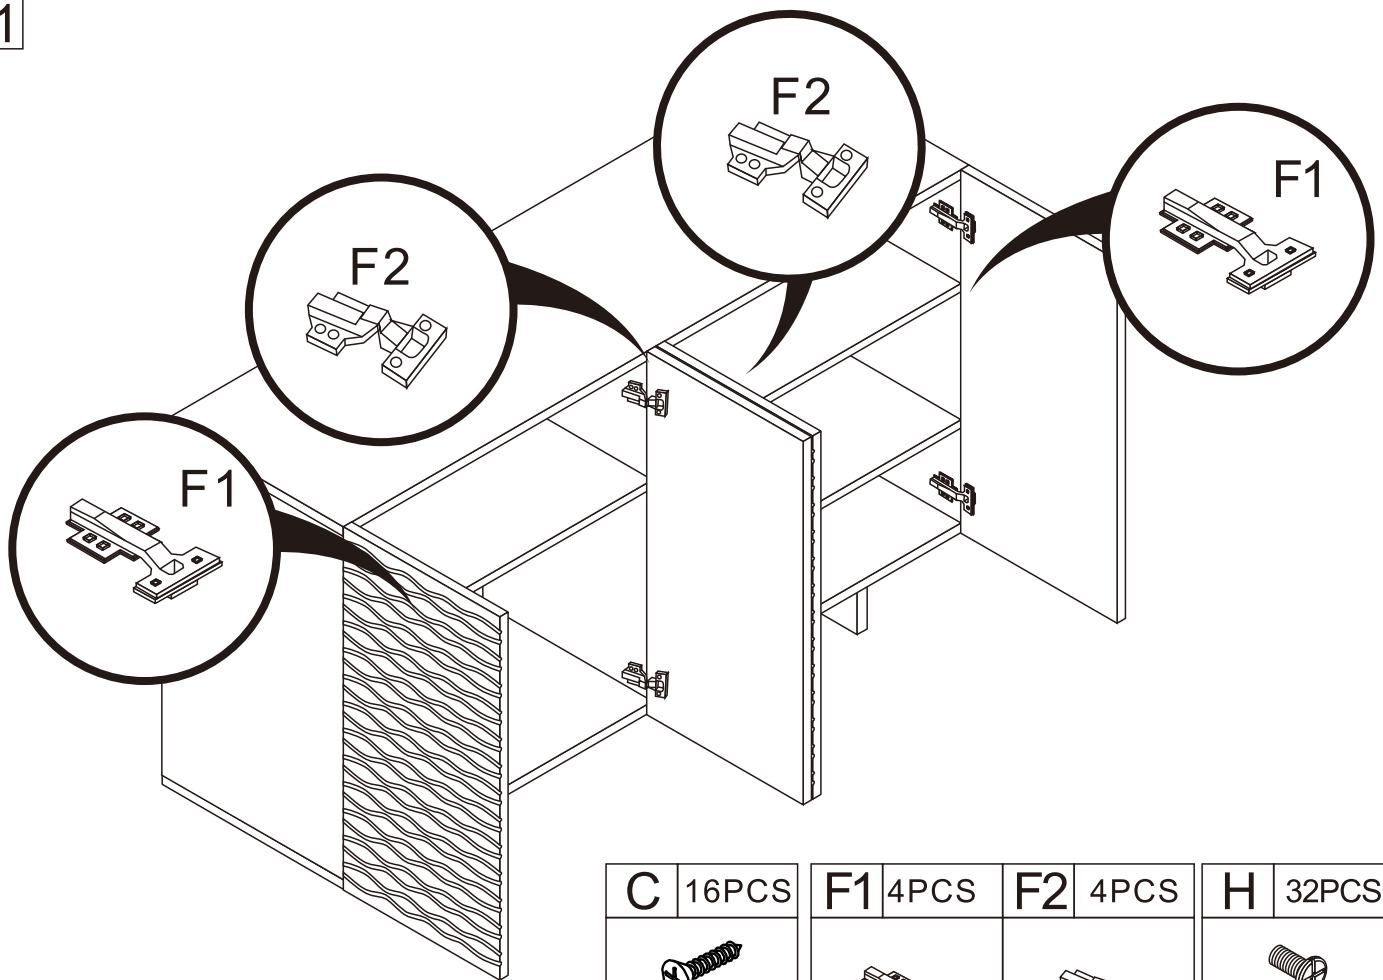



C	16PCS	F1	4PCS	F2	4PCS	H	32PCS
							
3.5*14mm						4*12mm	

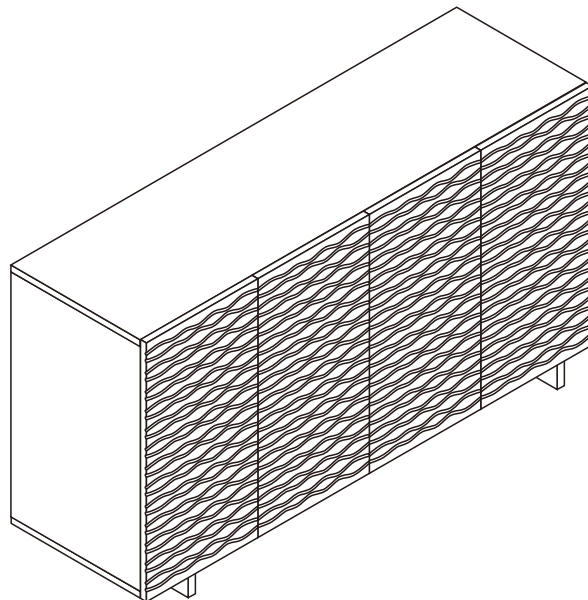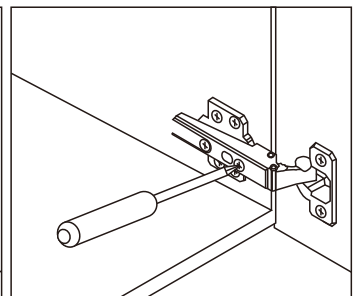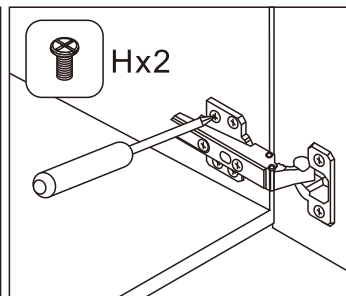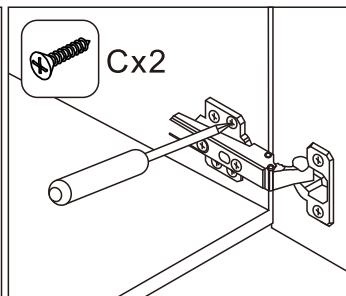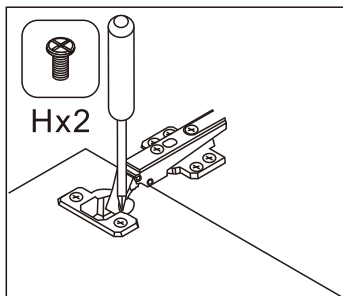

OK!