


USER'S MANUAL


Farmhouse Tall Corner Cabinet

SKU:ST003601

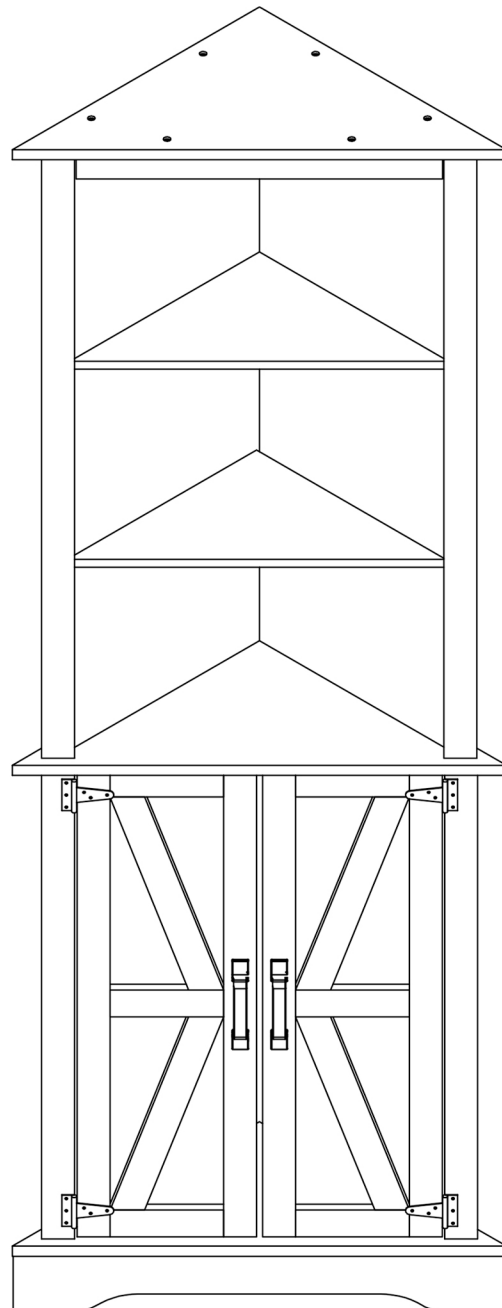


REPLACEMENT PARTS

We are devoted to provide the best products and services for customers. Please contact us via the “Contact seller” button in the detail page of your order for any concern and we'll response as soon as possible.

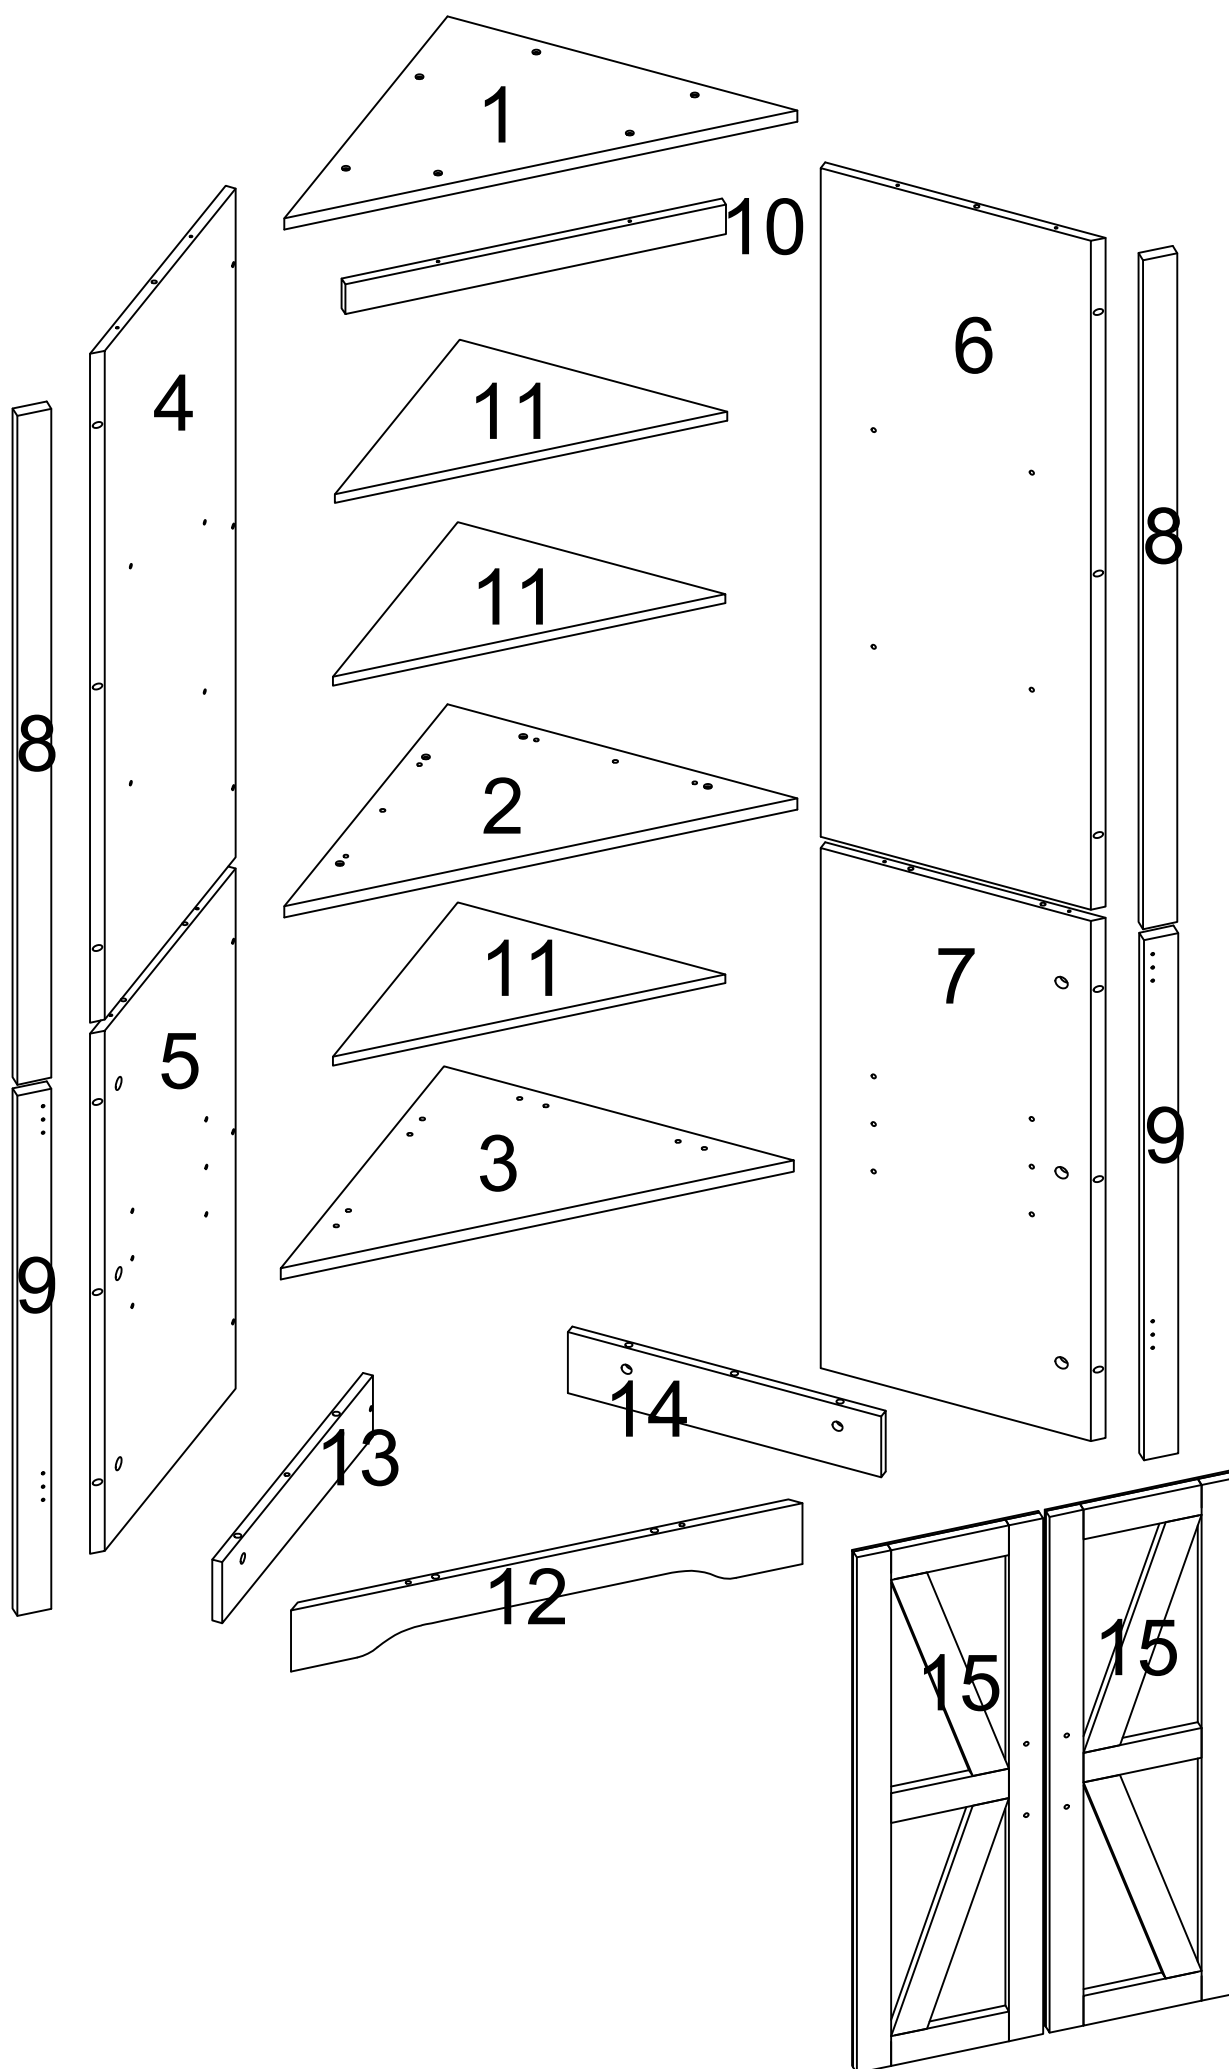


Parts List

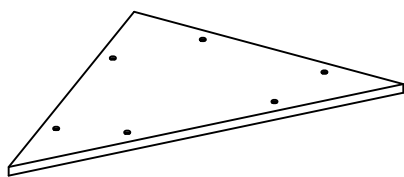


1

1PC

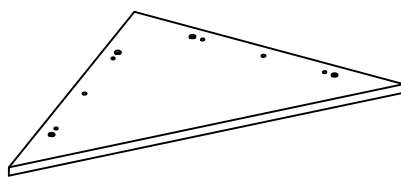


2

1PC

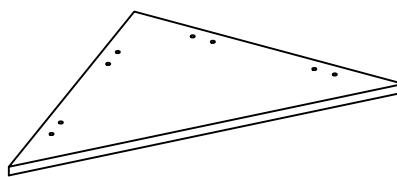


3

1PC

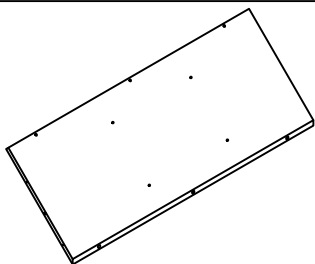


4

1PC

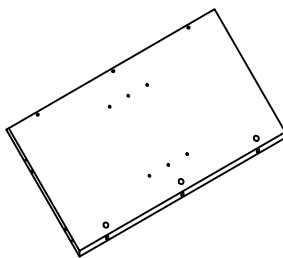


5

1PC

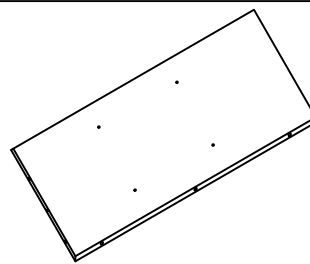


6

1PC

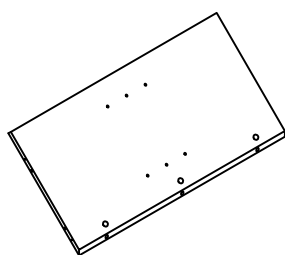


7

1PC

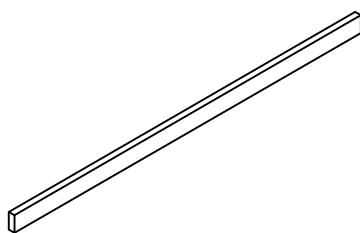

8

2PC

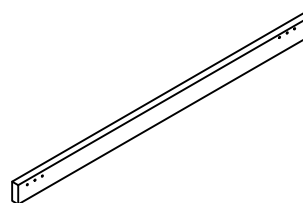


9

2PC




10

1PC

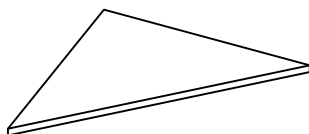


11

3PC

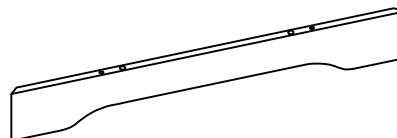


12

1PC

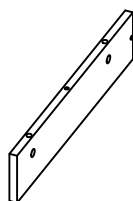


13

1PC

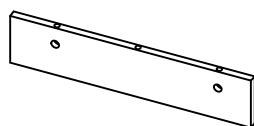

14

1PC

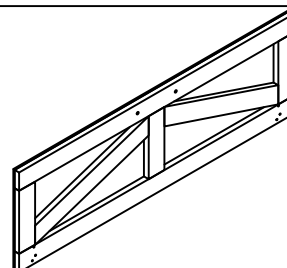

15


2PC

Hardware List



A

10PC



ø12

B


22PC



Ø6*30mm

C


16PC



Ø4*40mm

D

21PC

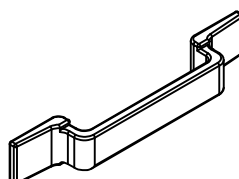

E


2PC



ø3*14mm

F


24PC

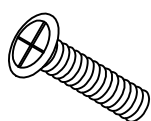

M4*18mm

G

4PC

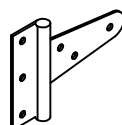


H

4PC




I

12PC

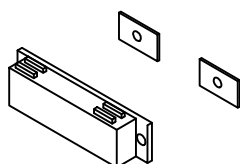

J

1PC



K

12PC



ø3*14mm

L

4PC





M

1PC



Product Assembly

STEP 1

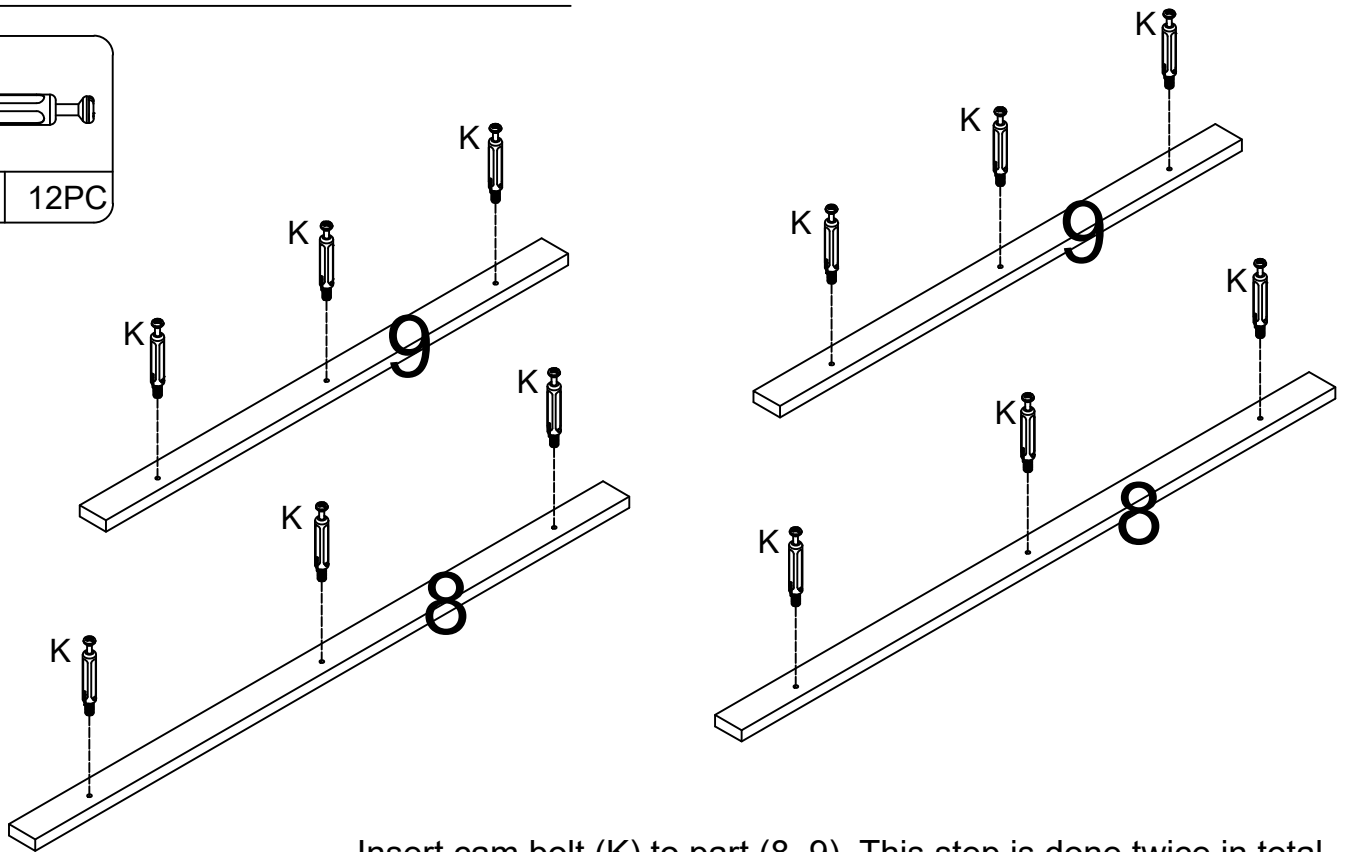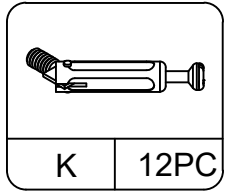


Insert cam bolt (K) to part (8, 9). This step is done twice in total.

STEP 2

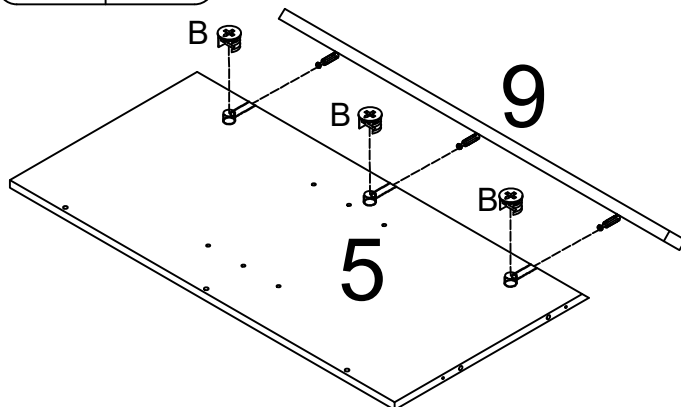
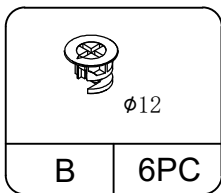


Attach Part (9) to part (5, 7) through bolt (K).

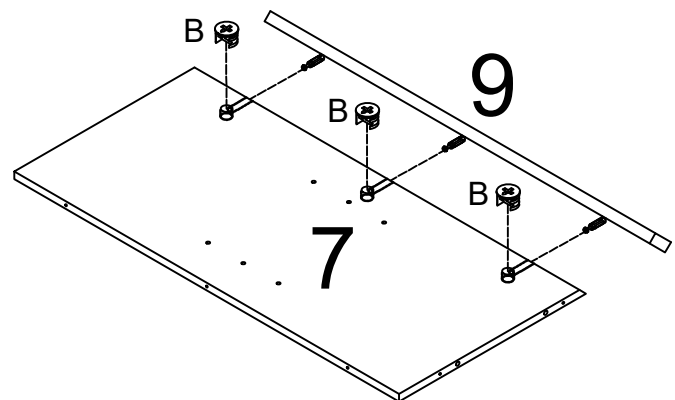



Insert and secure cam lock (B) to part (5, 7) to lock part (9).

STEP 3

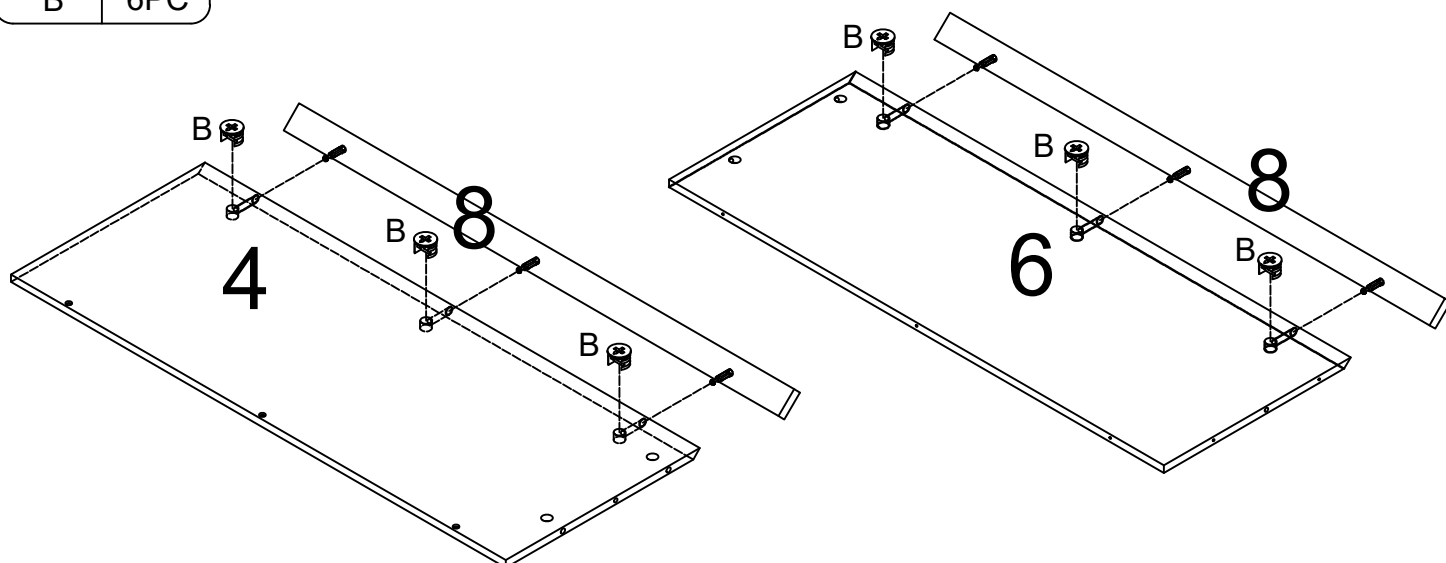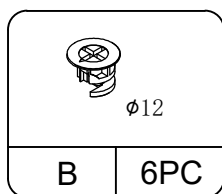

Attach Part (8) to part (4, 6) through bolt (K).
Insert and secure cam lock (B) to part (4, 6) to lock part (8)



STEP 4

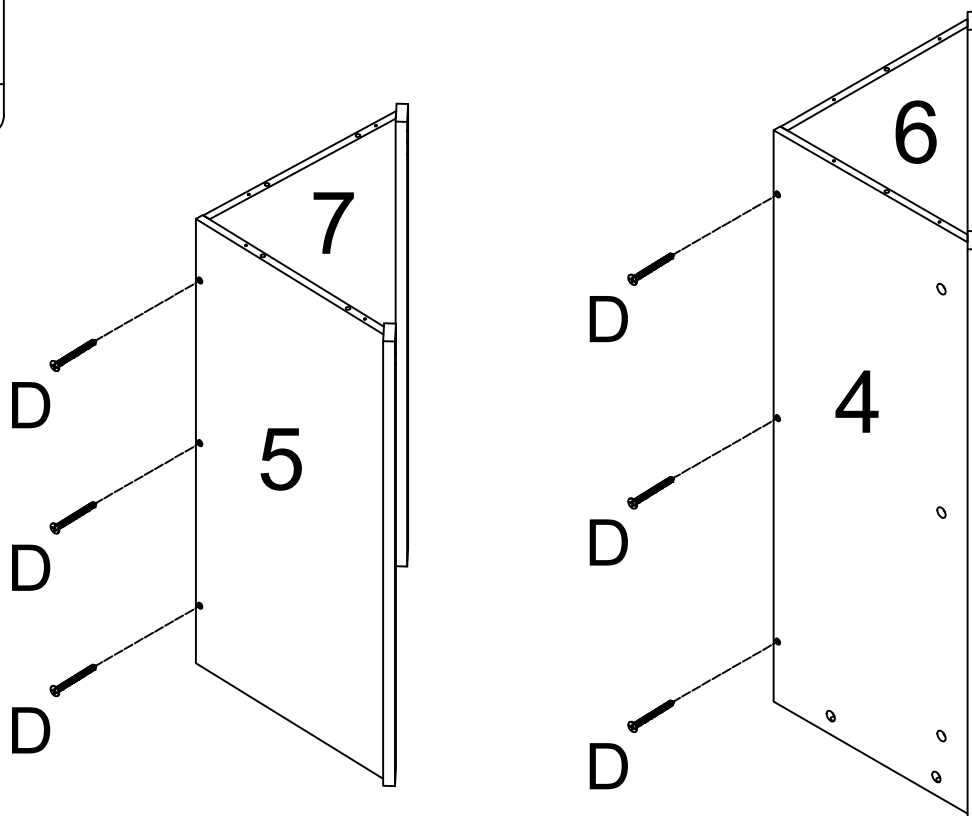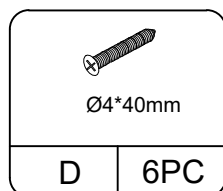

Attach Part (5, 4) into Part (7, 6) through Screw (D)

STEP 5

 Ø4*40mm		 Ø3*14mm			
D	2PC	L	2PC	J	1PC

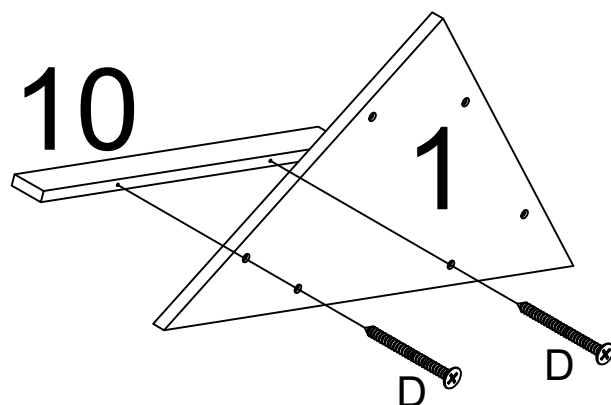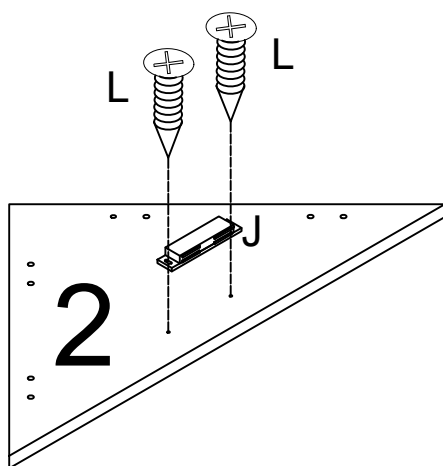


Attach Part (J) into Part (2) through Screw (L)

Attach Part (1) into Part (10) through Screw (D)




STEP 6

 Ø4*40mm	
D	1PC

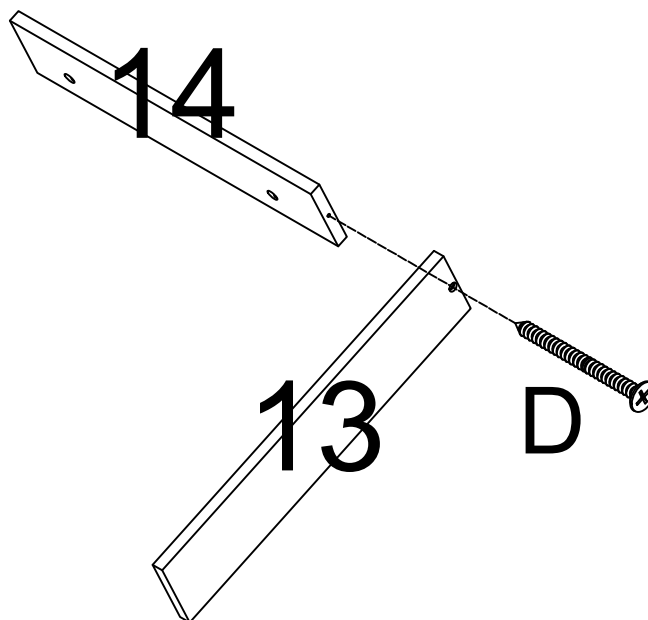





Attach Part (13) into Part (14) through Screw (D)

STEP 7

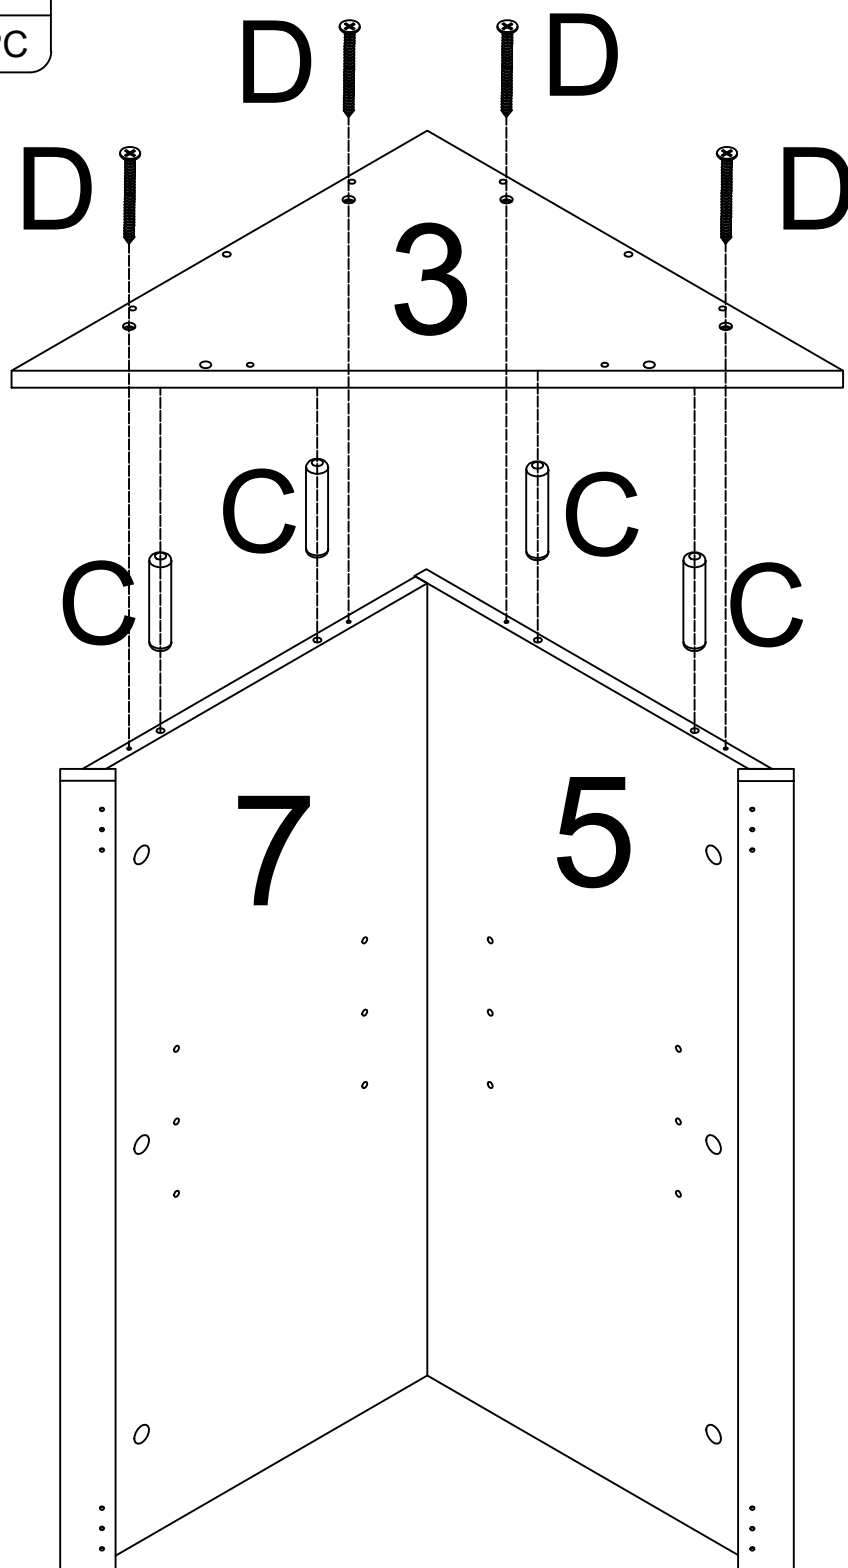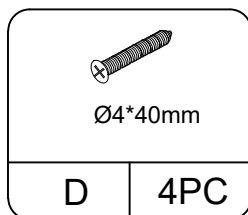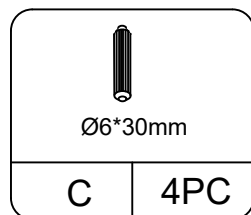

Place semi-finished products at an angle as shown in the reference image
 Insert dowel (C) into part (7, 5).
 Attach part (3) to part (7, 5) through bolt (D) and dowel (C).

STEP 8

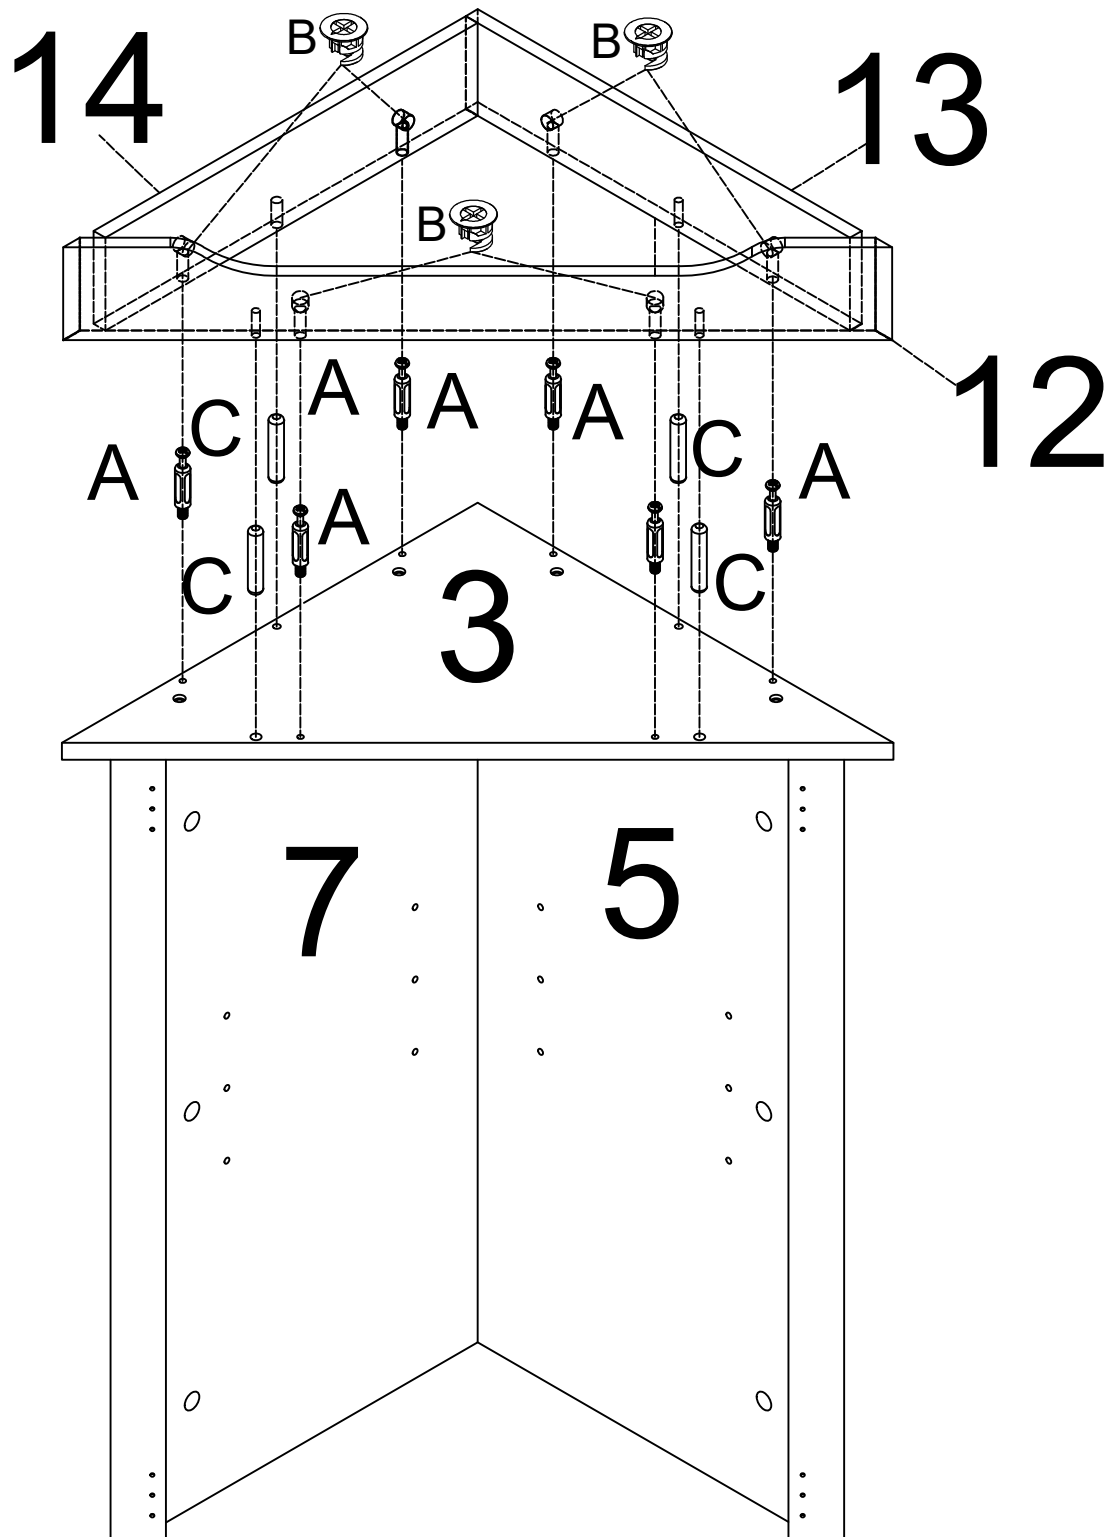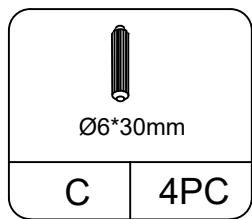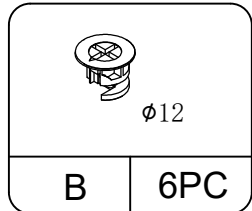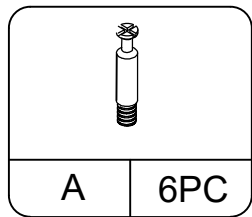


Insert cam bolt (A) to part (3) with screwdriver.

Insert dowel (C) into part (3).

Attach part (12, 13, 14) to part (3) through bolt (A) and dowel (C).

Insert and secure cam lock (B) to part (12, 13, 14) to lock part (3)


STEP 9

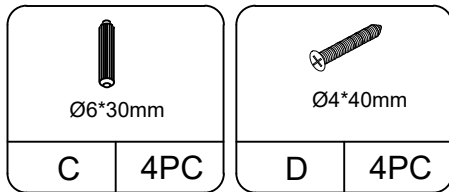


Place semi-finished products at an angle as shown in the reference image.

Insert dowel (C) into part (5, 7).

Attach part (2) to part (5, 7) through bolt (D) and dowel (C).

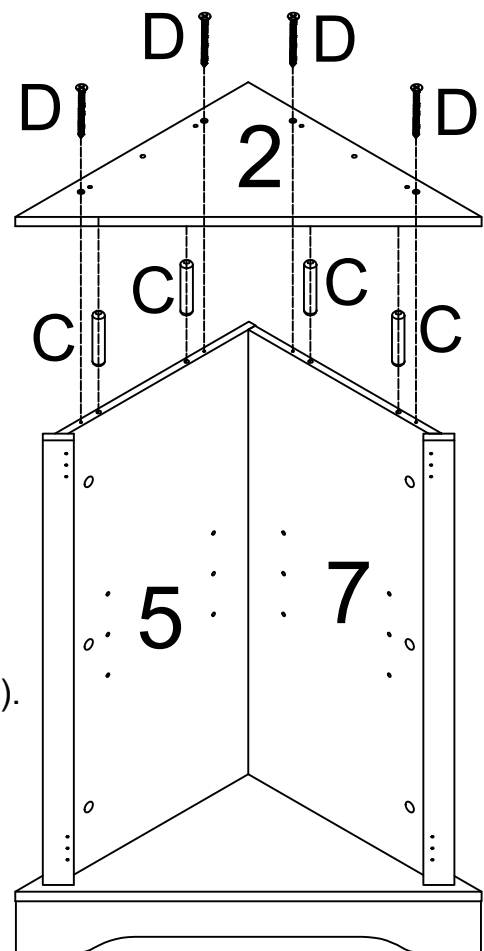


STEP 10

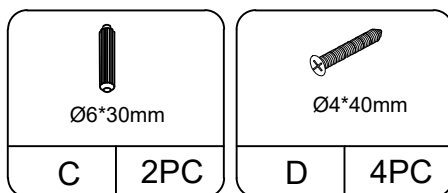




Place semi-finished products at an angle as shown in the reference image.

Insert dowel (C) into part (4, 6)

Attach part (1) to part (4, 6) through bolt (D) and dowel (C)

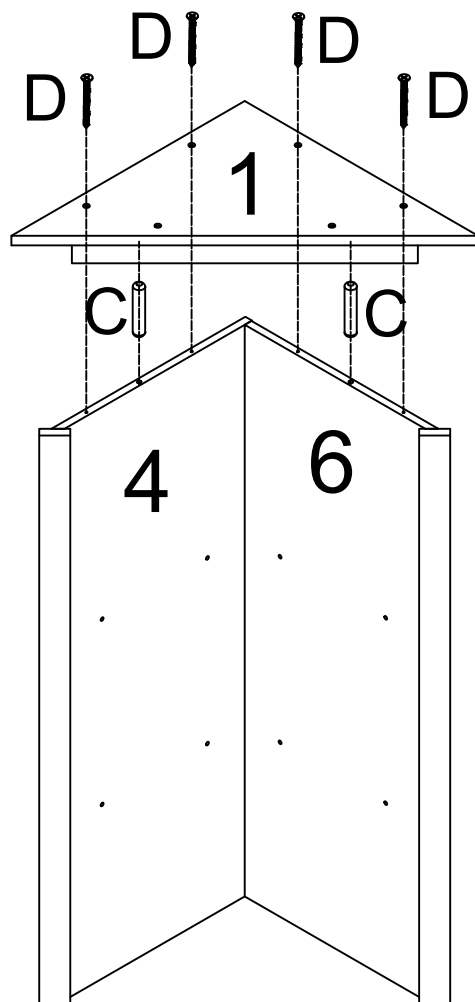

STEP 11

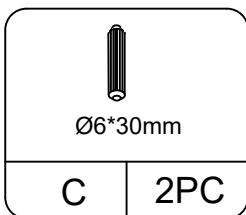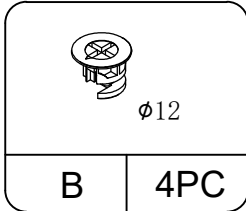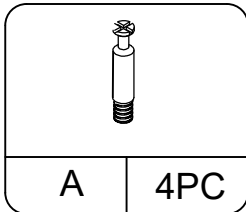


Insert cam bolt (A) to part (2) with screwdriver.



Insert dowel (C) into part (2).

Attach part (4, 6) to part (2) through bolt (A) and dowel (C).

Insert and secure cam lock (B) to part (4, 6) to lock part (2).


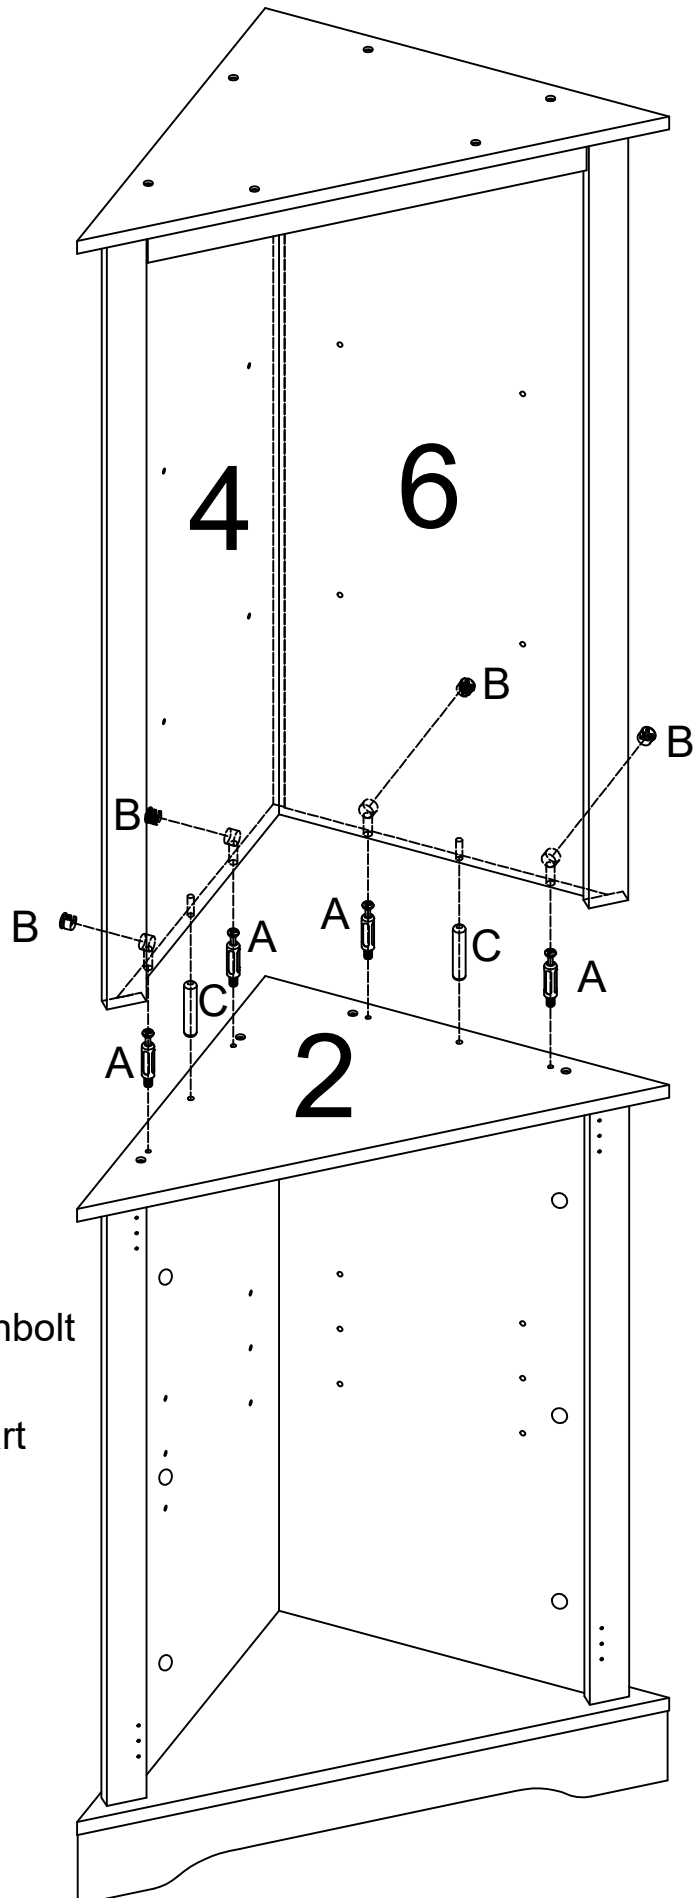


STEP 12

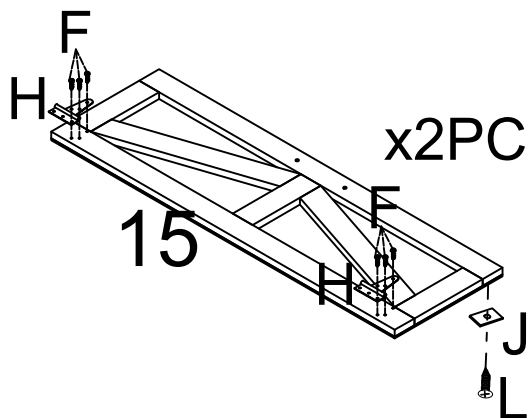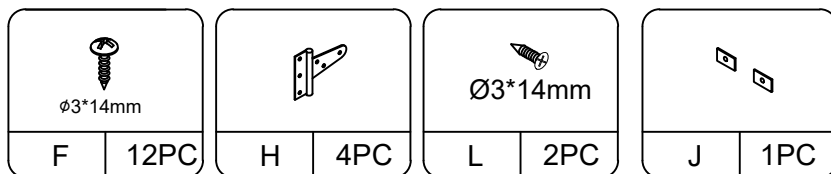


Attach Part (H) into Part (15) through Screw (F).
Attach Part (J) into Part (15) through Screw (L).

STEP 13

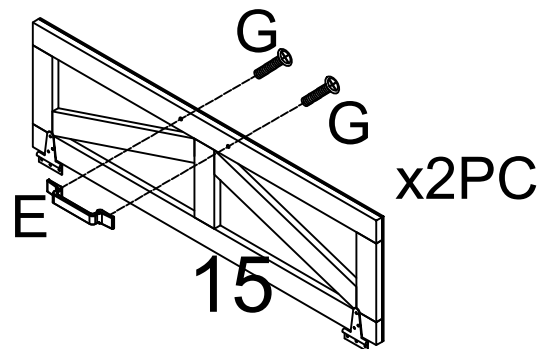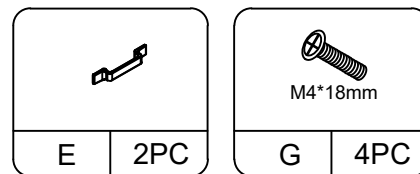


Attach Part (E) into Part (15) through Screw (G). This step is done twice in total.



STEP 14

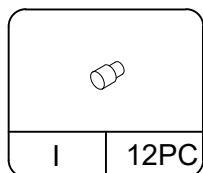

Insert support pin (I) to part (4, 5, 6, 7)


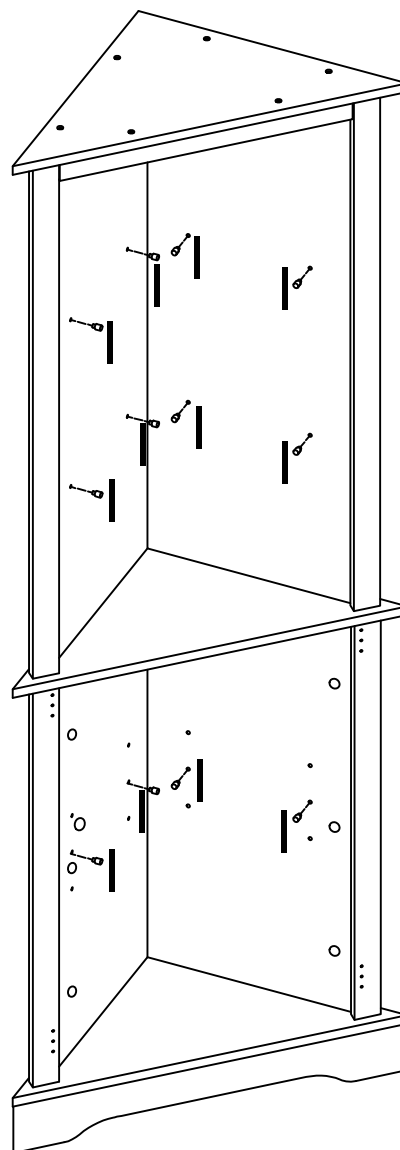


STEP 15

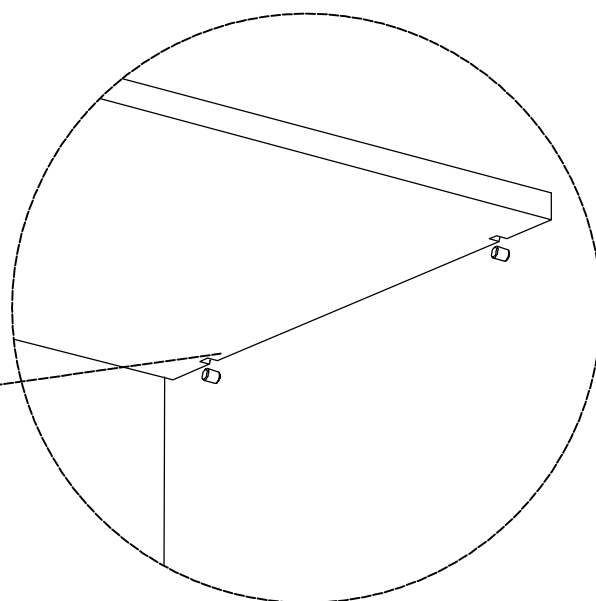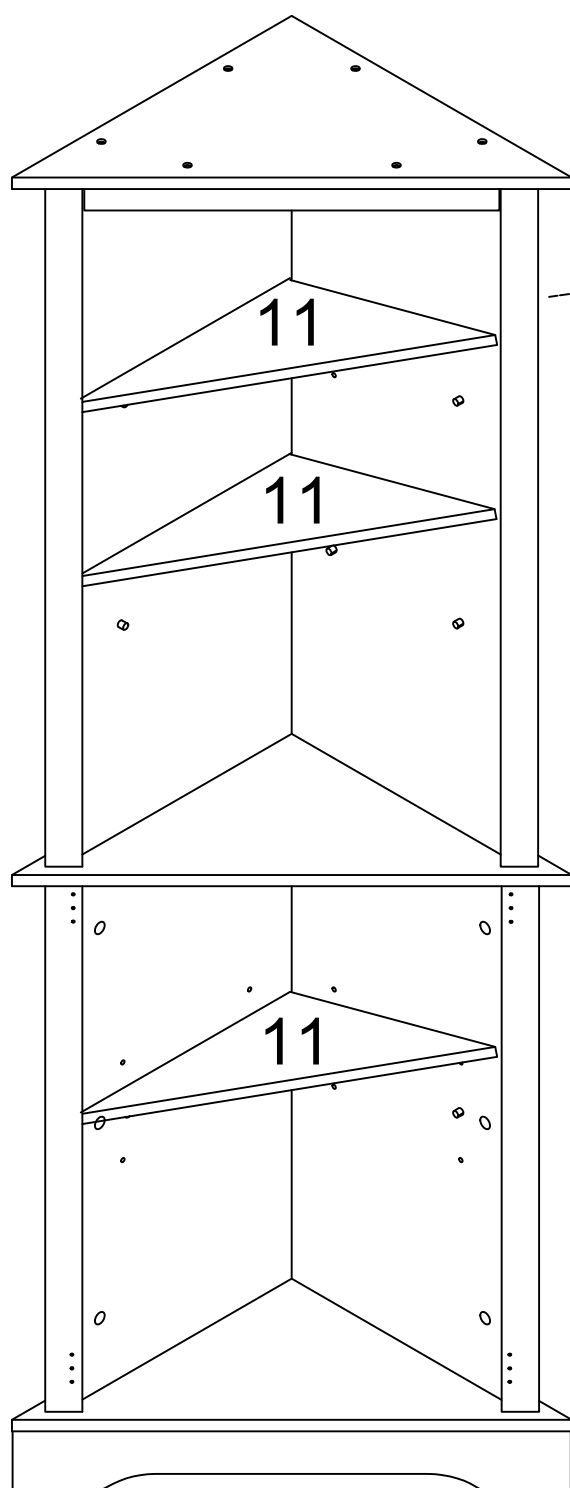


Insert part (1 1) horizontally between part (4, 5) and part (6, 7)

STEP 16

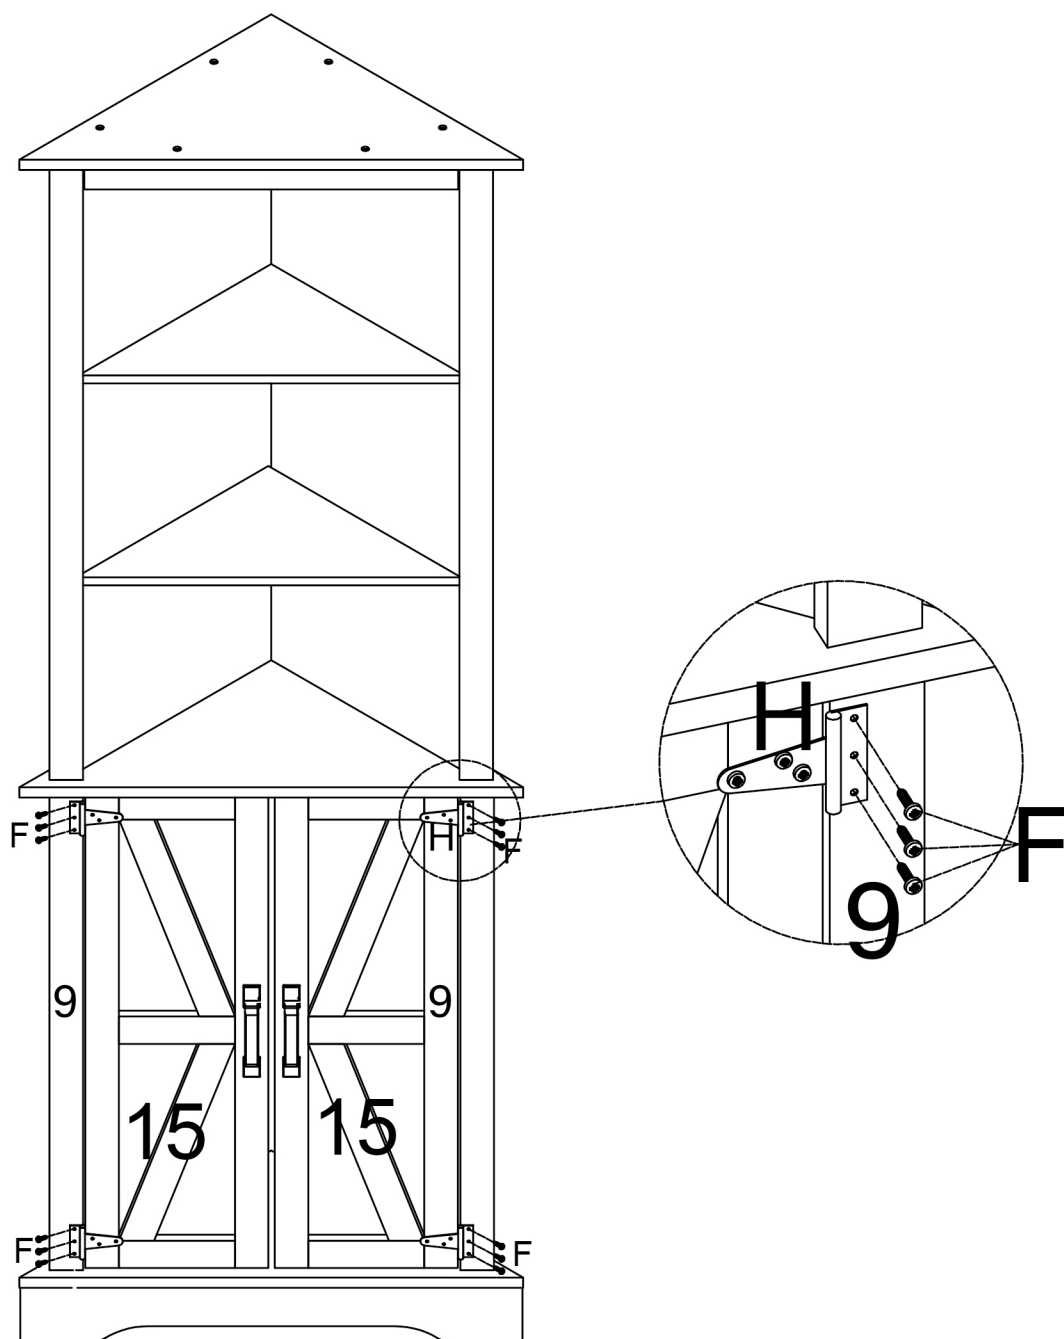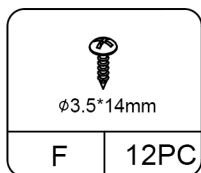


Attach Part (H) into Part (9) through Screw (F).

STEP 17

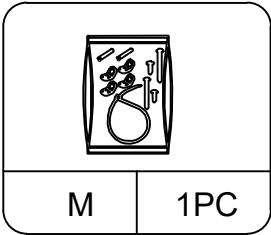

PART LIST	FIGURE	QUANTITY	DESCRIPTION
1		2PC	LONG SCREW (Dia.4mmX38mmL)
2		2PC	SHORT SCREW (Dia.4mmX19mmL)
3		4PC	METAL "L" BRACKET
4		2PC	PLASTIC ANCHOR
5		2PC	CABLE

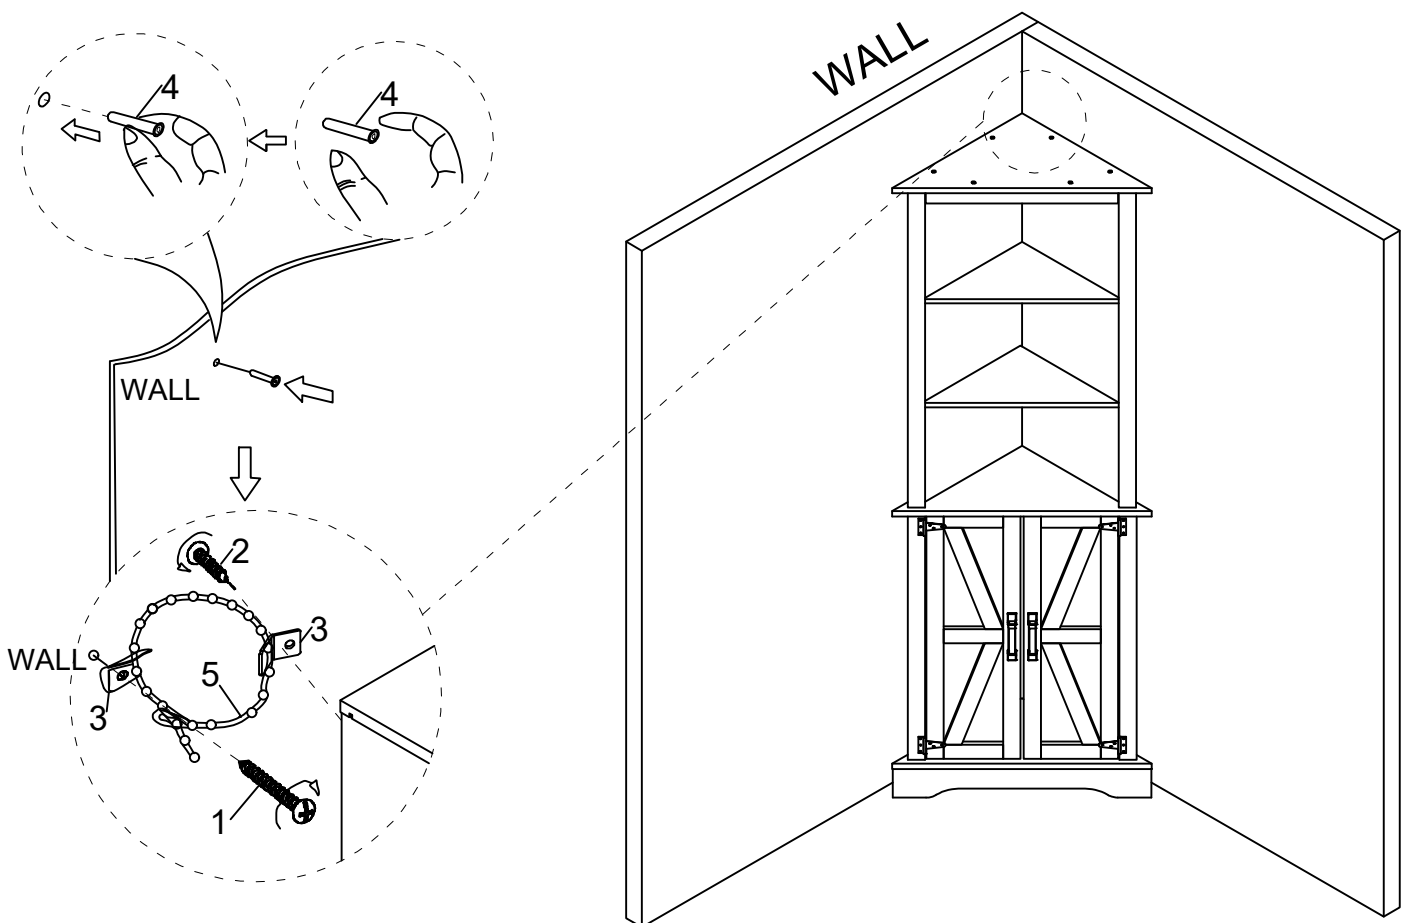

Follow the instructions printed on the plastic bag containing the tipping restraint hardware to attach the tip-over restraints to the unit and the wall.

NOTE: The tipping restraint hardware included is for drywall construction. It will be necessary to drill holes for the wall anchors. Depending upon your wall construction, different anchor hardware may be required. Please contact your local hardware store for assistance.

STEP 18

