

flushbonading (P3-P7) wall-hung type (P8-P16)



Risk of personal injury. To avoid possible situations. power to the circuit breaker or fuse box must be turned off before attempting any installation procedure


What you need to do before you start

- Check for shipping damage or missing parts immediately upon receipt of the product.
- Handle the product carefully to prevent all sides and edges of the glass from being struck.
- Make sure you have all the tools you need to get the job done.
- Make sure there are no hidden pipes or cables in the walls before drilling.


 If drilling into a tile, use a piece of masking tape on the tile to prevent the bit from slipping.


Installation preparation


- Clean with a soft cloth only after closing.
- Do not use cleaning agents or abrasives.
- Keep moisture away from the lamp.

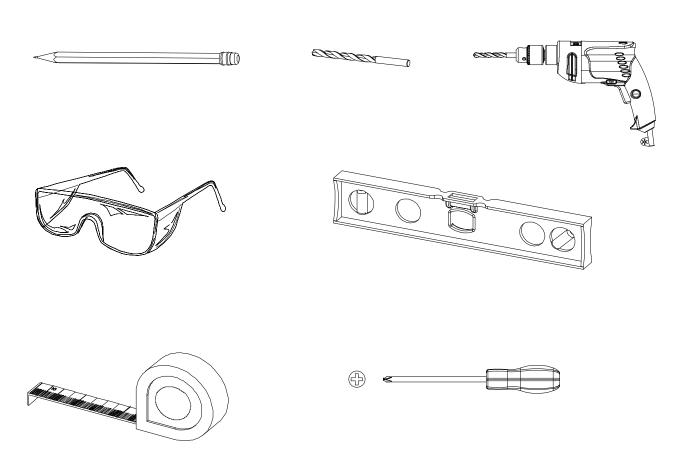


tool use

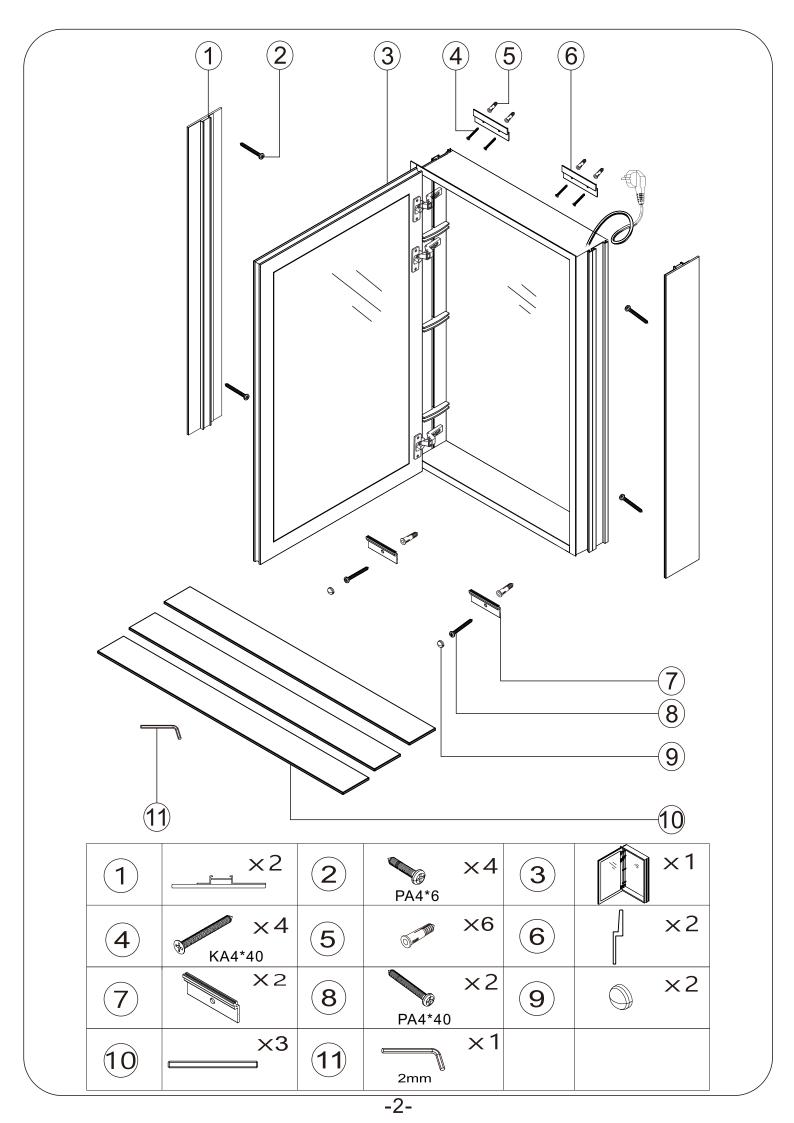

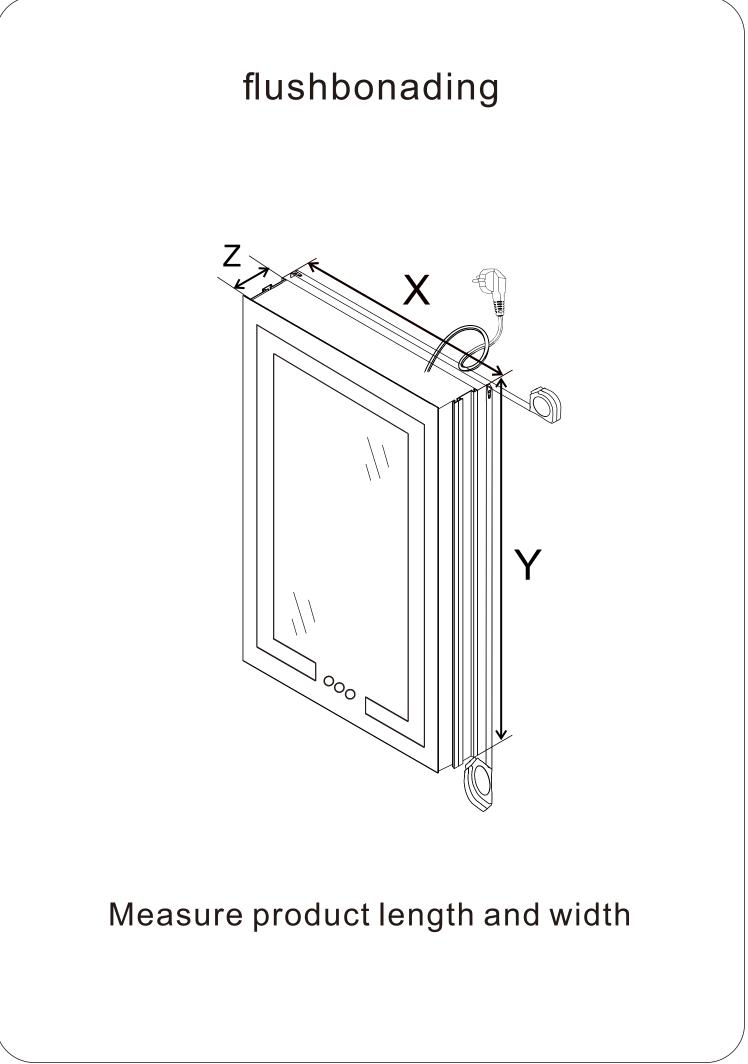

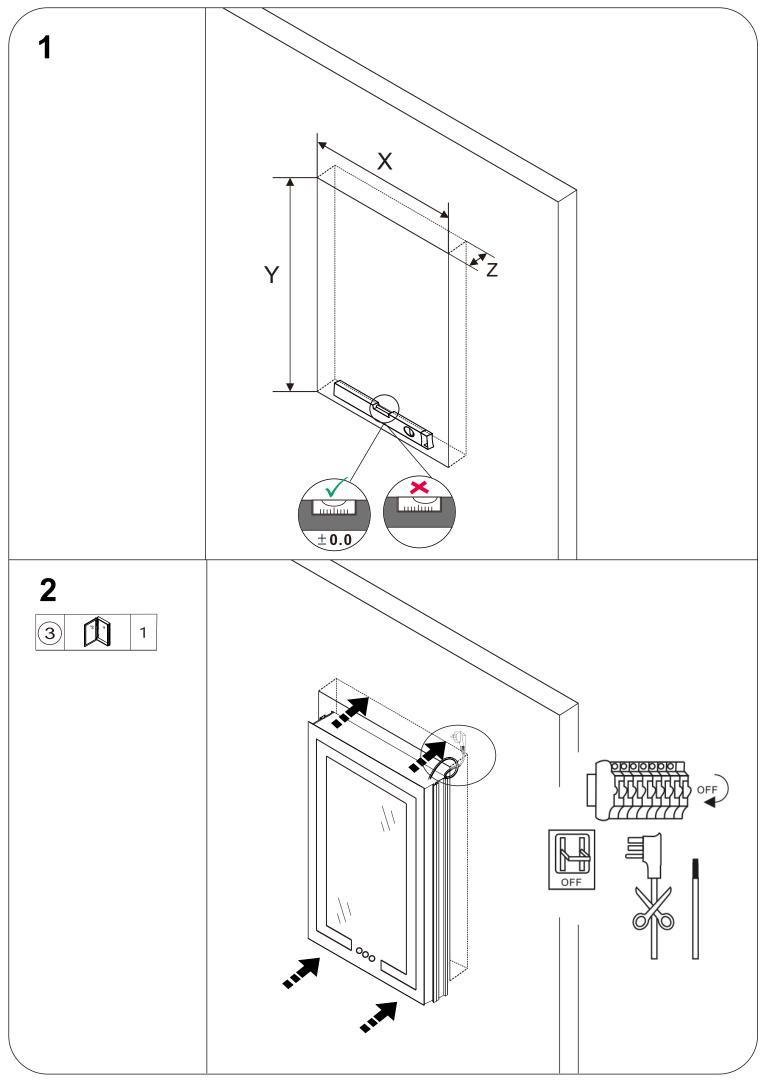

-4-

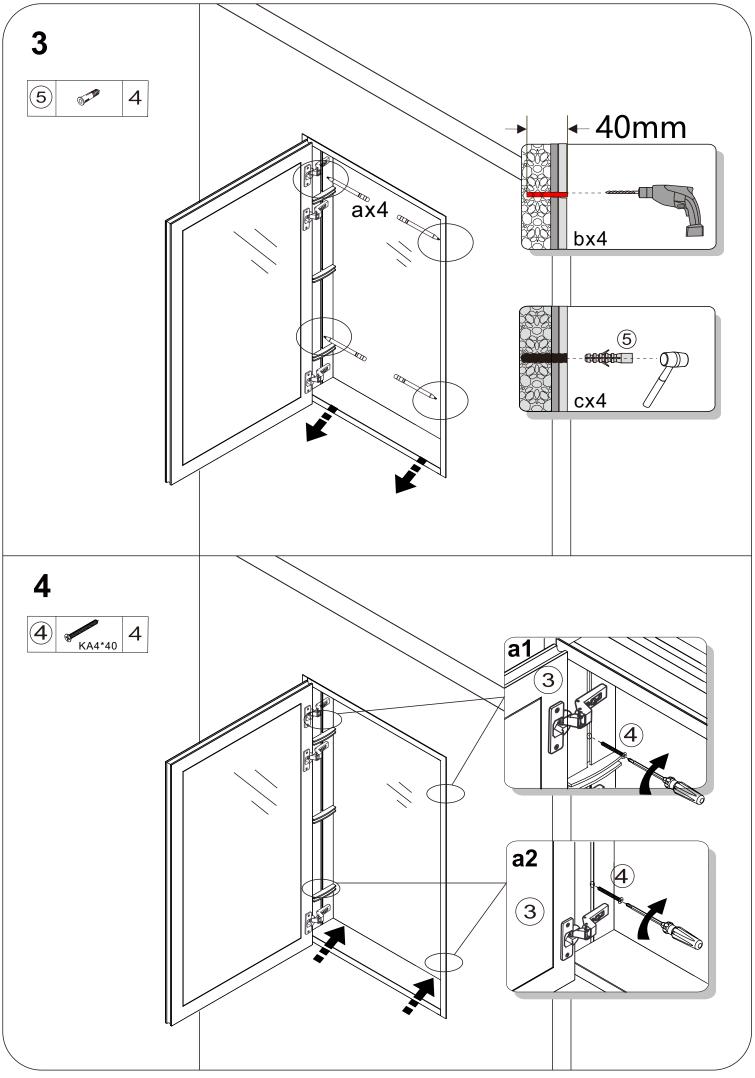

-5-

