



ASSEMBLY INSTRUCTIONS

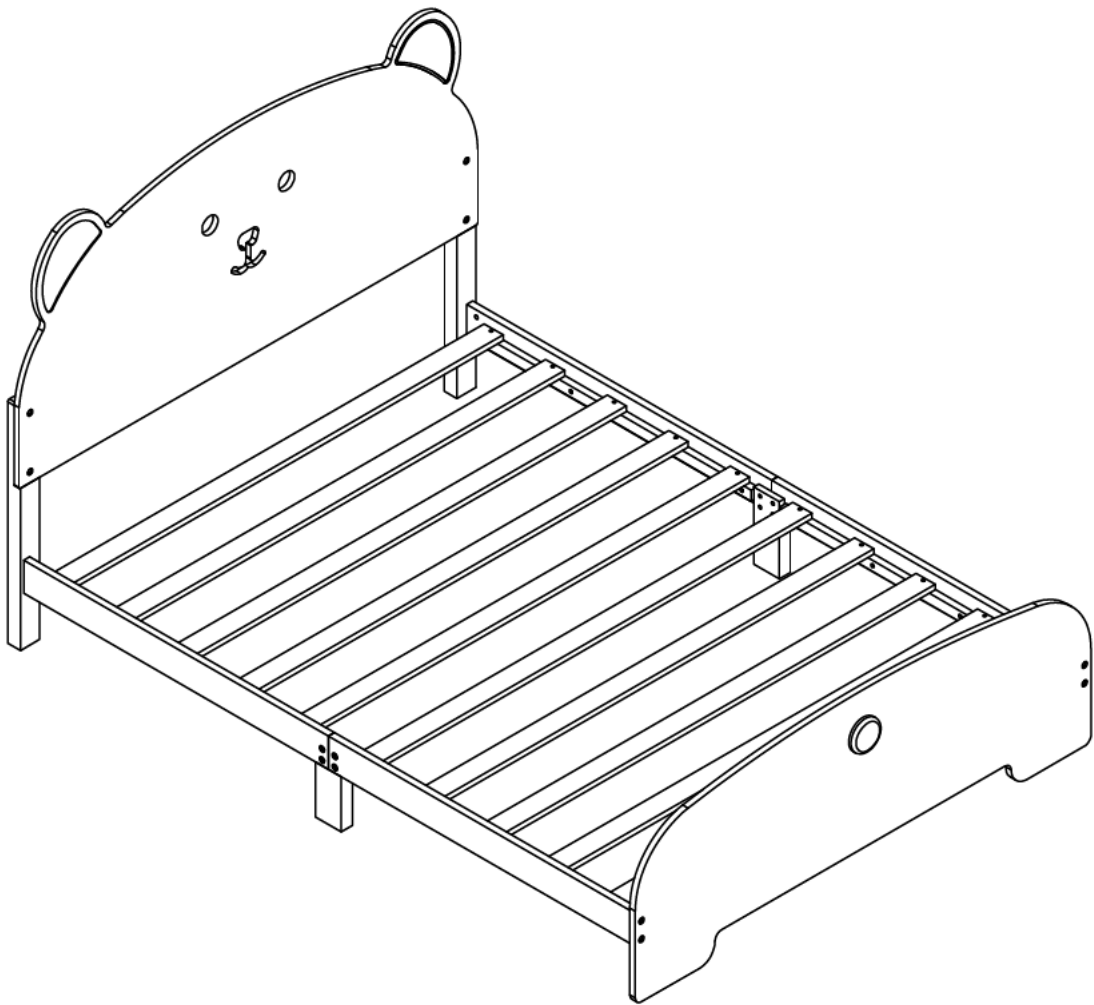

DETAIL VIEW

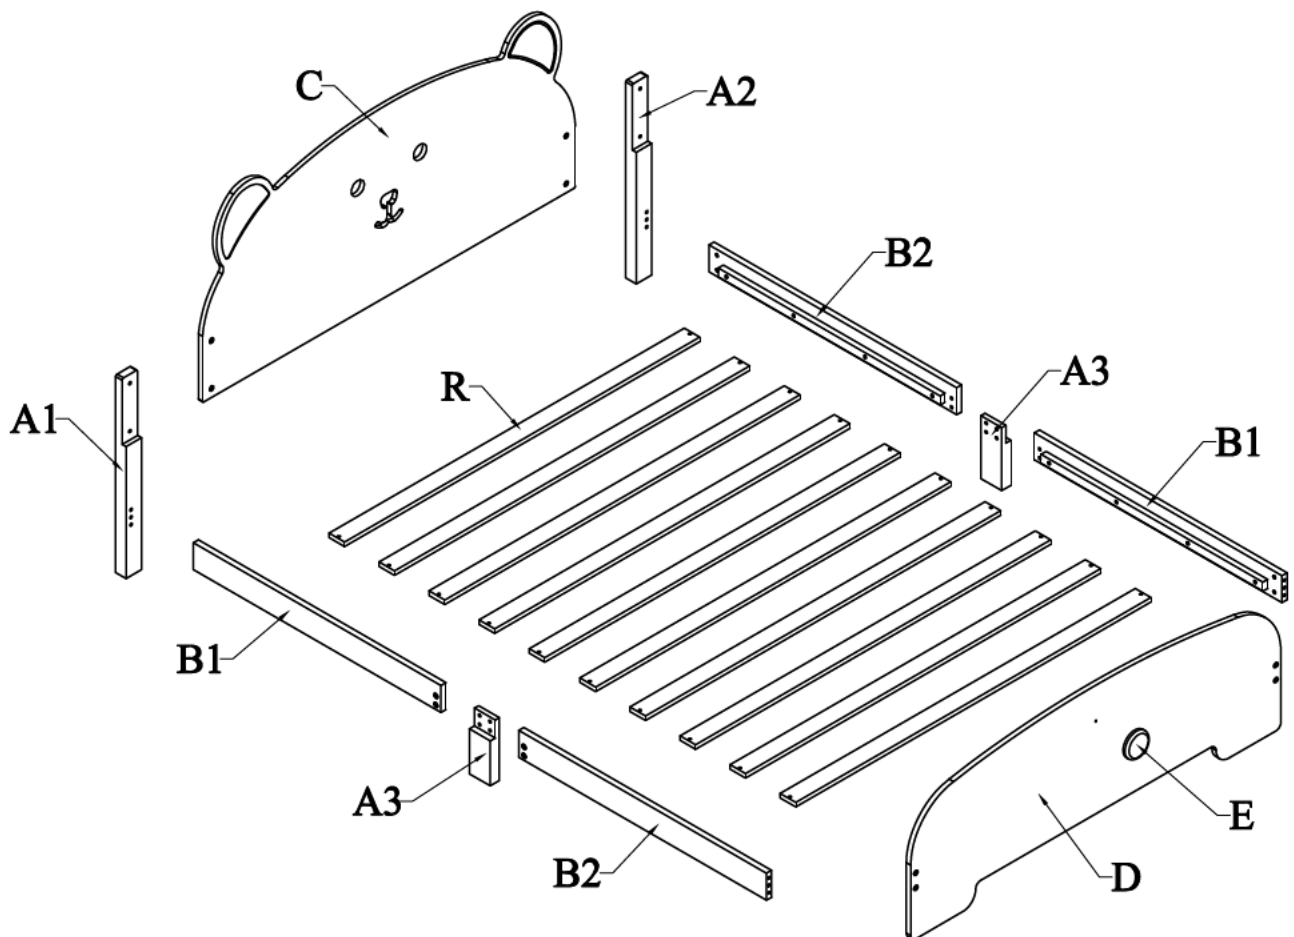

A1




Leg - left (1pc)

A2




Leg - right (1pc)

A3




Leg - middle (2pcs)

B1

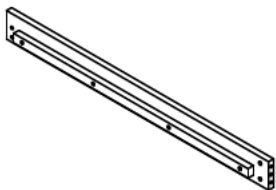

Side rail - left (2pcs)

B2

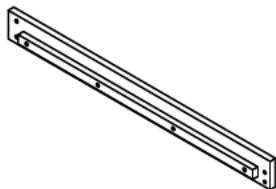


Side rail - right (2pcs)

C



Headboard (1pc)

D

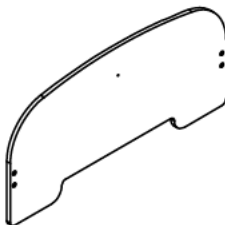


Footboard (1pc)

E



Bear tail (1pc)


R

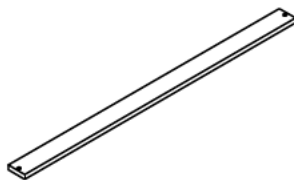

Slats (10pcs)


HARDWARE LIST:

1

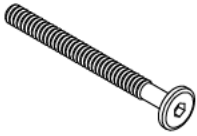

Hex - Head bolts
Ø1/4" * 80 - 4pcs

2

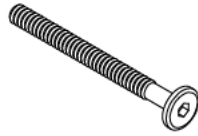

Hex - Head bolts
Ø1/4" * 60 - 4pcs

3



Hex - Head bolts
Ø1/4" * 30 - 4pcs

4



Hex - Head bolts
Ø1/4" * 25 - 8pcs

5




Horizontal - Hold bolts
Ø1/4" - 8pcs

6



Canopy head though
Ø1/4" - 8pcs

7




Wood dowel
Ø8 * 30 - 5pcs

8




Wood crews
M4 * 25 - 21pcs

9

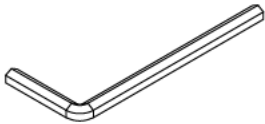

Allen key
K4 - 2pc



Assembly Tools Required (Not Included)

STEP 1

4




Hex - Head bolts
Ø1/4" * 25 - 8pcs

6



Canopy head through
Ø1/4" - 8pcs

X2

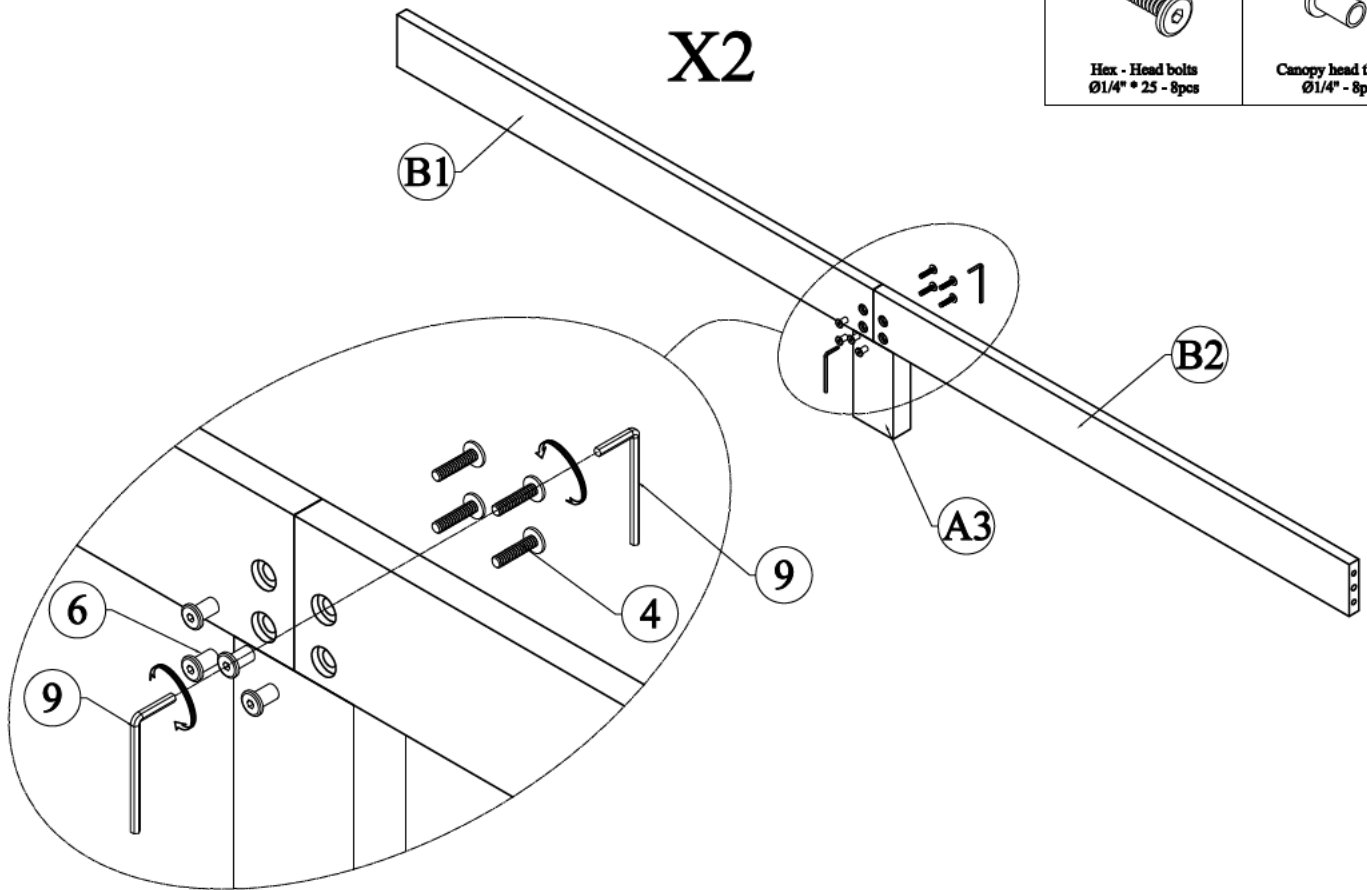


STEP 2

8



Wood crews
M4 * 25 - 1pc

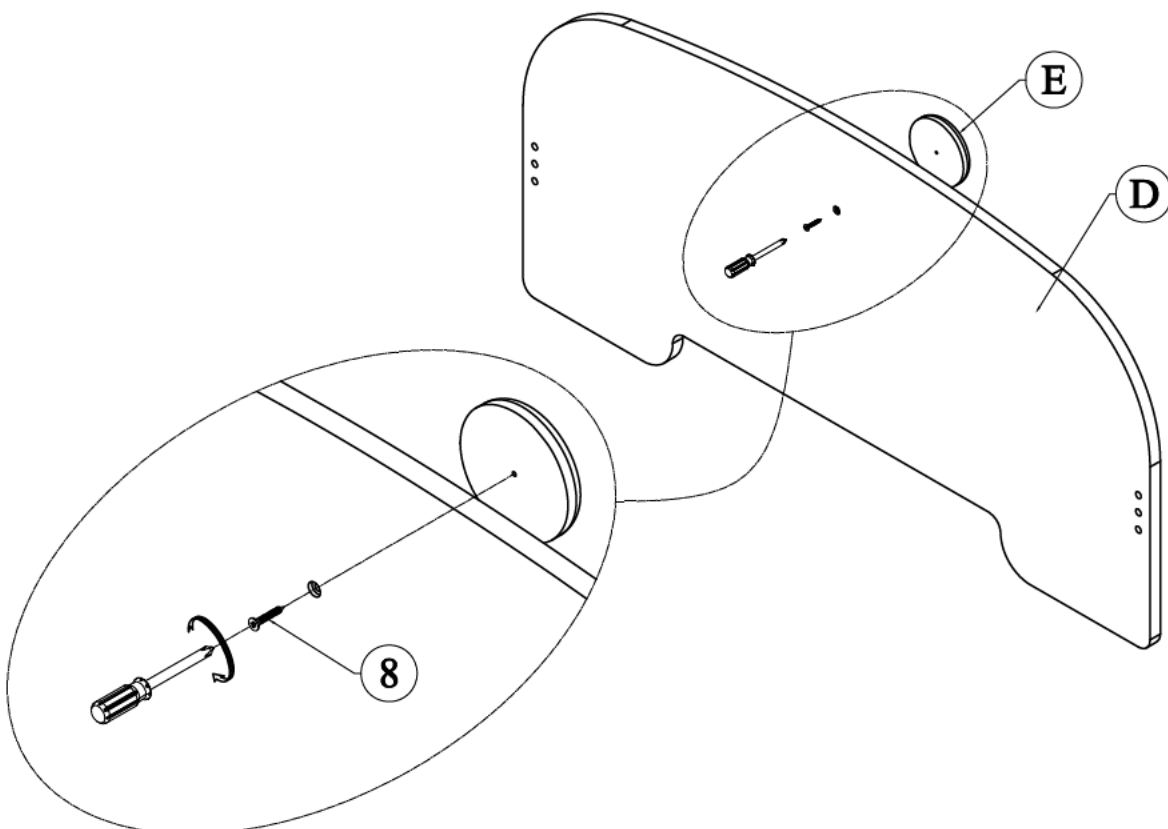


STEP 3

3



Hex - Head bolts
Ø1/4" * 30 - 4pcs

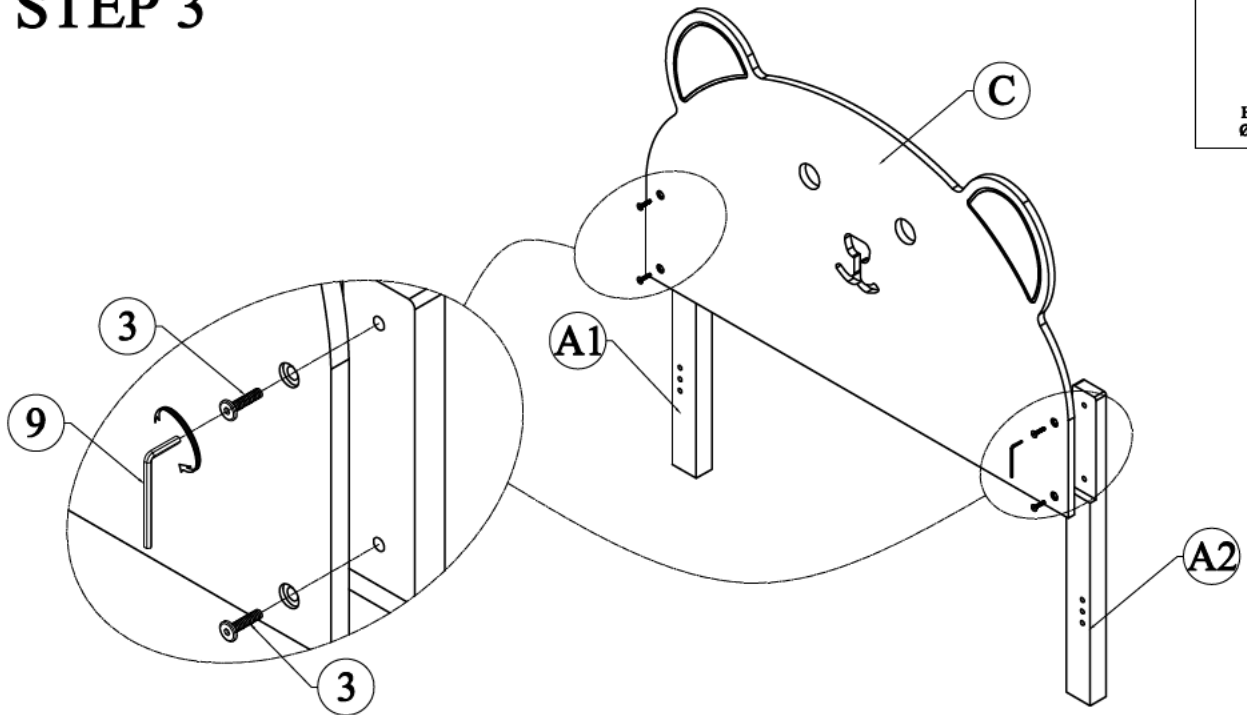

STEP 4

1



Hex - Head bolts
Ø1/4" * 80 - 4pcs

2



Hex - Head bolts
Ø1/4" * 60 - 4pcs

5




Horizontal - Hold bolts
Ø1/4" - 8pcs

7



Wood dowel
Ø8 * 30 - 4pcs

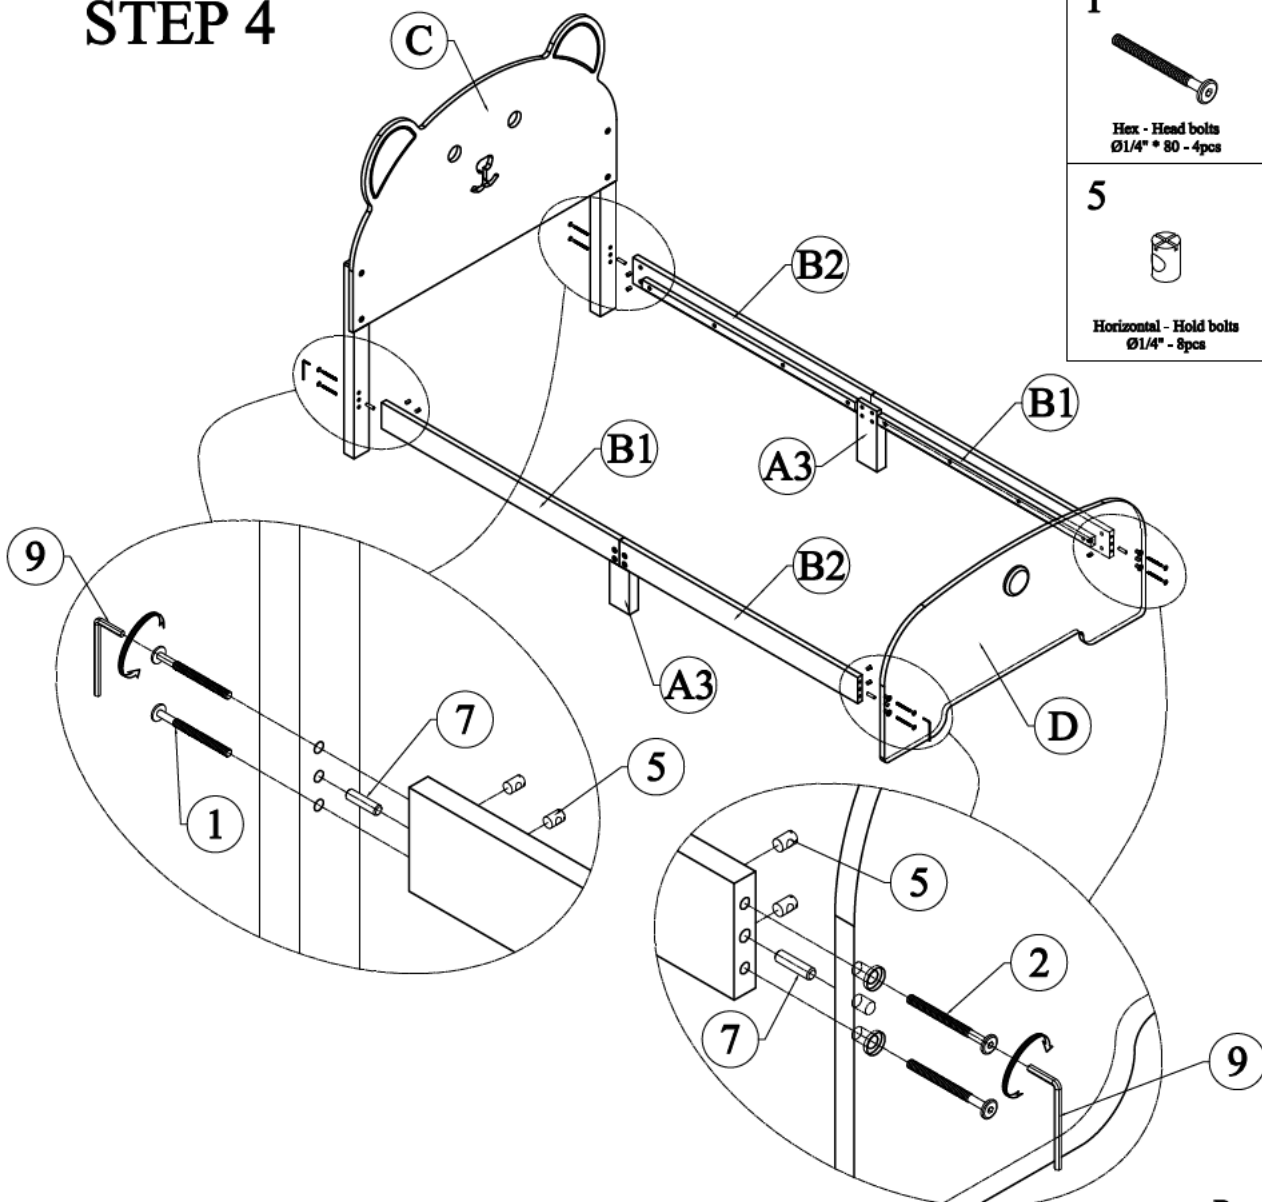


STEP 5

The distance between the slats is 5-1/4 inch

8



Wood screws
M4 * 25 - 20pcs

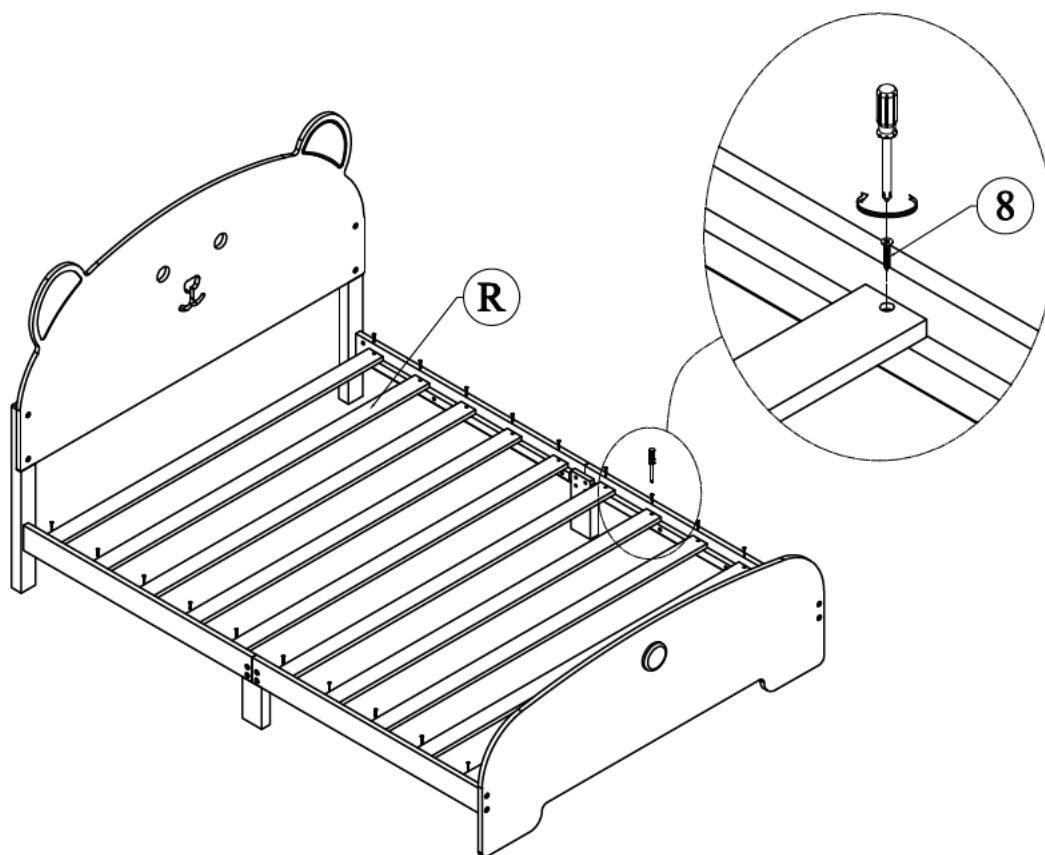

COMPLETED

