

SKU:KM03BK02S KM03WH02S KM03OG02S KM03BG02S KM03MR02S KM03FG02S

Metal Cabinet-Installation Manual



METAL STORAGE CABINET

USER MANUAL



MODEL:KM03BK02S KM03WH02S KM03OG02S
KM03BG02S KM03MR02S KM03FG02S

Metal Cabinet-Installation Manual

Important Installation Notes-Please Read First

1.Safety First:

Wear the gloves provided in the carton box to avoid any injuries, Work on a clean, flat, and stable surface to avoid scratching the cabinet or causing instability during assembly.

2.Adult Supervision Required:

This product must be assembled by adults only. Keep small parts (screws, washers, etc.)away from children and pets to prevent choking hazards.

3.Parts Checklist




Before beginning, open the carton box and lay out every part against the parts list to verify that all parts needed are included in your package. If any parts are missing, damaged, or defective, contact our customer service immediately by:


sales-order-service@hotmail.com

4.Tools You'll Need

We recommend using an electric screwdriver for cabinet assembly if you have one.

Thank you for choosing our metal storage cabinets. We' re honored it now stands in your space. May its strong, quiet shelves turn everyday clutter into calm order, giving you more room to breathe, create and enjoy. Here' s to neater days and simpler moments-every time you open the door.

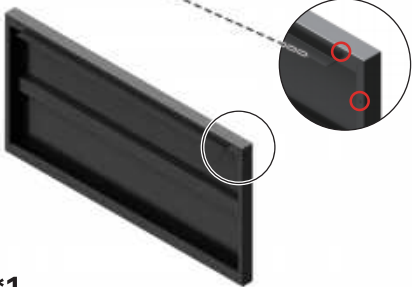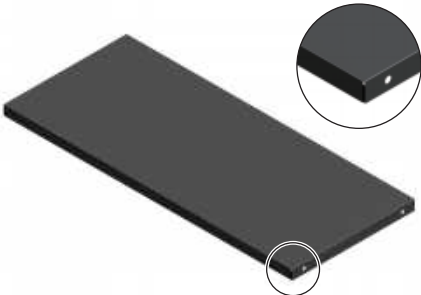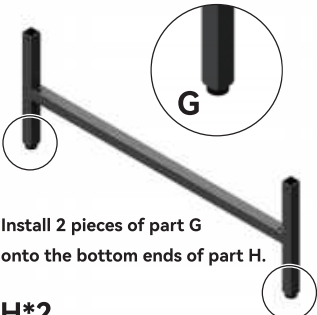 A*2	 B*2								
Notice: This Part Is On the Front  C*1	 D*3								
 E*1	 F*1								
 Install 2 pieces of part G onto the bottom ends of part H. H*2	<table><tr><td> T*2 </td><td> R*25 </td><td> Q*2 </td><td> Z*2 </td></tr><tr><td> O*8 </td><td> S*2 </td><td> G*4 </td><td> J*3 </td></tr></table>	 T*2	 R*25	 Q*2	 Z*2	 O*8	 S*2	 G*4	 J*3
 T*2	 R*25	 Q*2	 Z*2						
 O*8	 S*2	 G*4	 J*3						

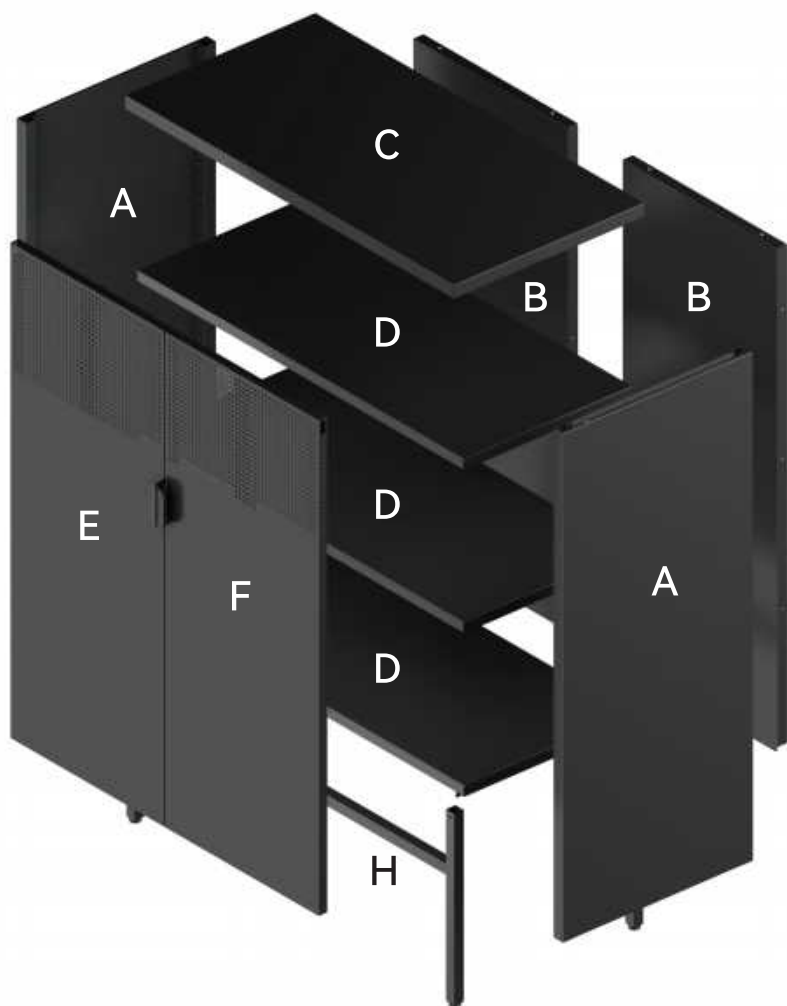


1

Install Side Panels(A) and Base Frame(H)

Note: First install all 4 plastic leveling feet(G*4) onto the bottom of Base Frame(H).

Align Side Panel with the vertical legs of Base Frame as indicated by the arrow, then lower Side Panel firmly downward to fully seat into the pre-cut notch joint.

Critical Note: The marked mounting hole at the corner joint must face outward.

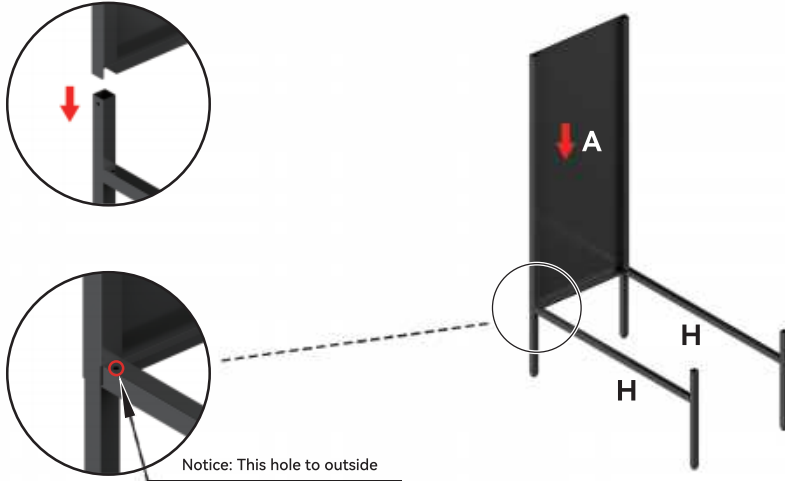


2

R*4



Repeat the assembly process from Step 1 to attach the remaining Side Panel, then fasten both Side Panels using screws (R*4) from the 4 corners.


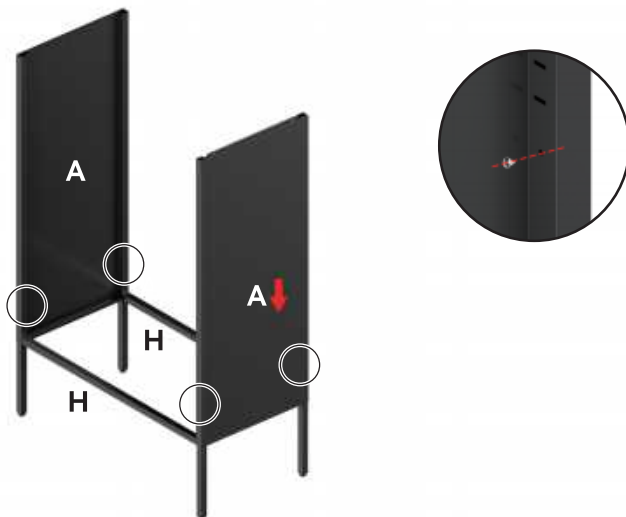


3

Install Top Panel(C)

R*4 

Place the Top Panel on top of the Side Panels. Double-check that the raised edge is facing the front. Then fasten it into place using screws (R*4) through the Side Panels into the top.

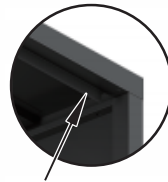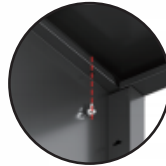

Notice: This part is on the front



4

Install Back Panel(B)

R*13 


J*3 

First, align the bottom edge of the Back Panel with the cabinet's back frame. (Ensure the smooth side of the back panel faces inward) Then hold the panel in place against the back frame and fasten it into place using screws (R*13).

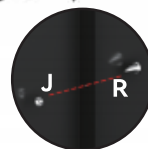
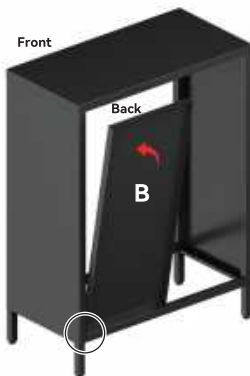


⑤


O*8

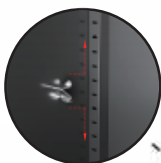

①

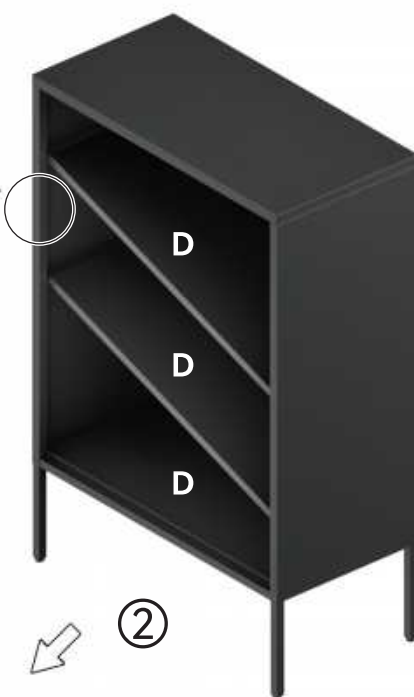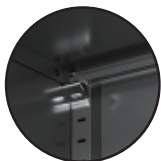

②

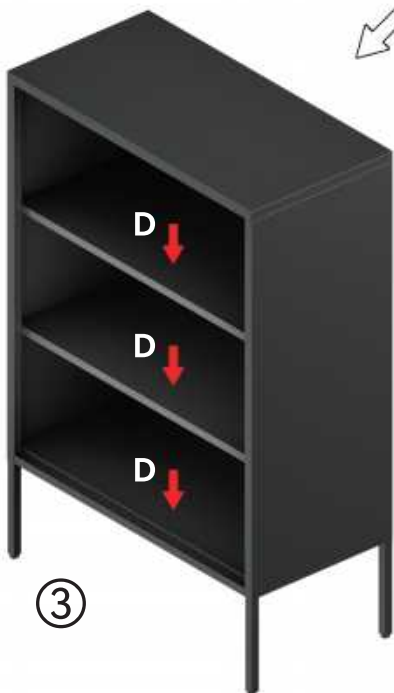

③

Install Shelves (D)

After put one shelf at the bottom then you can choose where you want to mount the othershelf. Just insert metal clips(O*8) into theholes on both Side Panels as your desire. Thensimply put the shelf on the clips. (Tilt theshelves at an angle to get it into the cabinet,then lay it flat for easier installation).

6


S*2



Attach Doors (E&F)

Drop the bottom hinge pin(S*2) into the pre-drilled holes in the base frame-add the small plastic ring. Line up the holes in the doors bottom with the pin and set the doors down.

Then press the upper hinge pin so that it can snap into the top frame hole-release and it locks itself in place.

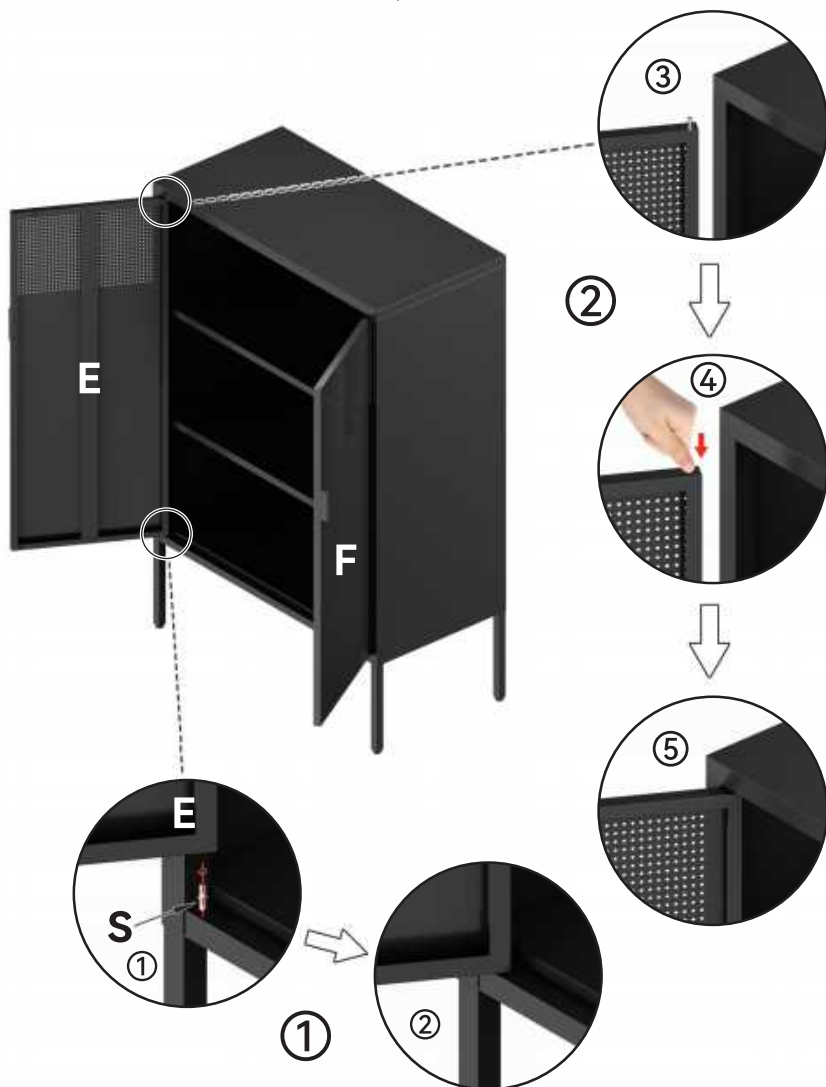

Install the lower part first and then the upper part,
from ① to ②

7

T*2



Z*2



Q*2





R*4



Attach Handles and Magnets(T&Q)

Attach magnetic pieces (Q*2) to each door top corner and plastic bumpers (Z*2) at the bottom corner.

Install door handles (T*2) using screws (R*4).

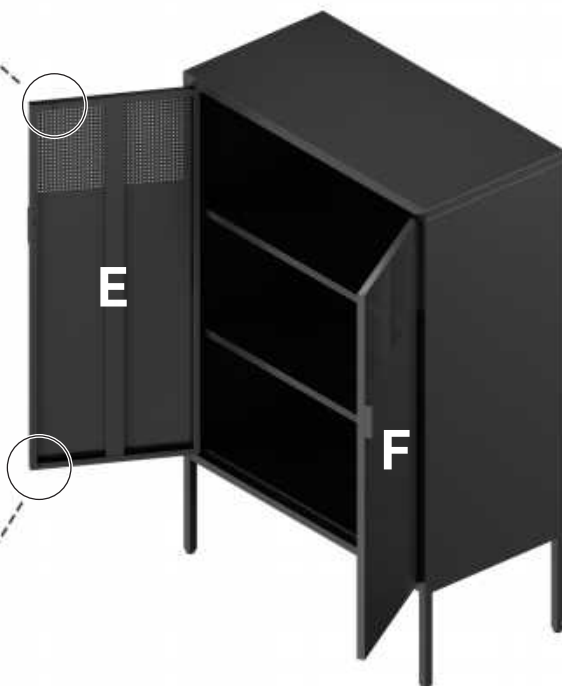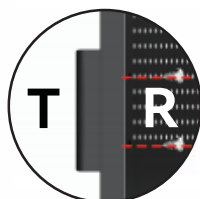

How to Assemble The Handles



put the handle into the hole



press handle to meet the screw hole

Problems and Solutions


Question 1: when encountering uneven height of two door panels, adjust the bottom adjustment foot to make it flat.




Question2: When the door is closed, it still protrudes outward.

That's because the door is made of steel plate and has stretchability.

You can adjust it according to the method shown in the picture.

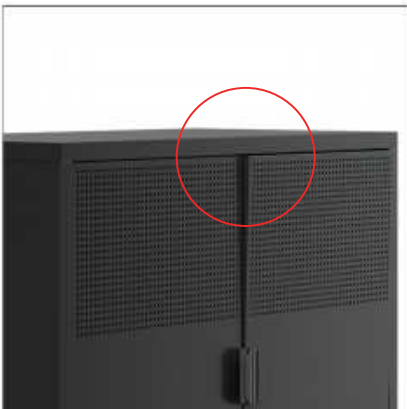

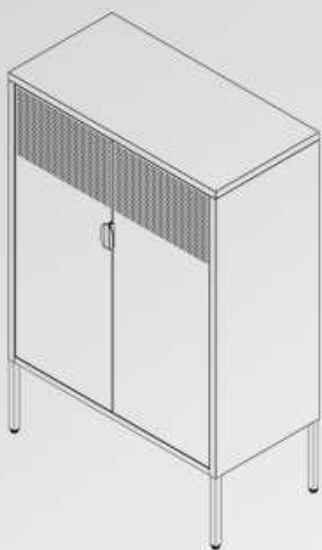

SKU:KM03BK02S KM03WH02S KM03OG02S KM03BG02S KM03MR02S KM03FG02S

Metal Cabinet-Installation Manual