



RIGHT

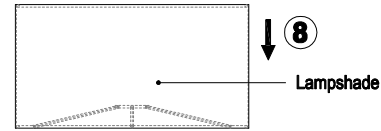

WRONG

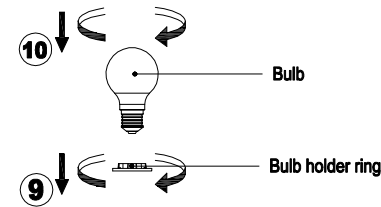

Steps:

- ① Install "Tube 2" to "Tube 1".
- ② Install "Tube 3" to "Tube 2".
- ③ Install "Tube 3" to "Tube 4".
- ④ Mount "Weighted Base" and "Tube 4" through "Screw" by "Wrench".
- ⑤ Install the "Horn Type Support" to "Tube 4".
- ⑥ Install "Screw Tube" to "Table".
- ⑦ Place "Table with Screw Tube" downwards onto "Horn Type Support", twist the tube to "Horn Type Support".
- ⑧ Place "Lampshade" Downwards into "Bulb Holder".
- ⑨ Twist "Bulb holder ring" into "Bulb Holder" to fix "Lampshade".
- ⑩ Twist "Bulb" to "Bulb Holder".
- ⑪ Plug in power socket (120V).
- ⑫ Turn ON/OFF by the foot pedal switch.

