

Version: 2.1

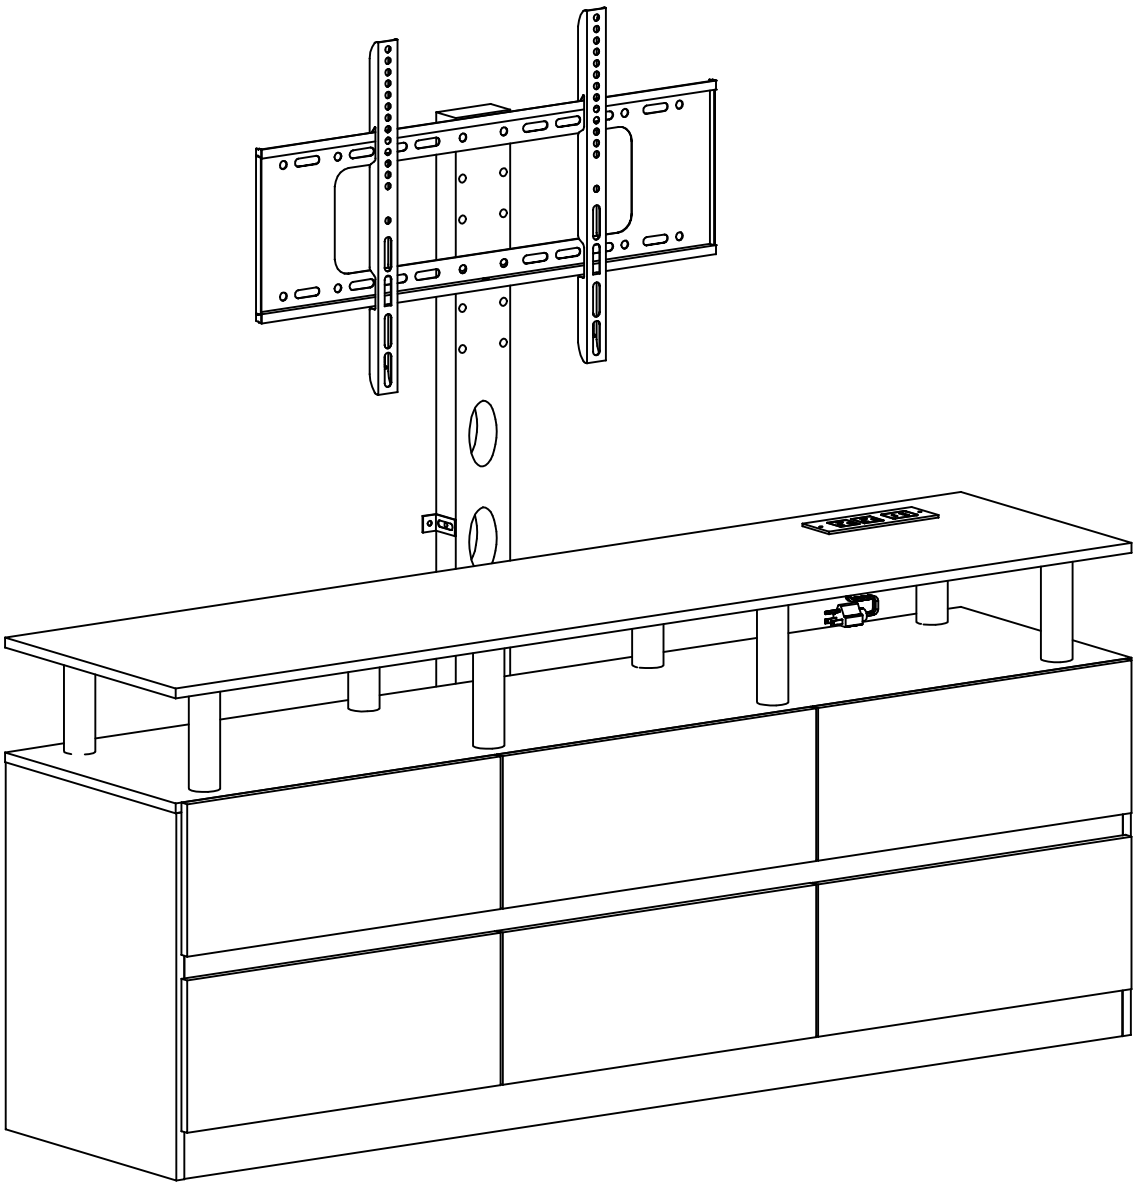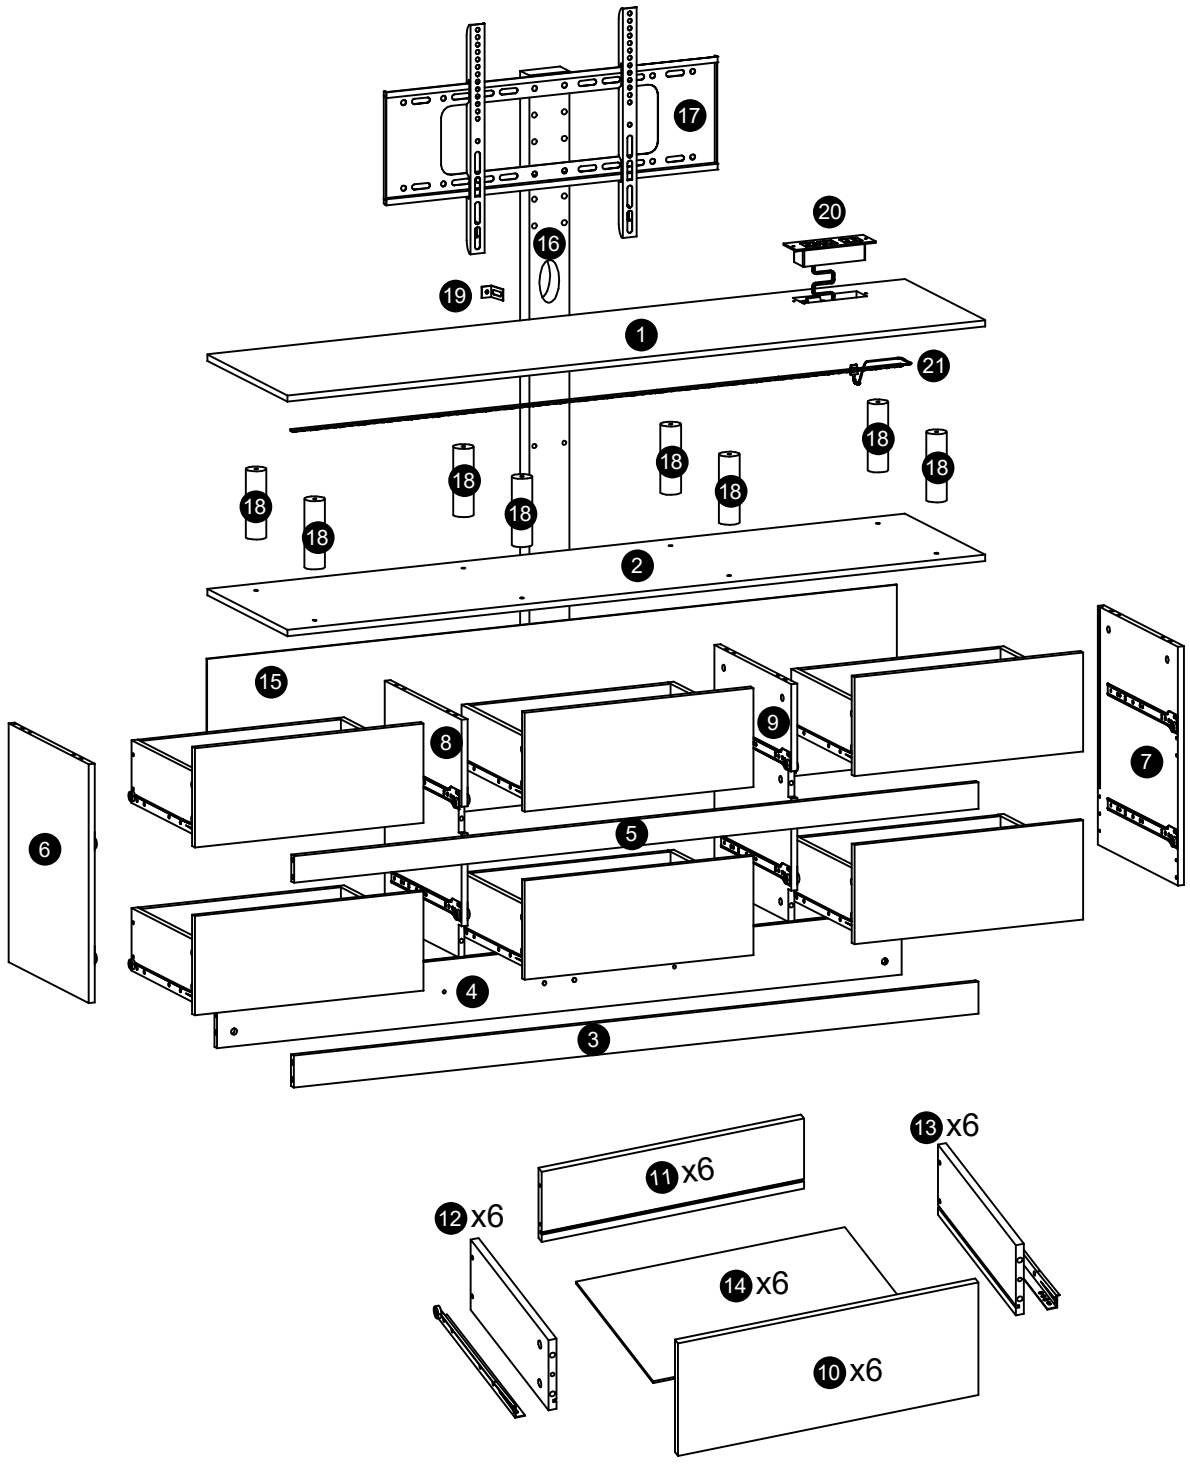

2 PERS.



















EN













DJ504672


17
20
16
19
1
21
18
18
18
18
18
18
18
18
2
15
9
8
7
6
5
4
3
13 x6
11 x6
12 x6
14 x6
10 x6


Assembling Instruction


Attention: Do not tighten the screws until all of them are in right positions

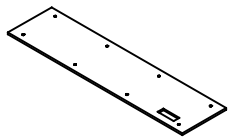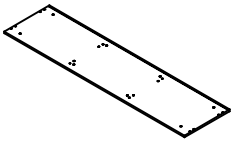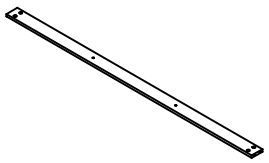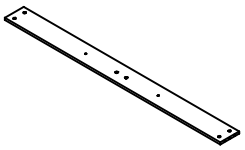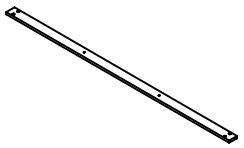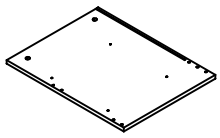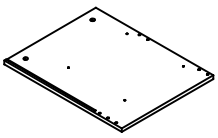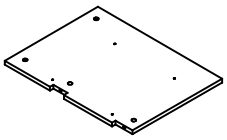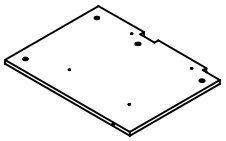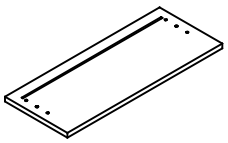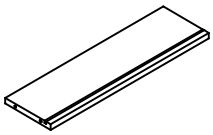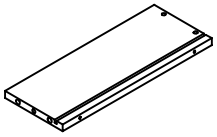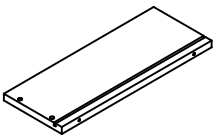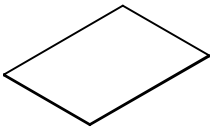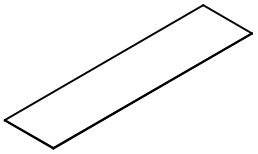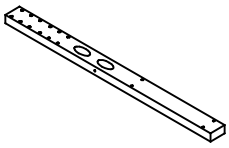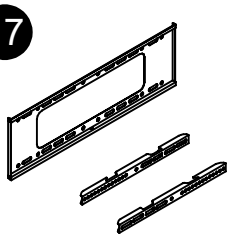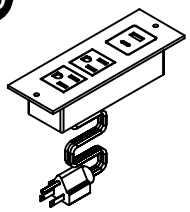1  X1	2  X1	3  X1	4  X1	5  X1
6  X1	7  X1	8  X1	9  X1	10  X6
11  X6	12  X6	13  X6	14  X6	15  X1
16  X1	17  X1	18  X8	19  X1	20  X1
21  X1				

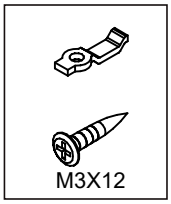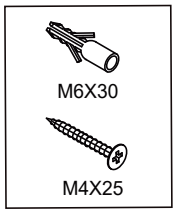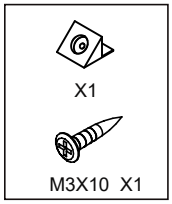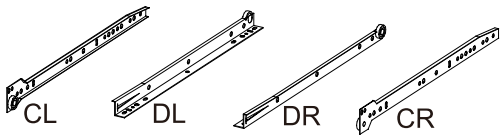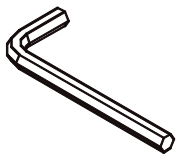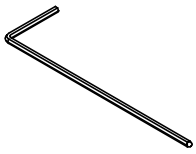A  X48	B  M12 X48	C  M6X14 X5	D  M6X28 X10	E  M6X50 X2
F  M5X60 X2	G  M8X50 X4	H  M5X40 X26	J  M4X12 X50	K  M4X14 X4
M  M6X25 X8	N  M8 X4	O  M6 X4	P  M4 X8	Q  M6X30 X22
S  X4	T  X5	U  X6	 X6	
 M6	 M4	 M3	 M12&14	


Step 1

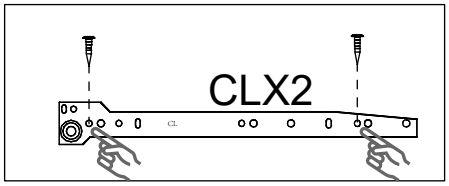


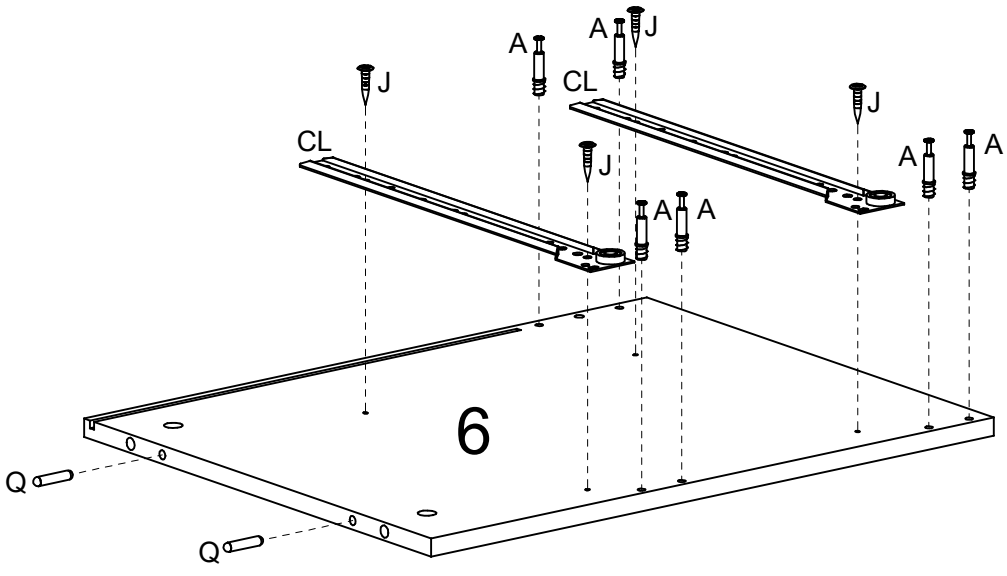

A		X6
J	M4X12	X4
Q	M6X30	X2


Step 2

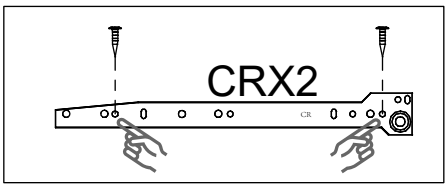

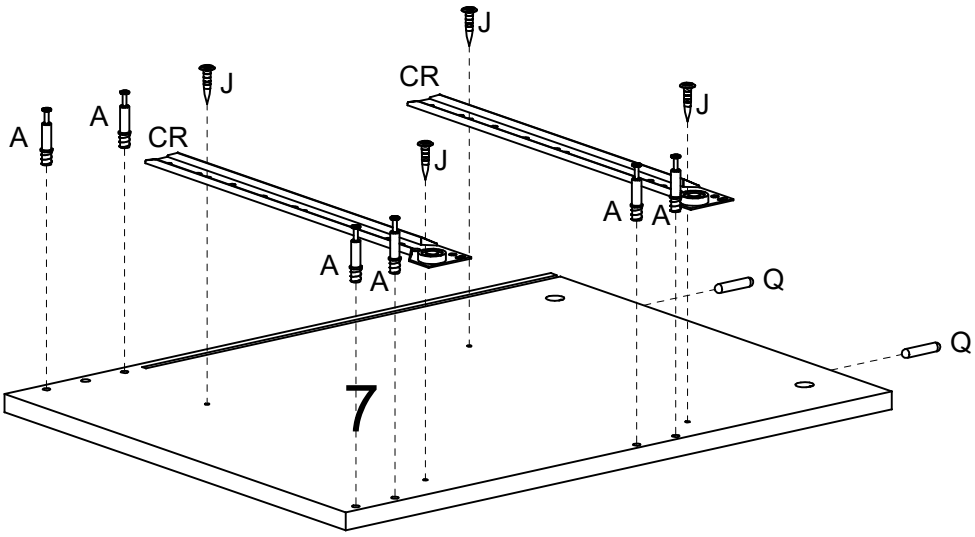


A		X6
J	M4X12	X4
Q	M6X30	X2

Step 3

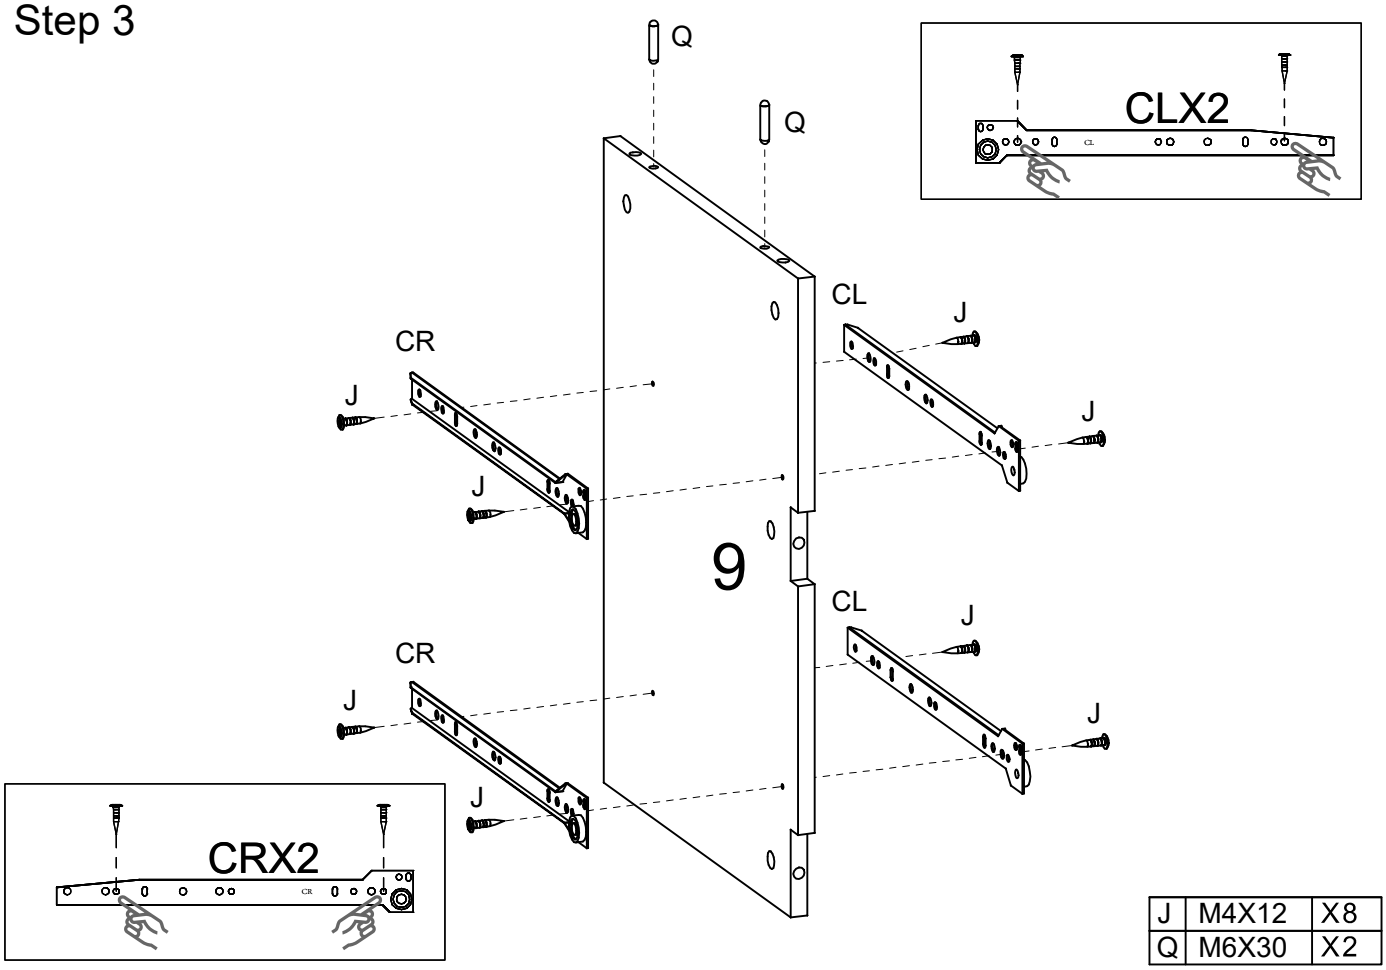


J	M4X12	X8
Q	M6X30	X2

Step 4

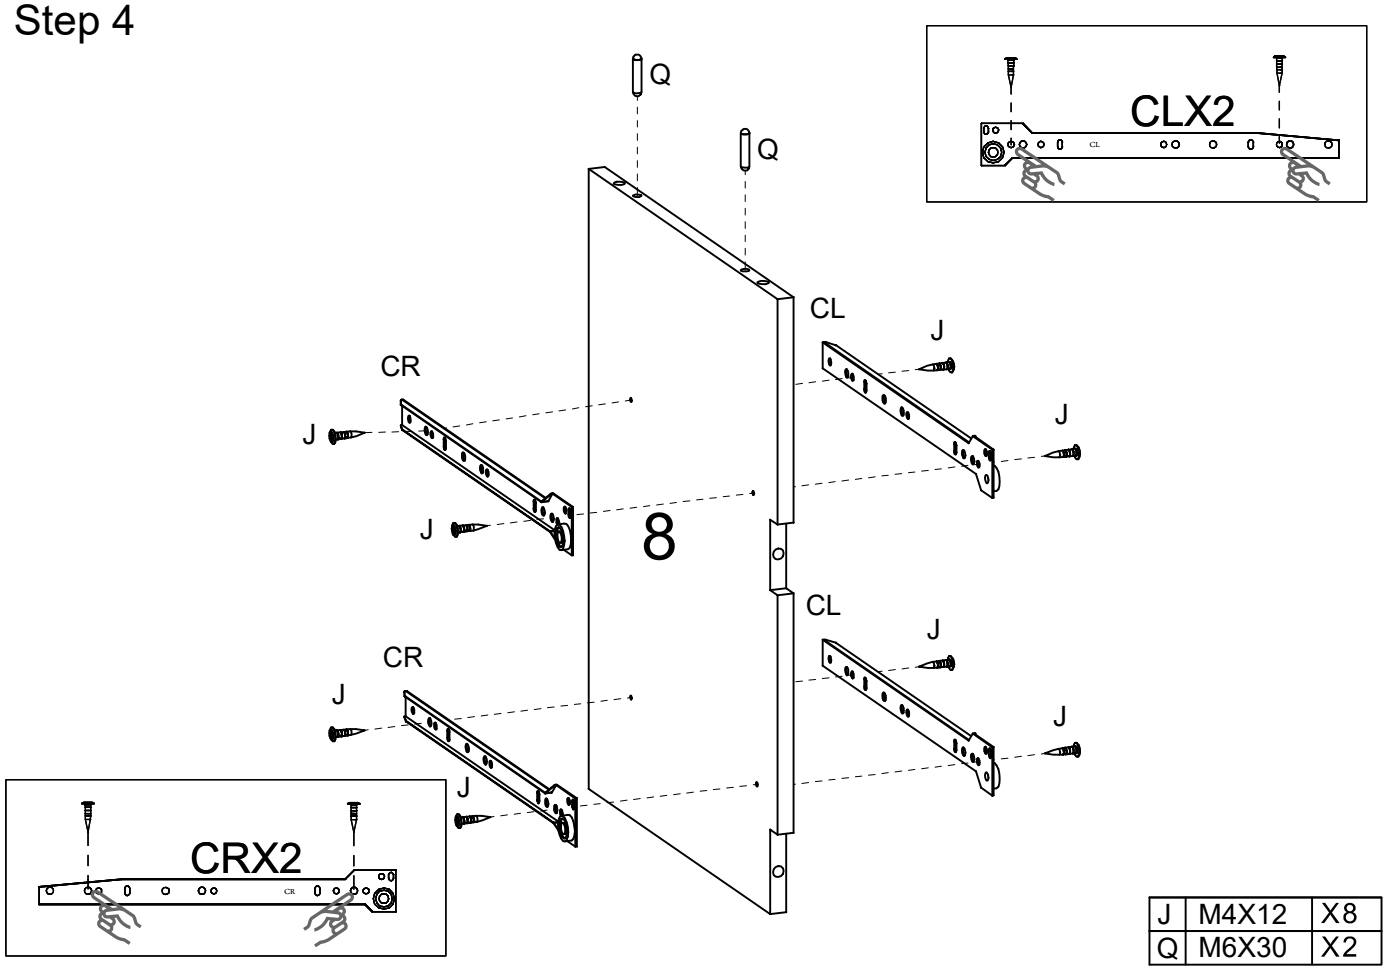


J	M4X12	X8
Q	M6X30	X2

Step 5

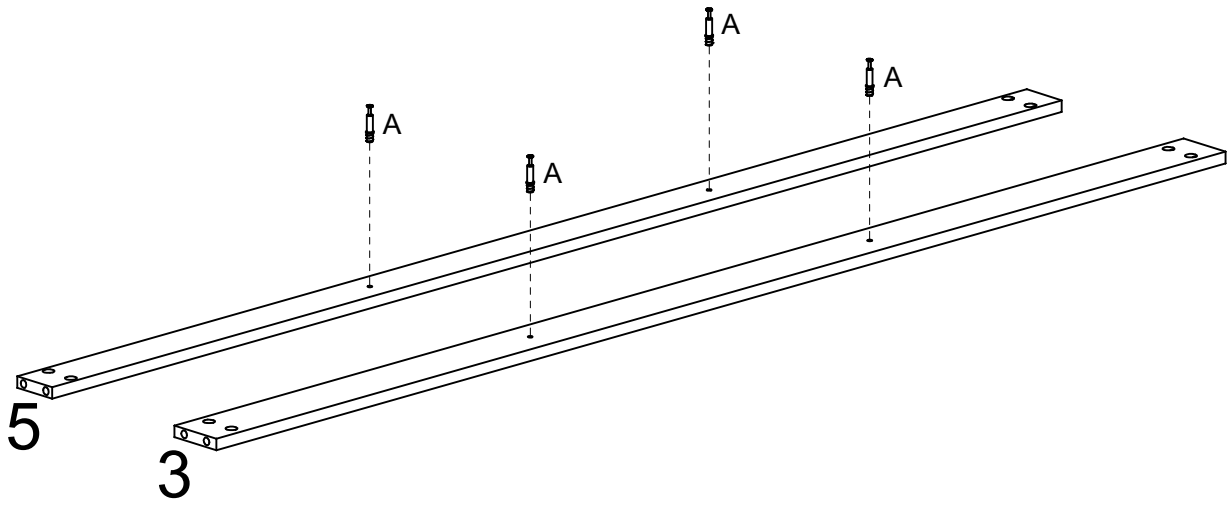

A		X4


Step 6

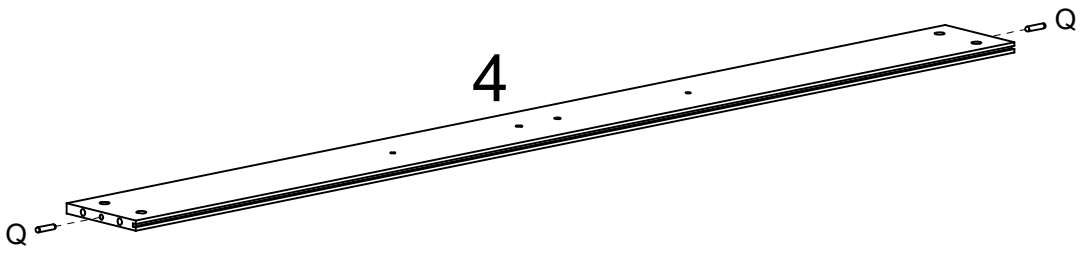

Q	M6X30	X2

Step 7

When part B is put into the hole,
the notch above it is first aligned with part A,
and then clockwise tighten part B.

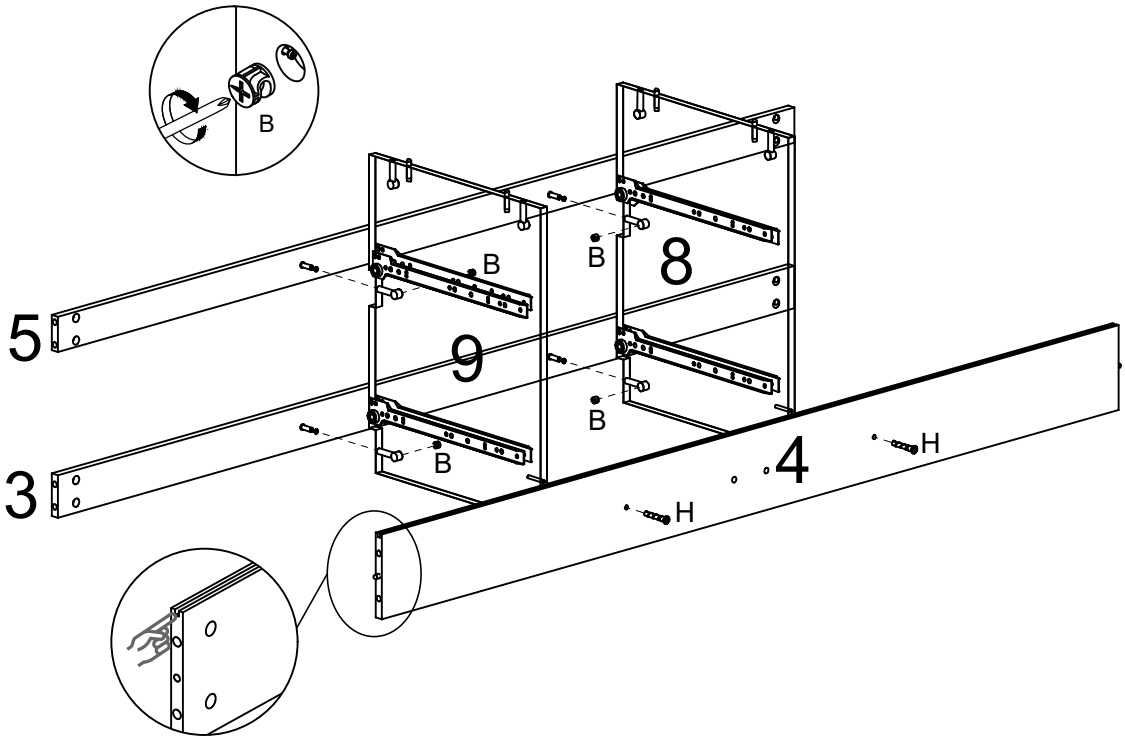


Slot up, hole back

B	M12	X4
H	M5X40	X2

Step 8


When part B is put into the hole,
the notch above it is first aligned with part A,
and then clockwise tighten part B.

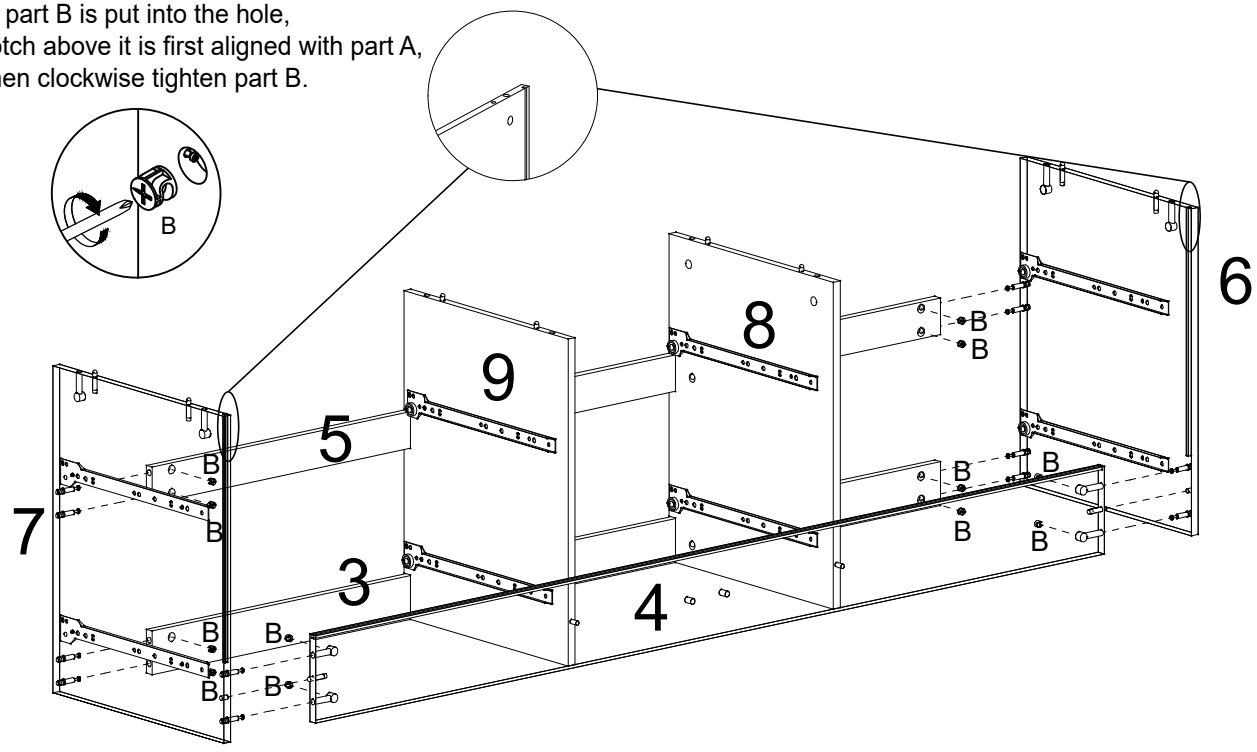


B	M12	X12

Step 9

Confirm that the 15# board is inserted into the 6#7#4# board slot before proceeding to the next installation step

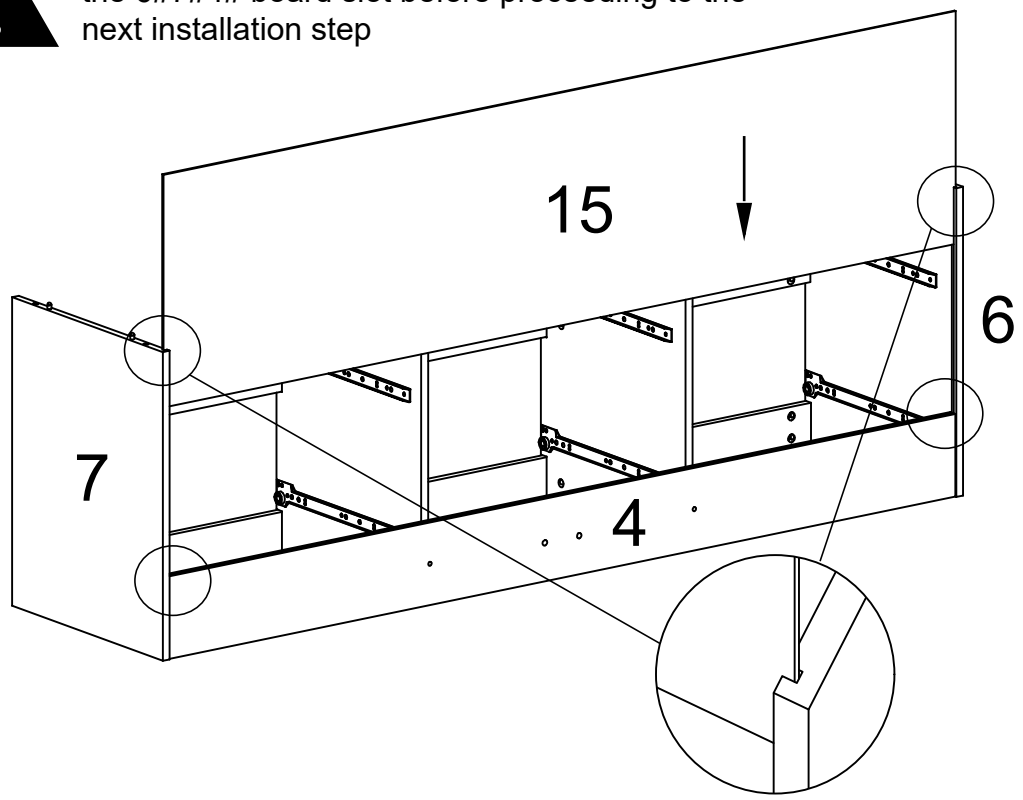

Step 10

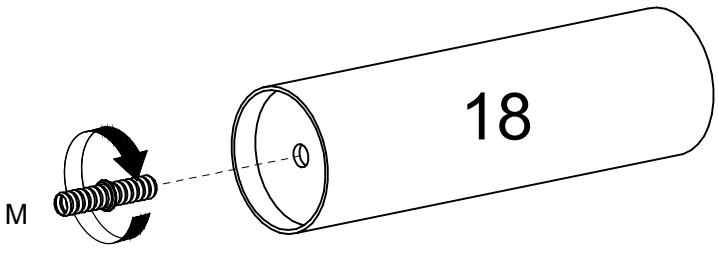


X8

M	M6X25	X8


Step 11

Rip the protective paper

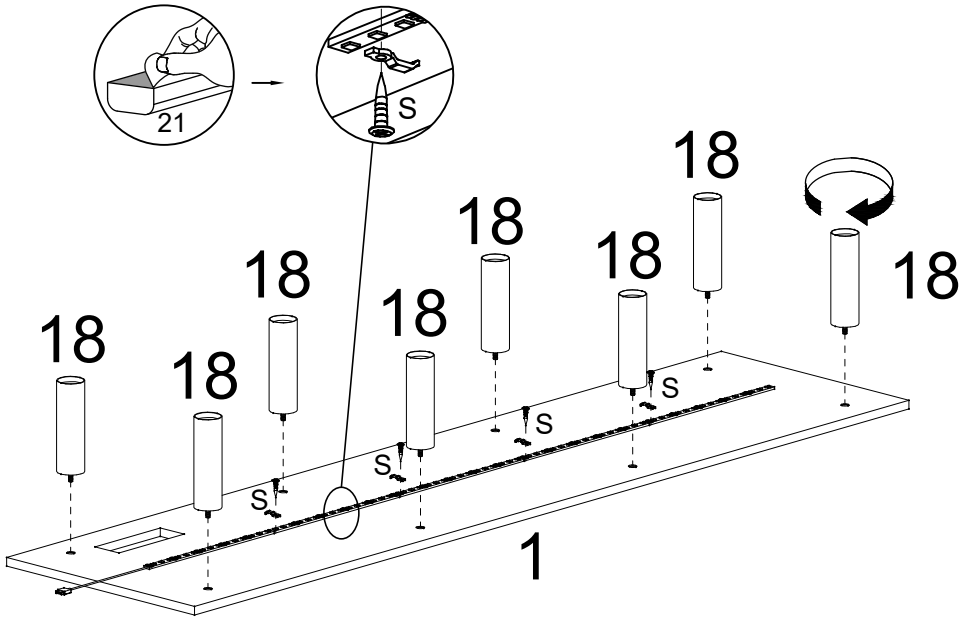


S		X4

Step 12

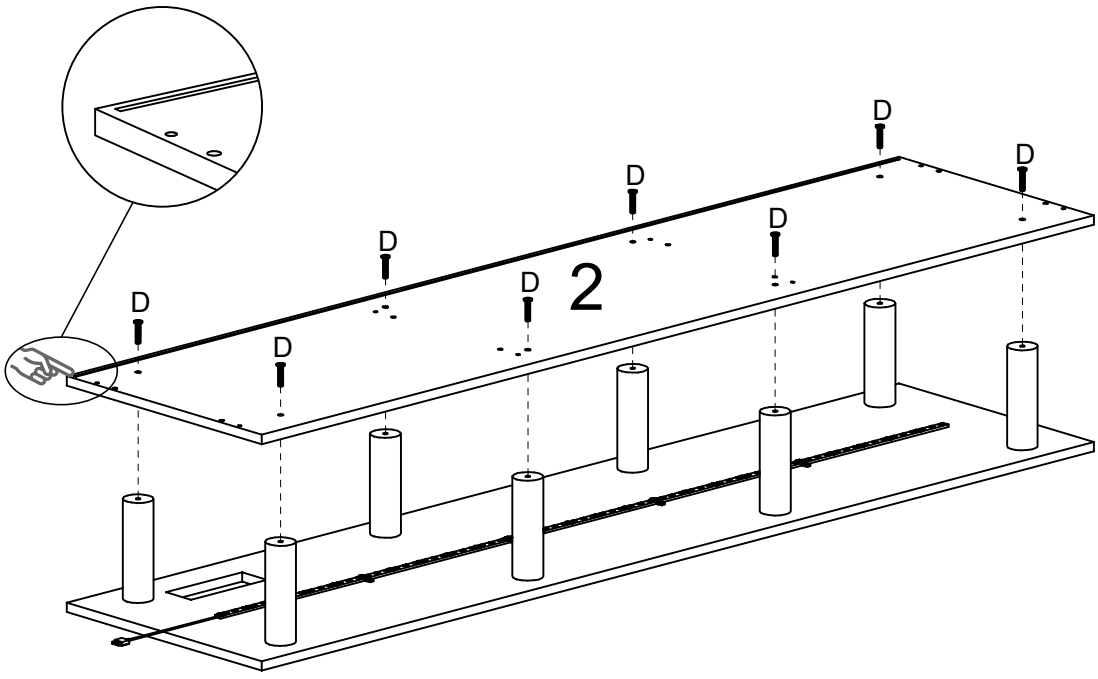

D	M6X28	X8


Step 13

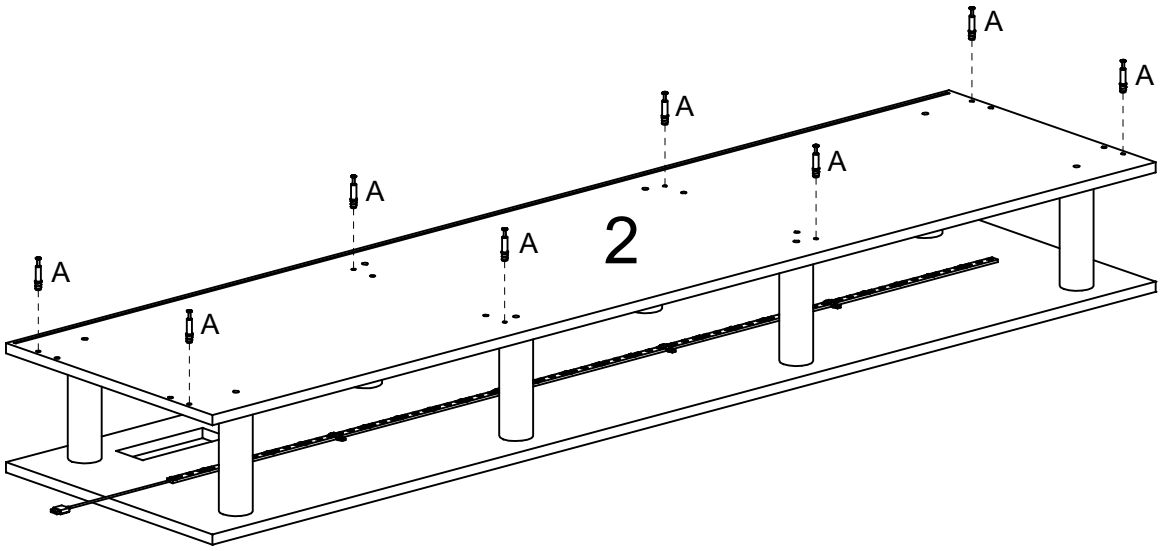


A		X8

Step 14


When part B is put into the hole,
the notch above it is first aligned with part A,
and then clockwise tighten part B.

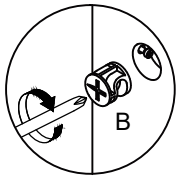

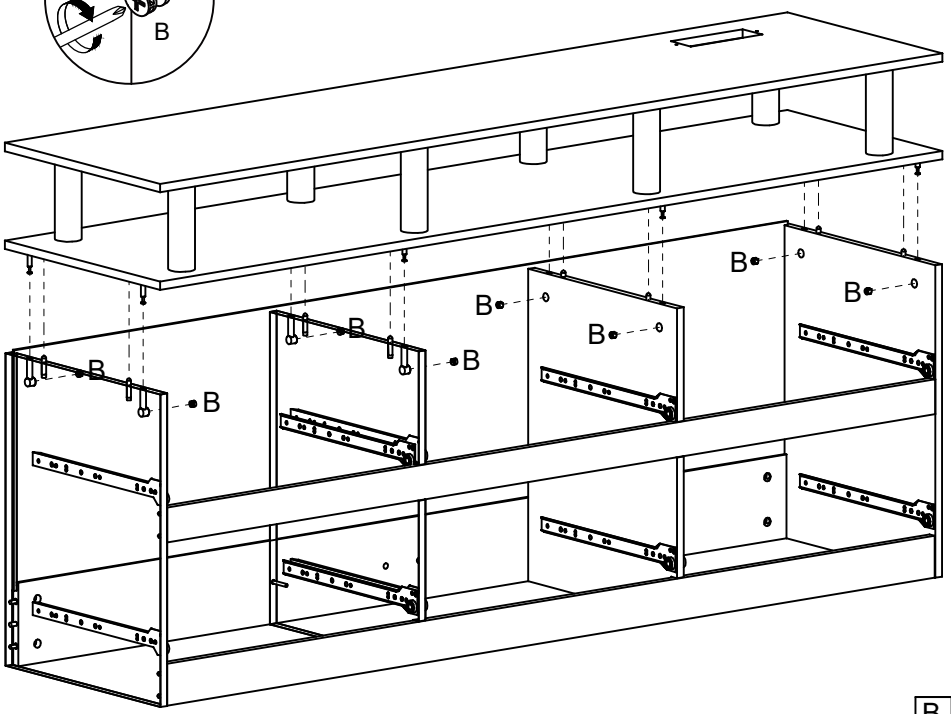


B	M12	X8

Step 15

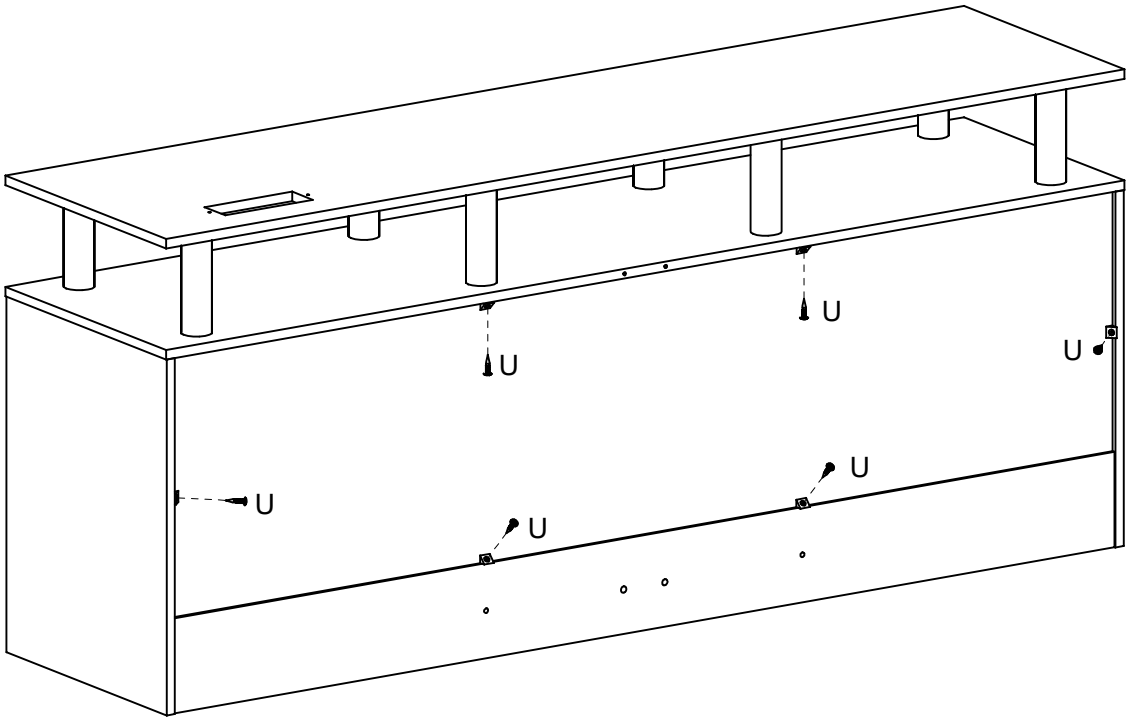


U		X6

Step 16

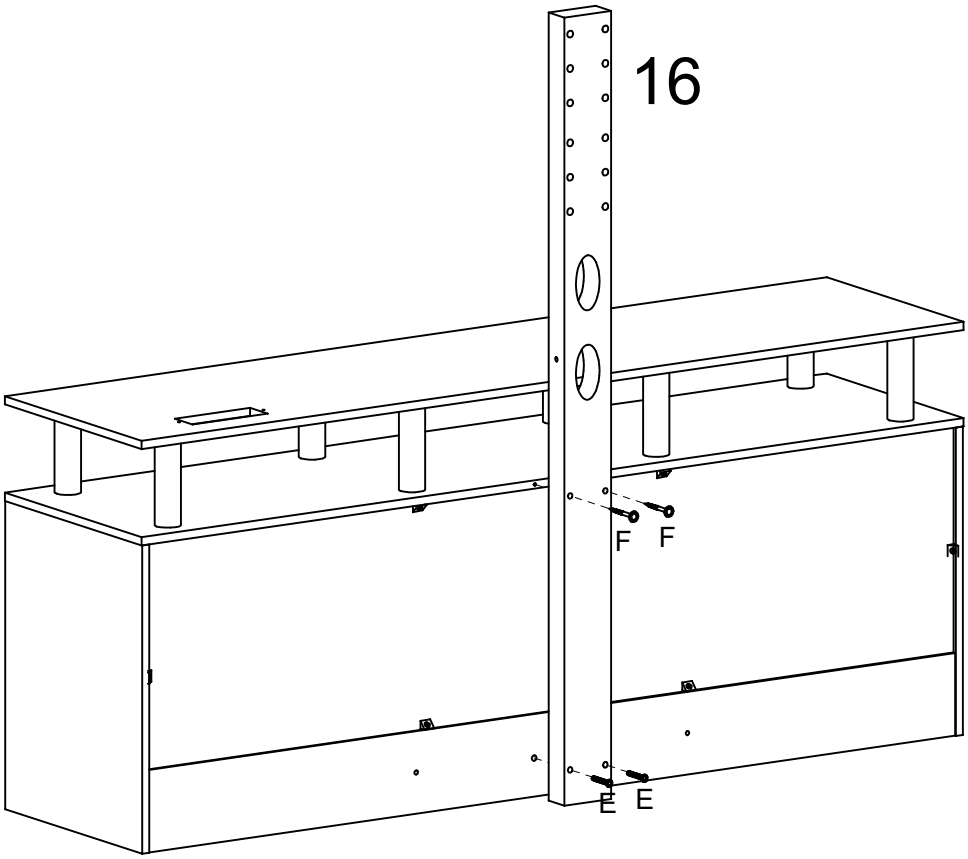

E	M6X50	X2
F	M5X60	X2

Step 17

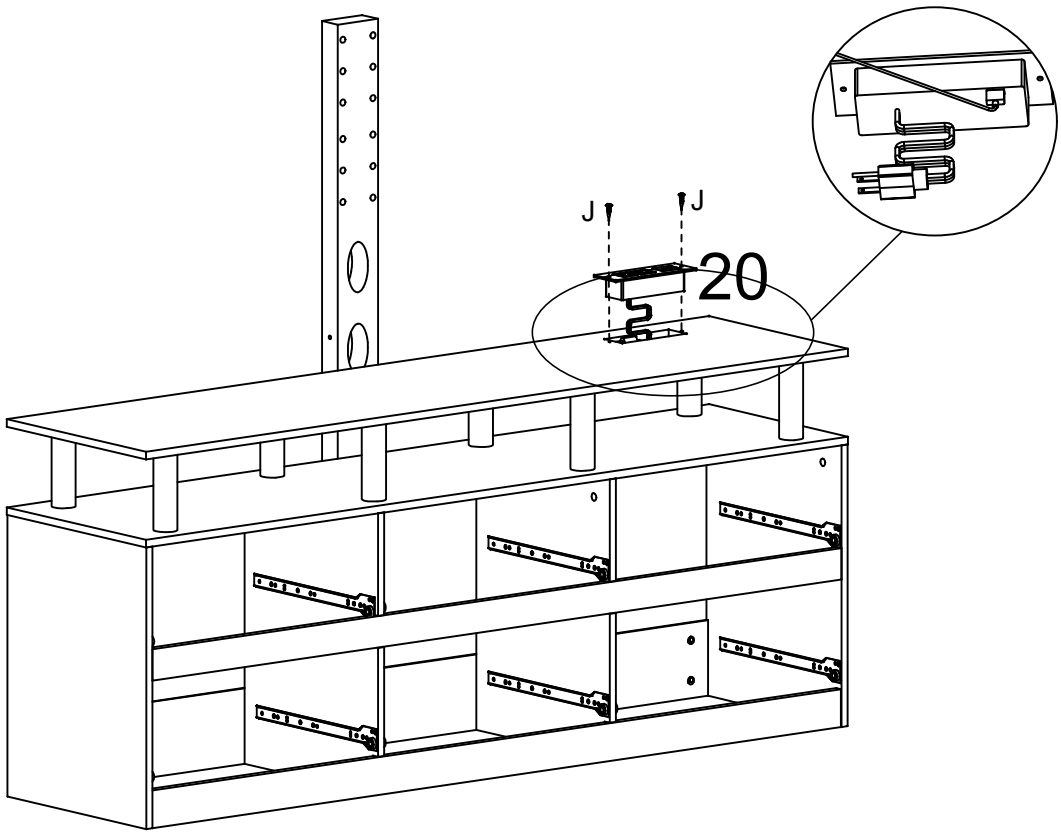


J	M4X12	X2

Step 18

There are two ways to install your TV


Choose the height of the installation according to the environment of your home

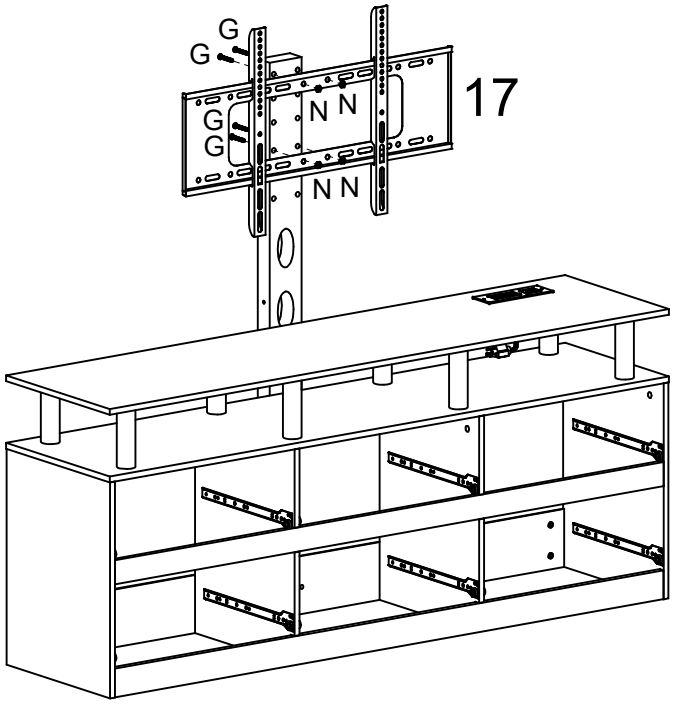

G	M8X50	X4
N	M8	X4


Step 19

Use the appropriate screws for your TV

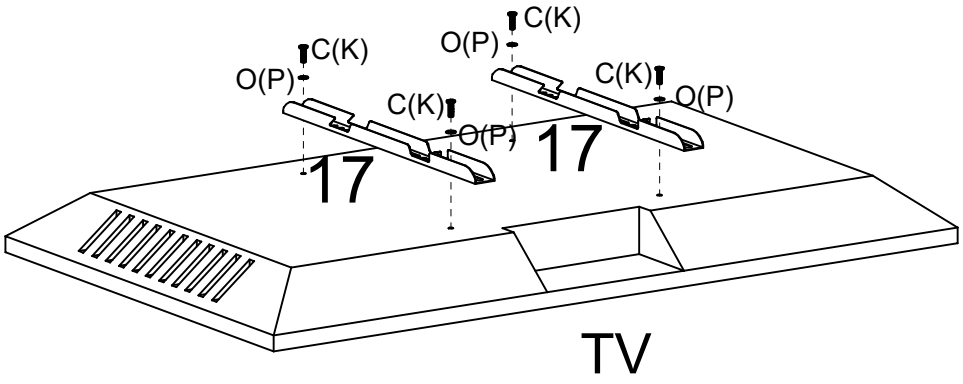

	C	M6X14	X4
OR	K	M4X14	X4
	O	M6	X4
OR	P	M4	X4


Step 20

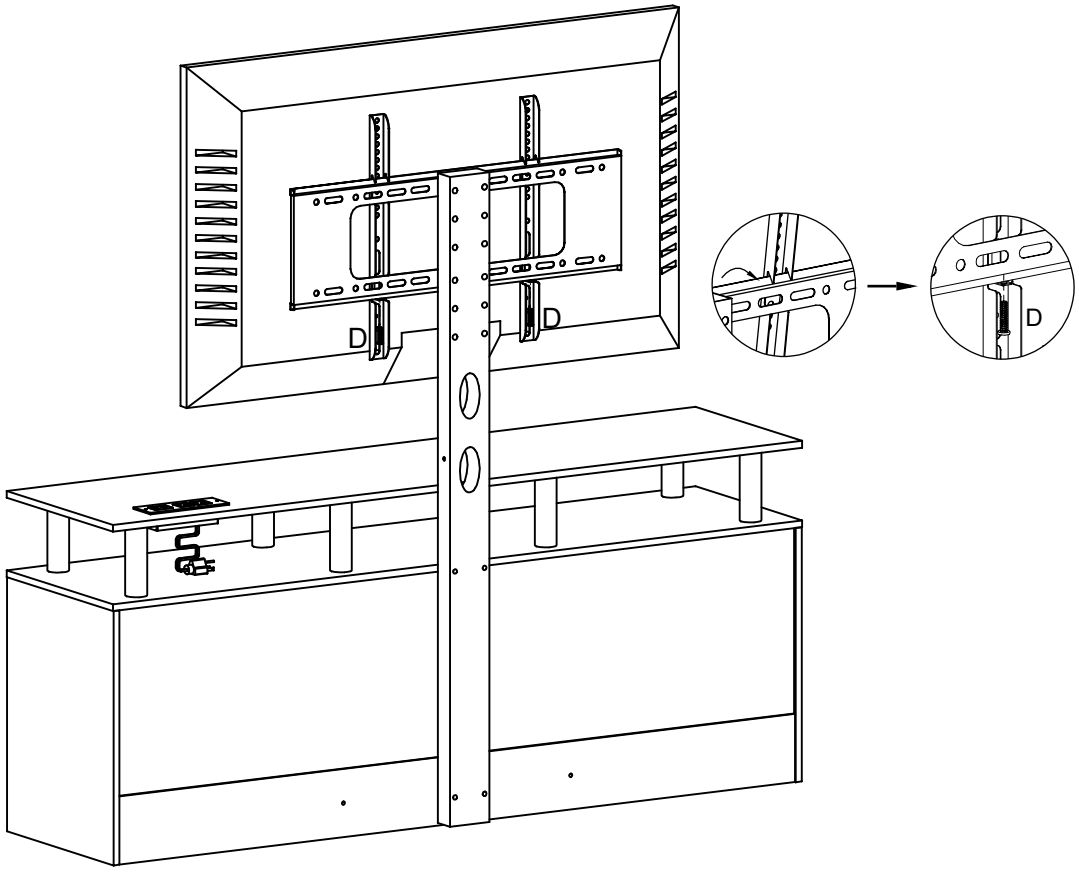

D	M6X28	X2


Step 21

Depending on the environment of the home,
the iron sheet is short on one side andattached to the wall

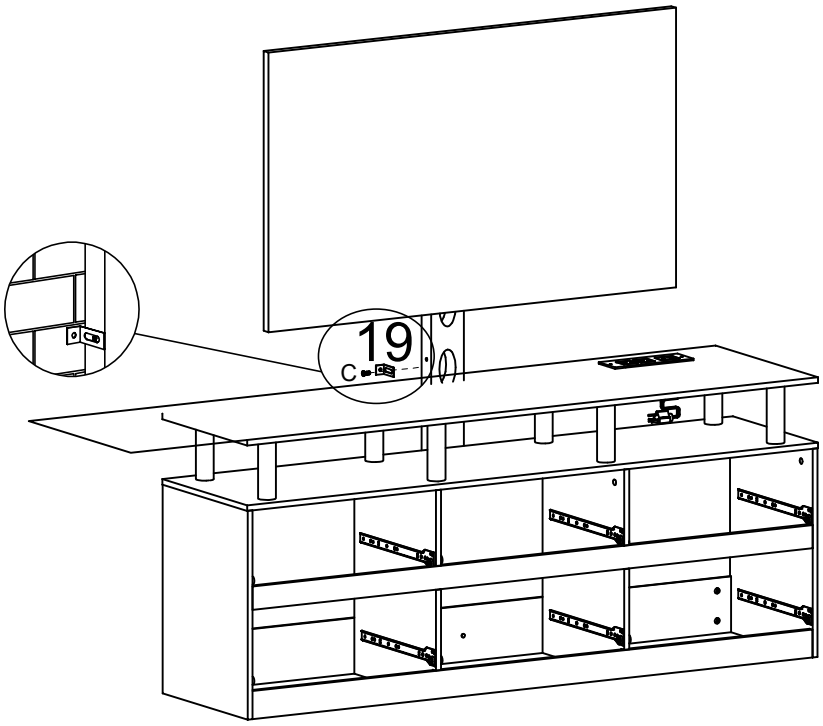


C	M6X14	X1

Step 22

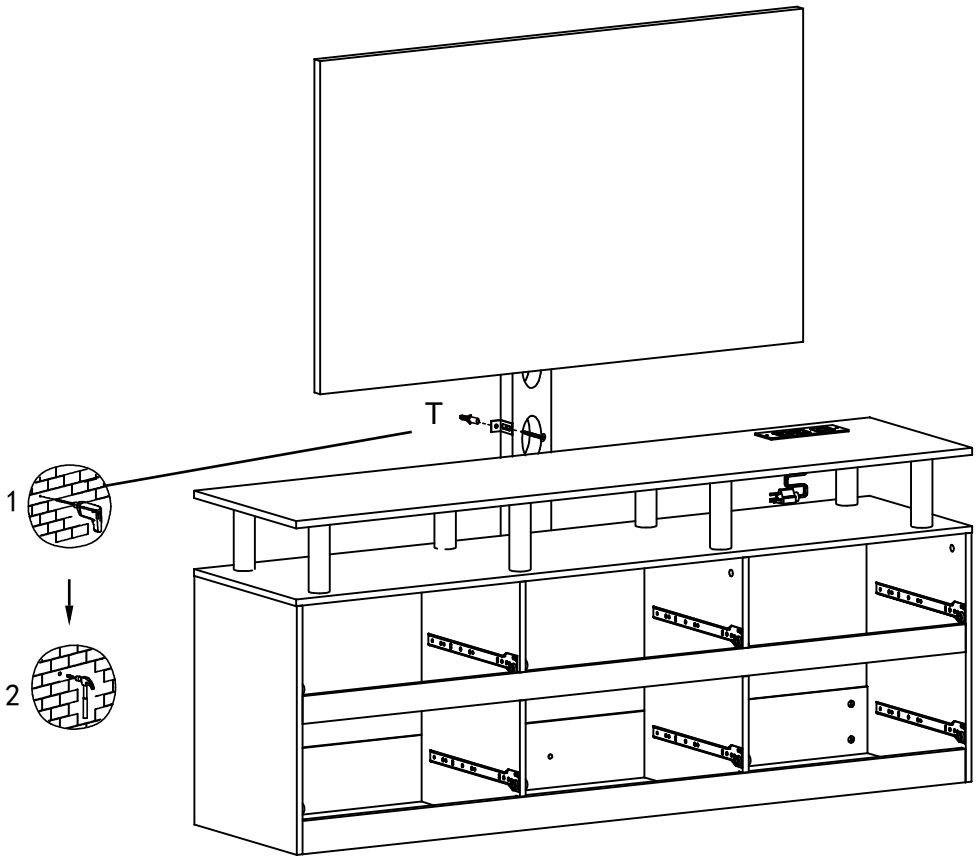


T		X1


Step 23

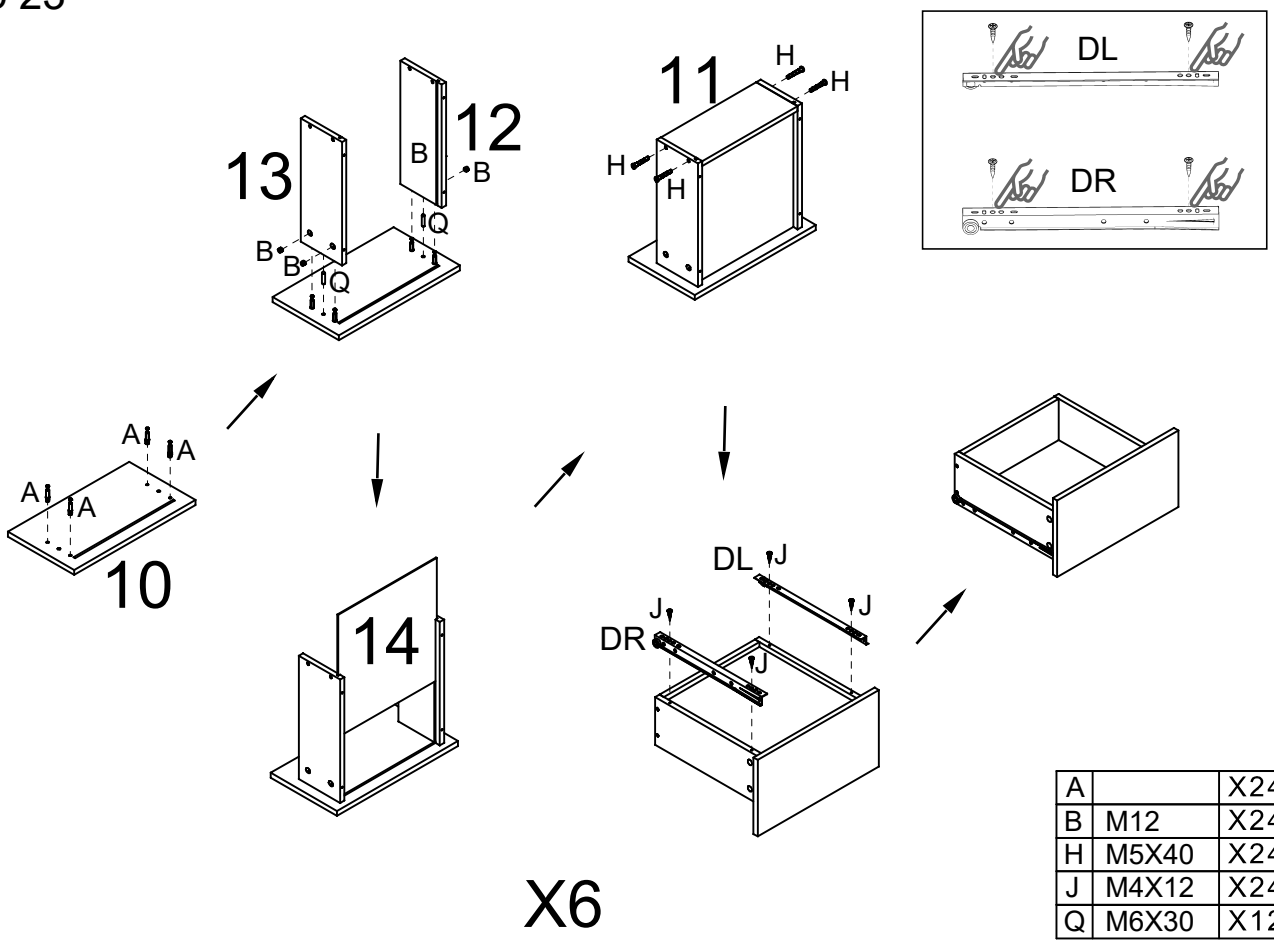


A		X24
B	M12	X24
H	M5X40	X24
J	M4X12	X24
Q	M6X30	X12

Step 24

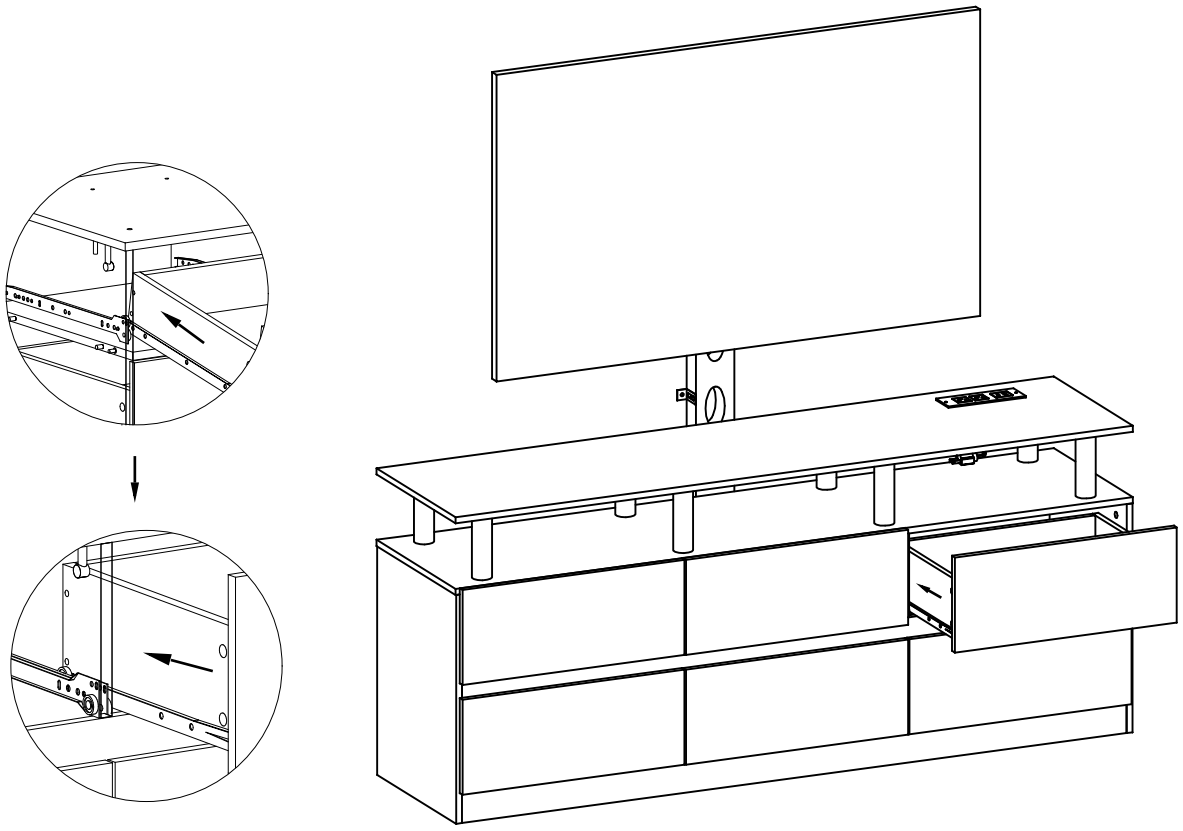

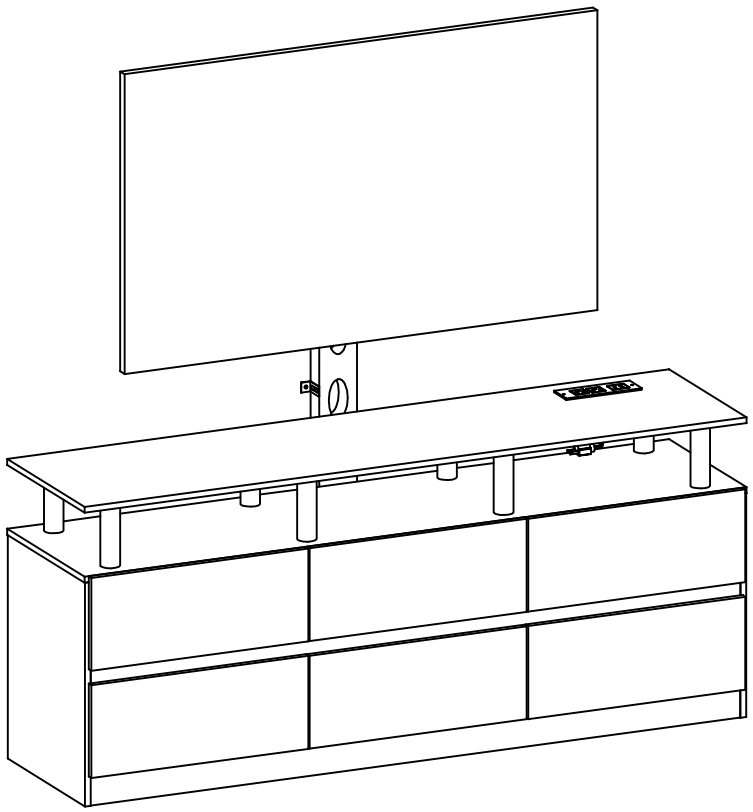


OR

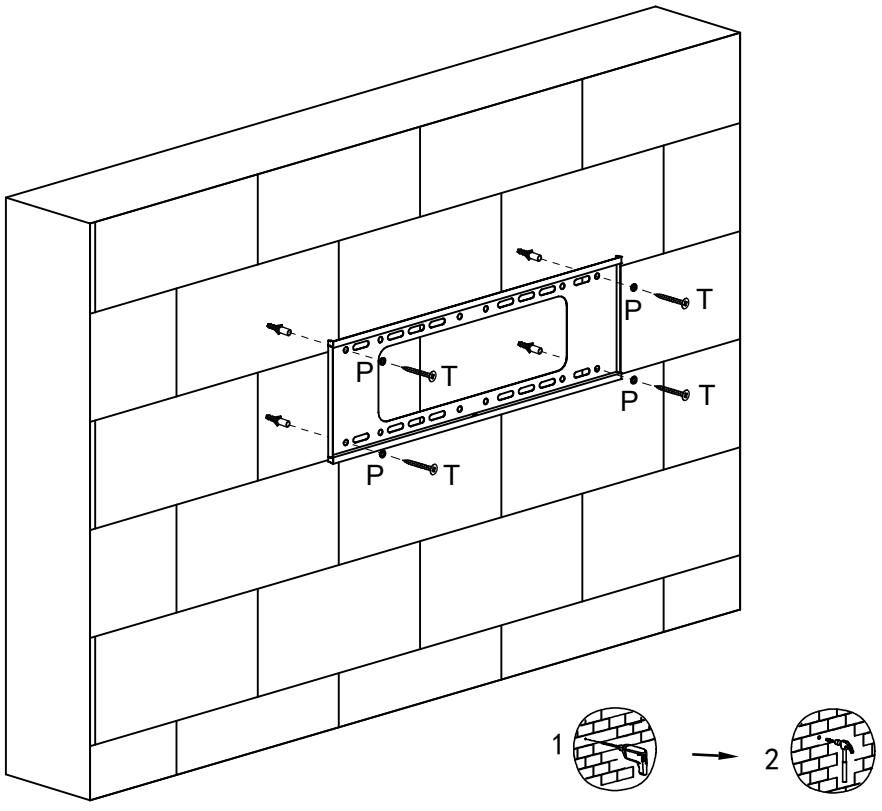

P	M4	X4
T		X4


Step 19

Use the appropriate screws for your TV

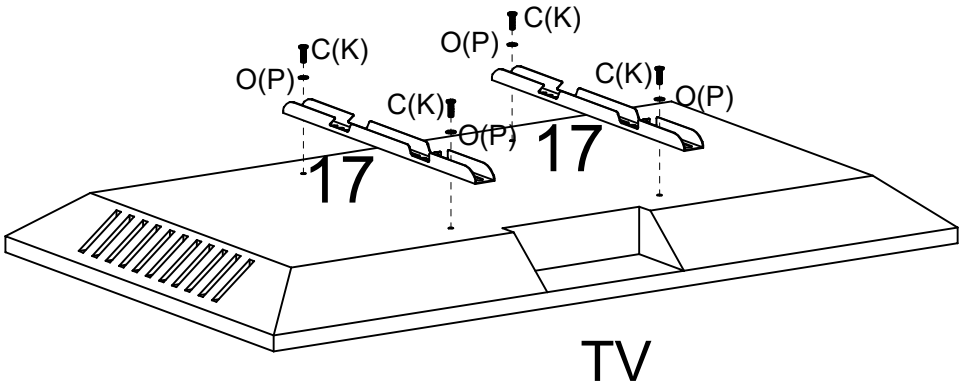

	C	M6X14	X4
OR	K	M4X14	X4
	O	M6	X4
OR	P	M4	X4

Step 20

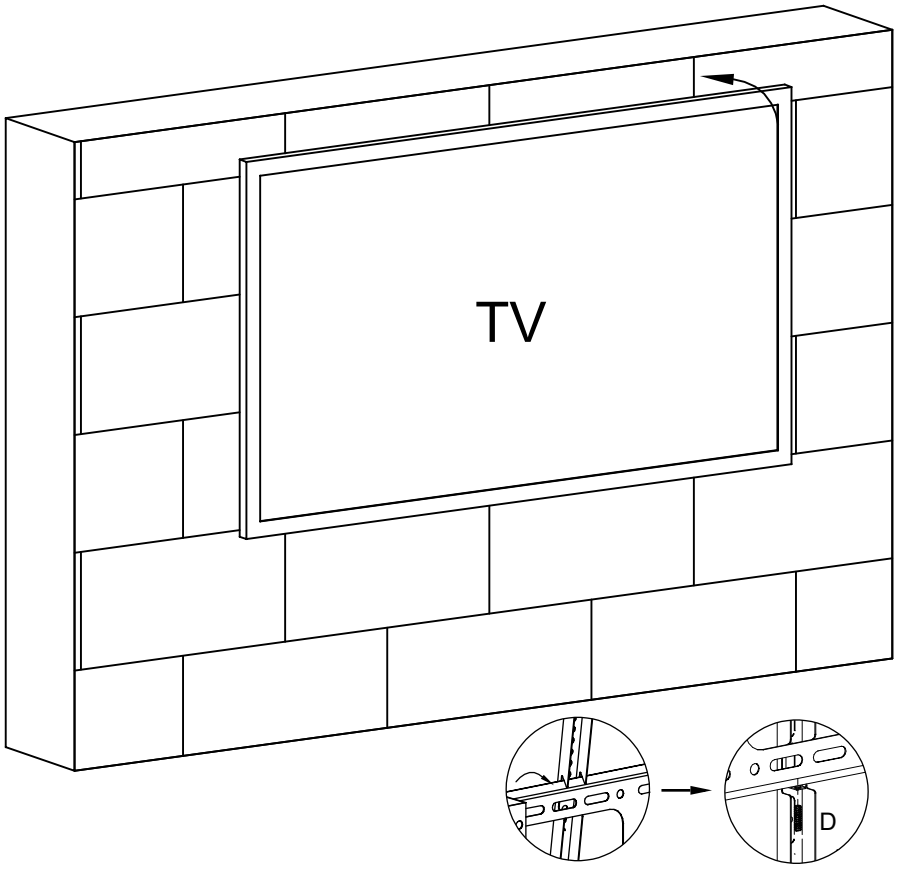

D	M6X28	X2