


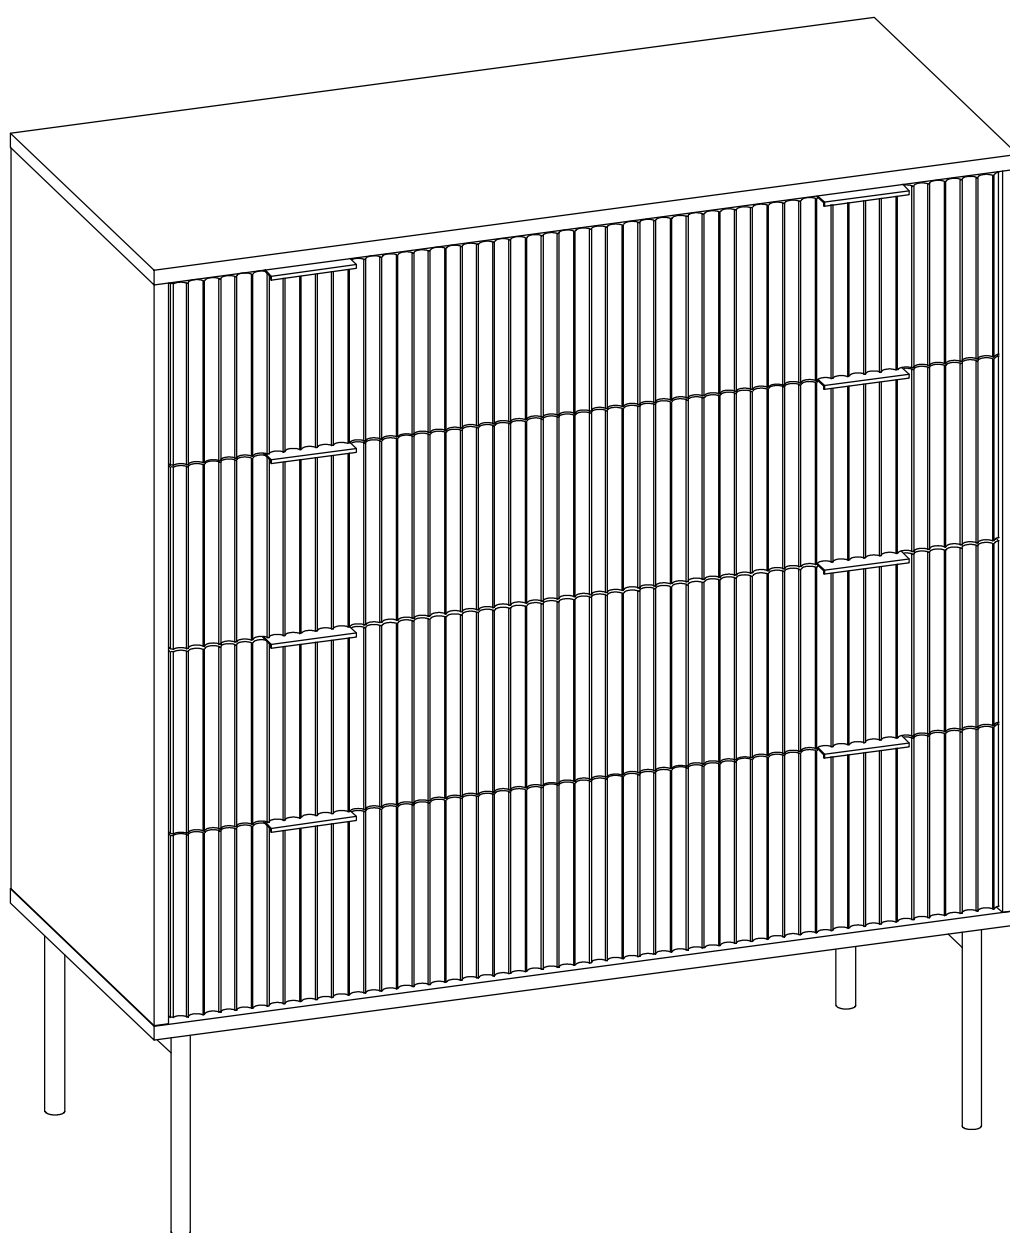
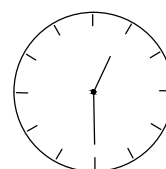

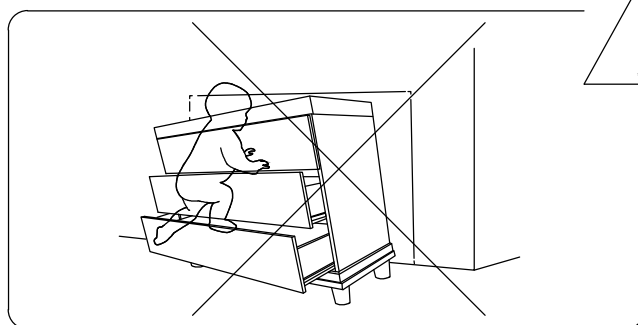
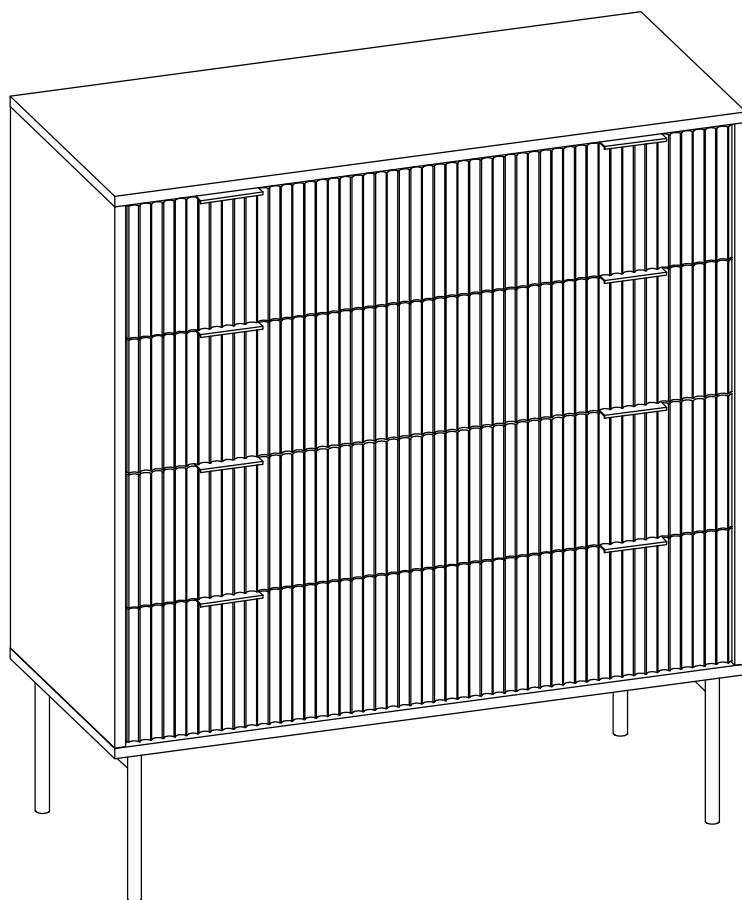


ASSEMBLY INSTRUCTIONS






90'

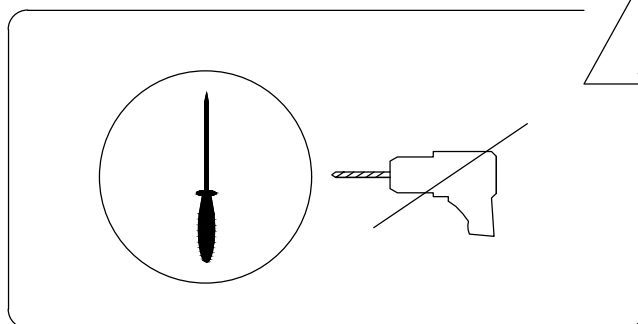

2

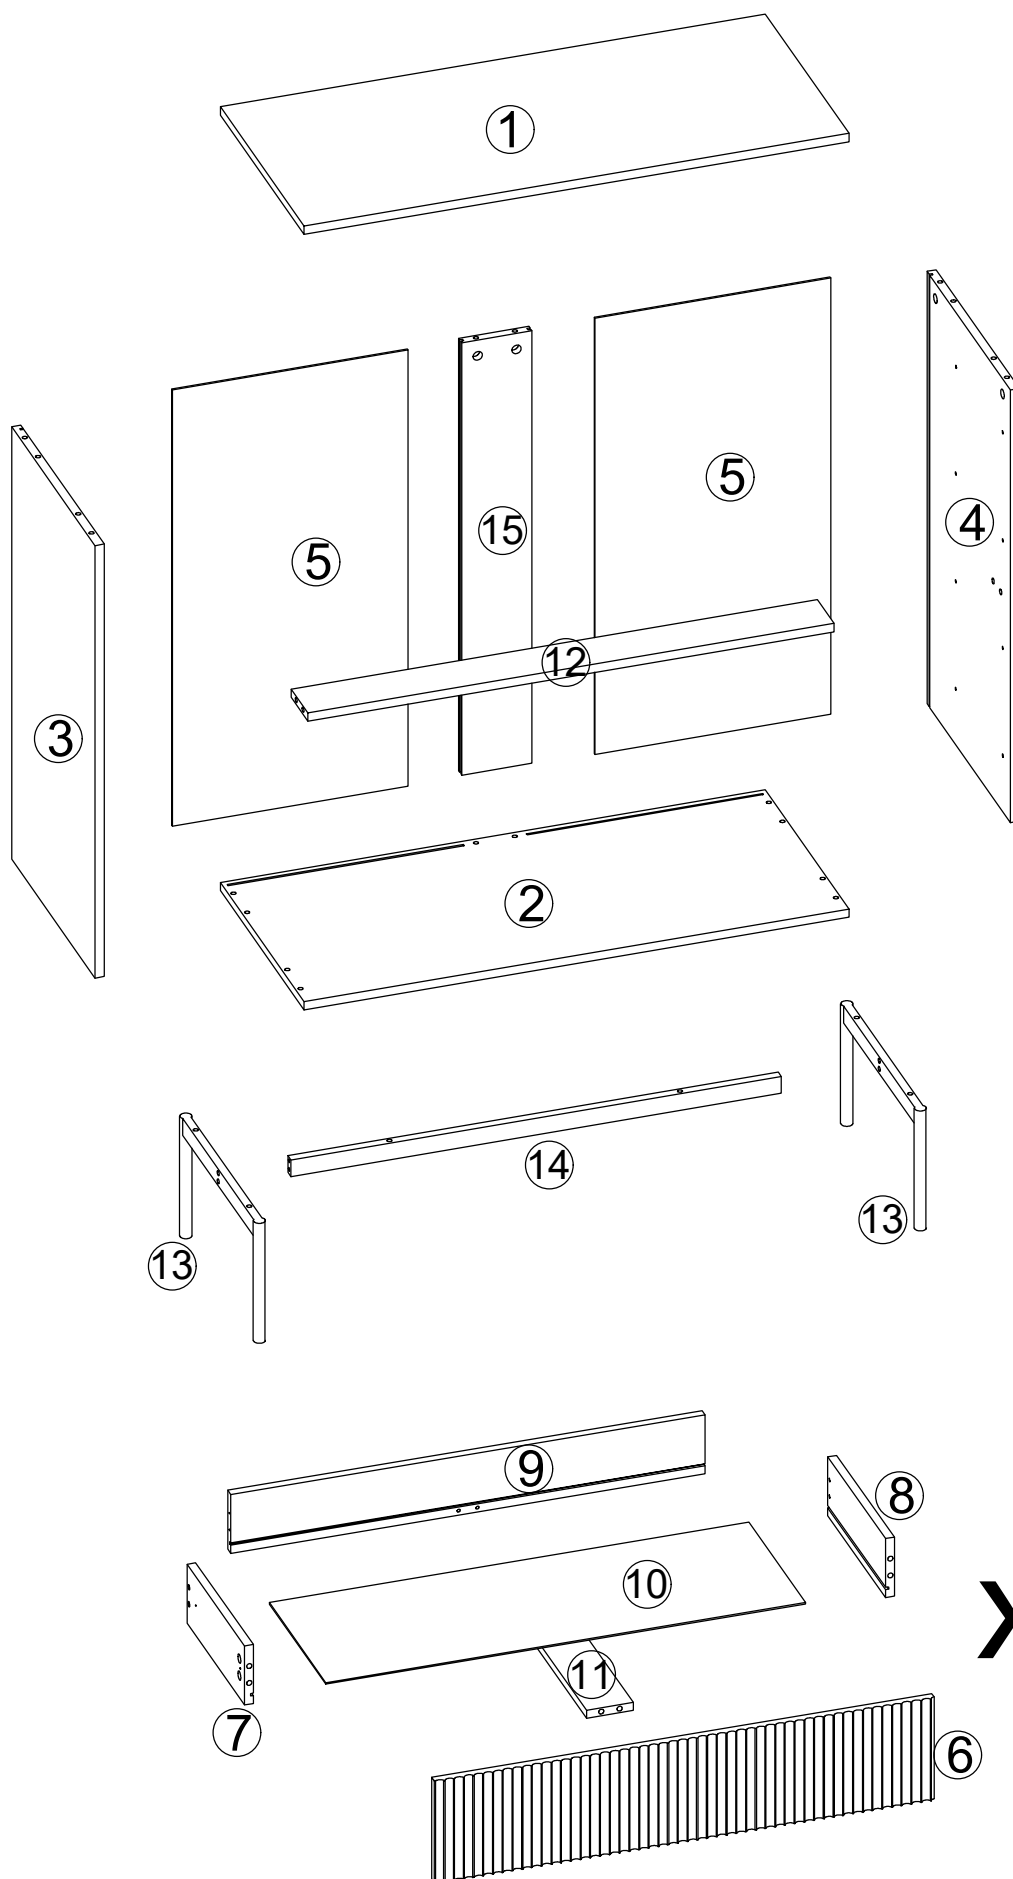



x 4

A	x 34
	
$\phi 6 \times 35\text{mm}$	


B	x 34
	
$\phi 15 \times 12\text{mm}$	

C	x 8
	
$\phi 8 \times 30\text{mm}$	


D	x 6
	
$\phi 7 \times 40\text{mm}$	


E	x 10
	
$M6 \times 40\text{mm}$	


F	x 8
	




G	x 48
	
$M3.5 \times 14\text{mm}$	


H	x 24
	
$M4 \times 35\text{mm}$	

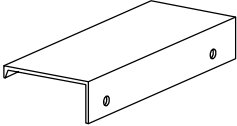I	x 8
	


J	x 8
	

K	x 1
	
$M4$	

L	x 2
   	


x 1


1

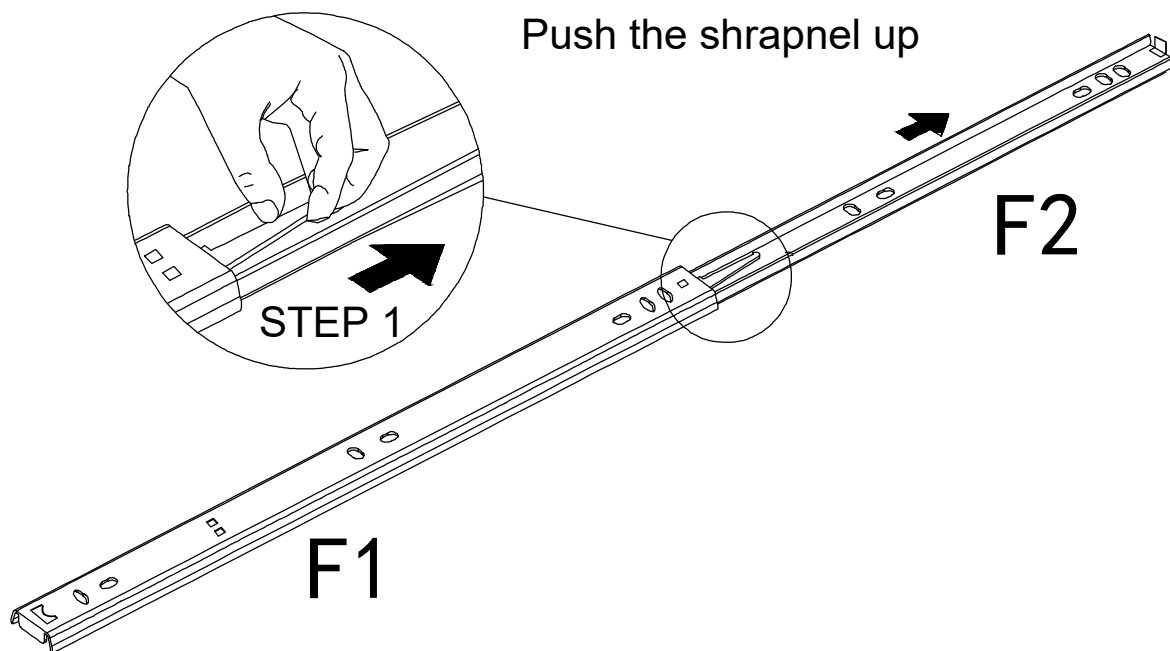

F	x 8

2

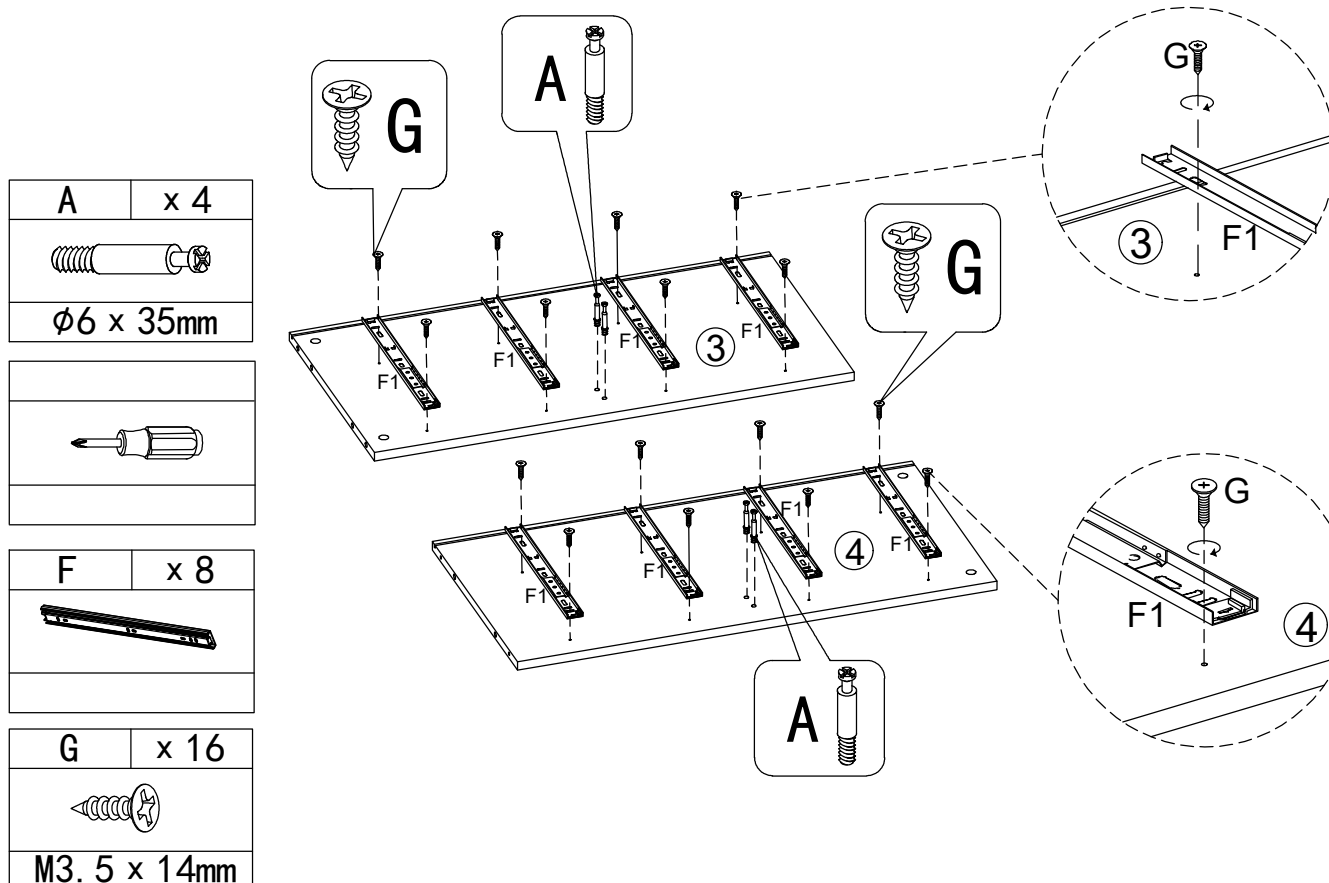



A	x 4
$\phi 6 \times 35\text{mm}$	

F	x 8

G	x 16
$M3.5 \times 14\text{mm}$	


3

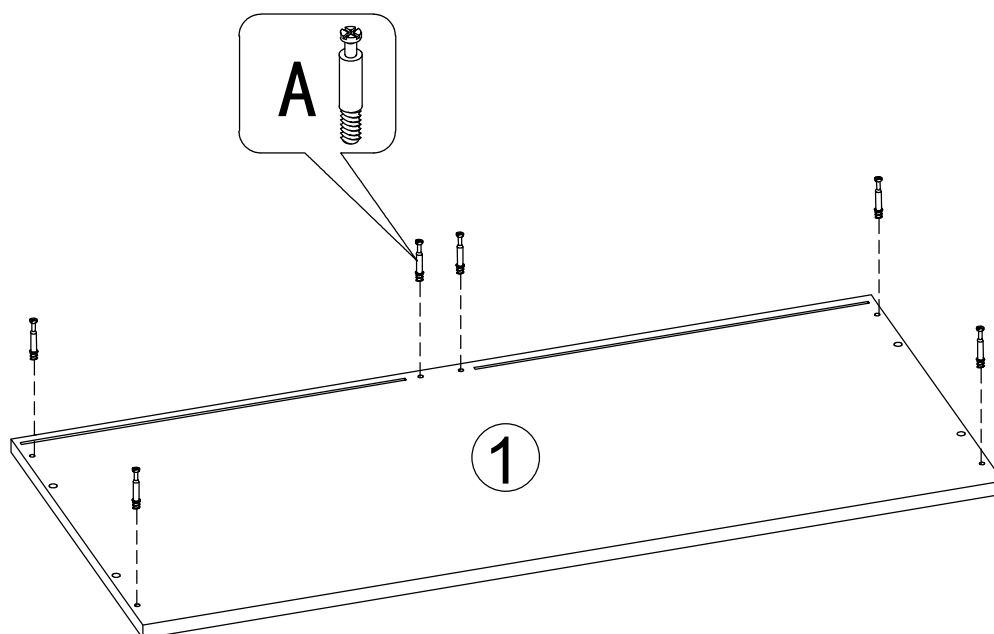


A	x 6
	
$\phi 6 \times 35\text{mm}$	

4

Pay attention to the direction of the slot

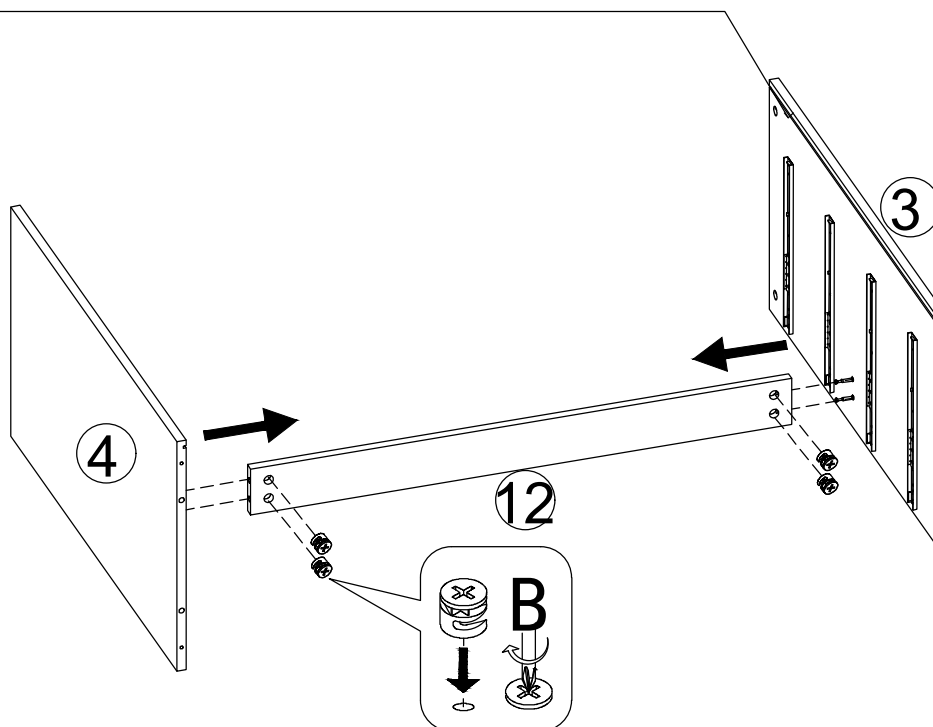


x 1	
	


B	x 4
	
ø15 x 12mm	

5


Pay attention to the direction of the slot

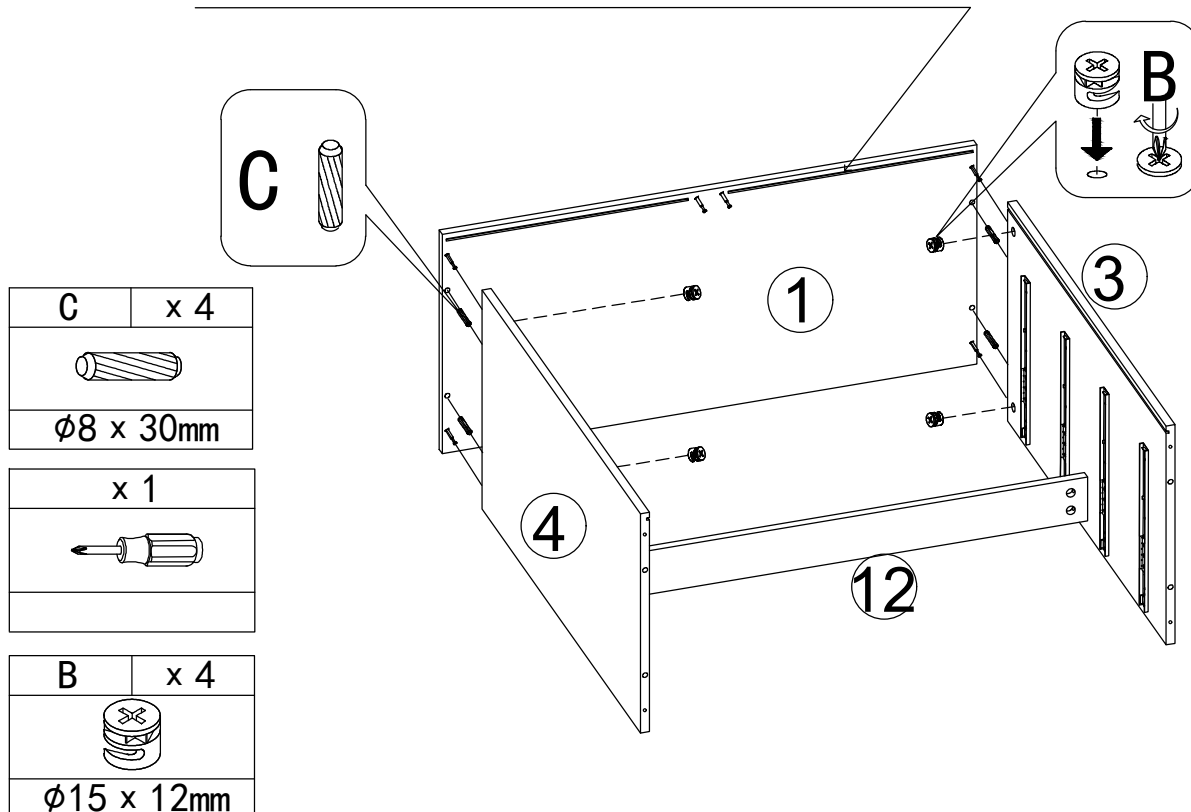


6

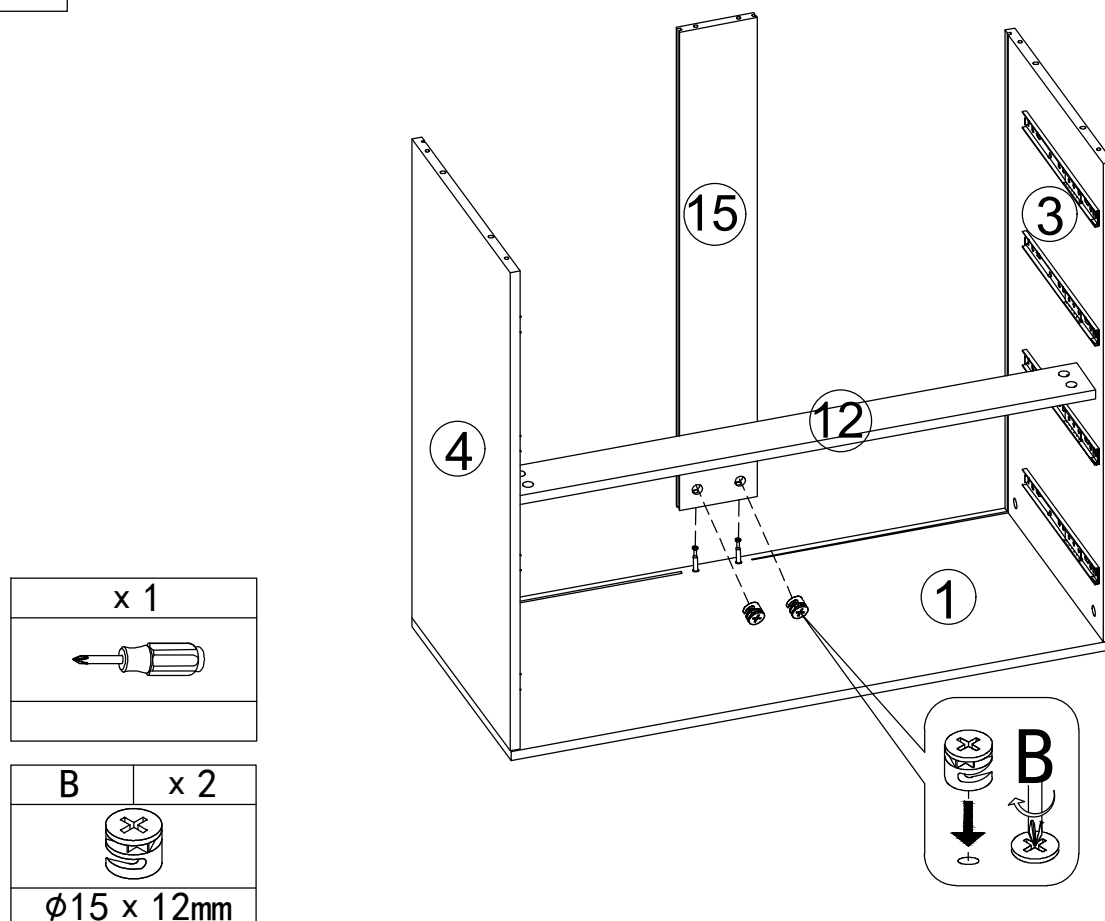

7

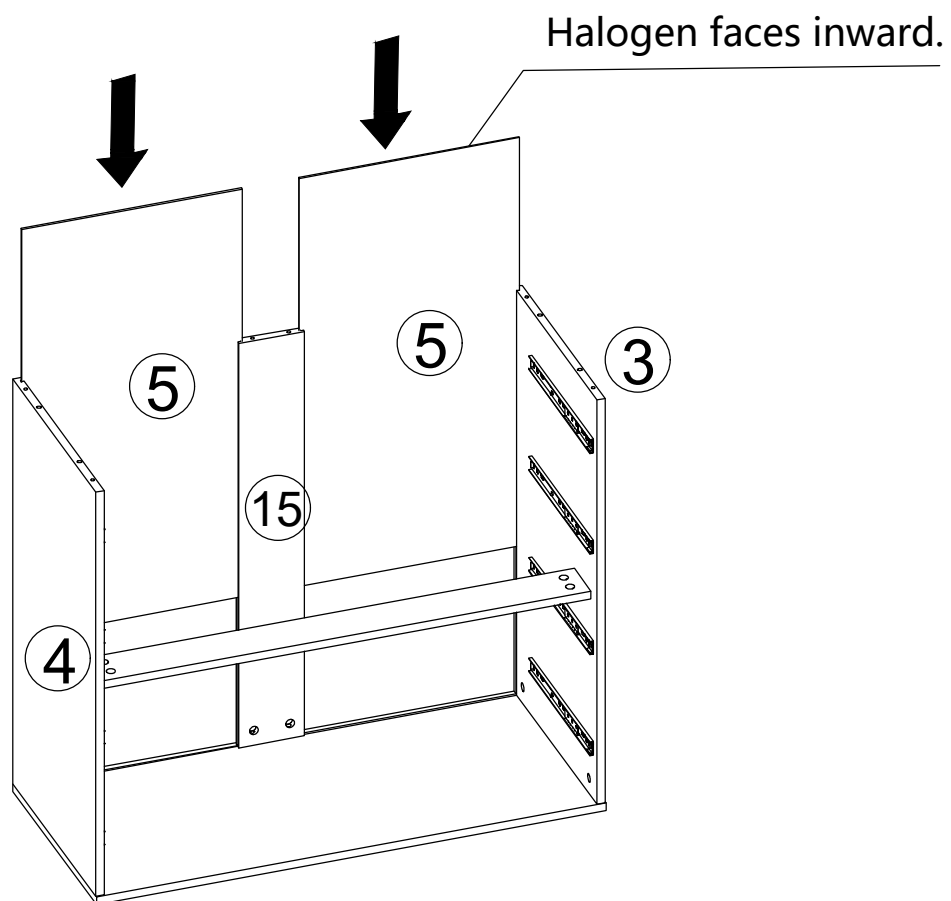

8

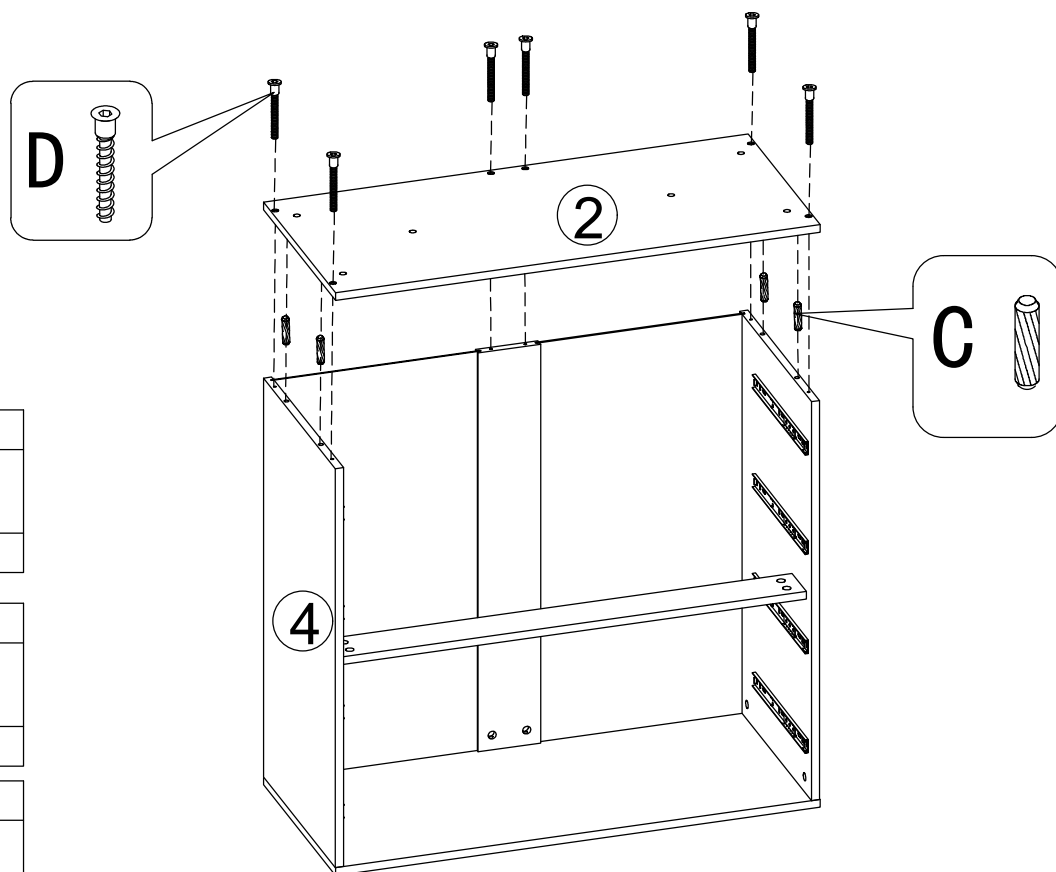


D	x 6
	
$\phi 7 \times 40\text{mm}$	



K	x 1
	
M4	

C	x 4
	
$\phi 8 \times 30\text{mm}$	


9


Pre lock by hand,
then tighten with a wrench

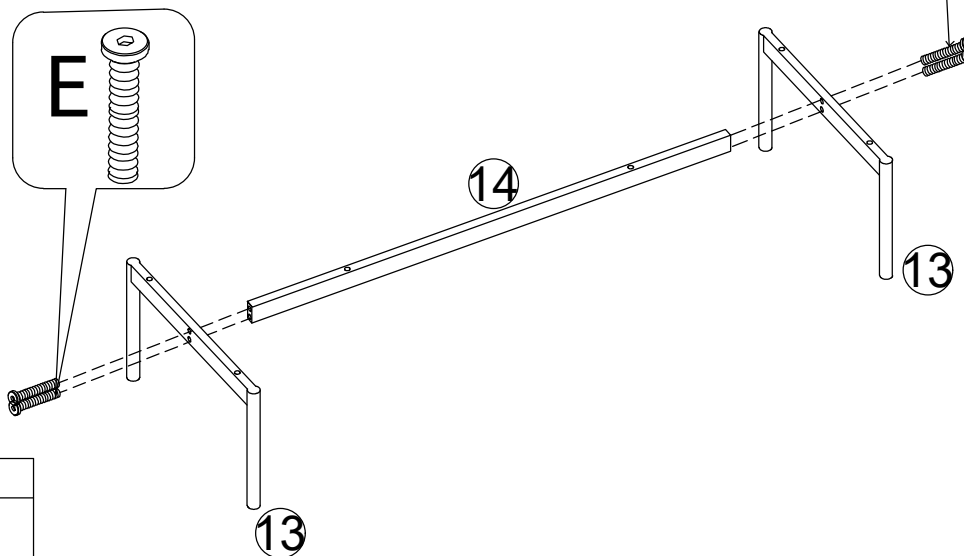




K	x 1
	
M4	
E	x 4
	
M6 x 40mm	

10

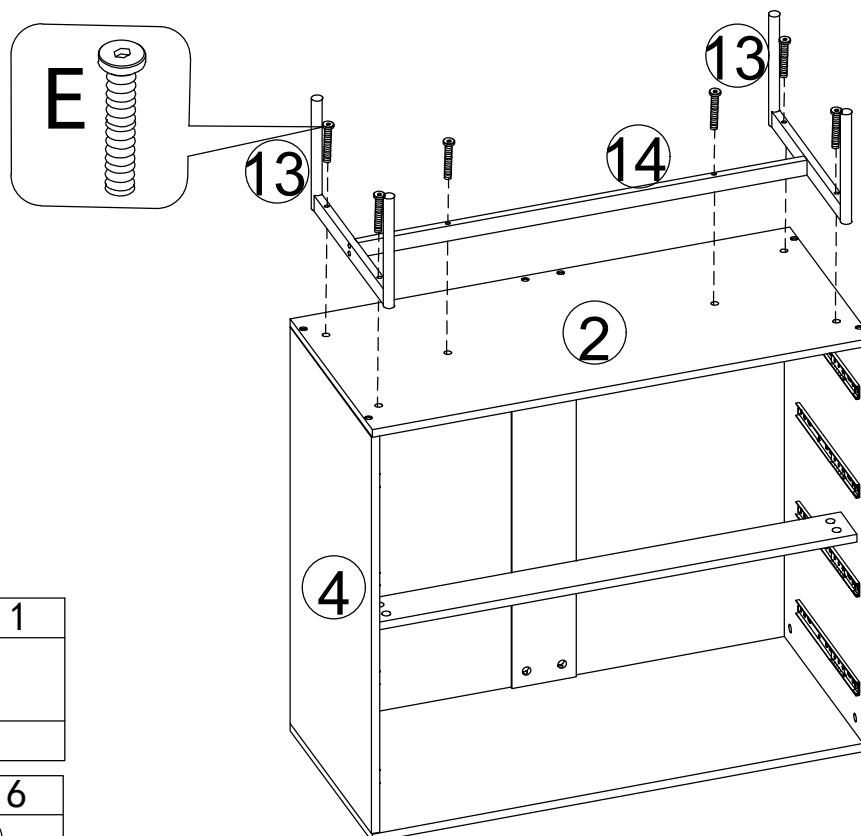




K	x 1
	
M4	
E	x 6
	
M6 x 40mm	

11

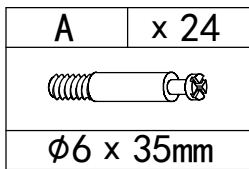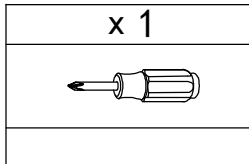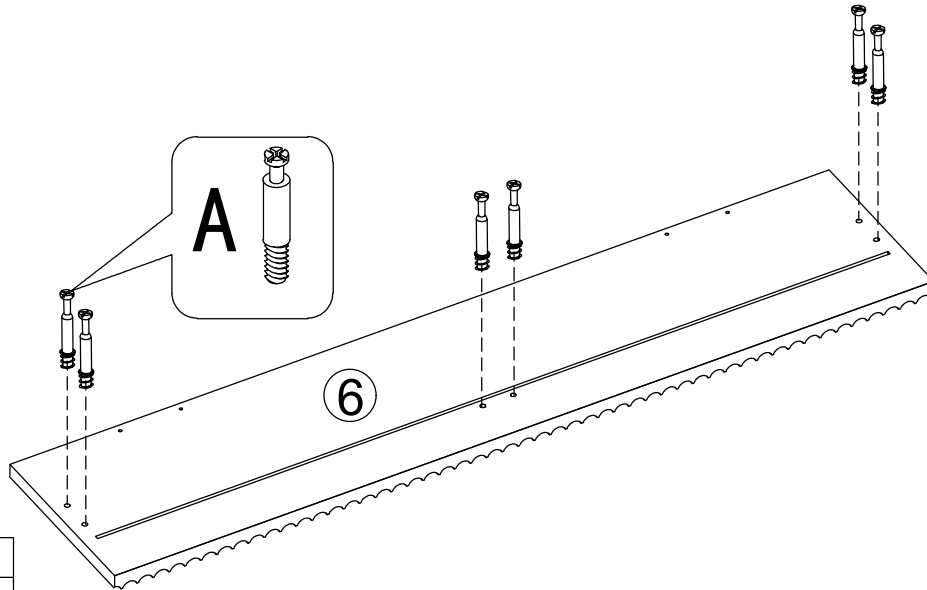


x 4

12

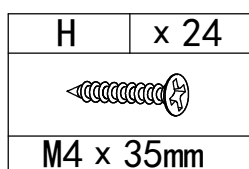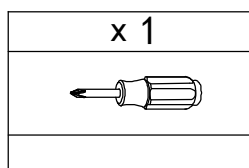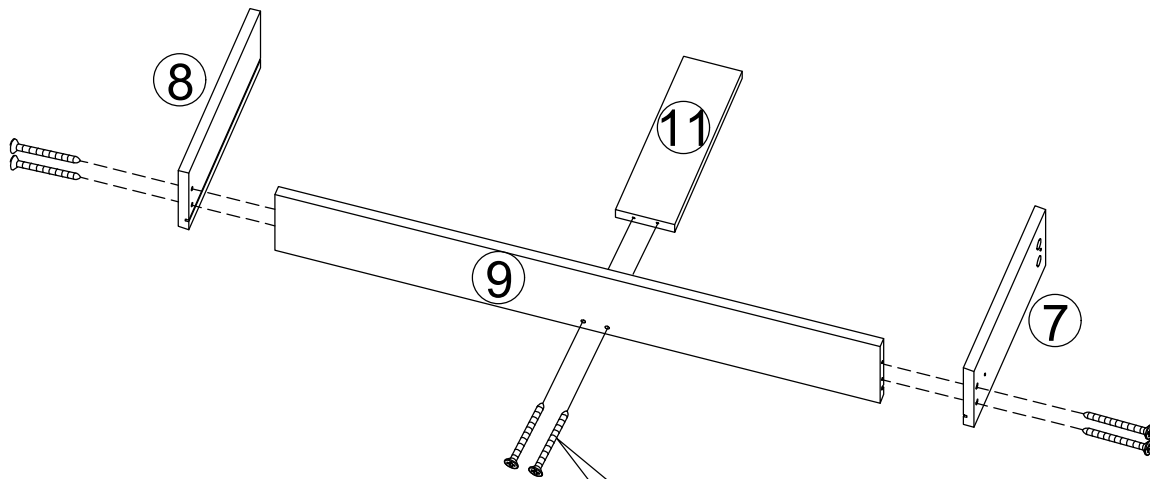



x 4


13

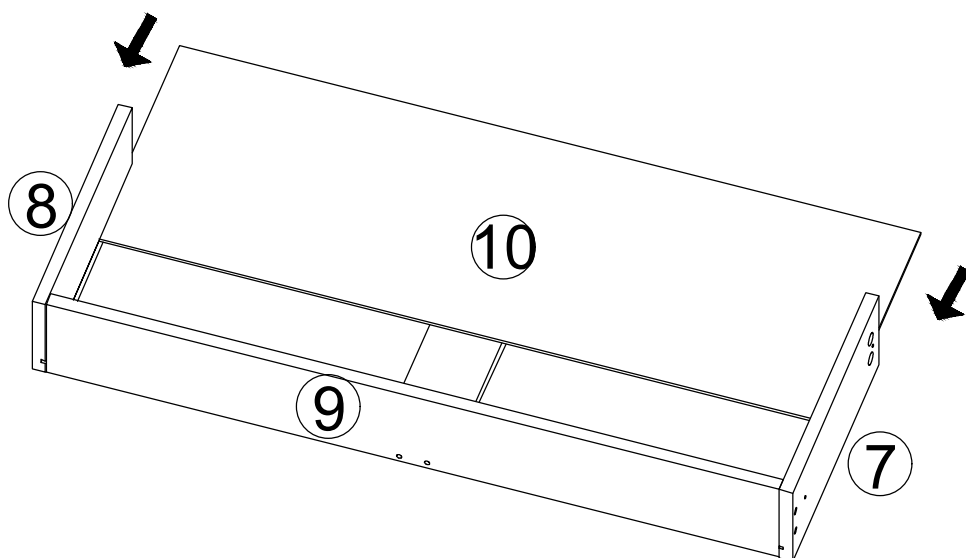

x 4


14

I	x 8
	
G	x 16
	
M3.5 x 14mm	
B	x 24
	
ø15 x 12mm	
x 1	
	

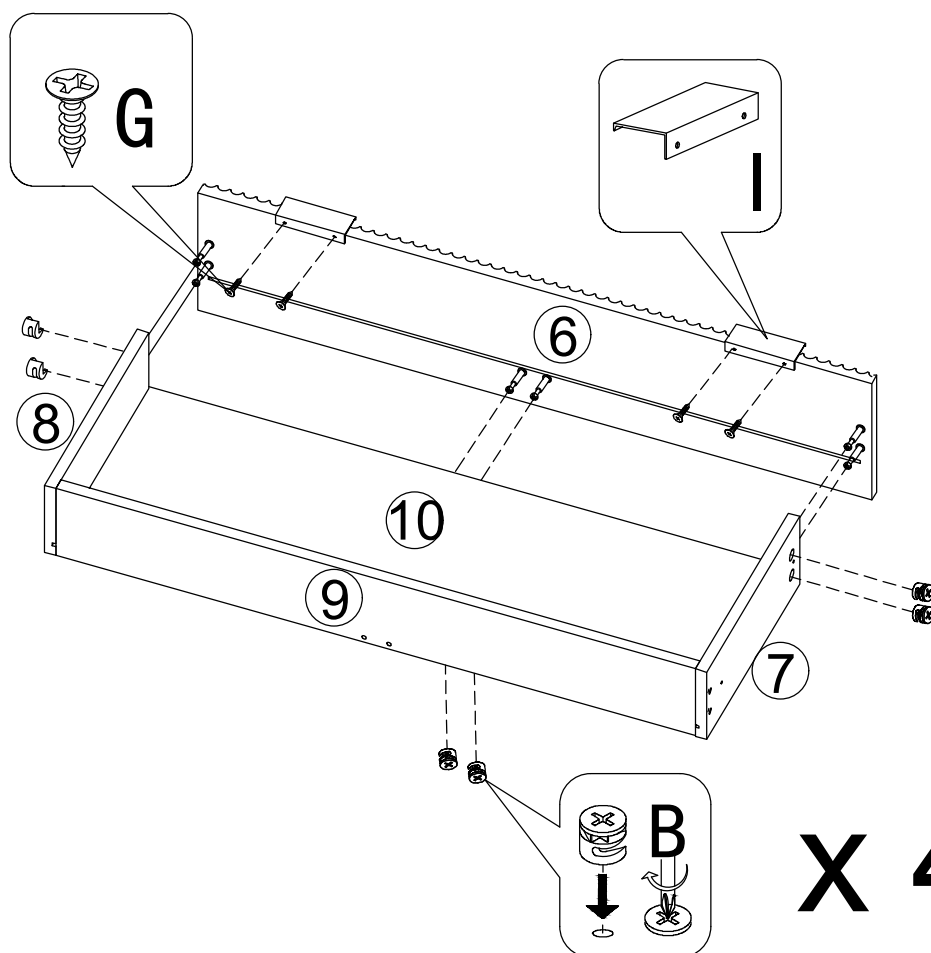


x 4

15

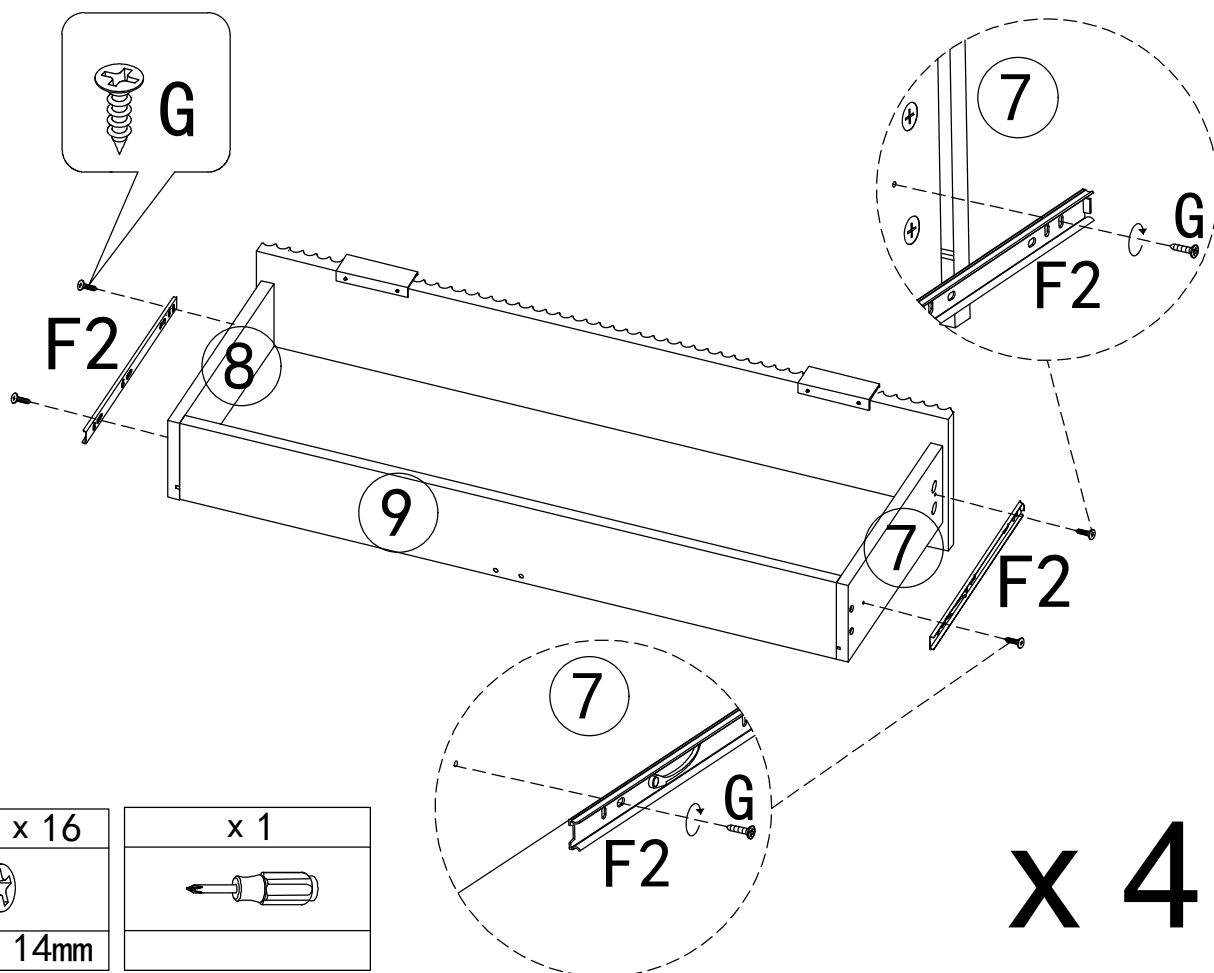


16

Insert the backboard clip first and then lock the screws.

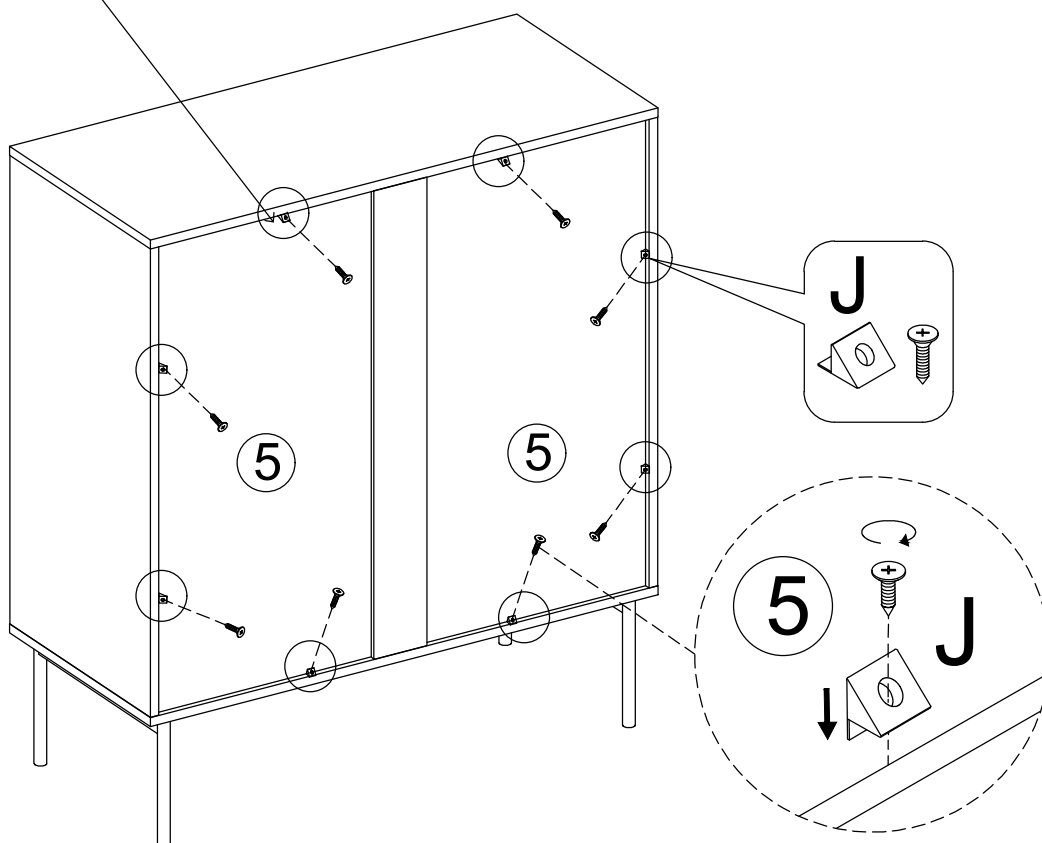


17

Double-sided slide rail flush push-in

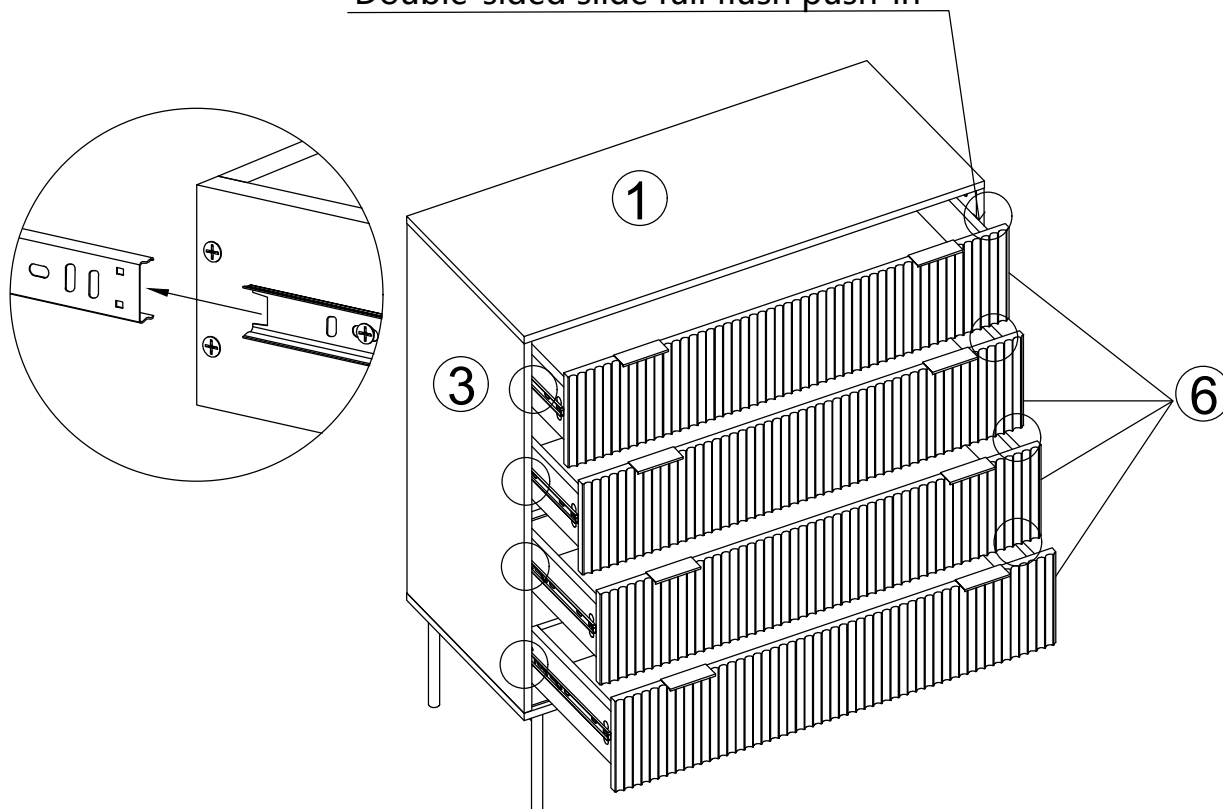

18

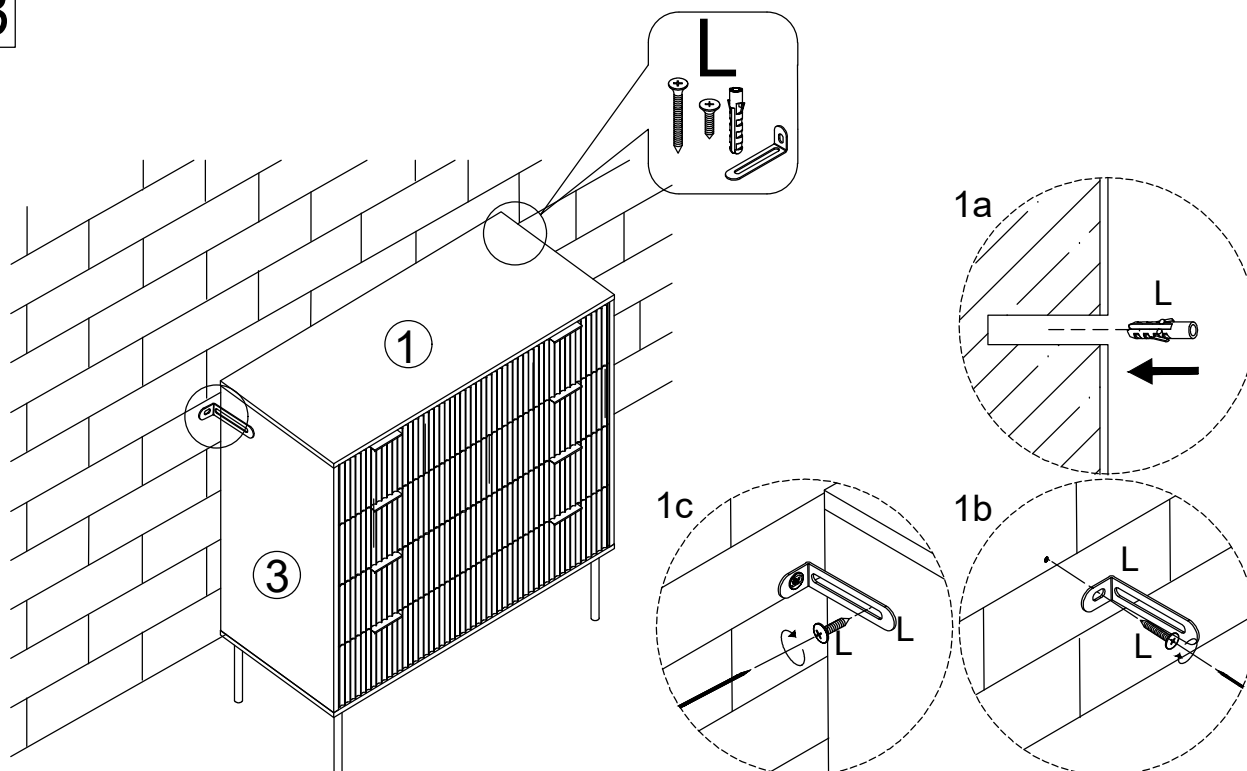

L	x 2
M4 x 35	M3.5 x 14