
Panel

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required.

HDFRP

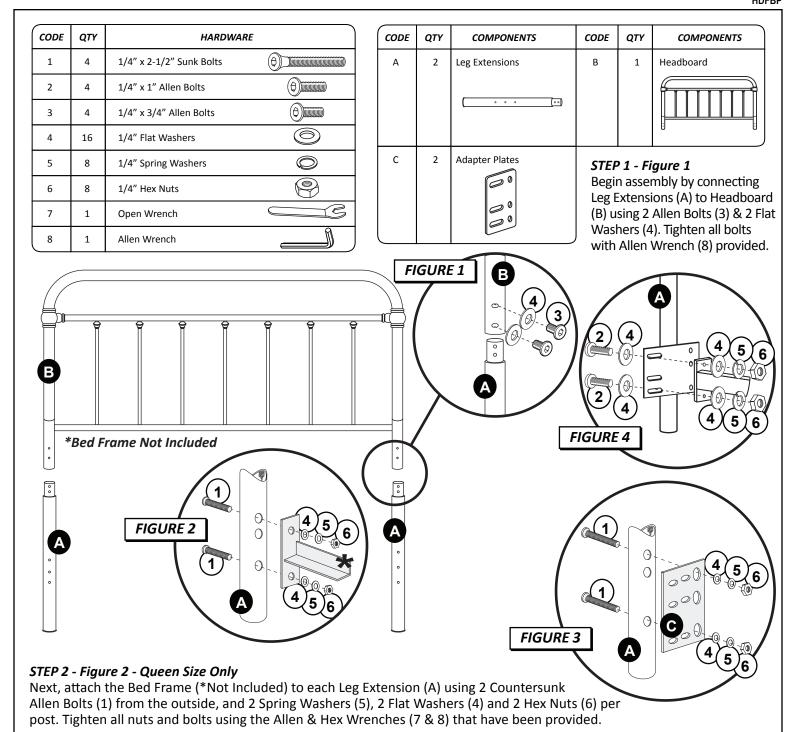

STEP 3 - Figure 3 - Full Size Only

Attach each Adapter Plate (C) to each Leg Extension (A) using 2 Countersunk Allen Bolts (1), 2 Flat Washers (5), 2 Spring Washers (5) & 2 Hex Nuts (6) per each side. Tighten all bolts and nuts using the Allen & Hex Wrenches (7 & 8) that have been provided.

STEP 4 - Figure 4 - Full Size Only

Once in place, secure the Bed Frame (Not Included) to each Adapter Plate (C) using 2 Allen Bolts (2) and 2 Flat Washers (4) from the backside, & 2 Flat Washers (4), 2 Spring Washers (5) & 2 Hex Nuts (6) per plate. Tighten all bolts and nuts using the Open Wrench (7) and Allen Wrench (8) provided. The assembly is now complete.