

Step 1

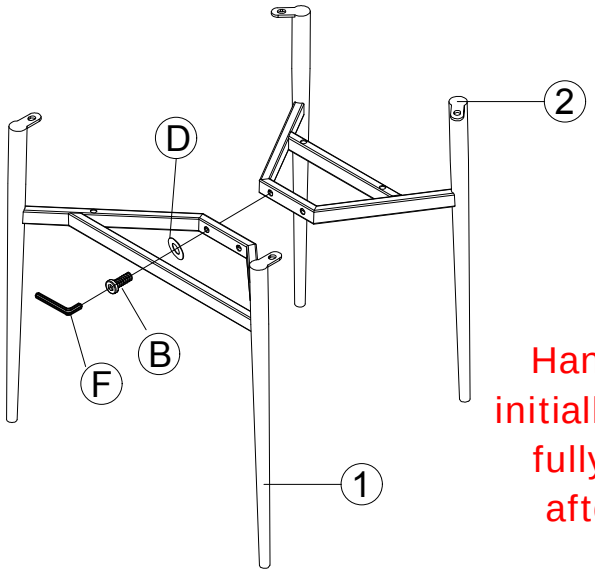


Step 2

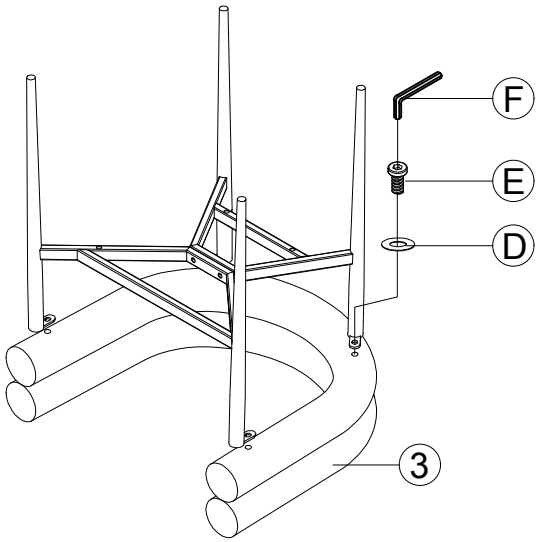


Hand-tighten the bolts initially for alignment, then fully tighten them only after the chair is level.


Step 3

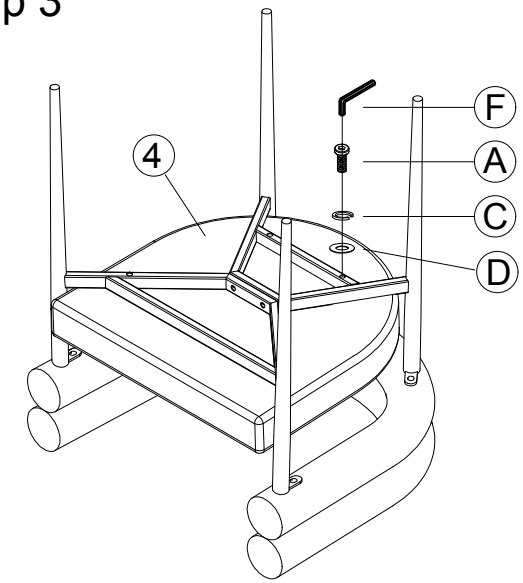

Step 4

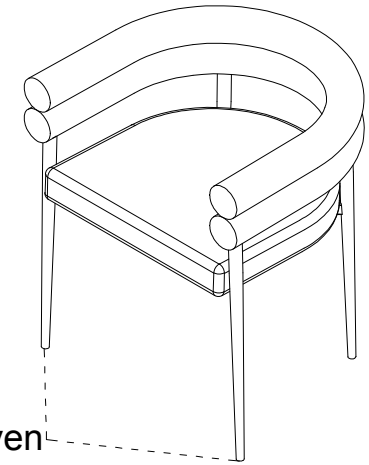

Assembly Guide Video

	1	2	3	4	A	B	C	D	E	F
804B 805B					 M6*40	 M6*35	 Ø13	 Ø16	 M6*12	 4.0
	1pc	1pc	1pc	1pc	4pcs	2pcs	4pcs	10pcs	4pcs	1pc