



# ASSEMBLY INSTRUCTIONS

## TWIN BED WITH 2 DRAWERS
















**WF301864**



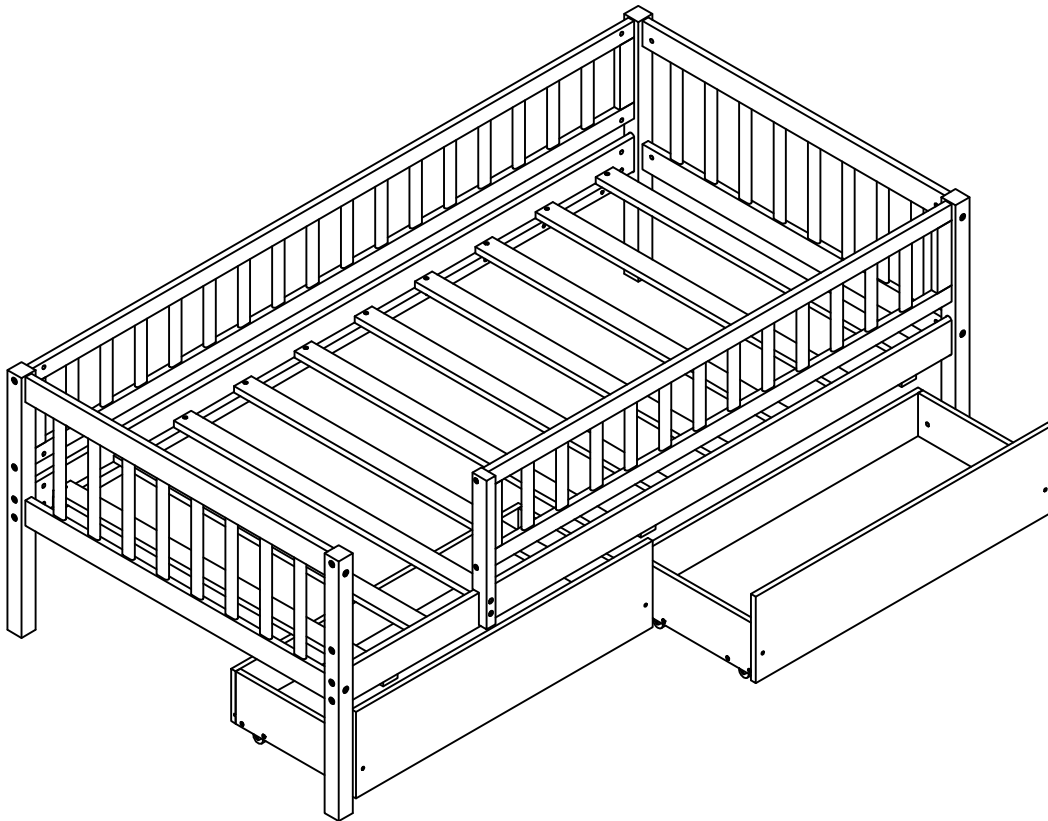


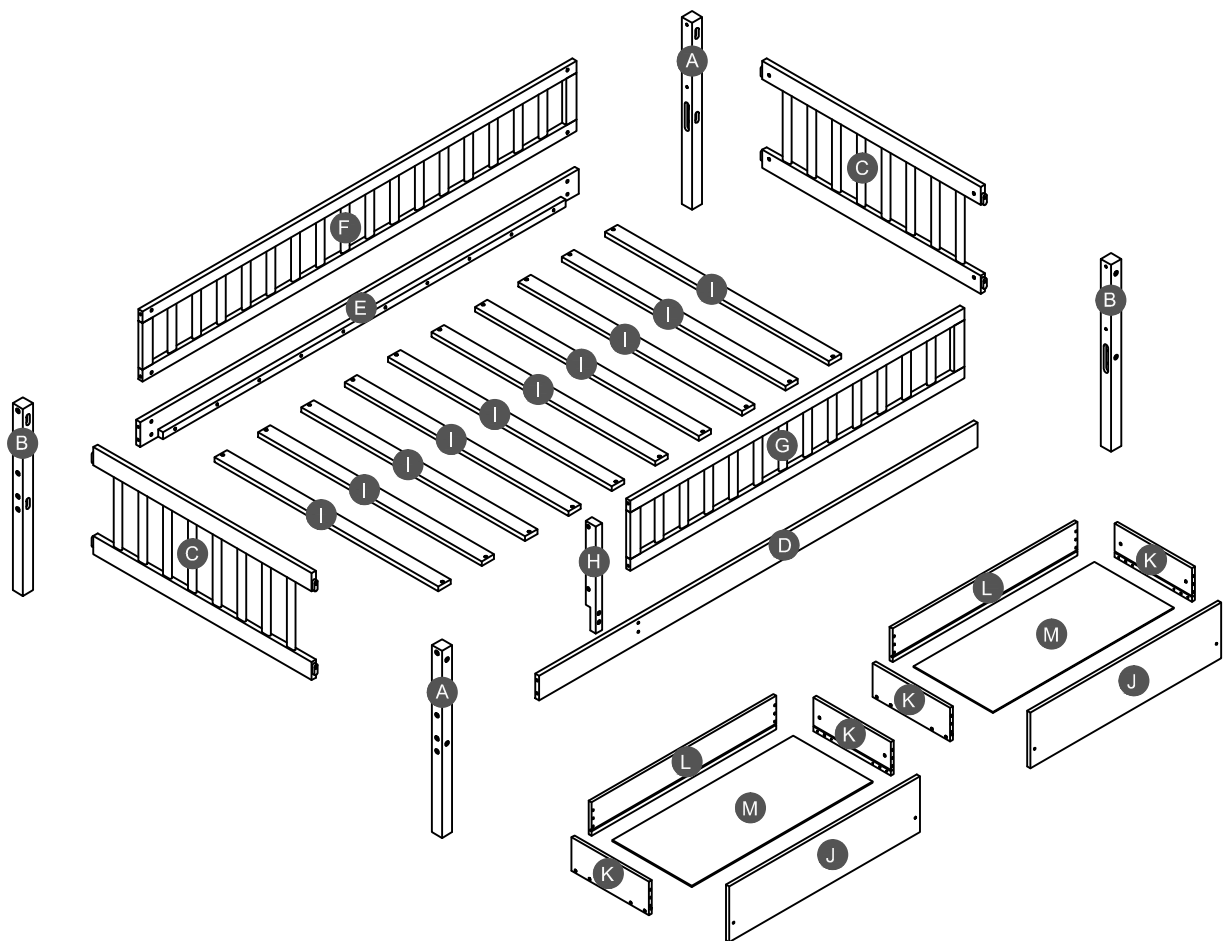





## Detail View




# Part List

<b>A</b>  Leg (Left Front/Right Back) - 2pcs	<b>B</b>  Leg (Left Back/Right Front) - 2pcs	<b>C</b>  Frame HB/FB - 2pcs
<b>D</b>  Side rail (Front) - 1pc	<b>E</b>  Side rail (Back) - 1pc	<b>F</b>  Long guard rail (Back) - 1pc
<b>G</b>  Short guard rail (Front) - 1pc	<b>H</b>  Support guard rail(Left) - 1pc	<b>I</b>  Slats - 10pcs
<b>J</b>  Front drawer panel - 2pcs	<b>K</b>  Left / right drawer panel - 4pcs	<b>L</b>  Back drawer panel - 2pcs
<b>M</b>  Drawer bottom - 2pcs		

## Hardware List


<b>1</b>  (Ø15)1/4"*100mm Hex-Head bolts (14pcs)	<b>2</b>  (Ø15)1/4"*80mm Hex-Head bolts (10pcs)	<b>3</b>  (Ø15)1/4"*60mm Hex-Head bolts (8pcs)
<b>4</b>  (Ø12)1/4"*35mm Hex-Head bolts (2pcs)	<b>5</b>  1/4"*15 (9.5mm) Horizontal-Hole bolts(32pcs)	<b>6</b>  Ø4*30mm Wood screws (42pcs)
<b>7</b>  (1/4")4.5*58mm Allen key (1pc)	<b>8</b>  100*54*20 mm Wheels (8pcs)	<b>9</b>  70*35*19 mm Drawer stopper (3pcs)
<b>10</b>  Ø8*30mm Wood dowel (16pcs)	<b>11</b>  Ø10*20mm Wood dowel (8pcs)	



### ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !
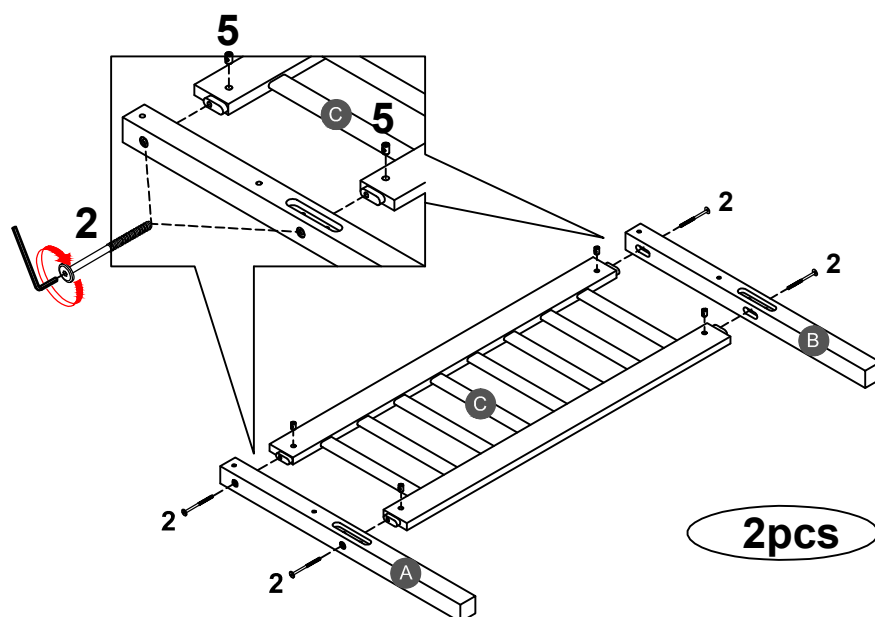
## STEP 1:






2	5
	
8PCS	8PCS

Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

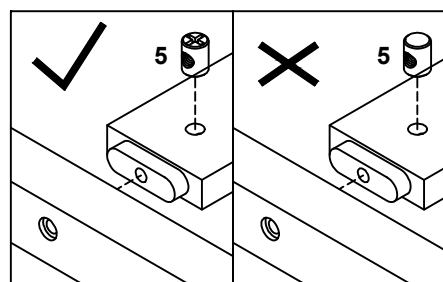


## STEP 2:

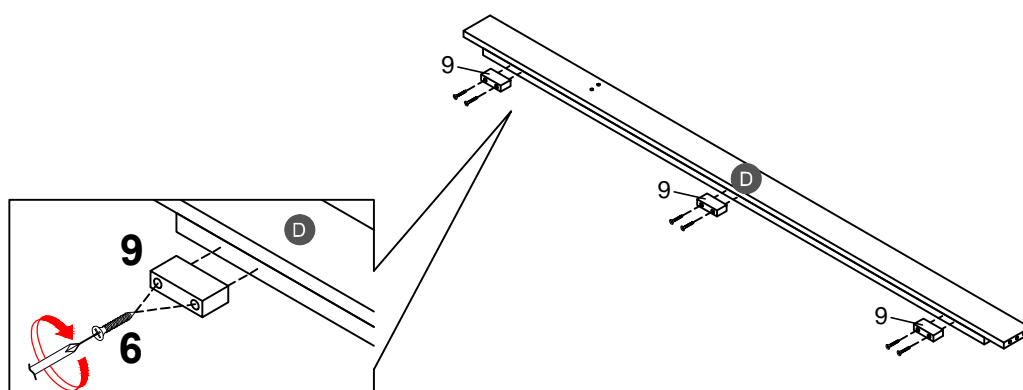


6	9
	
6PCS	3PCS

Drawer stopper (9) with lower side rail front (D) by using screw (6).

### STEP 3:

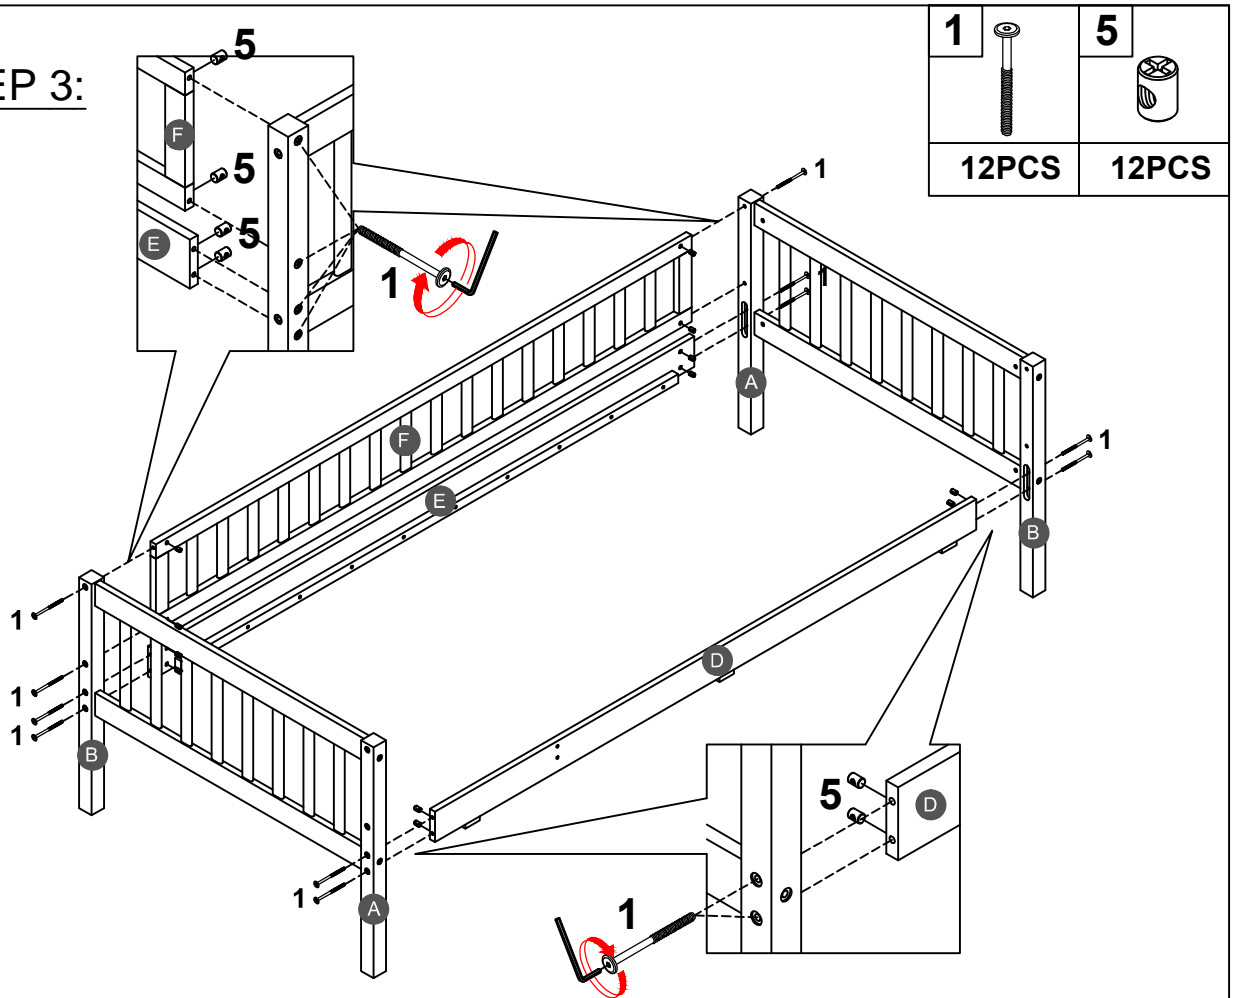

### STEP 4:



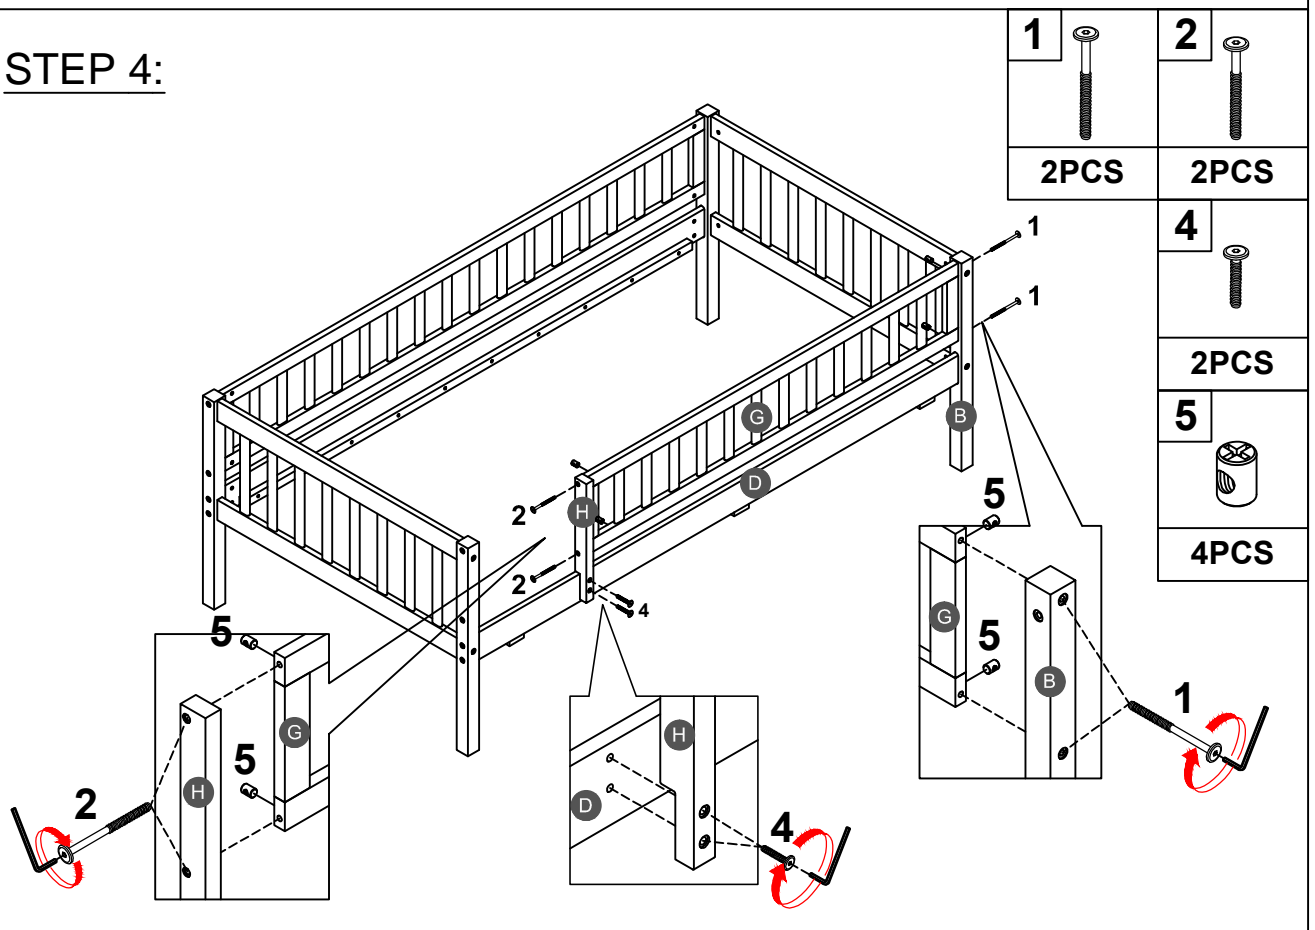


## STEP 5:

6



20PCS

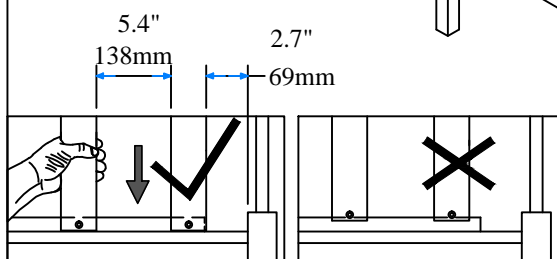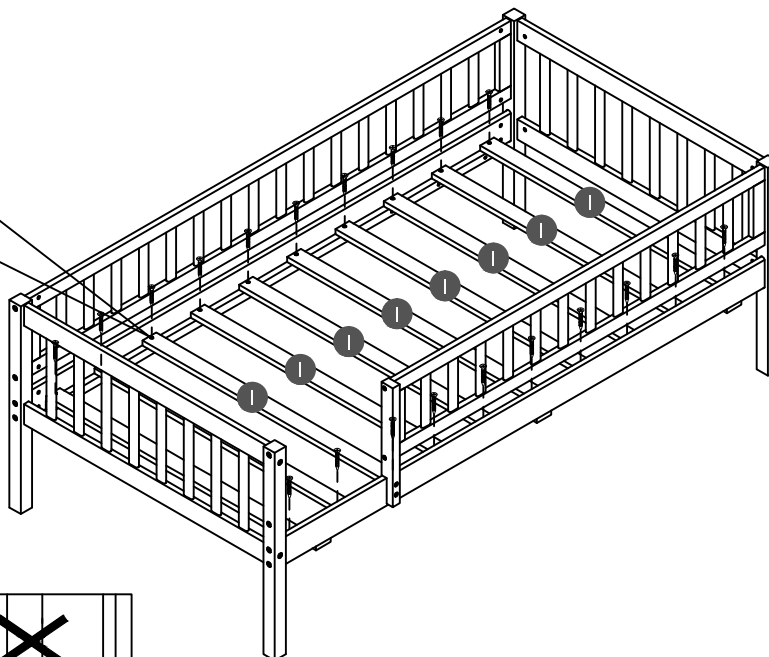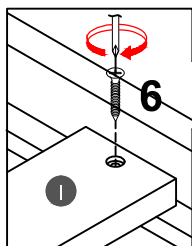

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

## STEP 6:

3



4PCS

5




4PCS

10



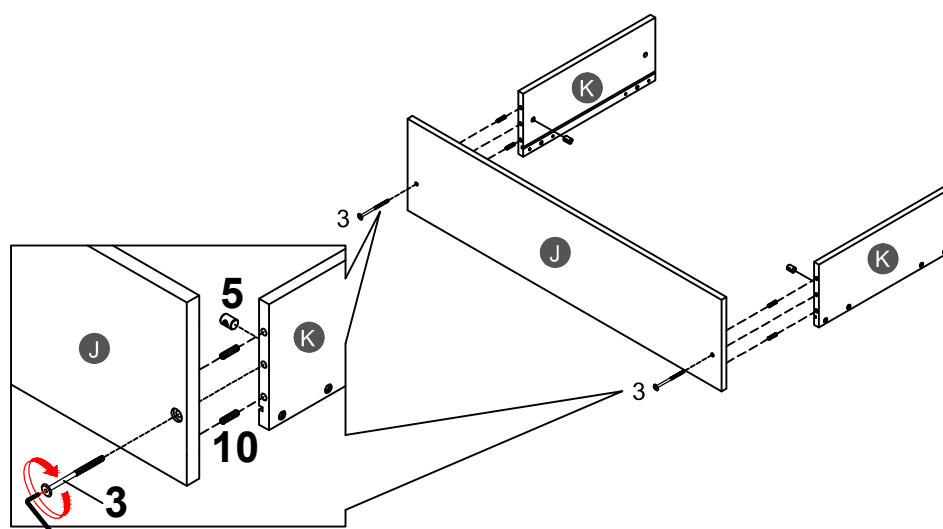


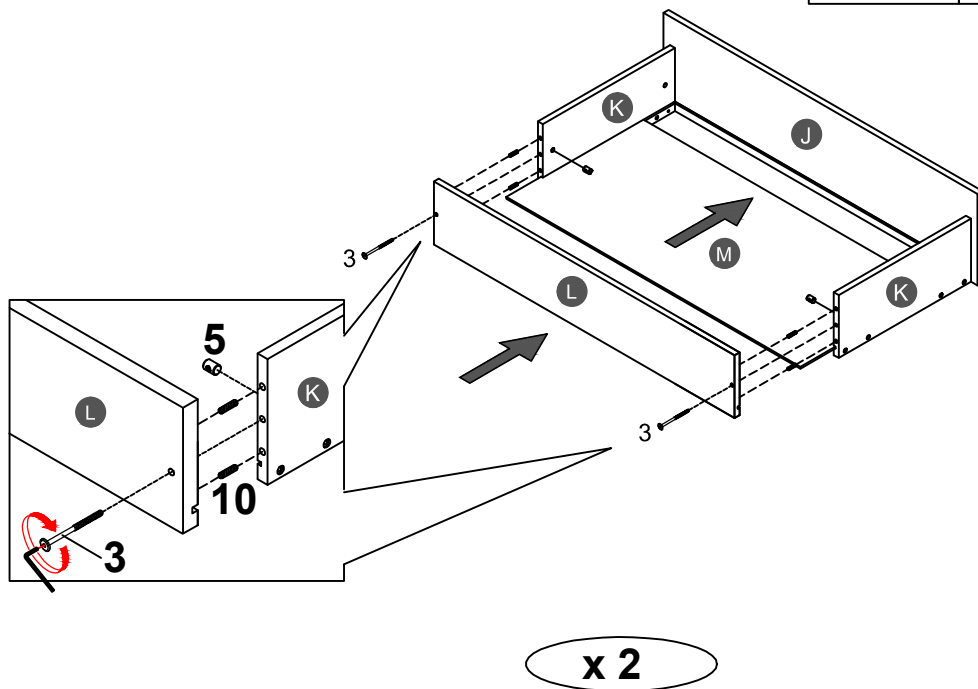
8PCS






x 2


## STEP 7:

<b>3</b>		<b>5</b>		<b>10</b>	
<b>4PCS</b>		<b>4PCS</b>		<b>8PCS</b>	




## STEP 8:

<b>6</b>		<b>8</b>		<b>11</b>	
<b>16PCS</b>		<b>8PCS</b>		<b>8PCS</b>	

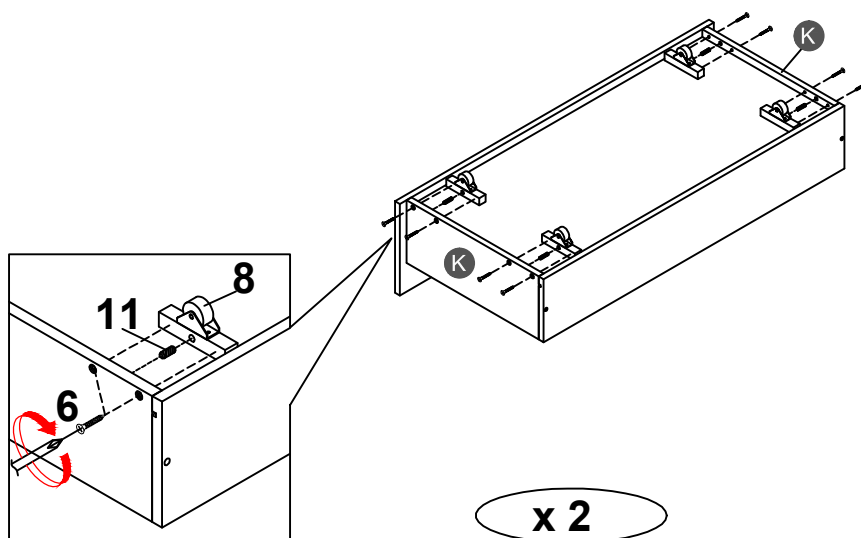



## STEP 9:

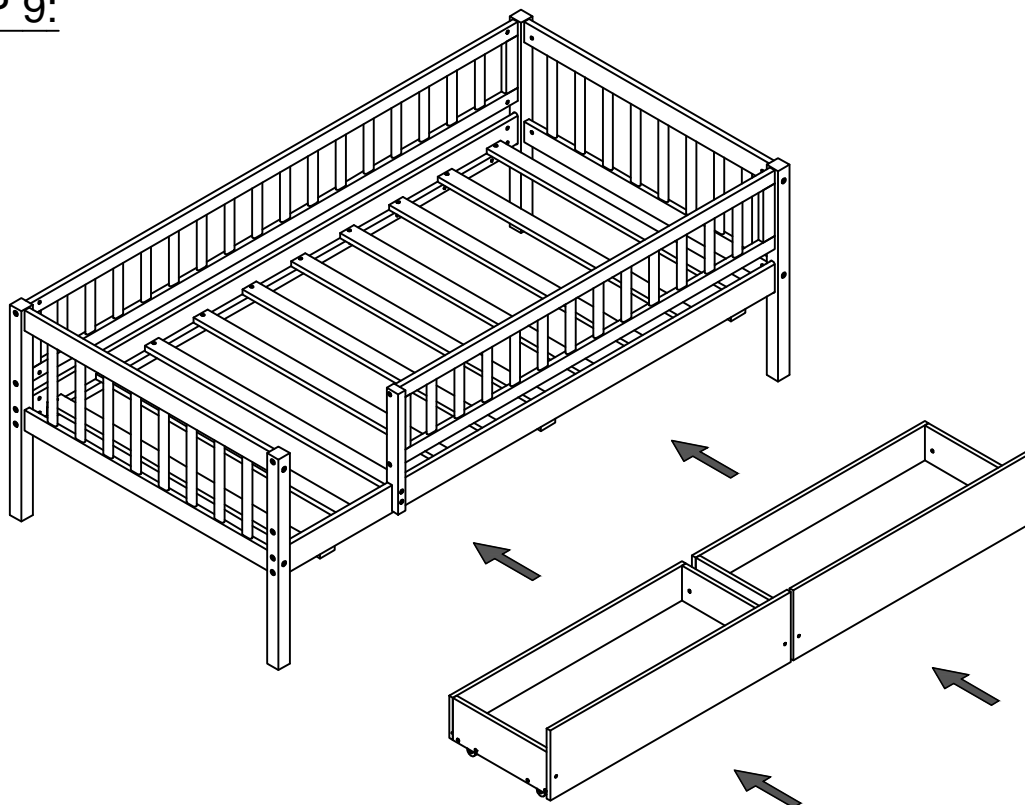

Push Trundle and Drawer under the bottom of Bunkbed.

