
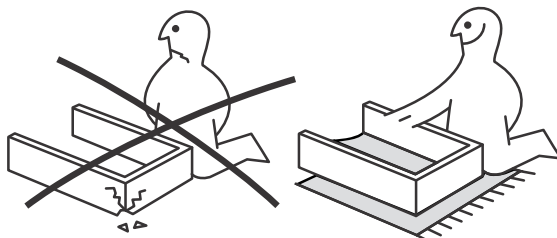
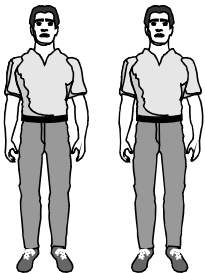
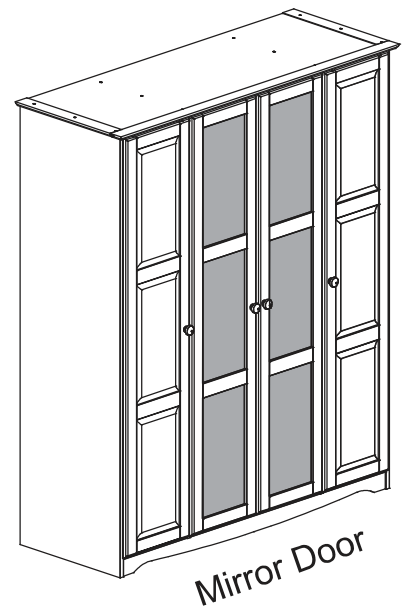



ASSEMBLY GUIDE

REGAL 4-DOOR WARDROBE

Compliant with Federal Law STURDY Act (Stop Tip-overs of Unstable, Risky Dressers on Youth). Passed 16 CFR 1262, ASTM F2057-23 Tests.

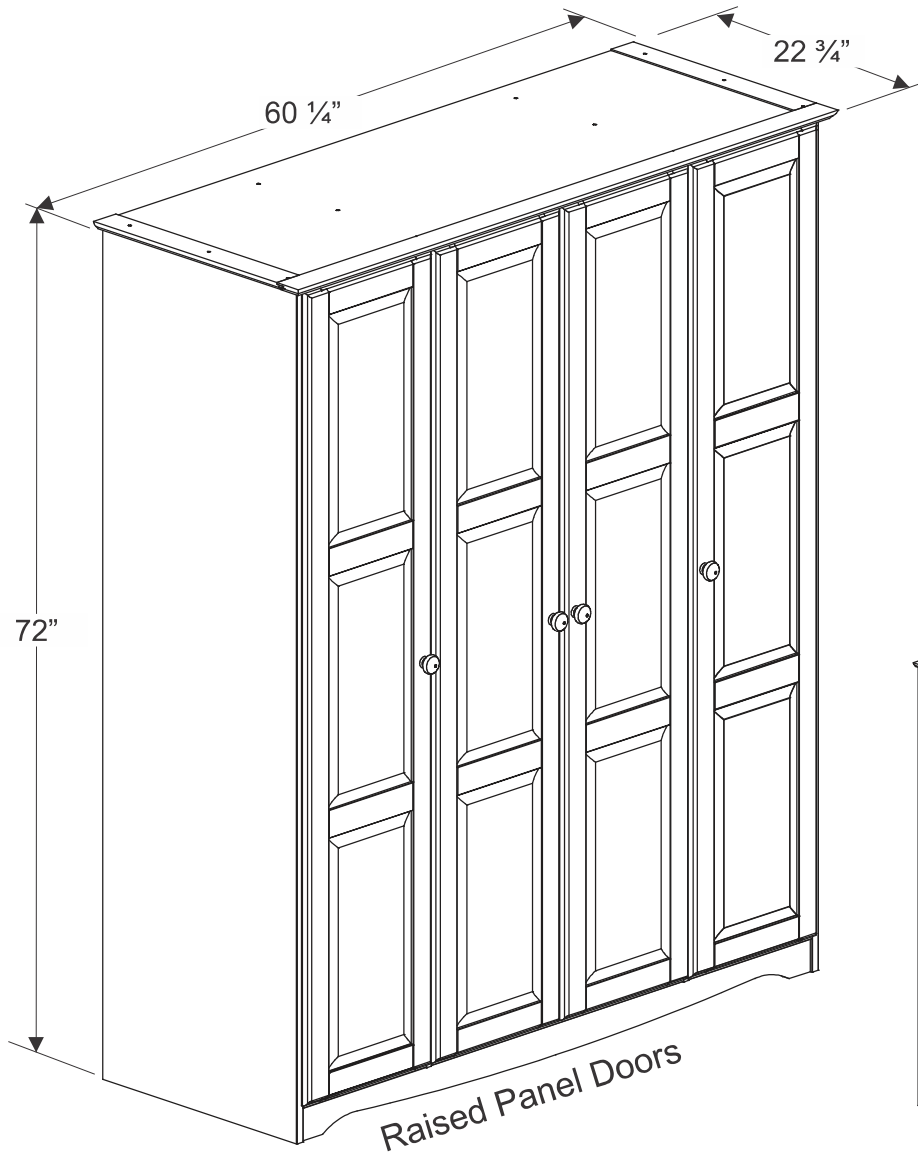

REV - 07/2025

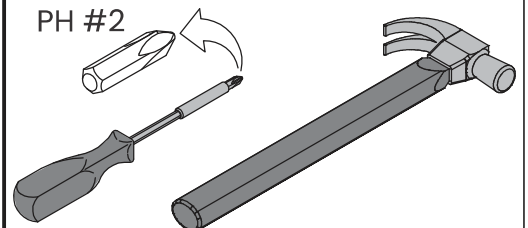




Before You Begin Assembly

- Carefully inspect the package contents. A complete parts checklist is provided below.
- If any parts are missing or damaged, please contact us for assistance.






Assembly Tips


- Assemble the item on a flat, smooth surface. We recommend placing a blanket or protective covering underneath to prevent scratches.
- Use a power drill **only at a low-speed setting** to avoid damaging components.
- Assemble the product as close as possible to its final location to minimize the need for moving it later.
- Important: The hardware pack contains small parts that may pose a choking hazard.
Keep all small items out of reach of young children.

PARTS LAYOUT

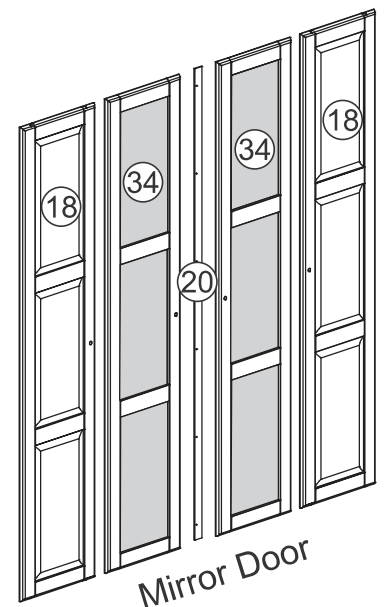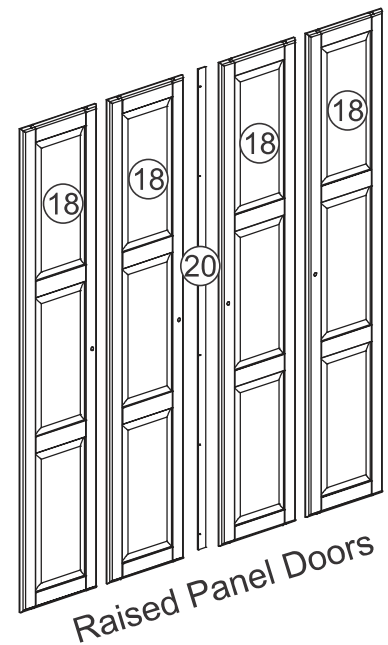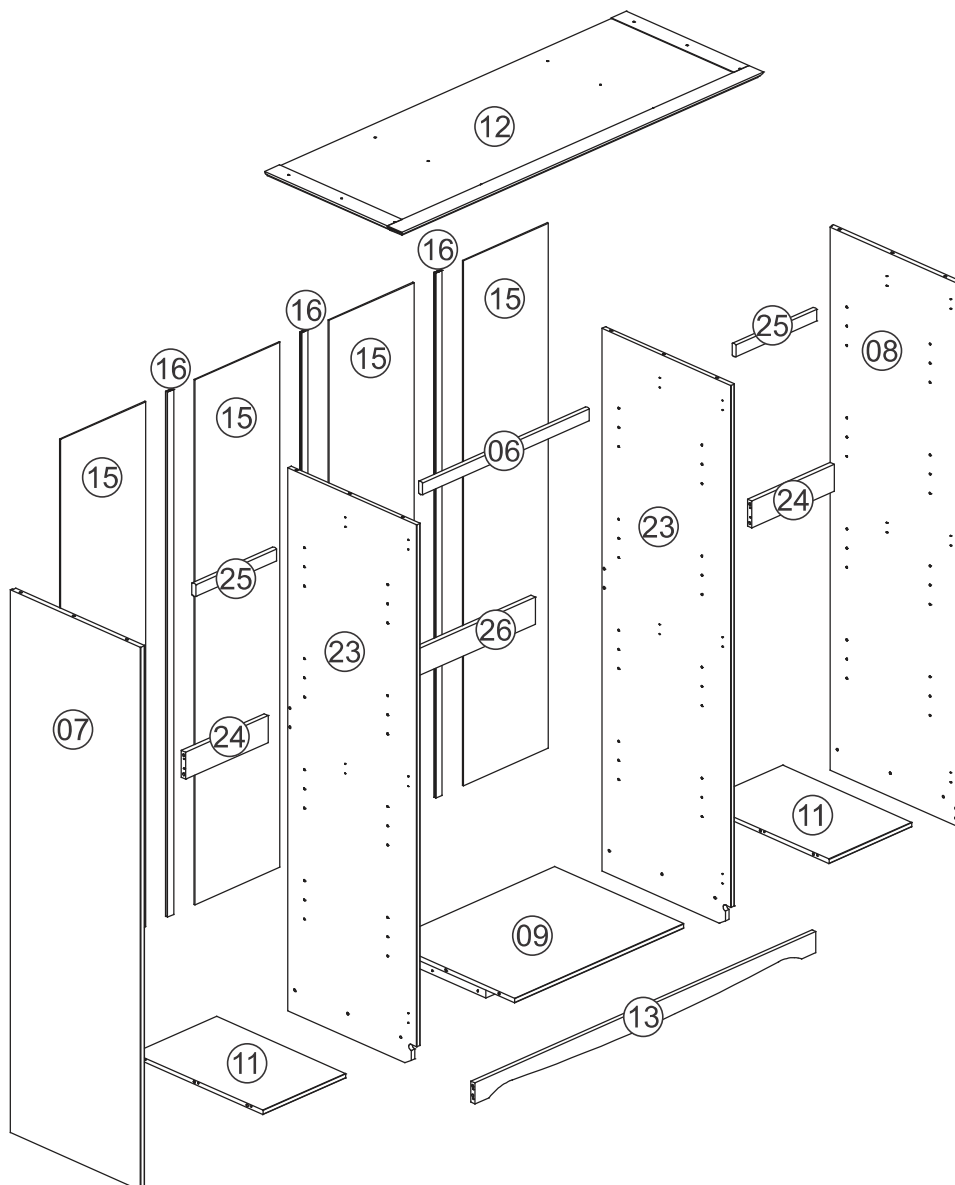

Screws Are Illustrated at Actual Size for Accurate Reference

A1	 4,0x30	34+2
A4	 3,5x14	12+1
A16	 4,0x40	12+1
A41	 4,0x30	04+1
A44	 3,5x14	68+4
C2	 8,0x25	46+3
D3	 45x27x12	01
D10	 	06
D16	 17x17x13	02
F10	 	12
G1	 10x10	60
H1	 	04

TIPOVER RESTRAINT KIT		
A47	 3,0x20	02+1
F8	 47x20x9	02
F15	 300mm	01



WARNING:
CHOKING HAZARD

Contains small parts - choking hazard.
Adult supervision is required during assembly.
Not suitable for children under 3 years of age.




WARNING:



Important Safety Notice:

This furniture includes tip-over prevention hardware, which **MUST** be securely attached to the wall as outlined in the assembly instructions. Failure to do so may result in serious injury or death.




01)

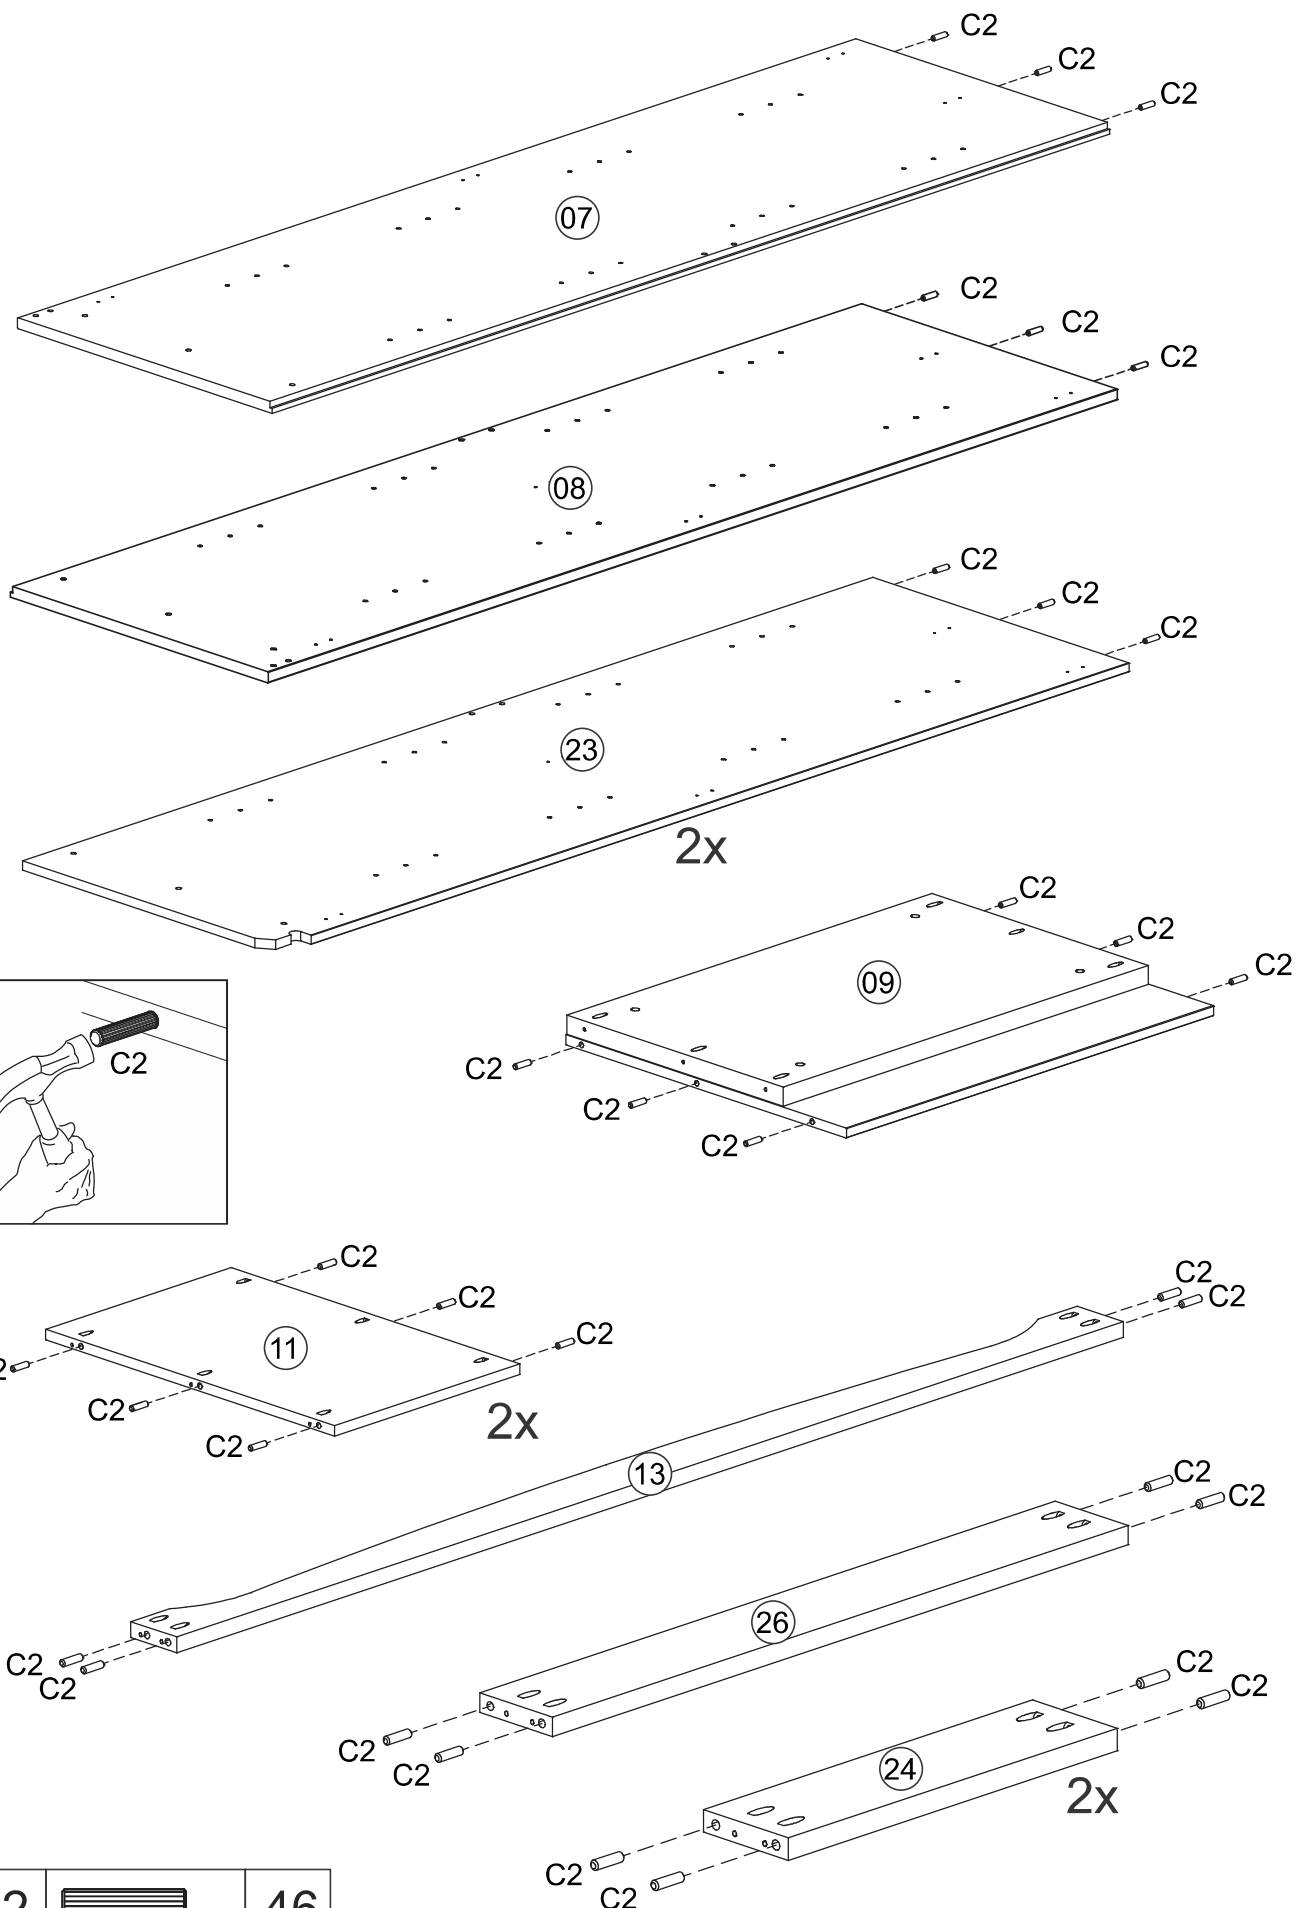

02)

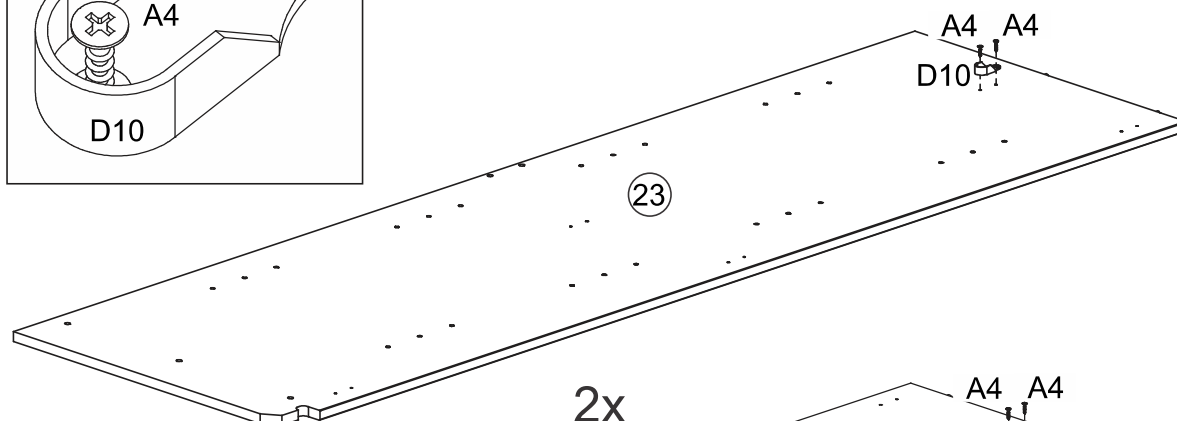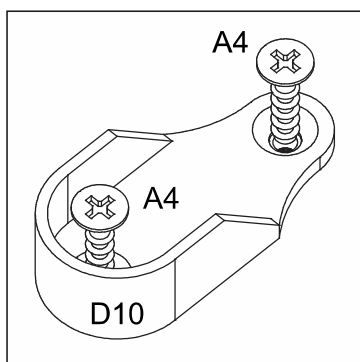


Flip the division 23
UPSIDE DOWN

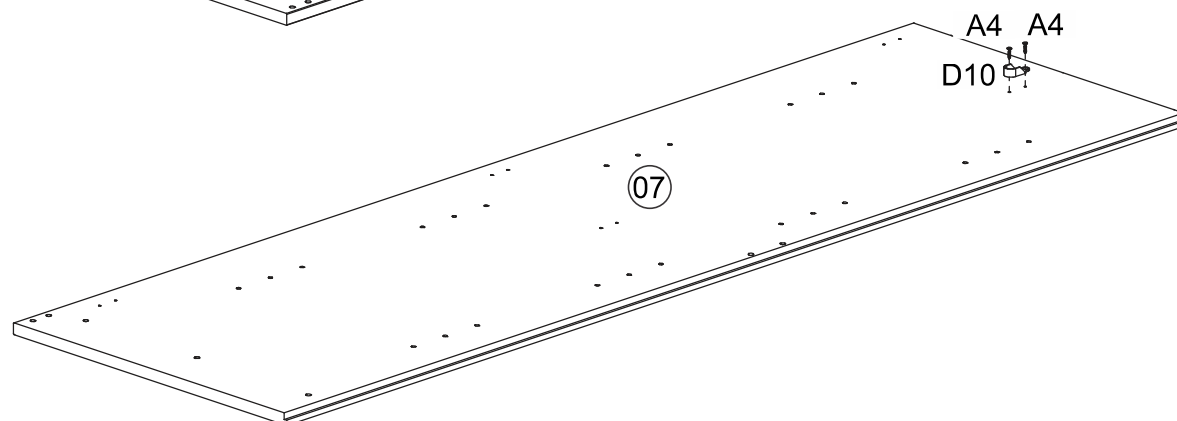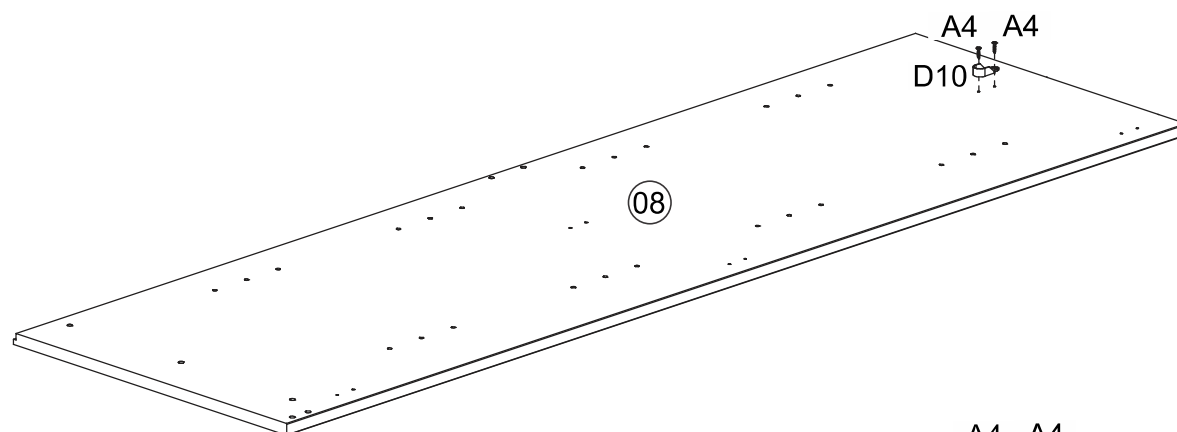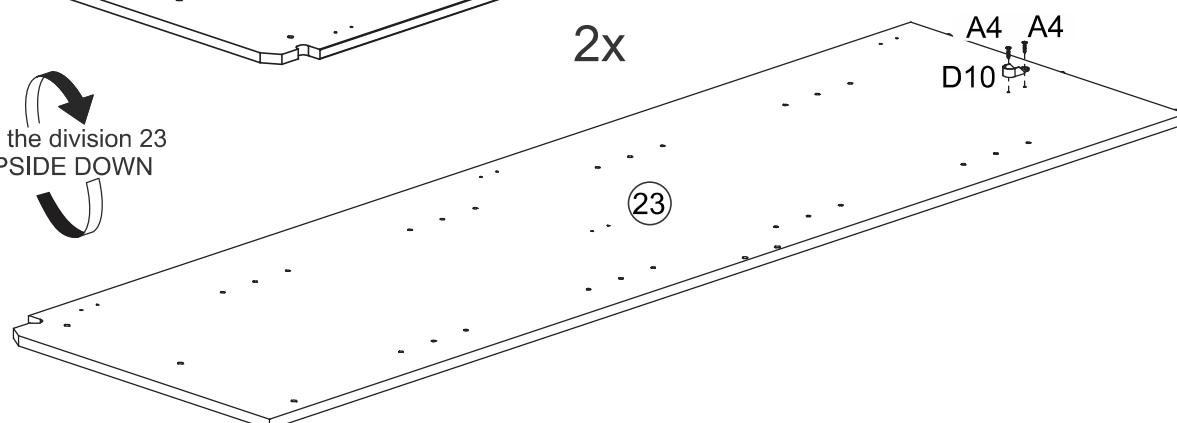


A4		12	D10		06
----	---	----	-----	---	----


3,5x14

03)

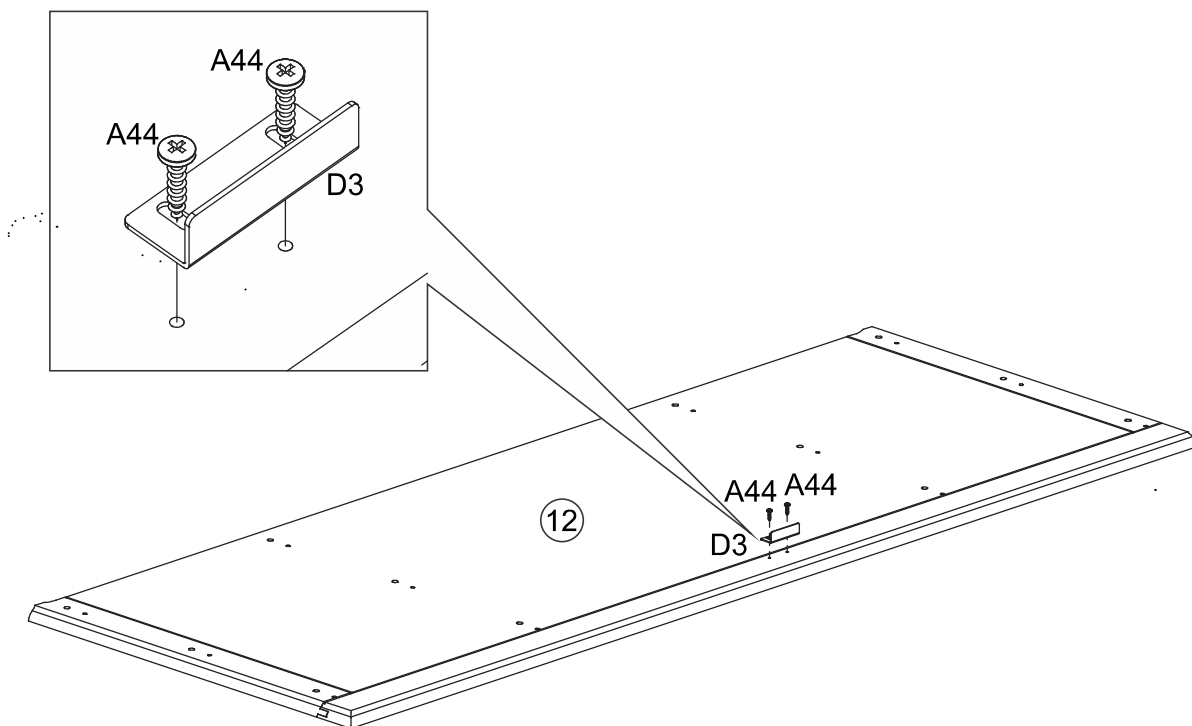




A44	 3,5x14	02	D3		01
-----	--	----	----	--	----

04)



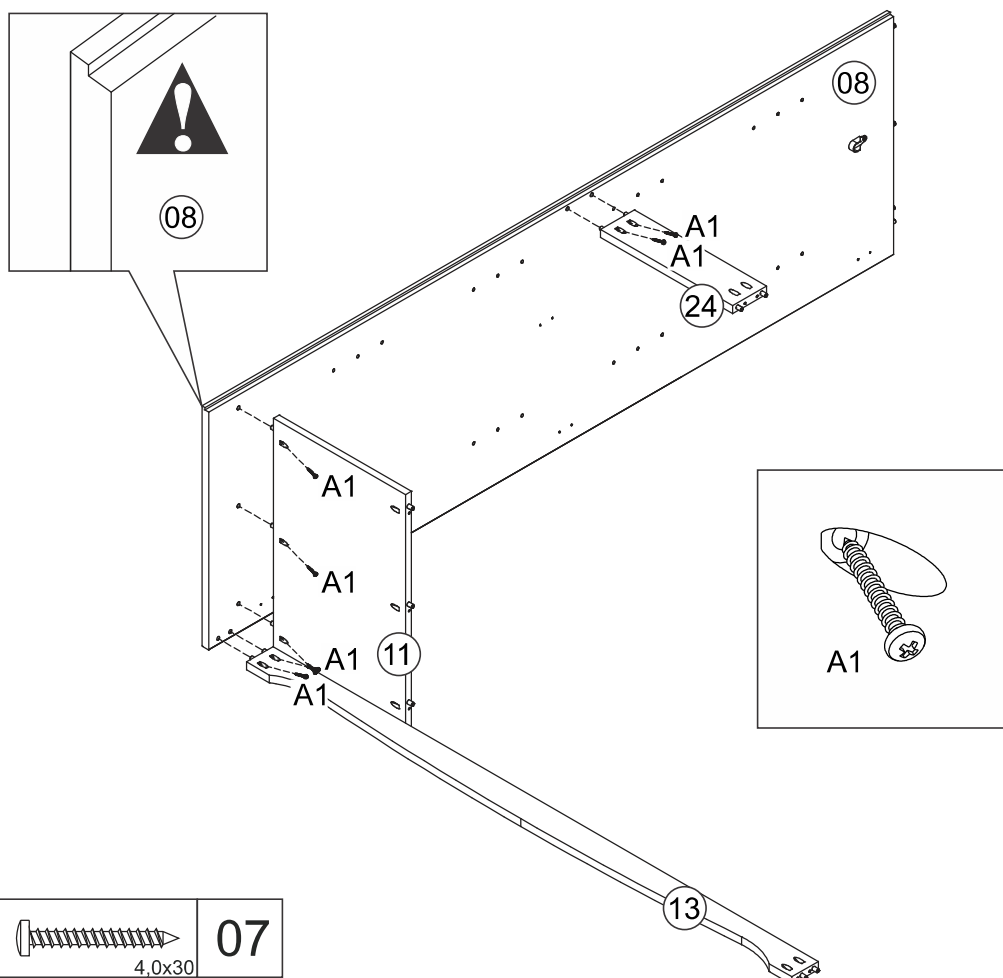


A1	 4,0x30	07
----	---	----




05)

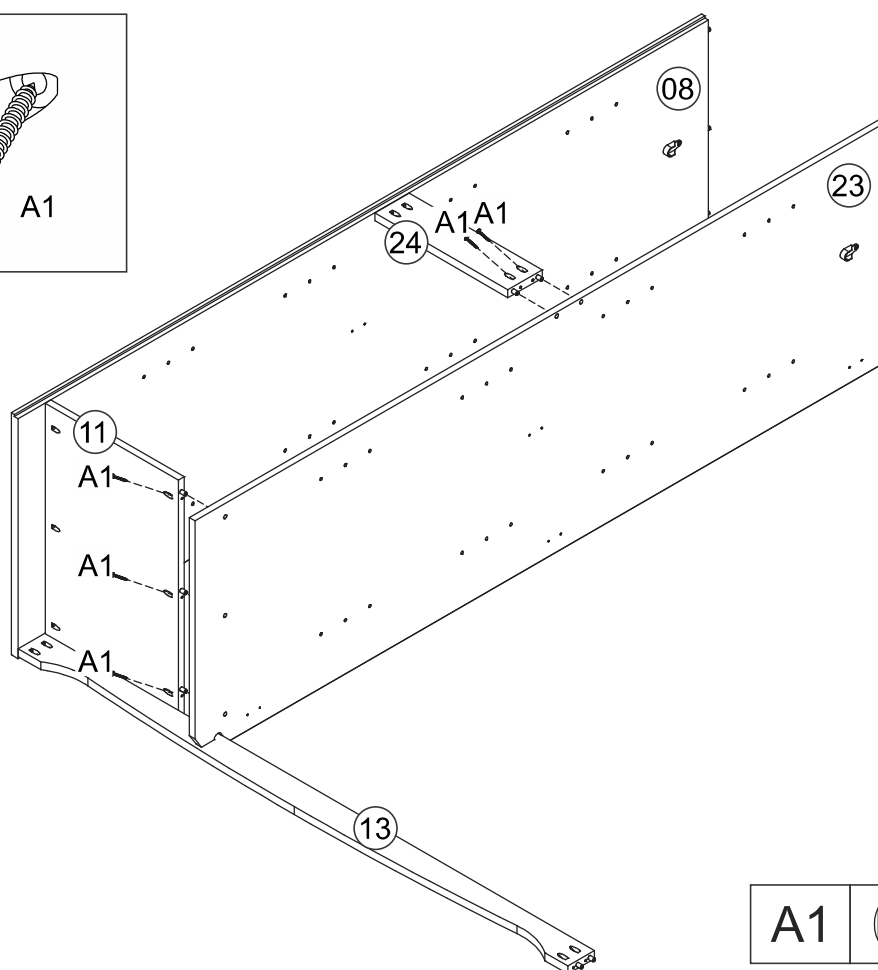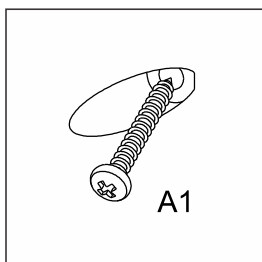




06)

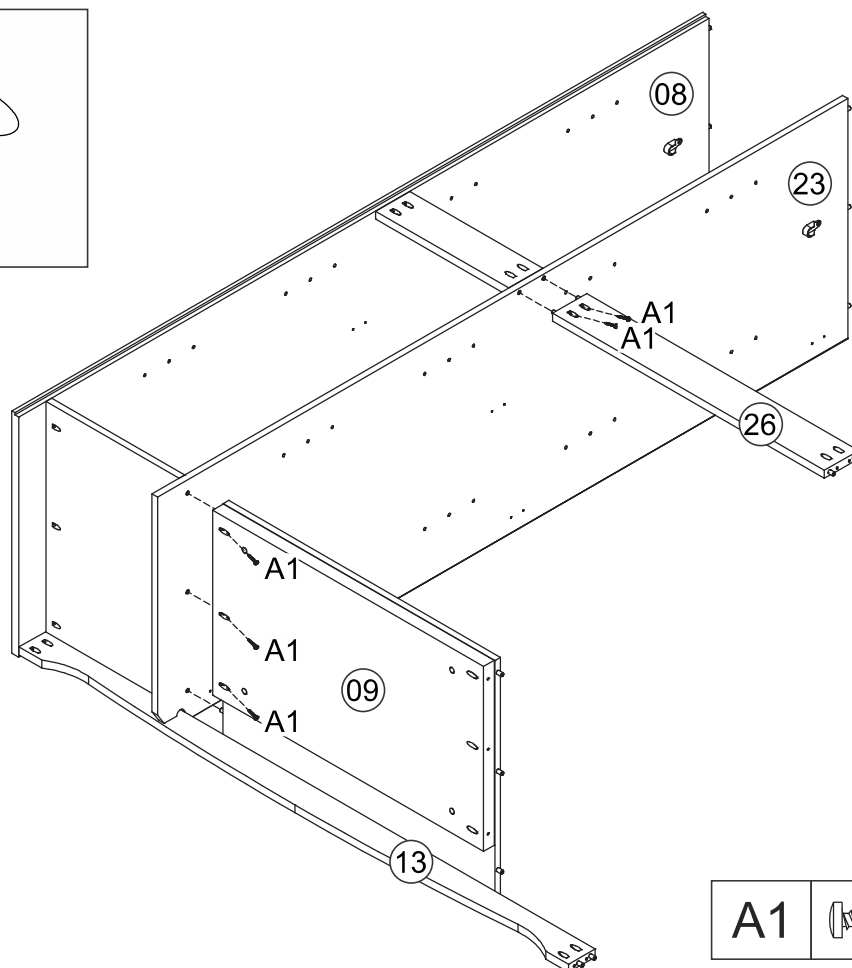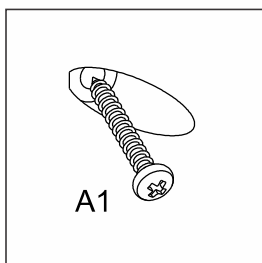



07)

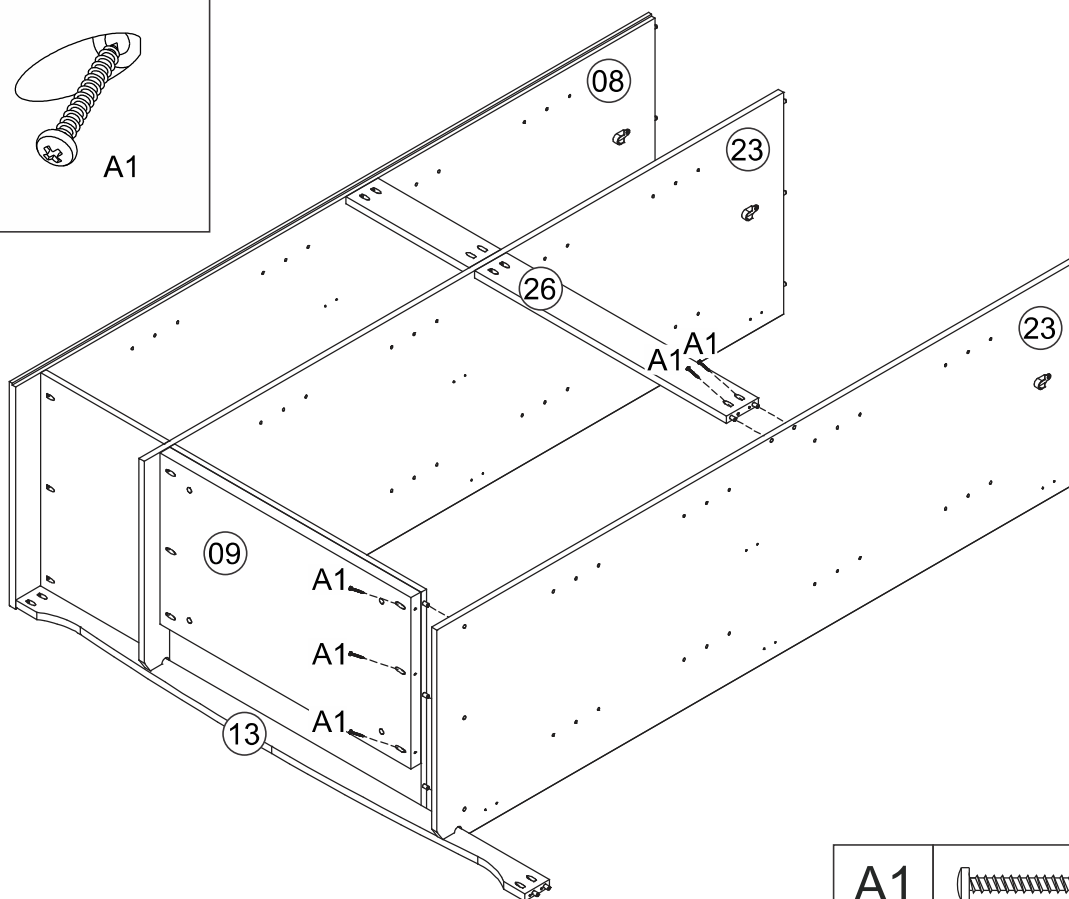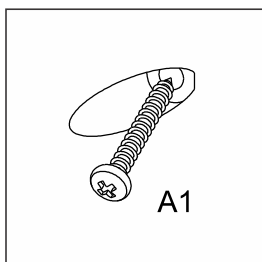

08)


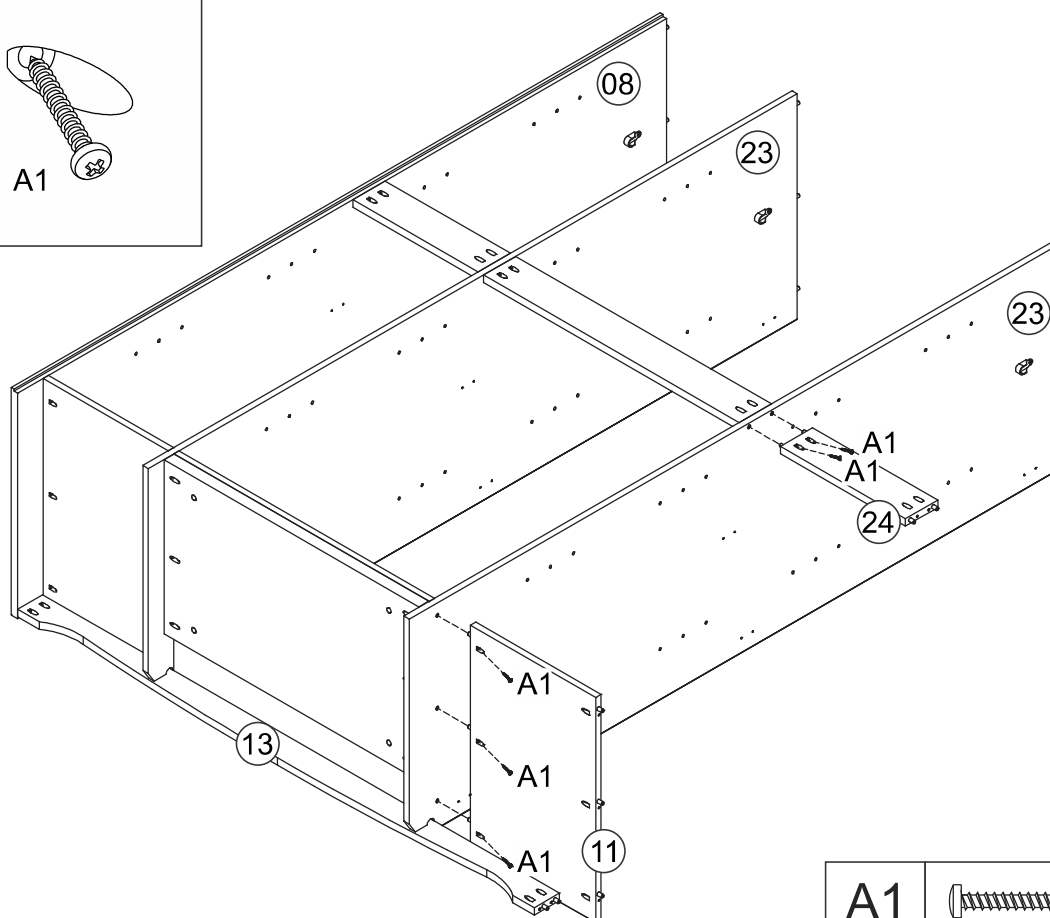
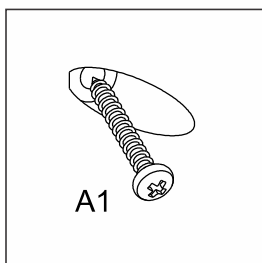


09)

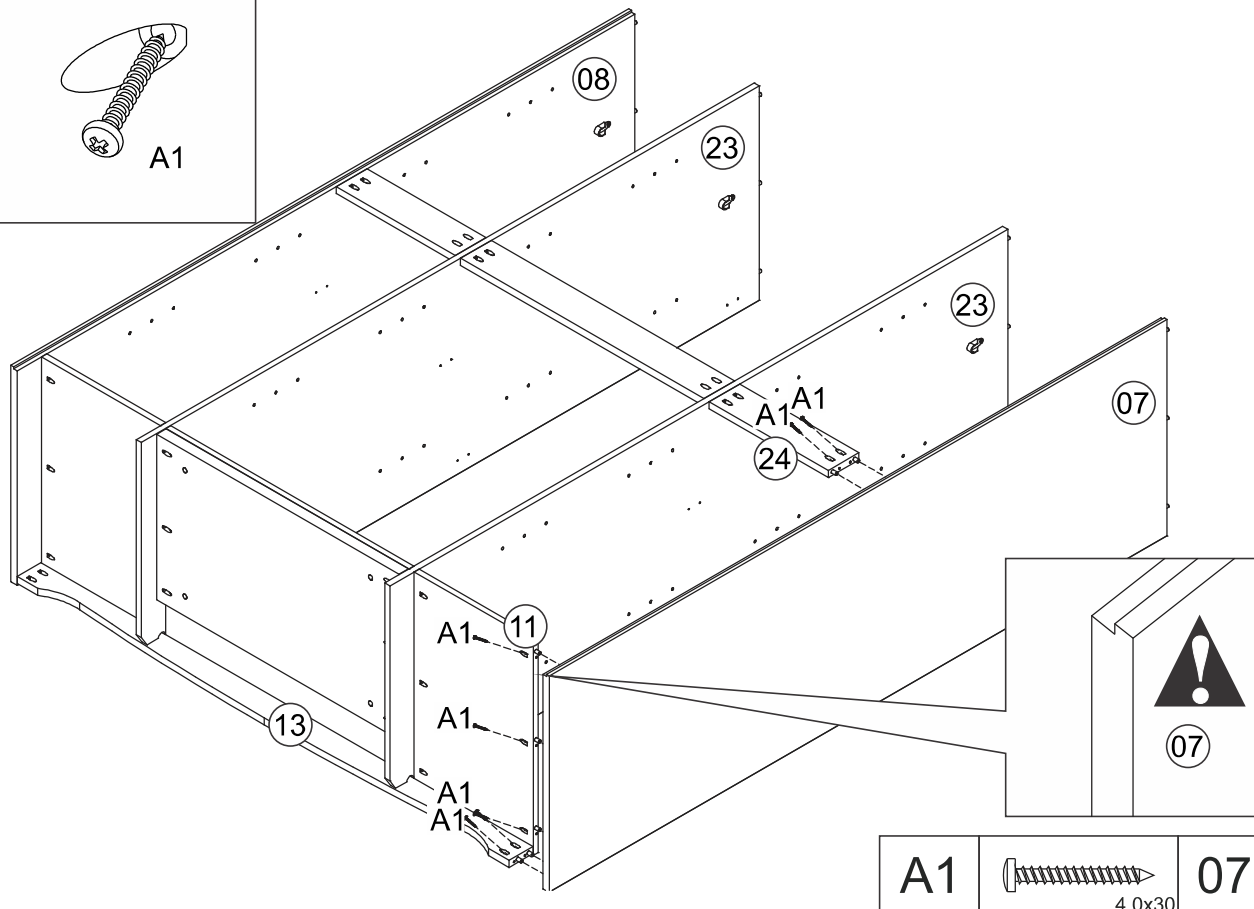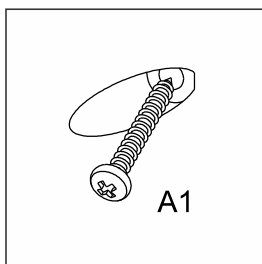


A1		07
4,0x30		

10)

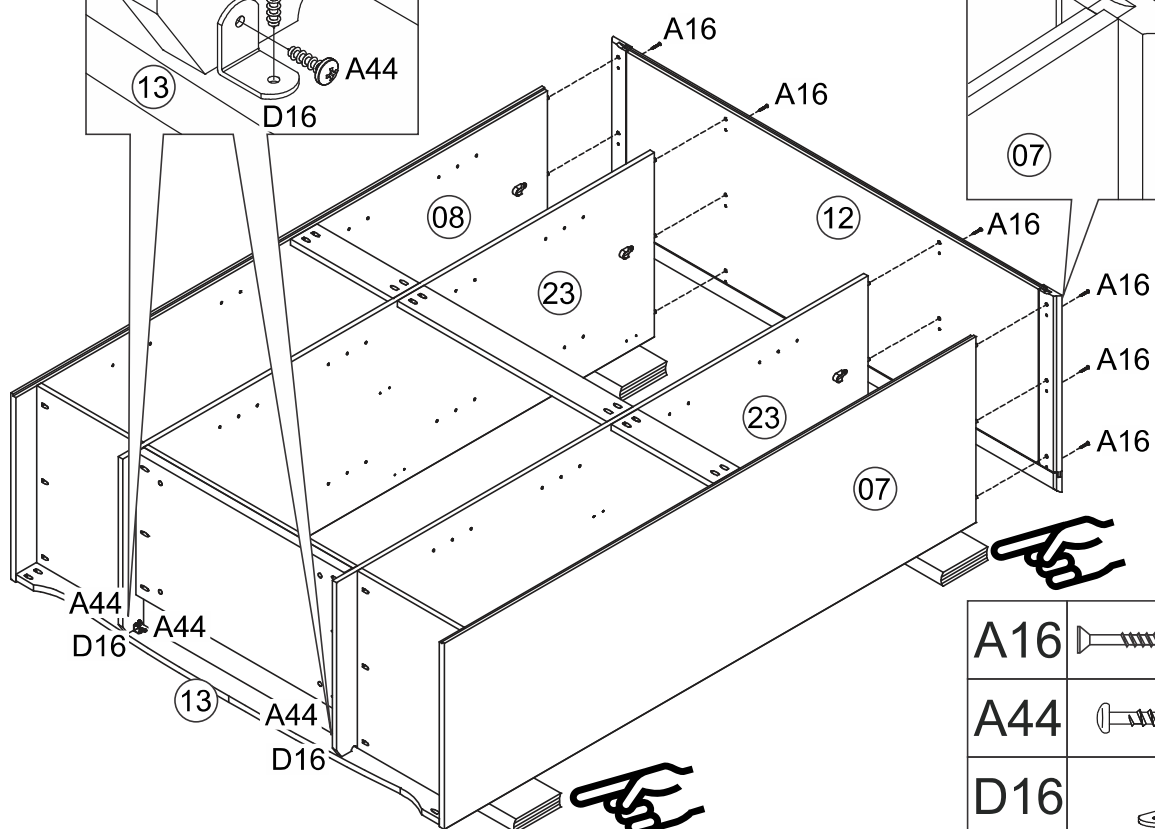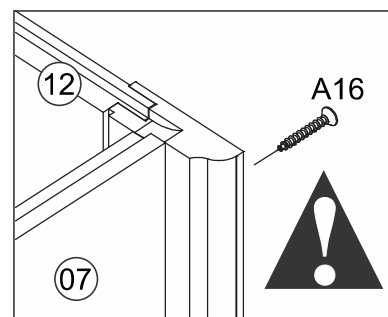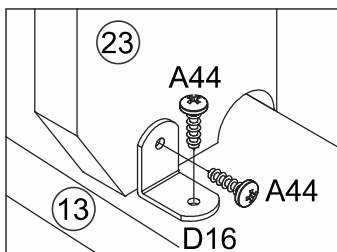


A16		12
4,0x40		
A44		04
3,5x14		
D16		02


11)

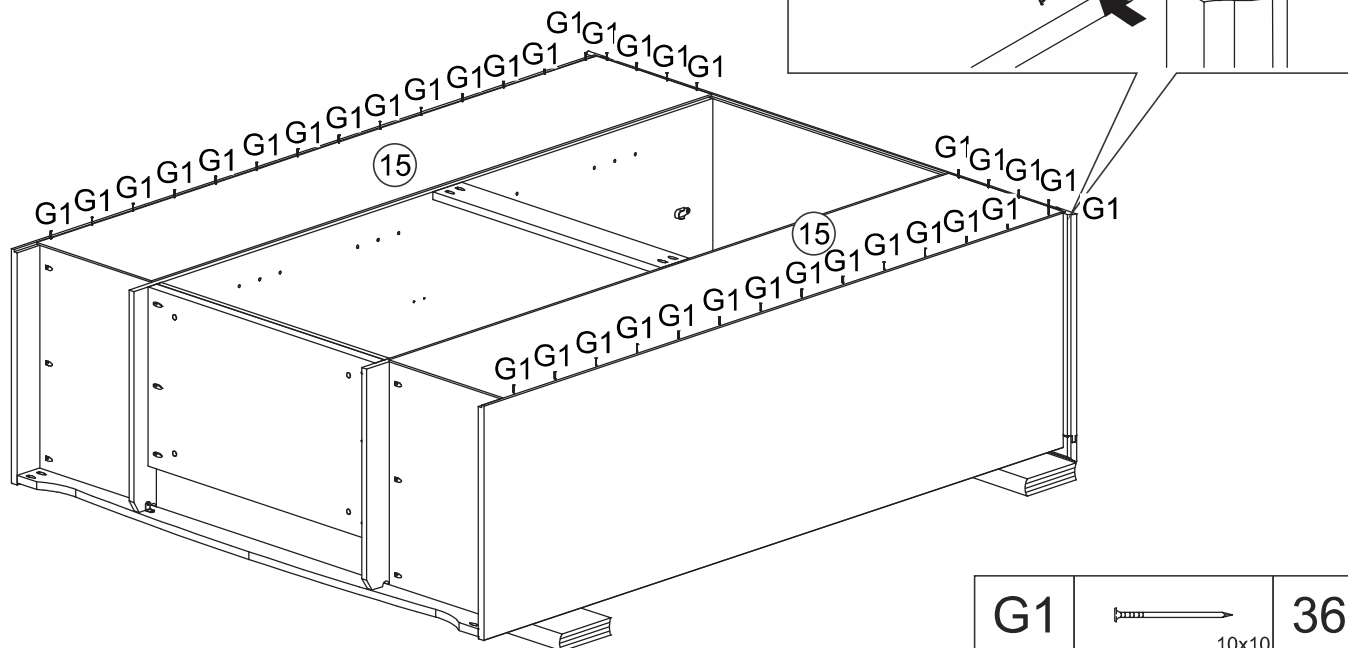

12)

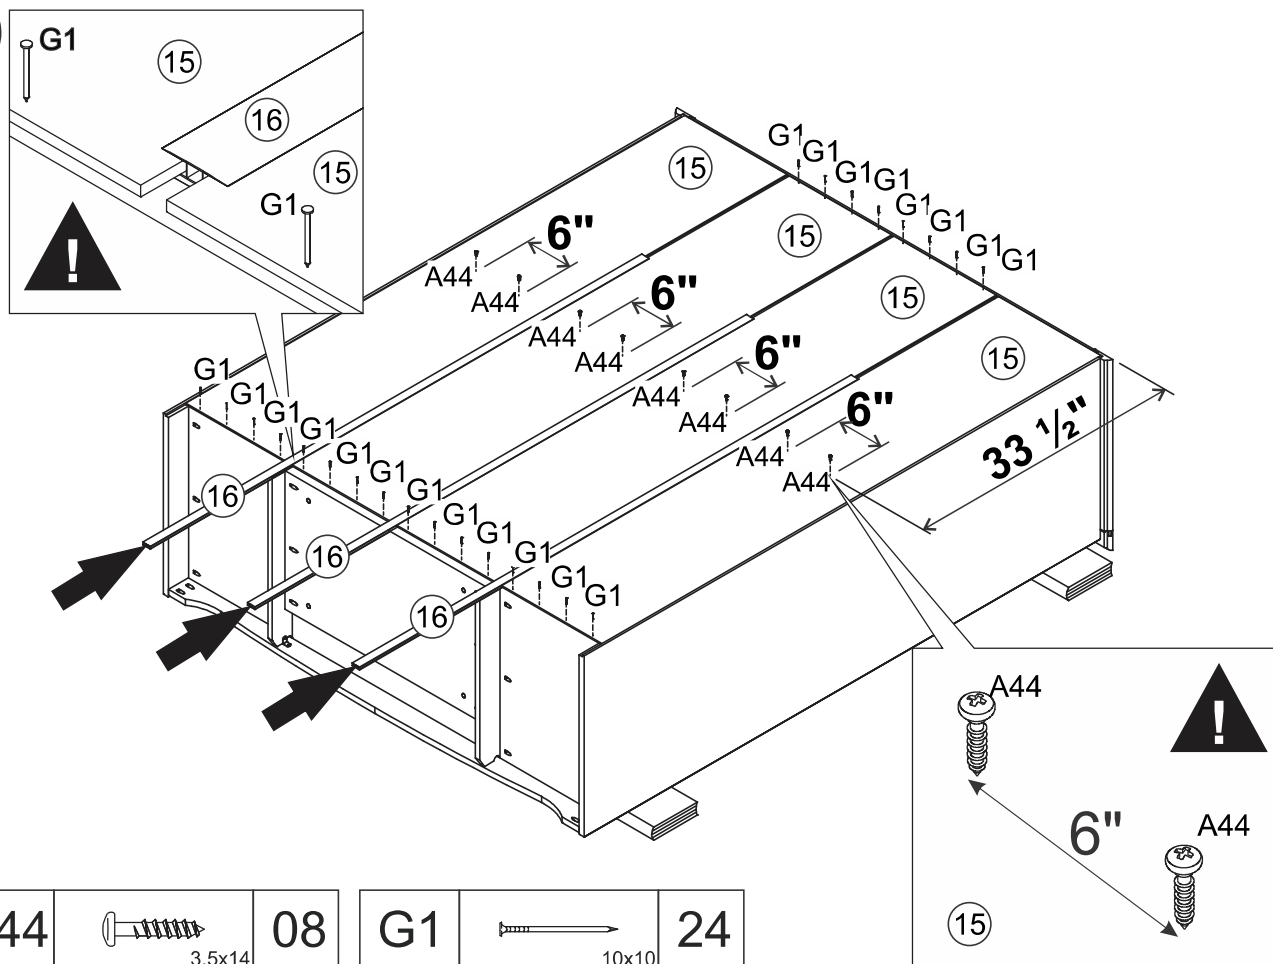


13)


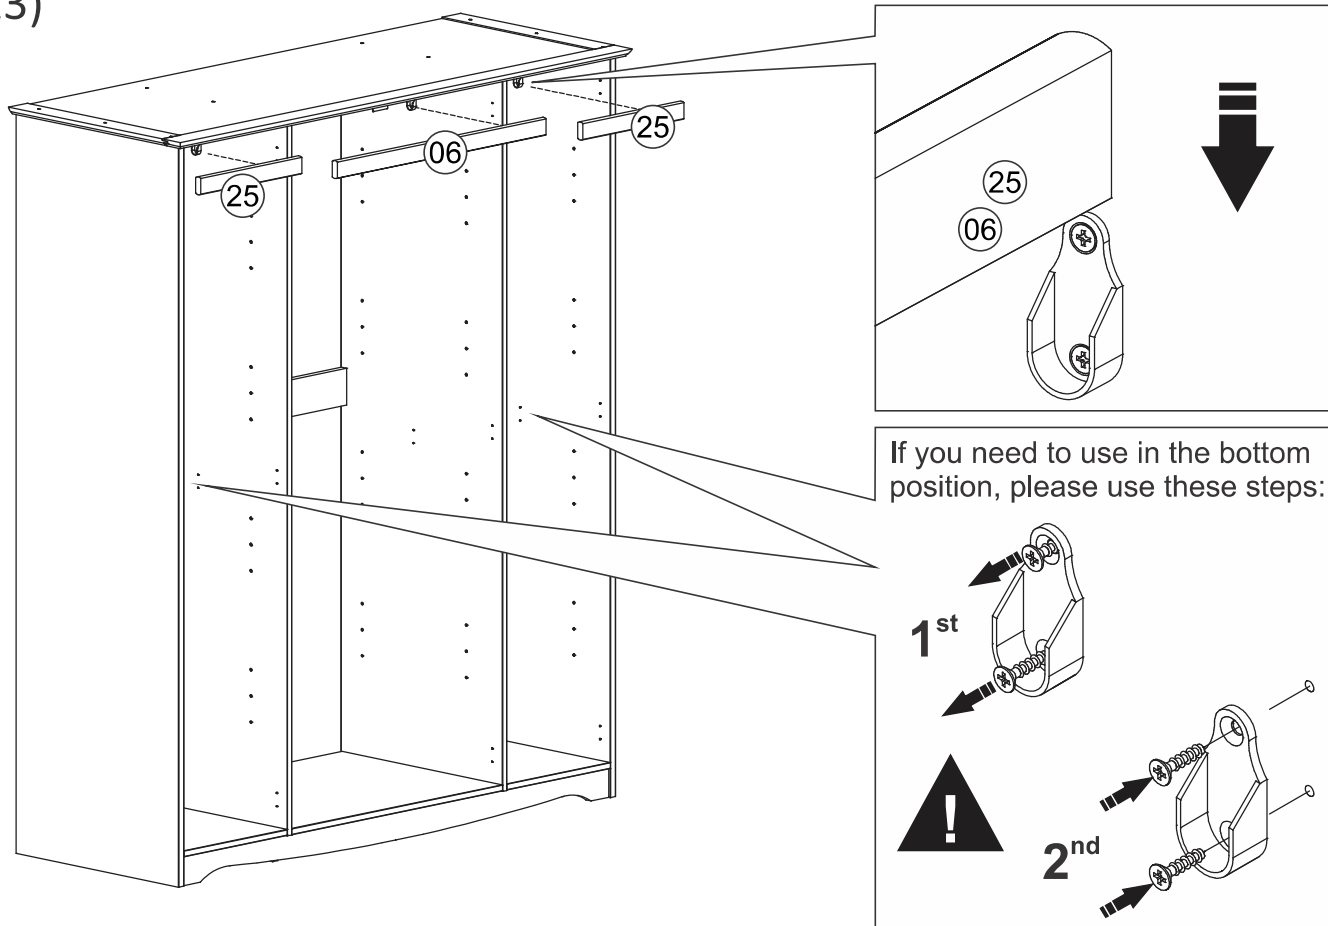


14)

If the hinge (F10) is detached, attach it to the hinge plate by aligning and pushing it in until it clicks securely into place.



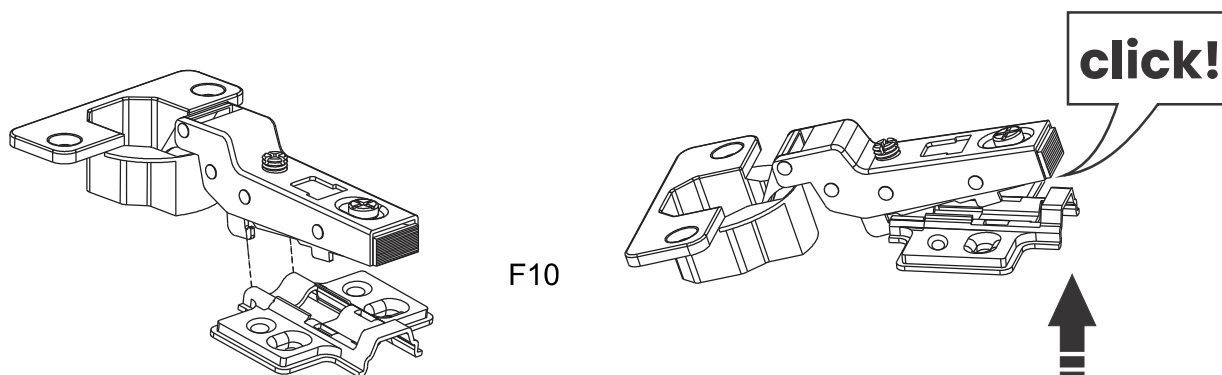


15)

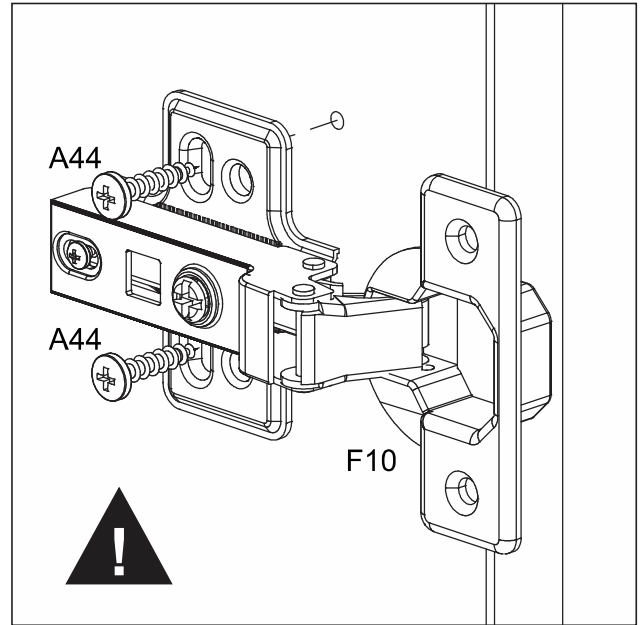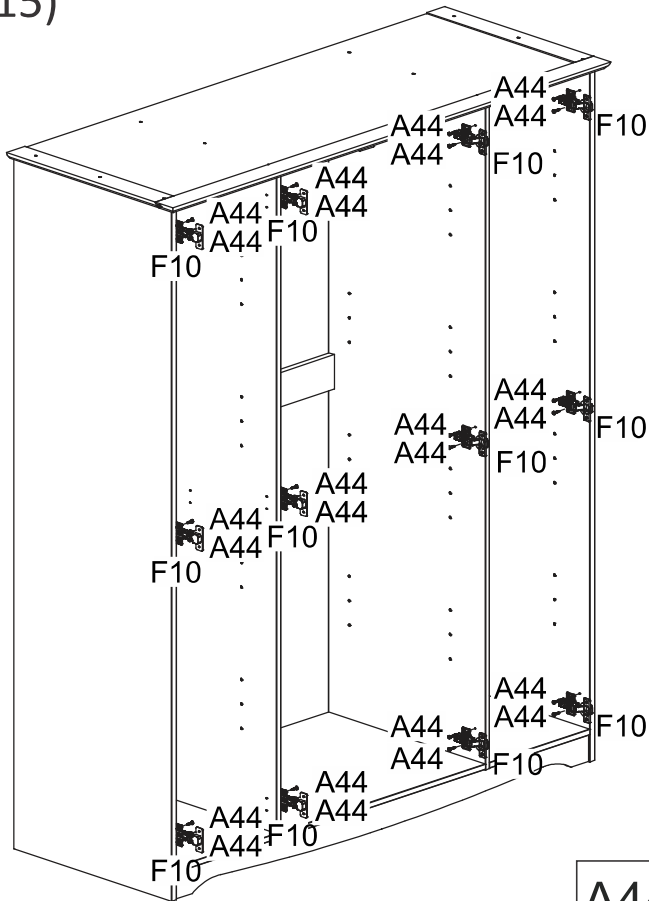


A44		24	F10		12
	3,5x14				




16)

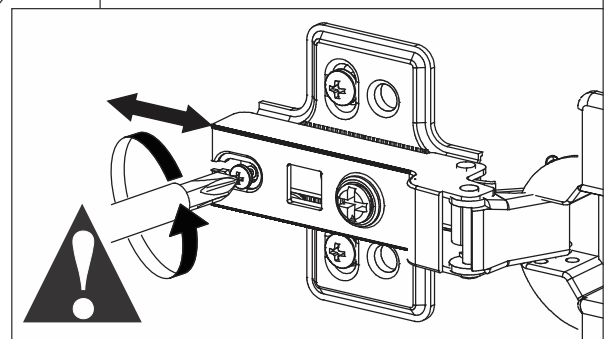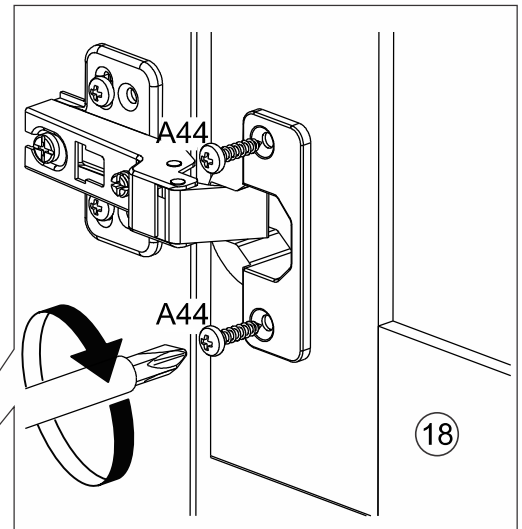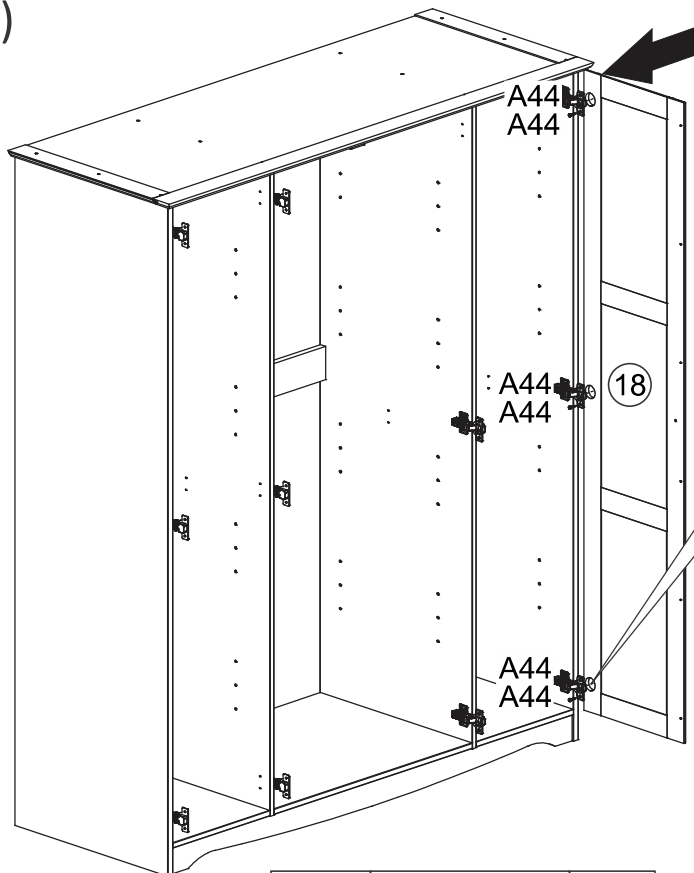


You may need to adjust the hinges (F10) before installing the door

A44		06
	3,5x14	



17)

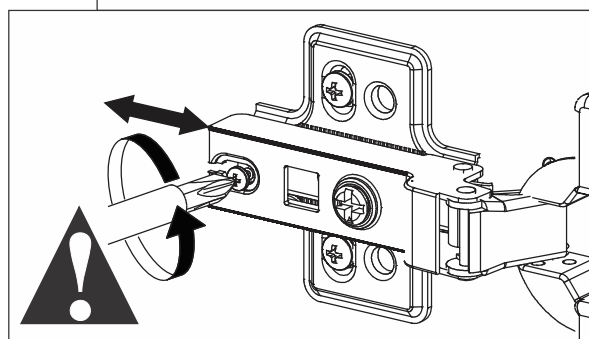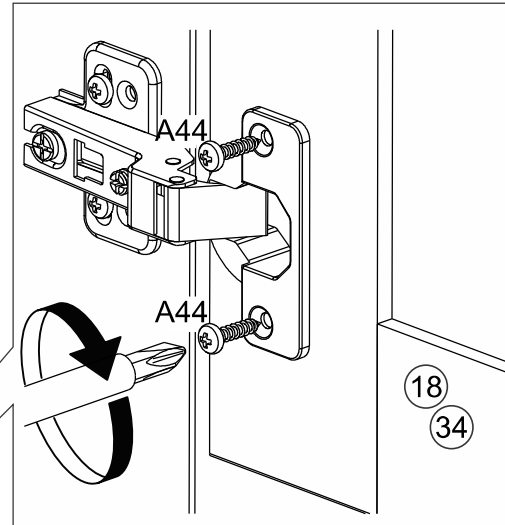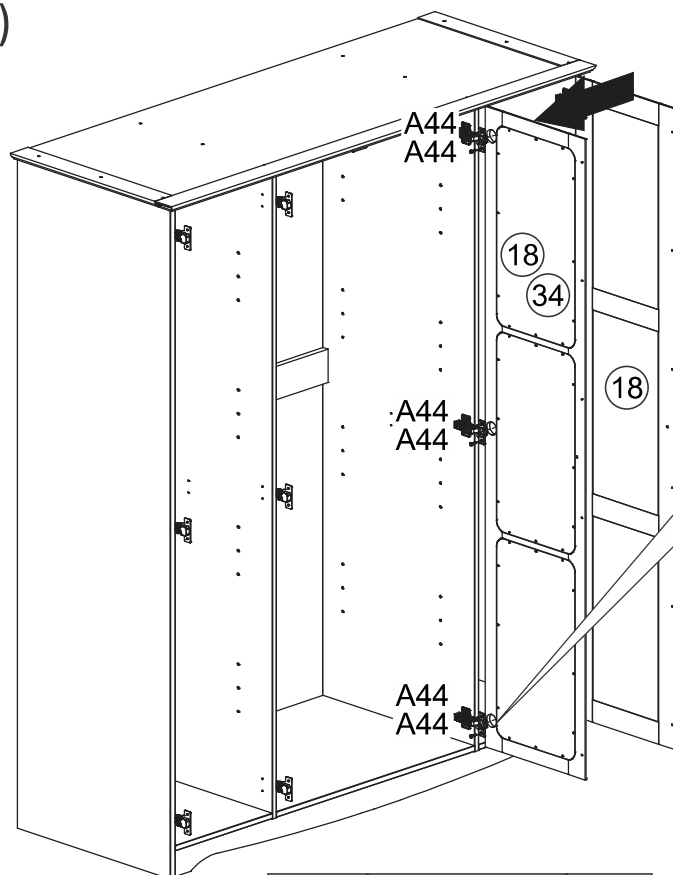


A44  06
3,5x14


You may need to adjust the hinges (F10) before installing the door

18)



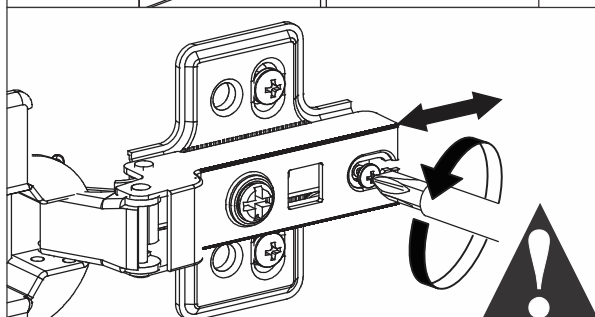
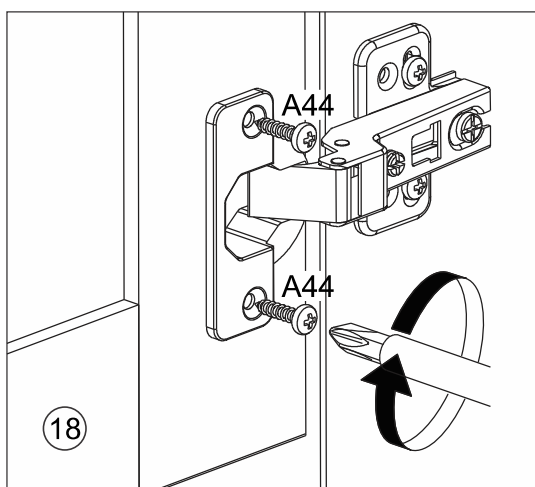


You may need to adjust the hinges (F10) before installing the door



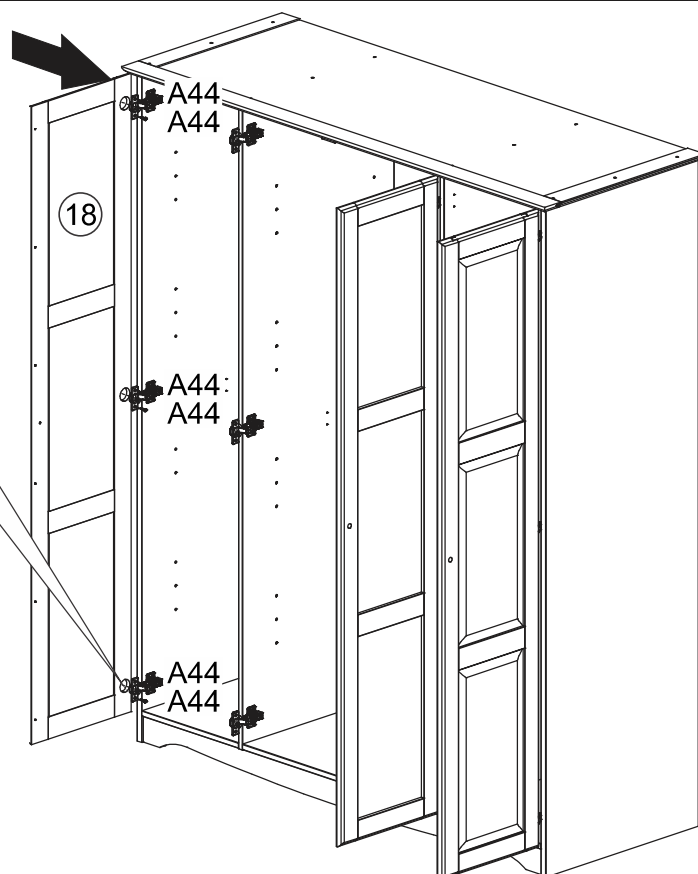


A44  06
3,5x14


19)

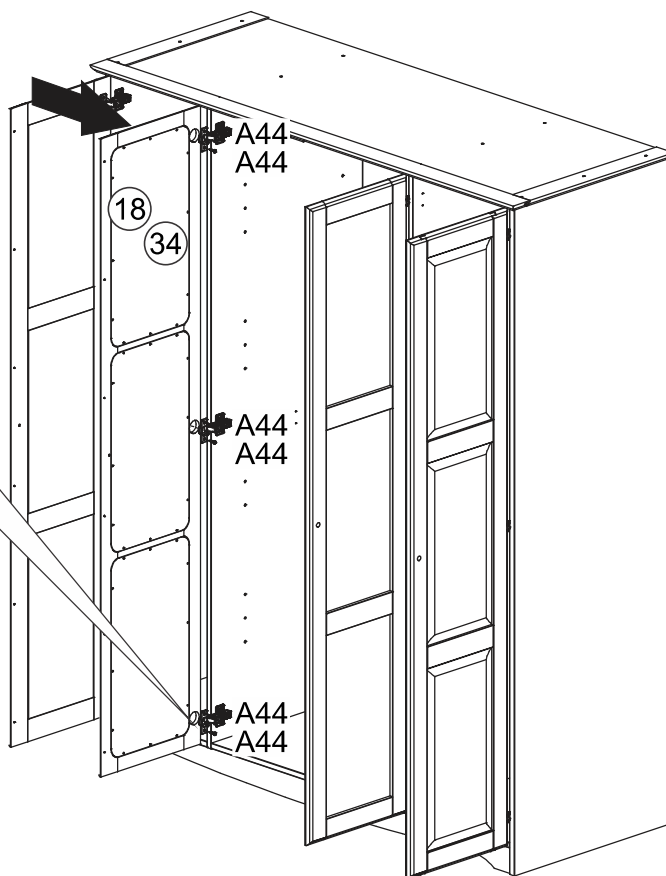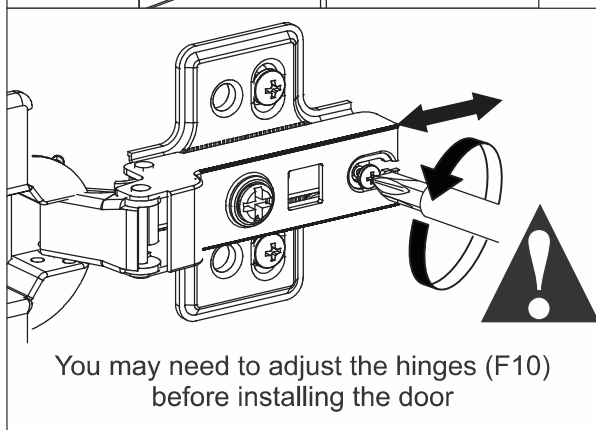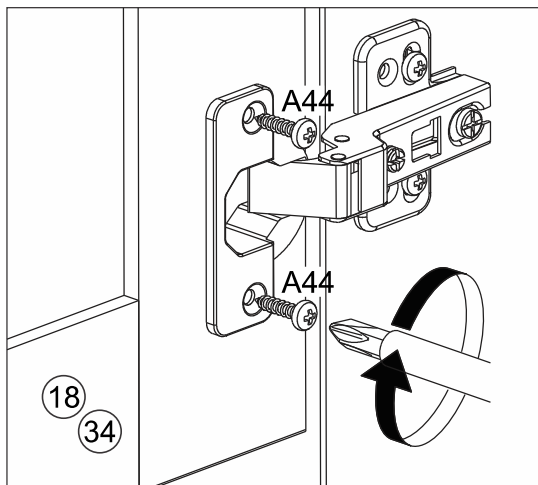


20)











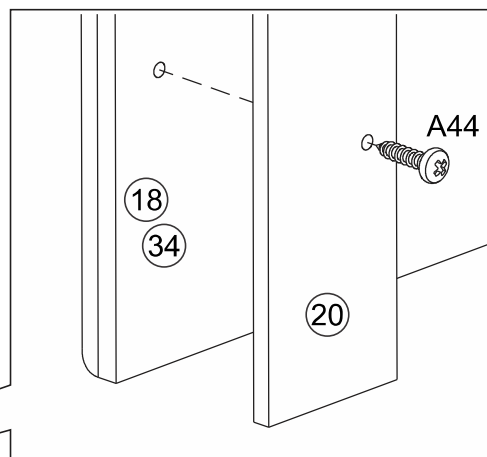
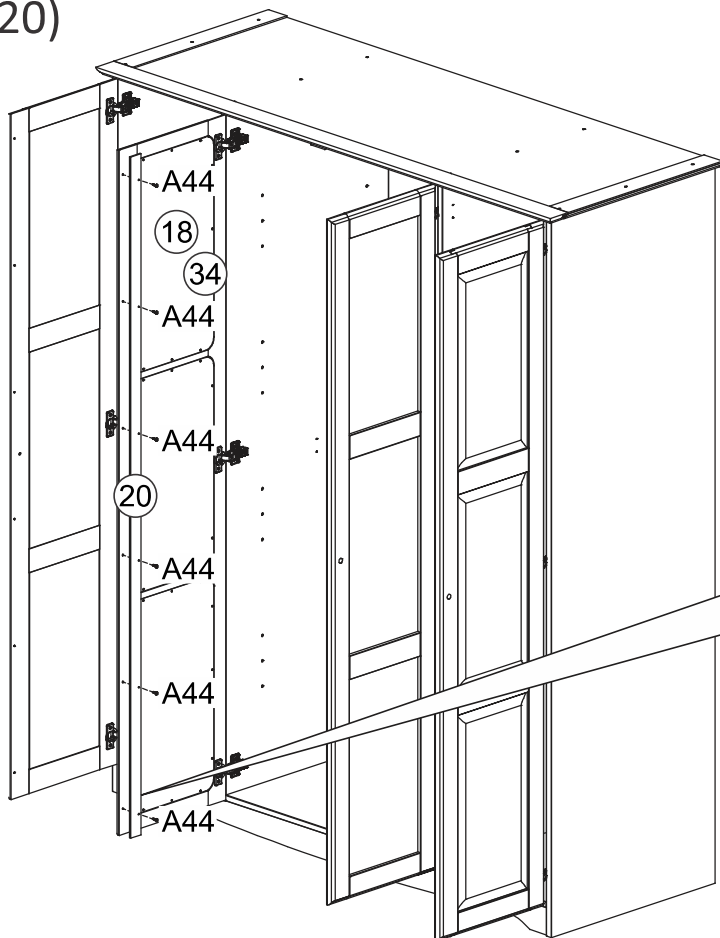


21)





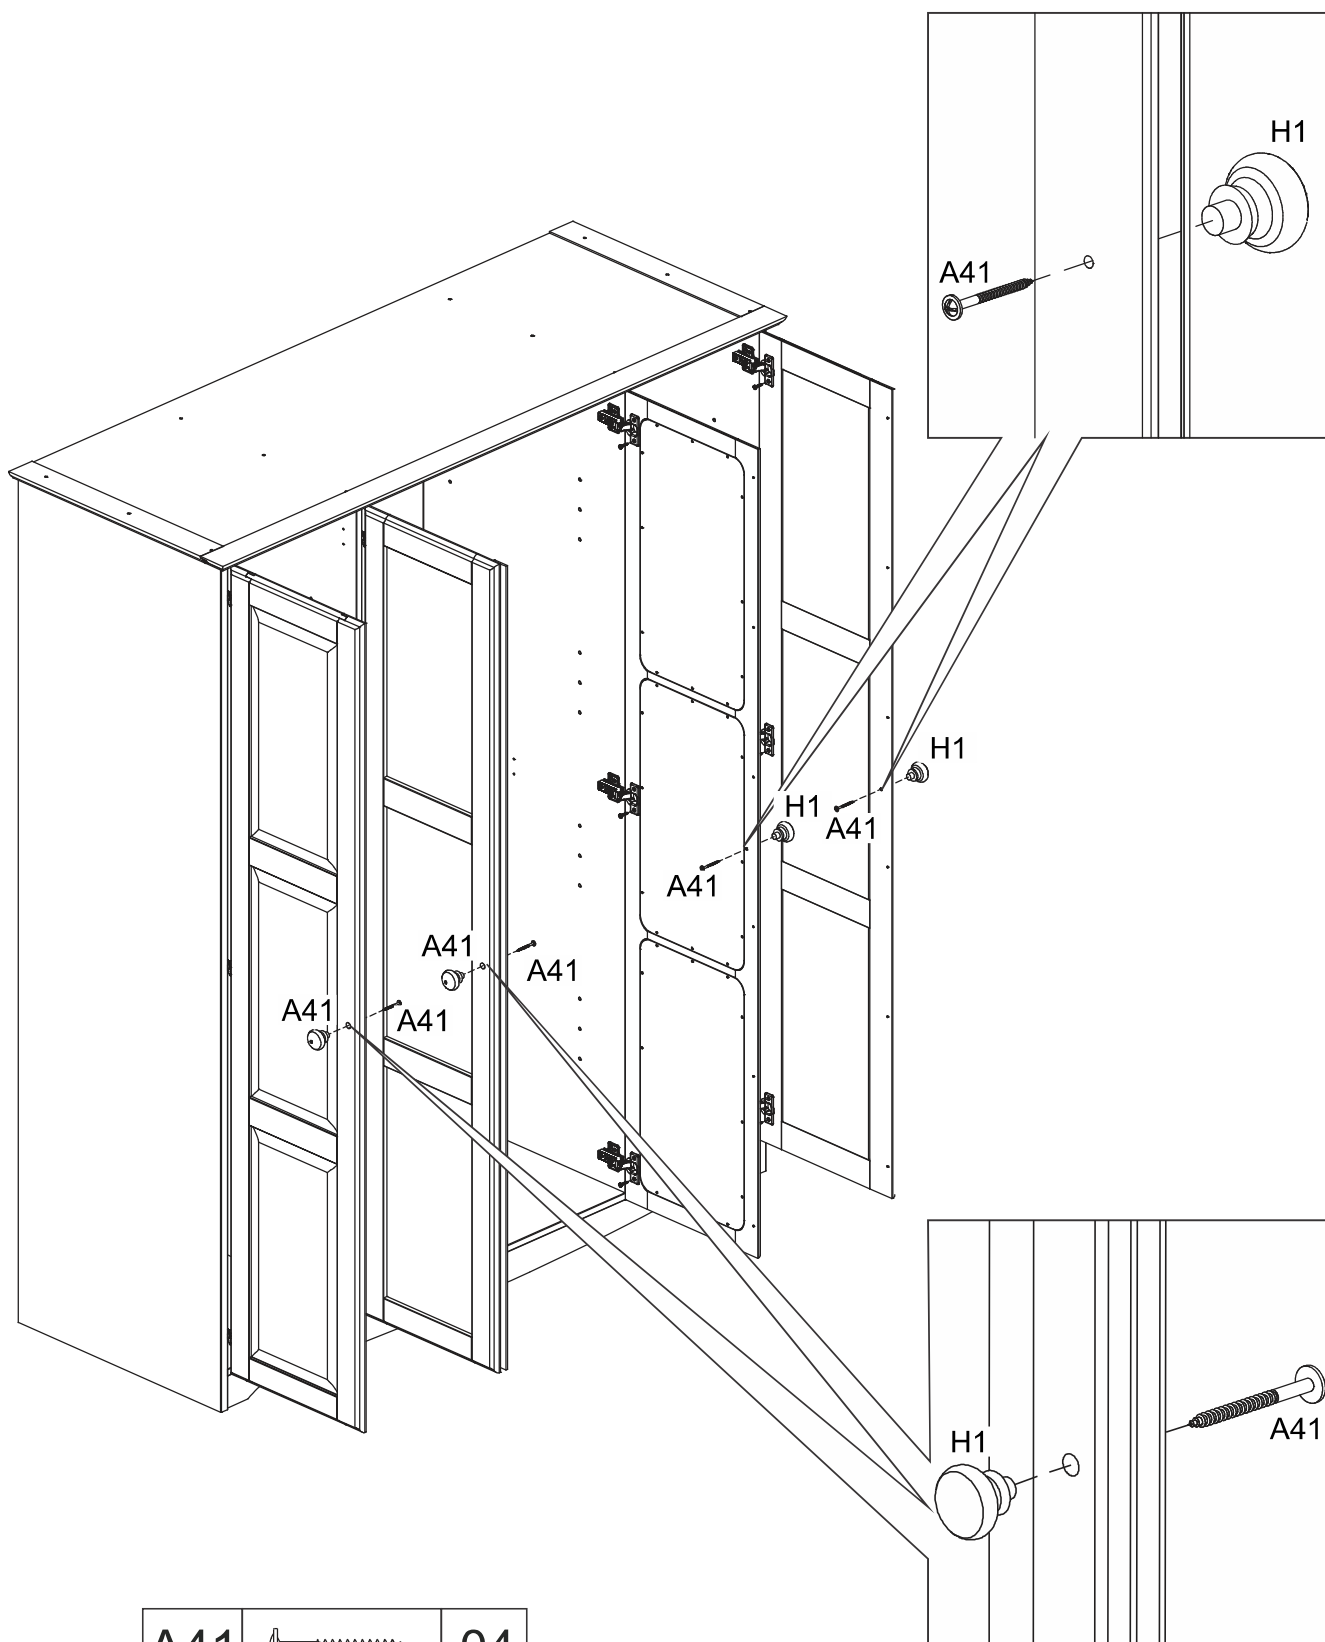


A41	 4.0x30	04
H1		04

22) HINGE ADJUSTMENT GUIDE.

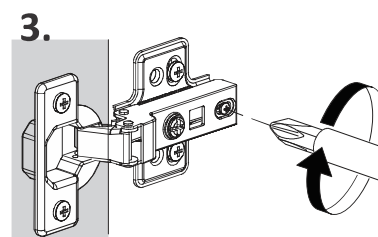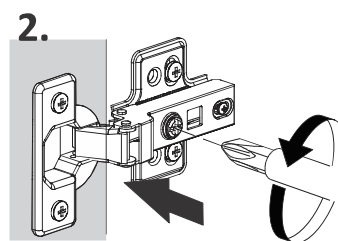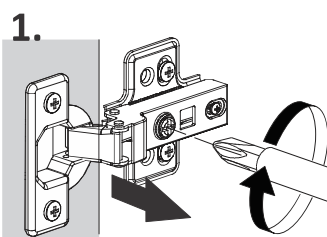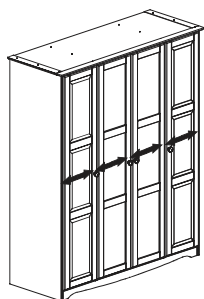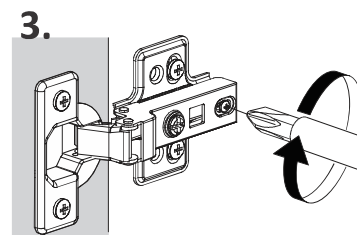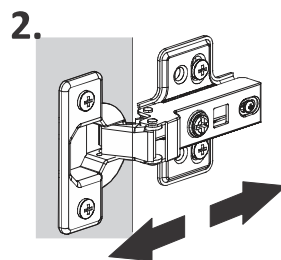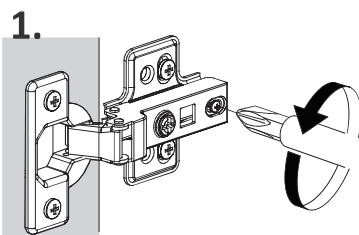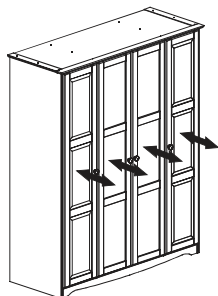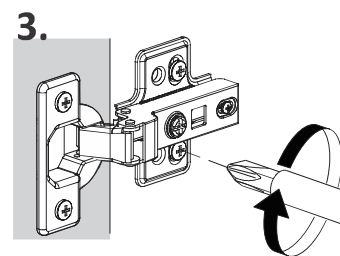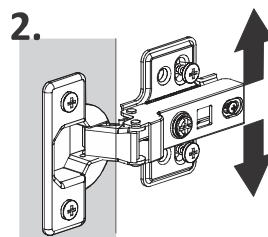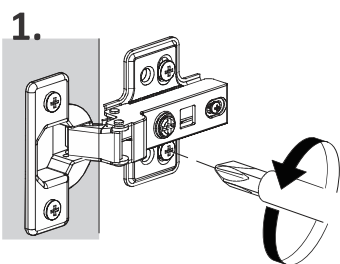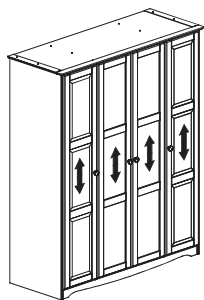

23) Tip-over Restraint Kit Installation

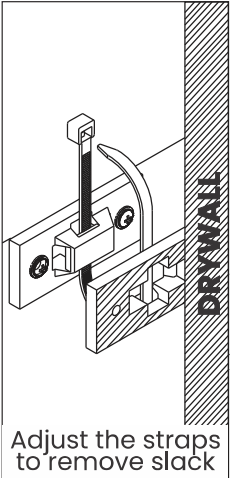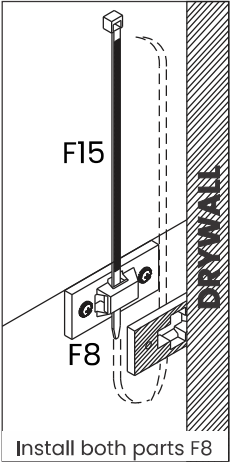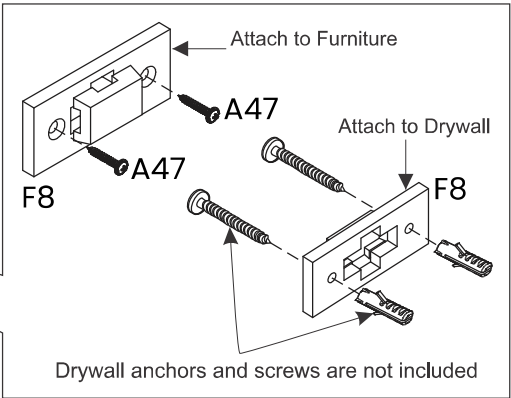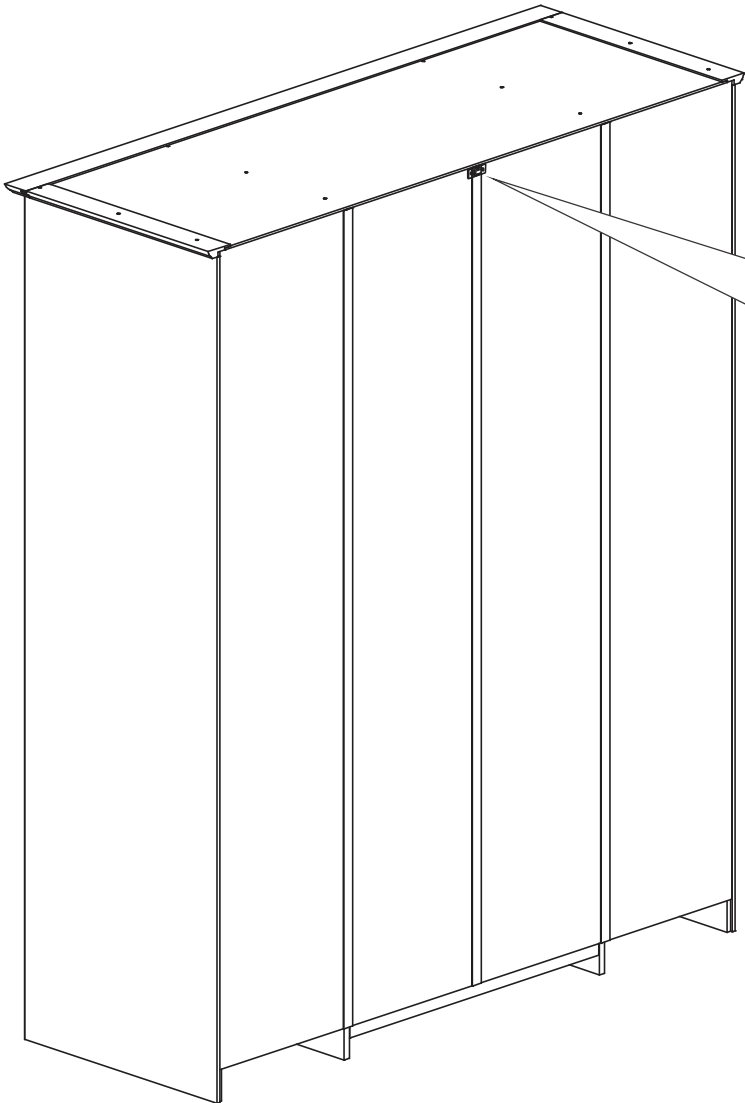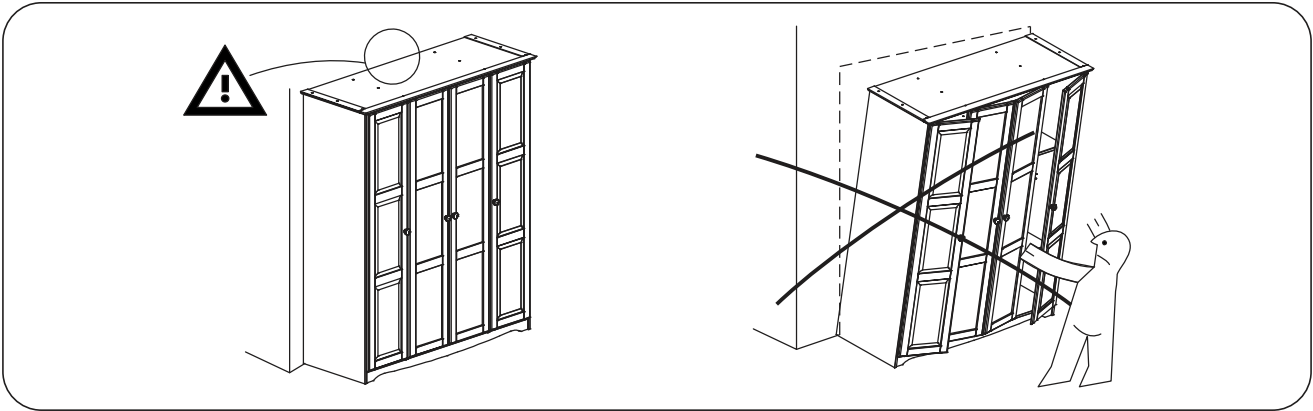

A47		3.0x20	2
F8			2
F15			1