
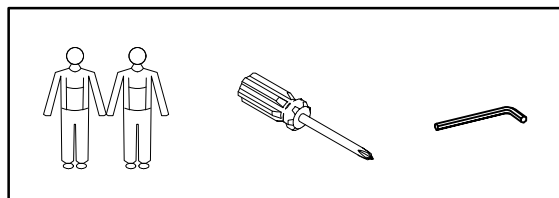


Shoe Storage Cabinet

ASSEMBLY INSTRUCTION

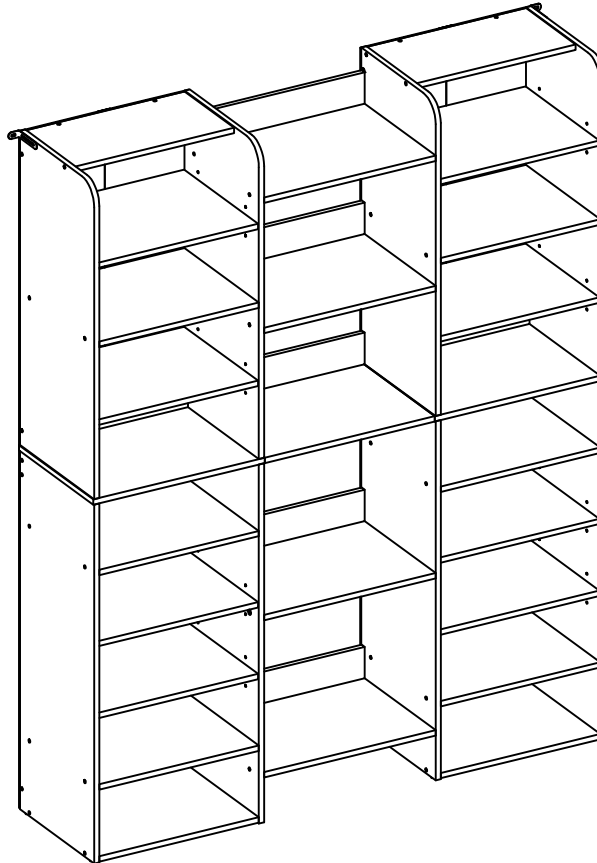

CAUTION

Put the screws in loosely until all pieces are together and then tighten them all.
It will save your time if you make a mistake while installing.

Dear Customers,



Thank you for purchasing our products.

As a reliable seller, we have been pursuing to provide customers with 100% satisfied products and services, so we hope that you will enjoy this shopping experience.

If you find any damage, missing parts, or dissatisfaction after receiving the product, please contact us freely at the first time. We will provide you with a 100% satisfactory solution.




Please follow the instruction manuals and use a pad to protect the product during your assembly.

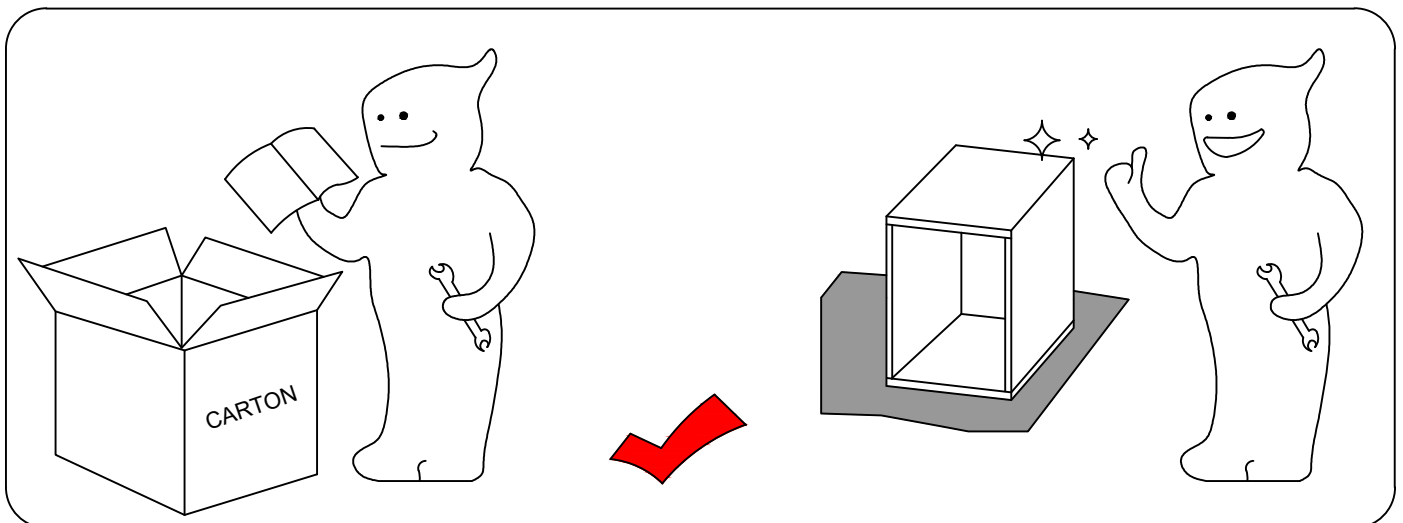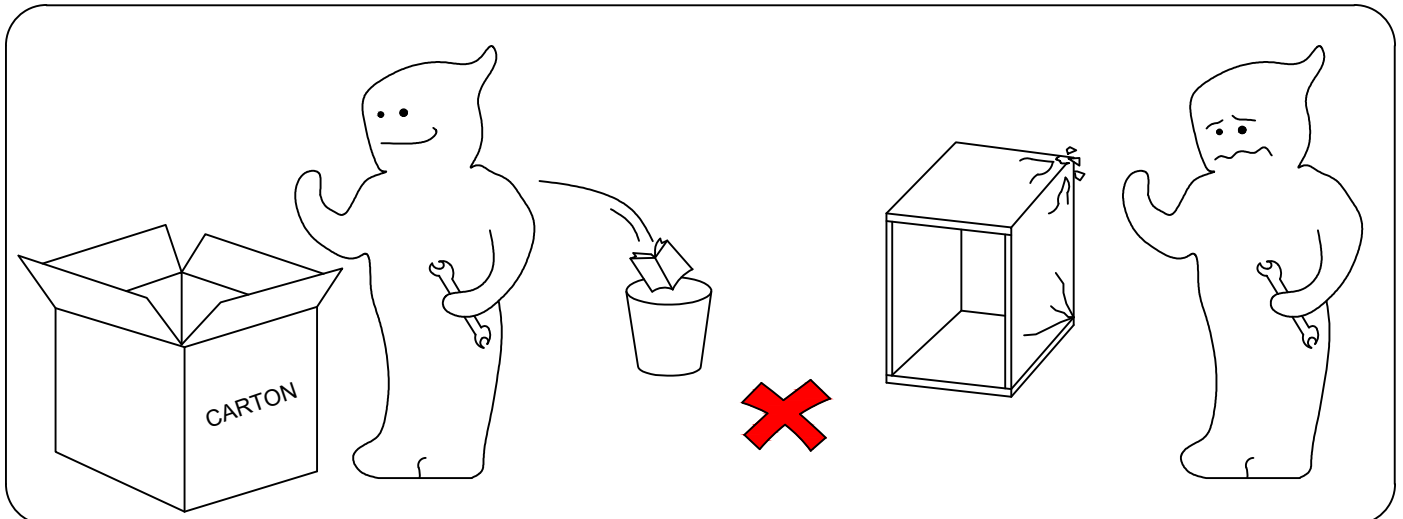

Using Camlocks


Connect the male camlock as directed in the assembly instructions using a screwdriver.

1 DO NOT OVER TIGHTEN

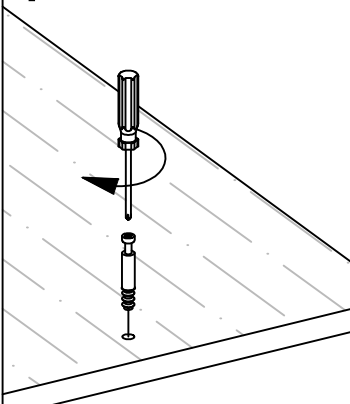

Push the male camlock into the entry hole.


2

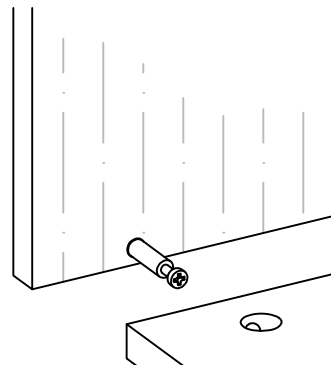

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

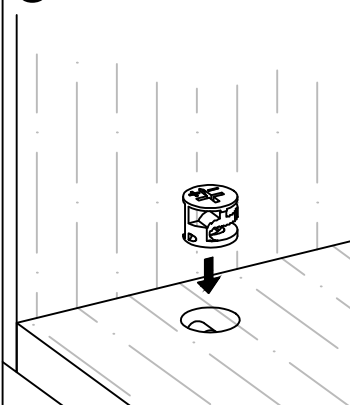



Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.























The joint is now secure.

4






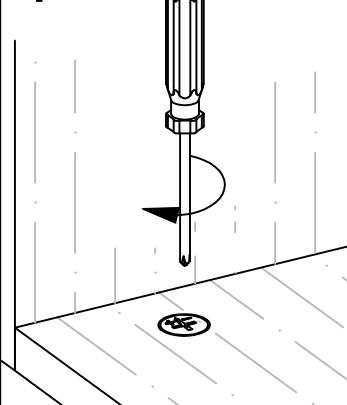


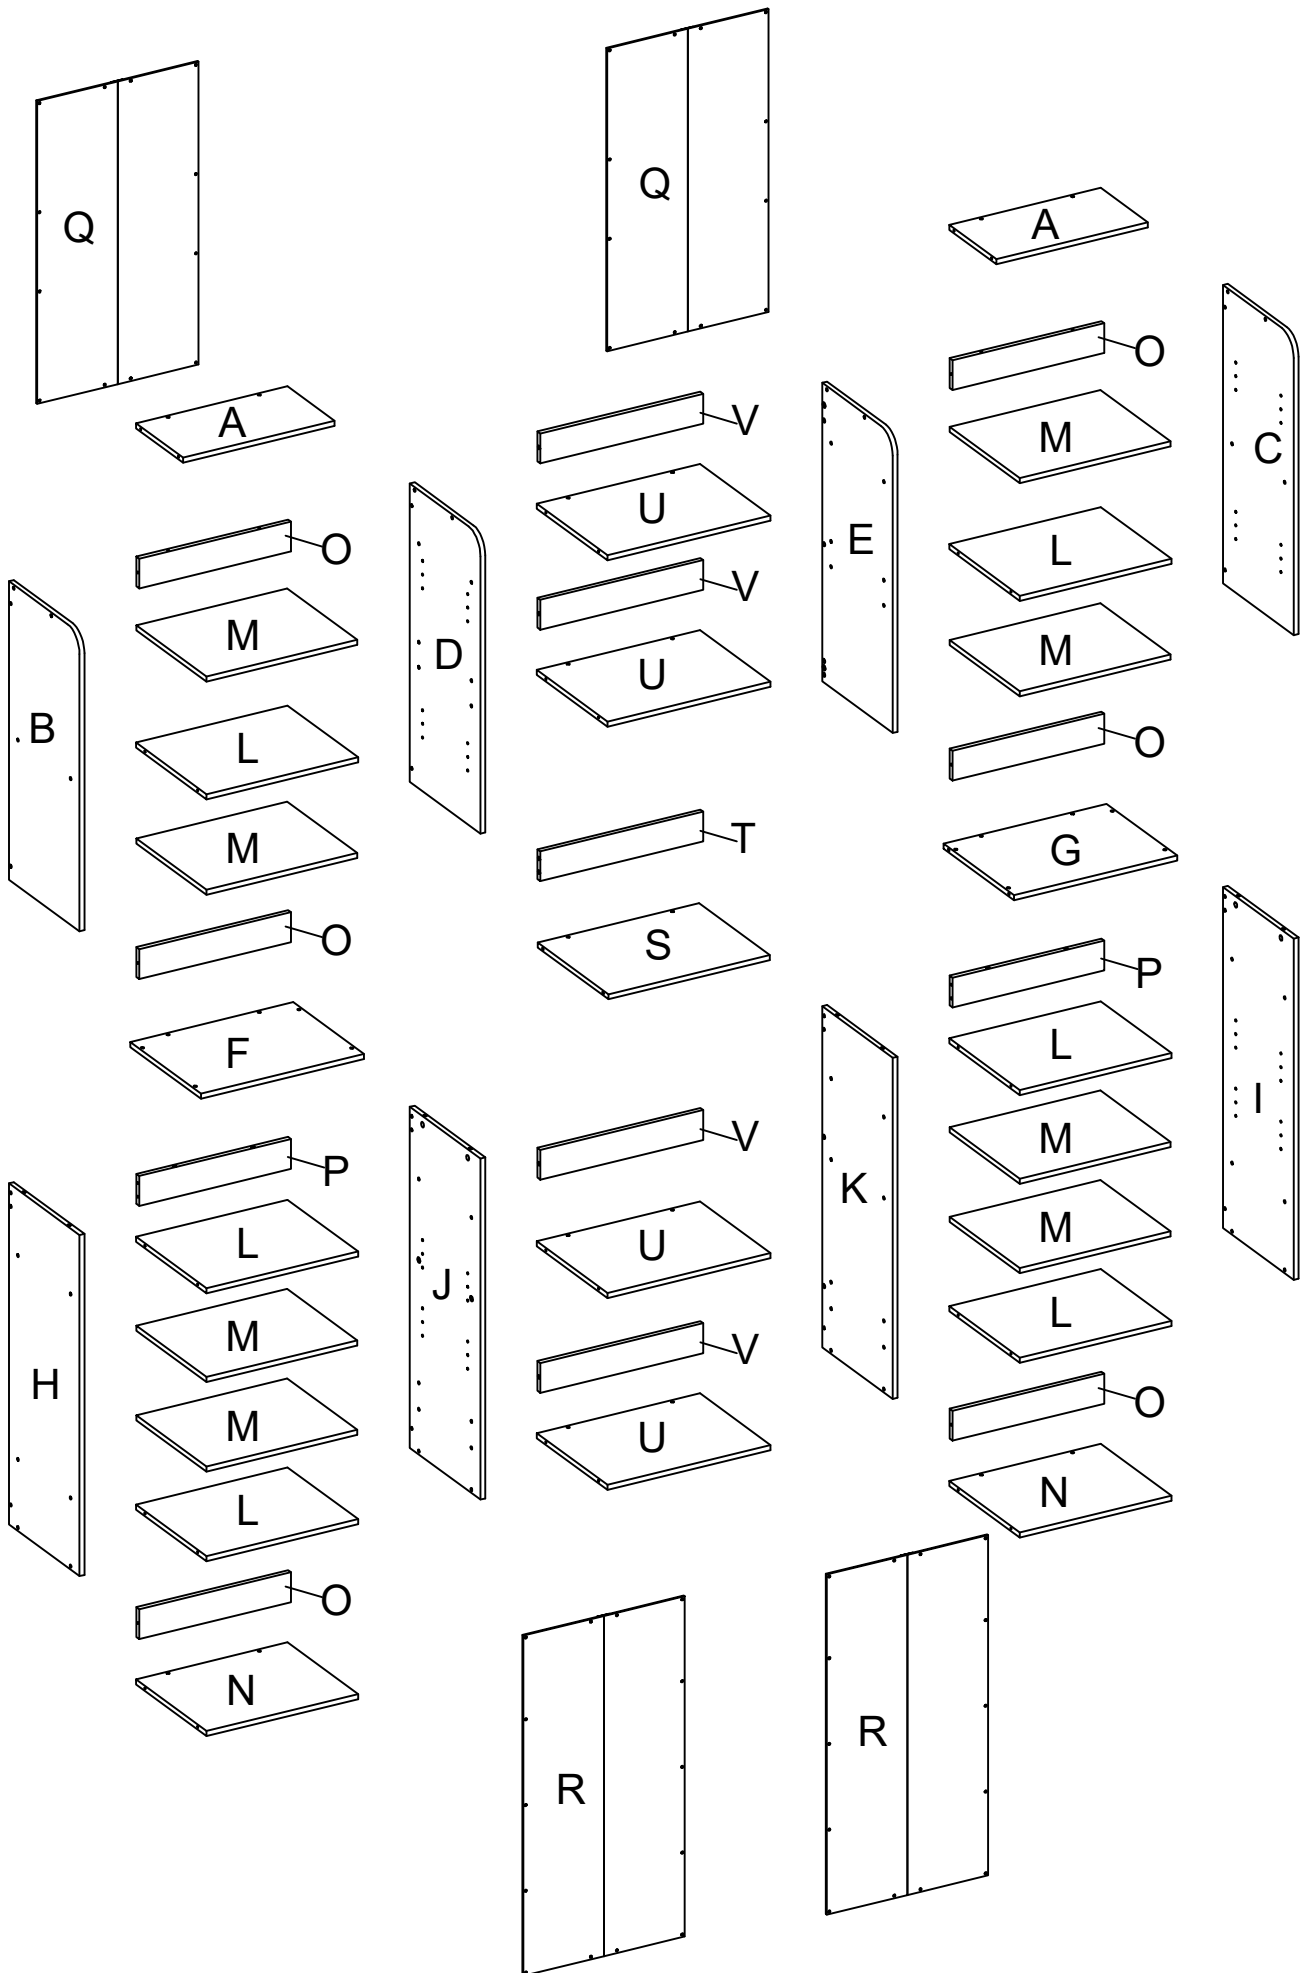




PART LIST

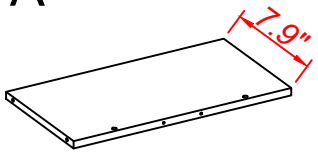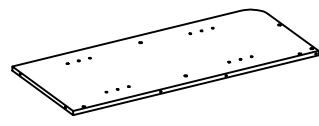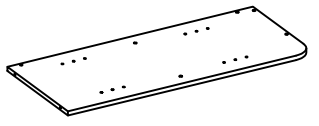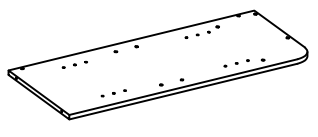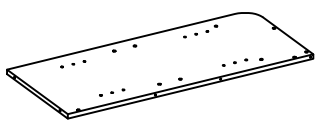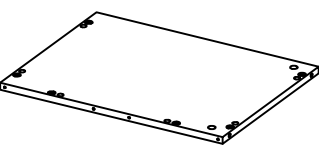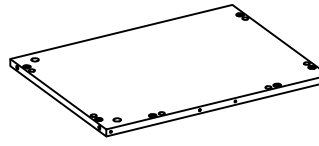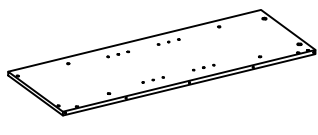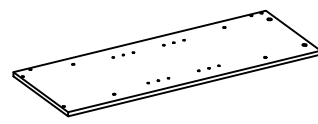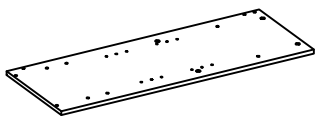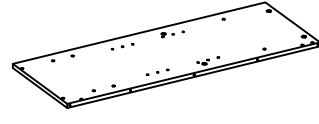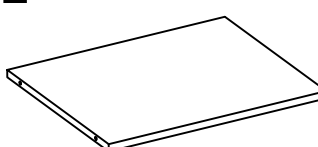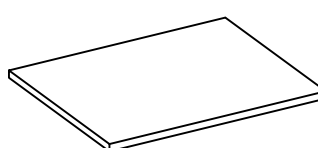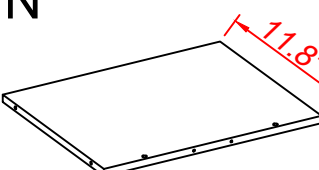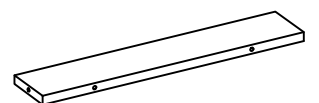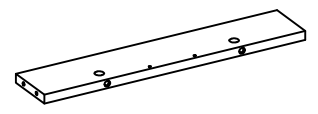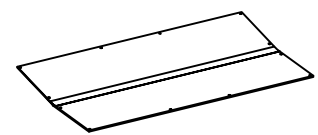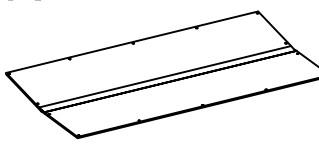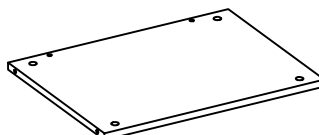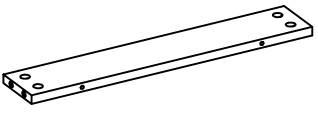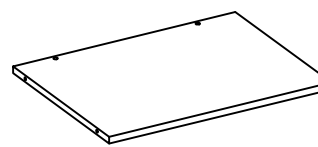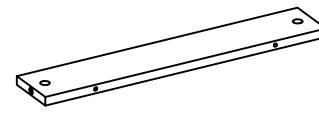A  2 pcs	B  1 pc	C  1 pc	D  1 pc
E  1 pc	F  1 pc	G  1 pc	H  1 pc
I  1 pc	J  1 pc	K  1 pc	L  6 pcs
M  8 pcs	N  2 pcs	O  6 pcs	P  2 pcs
Q  2 pcs	R  2 pcs	S  1 pc	T  1 pc
U  4 pcs	V  4 pcs		



HARDWARE LIST

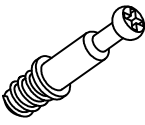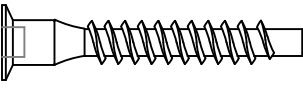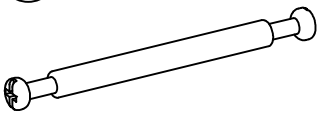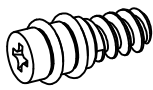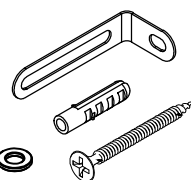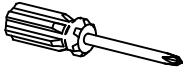①  M6x28 24 pcs	②  Ø12 32 pcs	③  M6x40 106 pcs	④  4 pcs
⑤  M3x16 52 pcs	⑥  8 pcs	⑦  M6x19 32 pcs	⑧  M4x40 2 pcs
⑨  1 pc	⑩  M4 1 pc		

STEP 1

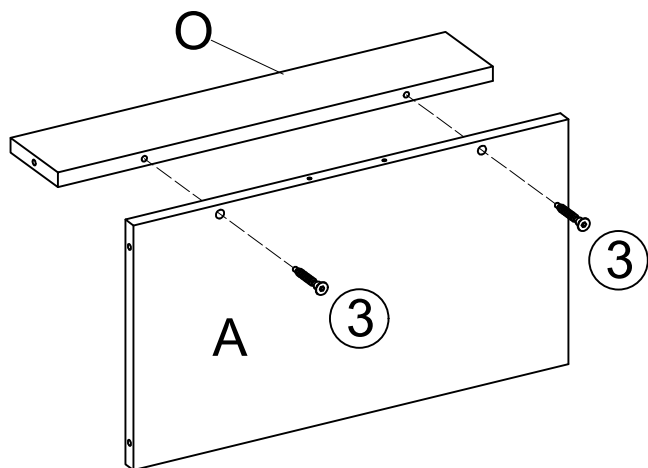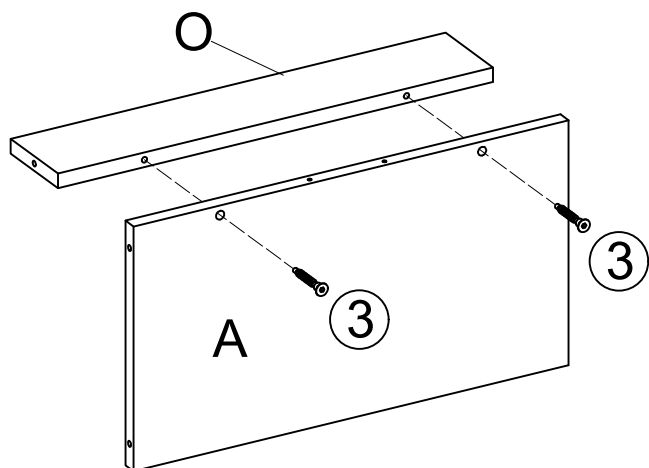
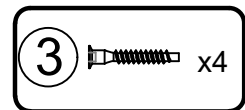


STEP 2

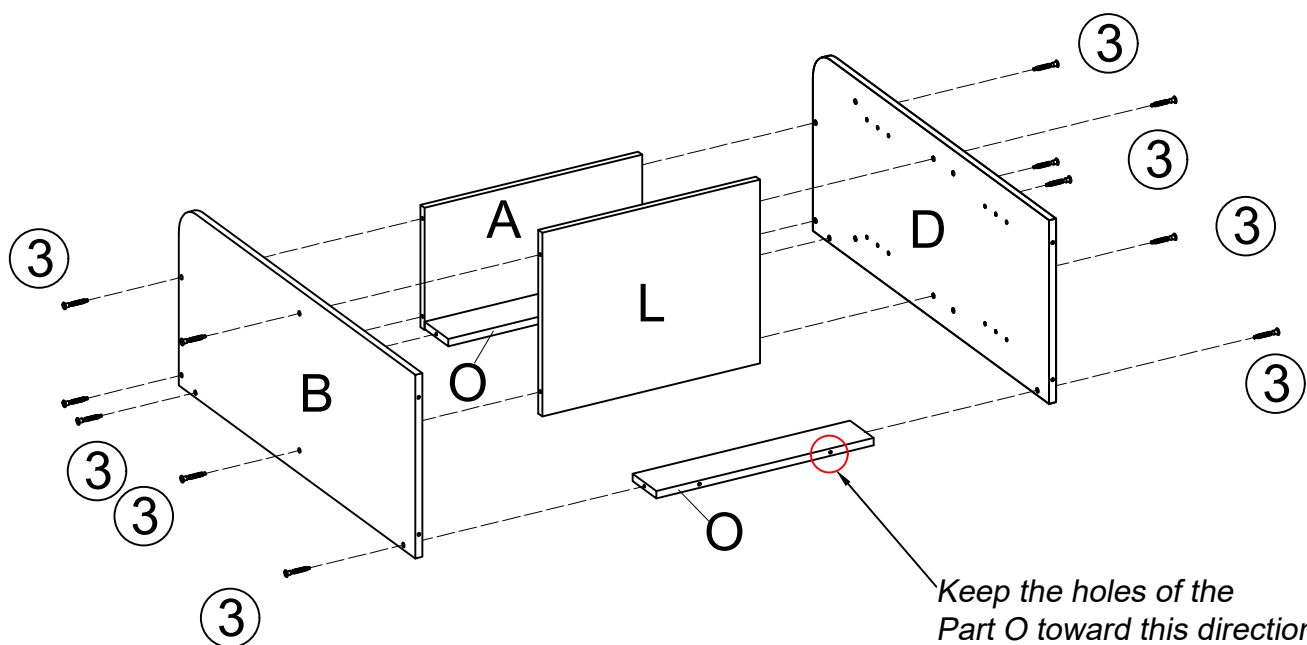
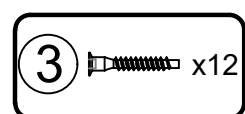


Keep the holes of the Part O toward this direction as shown



STEP 3

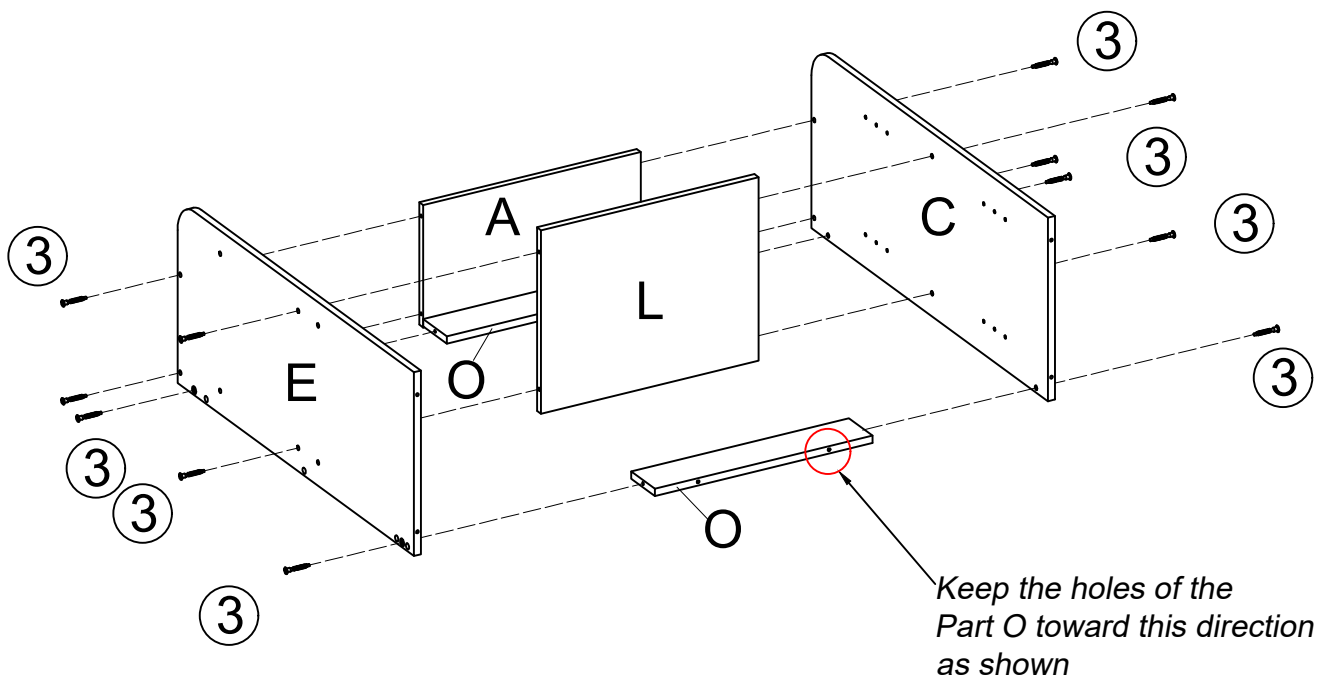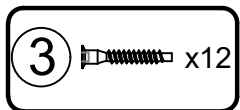



STEP 4

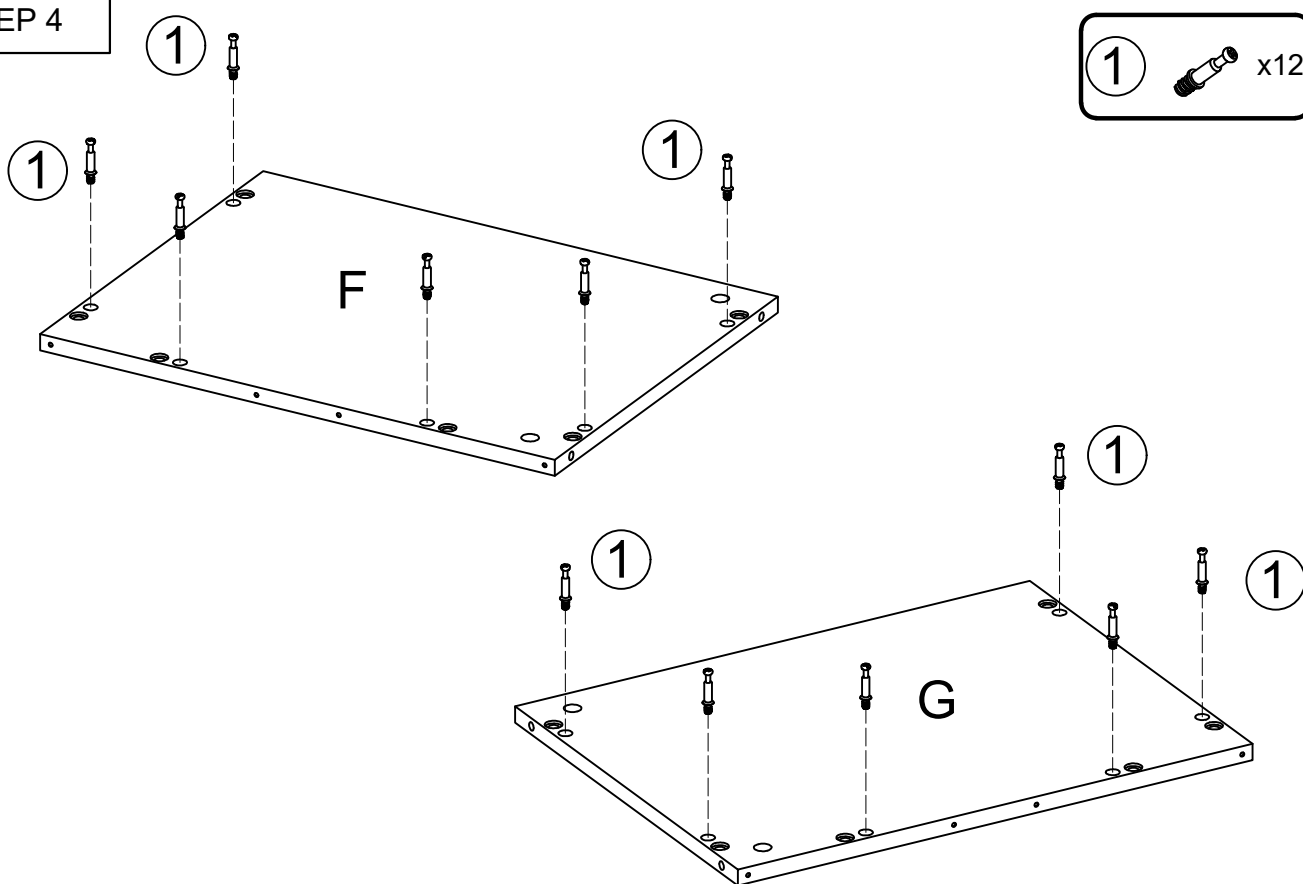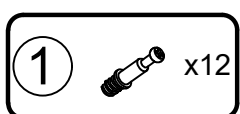


STEP 5

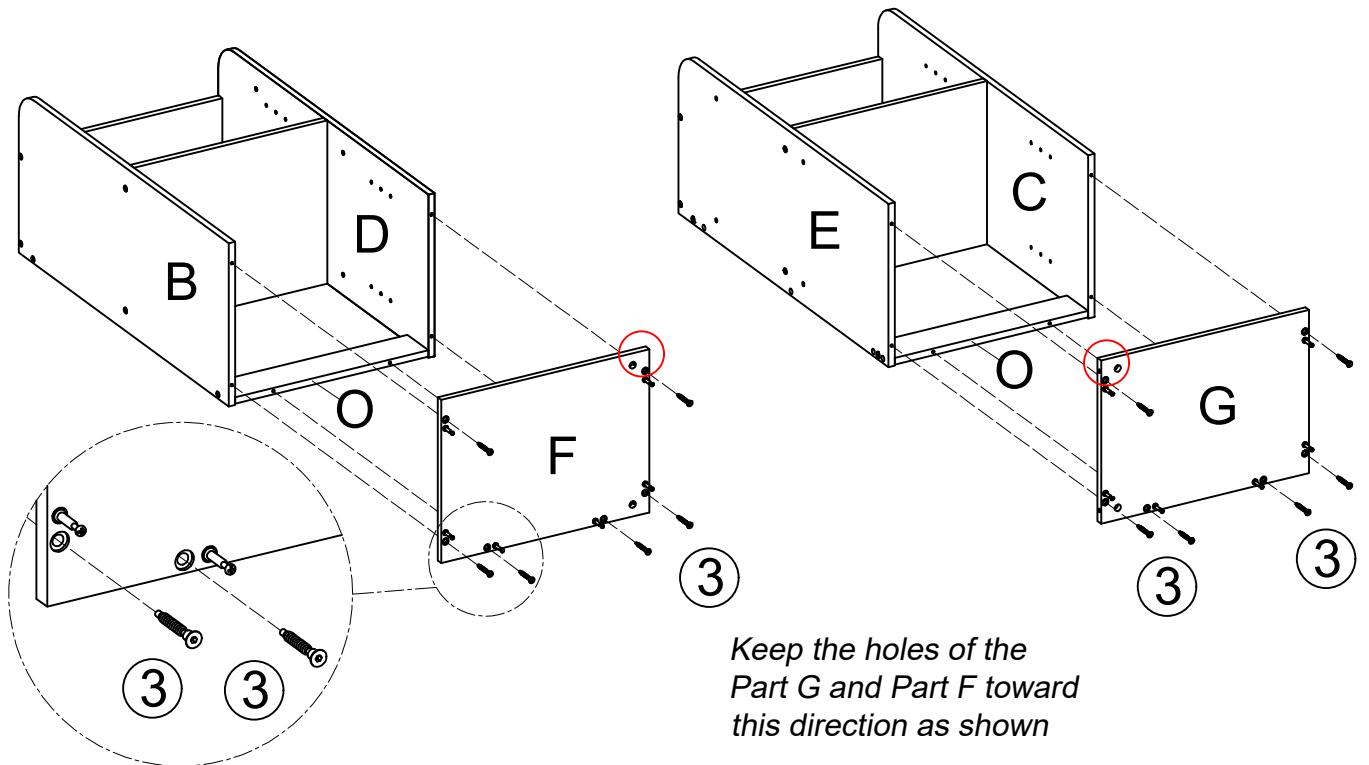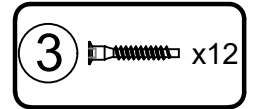


STEP 6

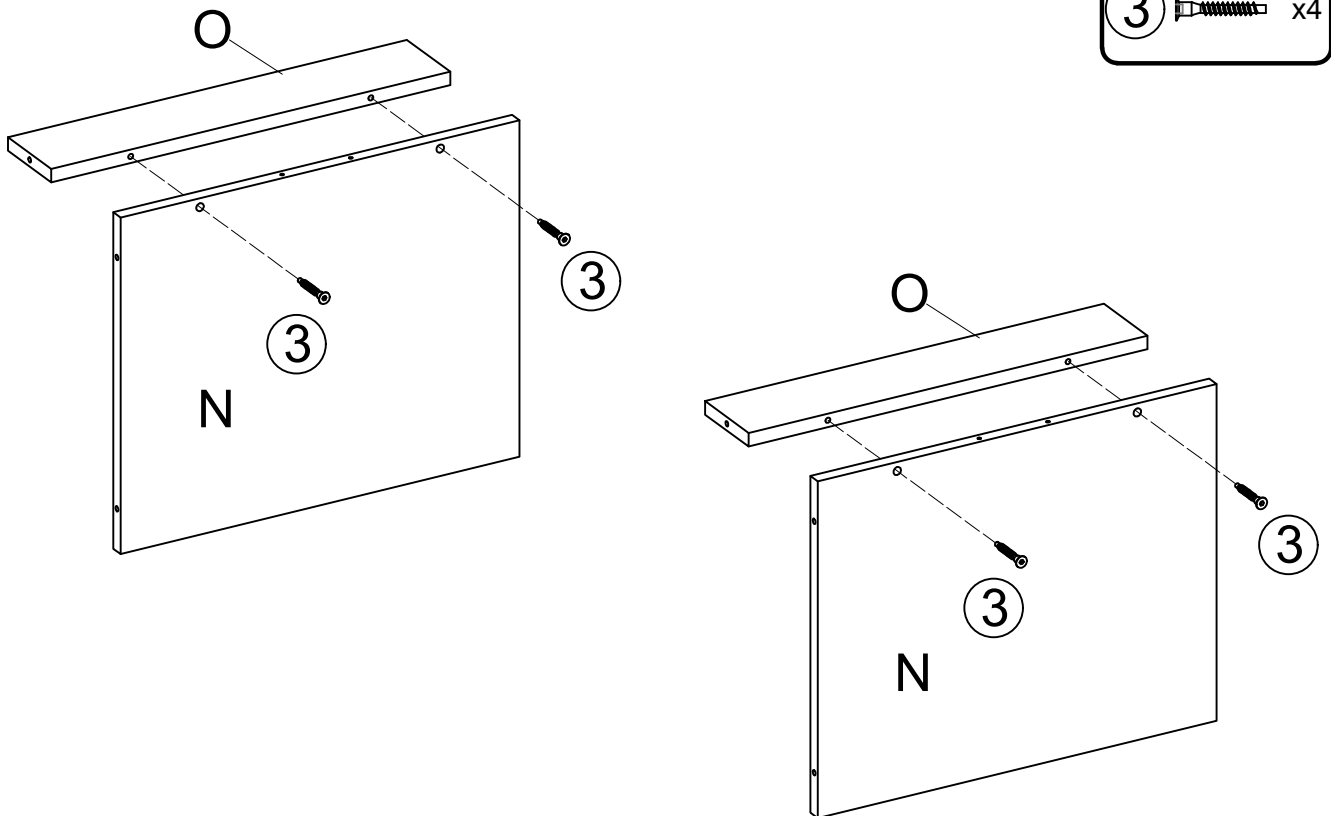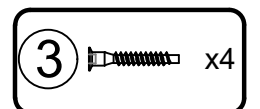



STEP 7

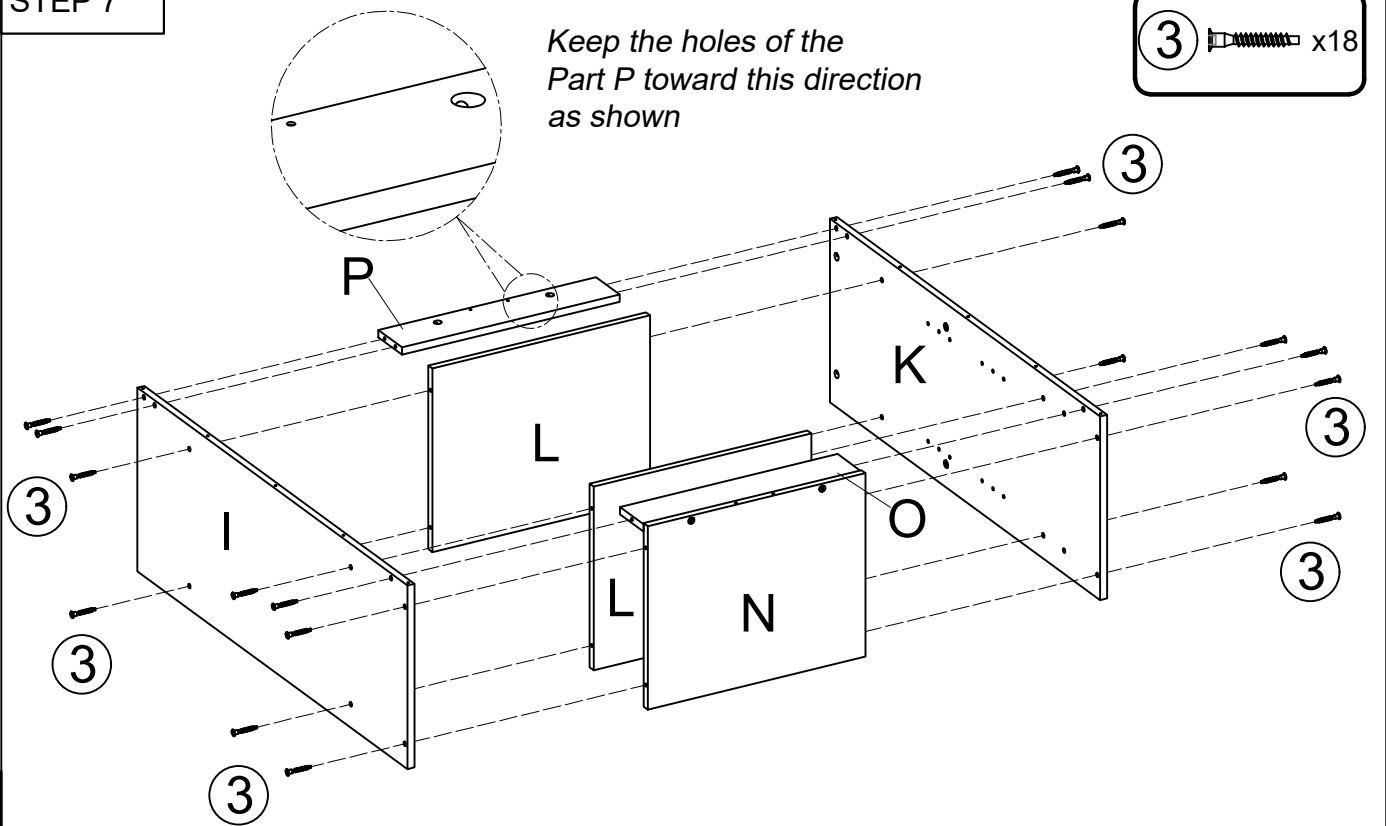

STEP 8


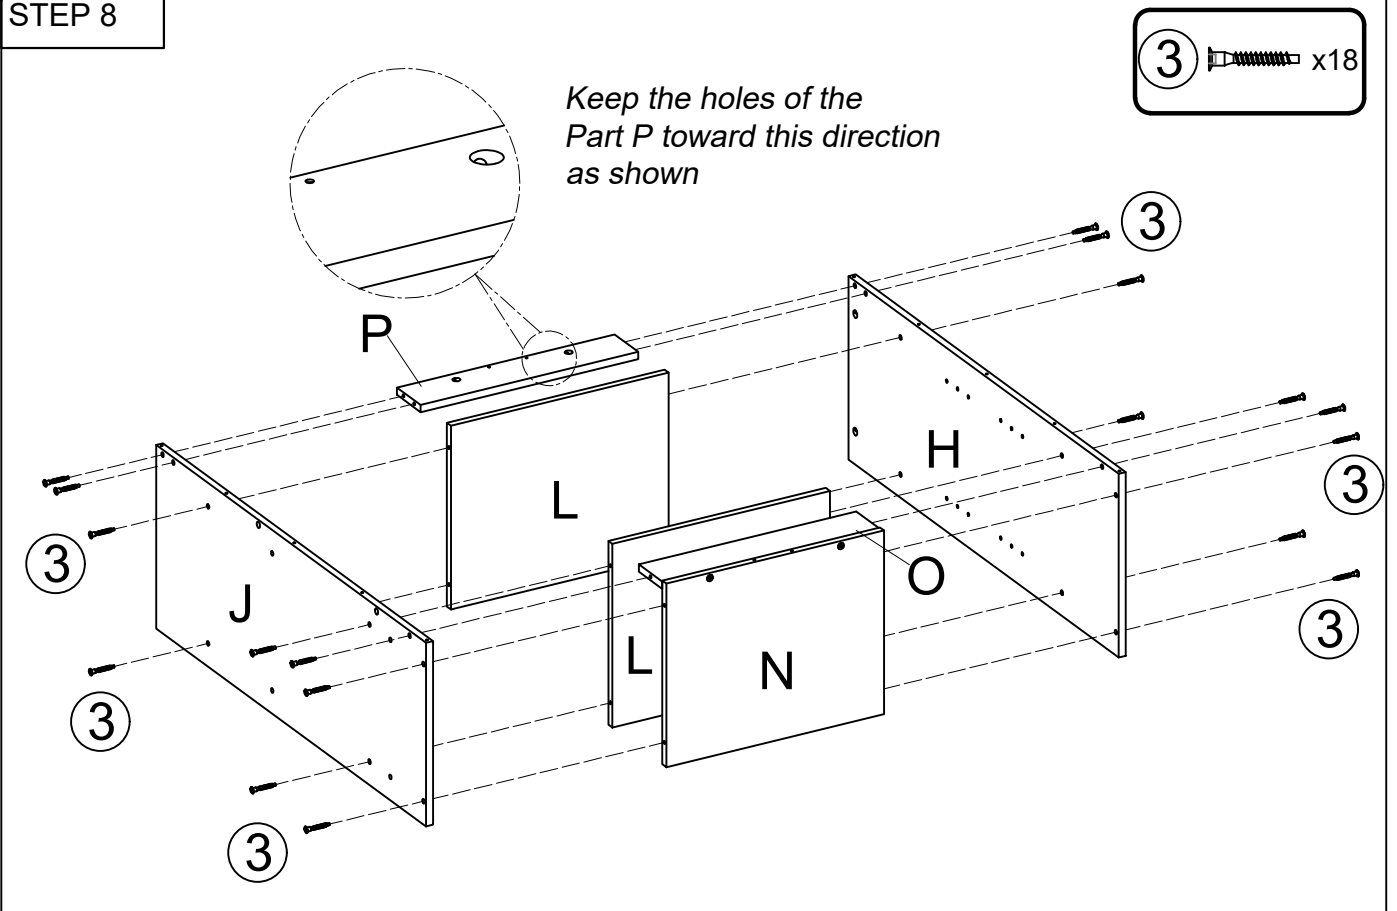


STEP 9

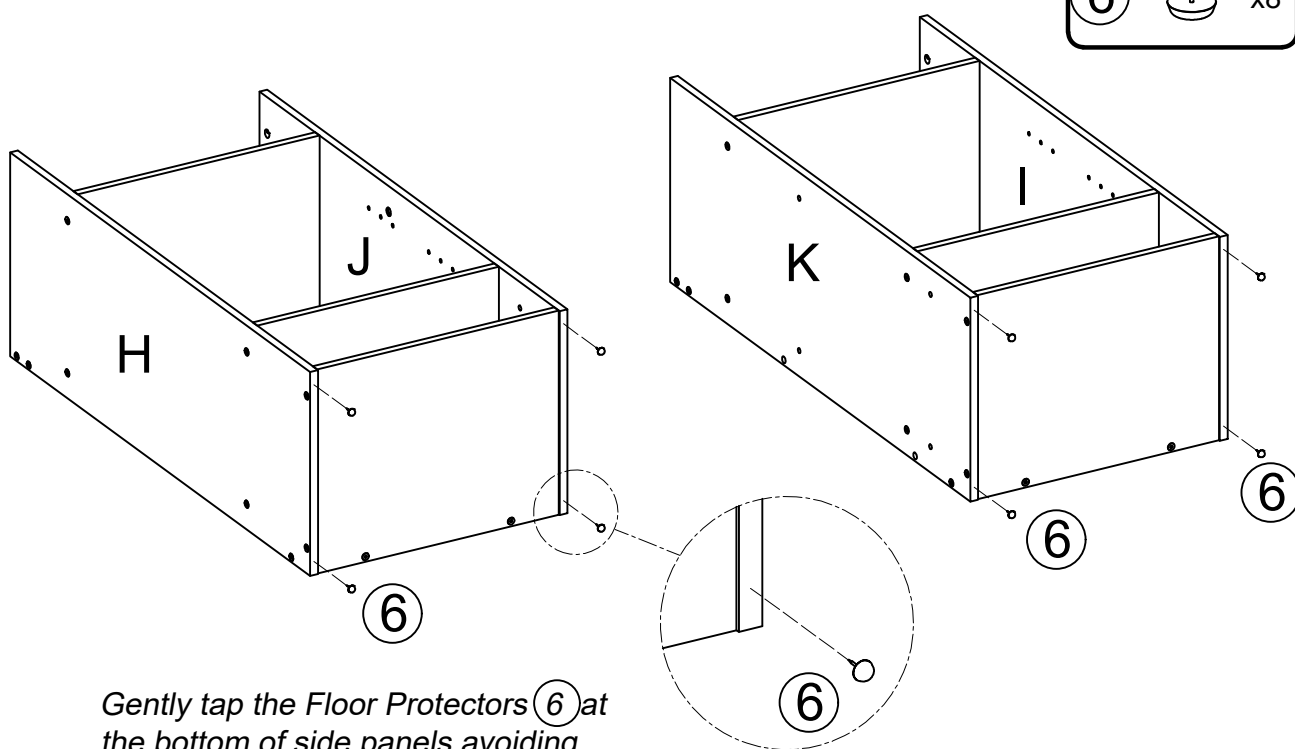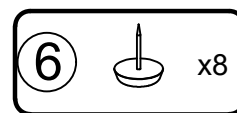


Gently tap the Floor Protectors ⑥ at the bottom of side panels avoiding crack or damage of side panel.


STEP 10

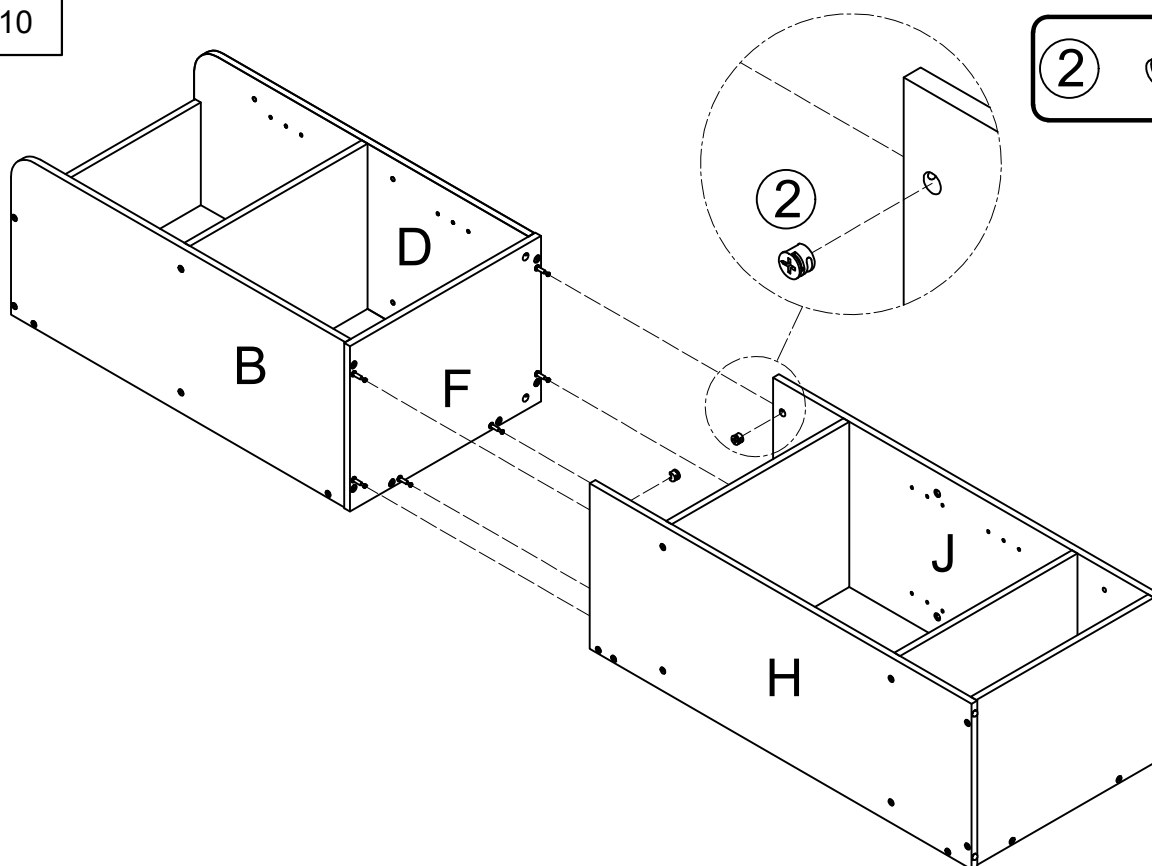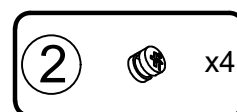



STEP 11

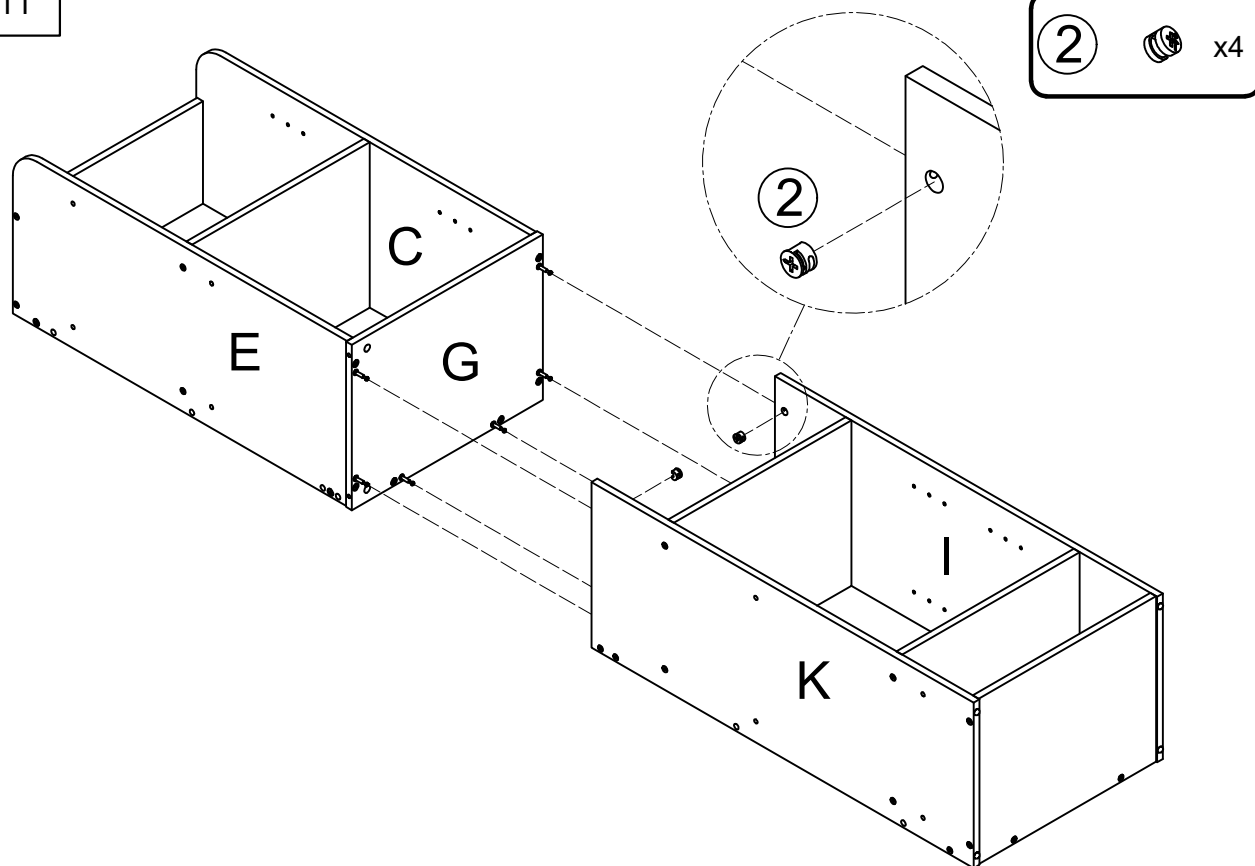



STEP 12

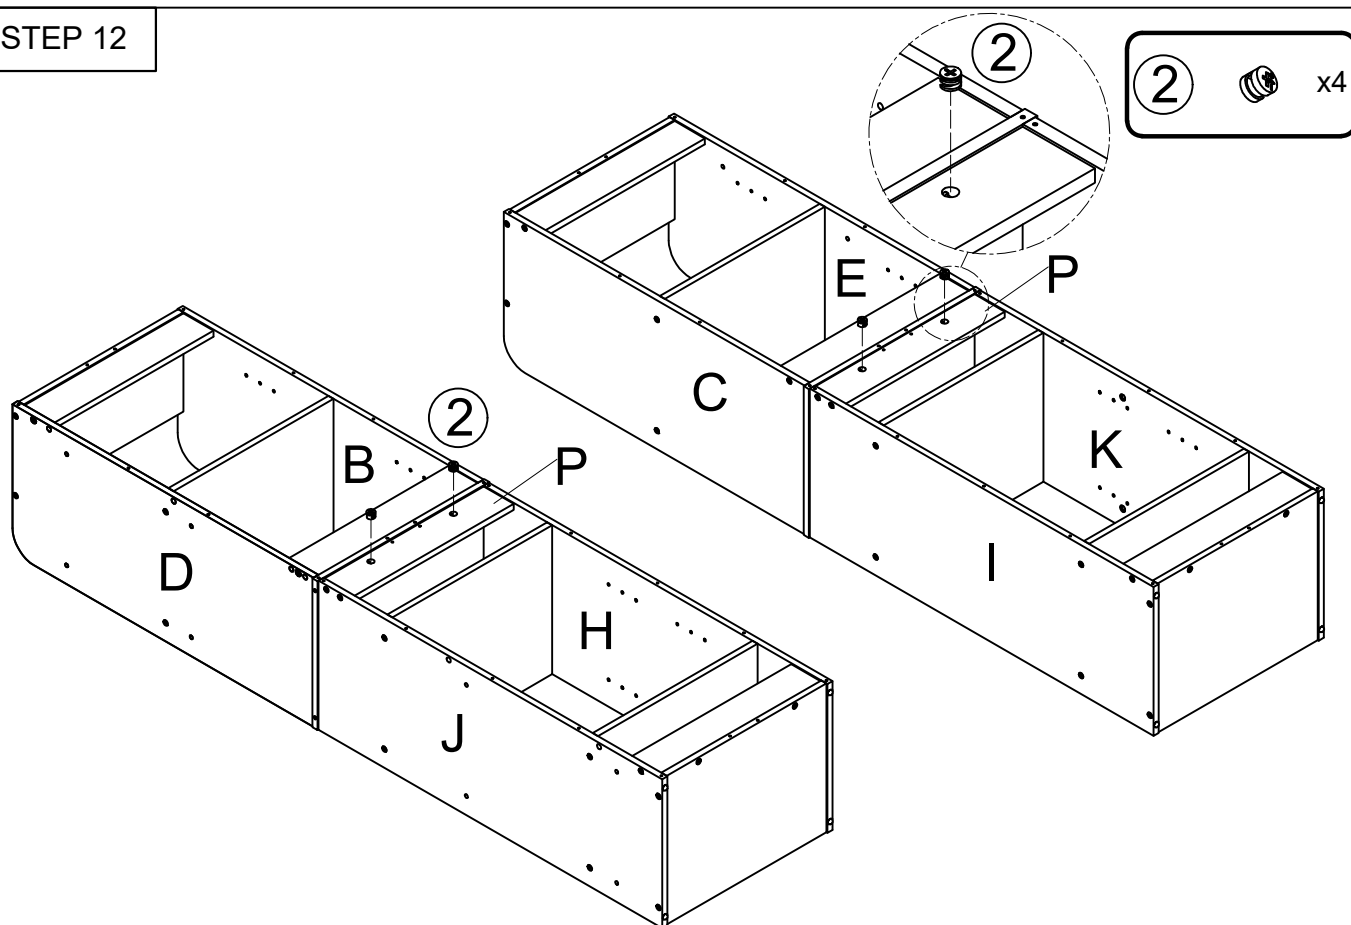



STEP 13

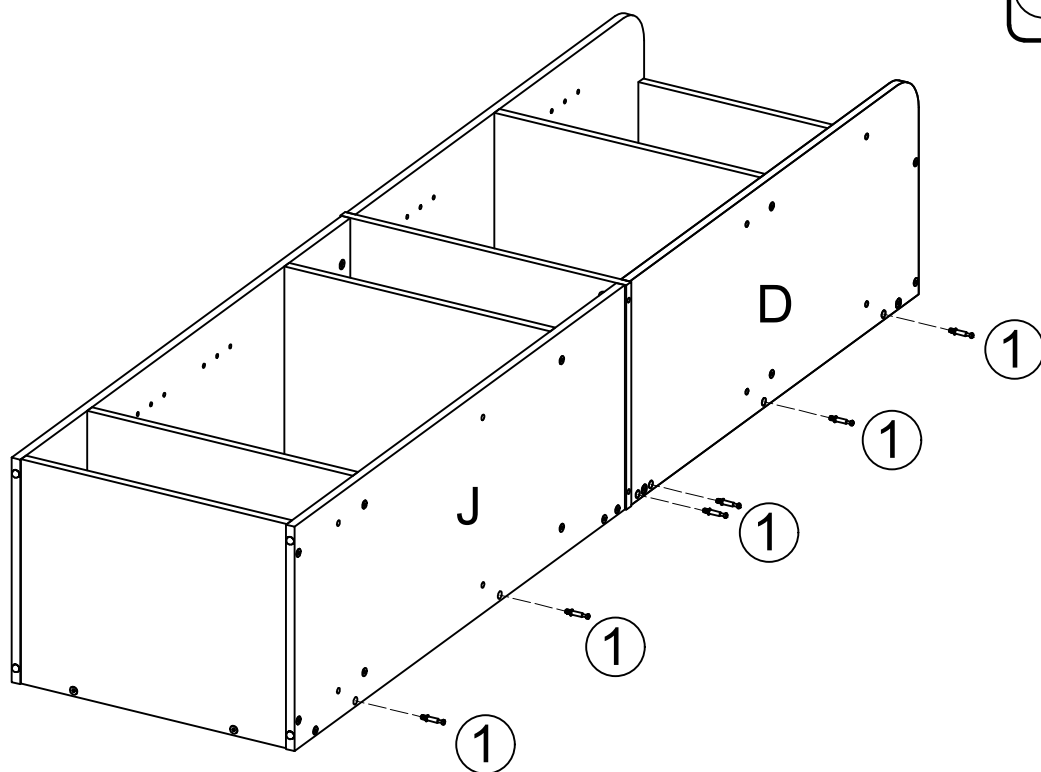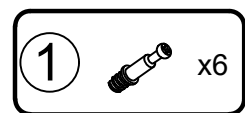

STEP 14

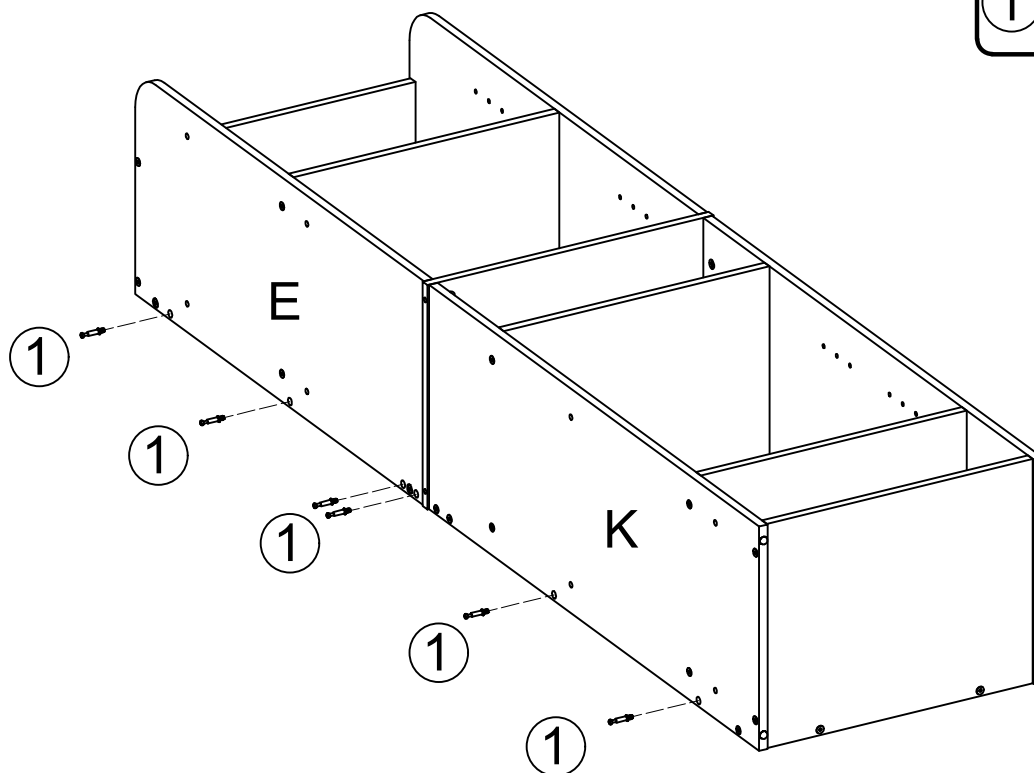
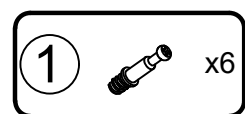


STEP 15

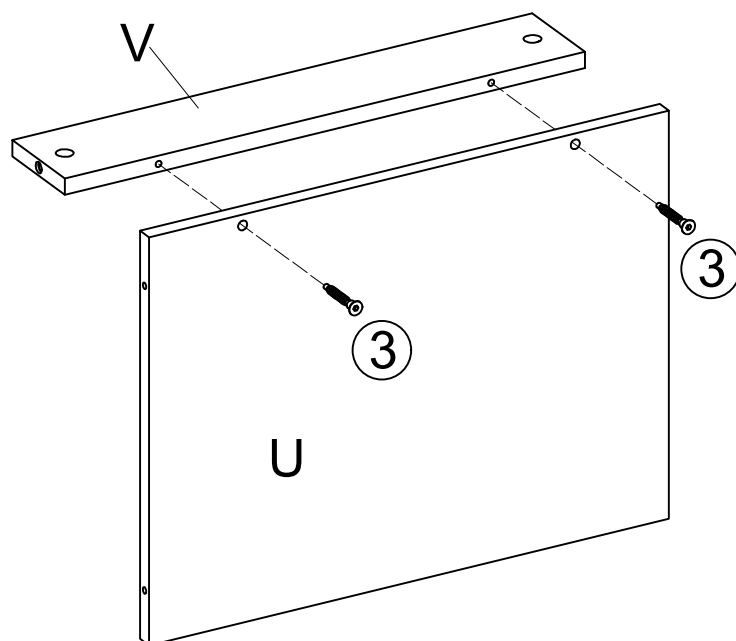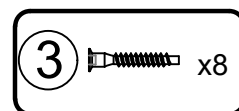


x4


STEP 16

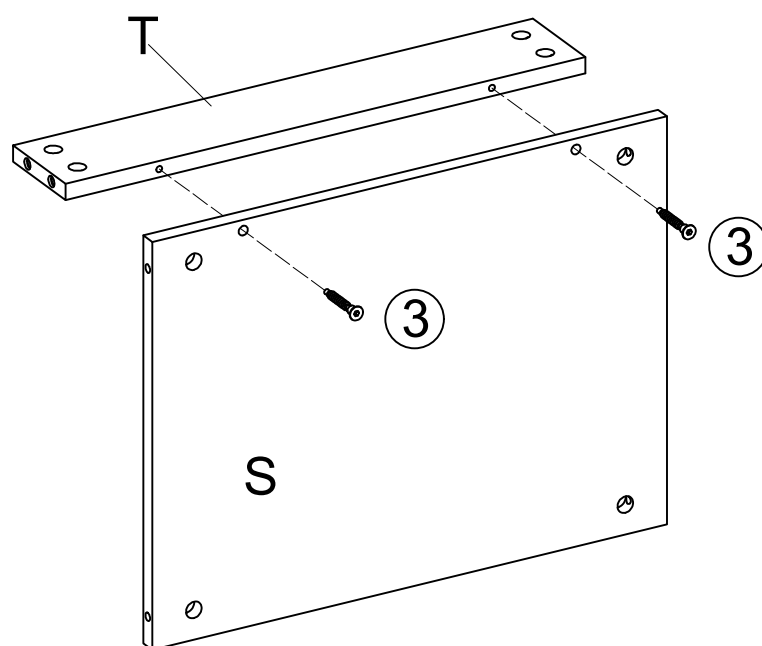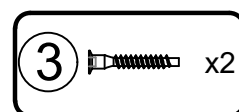


STEP 17

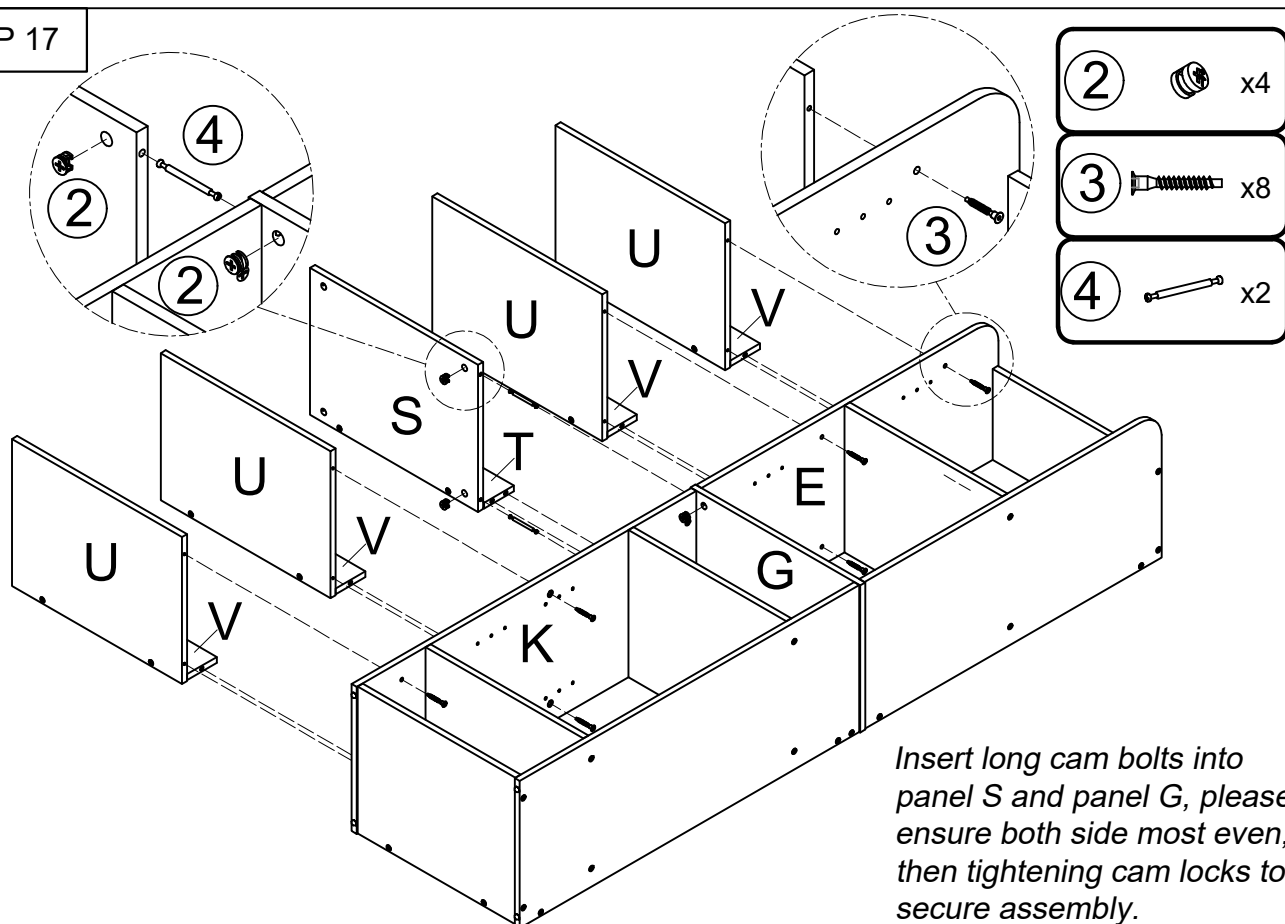


STEP 18

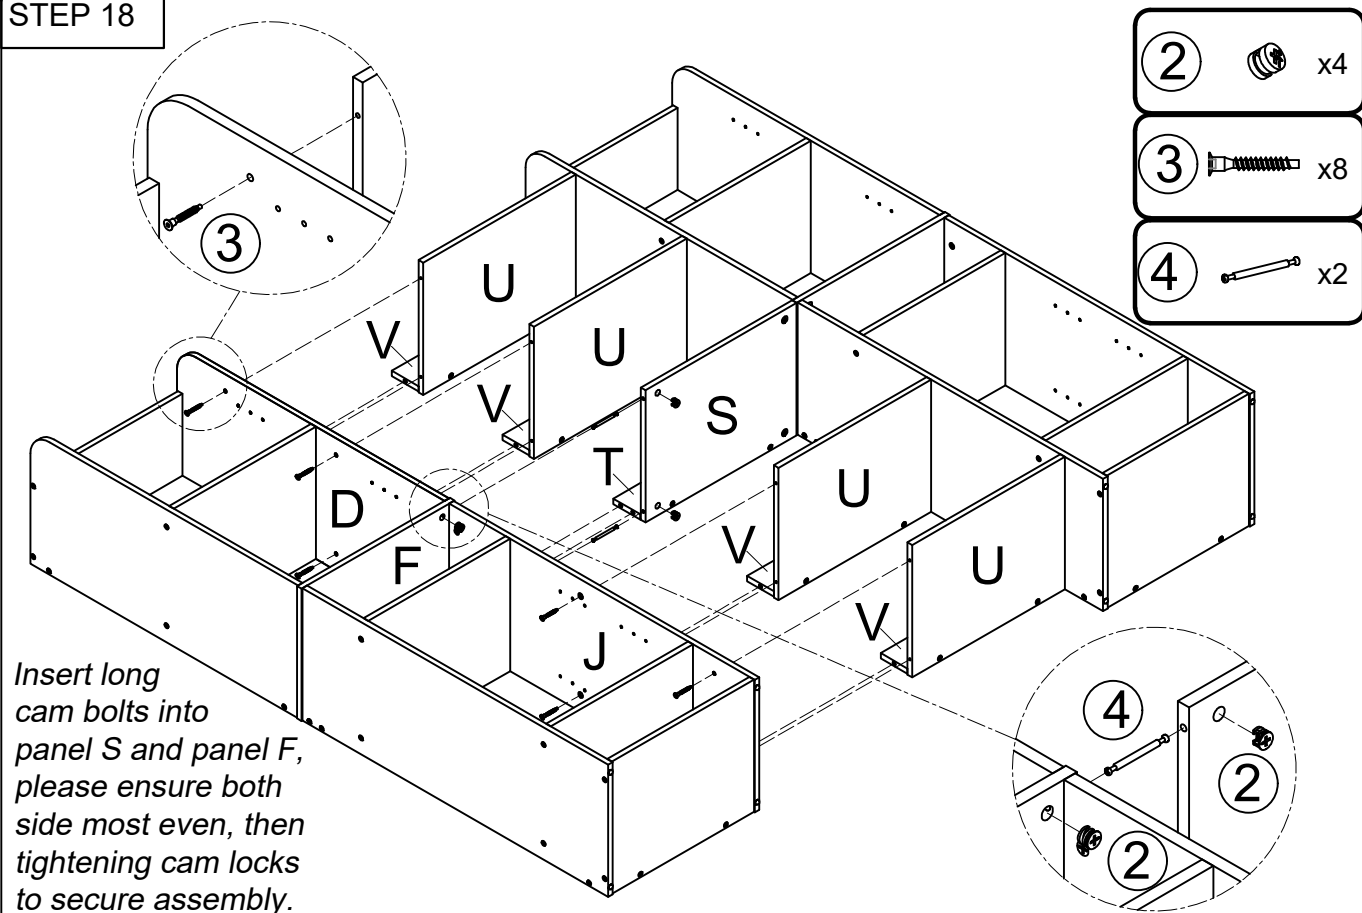


STEP 19

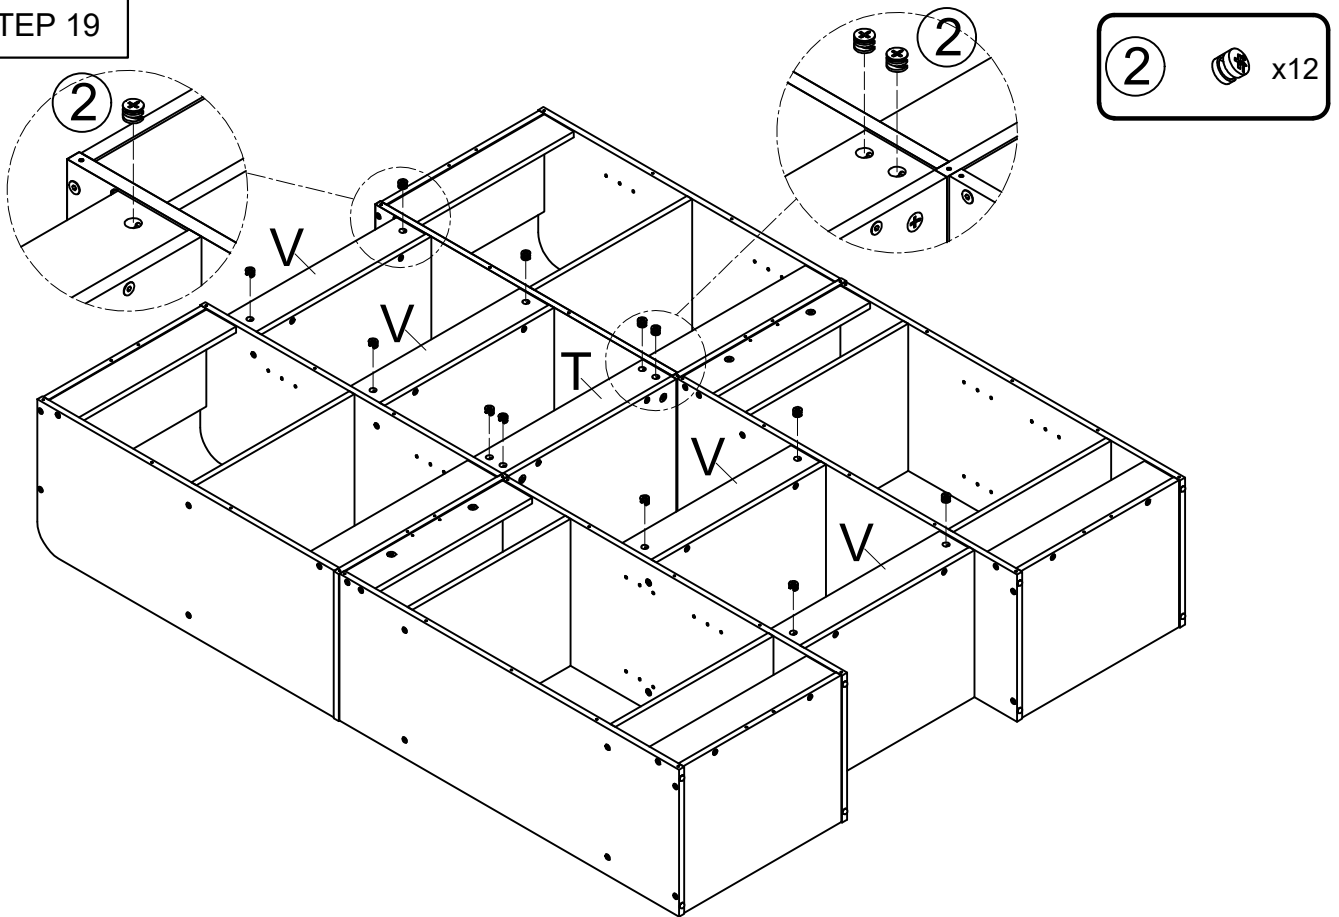


STEP 20

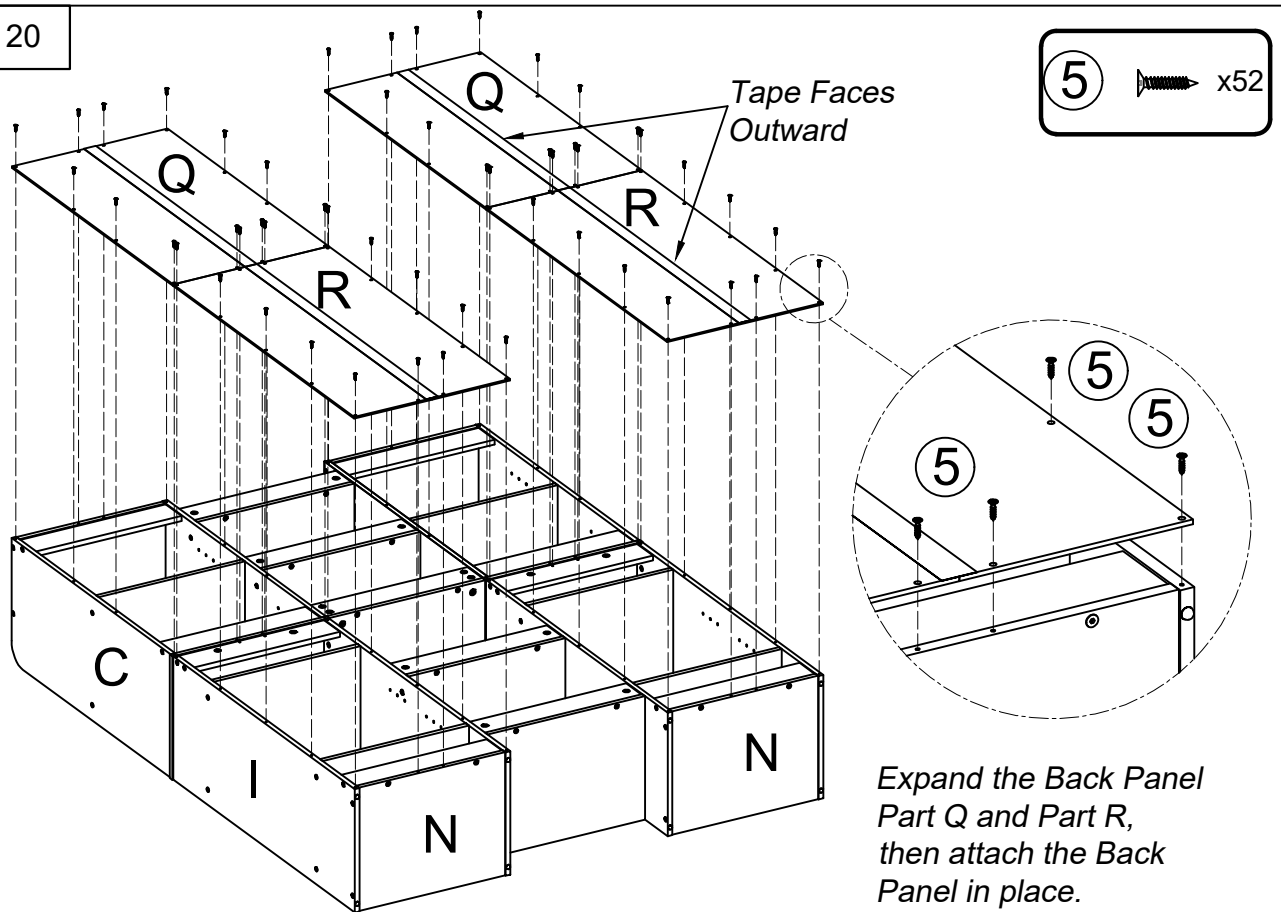

STEP 21

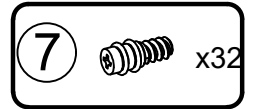

There are 3 heights for the shelves to be adjusted as you need.

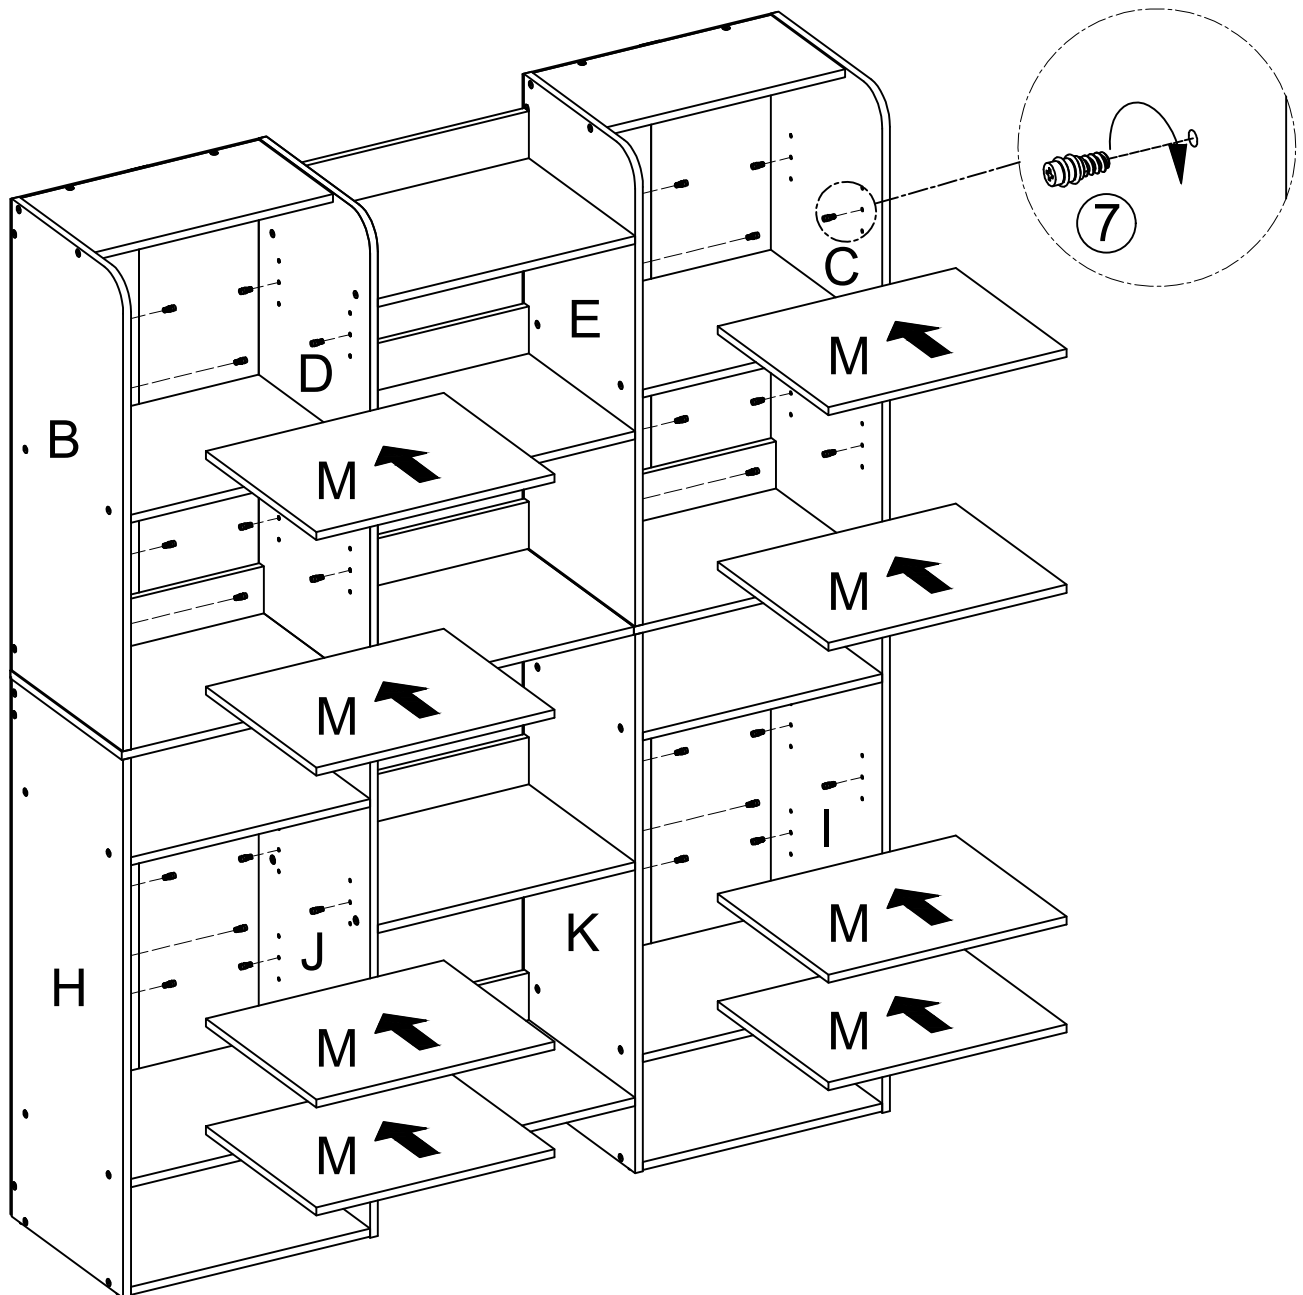

TIPPING RESTRAINT HARDWARE

Note: We have included two Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

