

#910 CLASSIC 10 GUN CABINET ASSEMBLY INSTRUCTIONS





 **American**
Furniture Classics
A division of Dawson Heritage Furniture

Thank you for purchasing this quality product. A list of PARTS and INSTRUCTIONS is included to assist you. Unpack and identify all parts included on the Parts List and Hardware List. If parts are missing, please DO NOT return this item to the store. For faster service please call our **Customer Service Department at 1-888-673-9080**. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.






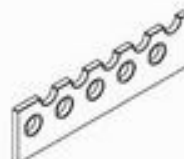



#910 CLASSIC 10 GUN CABINET ASSEMBLY INSTRUCTIONS

American
Furniture Classics
A division of Dawson Heritage Furniture

HARDWARE LIST

- | | | | | | | | | |
|---|---|----------------------------------|---|---|--------------------------------|---|---|-------------------------------------|
| 1 |  | SHELF LOCK QTY: 8 PCS | 2 |  | DOOR KEY QTY: 1 SET | 3 |  | SHELF SUPPORT X 8 PCS |
| 4 |  | DOOR HANDLE QTY: 1 PCS | 5 |  | WRENCH X 1 PCS | 6 |  | PLASTIC WASHER QTY: 2 PCS |
| 7 |  | M6X12 LCK QTY: 8 SETS | 8 |  | M6X8 RND QTY: 4 SETS | | | |

PARTS LIST

- | | | | | | |
|---|---------------------------------------|---|-----------------------------------|---|---------------------------------------|
| A | METAL BACK PANEL QTY: 1 PCS | D | BOTTOM PANEL QTY: 1 PCS | G | ADJUSTABLE SHELF QTY: 1 PCS |
|  | |  | |  | |
| B | LEFT SIDE PANEL QTY: 1 PCS | E | TOP PANEL QTY: 1 PCS | H | BARREL REST QTY: 1 PCS |
|  | |  | |  | |
| C | RIGHT SIDE PANEL QTY: 1 PCS | F | DOOR QTY: 1 PCS | J | WOOD BACK PANEL QTY: 1 PCS |
|  | |  | |  | |

CUSTOMER SERVICE

Toll Free 888-673-9080 • Fax 417-673-9081 • E-mail service@americanfurnitureclassics.com


#910 CLASSIC 10 GUN CABINET ASSEMBLY INSTRUCTIONS

American
Furniture Classics
A division of Dawson Heritage Furniture

STEP

1

**(A) METAL BACK
PANEL**

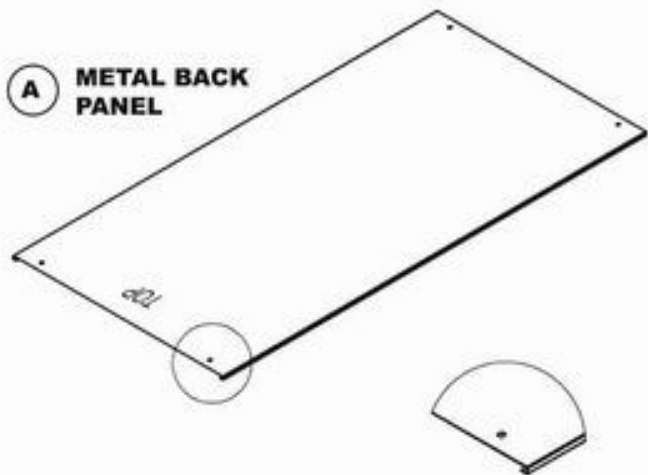


LAY METAL BACK PANEL ON FLOOR WITH INSIDE OF BACK PANEL FACING UP.

STEP

2

NOTE

HOLES/SLOTS IN CABINET SIDES FOR ADJUSTABLE SHELF BARREL REST MUST BE TOWARD TOP CABINET

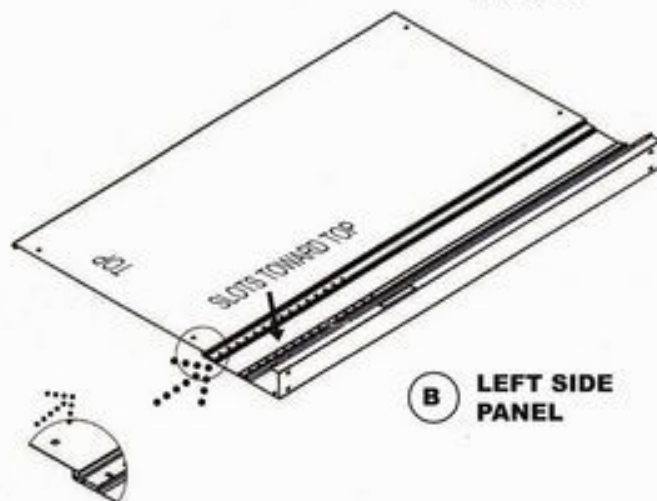


HOOK / ATTACH LEFT SIDE PANEL TO BACK PANEL.

STEP

3


**(C) RIGHT SIDE
PANEL**

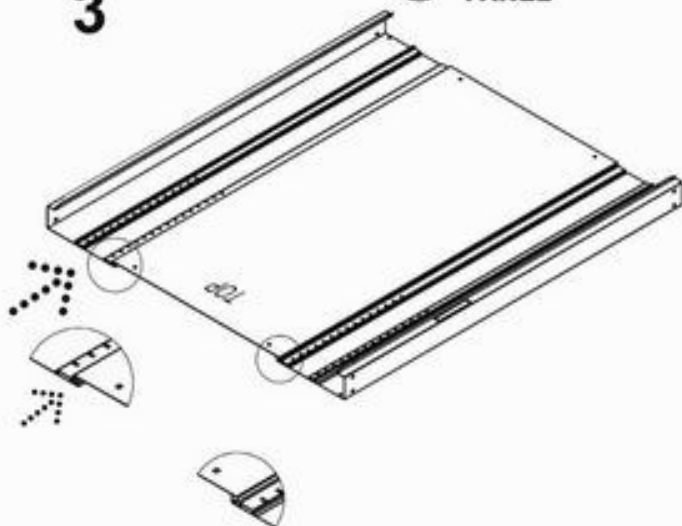

HOOK / ATTACH RIGHT SIDE PANEL TO BACK PANEL.

STEP

4

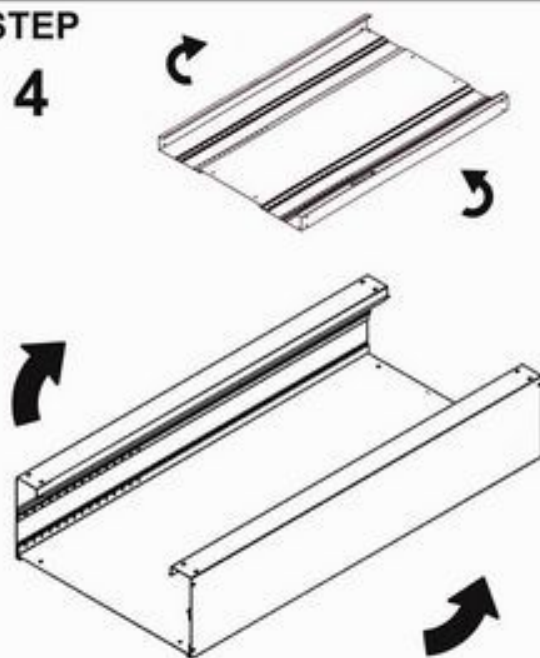

ROTATE FRONT EDGE OF BOTH SIDE PANELS UPWARD TO FORM RECTANGULAR CABINET SHAPE.

#910 CLASSIC 10 GUN CABINET ASSEMBLY INSTRUCTIONS

American
Furniture Classics
A division of Dawson Heritage Furniture


STEP

5

IMPORTANT

DO NOT FULLY TIGHTEN THE
BOLTS DURING THIS STEP.

D BOTTOM PANEL

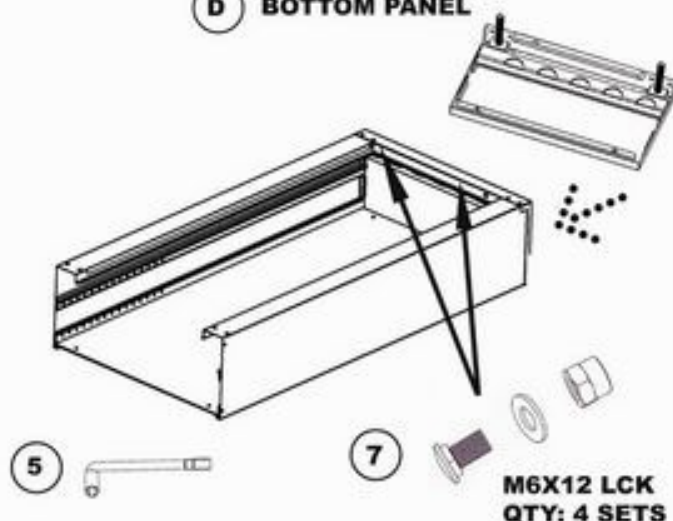

SLIDE BOTTOM PANEL OVER THE SIDE AND BACK
PANELS. INSERT 4 - M6X12 BOLTS THROUGH FRONT AND
LOOSELY TIGHTEN WASHER & LOCK NUTS FROM INSIDE.

STEP

6




INSERT AND SLIDE WOOD BACK PANEL INTO PLACE
FROM TOP END OF CABINET.

STEP

7


M6X12 LCK
QTY: 4 SETS

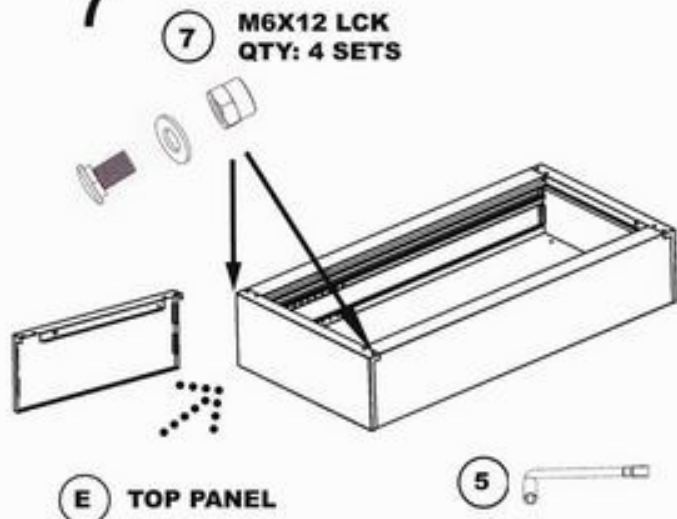

SLIDE TOP PANEL OVER THE SIDE, CENTER AND BACK
PANELS. INSERT 4 - M6X12 BOLTS THROUGH FRONT AND
FULLY TIGHTEN WASHER & LOCK NUTS FROM INSIDE
USING WRENCH.

STEP

8

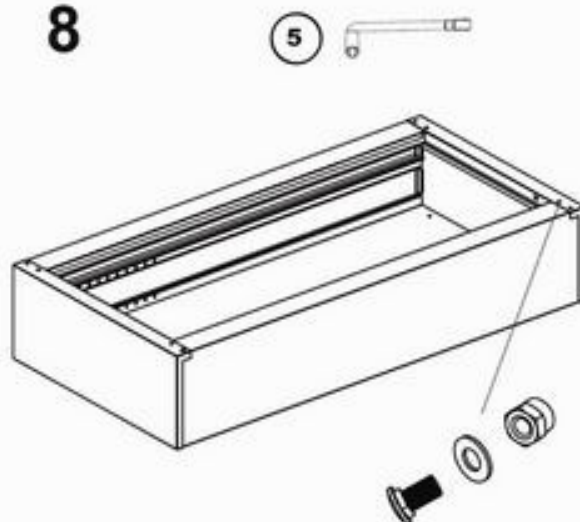


RETURN TO BOTTOM PANEL AND FULLY TIGHTEN THE 4
- M6X12 BOLTS FROM INSIDE USING THE WRENCH.

#910 CLASSIC 10 GUN CABINET ASSEMBLY INSTRUCTIONS

American
Furniture Classics
A division of Dawson Heritage Furniture

STEP

9

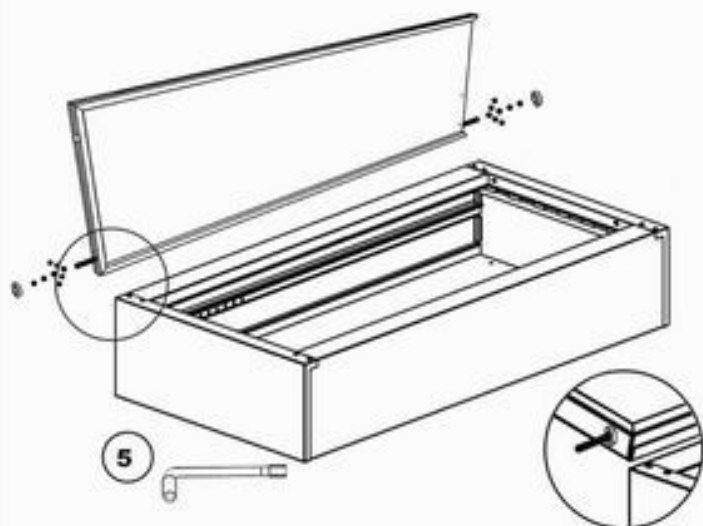

DOOR IS EQUIPPED WITH TOP AND BOTTOM "SPRING" HINGE PINS.

SLIDE PLASTIC WASHER(6) ONTO EACH HINGE PIN.

INSERT THE HINGE PIN ON ONE END OF THE DOOR.

INTO THE HINGE PIN HOLE IN THE CABINET DOOR FRAME.

POSITION THE OTHER END OF THE DOOR AND THE OTHER HINGE PIN NEAR THE HOLE IN THE OPPOSITE END OF THE DOOR FRAME.


PUSH DOWN ON THE HINGE PIN SO THAT IT RETRACTS INSIDE THE DOOR.

WHILE THE HINGE PIN IS RETRACTED, SLIDE THE DOOR INTO THE DOOR FRAME.

ALIGN HINGE PIN WITH THE HINGE PIN HOLE. WHEN ALIGNED CORRECTLY, THE RETRACTED HINGE PIN WILL "SPRING UP" INTO POSITION. THE DOOR IS NOW FULLY INSTALLED.

STEP

10

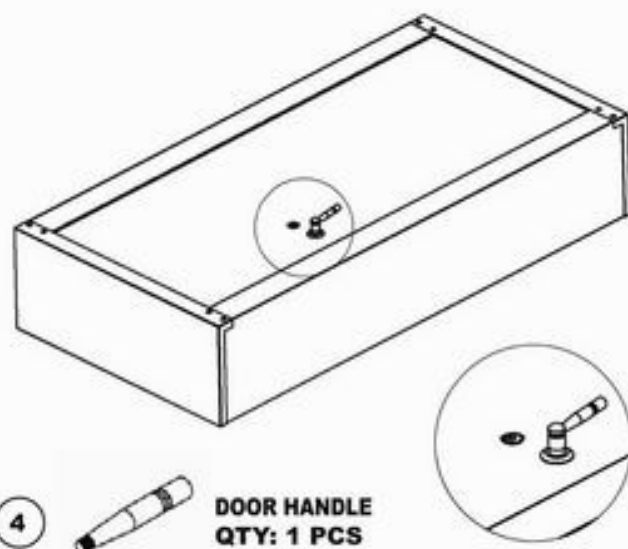


4

DOOR HANDLE
QTY: 1 PCS

SCREW LOCK HANDLE INTO DOOR. OPEN AND CLOSE DOOR TO CONFIRM PROPER ALIGNMENT.

STEP

11

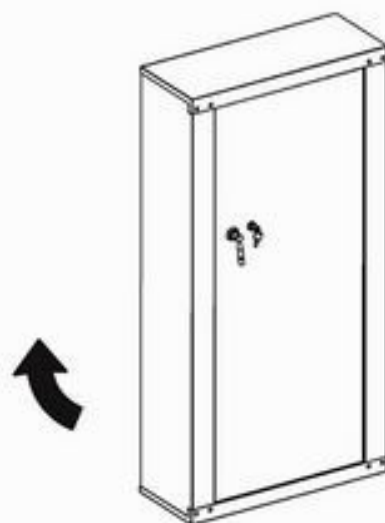

LIFT CABINET TO VERTICAL POSITION.


#910 CLASSIC 10 GUN CABINET ASSEMBLY INSTRUCTIONS

American
Furniture Classics
A division of Dawson Heritage Furniture

STEP 12




8
M6X8 RND
QTY: 4 SETS

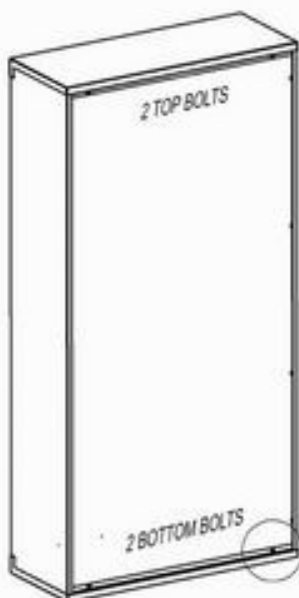

INSERT 4 - M6X8 RND BOLTS THROUGH BACK AND FULLY TIGHTEN WASHER & ROUND HEADED LOCK NUTS FROM INSIDE USING M6 WRENCH.

STEP 13

G ADJUSTABLE SHELF
QTY: 1 PC

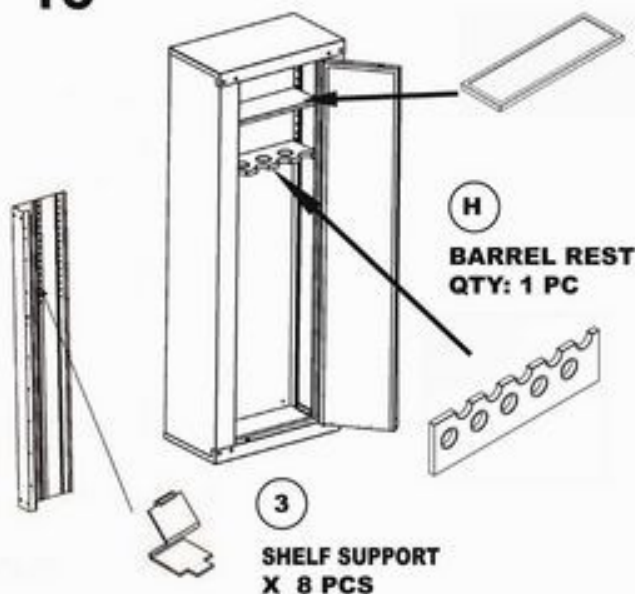


H
BARREL REST
QTY: 1 PC

3
SHELF SUPPORT
X 8 PCS

INSERT METAL STORAGE SHELF AND BARREL REST IN THE CABINET USING SHELF SUPPORTS IN THE DESIRED LOCATION.

STEP 14

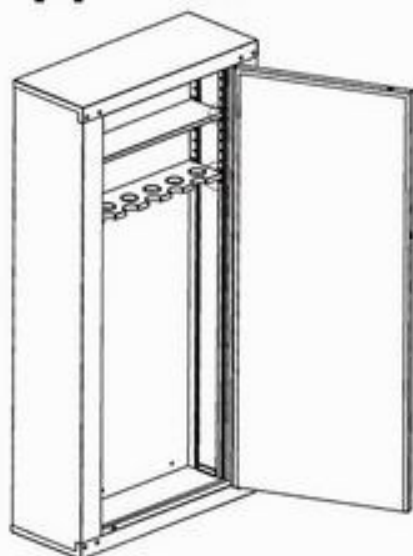

1
SHELF LOCK
QTY: 8 PCS



INSERT PLASTIC SAFETY CLIP ABOVE ALL SHELVES AND BARREL RESTS.

Customer Service

• Toll Free 888-673-9080

• Fax 417-673-9081

• E-mail

service@americanfurnitureclassics.com