


Assembly Instructions

CM4108E

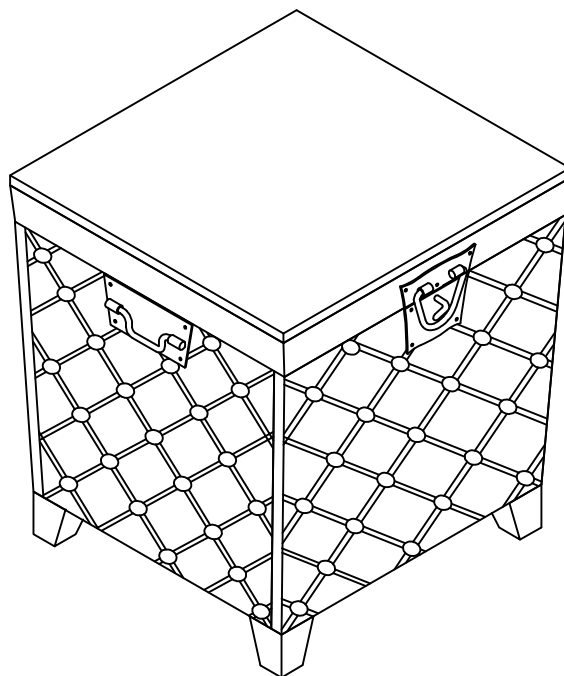

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.


EASY




DIFFICULT

Tools Required For Assembly:

Allen Wrench



(Included)

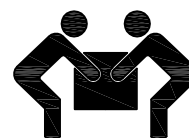


2 PERSONS RECOMMENDED

ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

BASIC ASSEMBLY TECHNIQUES

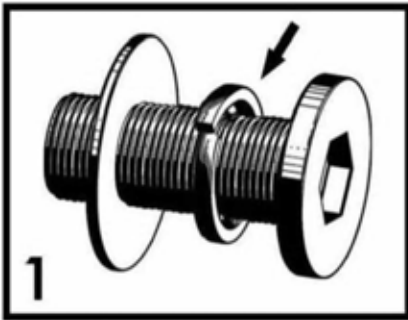


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.




Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.




Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

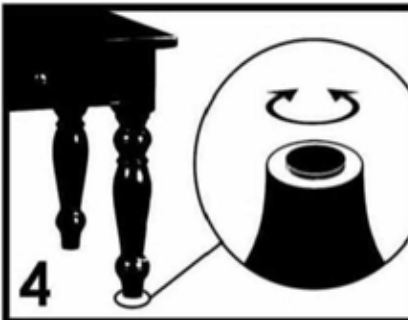

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

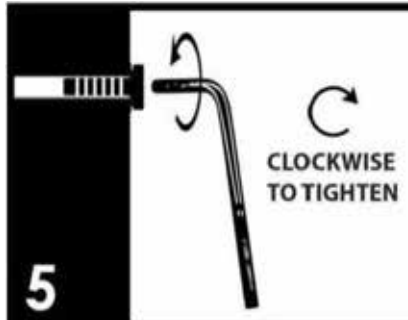


Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

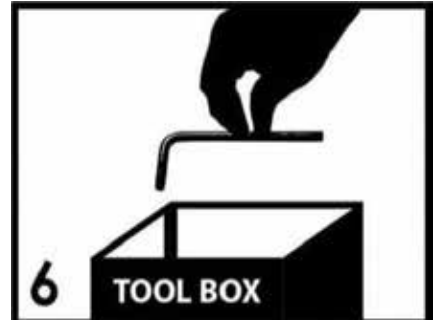

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

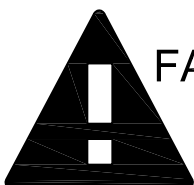


FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.




Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.


Parts List




#1 x 1pc
Top Panel




#2 x 1pc
Front Panel

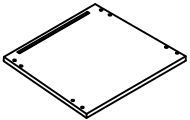

#3 x 1pc
Back Panel

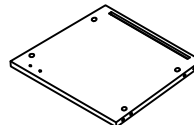


#4 x 1pc
Left Side Panel



#5 x 1pc
Bottom Panel



#6 x 4pcs
Leg



#7 x 1pc
Right Side Panel




Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

Hardware List



#A x 8pcs
Cam bolts




#H x 8pcs
Bolt $\frac{1}{4}$ "x2-3/4"



#B x 8pcs
Cam lock



#I x 10pcs
Adhesive Pad



#C x 1pc
Left Support



#J x 1pc
Handle-A



#D x 1pc
Right Support



#K x 1pc
Handle-B




#E x 35pcs
Screw 1/8"x5/8"



#L x 1pc
Allen Wrench M4



#F x 2pcs
Hinge

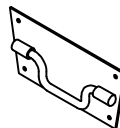

#M x 2pcs
Handle




#Gx 8pcs
Wood Dowel




#1

#E x 3pcs
#J x 1pc

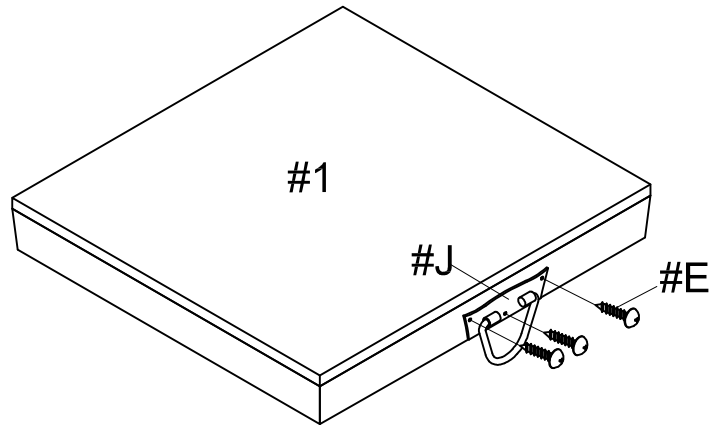

#2

#E x 12pcs
#K x 1pc
#M x 2pcs

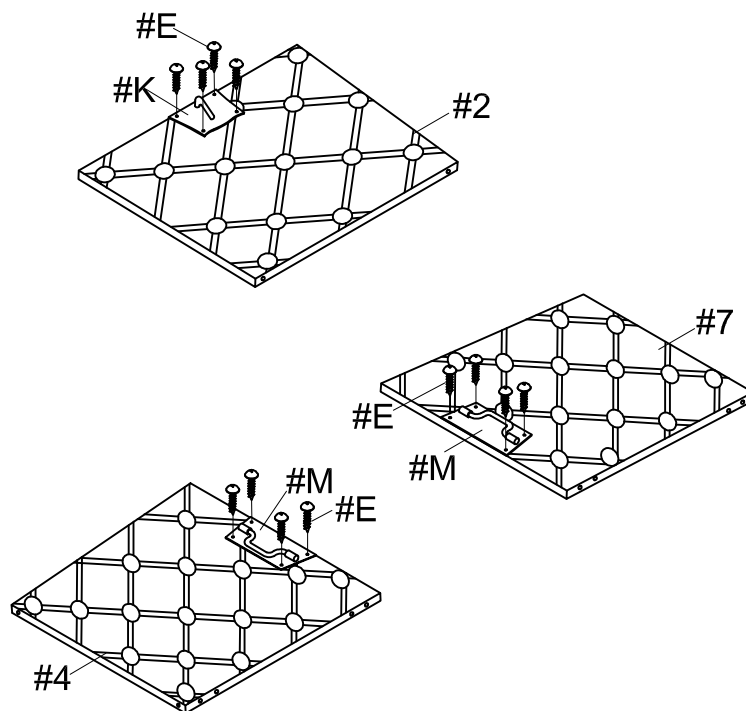




Note: Right and left are determined by facing the FRONT in its upright position.


#A x 8pcs
#B x 8pcs
#G x 8pcs

- I. Insert cam bolts (#A) and wood dowels (#G) into the pre-drilled holes on the back panel (#3) and front panel (#2). Secure cam bolts (#A) using a Phillips screwdriver.
- II. Carefully align the pre-drilled holes on the side panels (#4,7) with the cam bolts (#A) and wood dowels (#G) located on the front and back panel. Note, during this process also insert the bottom panel (#5) into the designated slots.
- III. Lastly, insert the cam lock (#B) into the large pre-drilled holes located on the side panels (#4,7) and lock by using a Phillips screwdriver.

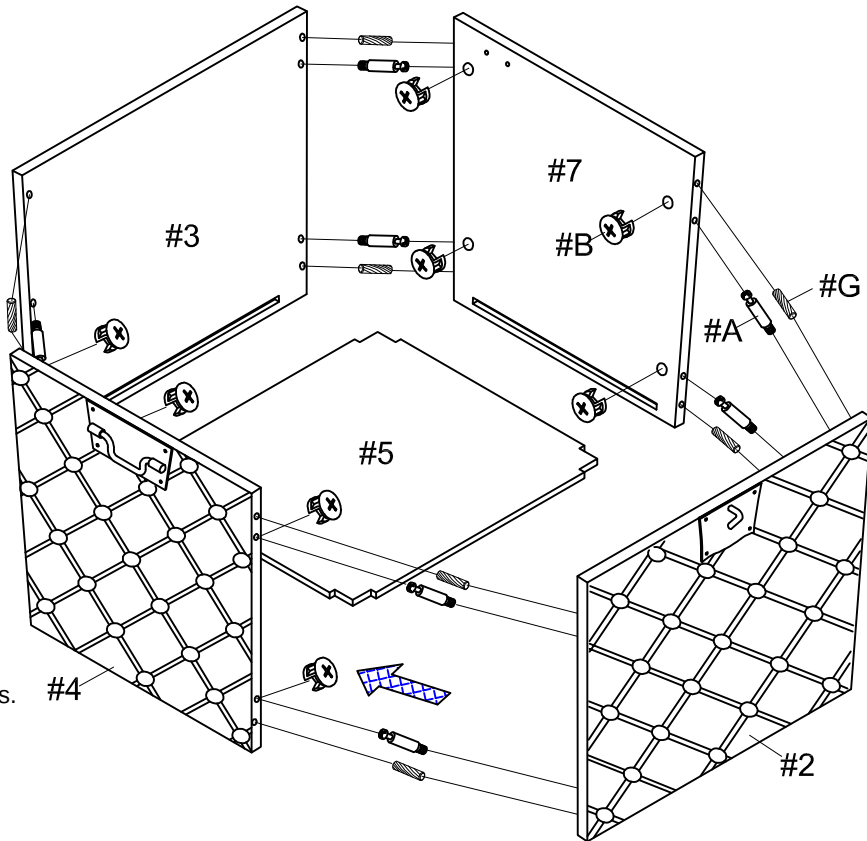

Align the legs to the corners and insert bolt (#H). Secure using the Allen wrench (#L).


#H x 8pcs

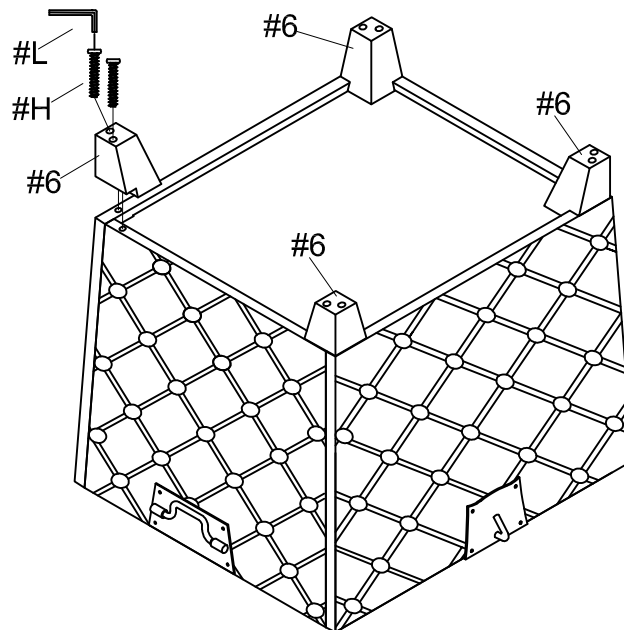




Align the hinges (#F) to the pre-drilled holes located on the back panel (#3) and insert screw (#E). Secure using a Phillips screwdriver.

#F x 2pcs
#E x 12pcs

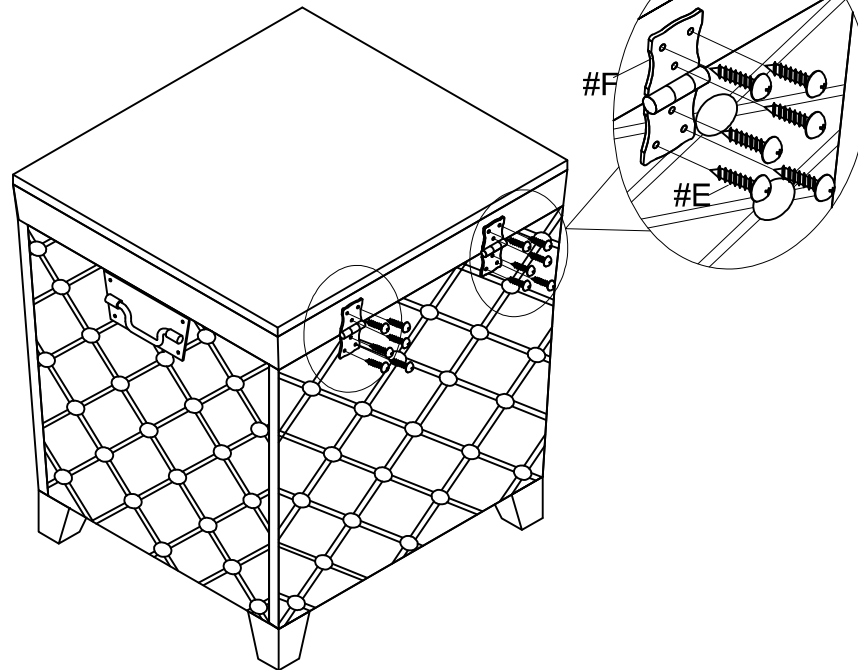

Align the left support (#C) and right support (#D) to the corners and insert screw (#E). Secure using a Phillips screwdriver.

#D x 2pcs
#E x 8pcs

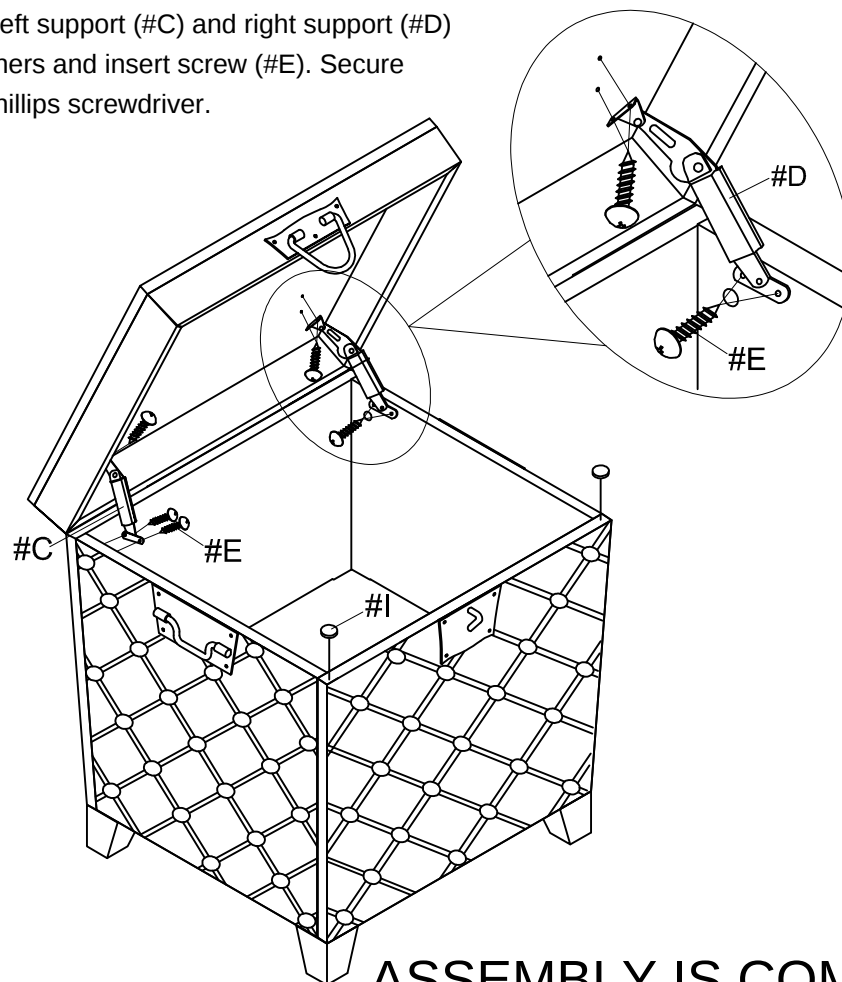

ASSEMBLY IS COMPLETED