


Loft Bed

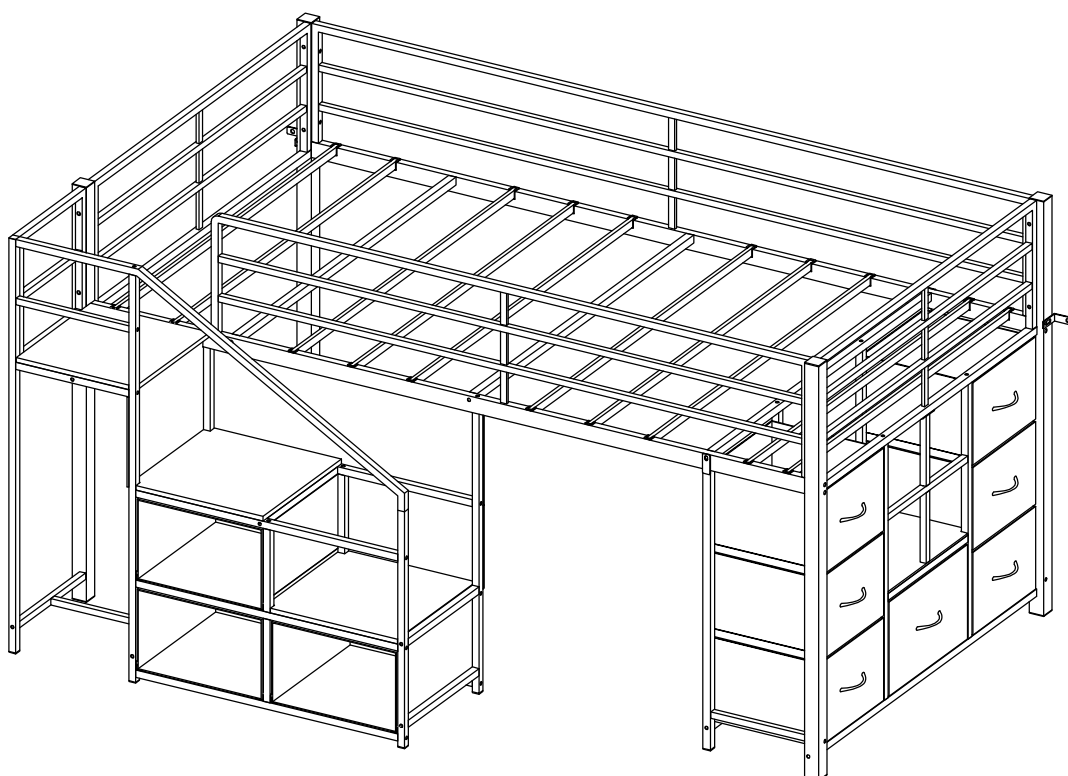


Please install the anti-tipping device
correctly according to the instructions


Package Contents

Plates and iron components	Assembly tool kit	Instruction manual
----------------------------	-------------------	--------------------


Precautions

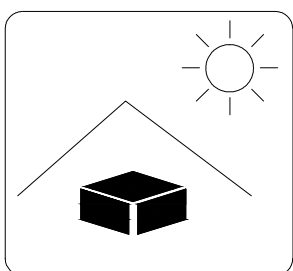


1.Avoid long-term direct sunlight exposure

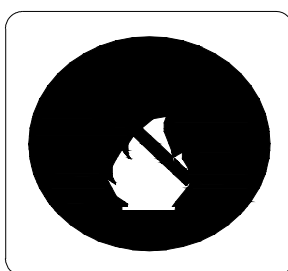


2.Stay away from fire

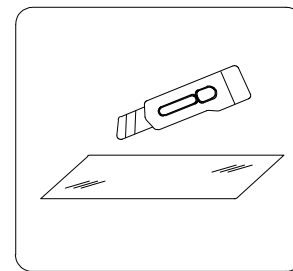


3.Keep away from sharp objects

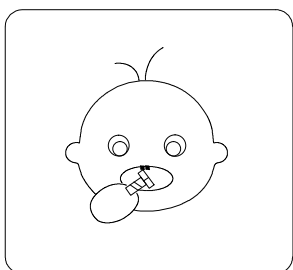


4.Keep infants/children away from assembly parts to avoid choking and suffocation.

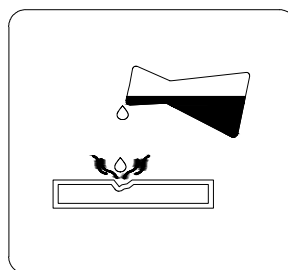


5.Keep away from corrosive substances

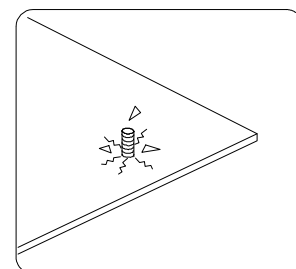


6.Please use the correct screws, otherwise the plate will be damaged.

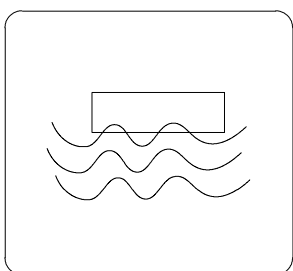

7.Prevent objects from being damaged by immersion in water

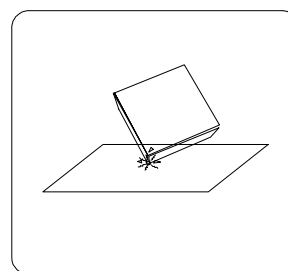

8.Prevent object collision and damage

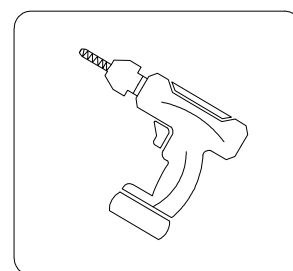


9.An electric drill is recommended for installation


Problems You May Encounter

PART	PROBLEM	SOLUTION
Whole Product	Parts are missing, defective or having wrong parts in package.	You can contact us and we will get back to you within 24 hours
	Having issue(s) while reading the instruction or completing the assembly.	Feel free to contact us and we will get back to you within 24 hours.
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.
Product Surface	Board Surface is broken, scratched or lack of some screw holes.	Feel free to contact us and we will get back to you within 24 hours.
	The screw holes on the wooden board and other wooden boards are not aligned.	1.Please tighten the screws on the board by 70 %, do not tighten completely. 2. Adjust the wooden board and board. Until the holes are arranged neatly, then tighten all screws
	Desktop misalignment and unevenness	1.Please tighten the screws connecting the table board to the elevator by 70%, do not tighten them completely. 2.Adjust to a flat and aligned desktop, then tighten the screws. 3.If your problem still can't be solved, please feel free to contact us.
Metal accessories	Metal accessories are damaged, rusted, bent, and broken.	Feel free to contact us and we will get back to you within 24 hours.
	unstable after being assembled.	1.Check if the screws are tightened. 2.Read throughout the manual, check if there are any parts installed incorrectly or some parts are missed to be installed. 3.If the problem still can't be solved, please feel free to contact us.
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.

PARTS LIST




1
x1



2
x1



3
x1



4
x1



5
x1



6
x1



7
x1



8
x1




9
x2



10
x1




11
x10

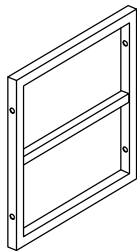

12
x1



13
x1



14
x1




15
x3



16
x1




17
x2




18
x1




19
x1



20
x1




21
x1



22
x1



23
x1



24
x2




25
x2



26
x2



27
x1



28
x1



29
x1



30
x1

PARTS LIST



31
x1



32
x2



33
x2




34
x2



35
x2




36
x2




37
x1




38
x1




40
x2

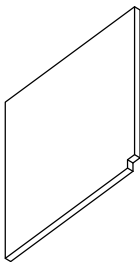


41
x1



42
x1

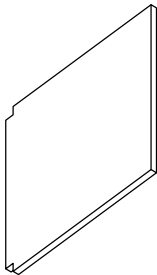


43
x2

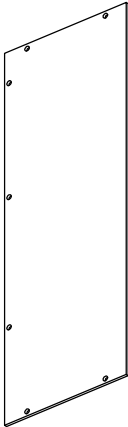

44
x1



45
x1

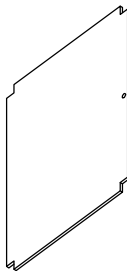

46
x1

HARDWARE LIST



A

M6*10
x20+2



B

M6*25
x12+1




C

M6*30
x6



D

M6*40
x69+6



E

M6*60
x8



F

M8*60
x8



G

M6*40
x4



H

4*12
x14+1




I

M6*17
x2



J

Ø18*8
x8



K

x3



L

x3




M

x7




N

x7

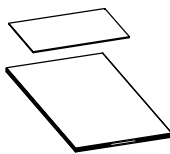


O

x3



P

x1



Q

x6




R

x7




S

x2



T

x2

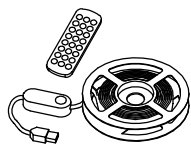


U

x1



V

x4





W

x1



X

M4
x2

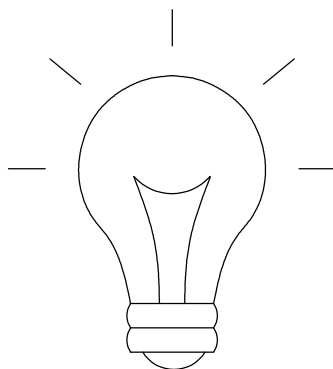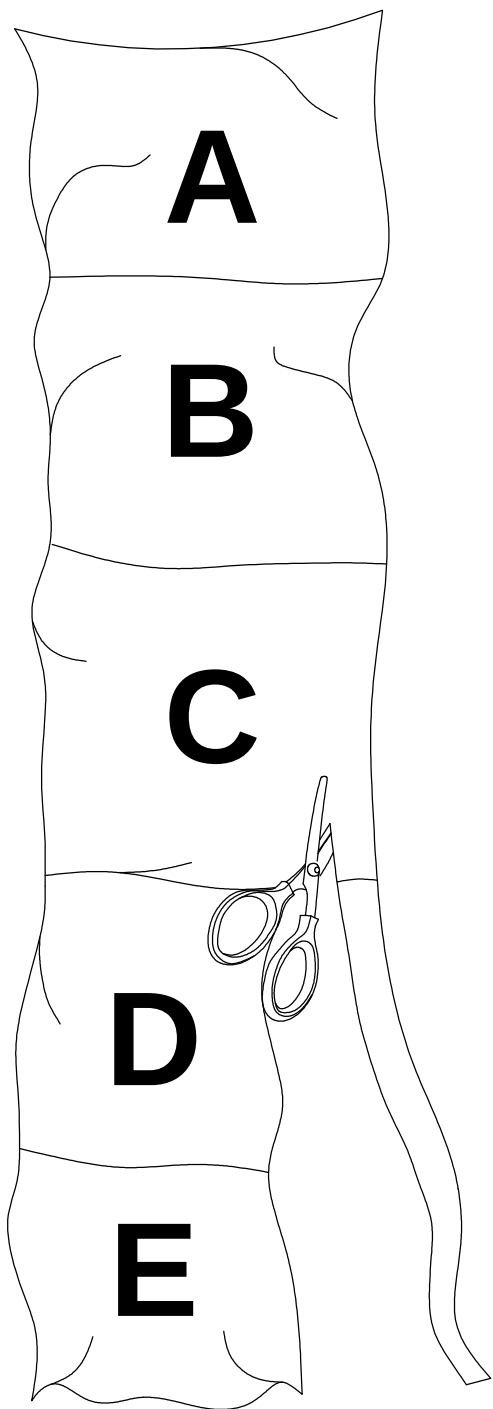


friendly reminder

To avoid errors and confusion during the installation of accessories, use the type and quantity of hardware accessories according to the installation procedure described in the instructions. First, unroll the accessories bag and lay out the hardware accessories, cut holes in the side, and take out the hardware accessories


Note:

1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

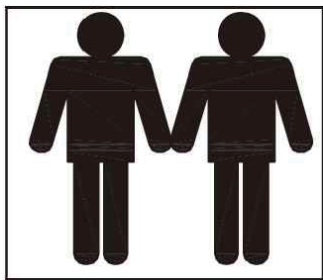

**Before starting the assembly,
you must read the whole manual
and follow the instructions**


**It needs at least
two people to install.**

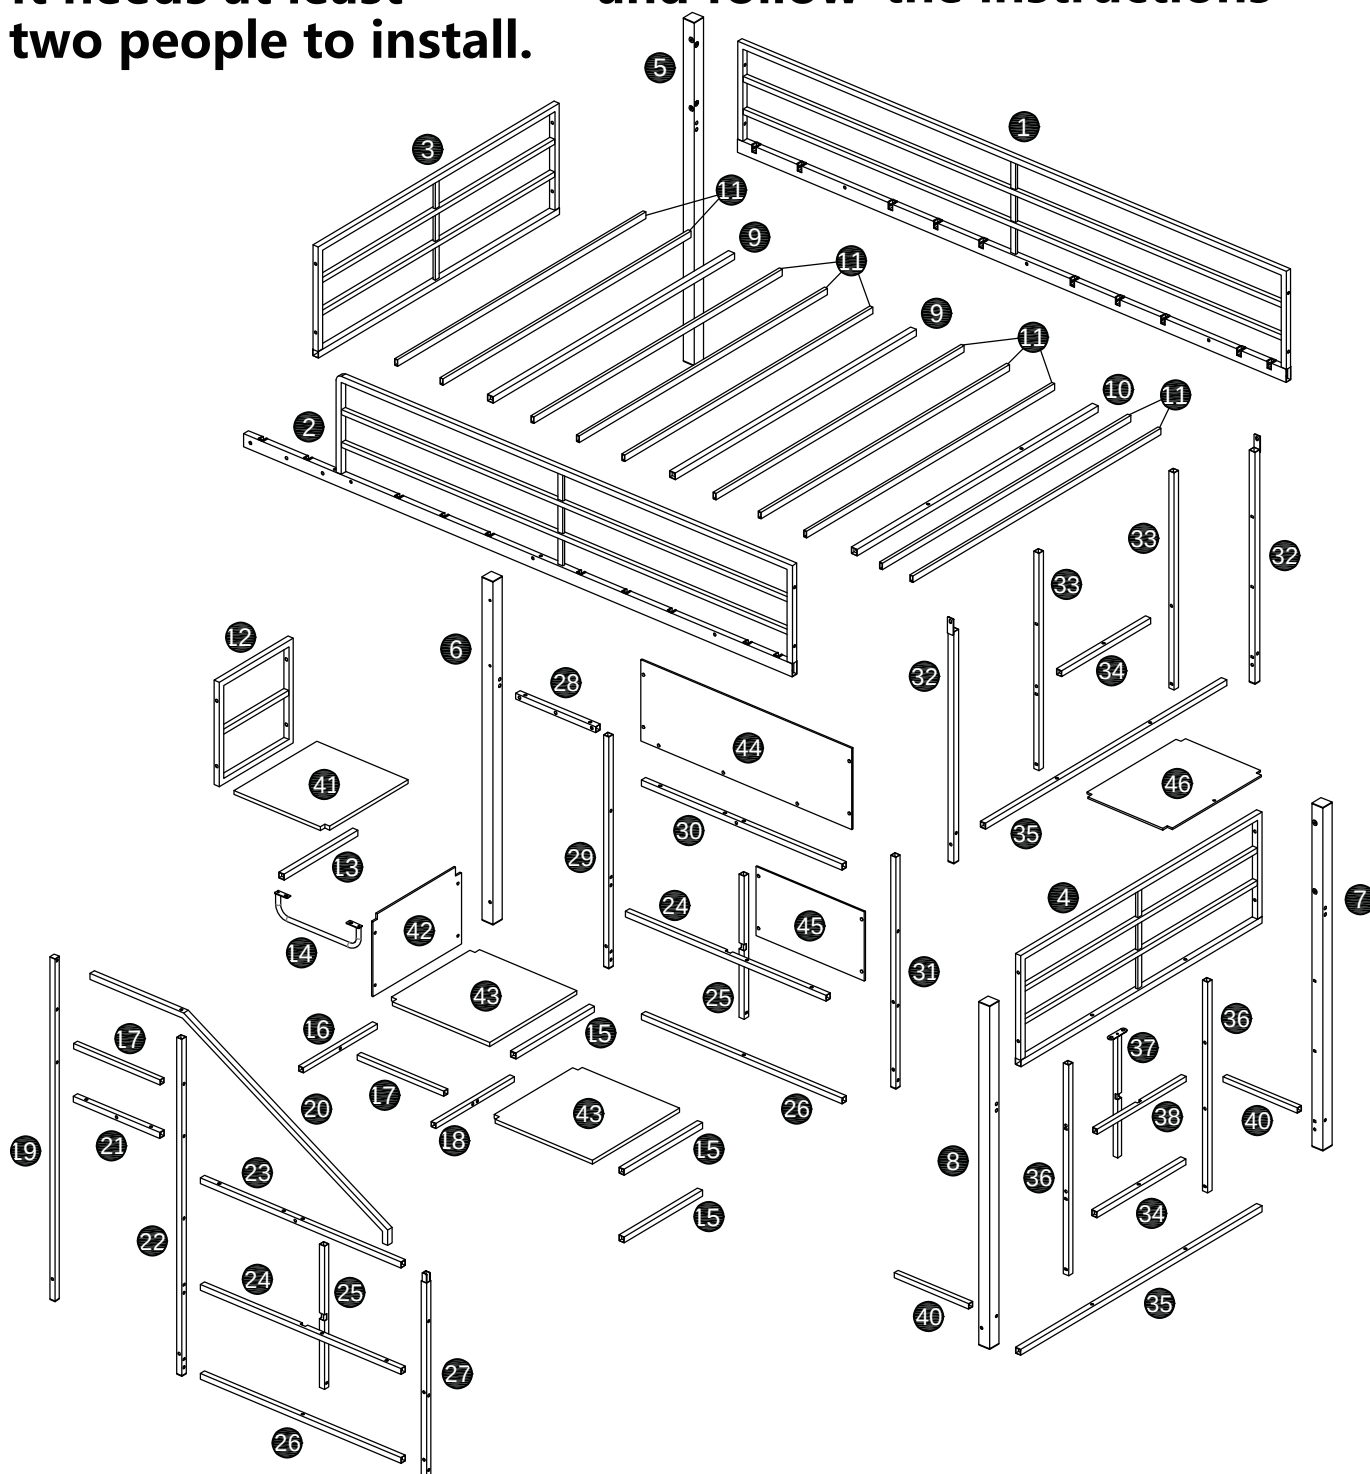

1



Be careful not to overtighten the screws.

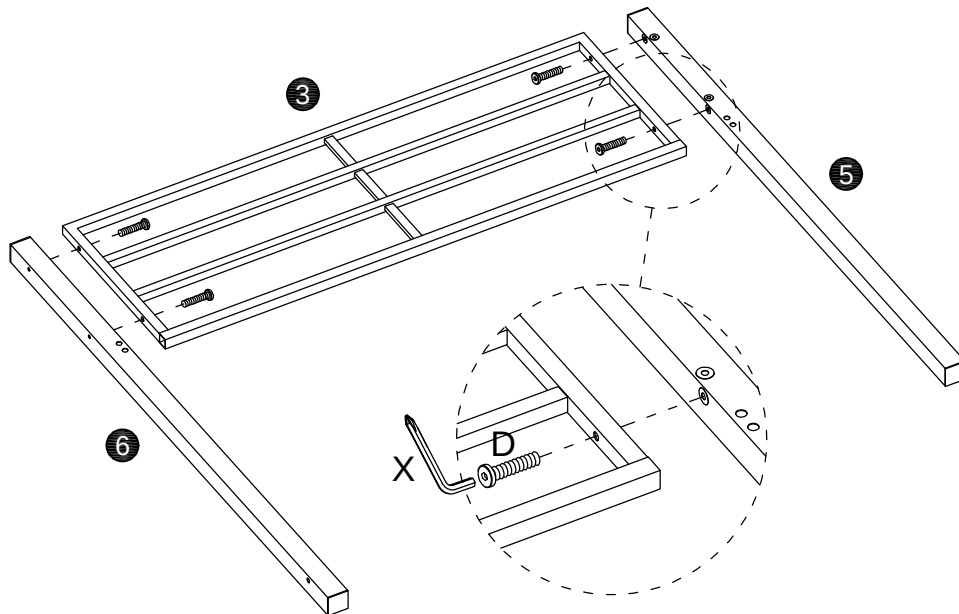


D M6*40

 x4

2



Be careful not to overtighten the screws.

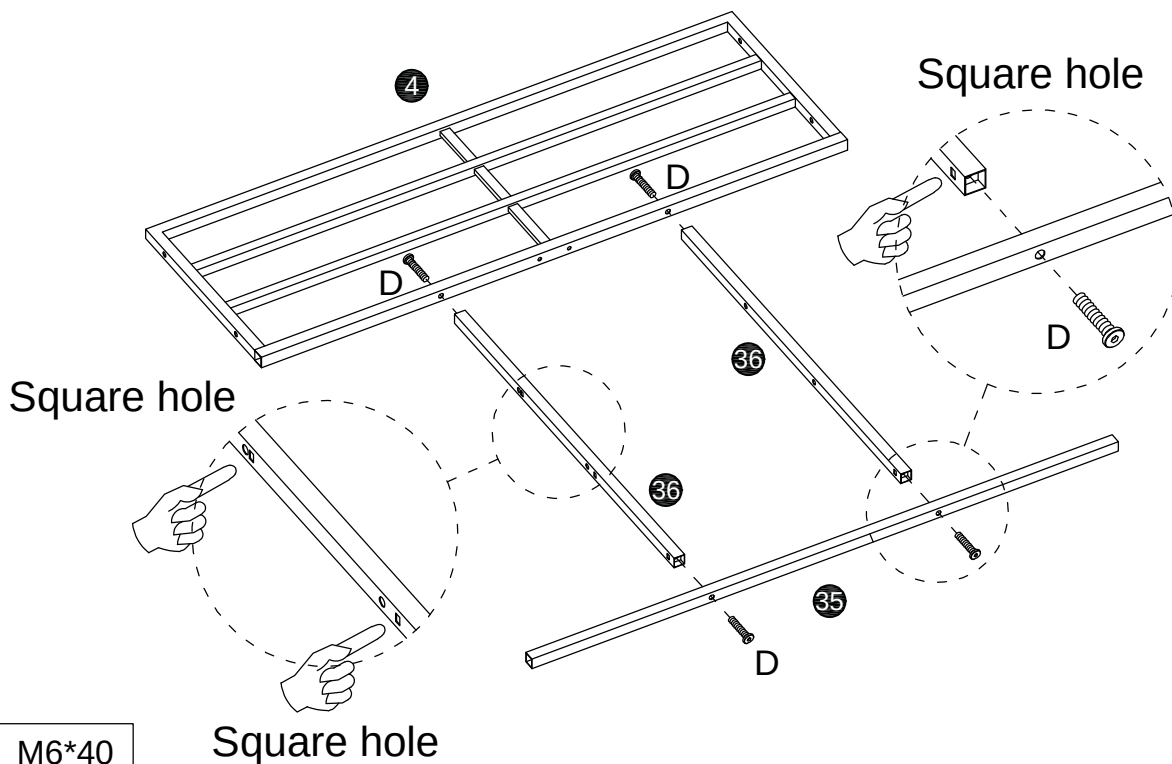


D M6*40

 x4

3



Be careful not to overtighten the screws.

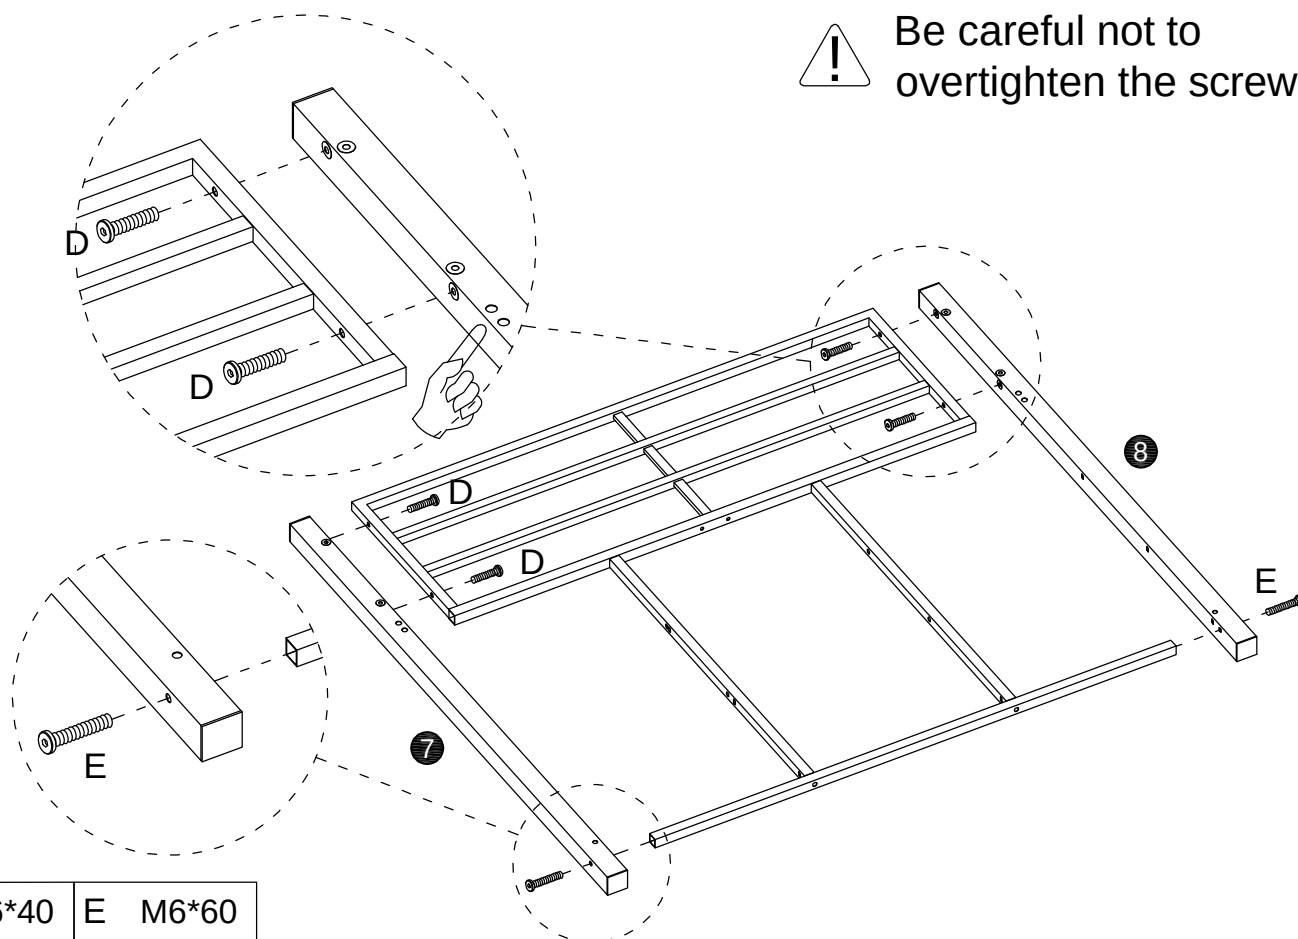


D M6*40	E M6*60
 x4	 x2

4



Be careful not to overtighten the screws.




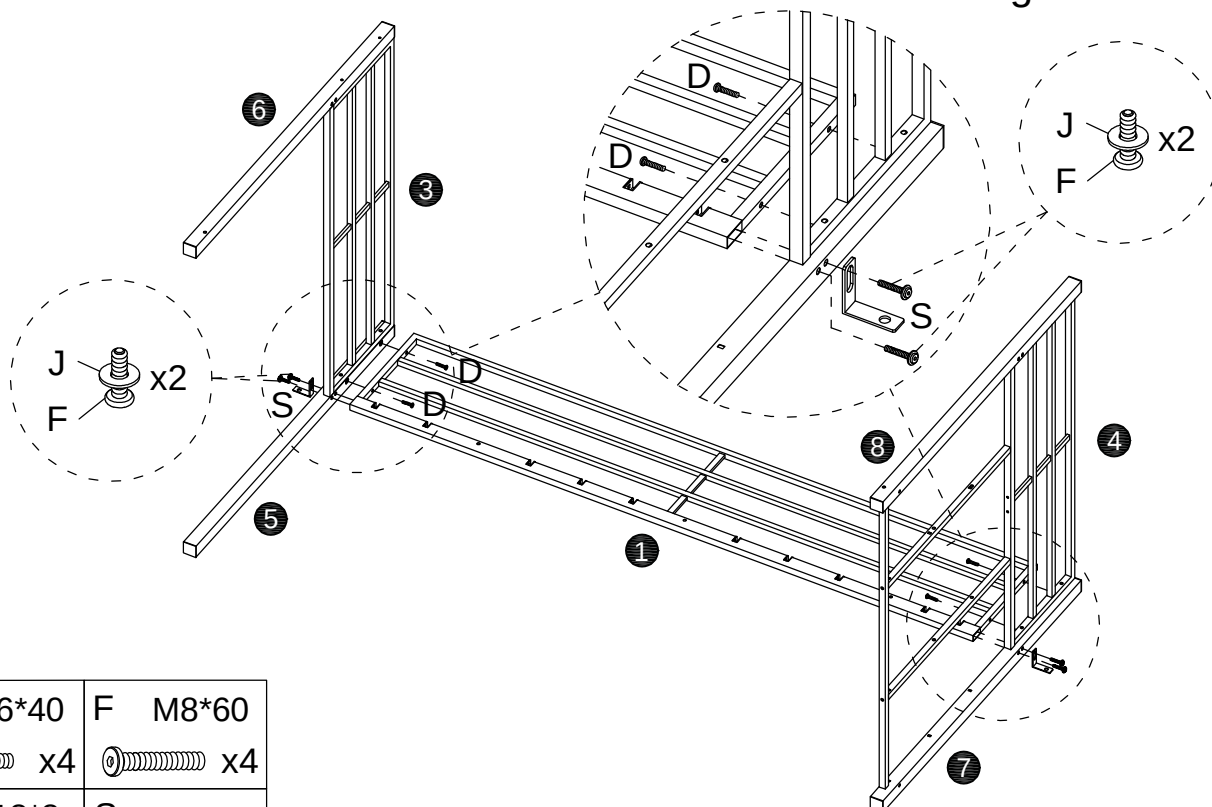


D M6*40	F M8*60
 x4	 x4
J $\phi 18 \times 8$	S
 x4	 x2


5



Be careful not to overtighten the screws.

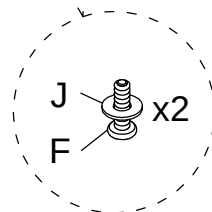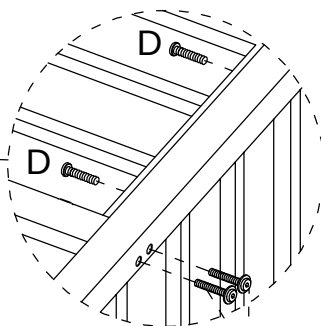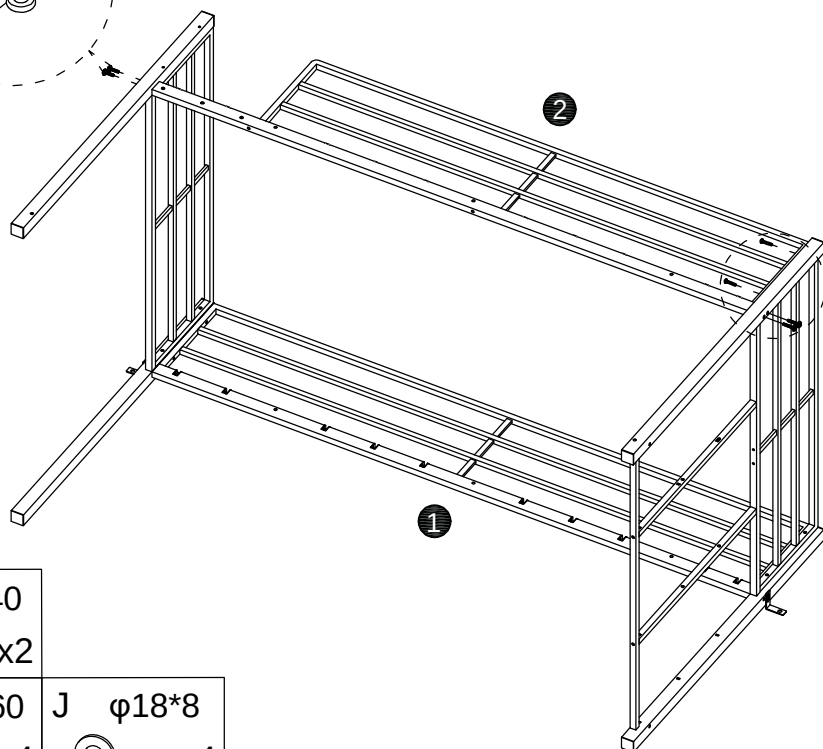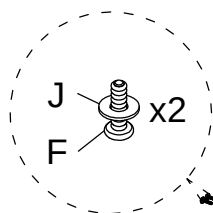


D M6*40



x2

F M8*60 J $\phi 18*8$



x4






x4

6



Be careful not to overtighten the screws.

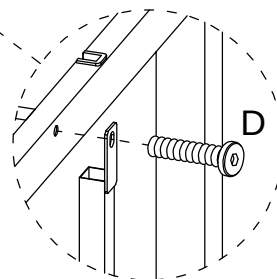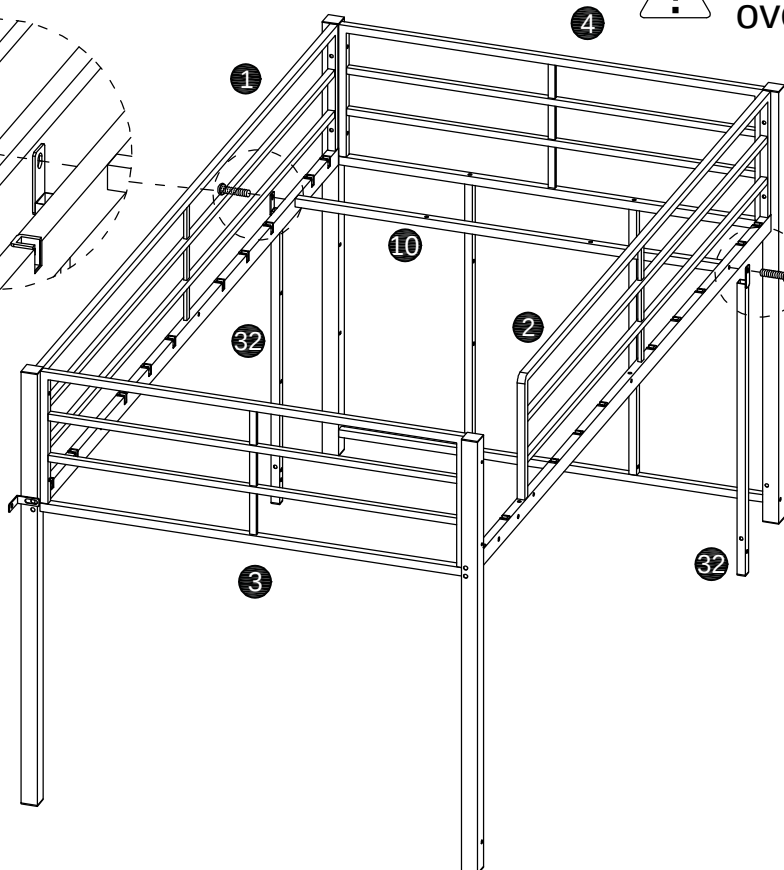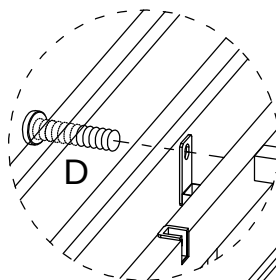

D M6*40




x2

7



Be careful not to overtighten the screws.

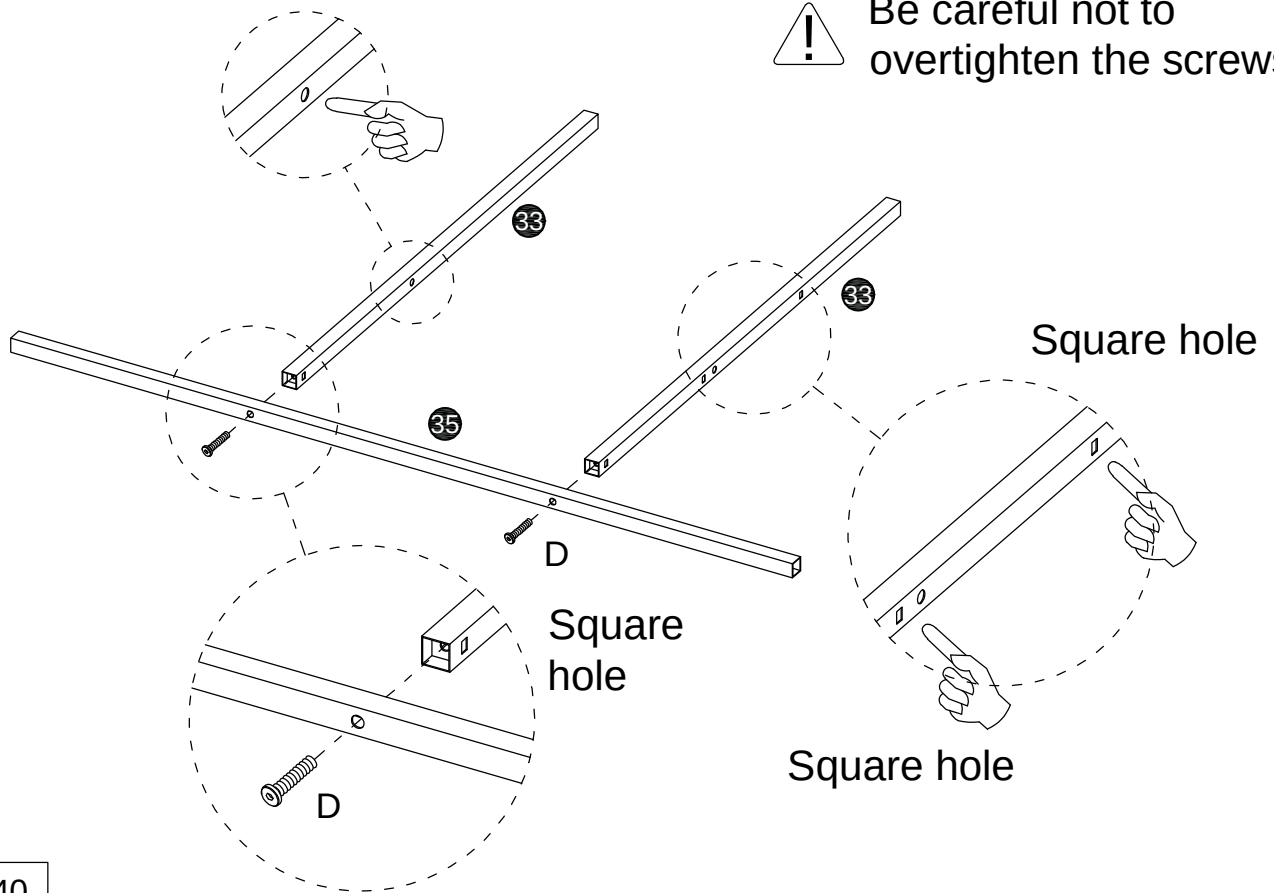


D M6*40
 x2

8



Be careful not to overtighten the screws.

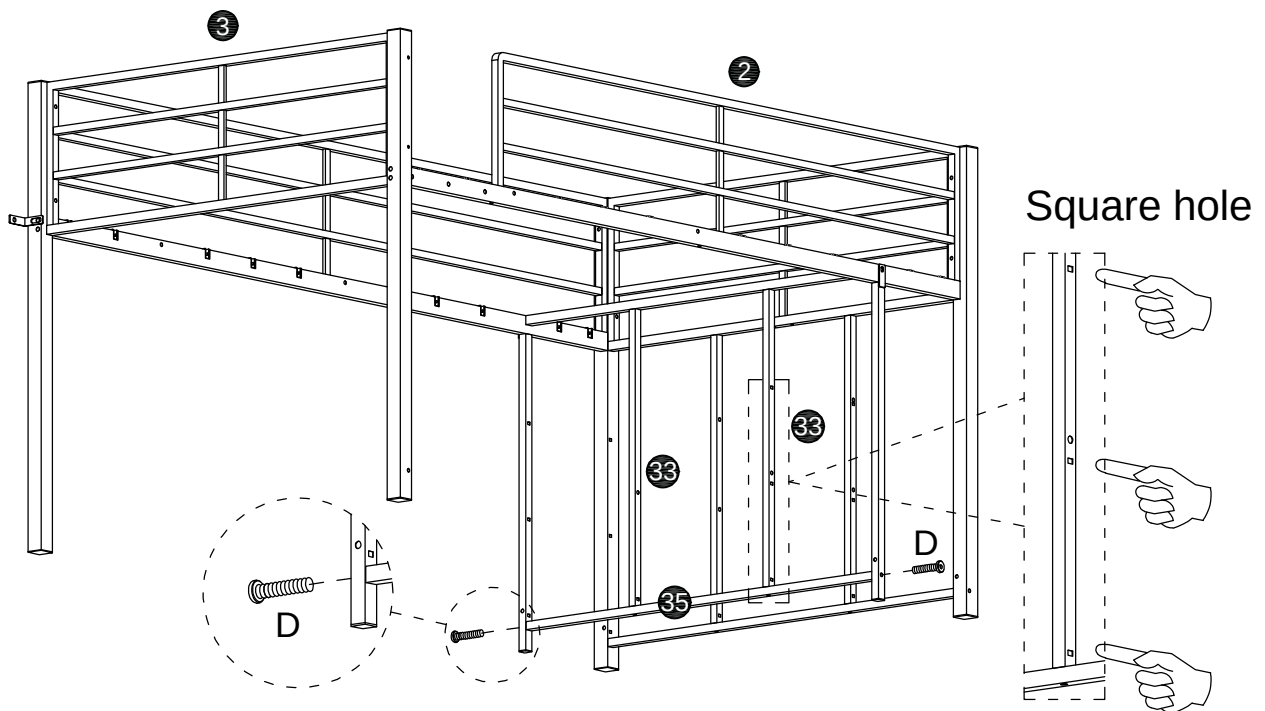


D M6*40
 x2

Please pay attention to the direction of the hole position.

9



Be careful not to overtighten the screws.

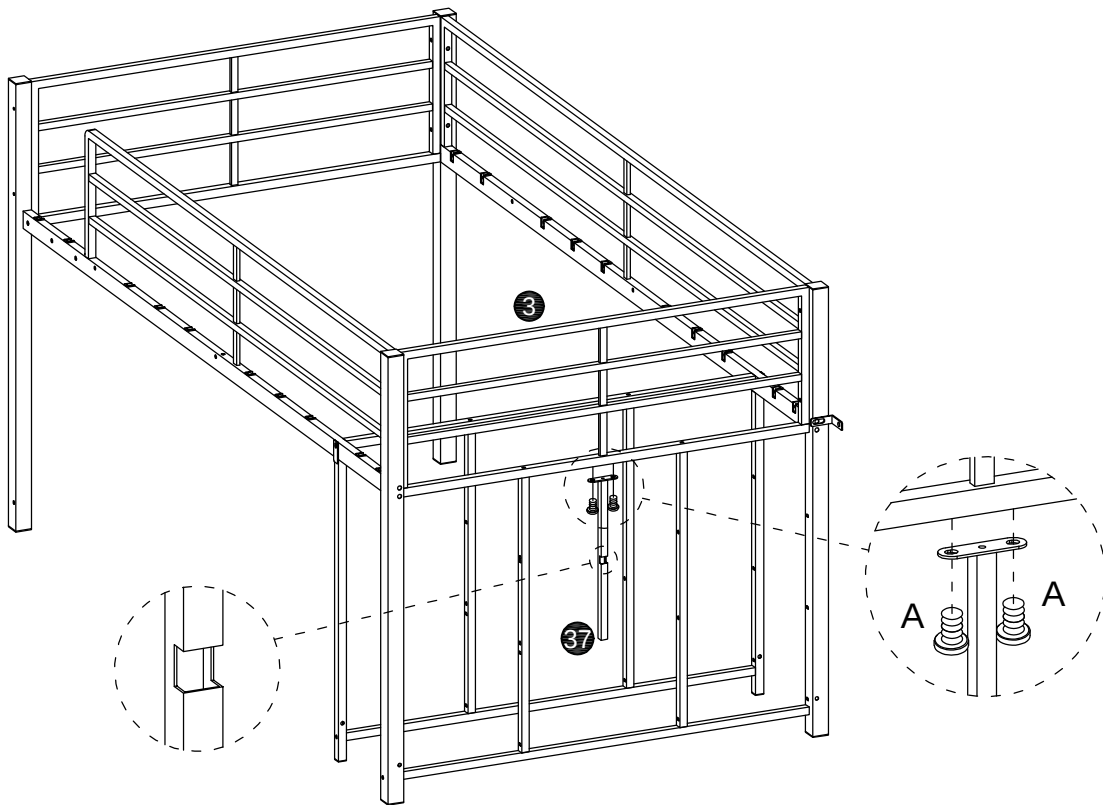


A M6*10
 x2

10



Be careful not to overtighten the screws.

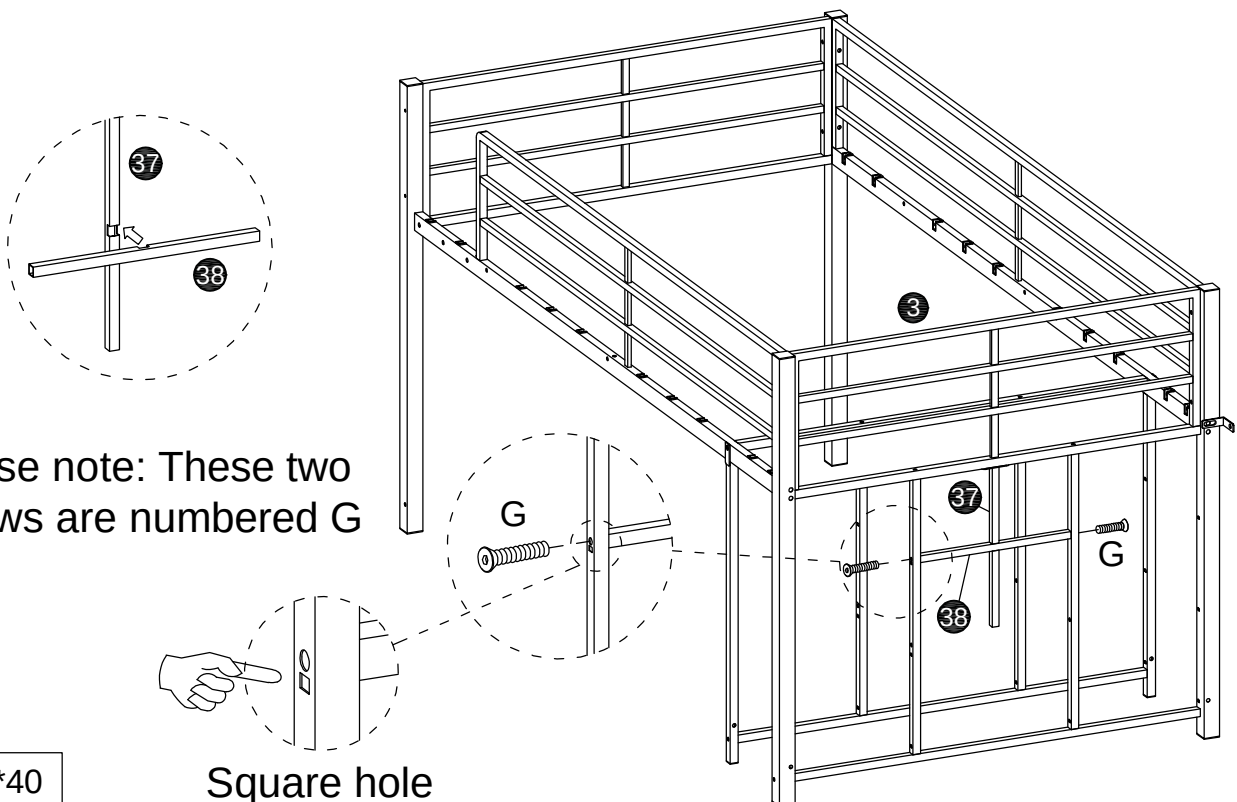

Please note: These two screws are numbered G


G M6*40
 x2

Square hole

11



Be careful not to overtighten the screws.

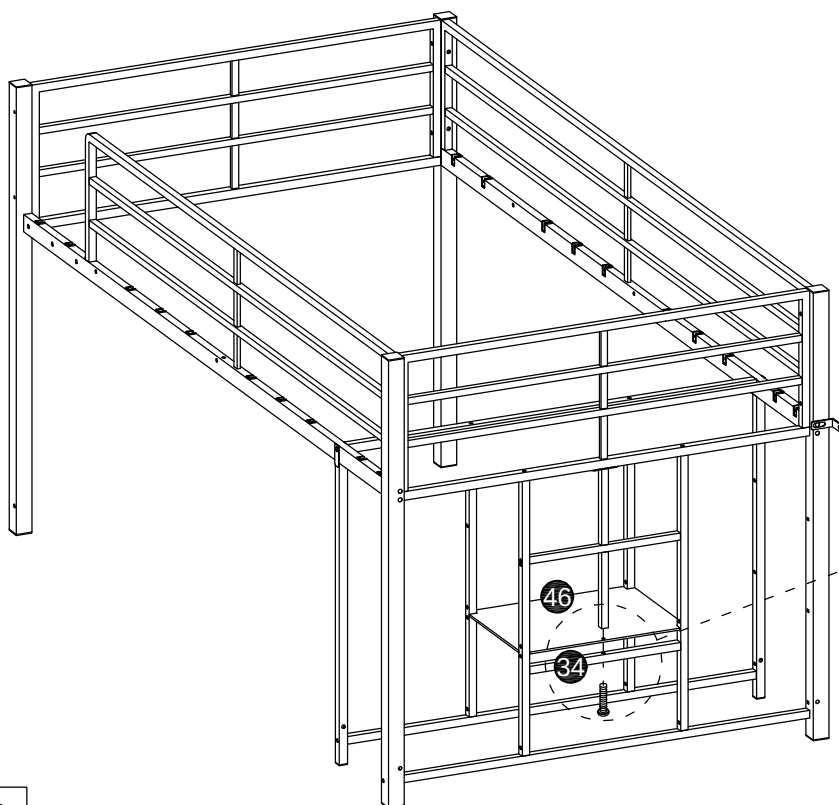


D M6*40
 x1

12




Be careful not to overtighten the screws.


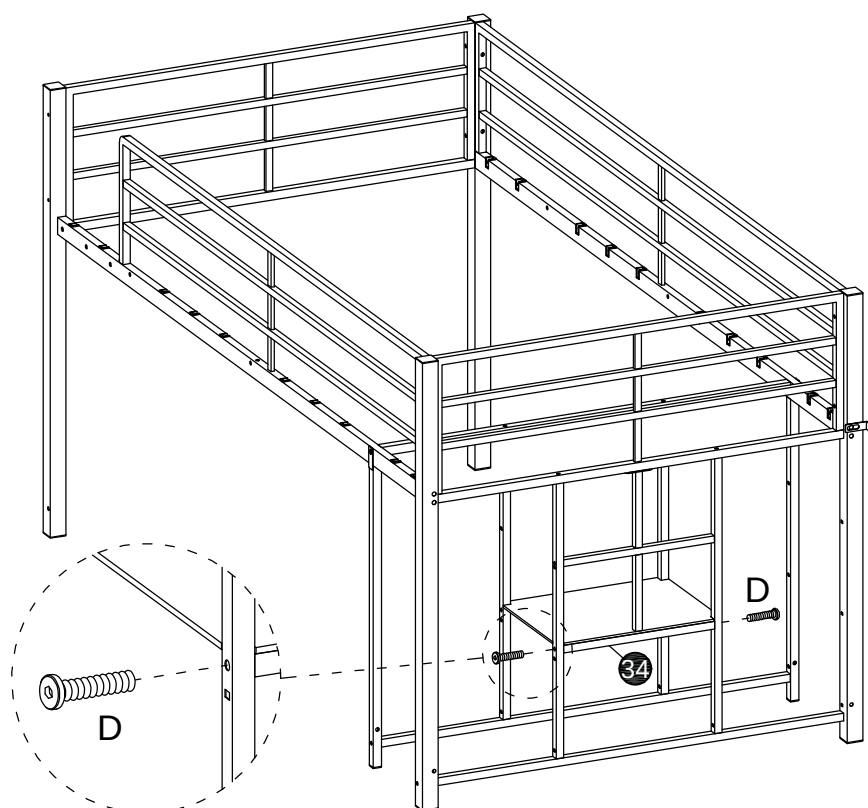


D M6*40
 x2

13

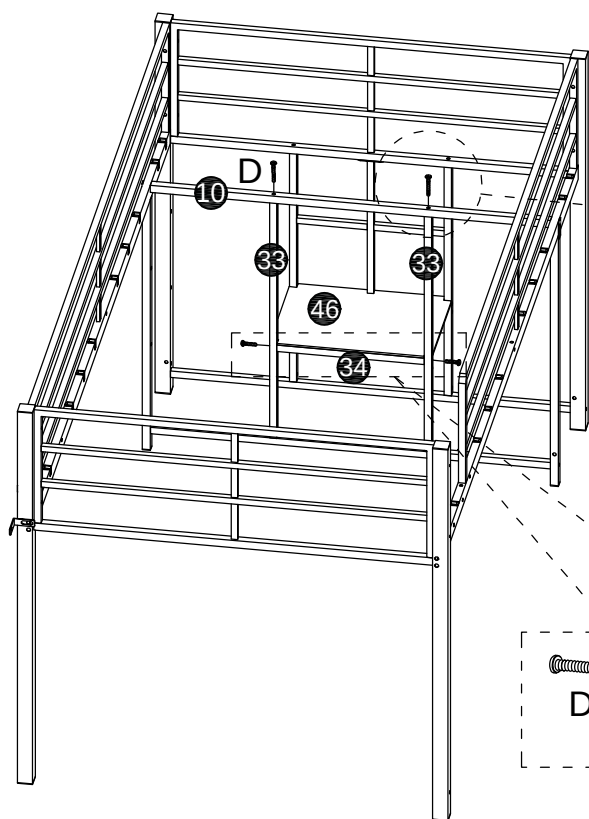


Be careful not to overtighten the screws.

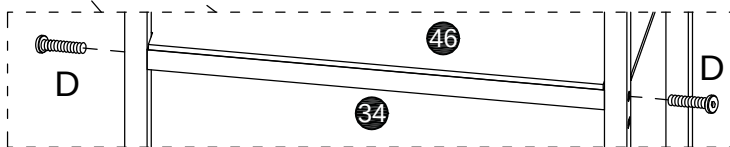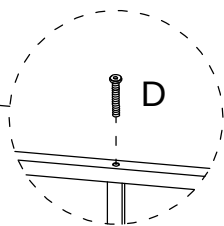



D M6*40

 x4

14

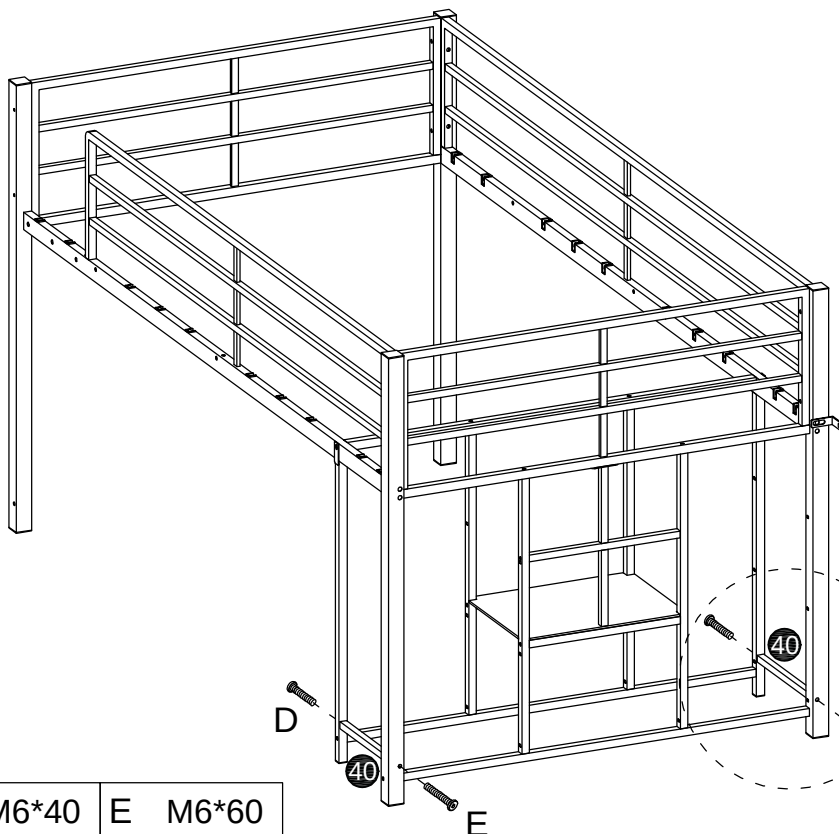

Be careful not to overtighten the screws.

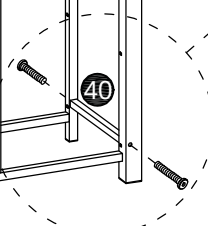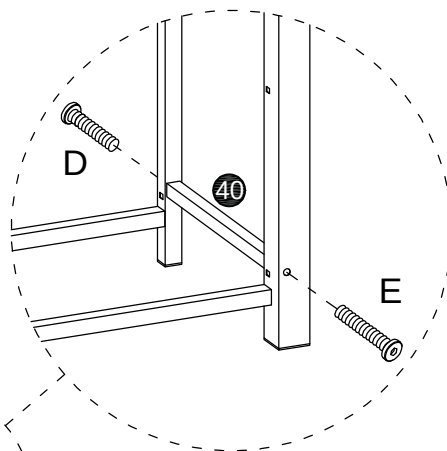

D M6*40

E M6*60


 x2

 x2

15



Be careful not to overtighten the screws.

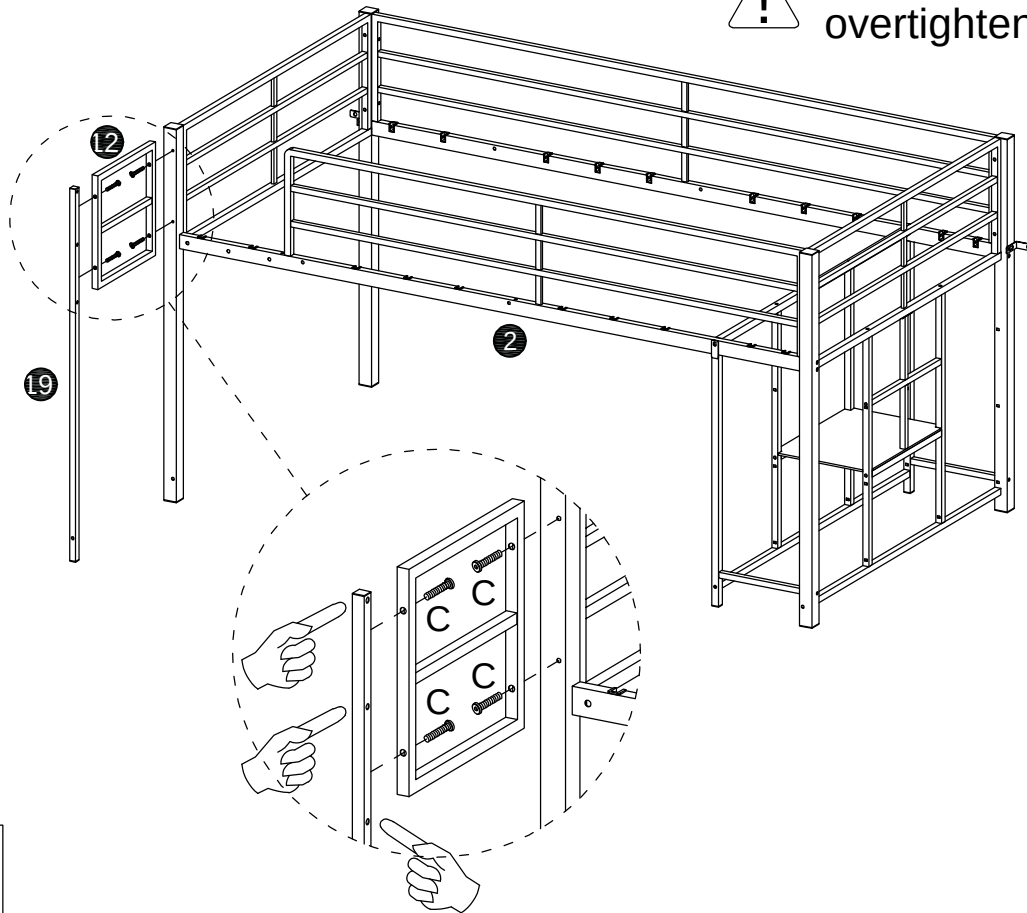


C M6*30
 x4

16




Be careful not to overtighten the screws.

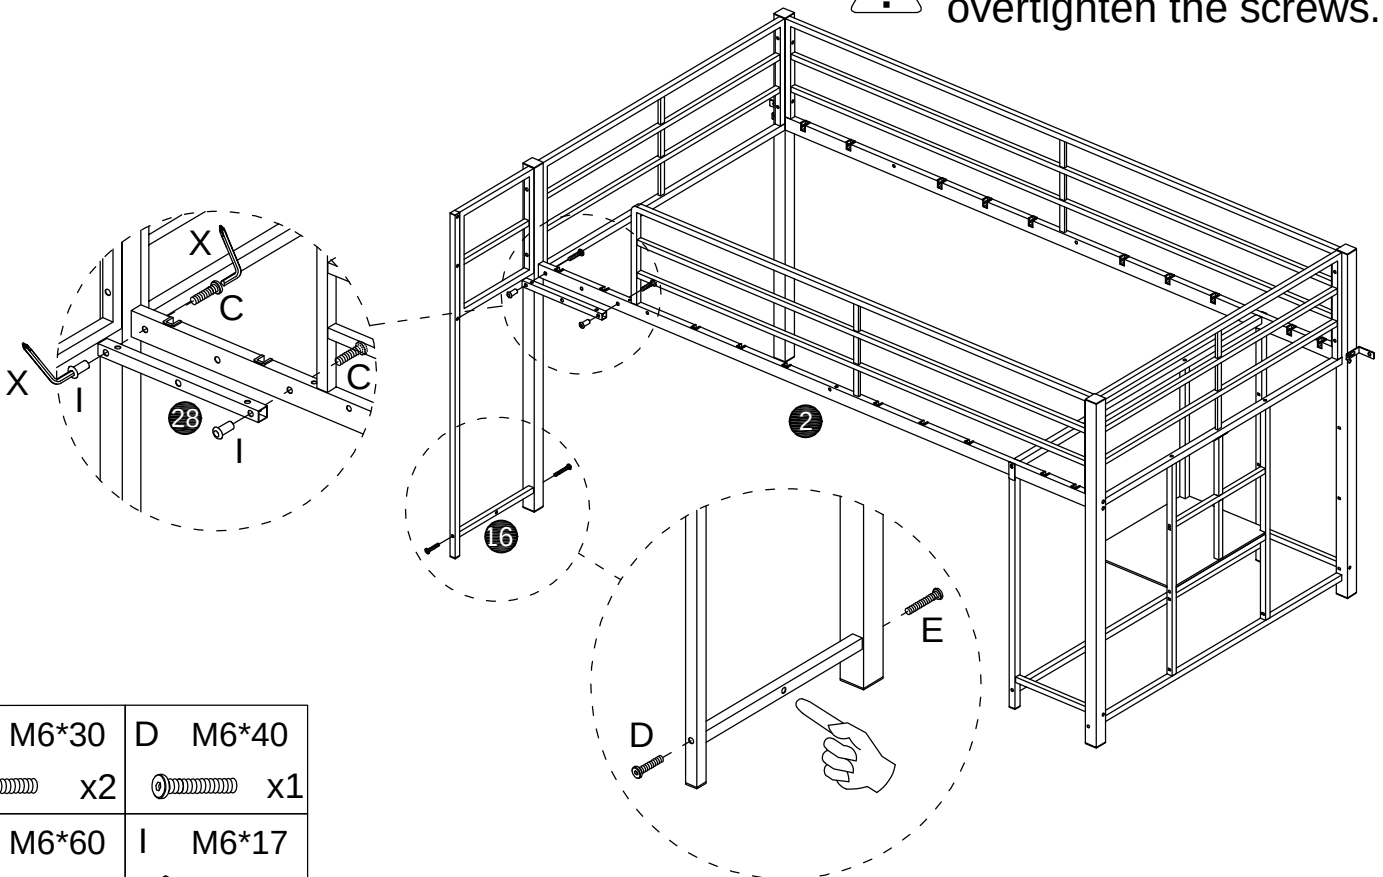

C M6*30  x2	D M6*40  x1
E M6*60  x1	I M6*17  x2

17

Please pay attention to the direction of the hole position.

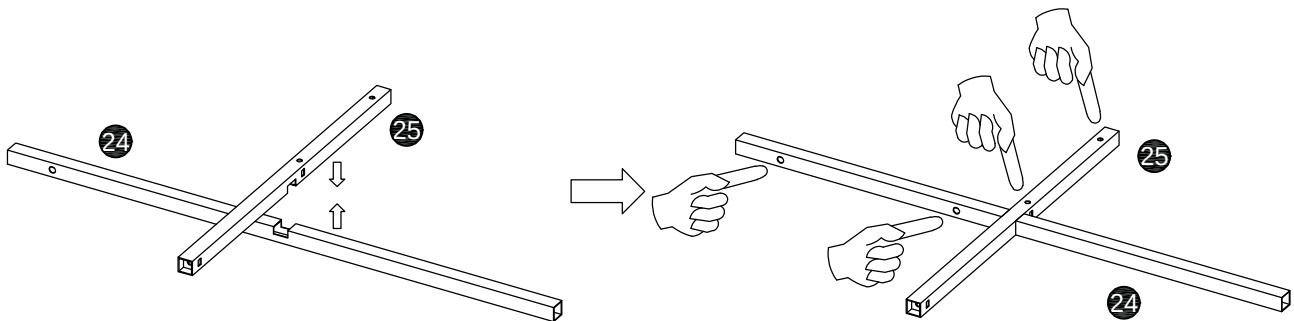


x2


18



Be careful not to overtighten the screws.

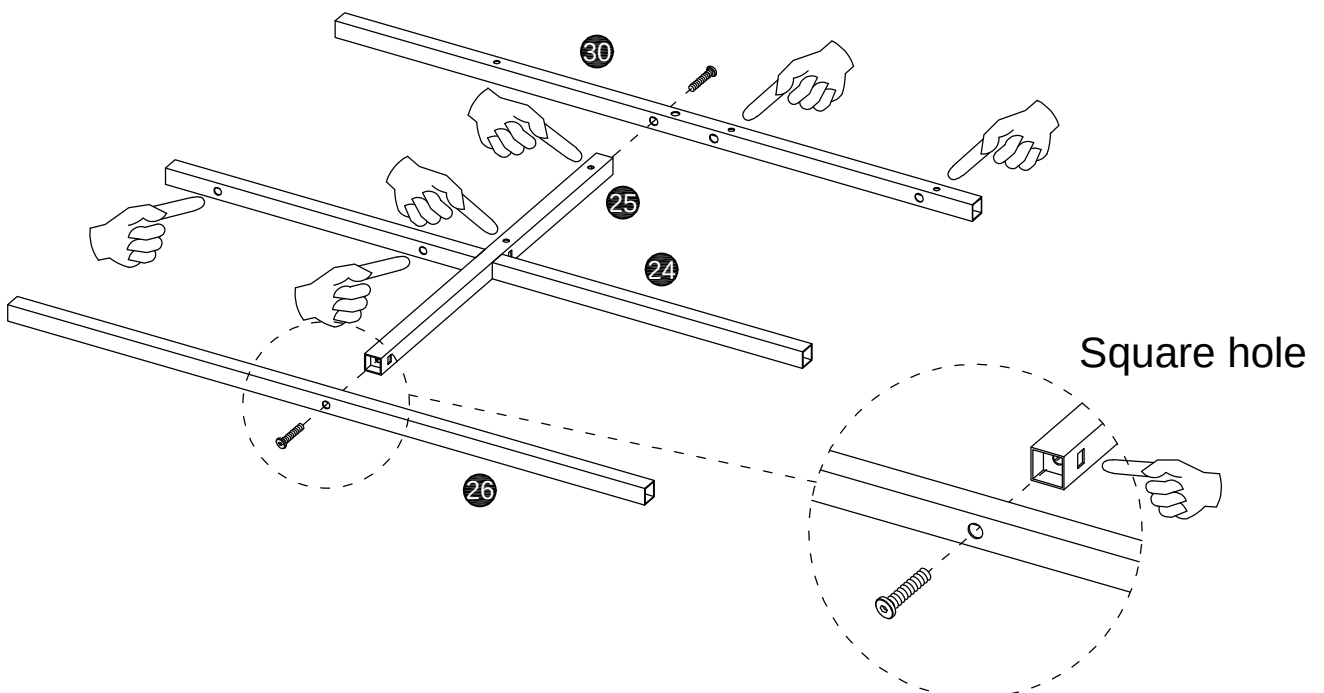


D M6*40



19




Be careful not to overtighten the screws.

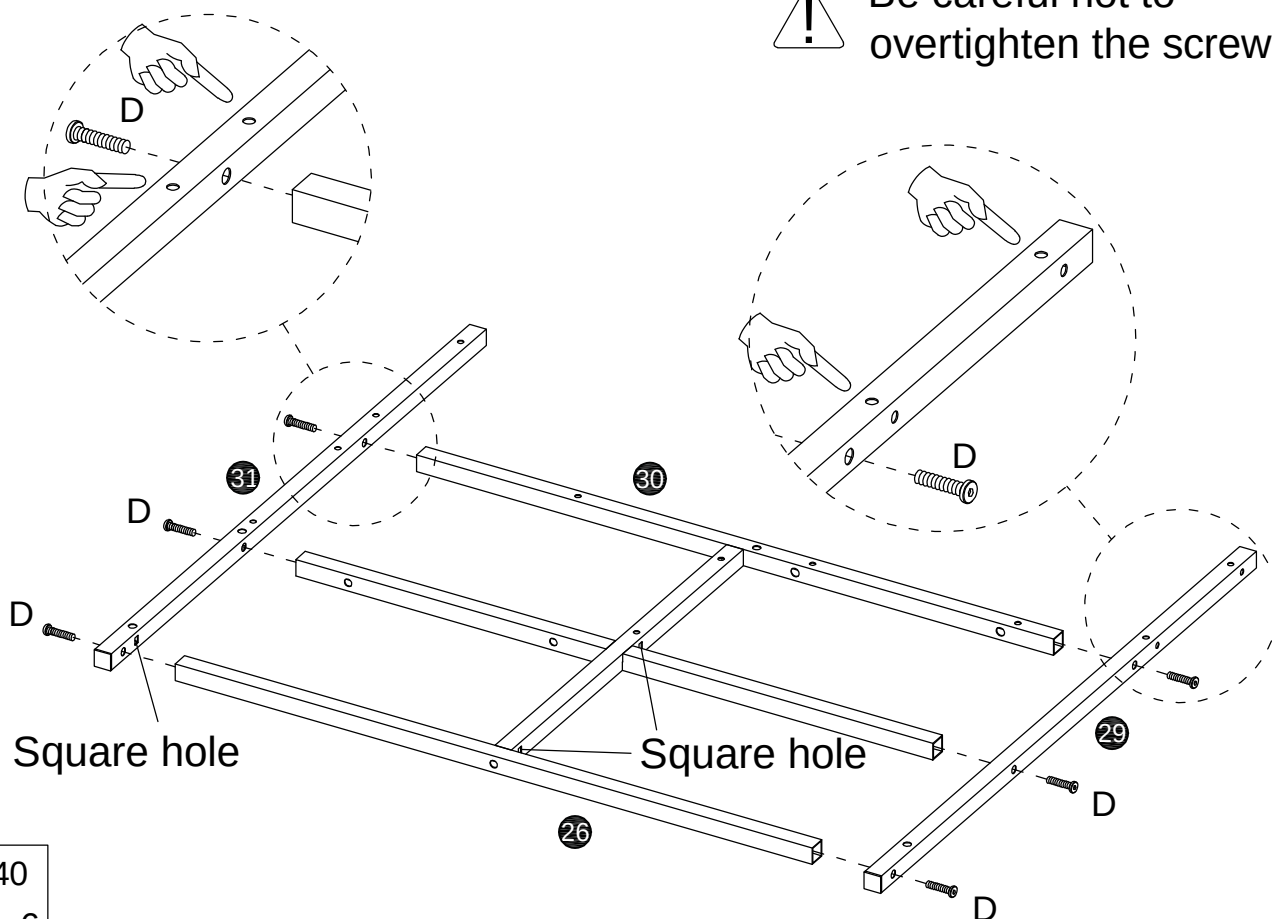

20



Be careful not to overtighten the screws.

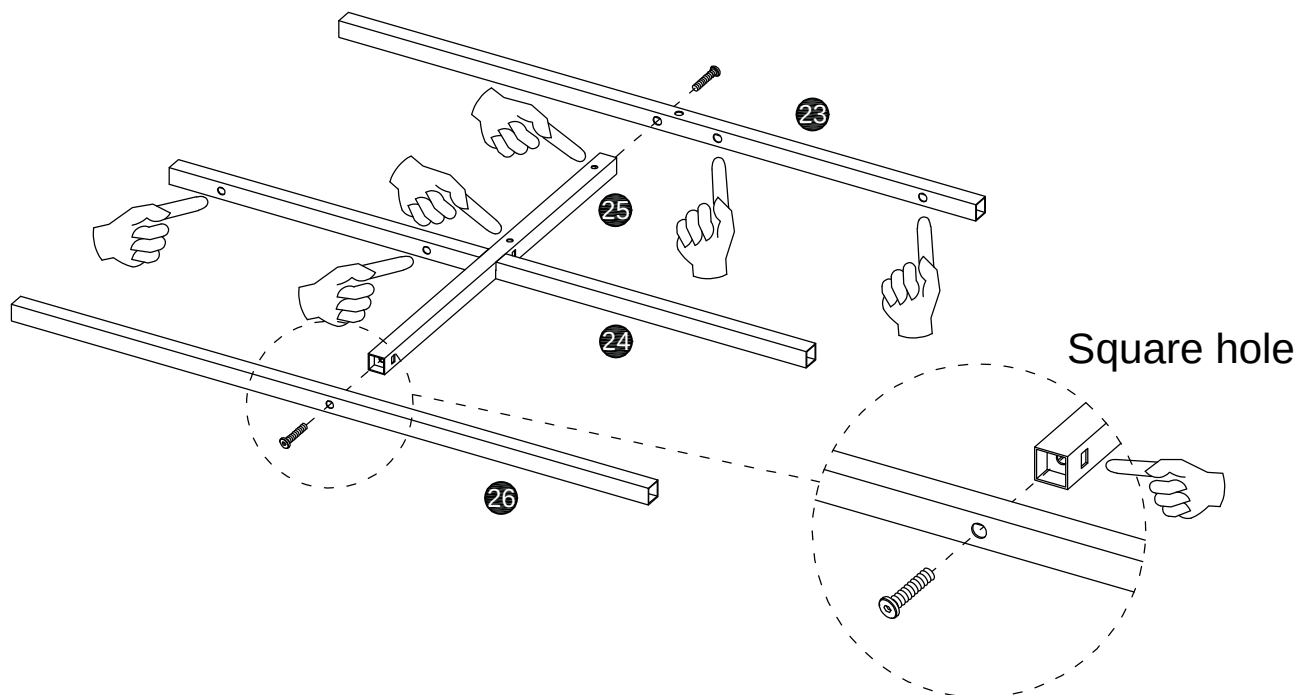


D M6*40
x2

21



Be careful not to overtighten the screws.

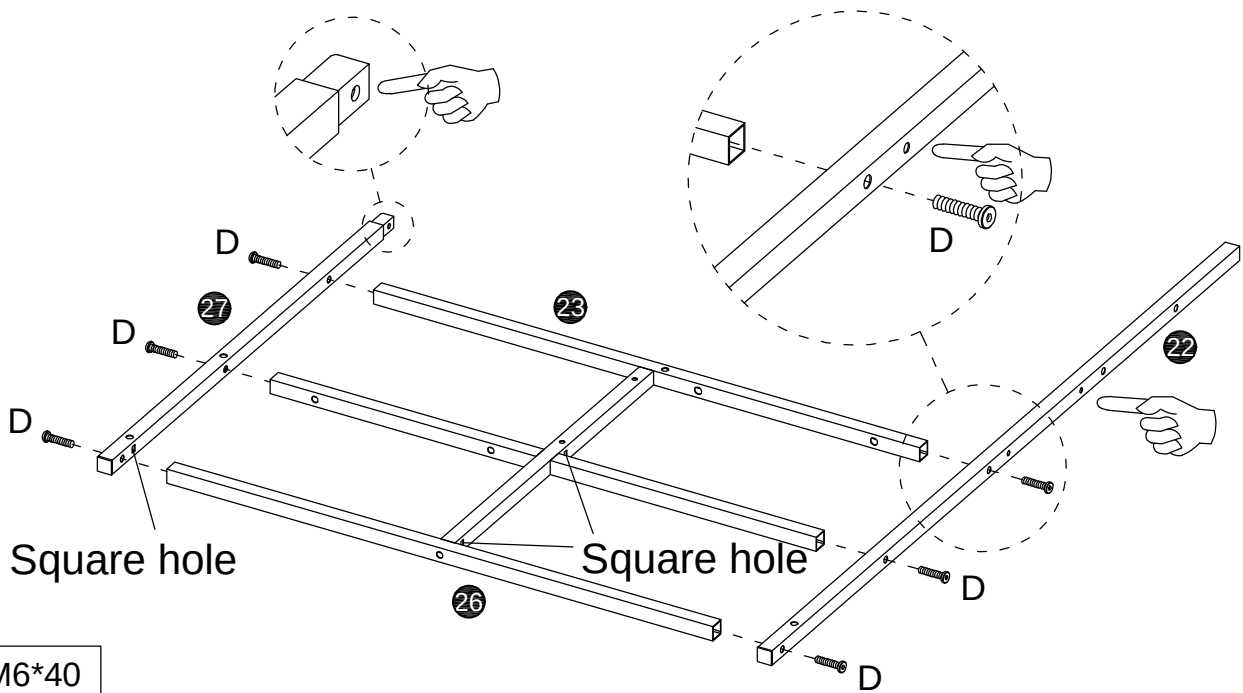


D M6*40
 x6

22




Be careful not to overtighten the screws.

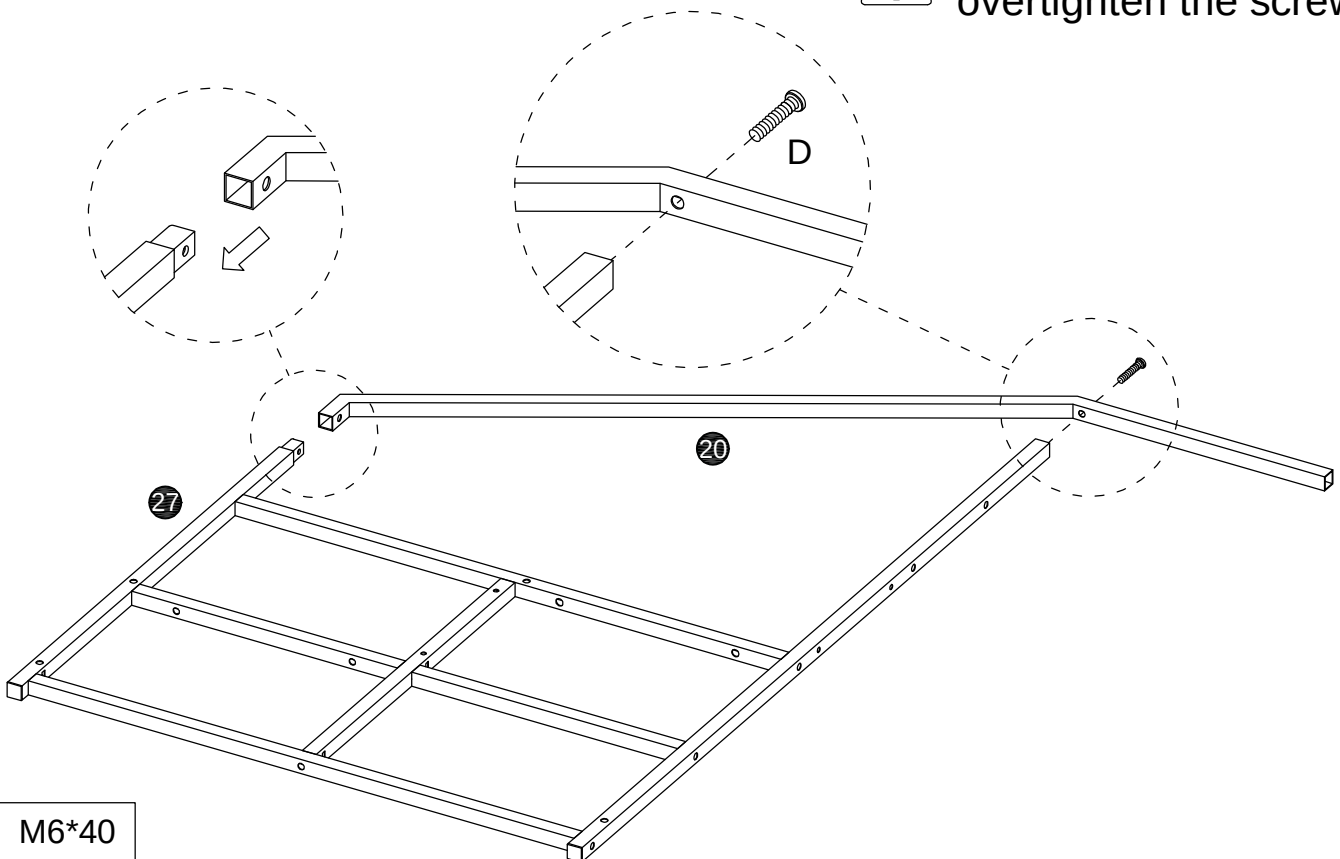

D M6*40
 x1


23

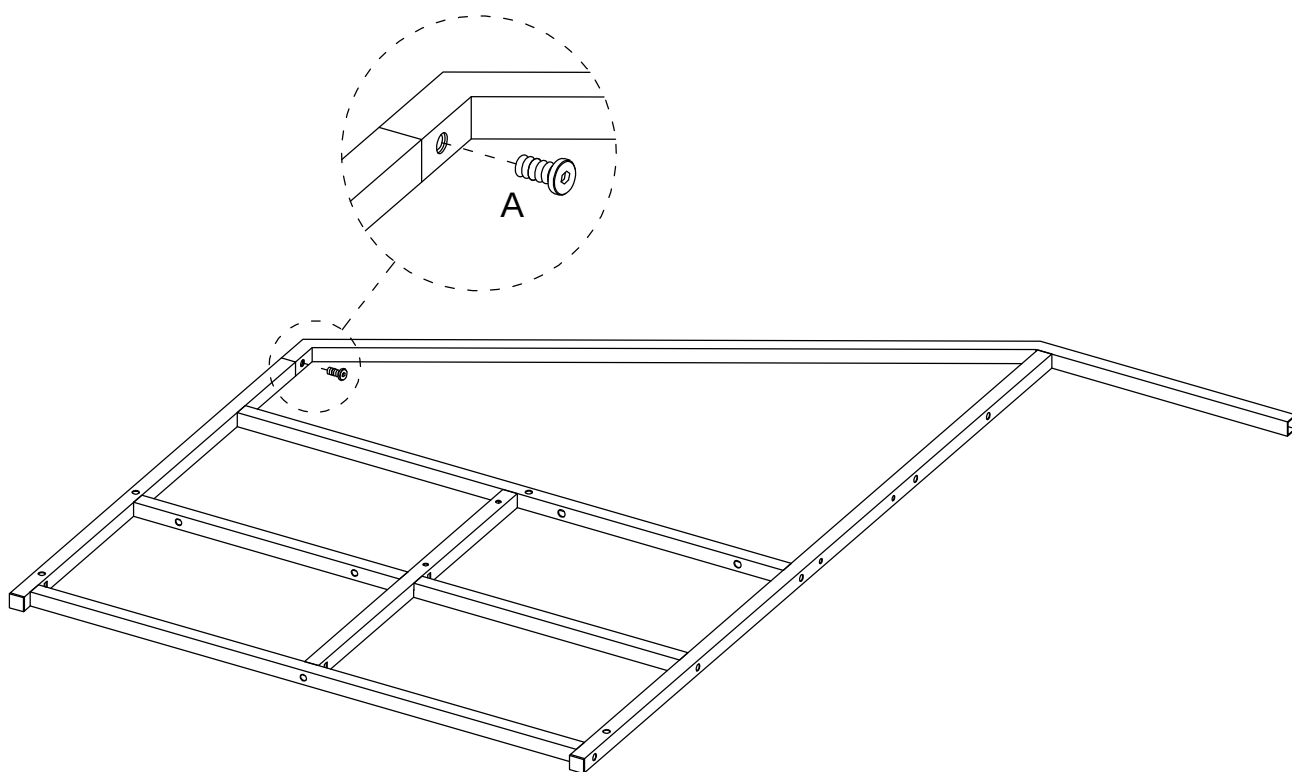

A M6*10
 x1

24

 Be careful not to overtighten the screws.

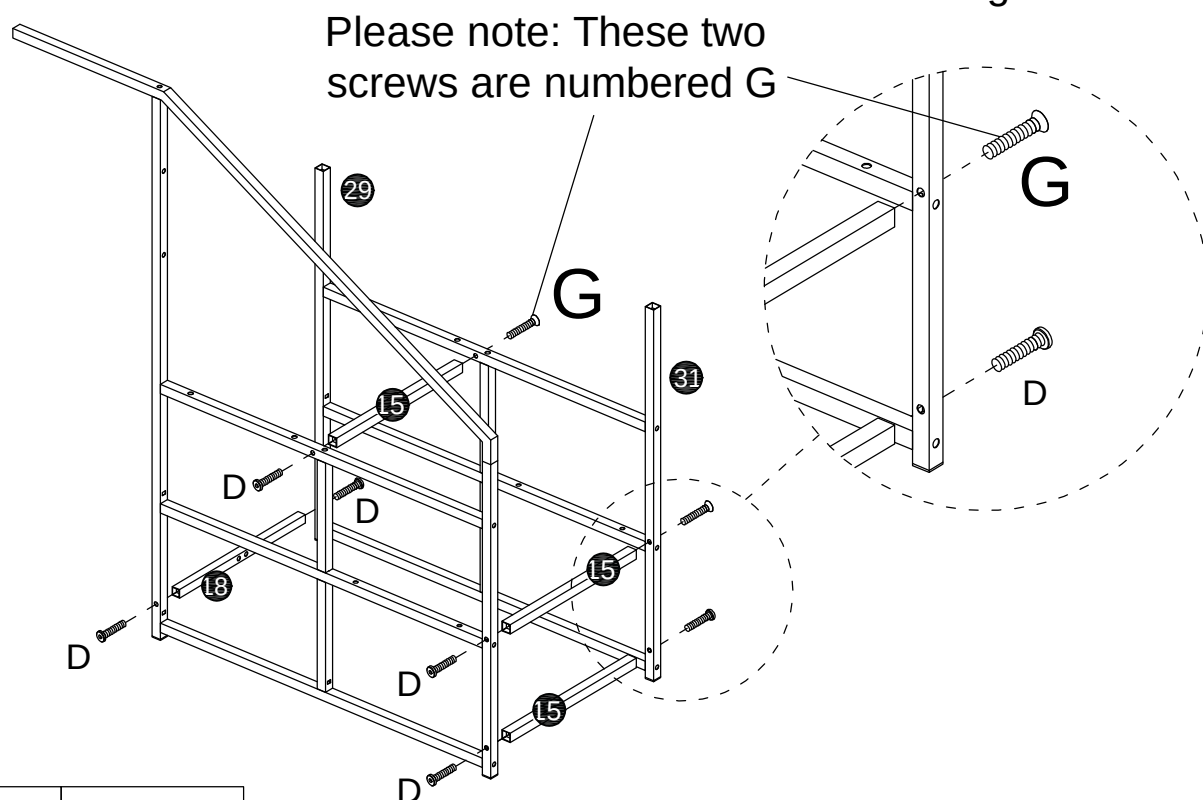


D M6*40	G M6*40
 x6	 x2


25



Be careful not to overtighten the screws.

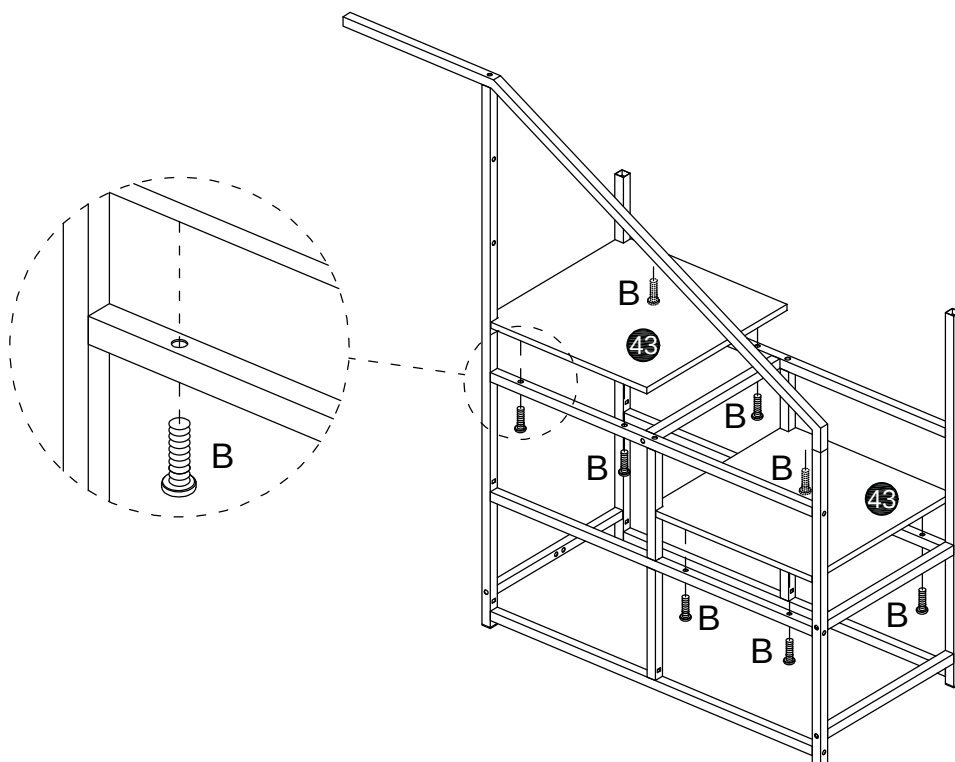


B M6*25
 x8

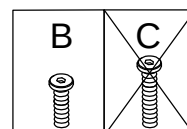

26



Be careful not to overtighten the screws.

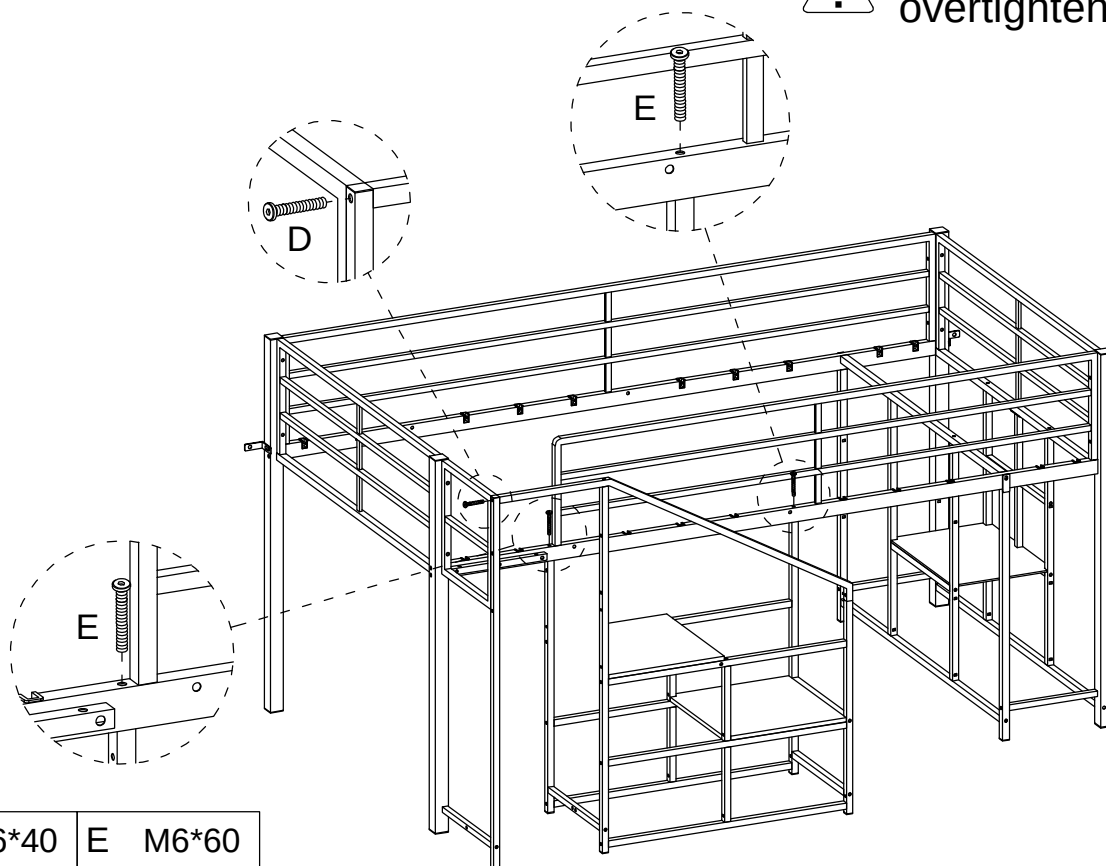


D M6*40 E M6*60
 x1  x2

27



Be careful not to overtighten the screws.

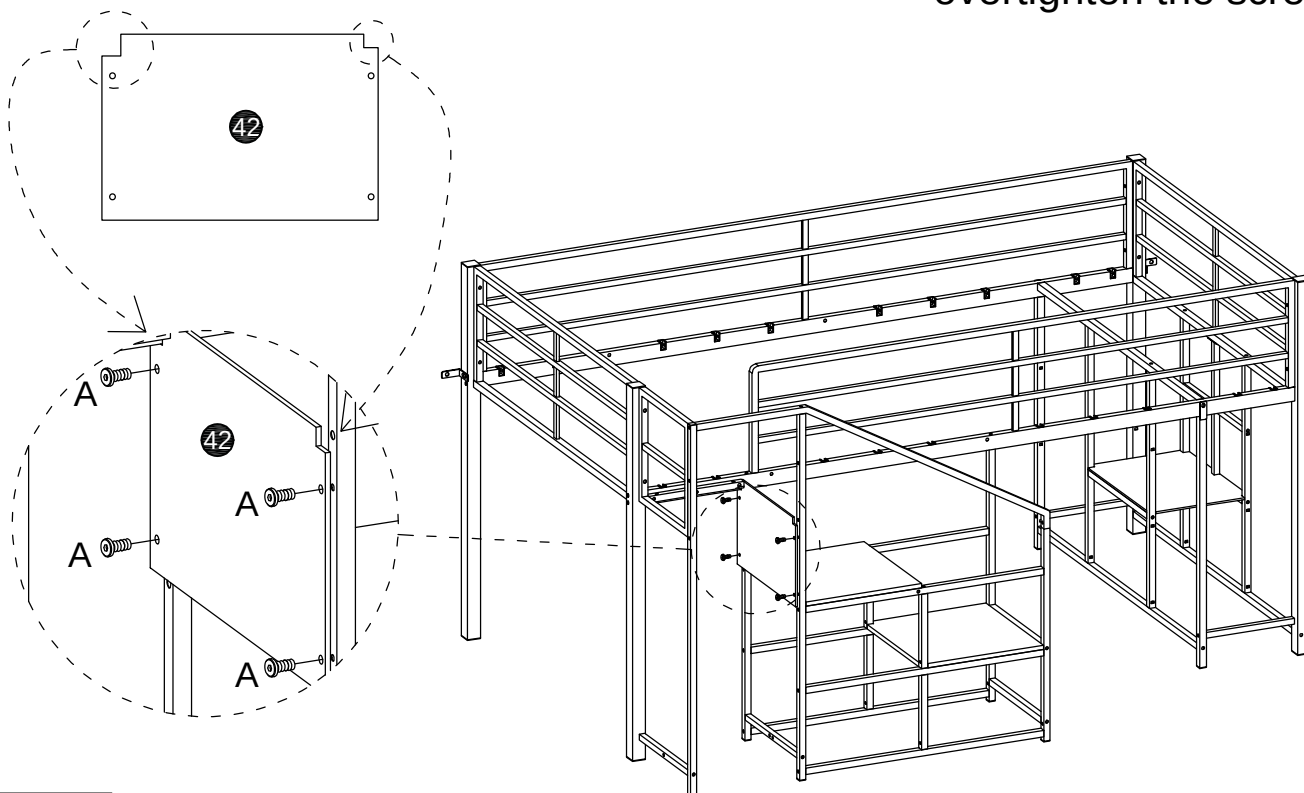


A M6*10
 x4

28



Be careful not to overtighten the screws.

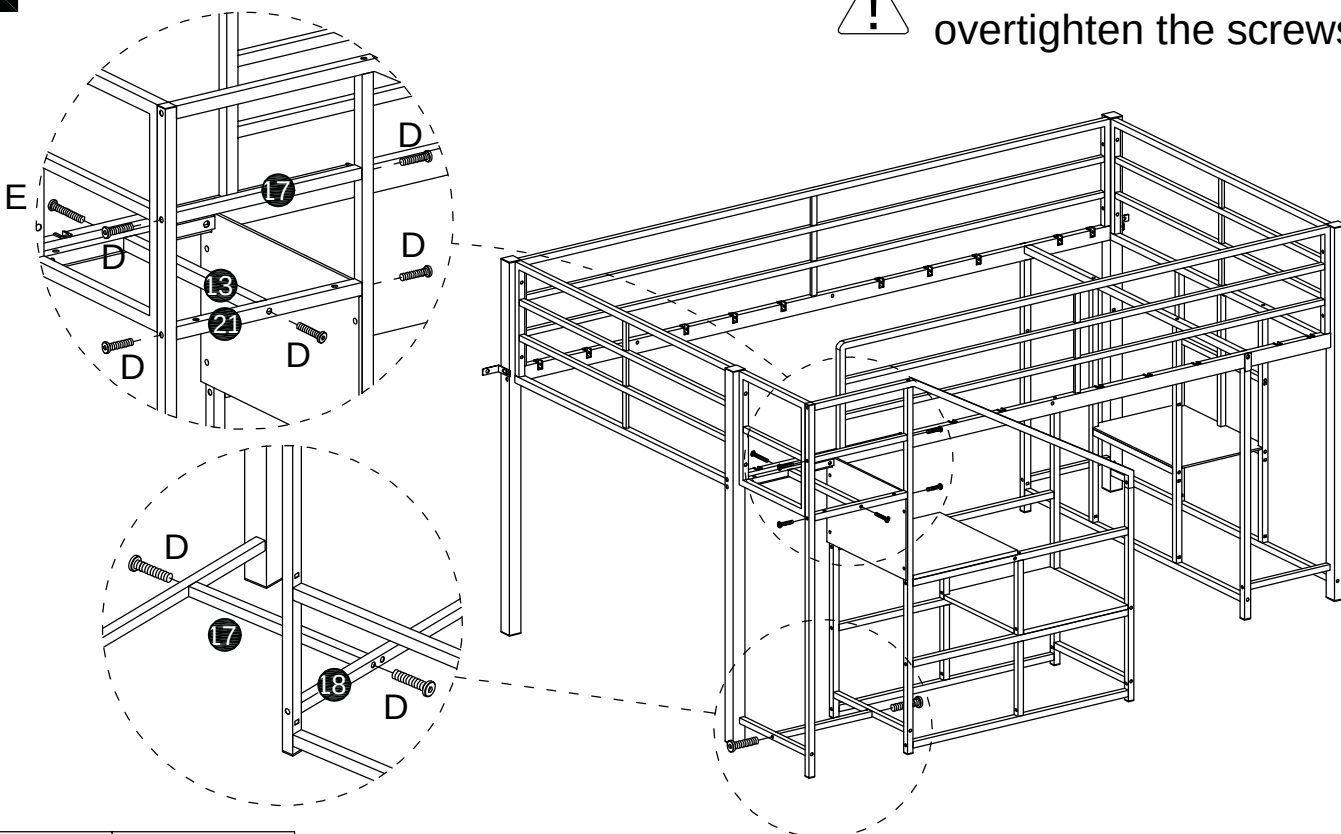


D M6*40 E M6*60
 x7  x1

29



Be careful not to overtighten the screws.

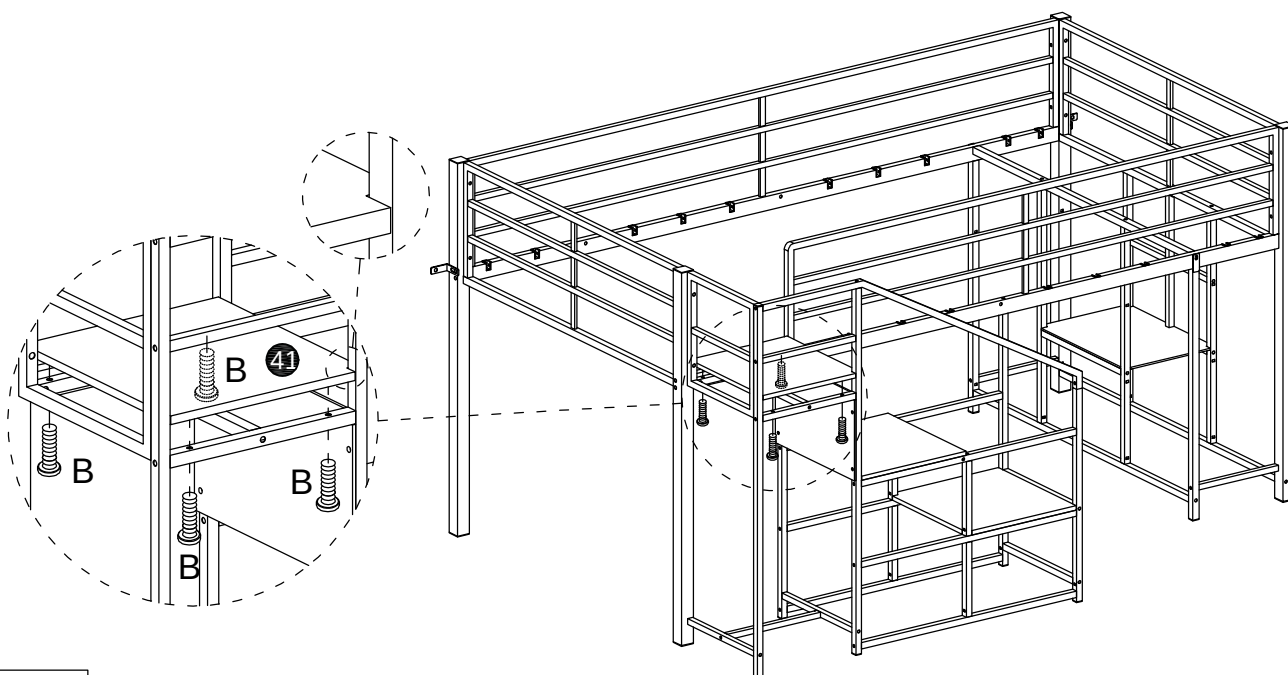


B M6*25

 x4

30



Be careful not to overtighten the screws.

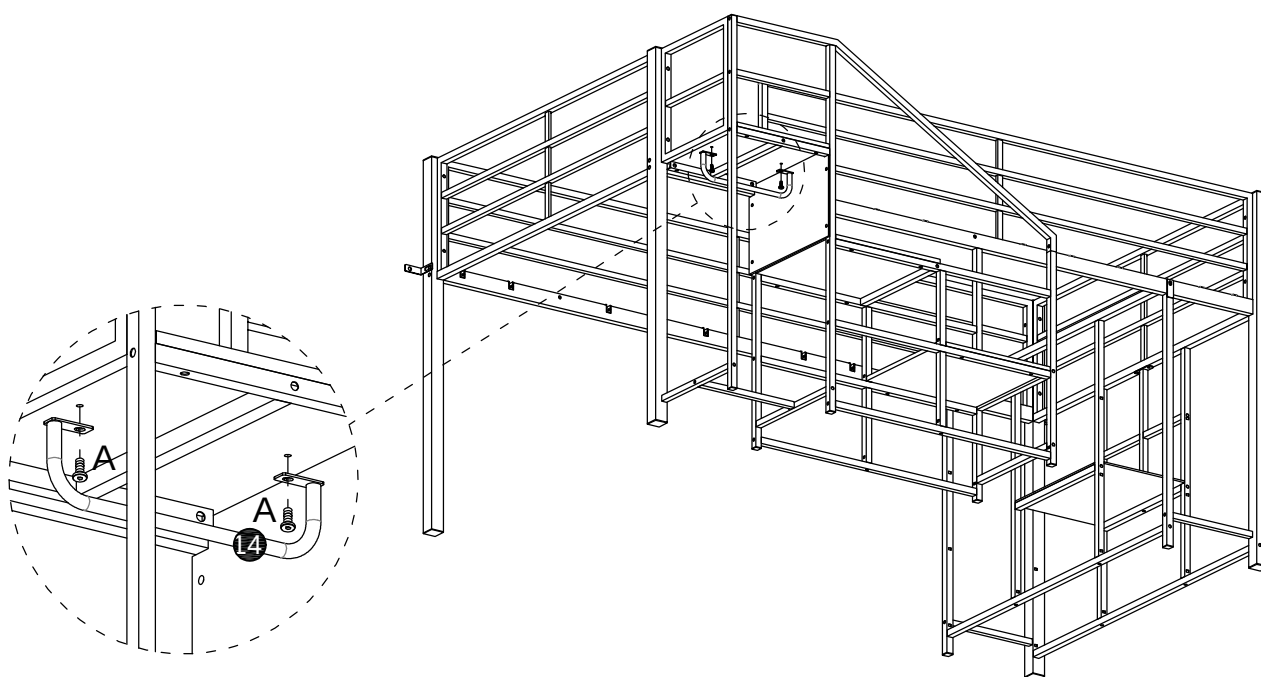


A M6*10

 x2

31



Be careful not to overtighten the screws.

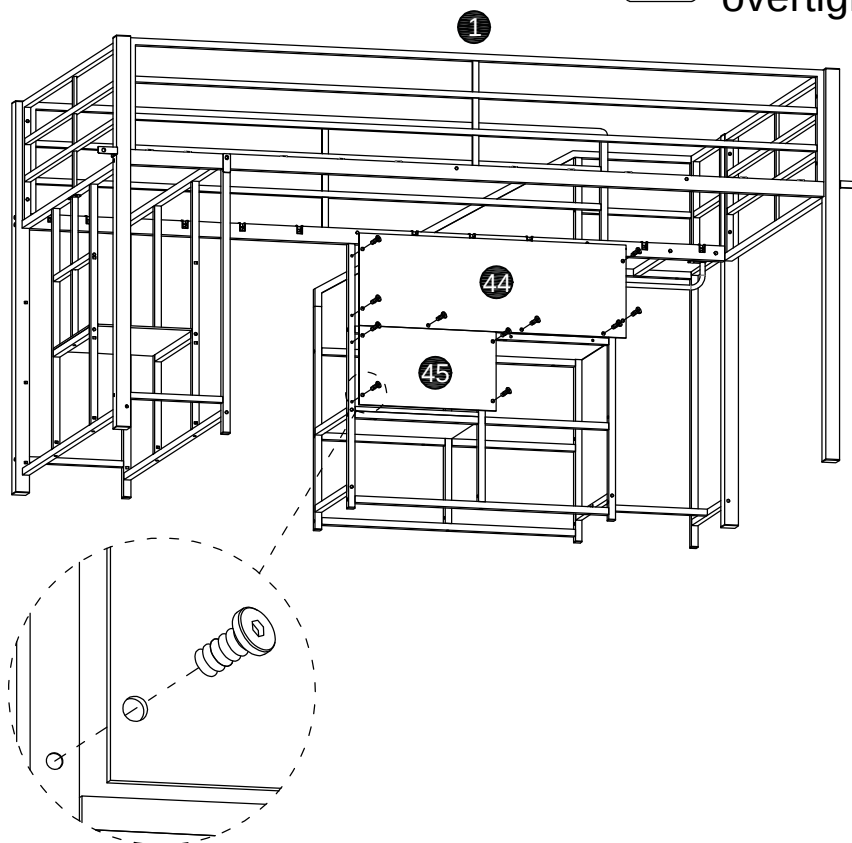


A M6*10
 x11

32




Be careful not to overtighten the screws.

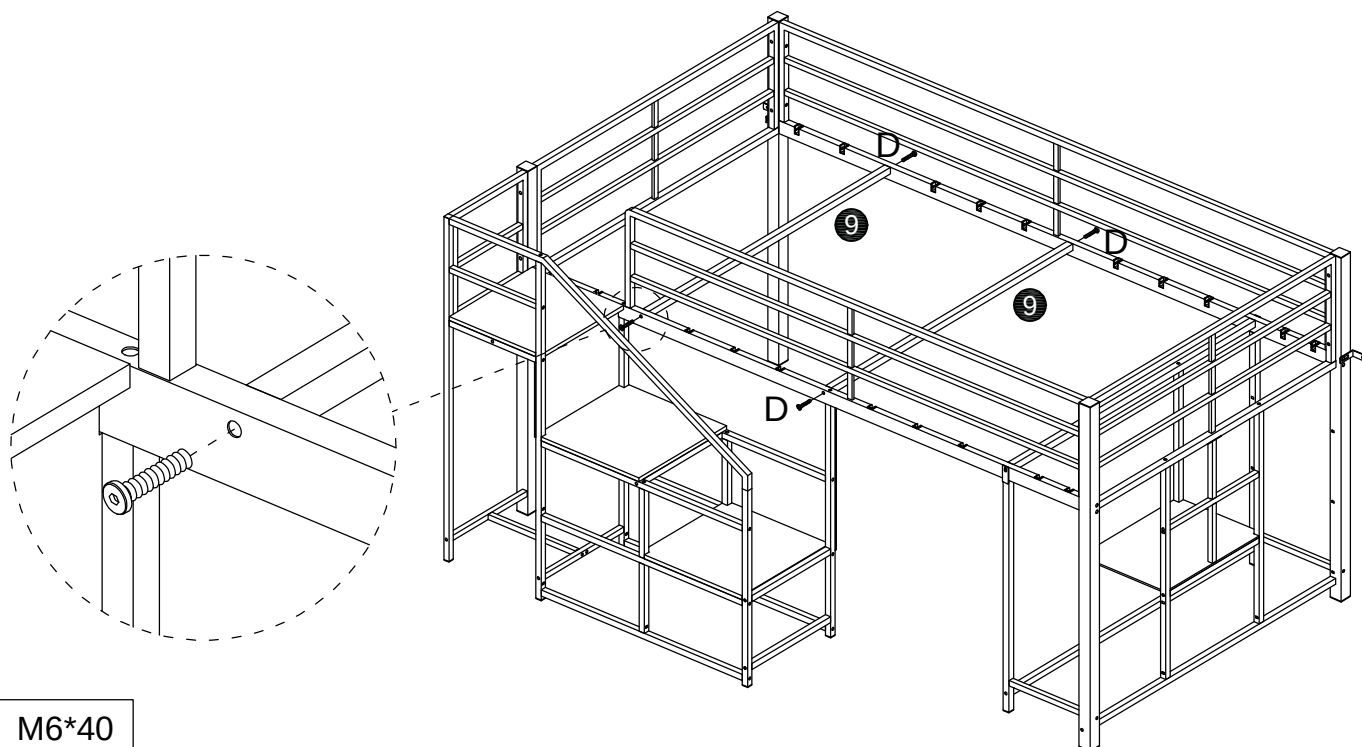






D M6*40
 x4

33


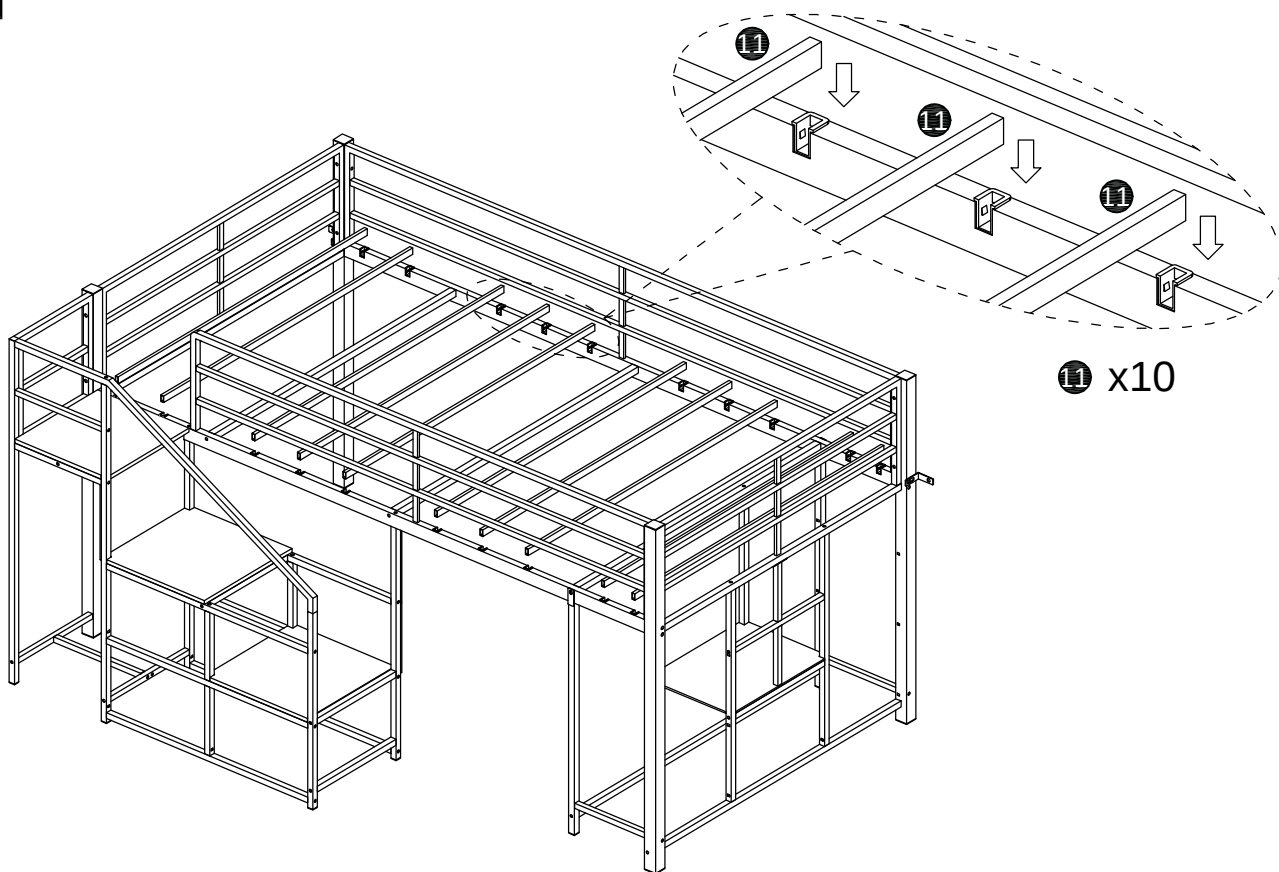


34

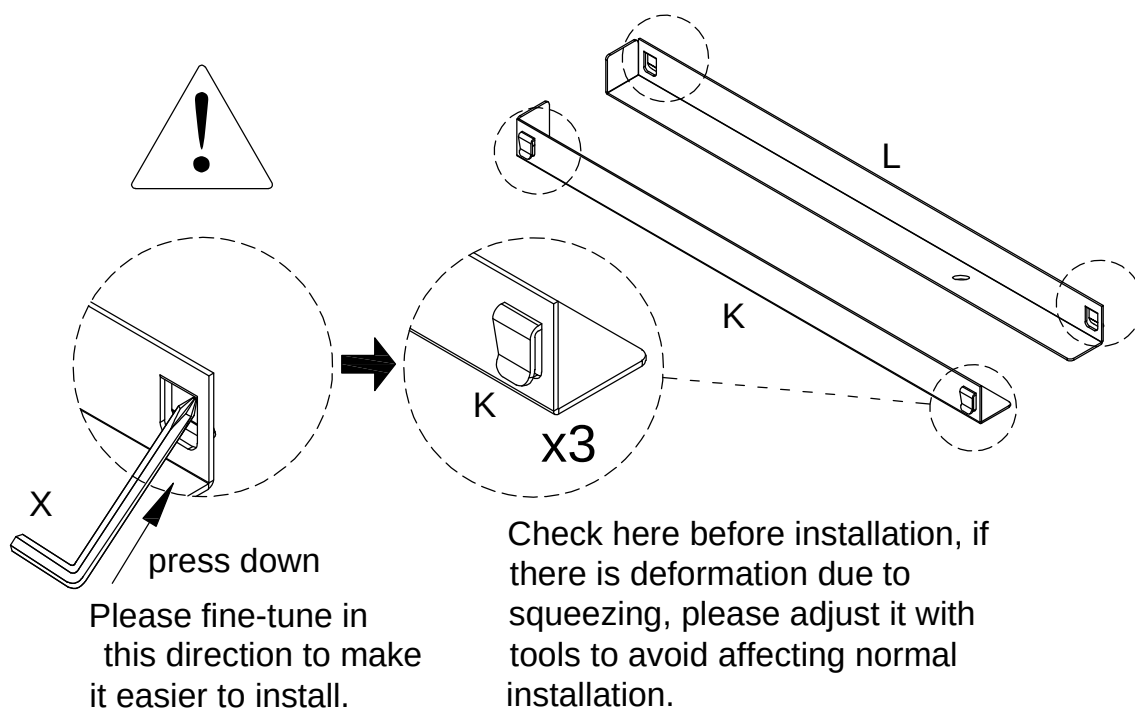

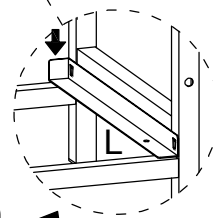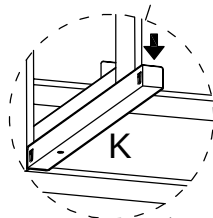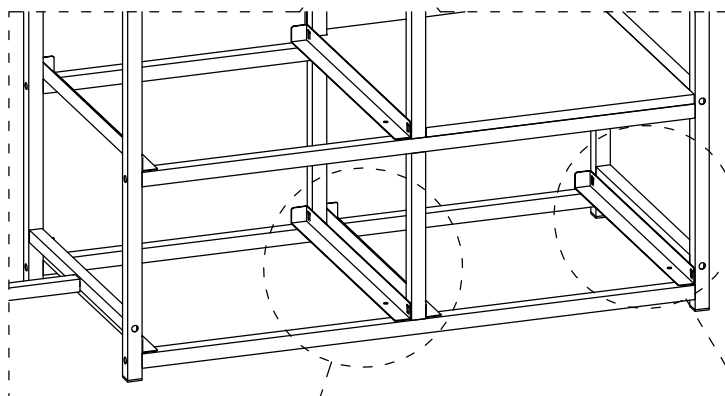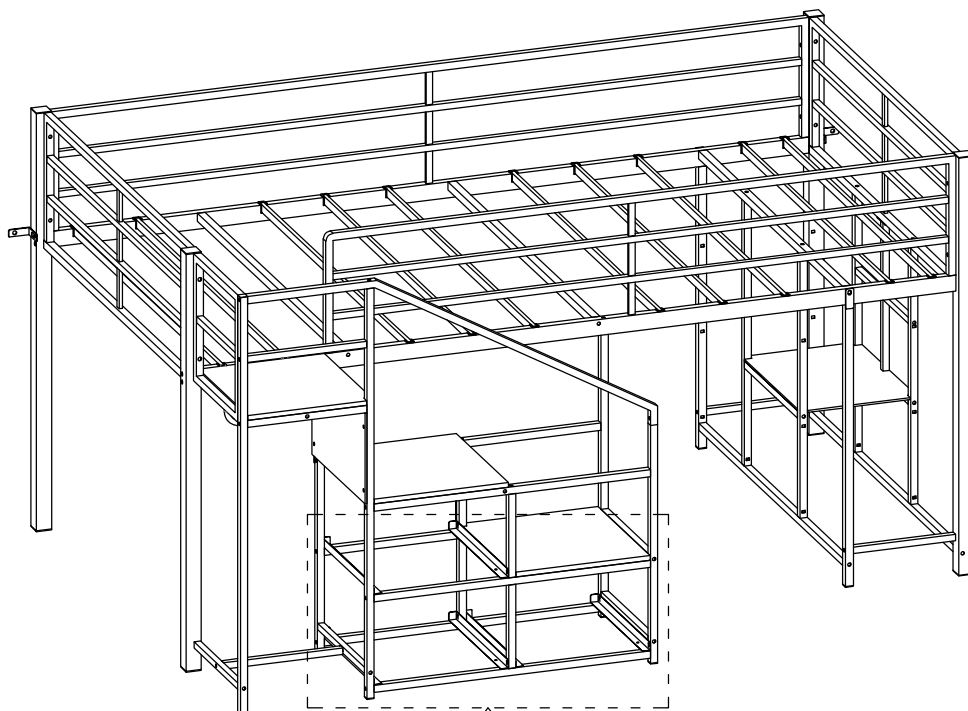


Insert the square hole
in the direction of the
Arrow and press down

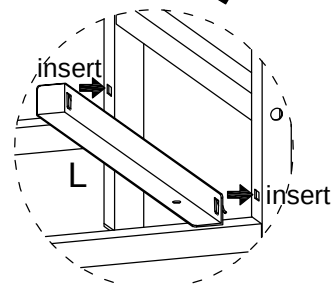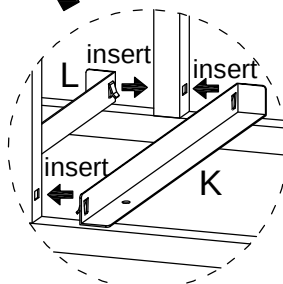






K	L
 x3	 x3

36


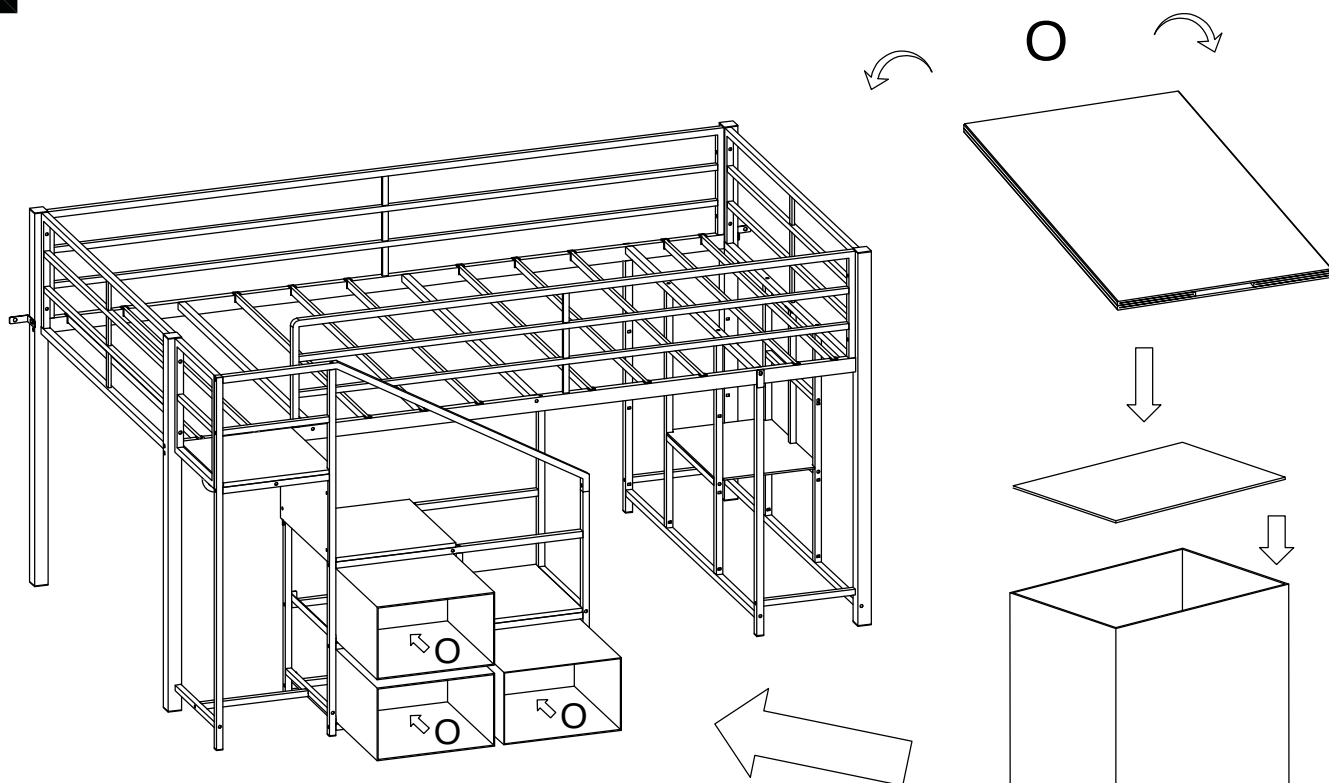


37






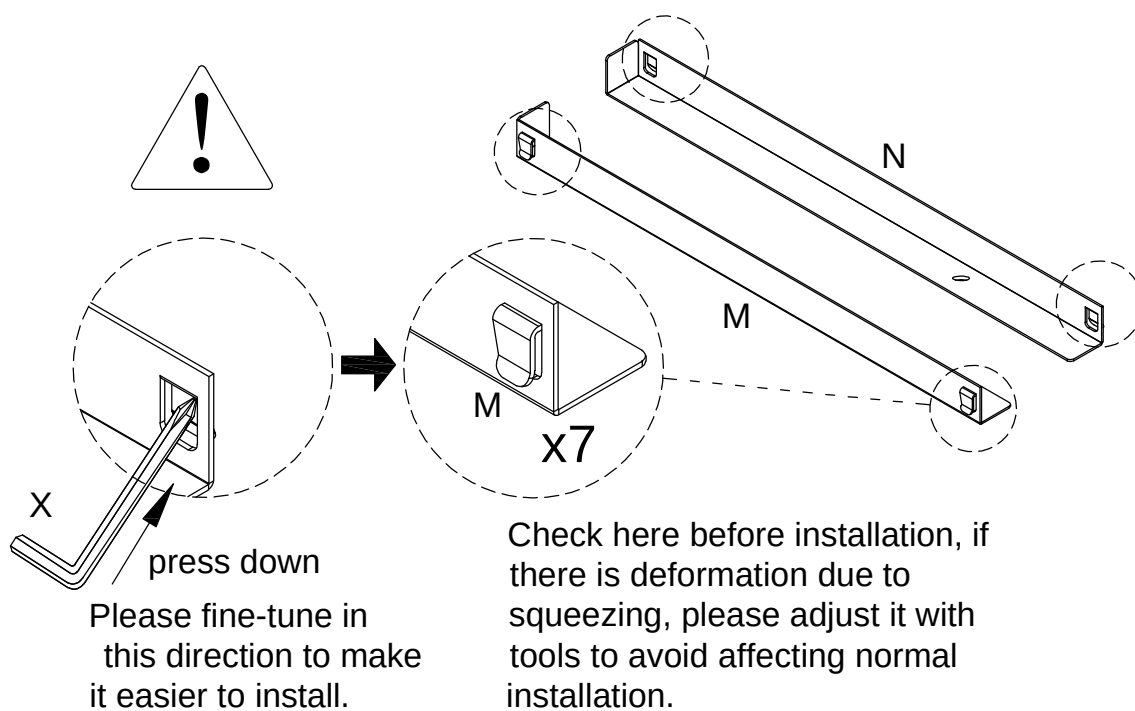


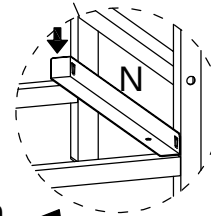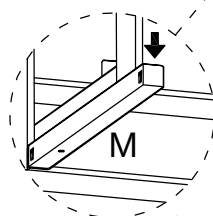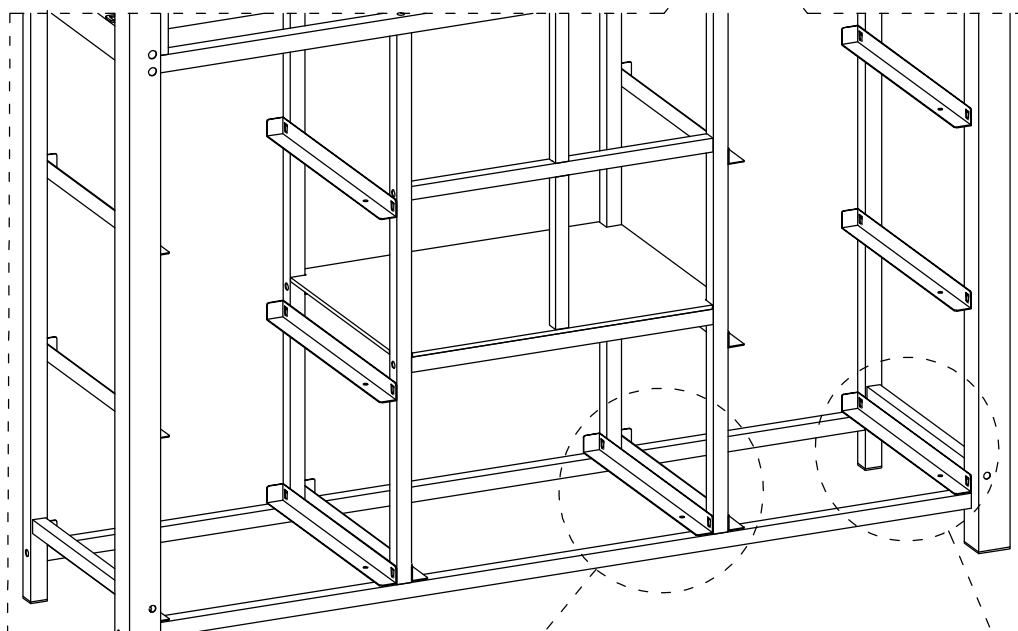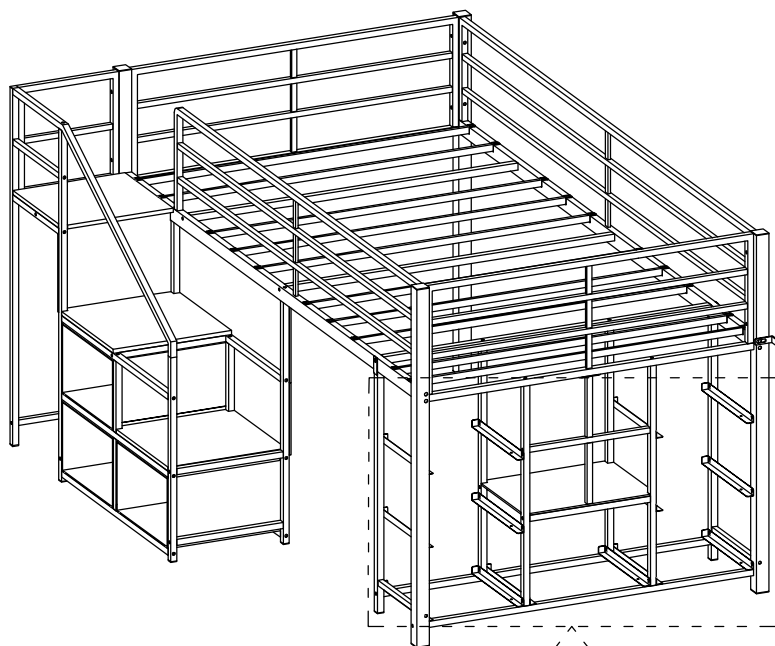

Insert the square hole
in the direction of the
Arrow and press down

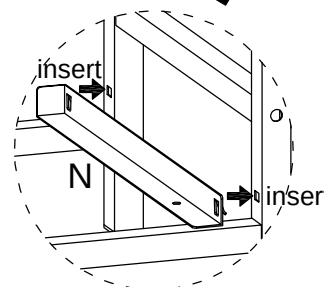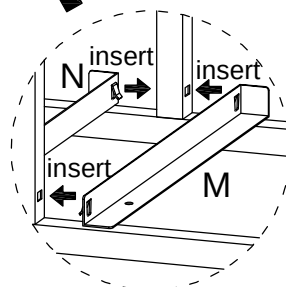


M	N
 x7	 x7

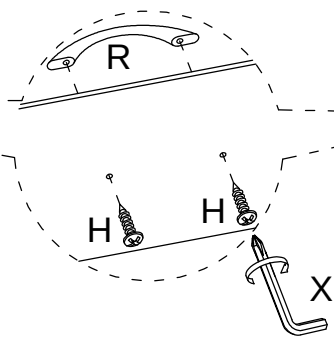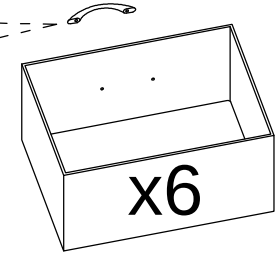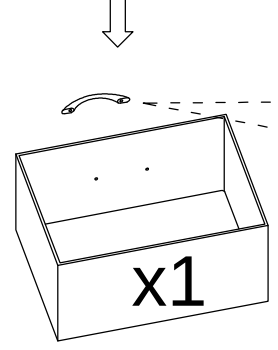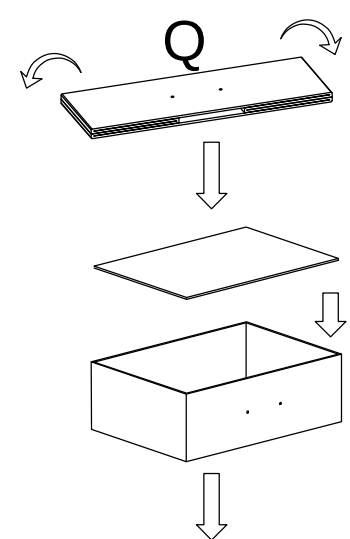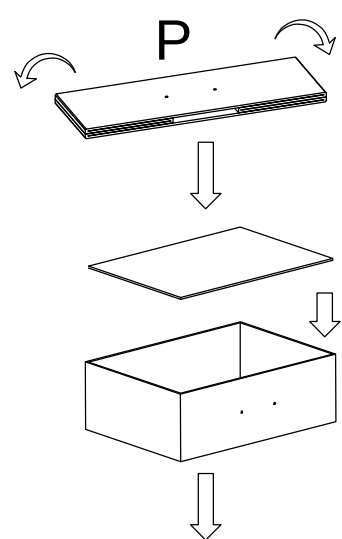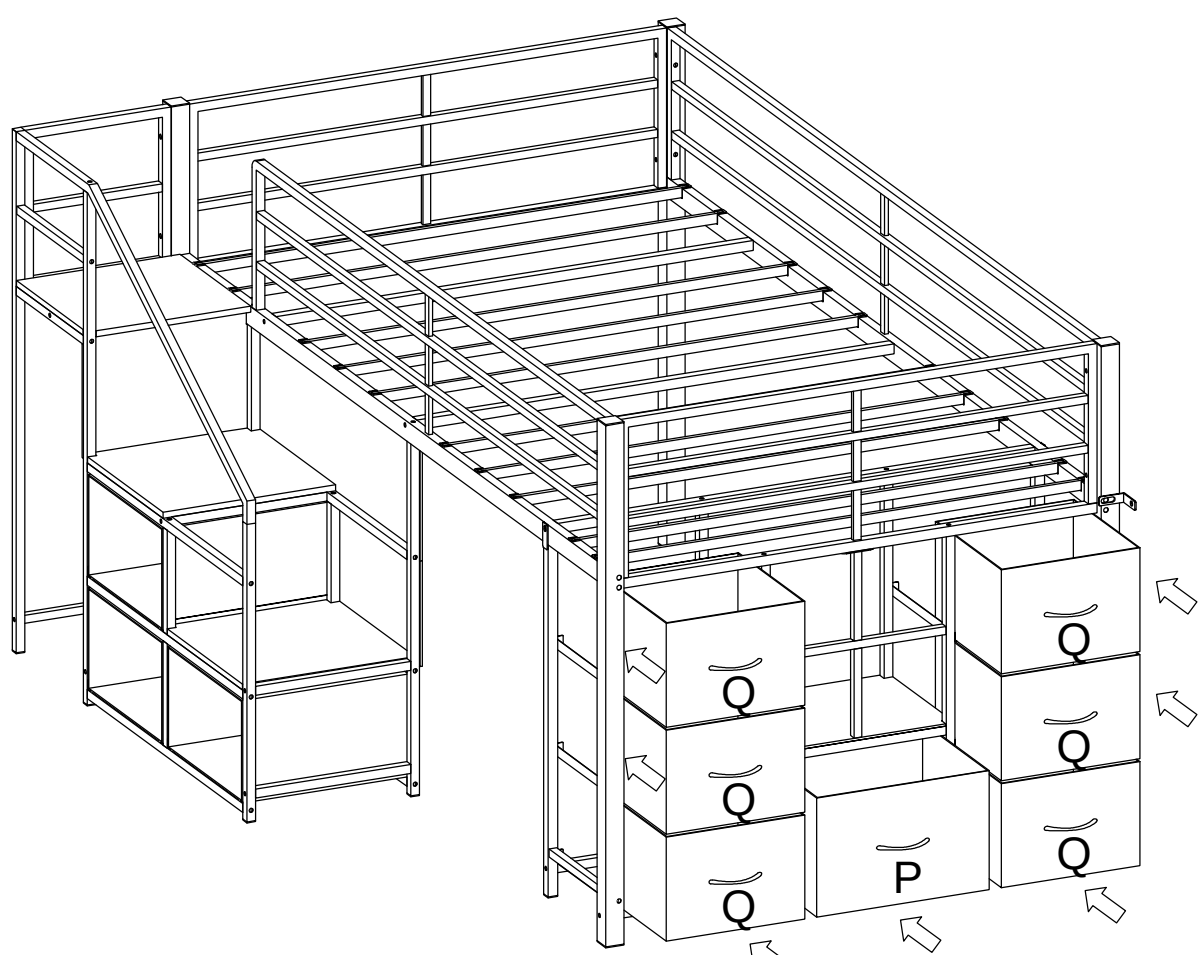


H	4*12	P	Q	R
	x14			
		x1	x6	x7

40

Unfold the light belt



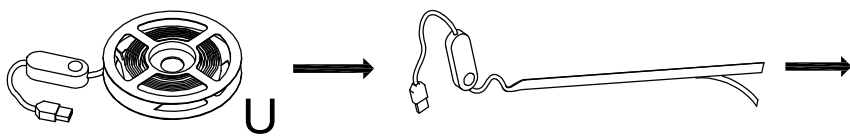


tear off the end of the tape and stick it to the bottom of the bed side tube.

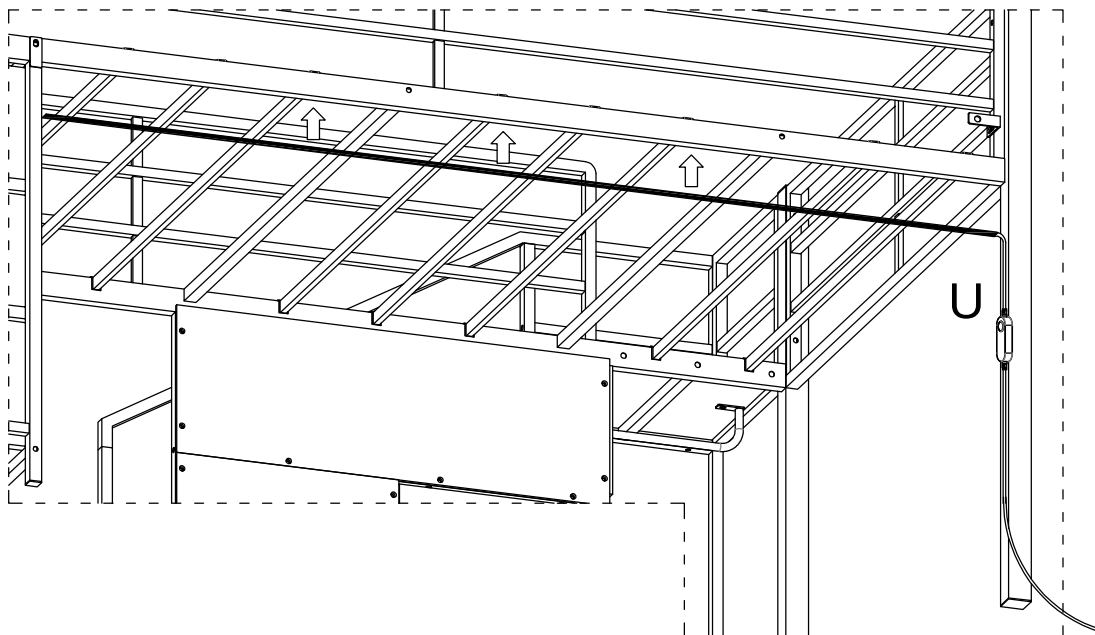


U
x1

41

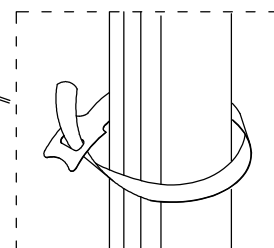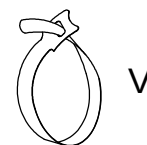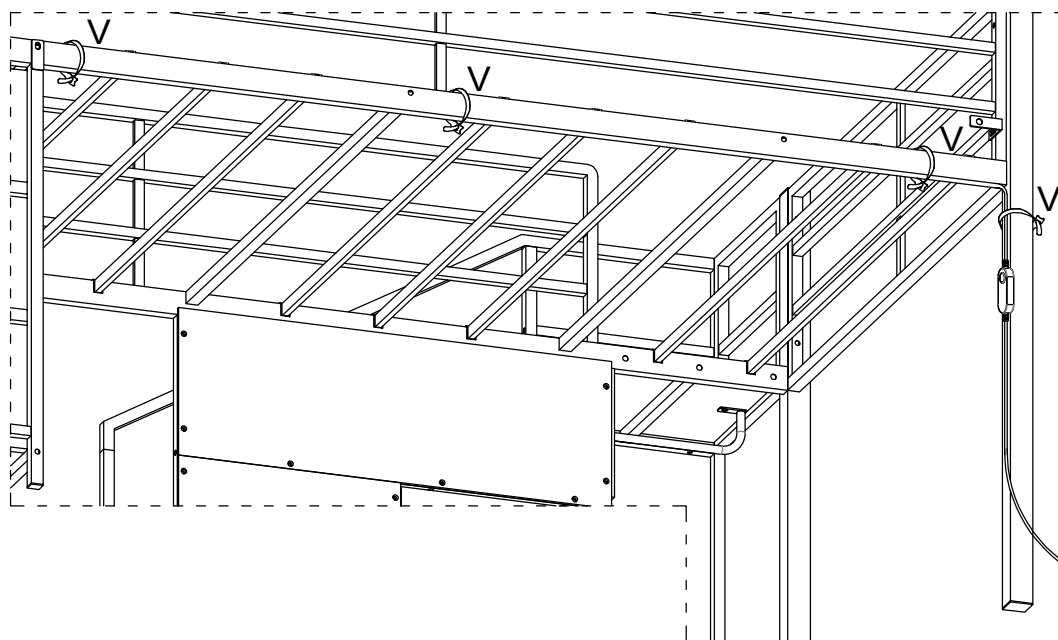


V
x4

Positioning

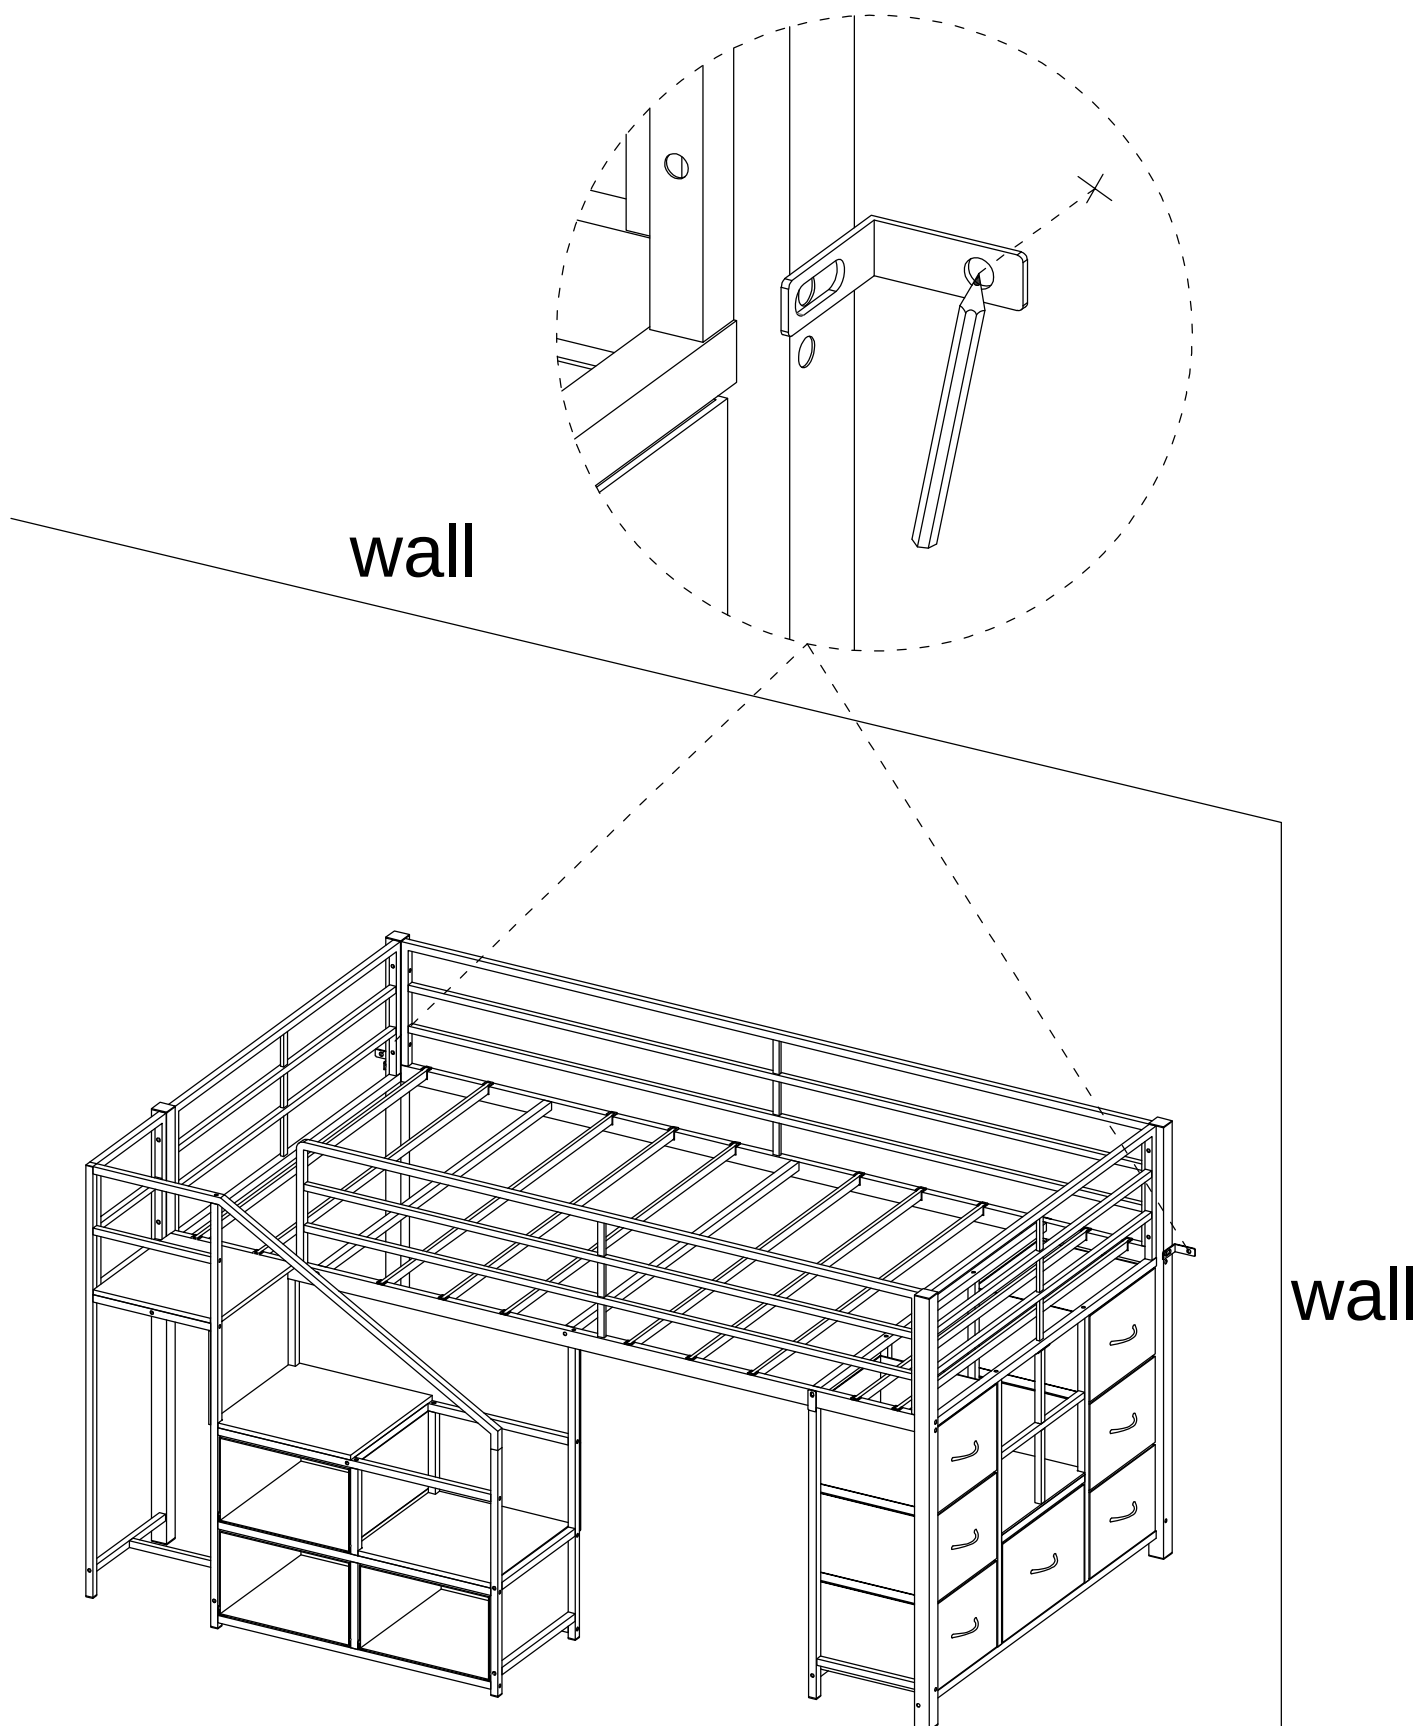


43

Drilling

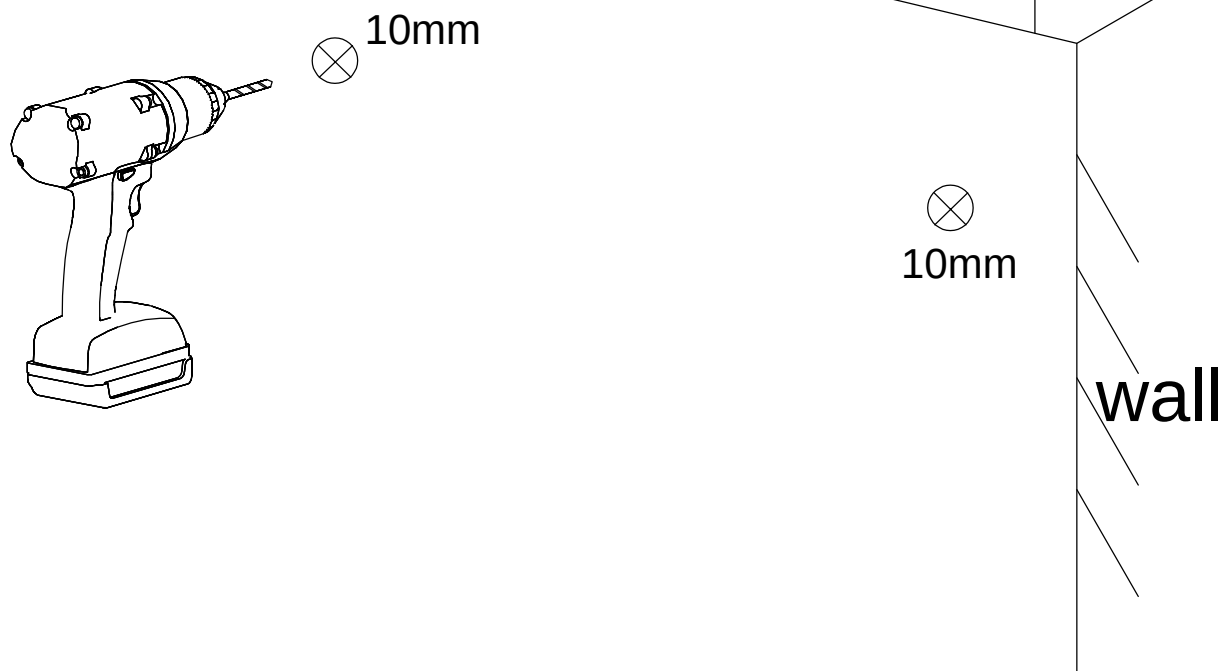


44

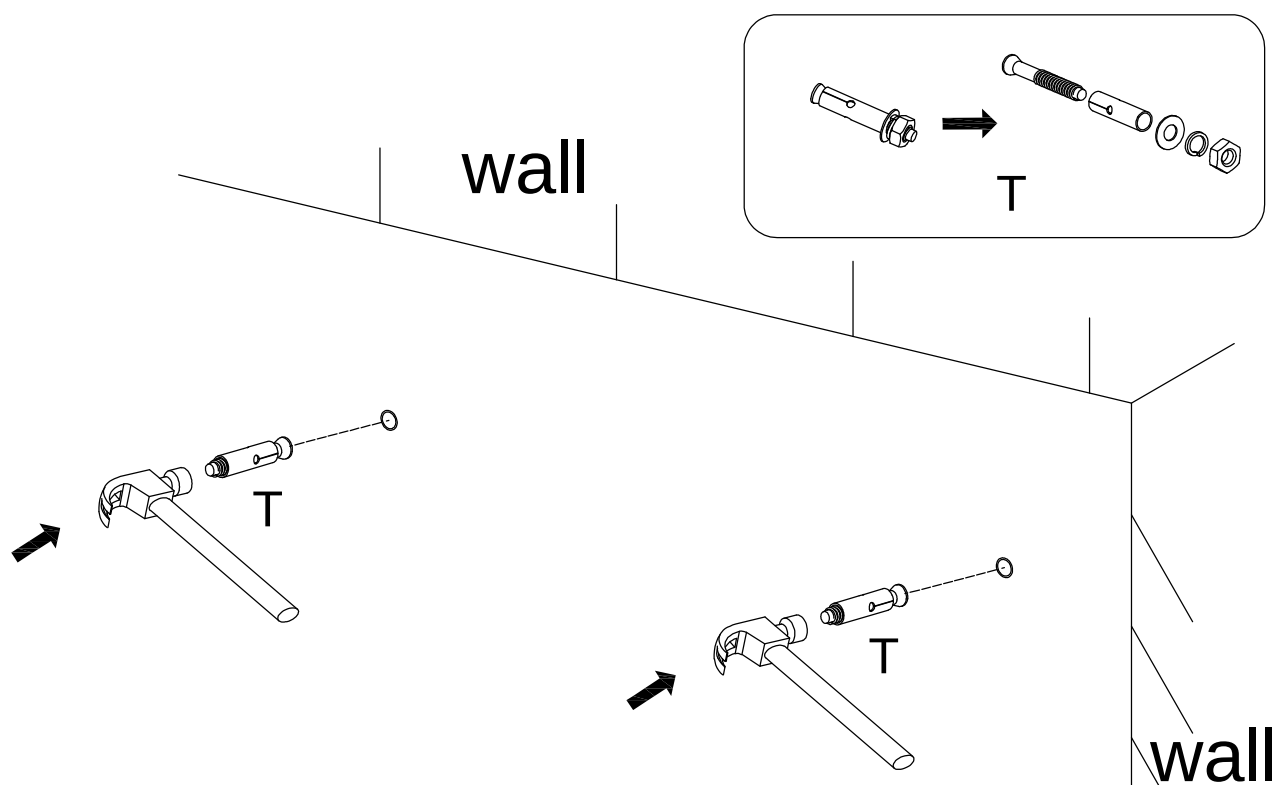

Please lock the expansion screw onto the wall.

45

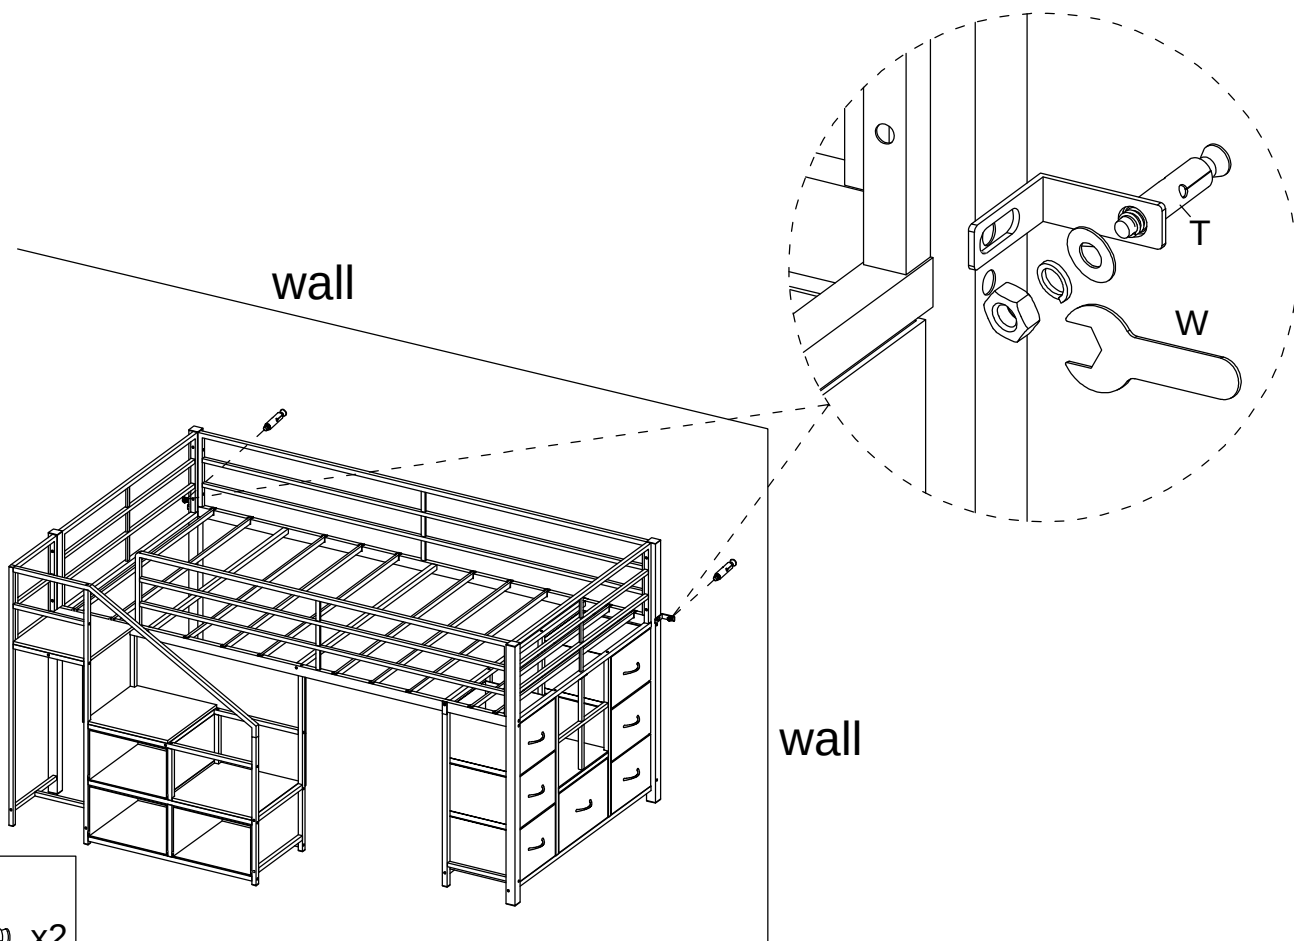

T
x2

46

