



Installation & Assembly





AA




A:Canopy *1



B:chain *1




C:Hanging Rod *1

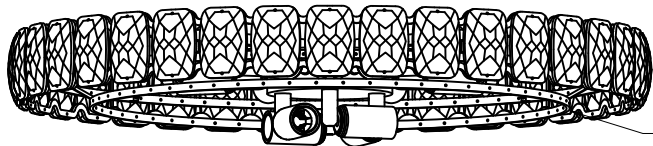

D:Lamp Body *1


E:Double-ring welded frame *1

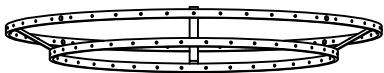

F:Double-ring welded frame *1




G:Double-ring welded frame *1

02: INSTALLATION KIT							
AA	1X	BB	1X	CC	2X	DD	4X
							
mounting Bracket		Ground Screw		Outlet B0x Screw		Knurled Nut	
EE	3X	FF	4X	GG	4X	HH	4X
							
Wire Nut		plastic Anchor		Washer		Wood Screw	
II	1X	JJ	8X	KK	8X	LL	4X
							
Gloves		M5 Screw		M3 Screw		6*100 square support	
MM	4X	NN	36X	OO	118X	PP	132X
							
6*170 square support		Jade pendant and crystal		22# Octagonal Beads		22*100 crystal strips	
QQ	104X	RR	354X				
							
22*76 crystal strips		Military-style button					


AA has already installed the sunshade (A). The double-ring welding frame E/JJ has been installed on the lamp body (D).

03.Connect the Wires Step

- Step 1: Wrap the ground wire from the oufet box around the Ground Screw (BB) on the Mounting Bracket (AA). and then connect the ground wire from the fture to the ground wire from the outlet box. Step
- Step 2: Connect the wires from the foture to the house supply wires, neutrc1 (white) to neutrc1 wire, and hot (block) to hot wire. Step
- Step 3: Spread apart the wires so that the hot wires are on one sicie of the outlet box aind the neutral wires are on the otheu

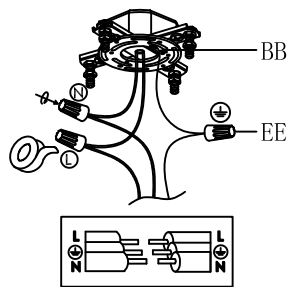


- Step 4:Pass Canopy (A) through Mounting Bracket (AA) and secure it with Knurled Nut (DD).

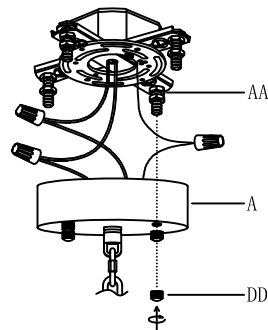


MOUNTING AND WIRE

- Step 1:Install the Mounting Bracket Loosen the Knurled Nut (DD) from the Canopy (A) and remove the Mounting Bracket (AA).

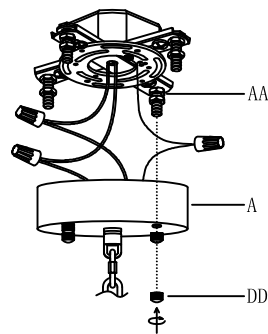


- Step 2:Set the hole position ond insert plastic Anchor(Ff) into the ceiling
- Step 3:Pass Outlet Box screw(CC) through mounting Bracket(AA) and screw into the ceiling box.
- Step 4:Pass Wood Screw(HH) through Washer(JJ) and Mounting Bracket(AA),then tighten into plastic Anchor(Ff)

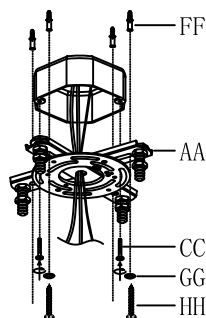

04. Install the Lamp Body


Step 1: Insert the M5 screw (JJ) through the lamp body (D) and secure it at the top of the short square tube (LL).

Step 2: Insert the M3 screw (KK) through the double-ring fusion frame (F) and secure it onto the short rectangular rod (LL).

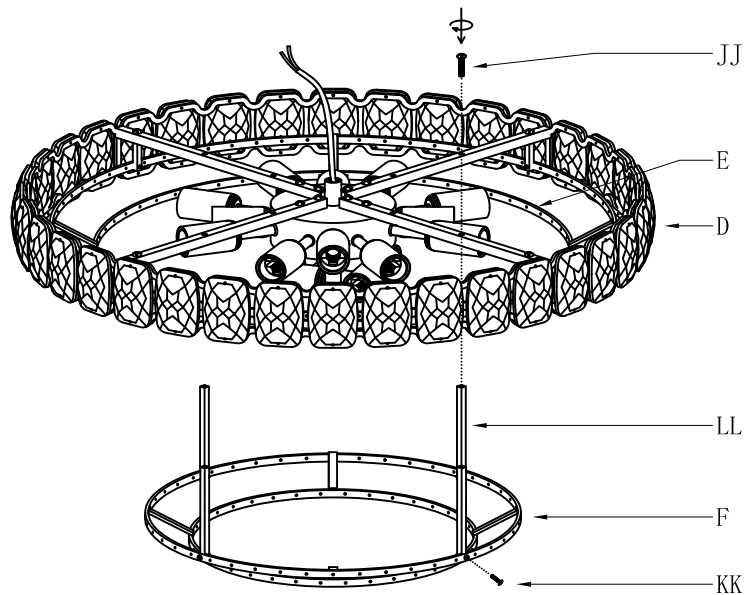

Step 3: Insert the M5 screw (JJ) through the lamp body (D) and secure it at the top of the short square tube (MM).

Step 4: Pass the M3 screw (KK) through the double-ring welded frame (G) and fix it onto the short rectangular rod (MM).

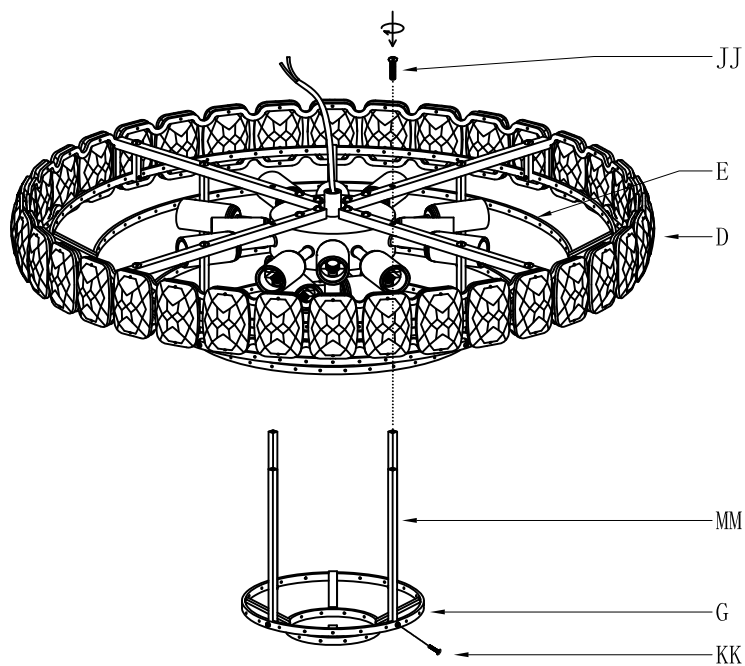


04. Install the Lamp Body

Step 5: Pass the power cord from Lamp Body (D) through Hanging Rod (C), chain (B), and Canopy (A)

Step 6:Screw Hanging Rod (C) onto the internal thread of Lamp Body (D) and secure with M4 Screw (HH)

Step 7: Loosen the quick link on Chain (B) and hook it to the rings of Canopy (A) and Hanging Rod (C)

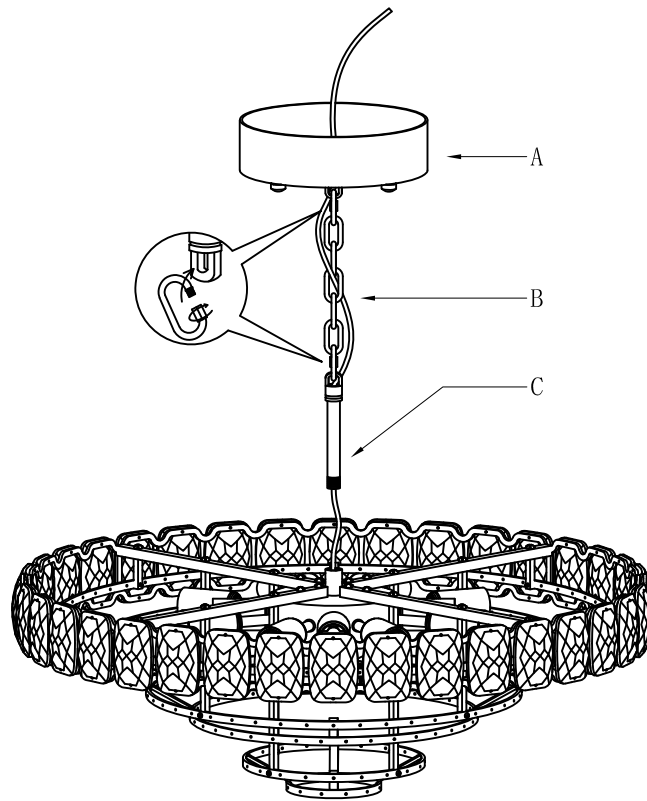


05. Connect the Wires Step

Step 1: Install the E12 Bulbs(not included)

Step 2: First, place the MM clasp onto the RR/00/PP/QQ crystal as shown in the illustration.

Step 3: Then, hang the sealed crystals one by one on the two-ring fusion frame E/F/G.

Longer ones should be placed on the outside, and shorter ones on the inside.

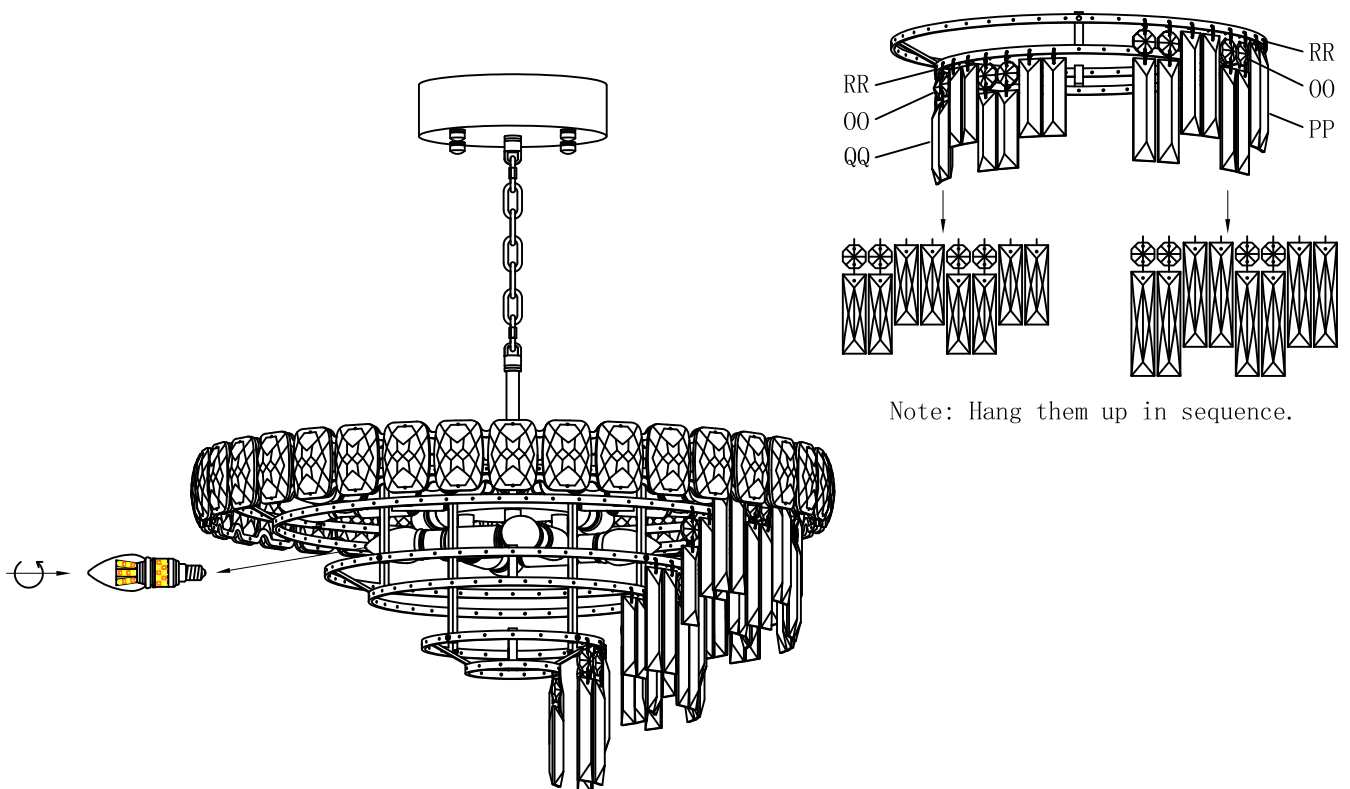

Note: Hang them up in sequence.