

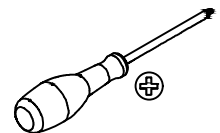
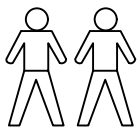
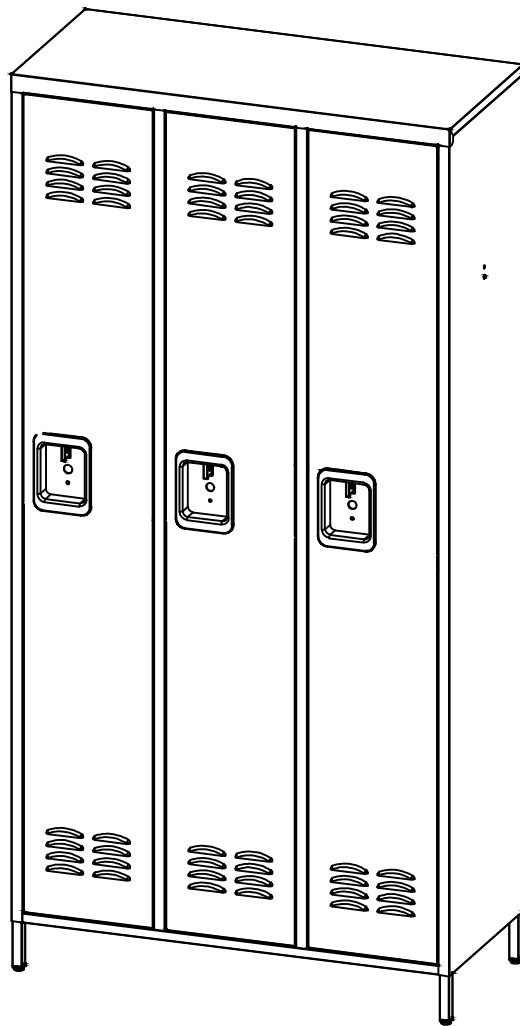
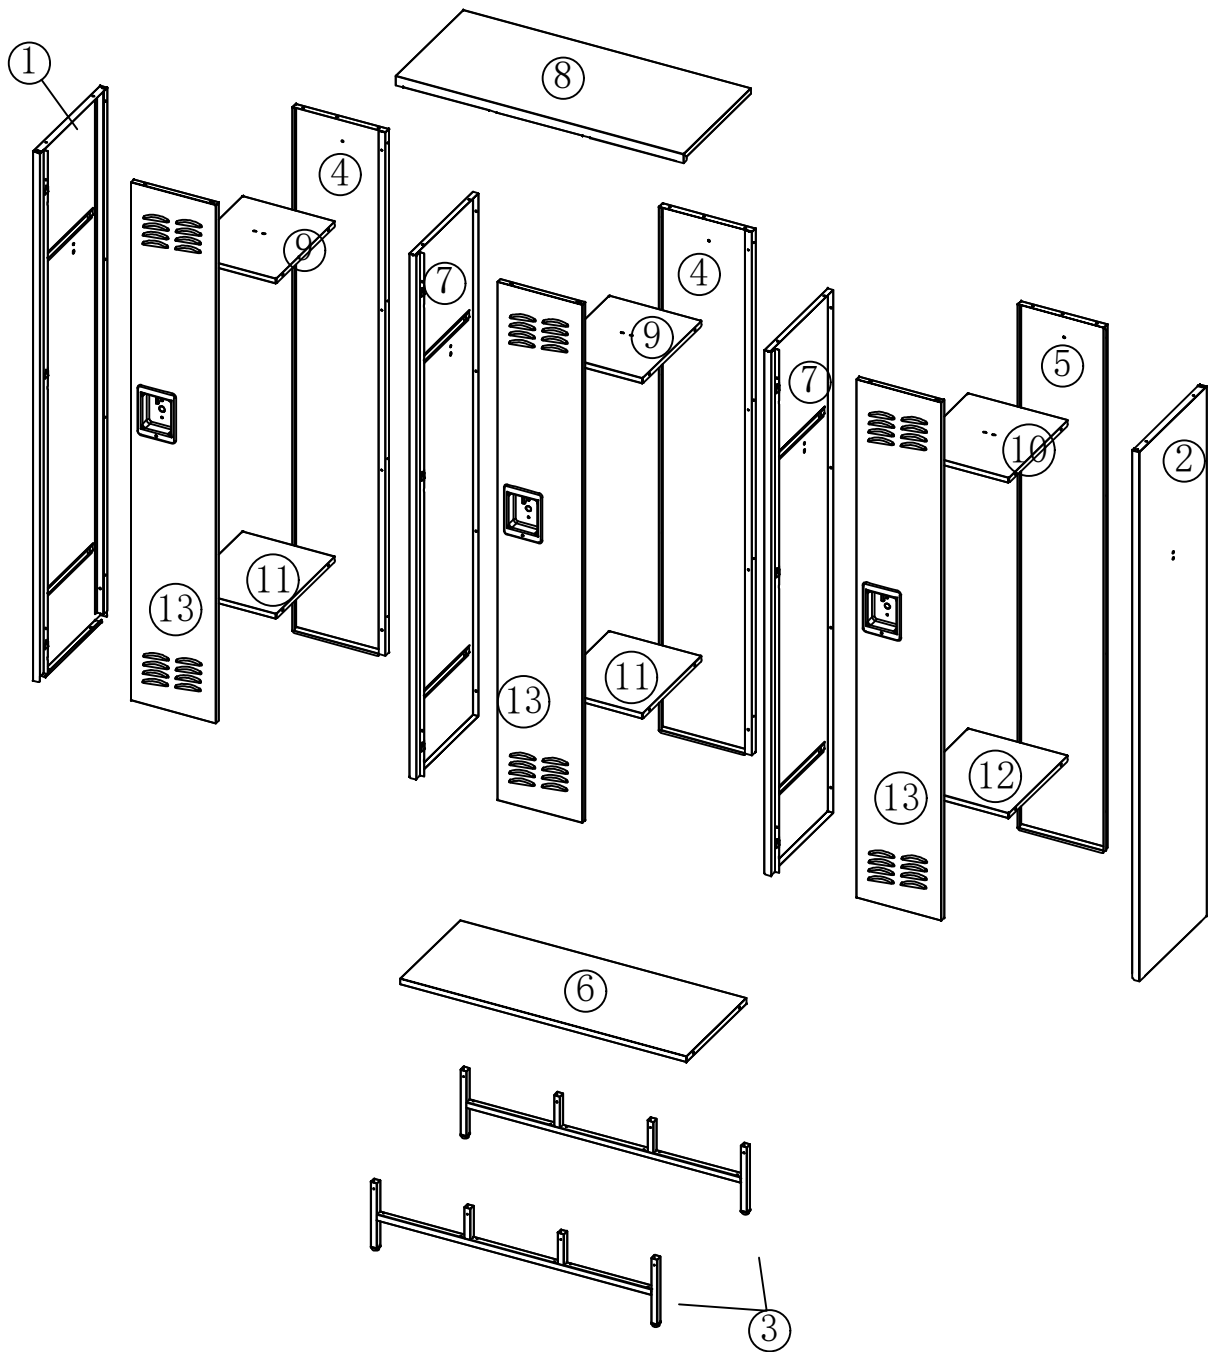

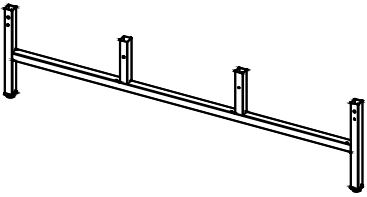








Metal Storage Locker Instructions




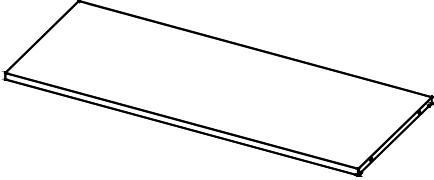

Accessories


1-Left Panel	1PC	2-Right Panel	1PC
			
3-Cross Leg	2PCS	4-Left Back Panel	2PCS
			
5-Right Back Panel	1PC	6-Bottom Panel	1PC
			

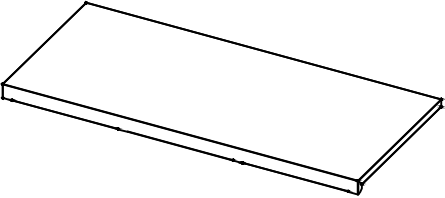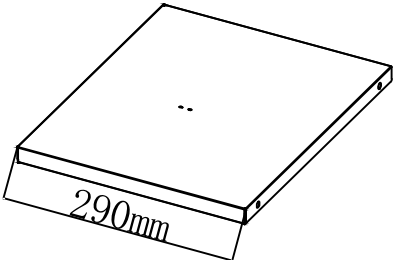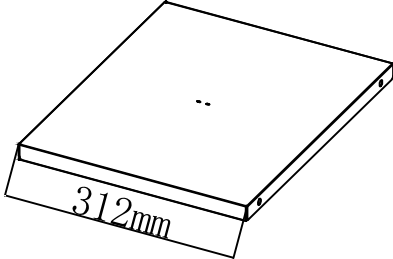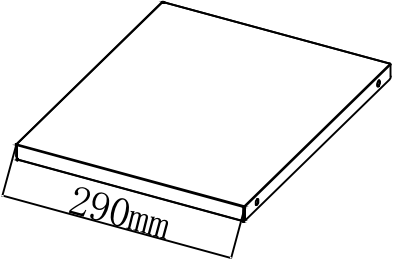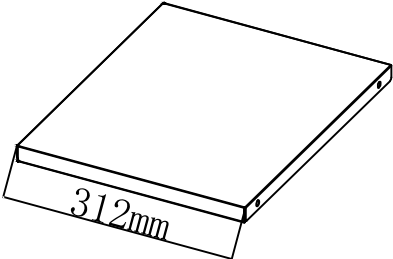7-Middle Side Pante	2PCS	8-Top Panel	1PC
			
9-Left Shelf 9	2PCS	10-Right Shelf 10	1PC
			
11-Left Shelf 11	2PCS	12-Right Shelf 12	1PC
			

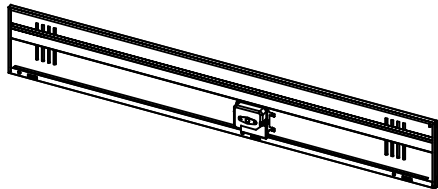
13-Door	3PCS													
														
<table><tr><td>A * 41  M5*12MM</td><td>B * 14  M5</td><td>C * 6 </td><td>D * 3 </td></tr><tr><td>E * 2  M8 M5*30MM M5</td><td>F * 6 </td><td>G * 3 </td><td>H * 3 </td></tr><tr><td>Spare </td><td></td><td></td><td></td></tr></table>			A * 41  M5*12MM	B * 14  M5	C * 6 	D * 3 	E * 2  M8 M5*30MM M5	F * 6 	G * 3 	H * 3 	Spare 			
A * 41  M5*12MM	B * 14  M5	C * 6 	D * 3 											
E * 2  M8 M5*30MM M5	F * 6 	G * 3 	H * 3 											
Spare 														

Installation Steps


Step 1: Prepare two Part 3 (Pay attention to the direction)

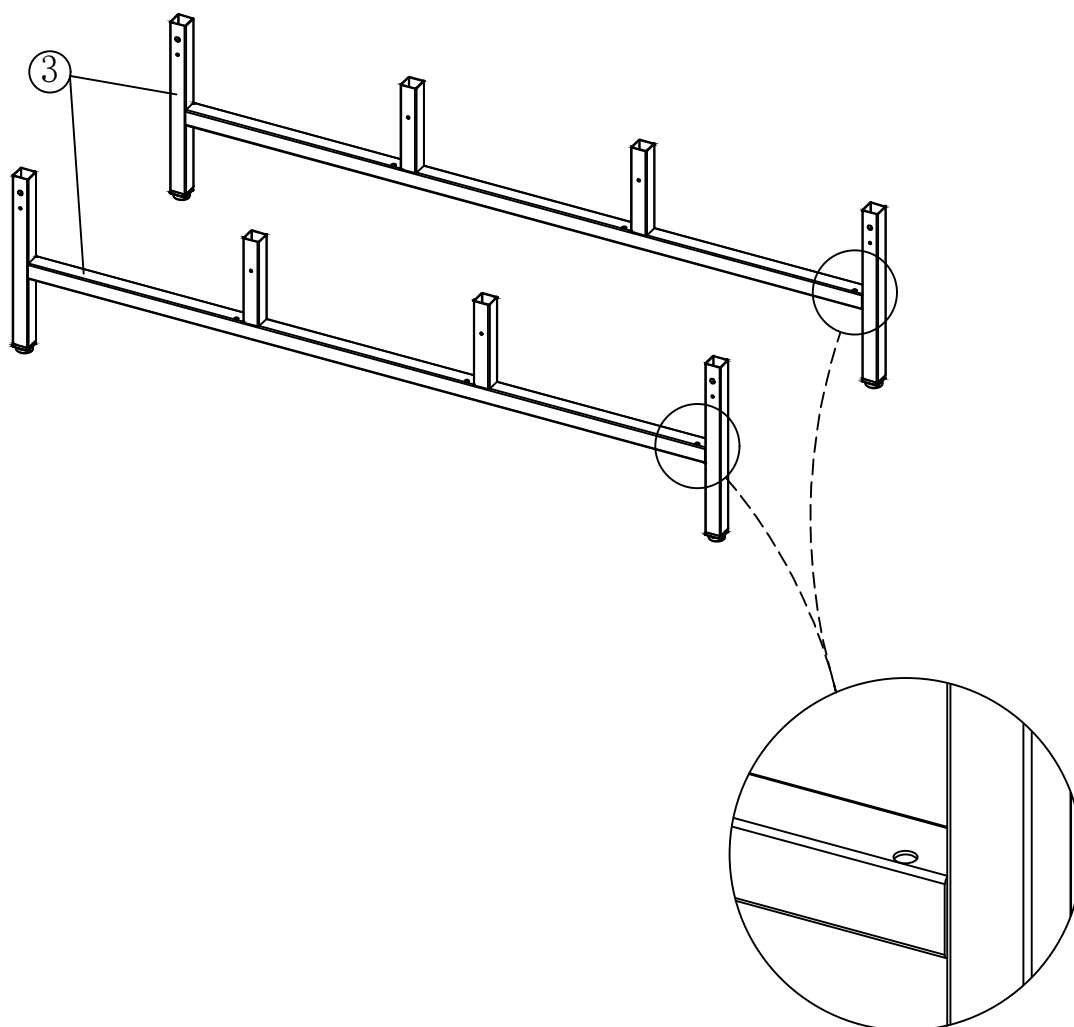



Step 2: Insert Part 1 into Part 3

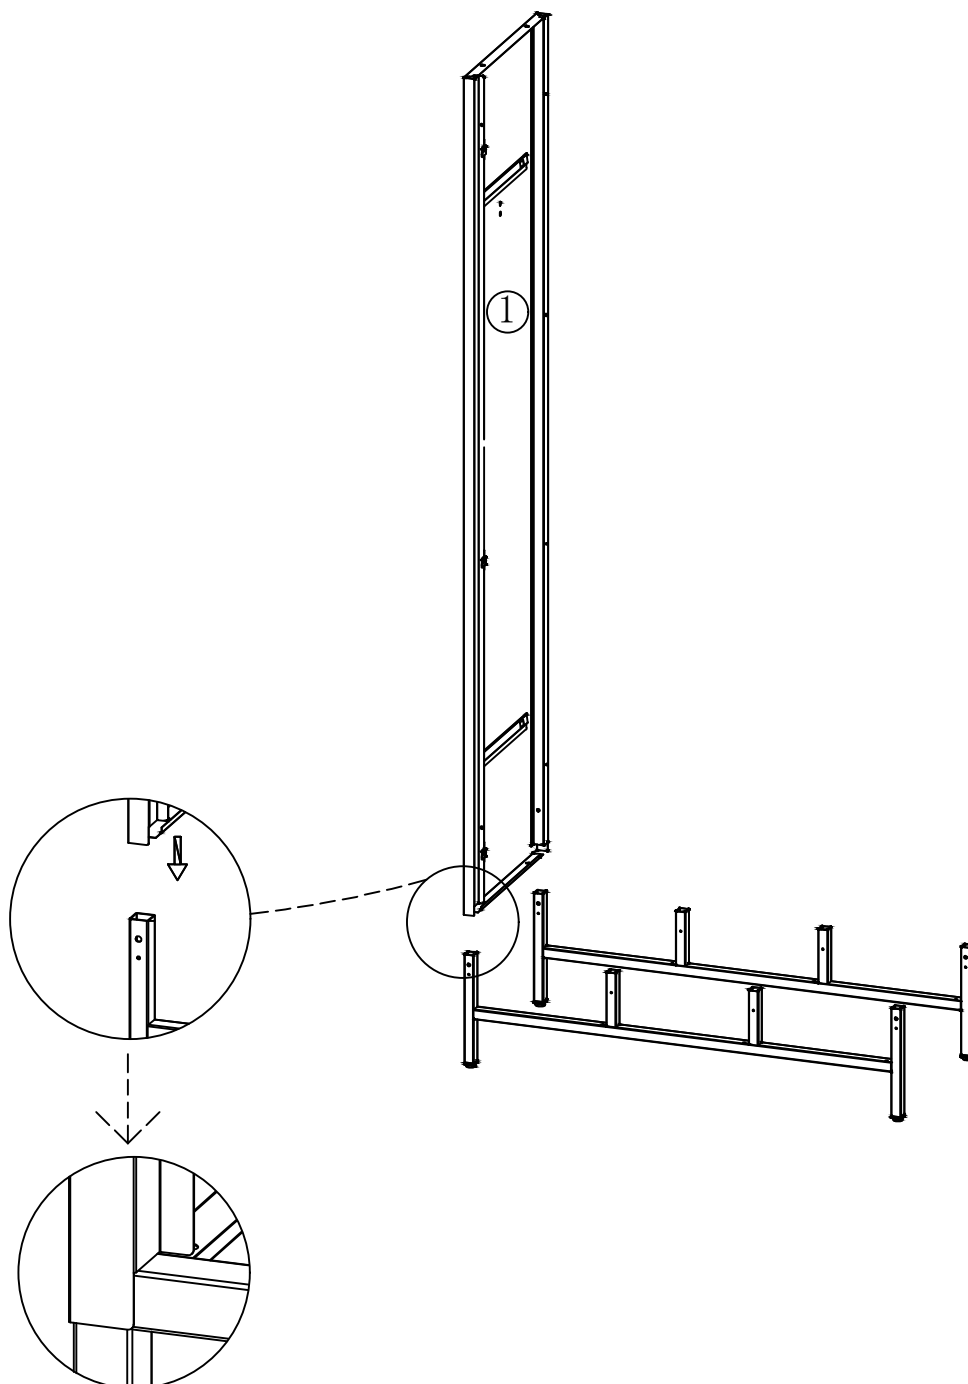



Step 3: Insert Part 2 into Part 3

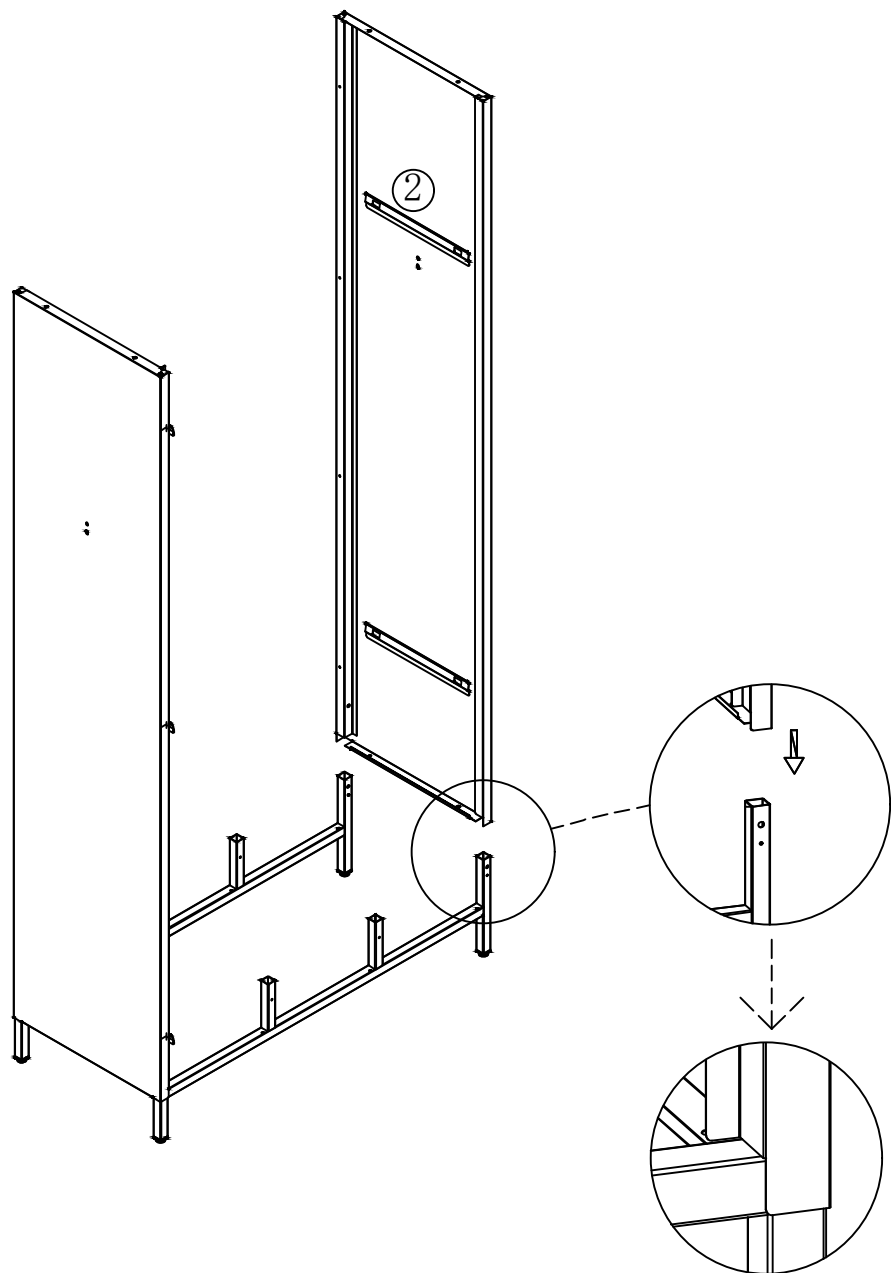


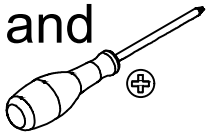
A*4	Step 4: Connect Part 1, Part 2 and Part 3 with Part A	
 M5*12MM		

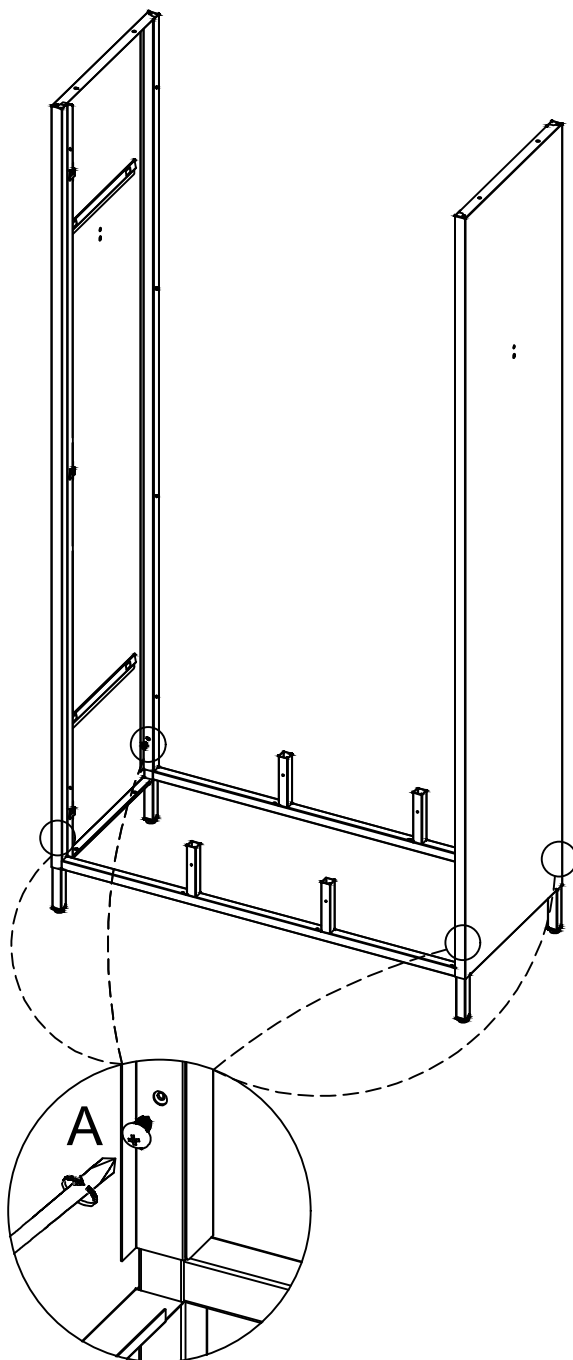


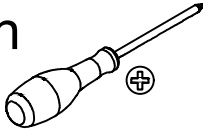
A*4	Step 5: Install Part 4 with Part A	
 M5*12mm		

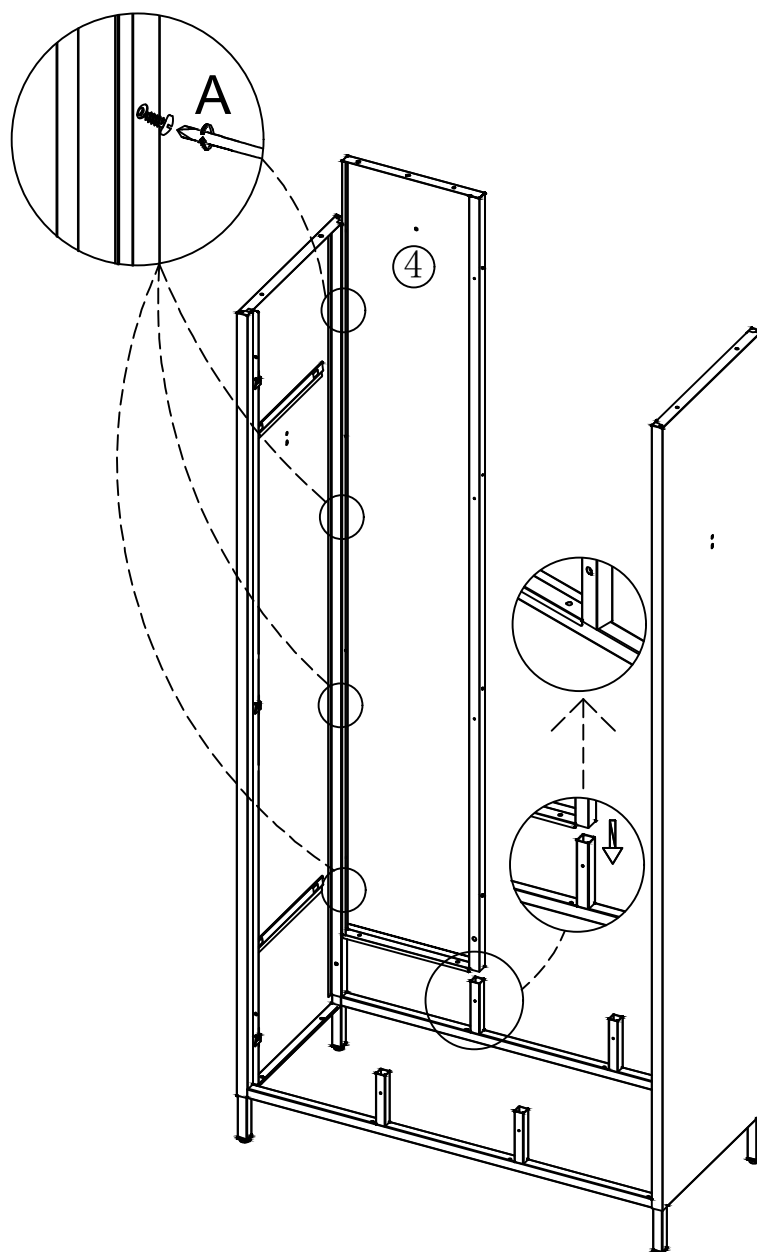

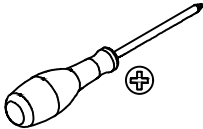
A*4	Step 6: Install another Part 4 with Part A	
 M5*12MM		

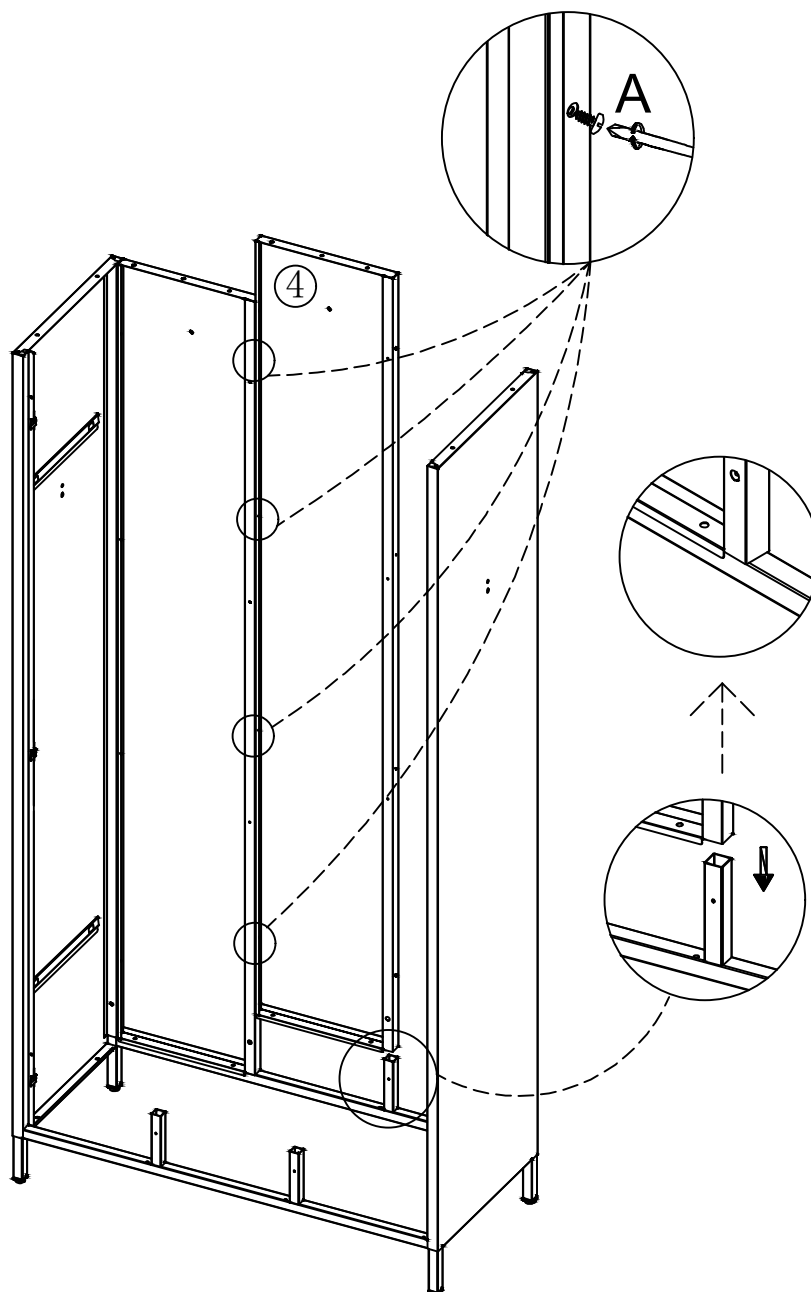


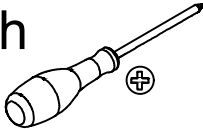
A*8	Step 7: Install Part 5 with Part A	
 M5*12MM		

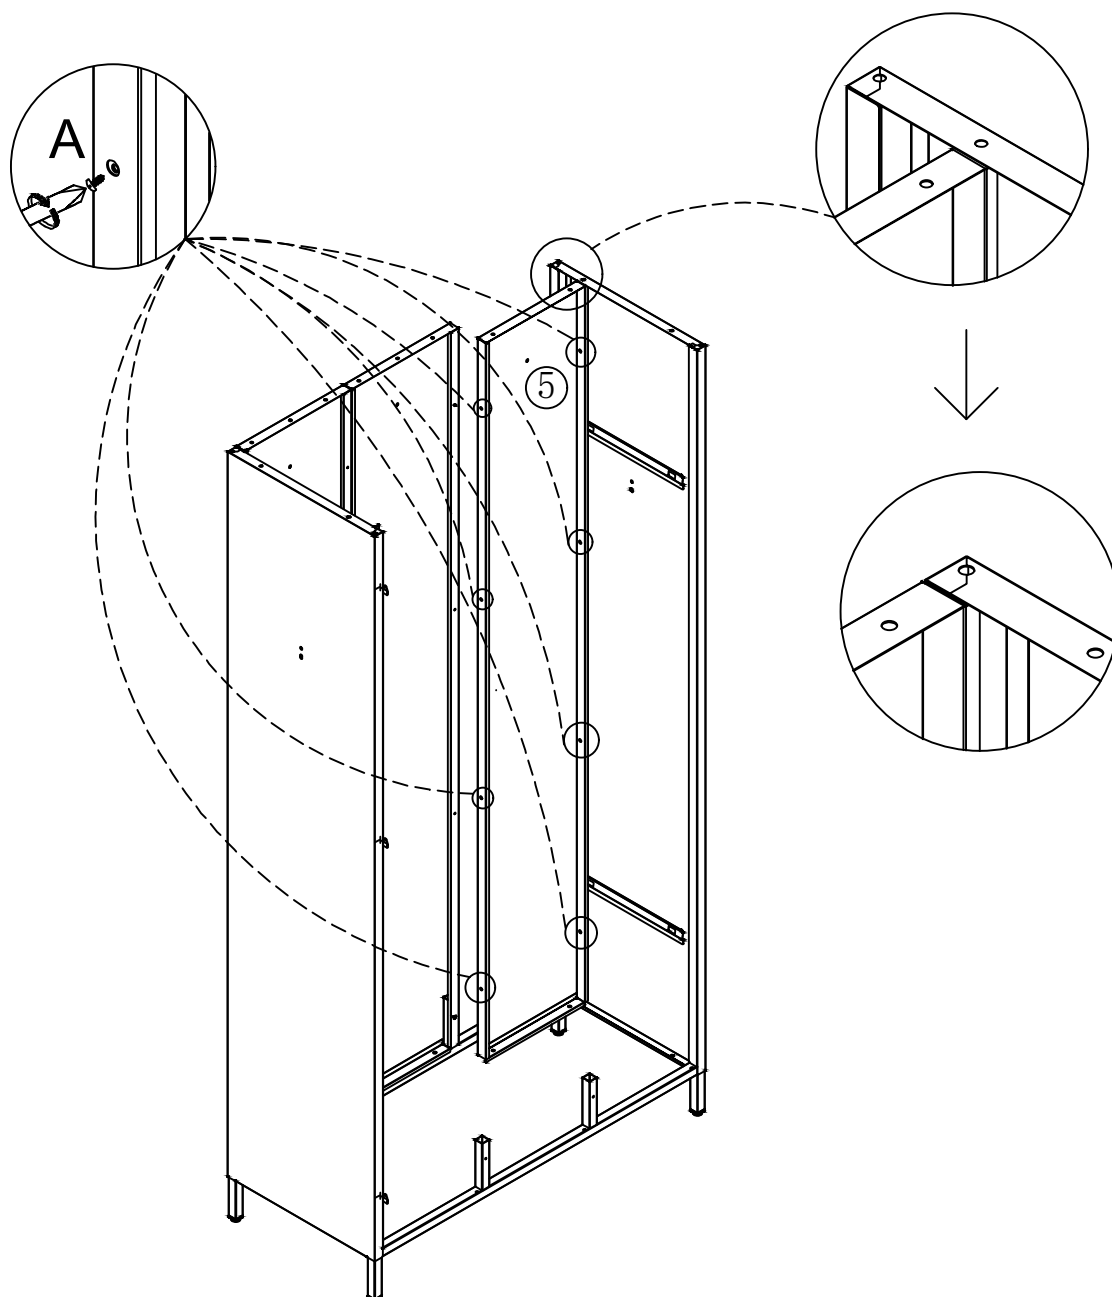


Step 8: Put Part 6 on Part 3

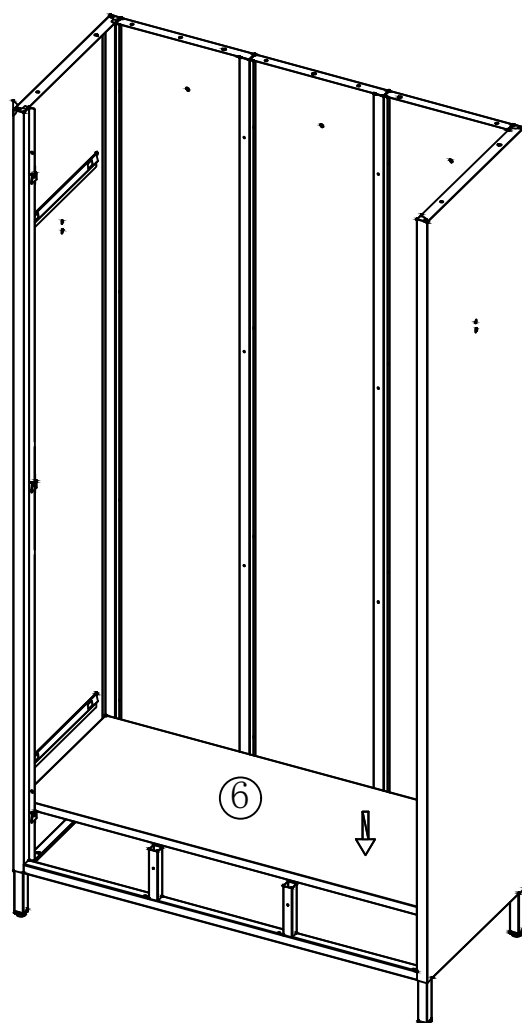

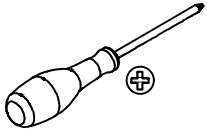
A*10	Step 9: Install Part 7 with Part A	
 M5*12MM		

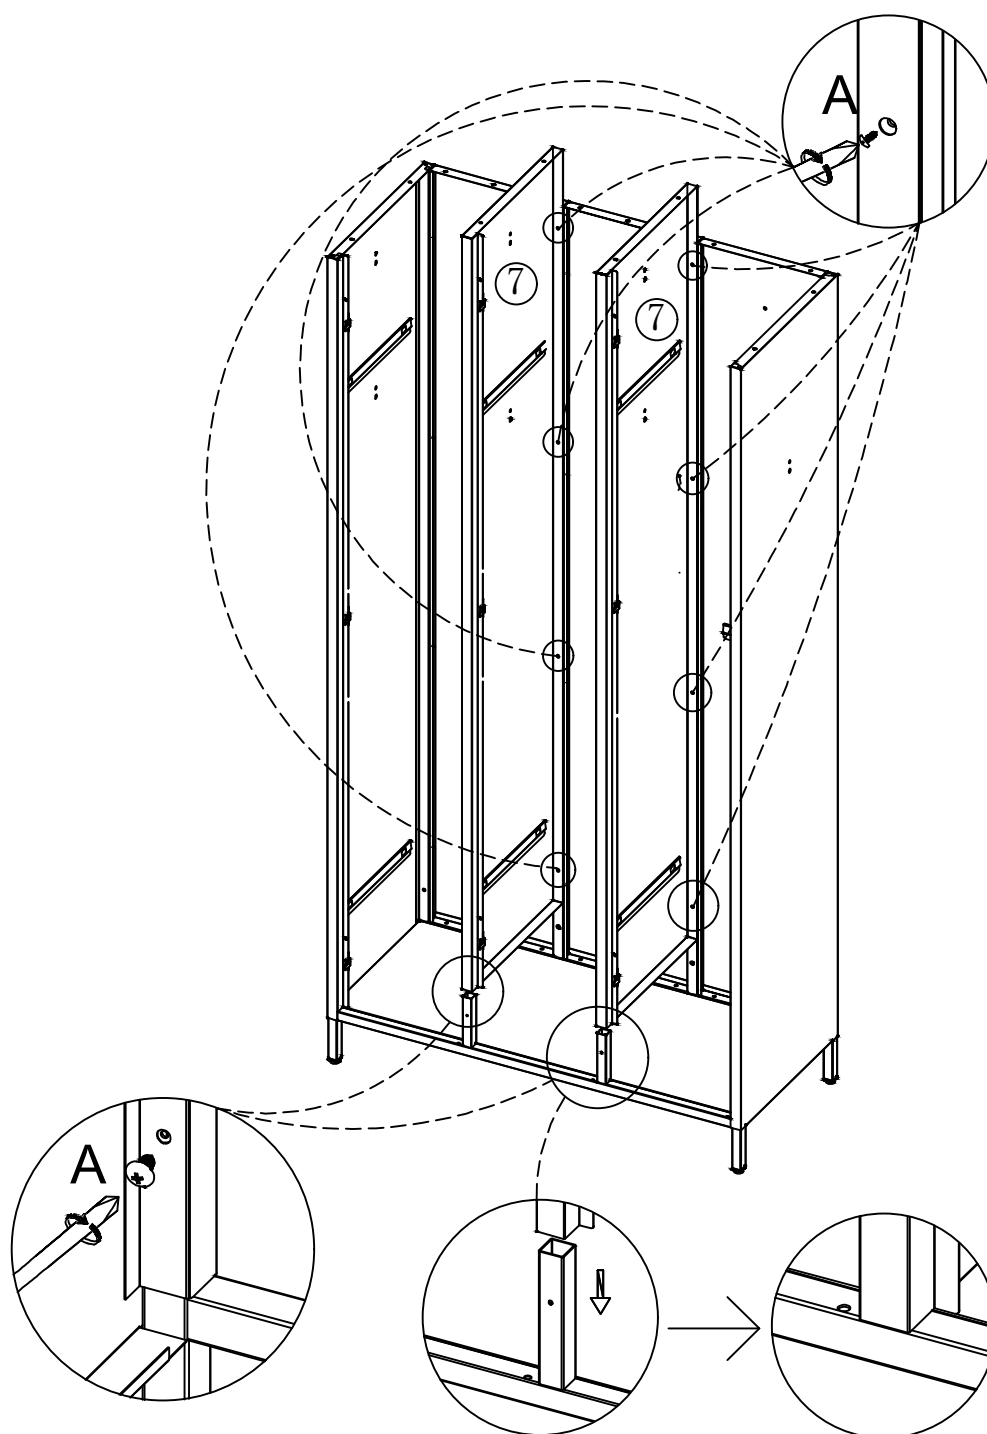



B*8	C*6	Step 10: Install Part C with Part B
		

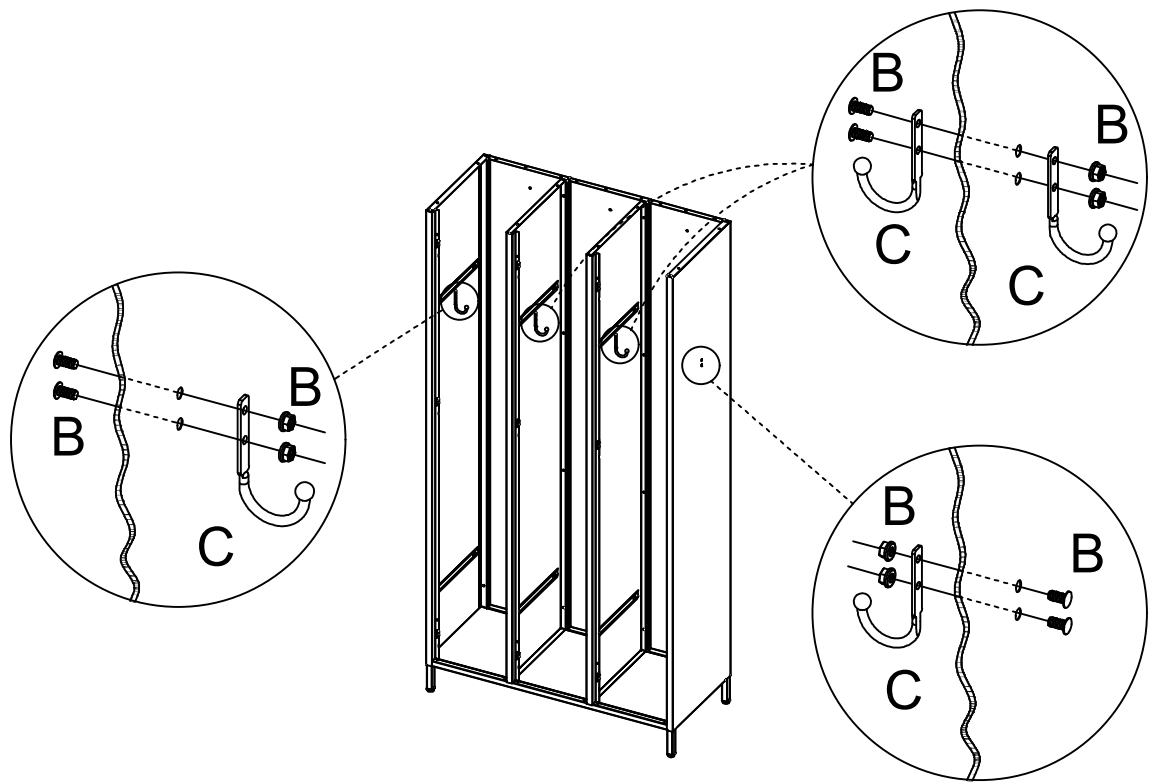

Step 11: Install Part 8

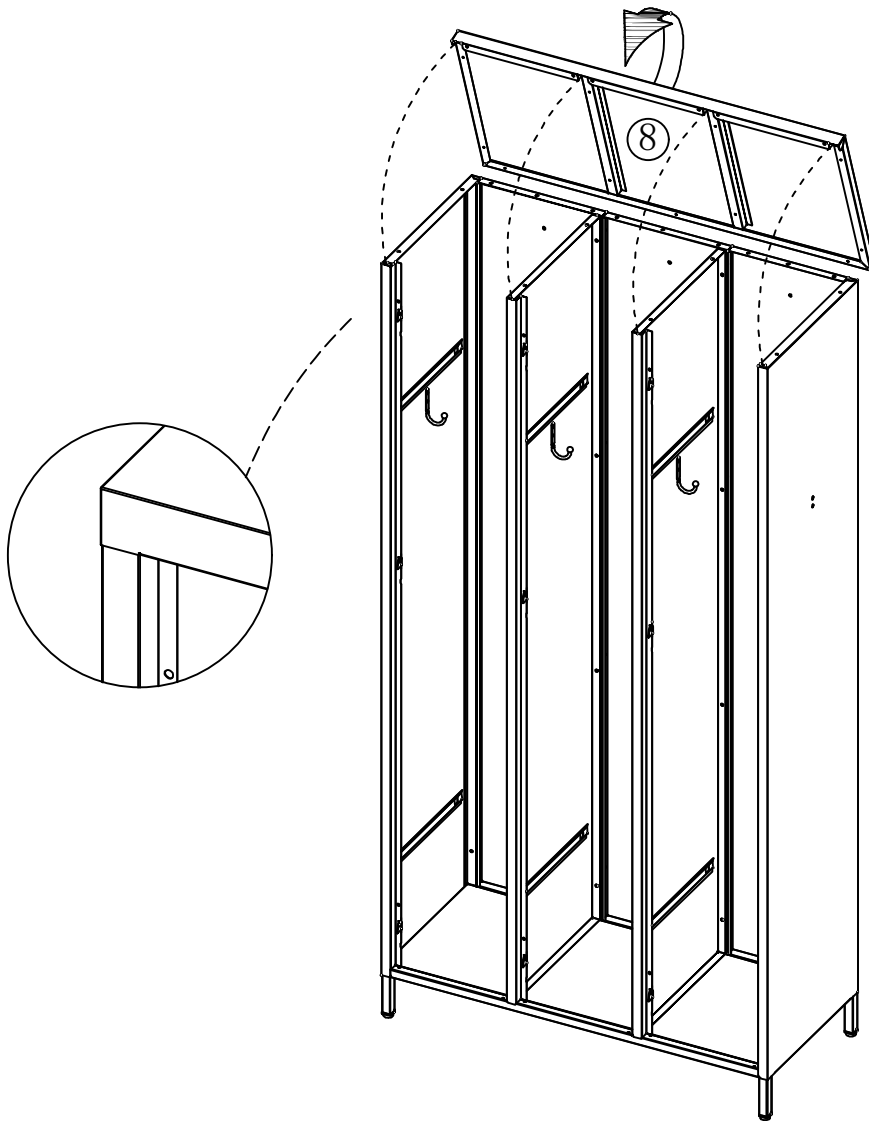

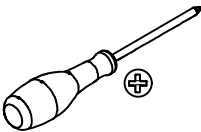
A*11	Step 12: Install Part 8 with Part A	
 M5*12MM		

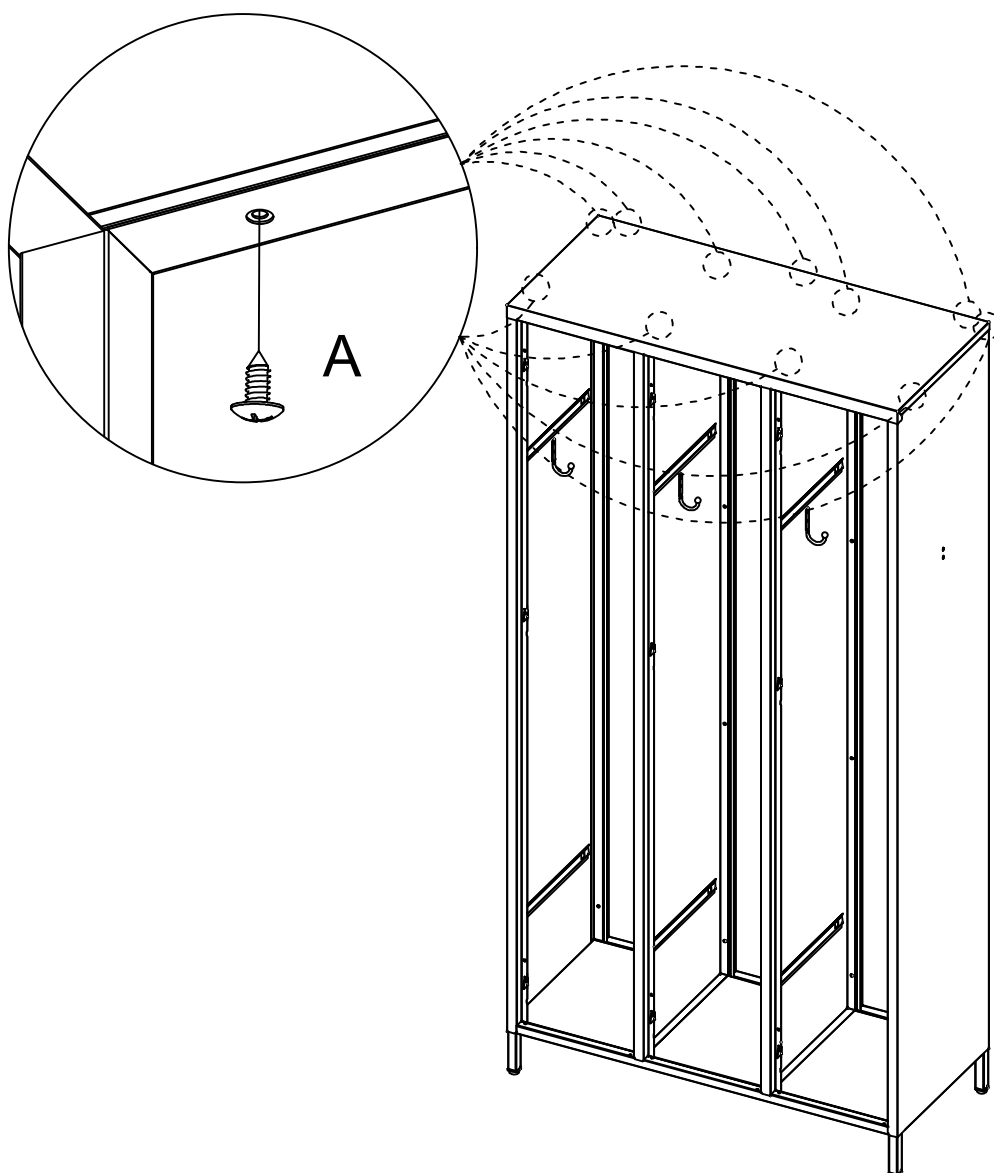


Step 13:	E*2			
	 M8	 M5*30MM	 M5	




This step can help you
fix the cabinet on the
wall.

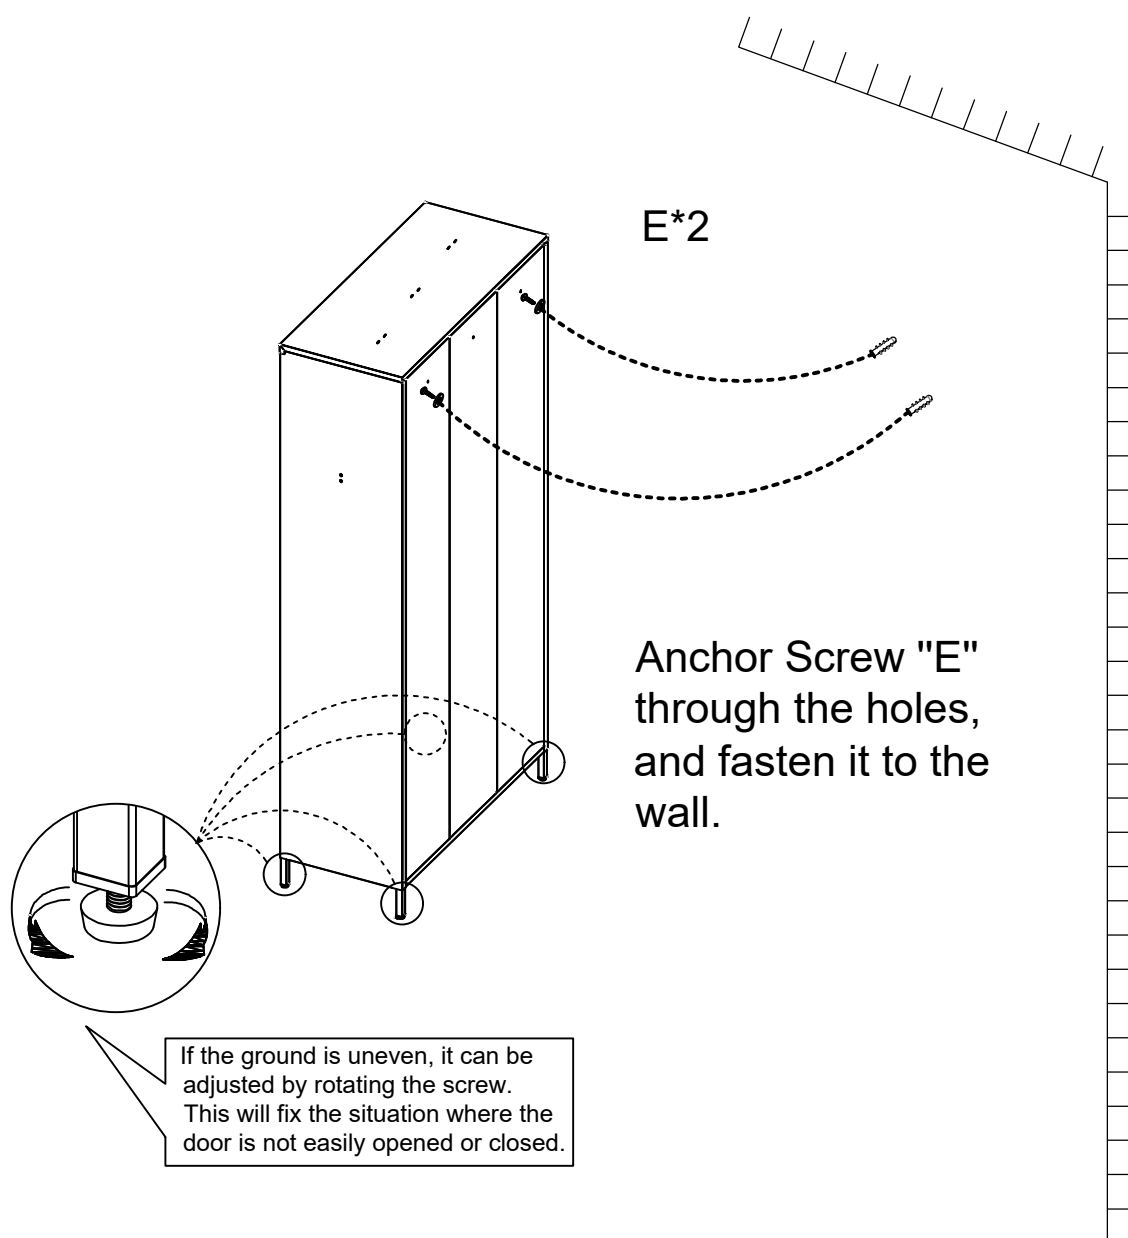


Step 14: Install Part 9

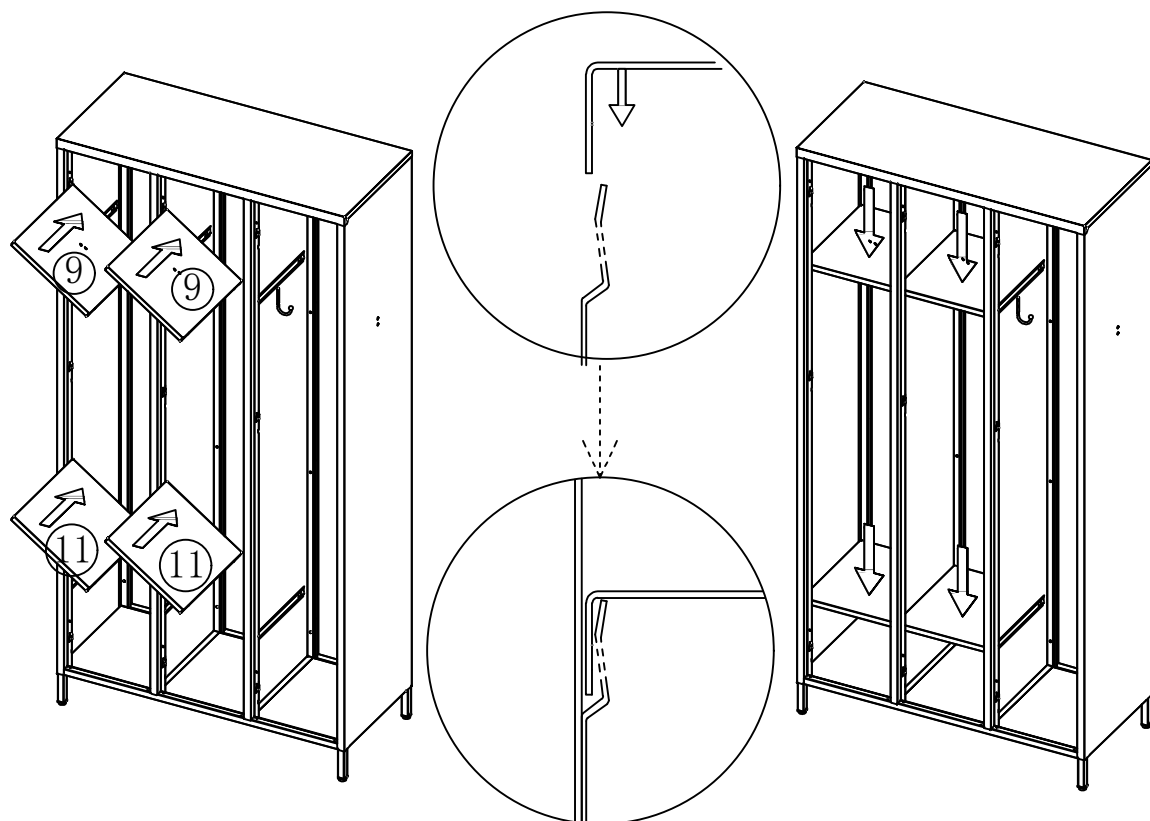

Step 15: Install Part 10

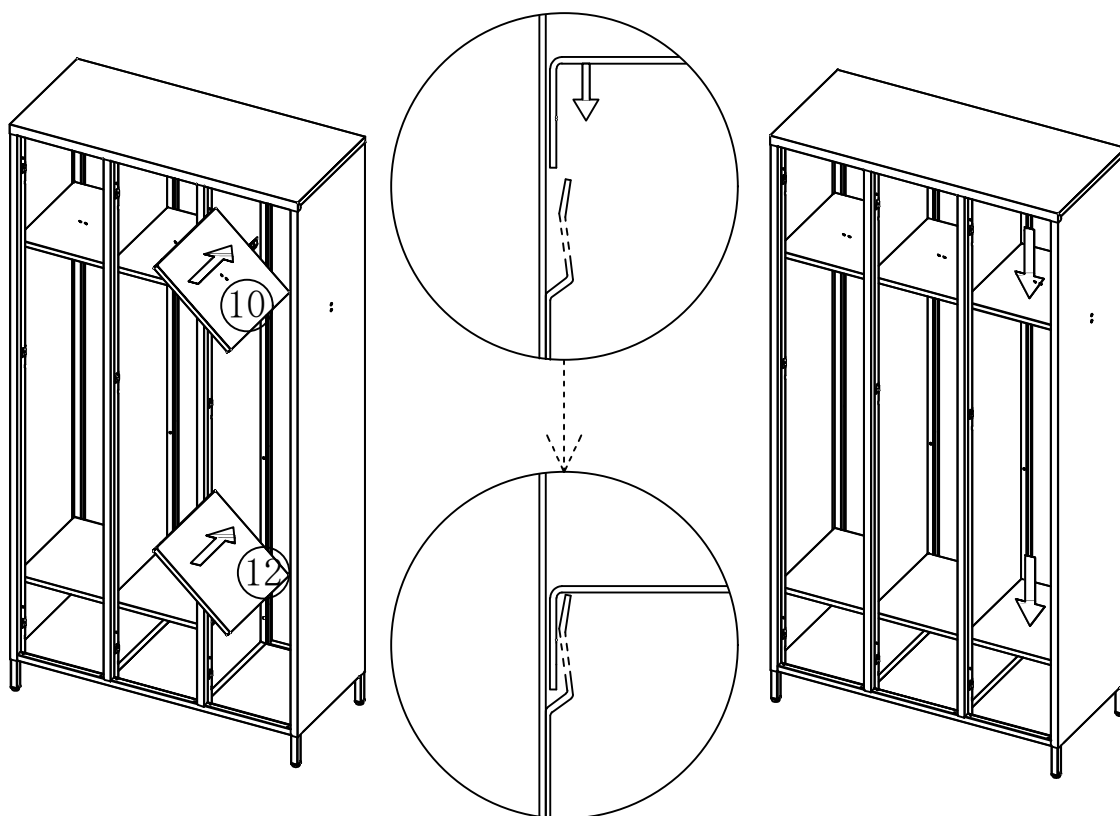


B*6	D*3	Step 16: Install Part D on Part 9 and Part 10 with Part B
		

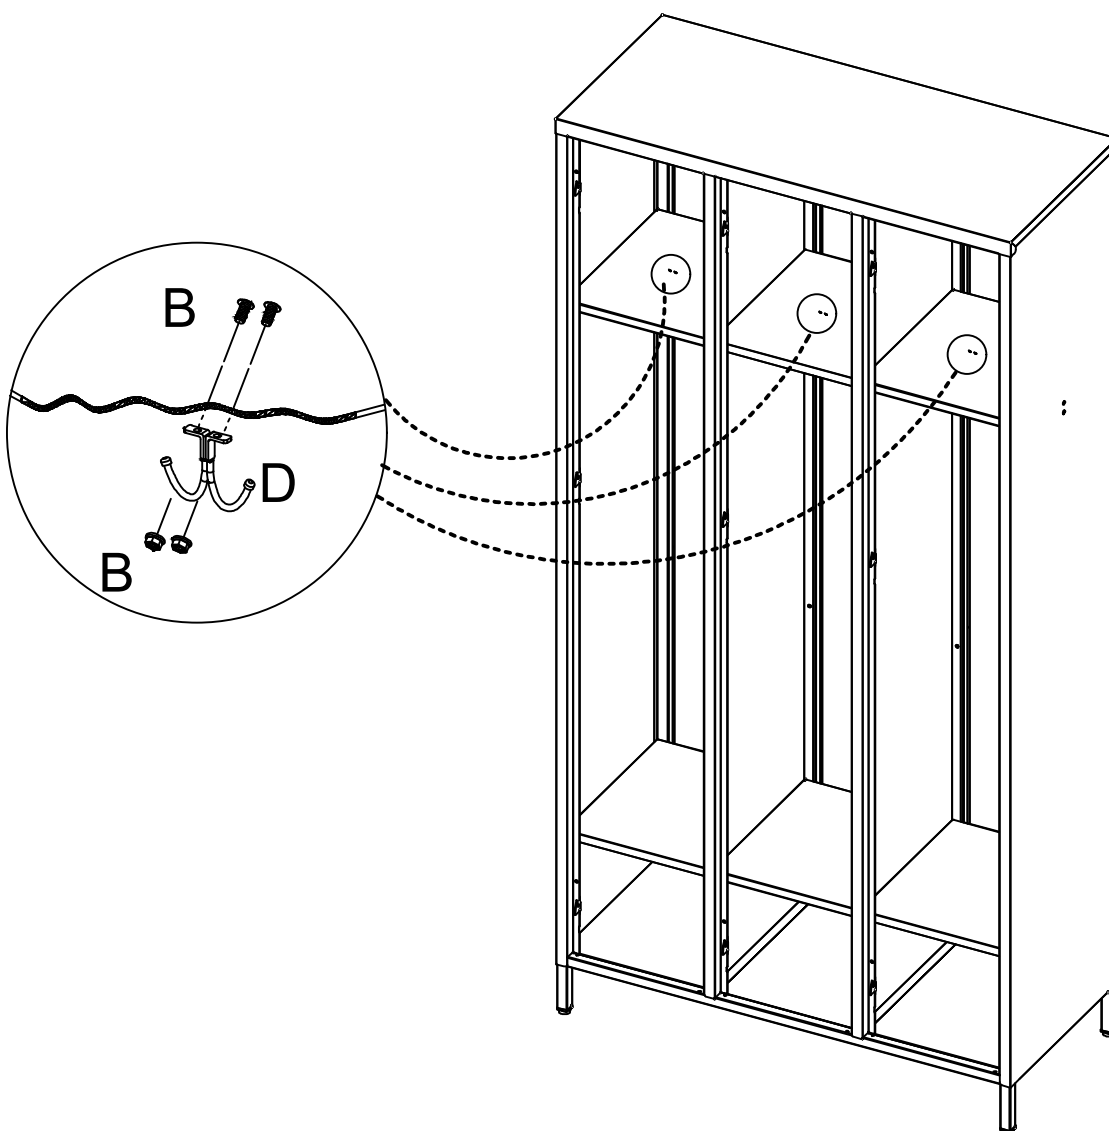


F*6




Step 17: Install Part F

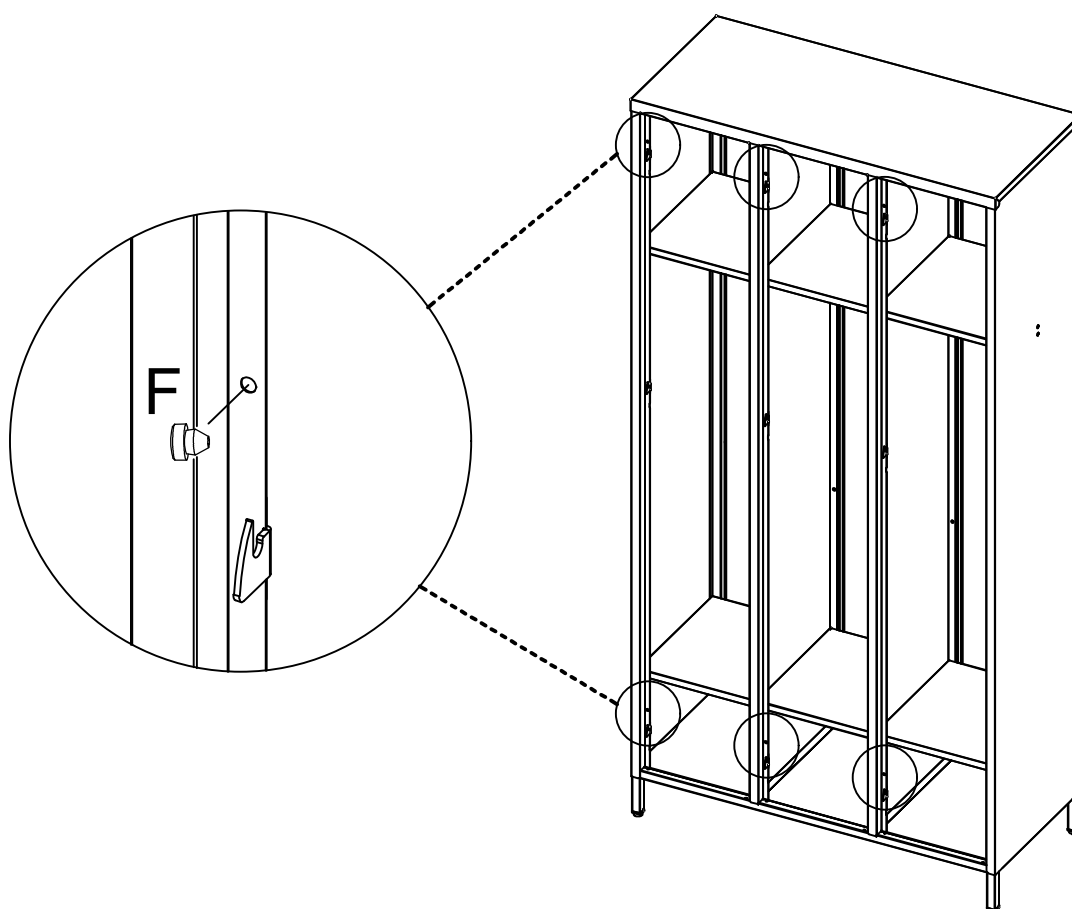


G*3	H*3	Step 18: Install the doors (Part 13)
		

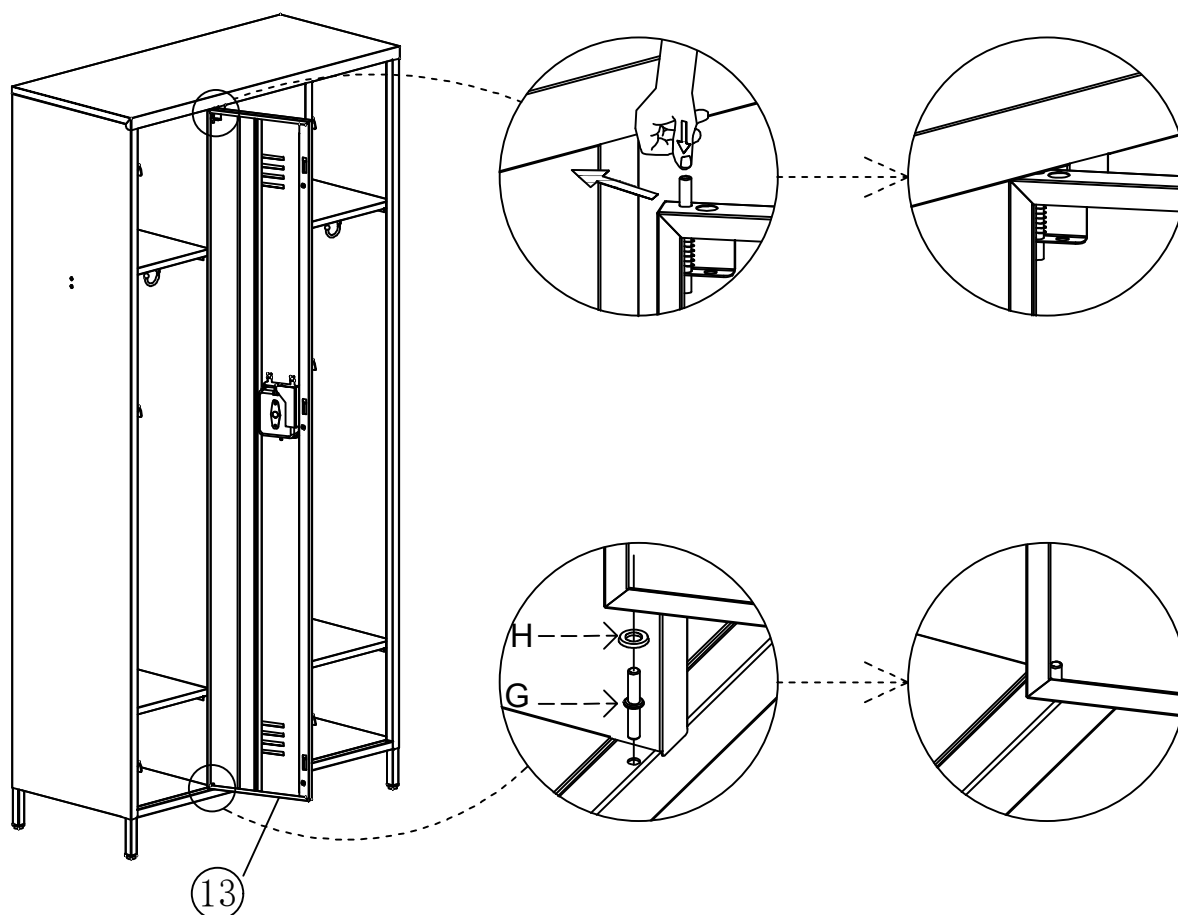

Step 19: Install all the doors

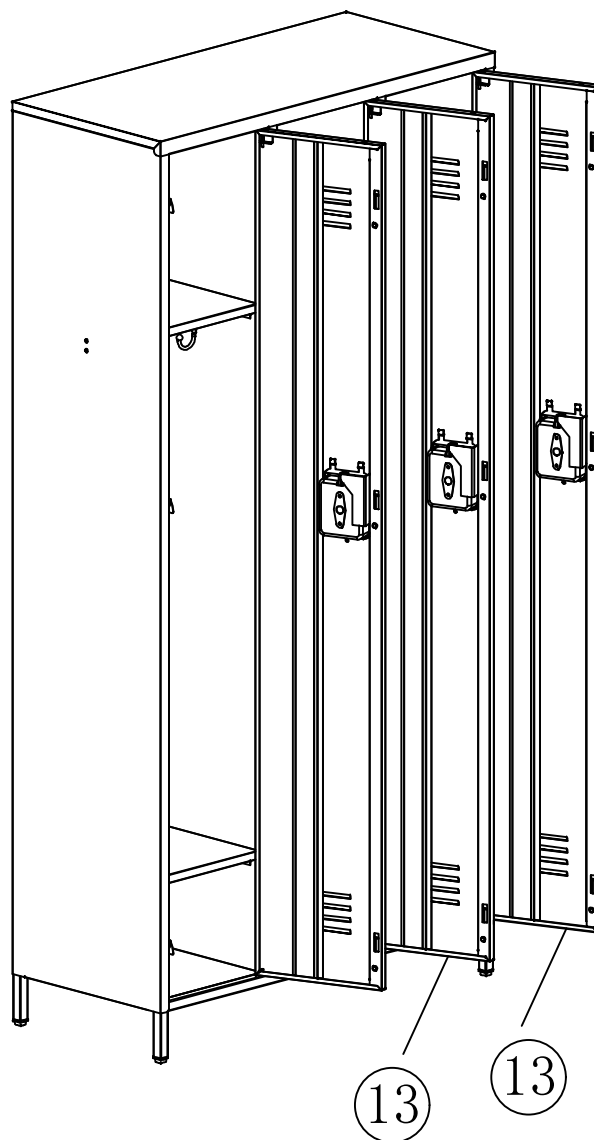

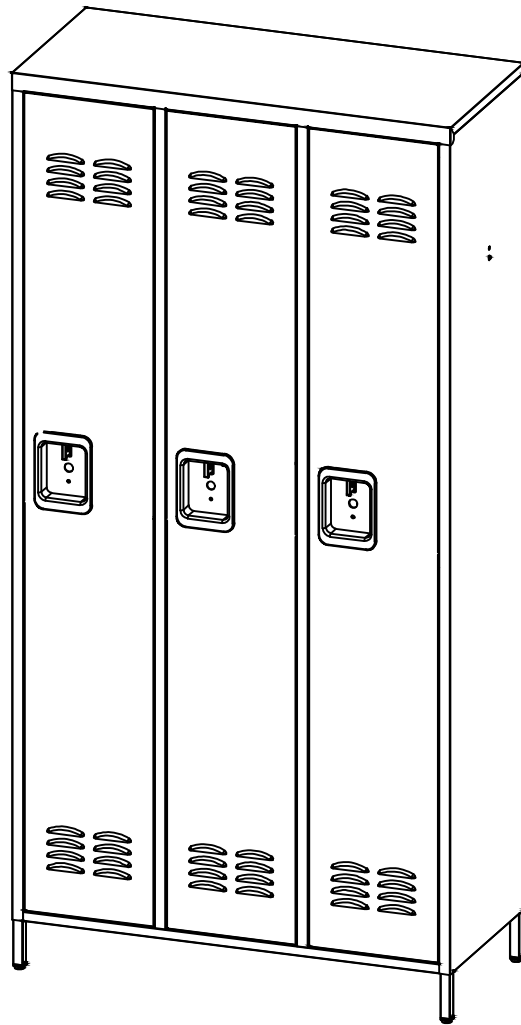

Installation Guide Video