

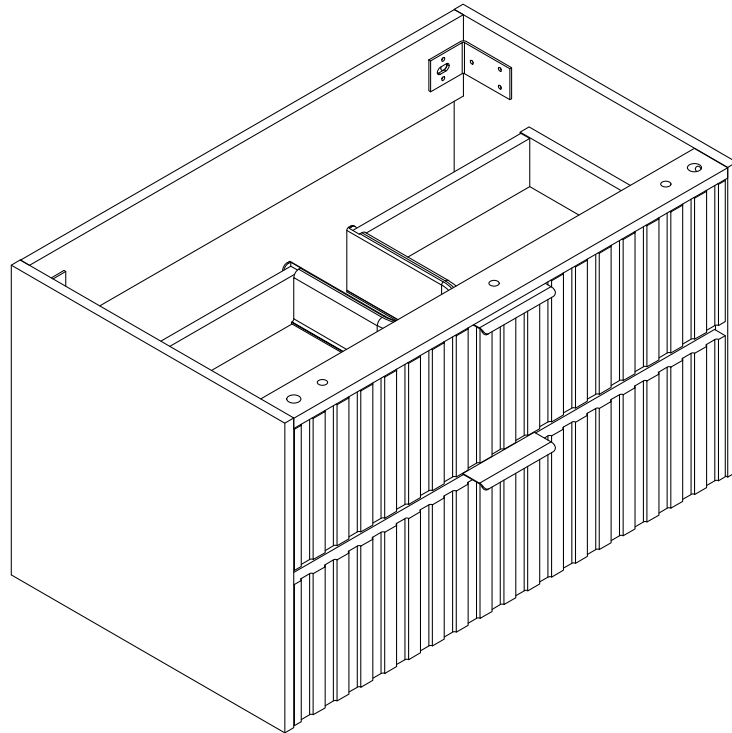
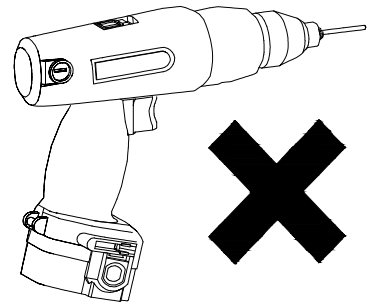


LAELQR725

Assembly Instructions

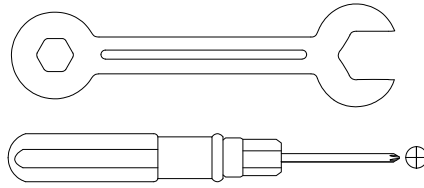


The beginning of installation may feel confusing and painful, but it will get better.

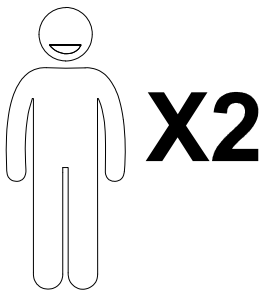



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

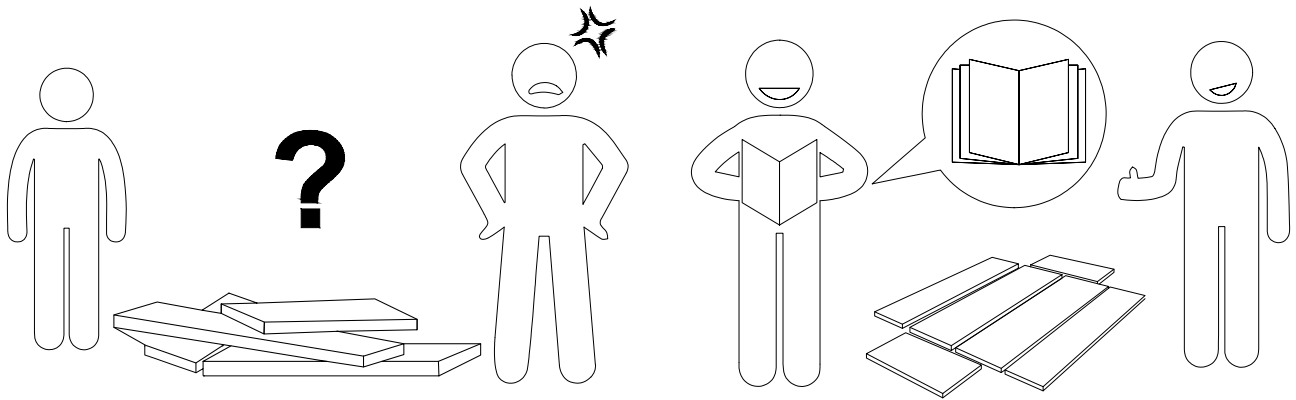

AVOID SCRATCHES

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.


















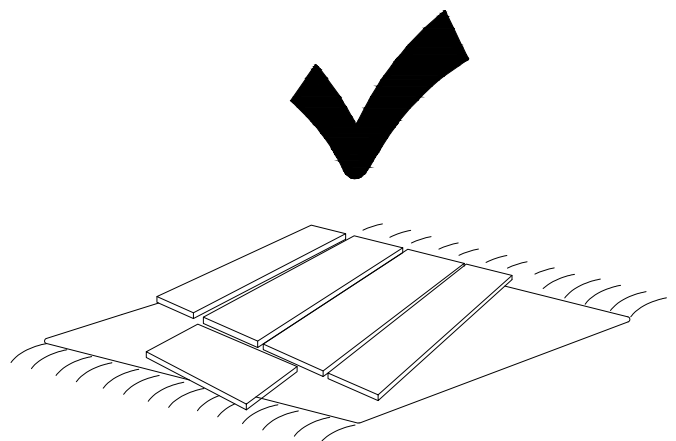
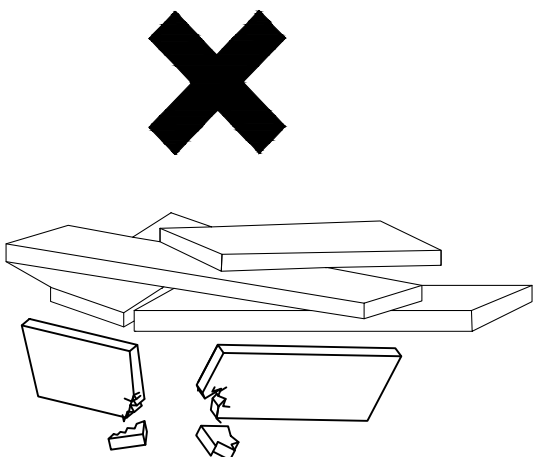


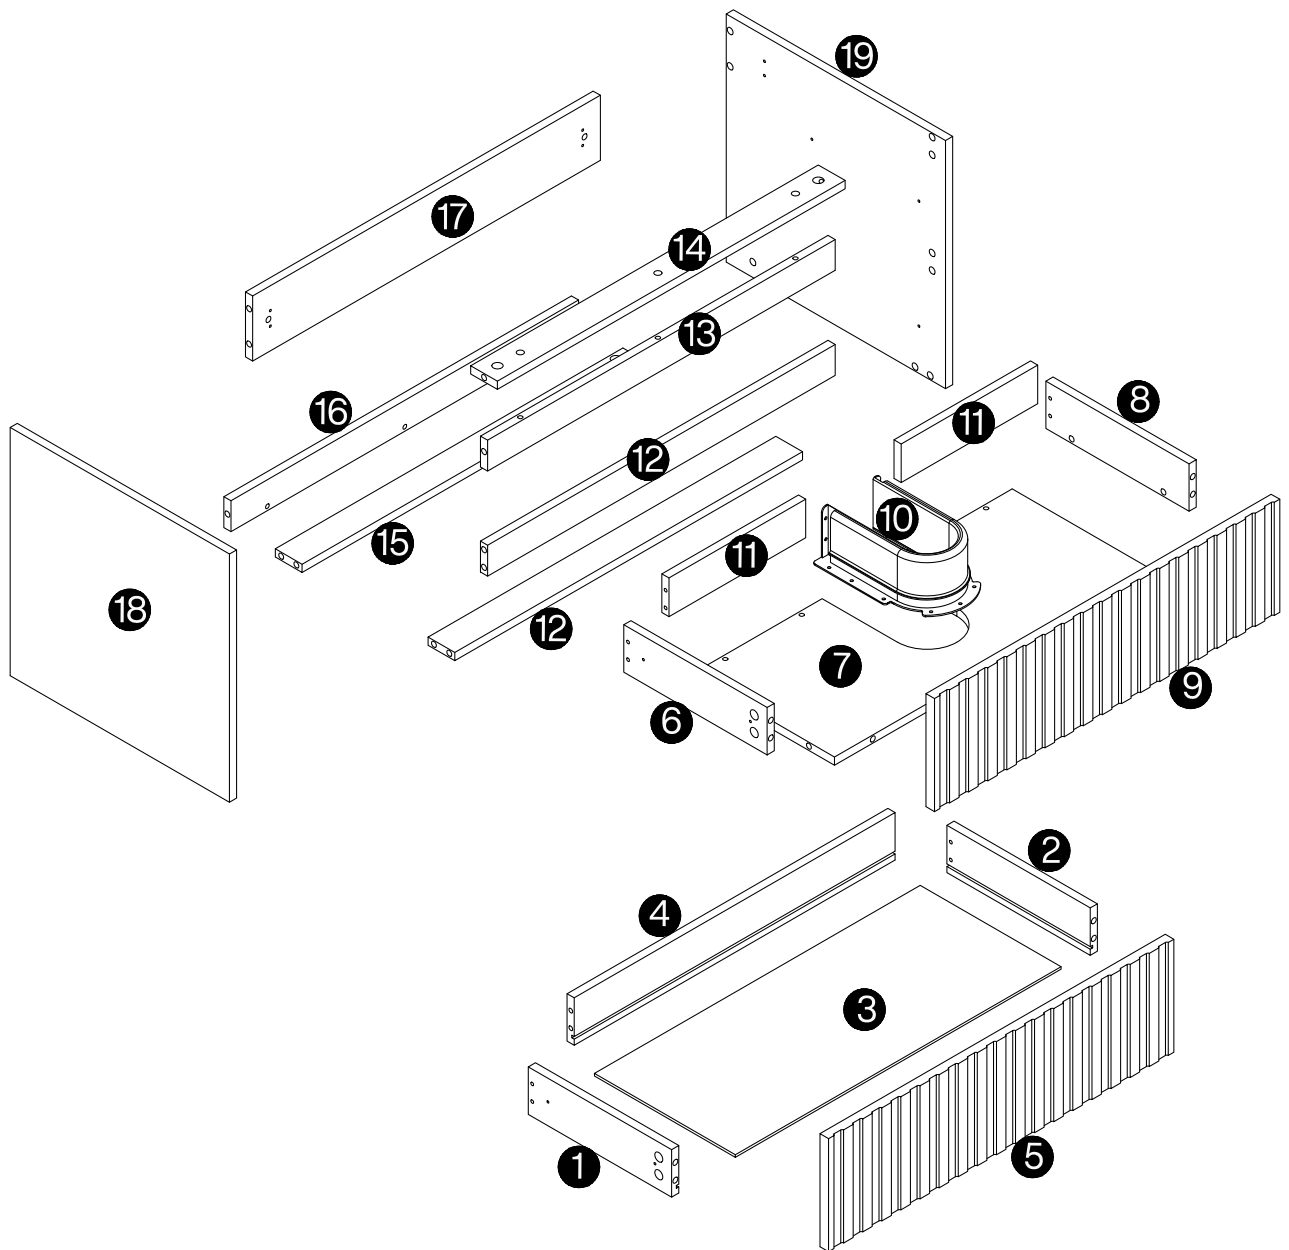




⚠ Caution






Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

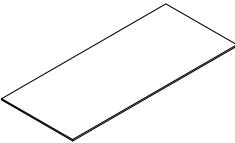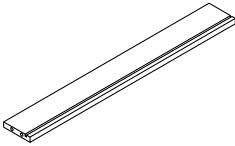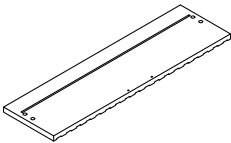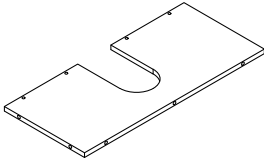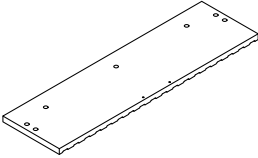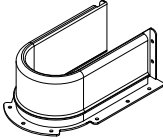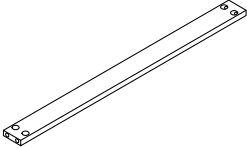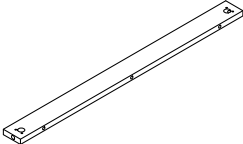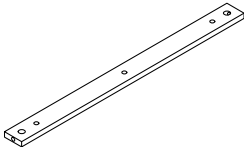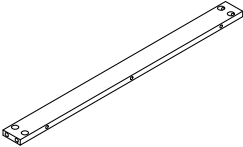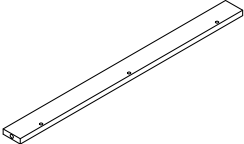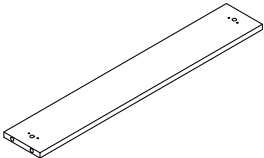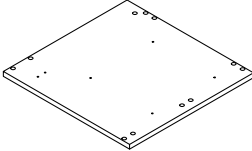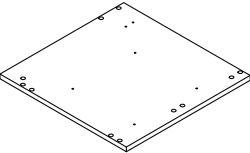1  1 pc	2  1 pc	3  1 pc	4  1 pc	5  1 pc
6  1 pc	7  1 pc	8  1 pc	9  1 pc	10  The accessory comes in a separate package 1 pc
11  2pcs	12  2pcs	13  1 pc	14  1 pc	15  1 pc
16  1 pc	17  1 pc	18  1 pc	19  1 pc	

Hardware List

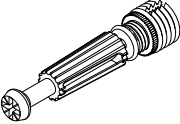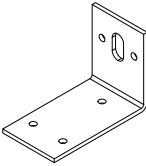
A	B	C	D	E	F
					
M6x40mm	Ø15x10mm		300 mm	Ø3.5x14mm	Ø3.5X35 mm
37+2 pcs	37+2 pcs	2 pcs	2 sets	69+4 pcs	8+2 pcs

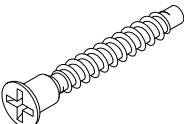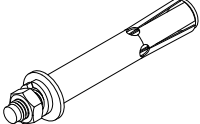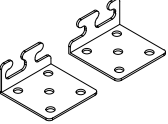G	H	I	J	K	L
					
Ø7x38mm			M8		M8
10+2 pcs	2 pcs	4 pcs	6 pcs	1 pc	1pc


M					
					
1pc					

Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

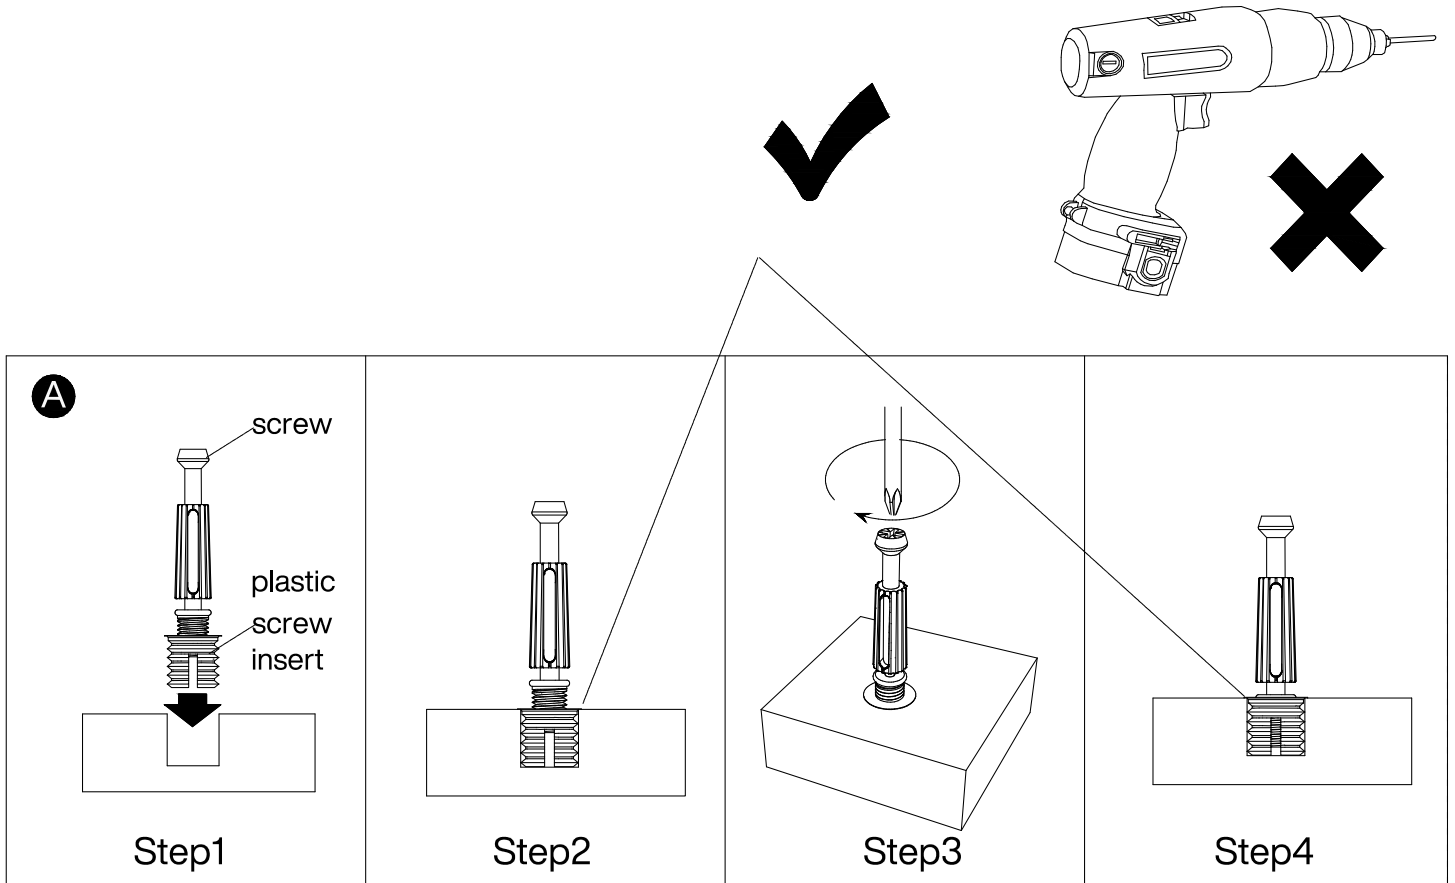


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

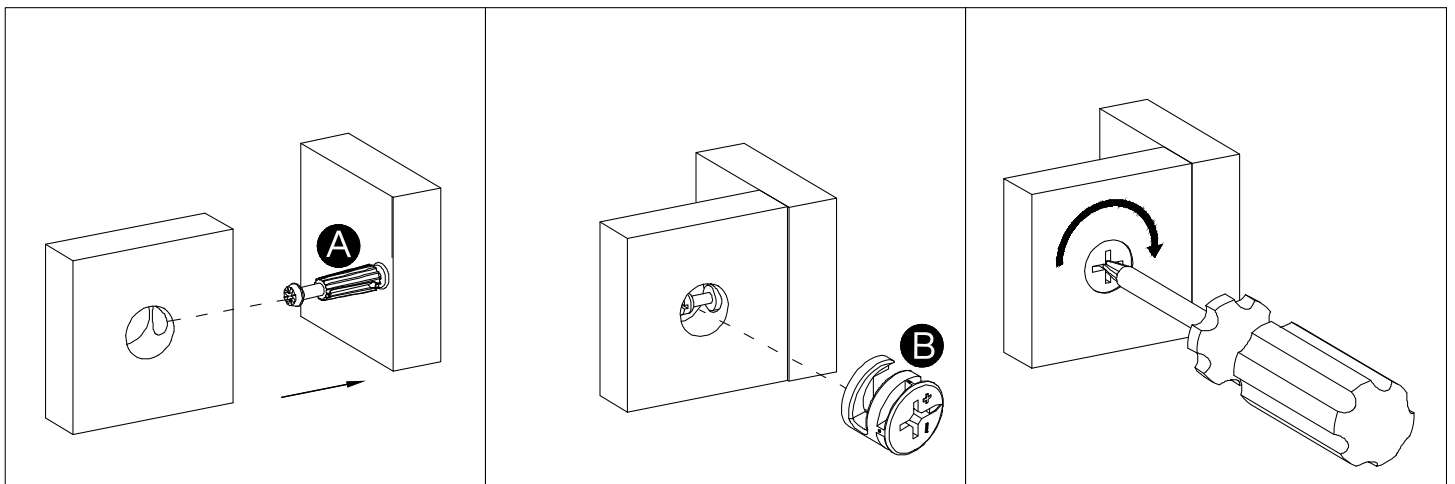

Please split component "D" into "D-1" and "D-2" before assembling the slide rail component, and then proceed to the next step of assembly


Step 1

Pull apart component "D" to each side, and then gently push up the lever of component "D-2"

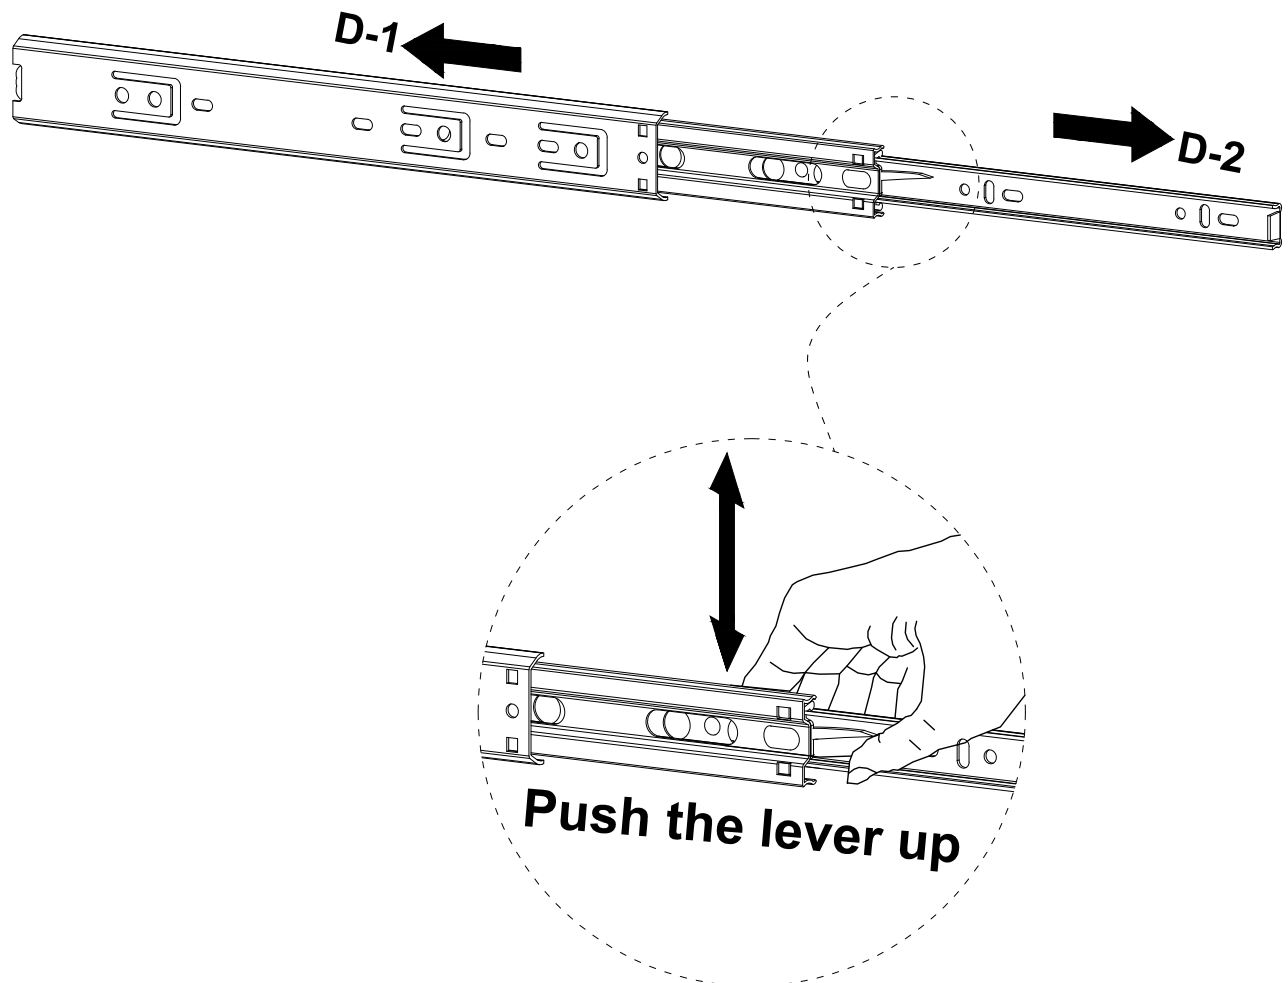

Step 2


Split component "D-1" and "D-2"

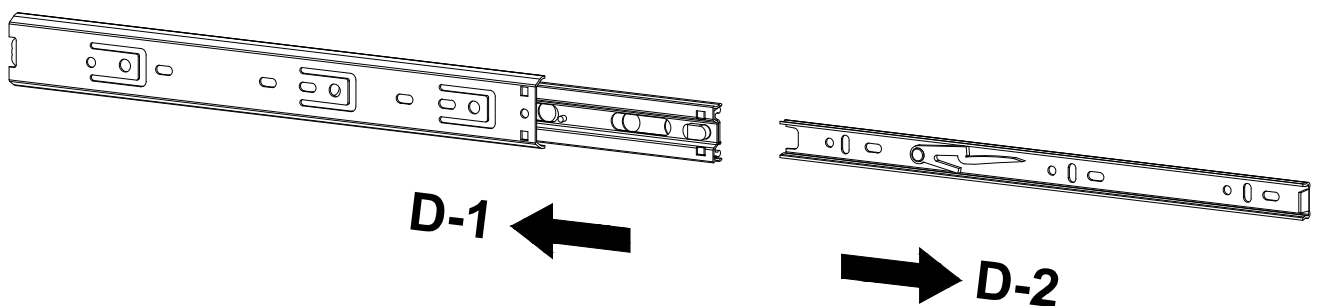

1

A



M6x40mm
4 pcs

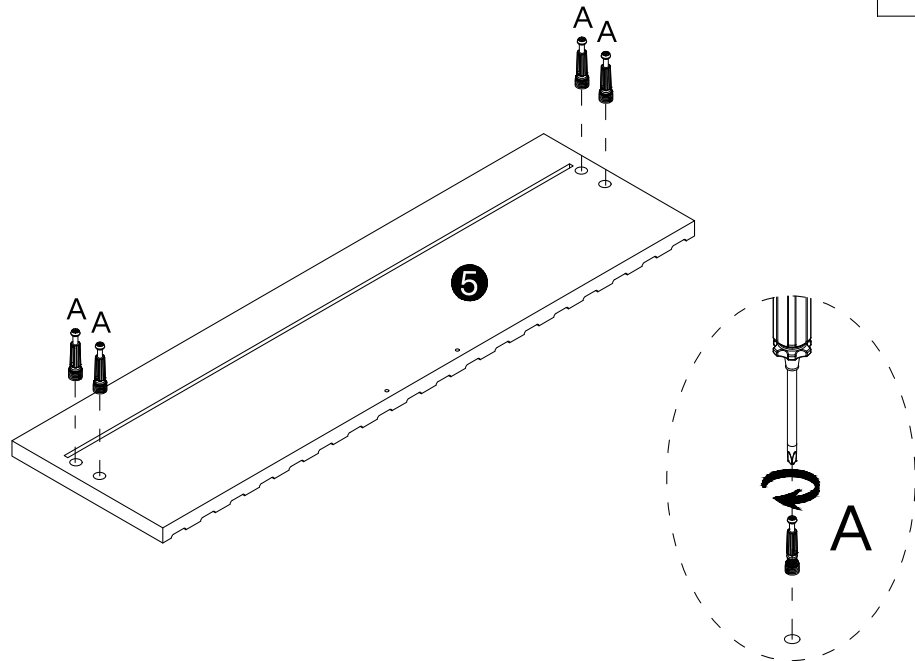


2

B


Ø15X10 mm
4 pcs

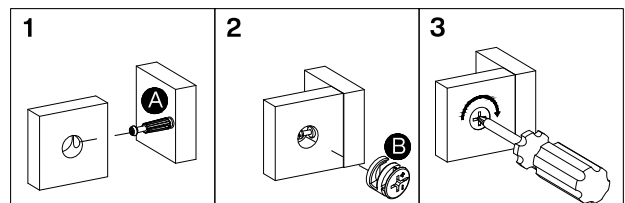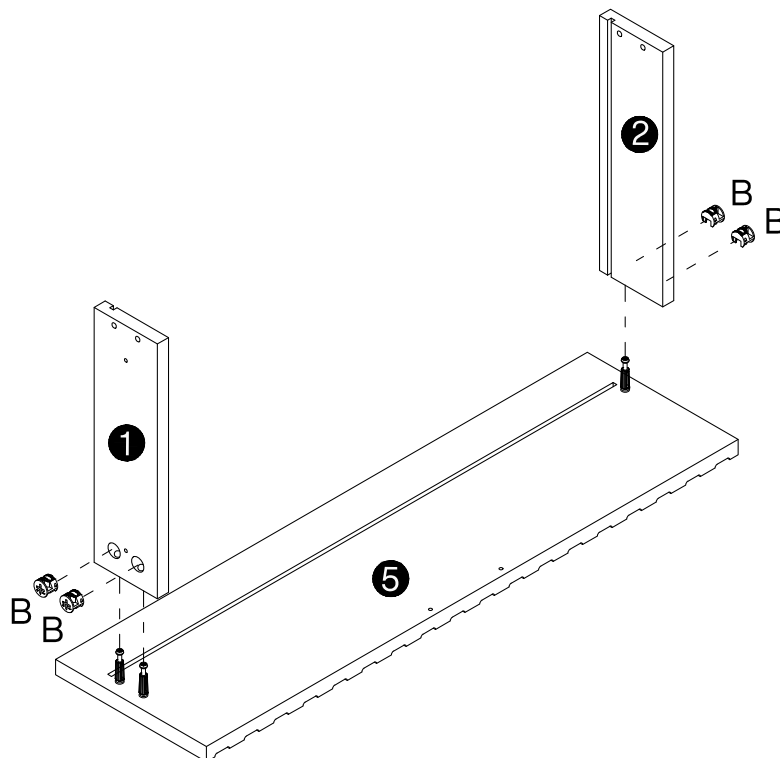

3

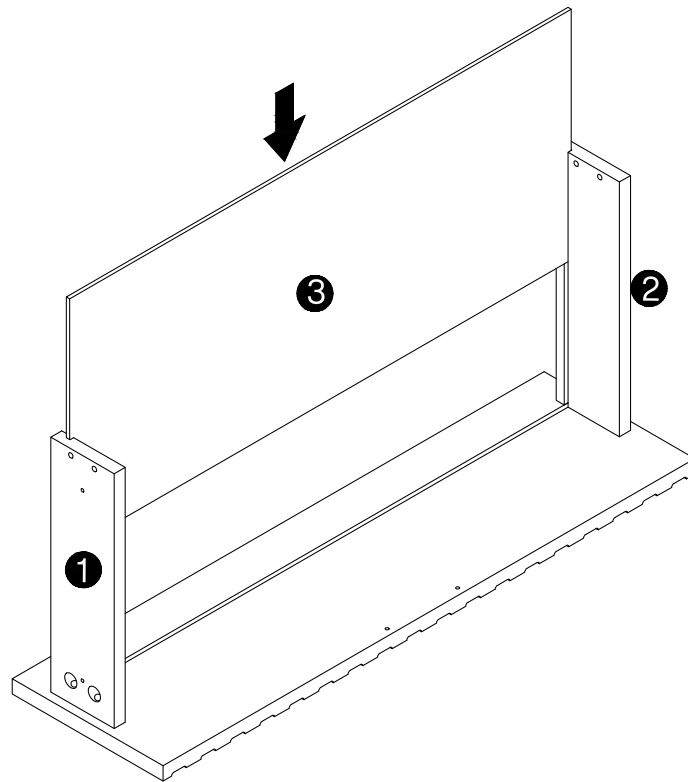

4

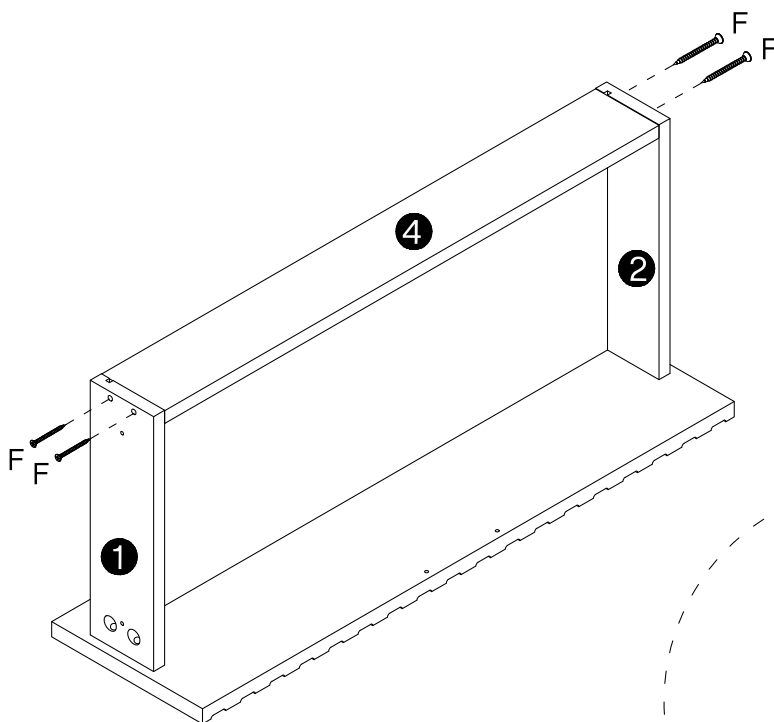


F




Ø3.5x35mm


4 pcs

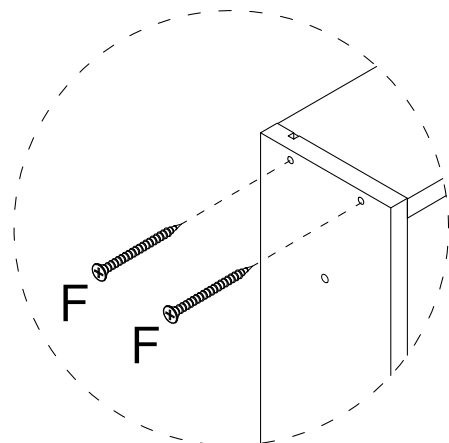


5

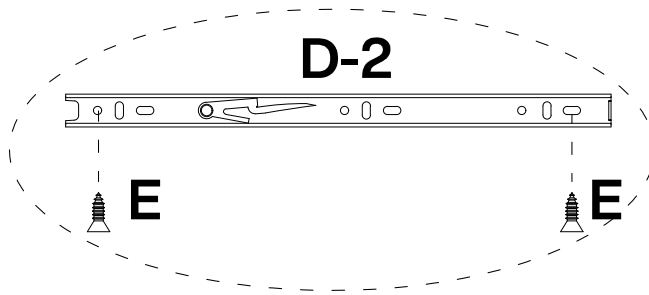


D-2	E
2 pcs	4 pcs

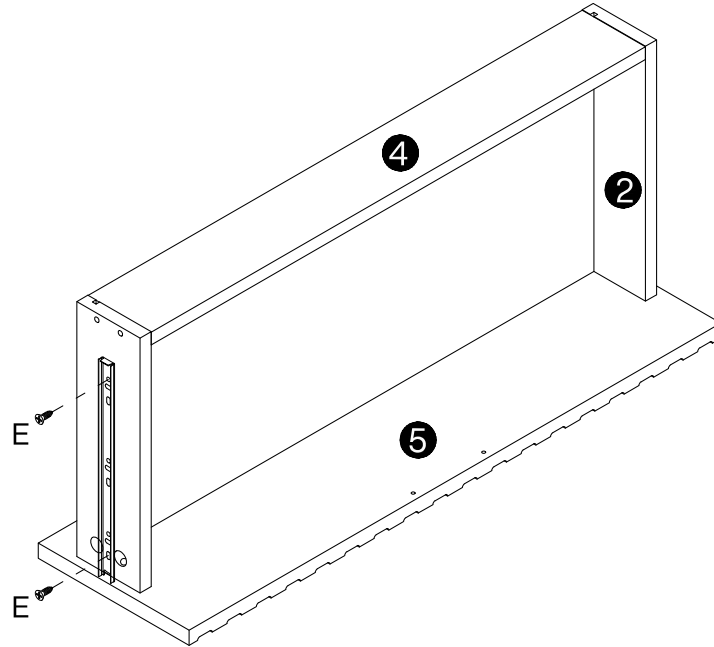

6

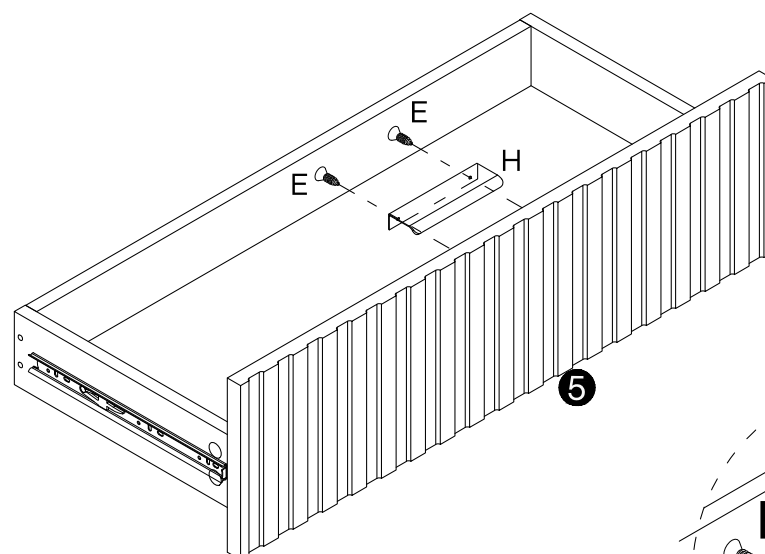


H	E
1 pc	2 pcs

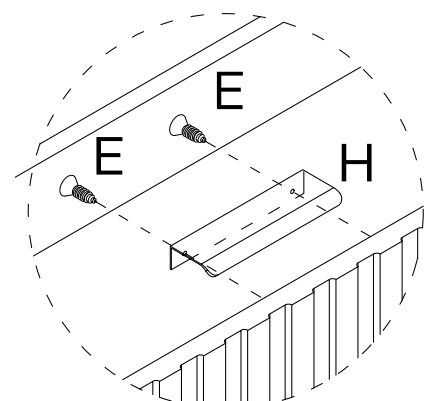

7

A



M6x40mm
11 pcs

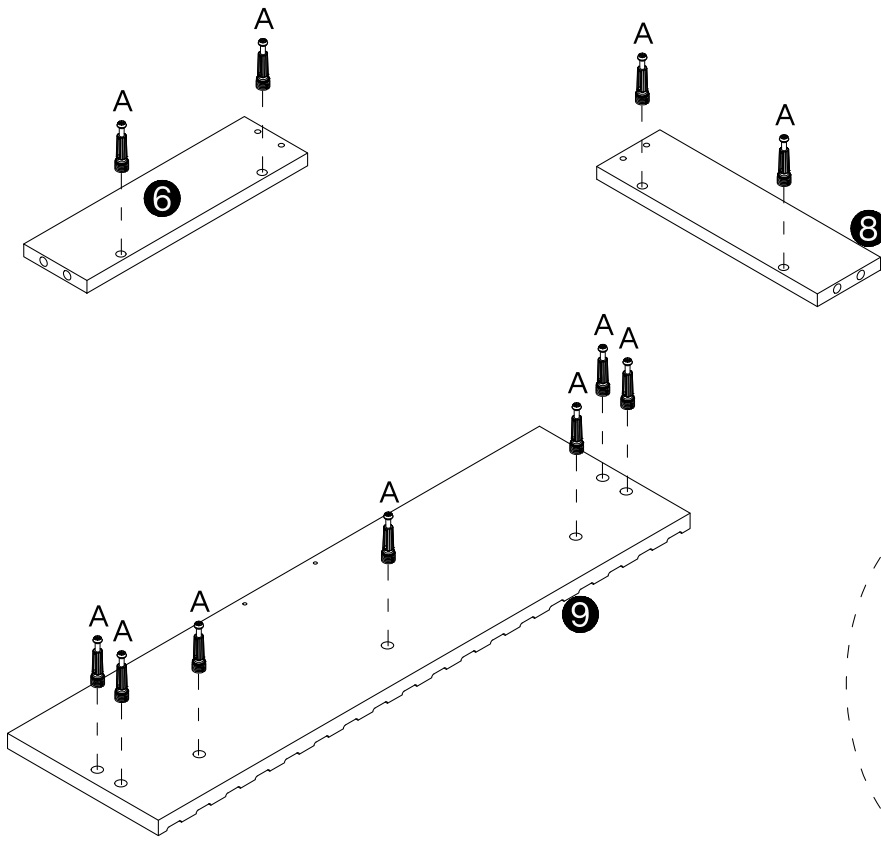

8

B



Ø15X10 mm
4 pcs

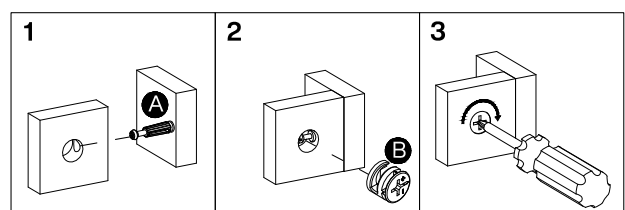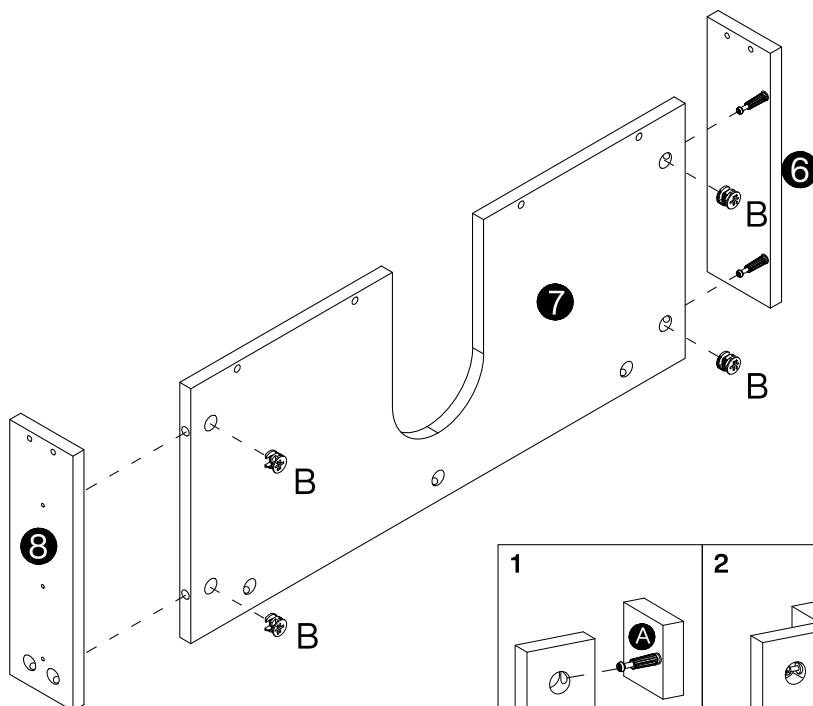

9

B


Ø15X10 mm
7 pcs

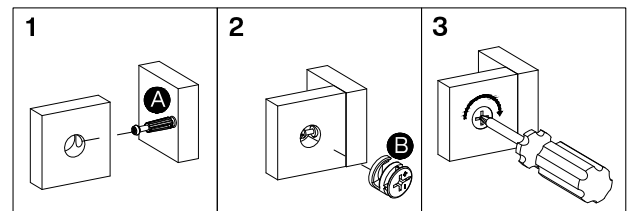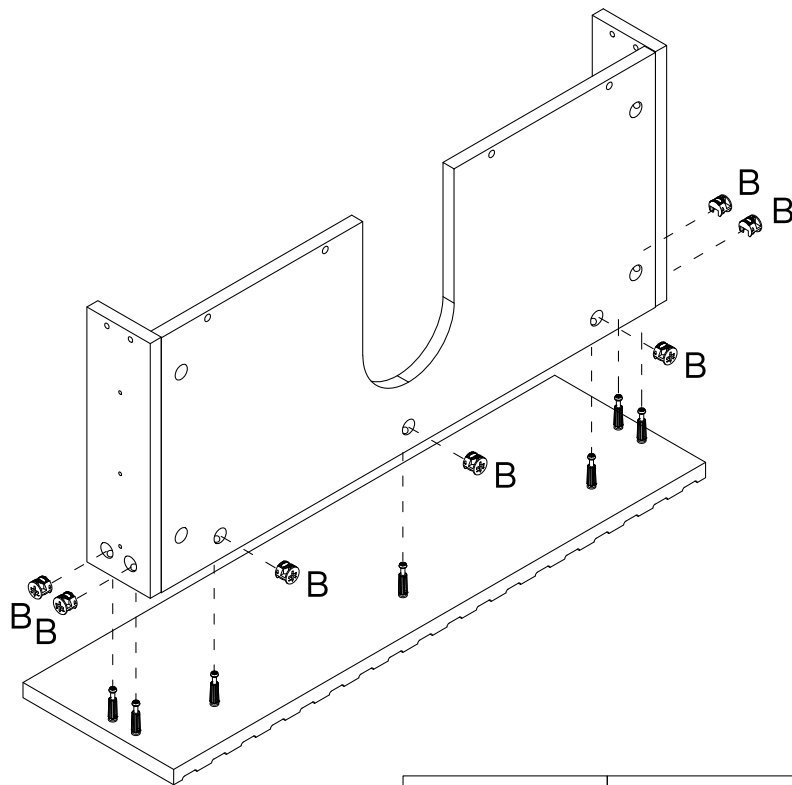

10

E



Ø3.5x14mm
9 pcs

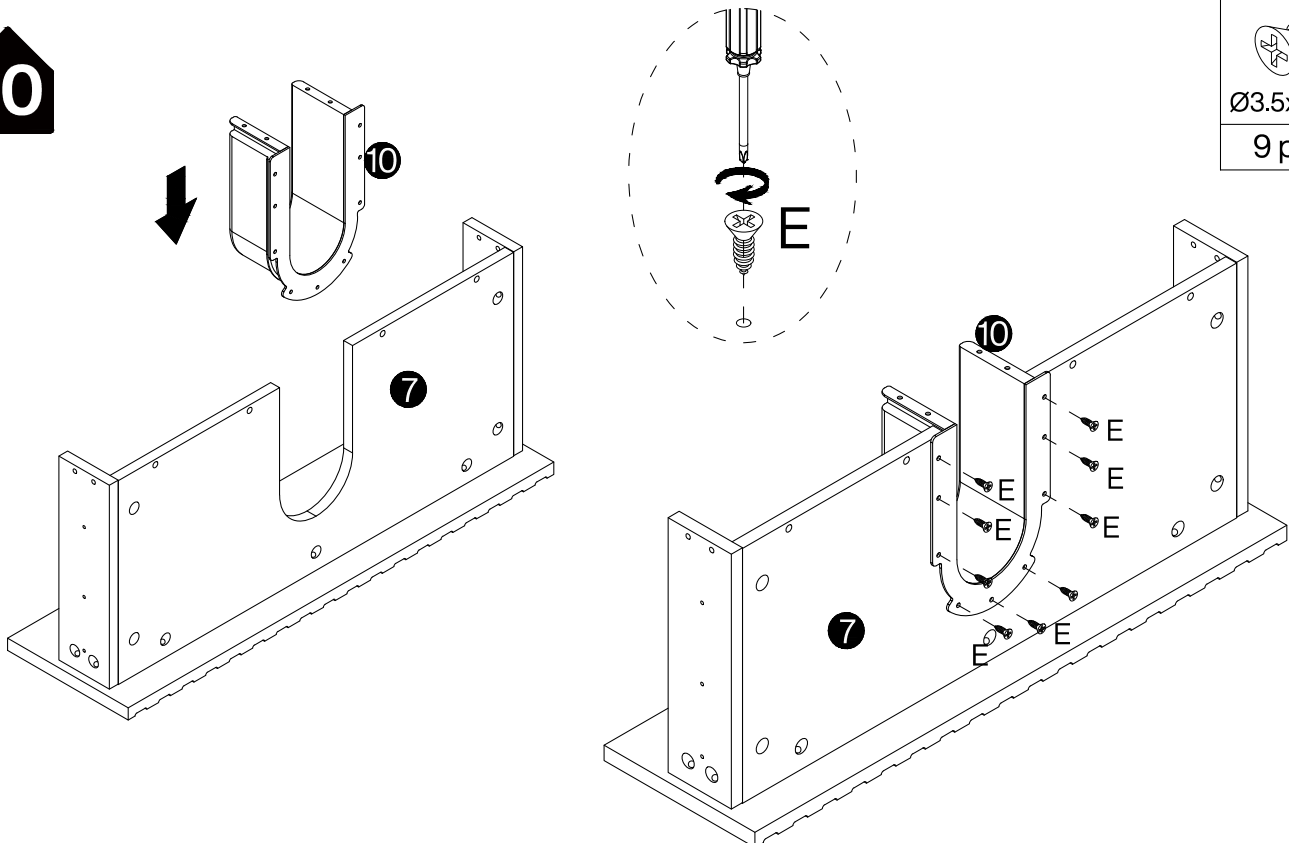

11




G

Ø7x38mm
4 pcs

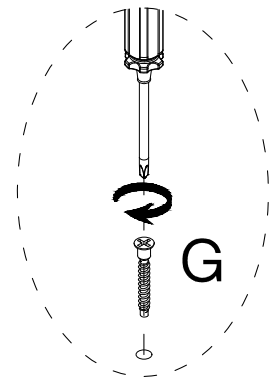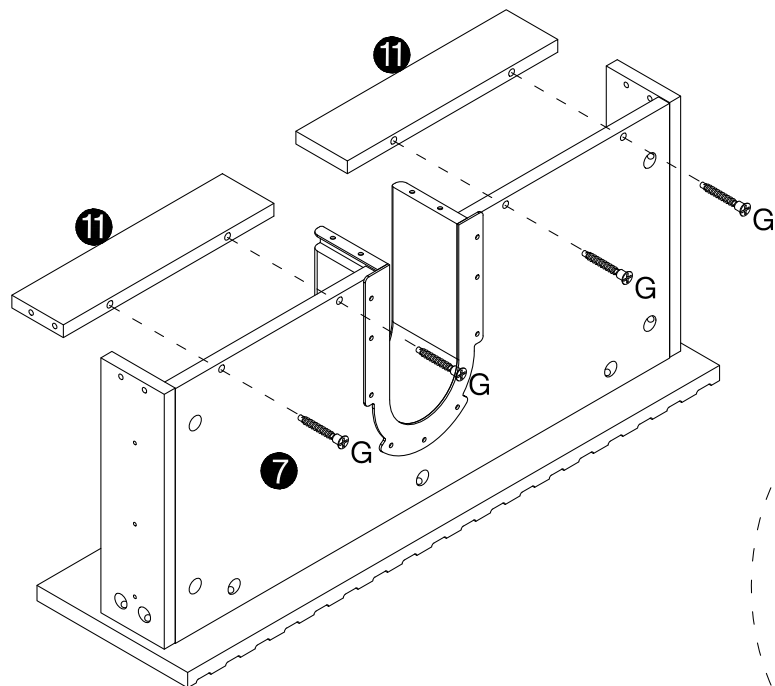


12


E	F
	
Ø3.5x14mm	Ø3.5x35mm
4 pcs	4 pcs

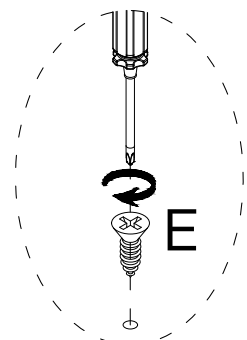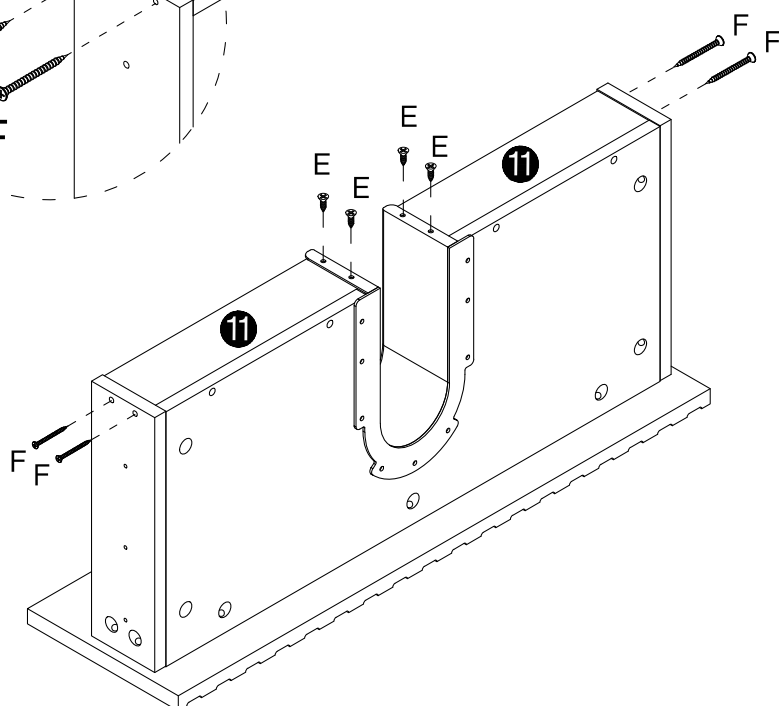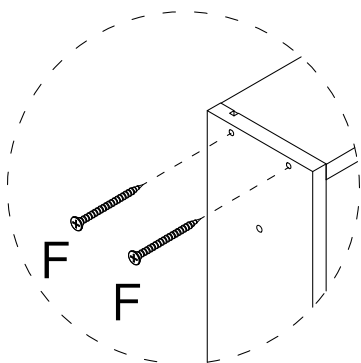


13

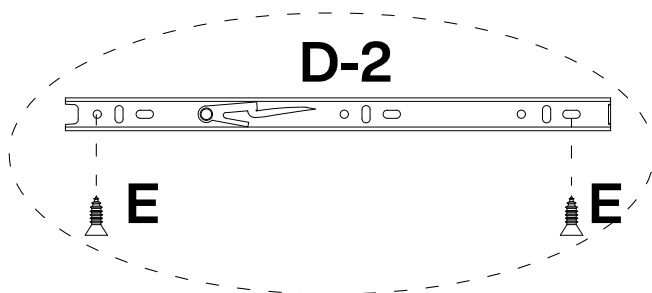


D-2	E
2 pcs	4 pcs

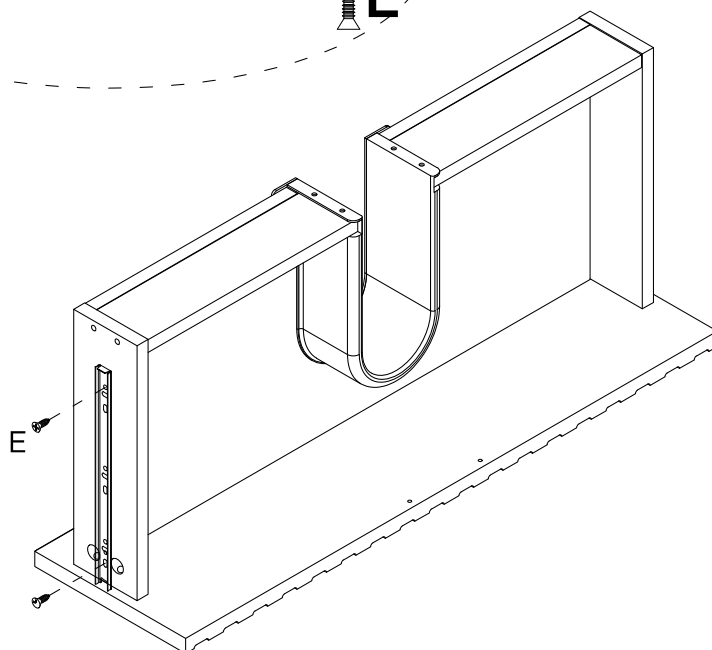

14

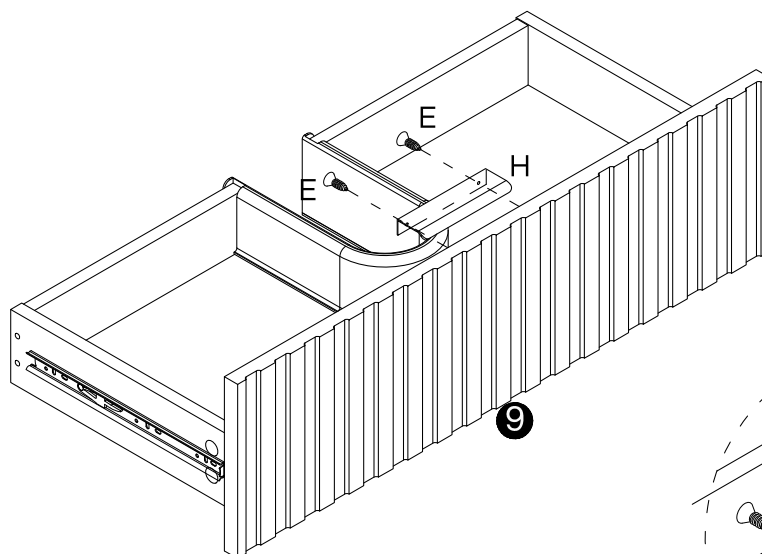


H	E
1 pc	2 pcs

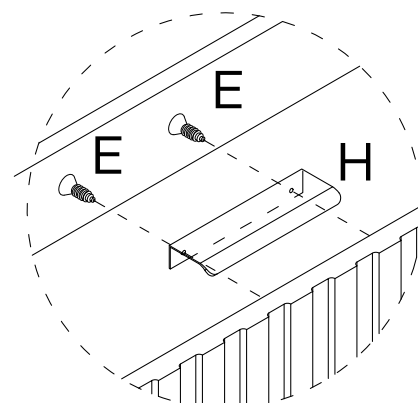

15



D-1	E
	
2 pcs	4 pcs

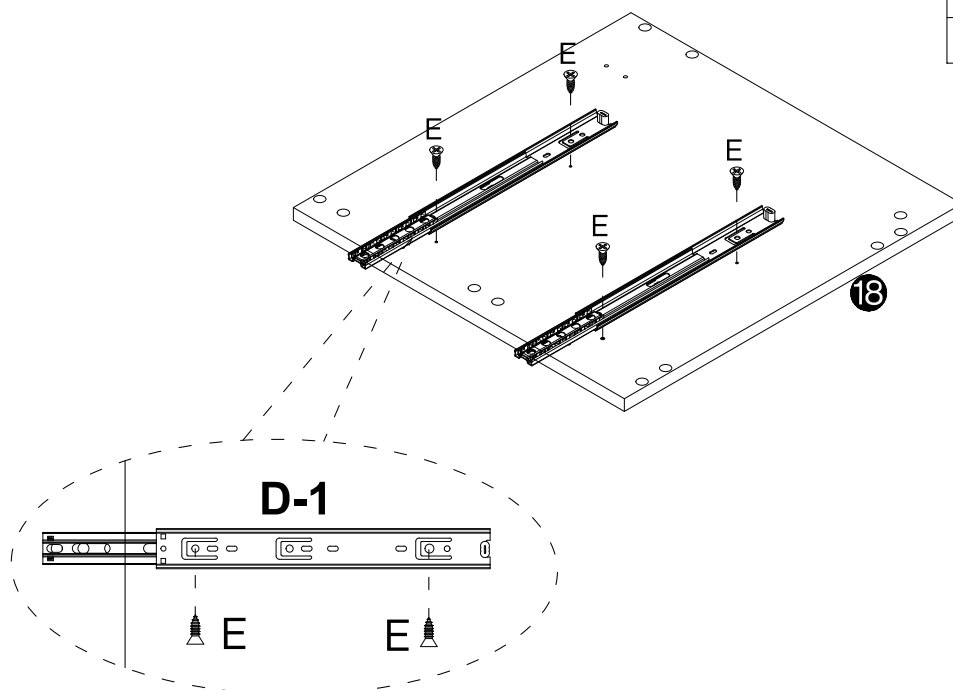

16


A

M6x40mm
11 pcs

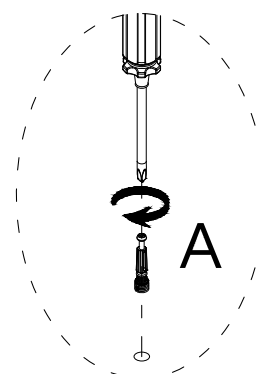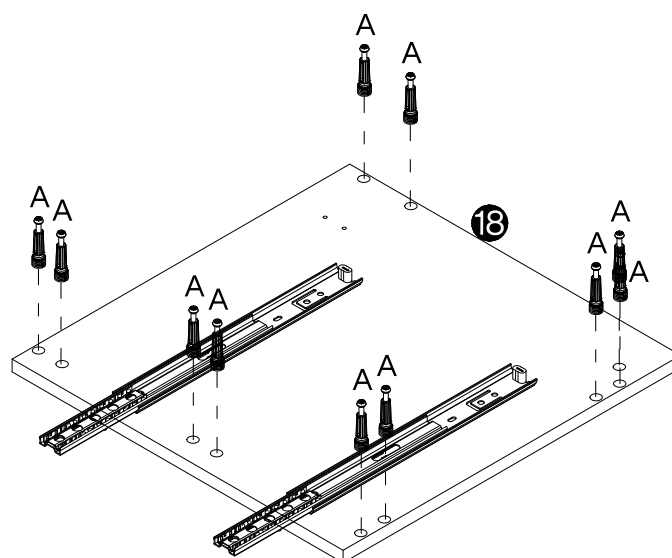


17

D-1	E
	 Ø3.5x14mm
2 pcs	4 pcs

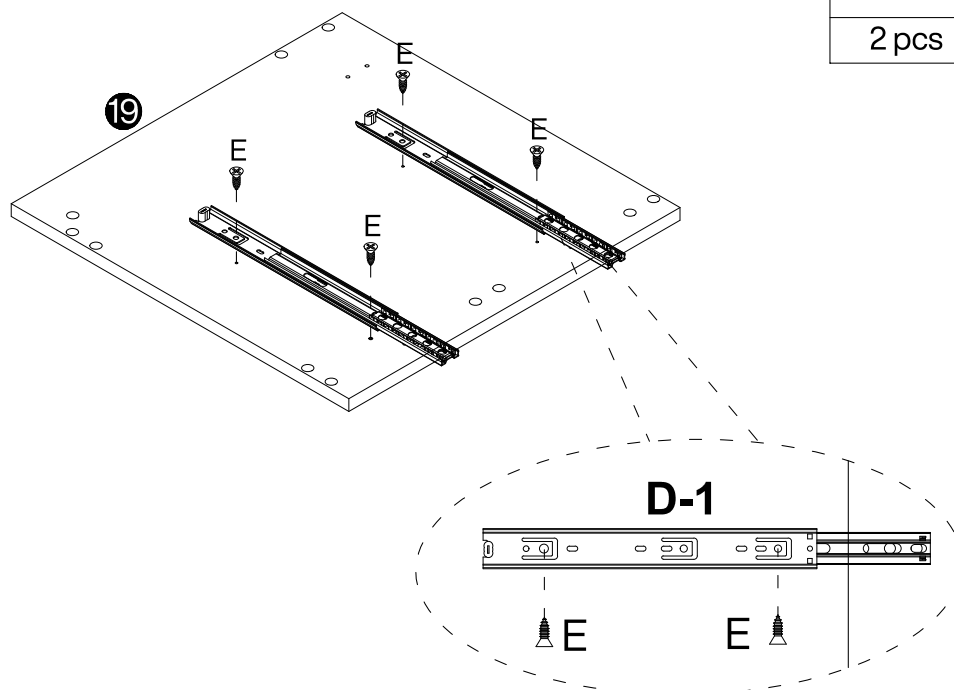


18

A
 M6x40mm
11 pcs

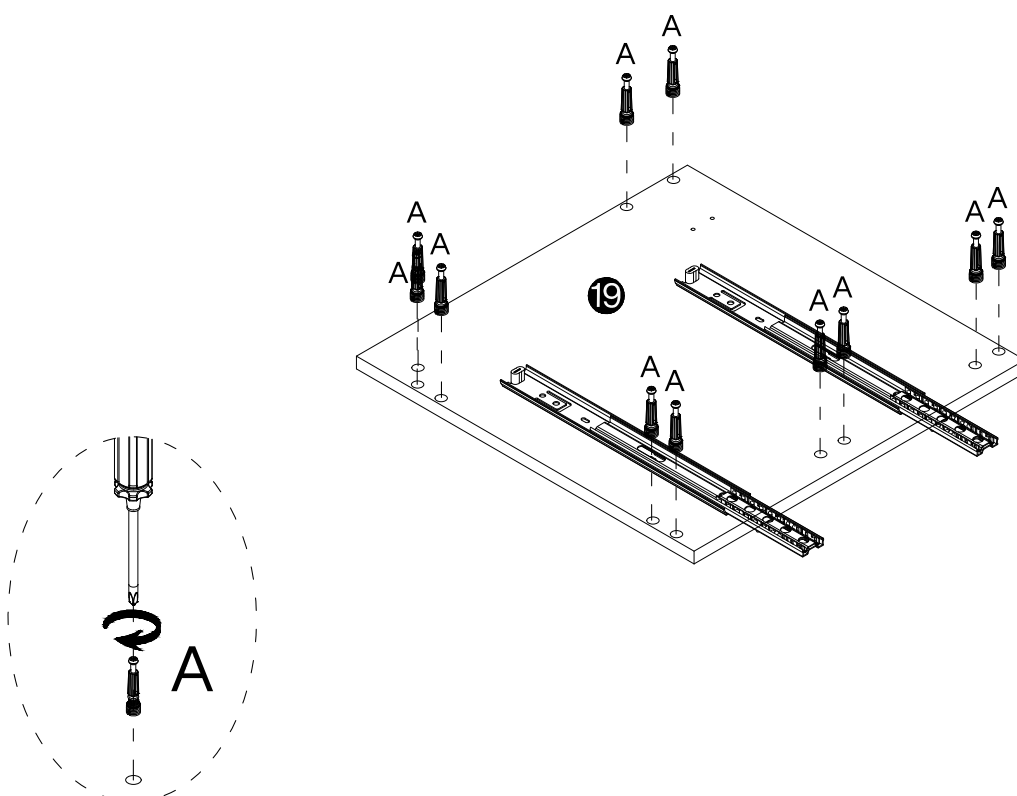



19

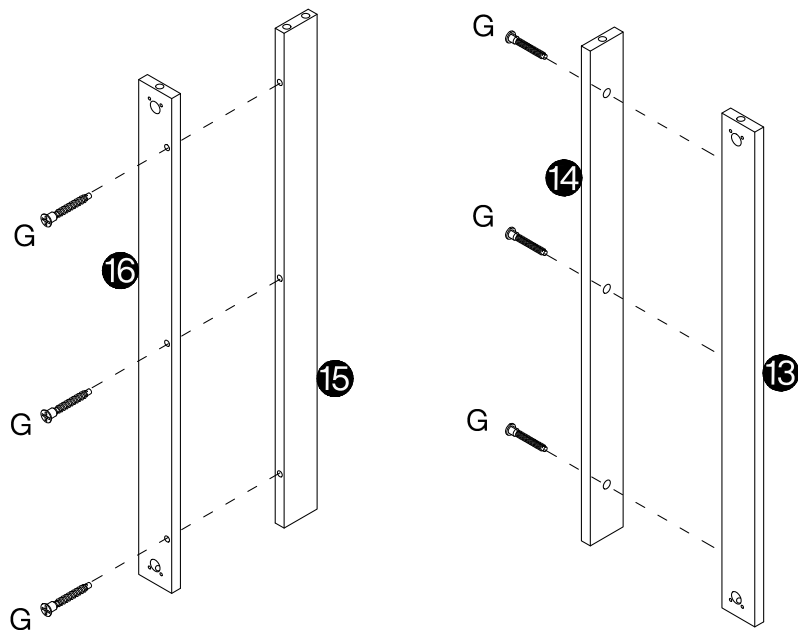

G

Ø7x38mm
6 pcs



20

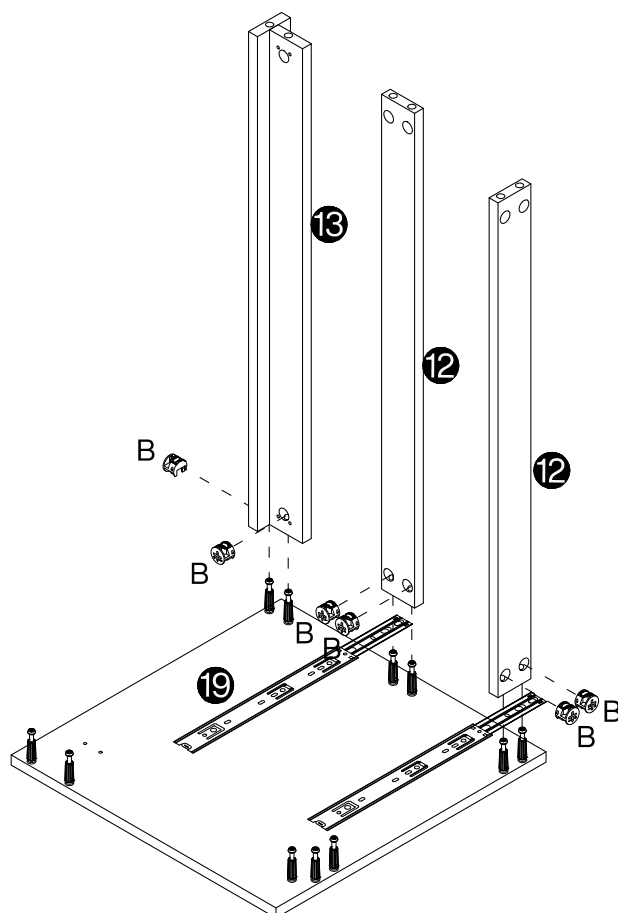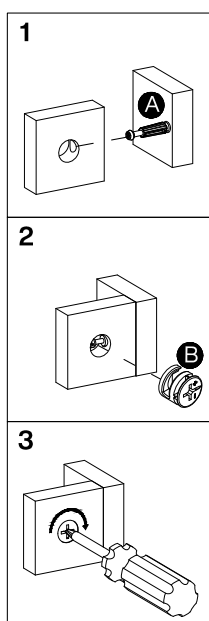

B

Ø15X10 mm
6 pcs

21

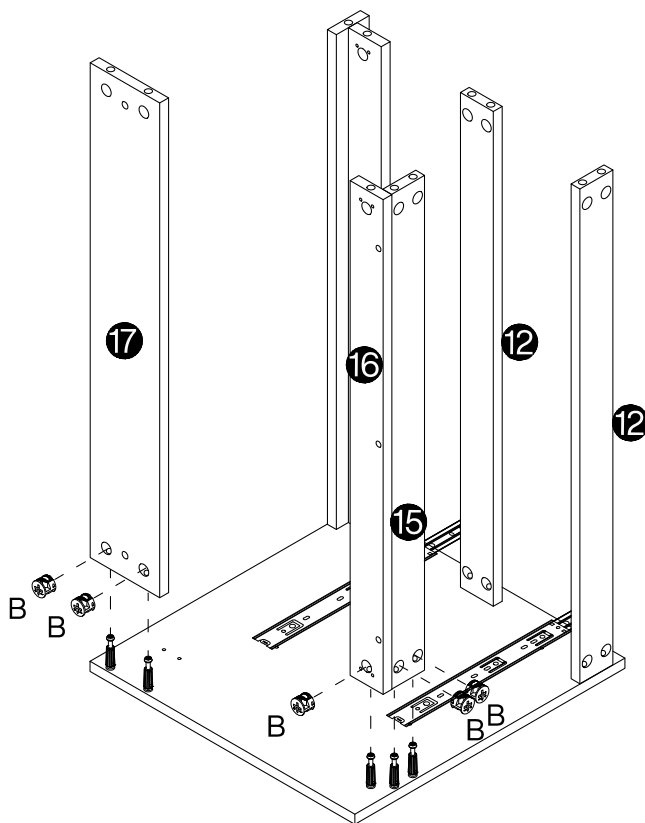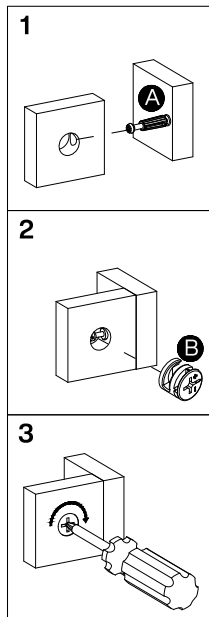



B



Ø15X10 mm

5 pcs

22

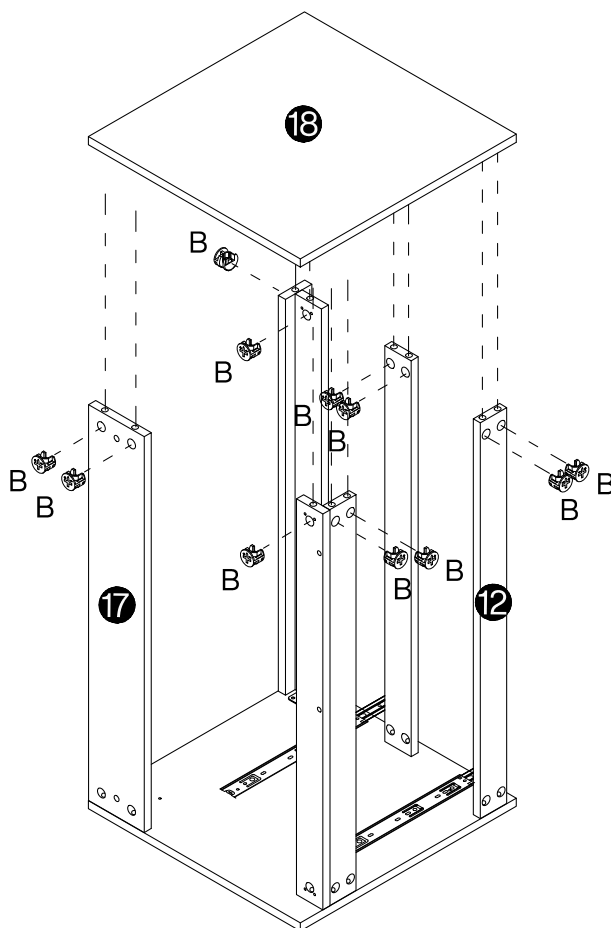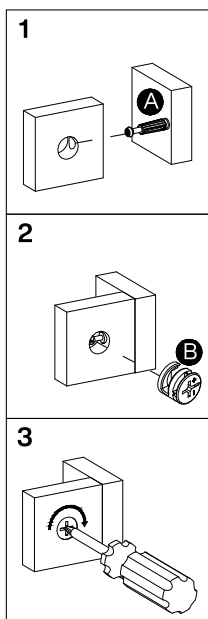

B




Ø15X10 mm

11 pcs


23

I	E
	 Ø3.5x14mm
4 pcs	16 pcs


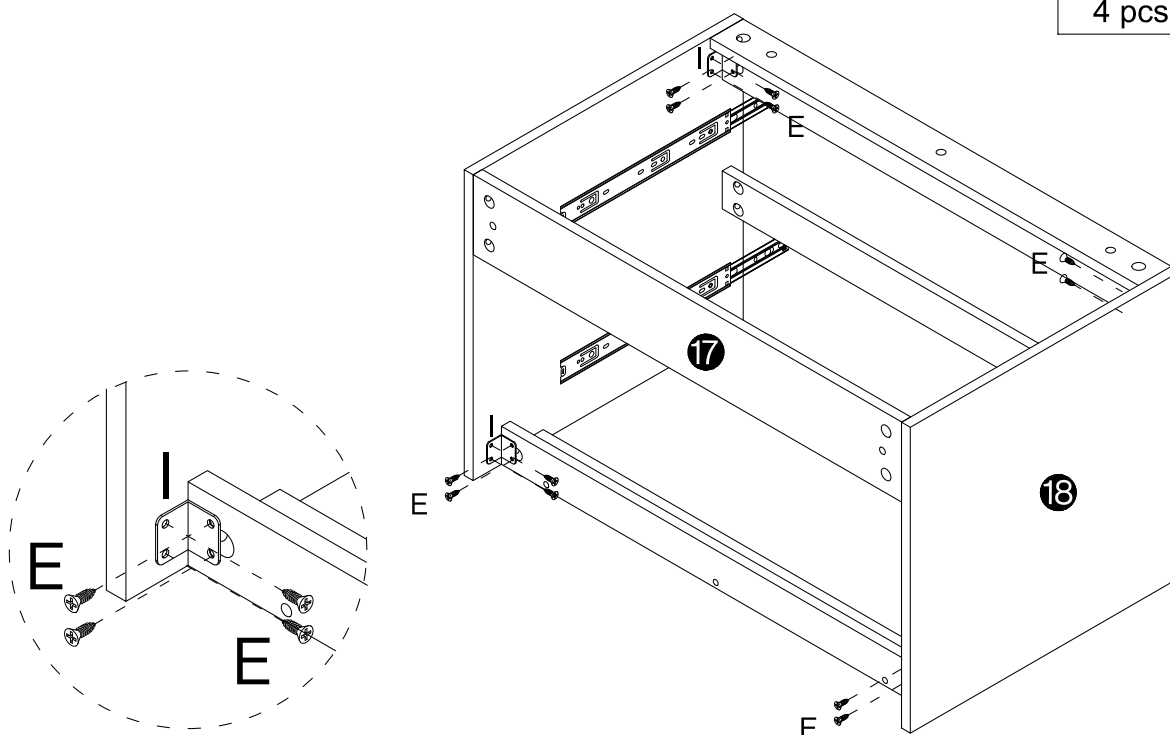


24

C	E
	 Ø3.5x14mm
2 pcs	10 pcs

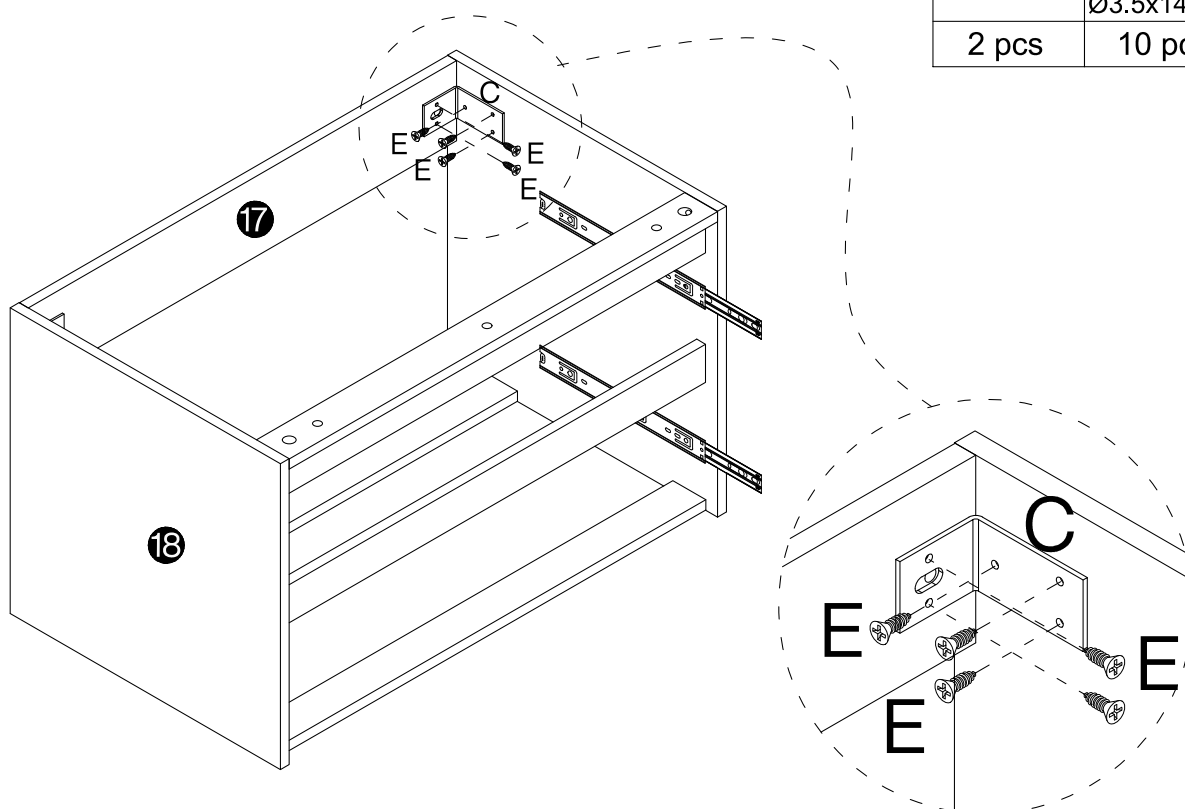


25

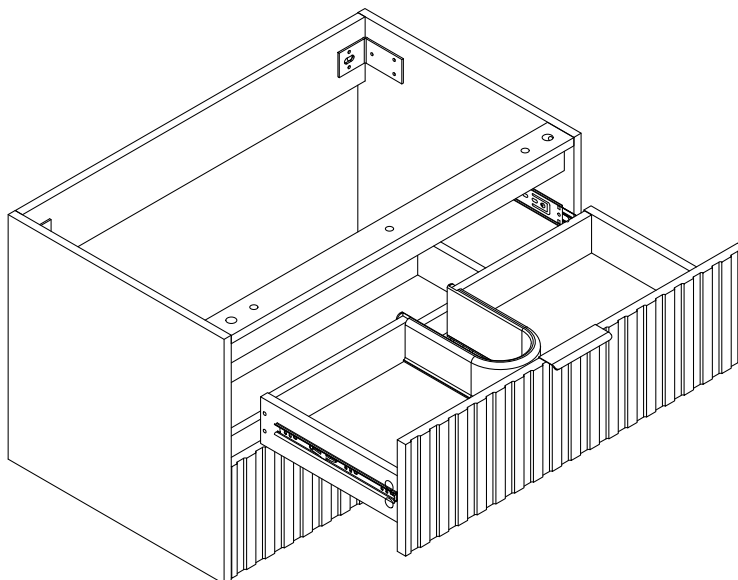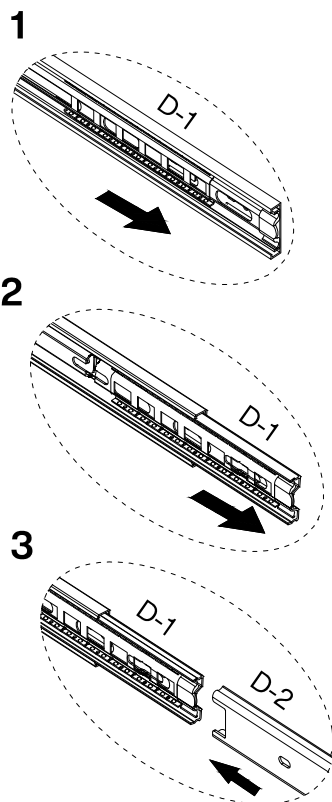


Align the "D-2" with the "D-1" guideway and gently push it in to complete the assembly

26


Install the tipping restraint hardware

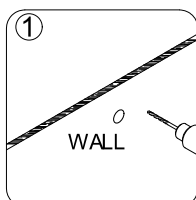


1. Drill two Ø10 holes on the wall


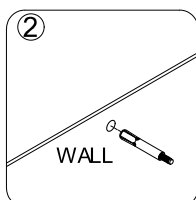


2. Put two anchors in the holes

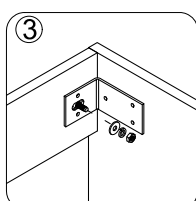

3. Fix the device on the wall by the long screws

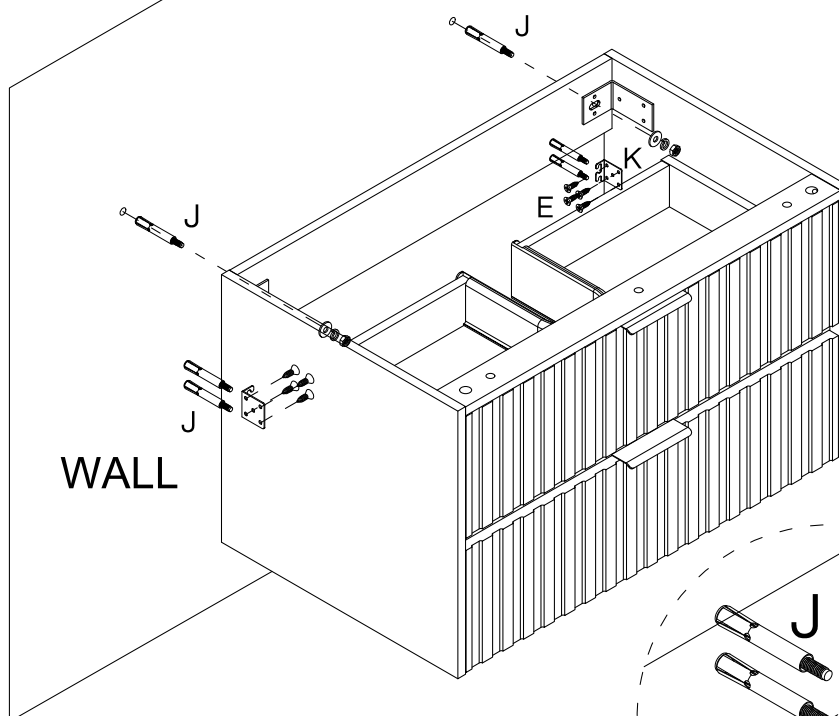

E	K	J
		
Ø3.5x14mm 8 pcs	1 pc	6 pcs

