

# CROSSHEAD/PEDIMENT/PILASTER

## SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.  
Wear safety goggles.  
Follow fixture, power tools, and paint manufacturers' instructions and users manuals.  
Use common sense and follow good construction practices.

### TOOL & MATERIAL CHECKLIST

- |                                                     |                                                |
|-----------------------------------------------------|------------------------------------------------|
| <input type="checkbox"/> construction adhesive      | <input type="checkbox"/> tape measure          |
| <input type="checkbox"/> elastomeric adhesive caulk | <input type="checkbox"/> jigsaw or keyhole saw |
| <input type="checkbox"/> caulking gun               |                                                |
| <input type="checkbox"/> finishing nails            |                                                |
| <input type="checkbox"/> hammer                     |                                                |
| <input type="checkbox"/> putty knife                |                                                |
| <input type="checkbox"/> extra fine sandpaper       |                                                |


### IMPORTANT INFO

- It is highly recommended that you paint/finish our crosshead, pediment, or pilaster before you install them.
- Once installed, you can apply any necessary touchup paint/finish.
- Clean installation surface and back of crosshead, pediment, or pilaster of all dirt and dust with a clean cloth or sponge.
- Make sure that the surface and the back of the crosshead, pediment, or pilaster are completely dry before attempting installation.

## INSTALL INSTRUCTIONS:

1. Lay the crosshead, pediment, or pilaster face down on a soft surface that will not scratch/dent the medallion detail.
2. Apply a continuous 1/2" bead of adhesive caulk along the back.
3. Place the crosshead, pediment, or pilaster to your desired installation surface.
4. Align crosshead with the outer edges of the opening or pilasters. (Note: The crosshead can be slightly larger than the opening as long as the overhang is equal on both sides.)
5. Fasten using PL Premium Construction Adhesive and any necessary fasteners.
6. Use a finger or putty knife to smooth any excess adhesive.
7. Use latex caulk to seal edges. Use a finger or putty knife to smooth caulk.
8. Touch up using a high quality latex paint.

## EXAMPLE DIAGRAM:

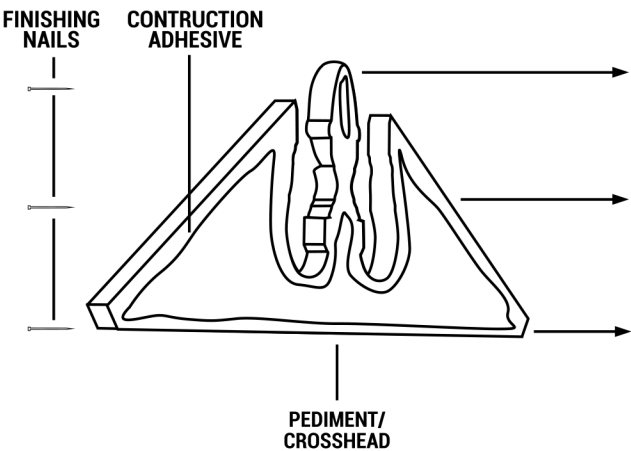

We Can Help. Call (866) 607-0453



**EKENA**  
MILLWORK

Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

[www.ekenamillwork.com](http://www.ekenamillwork.com)