

Two Methods of Installation:

Direct Burial - Simply dig a hole and place post in hole and secure with dirt or 40 lbs of concrete. *This is the standard and recommended approach.*

For additional stability some customers use a Reinforced Direct Burial Option.

Simply slide a 4 x 4 wooden post into the vinyl post for added stability.


Dig a hole and place post with 4 x 4 wooden post in the hole.

Secure with dirt or 40 lbs of concrete.

Hole depth should be between 18-30" depending on the customer's preference on mailbox height.

If you have need to shorten the mailbox post to achieve your desired mailbox height, you can easily cut the material with a standard hand saw used for wood.

Direct Burial Installation

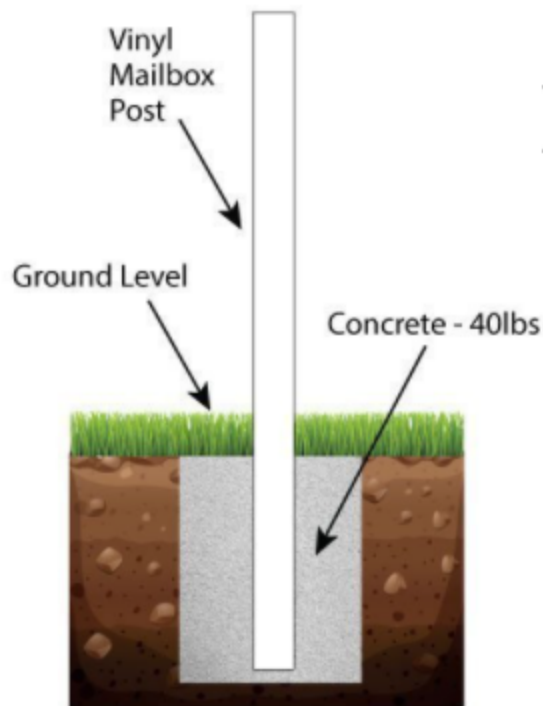

Reinforced Direct Burial Option

