







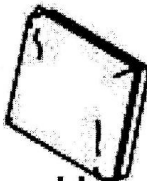


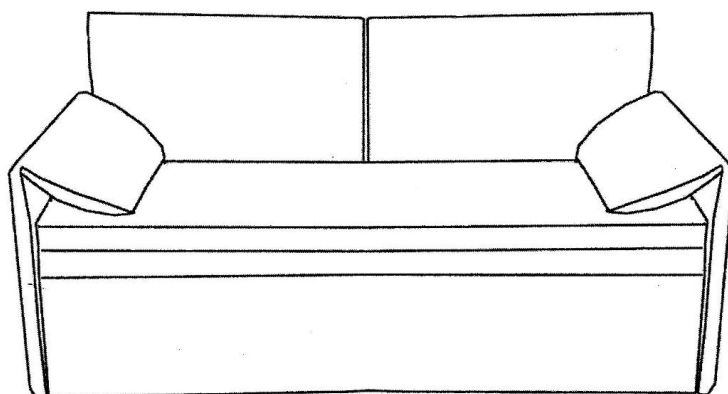


ASSEMBLY INSTRUCTION


MODEL:6308

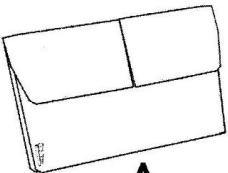

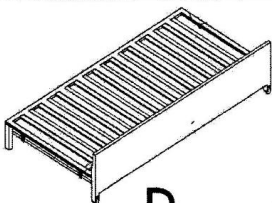
PARTS:

 A x1	 B x1	 C x1	 D x1
 E x1	 F x1	 G x1	 H x2
 I x2	 J x10	 K x1	


Step1

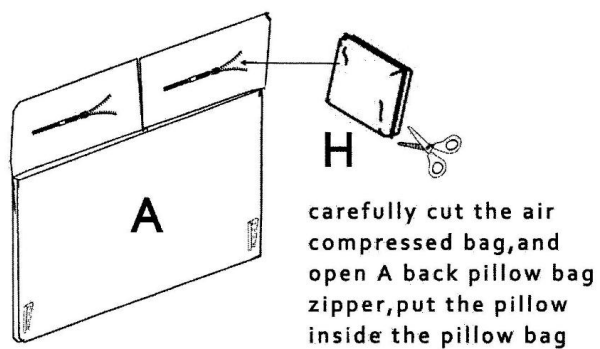


Step2

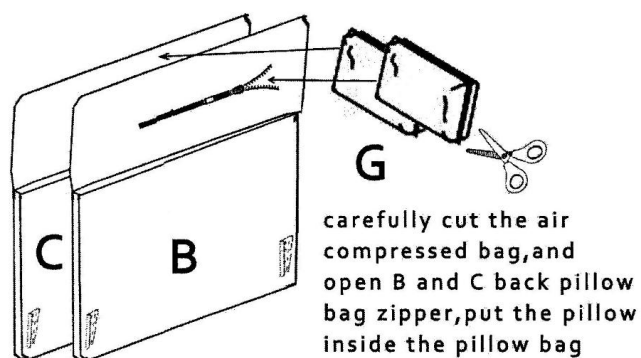


Step3

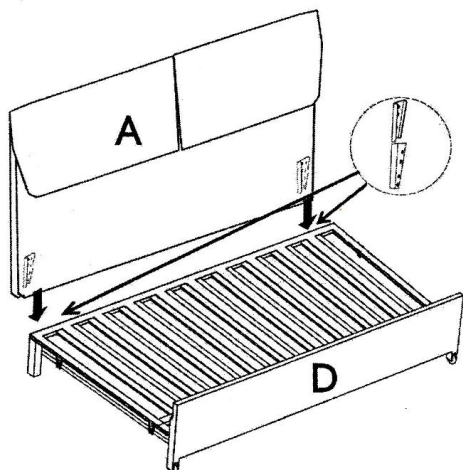


Step4

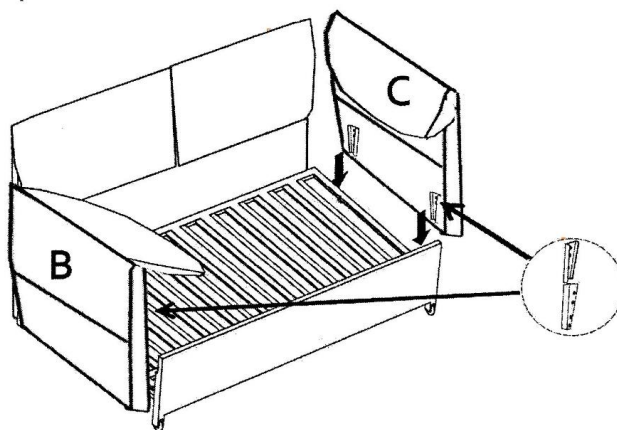


Step5

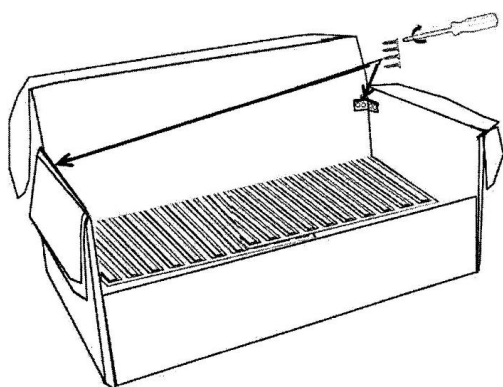


Step6

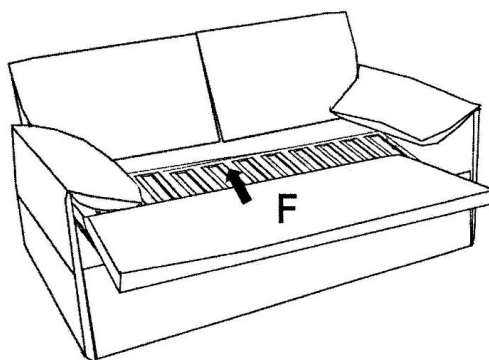


Step7

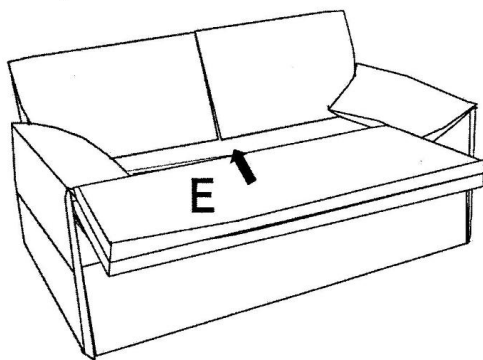

Step8

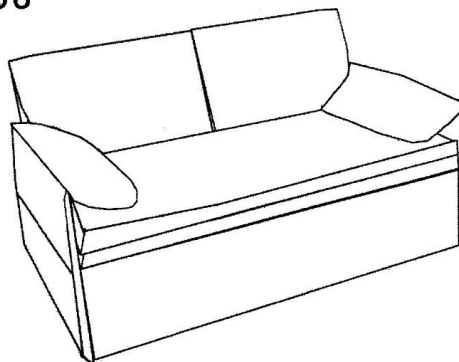

Step9

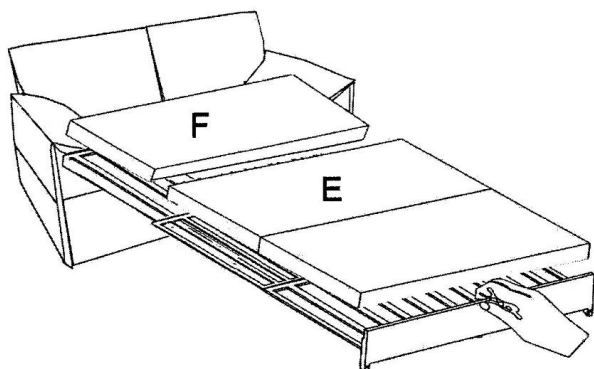

Step10

