



Tools needed for installation:

*Drill
Phillips Bit
3/16" Drill Bit
Level
Hammer*

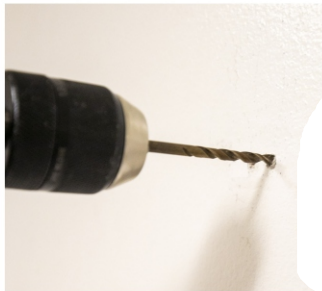

Place cleats at desired location and mark the center of the two holes as shown. Using a level, be sure all your marks are in a straight line

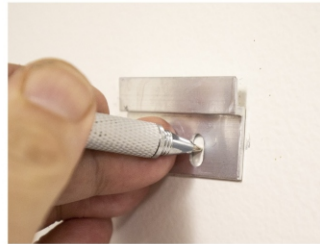

If installing directly into studs use a drill with a #2 phillips head bit and the screws provided. If installing with the anchors provided, drill a 3/16" pilot hole as shown on each of your marks and continue to the next step

Use a hammer and gently tap the anchors into the holes you drilled.



Using a drill with a phillips head bit and the screws provided, fasten the cleat to the wall. repeat for the other



Lift your shelf slightly above the wall mounted cleats and slowly hang the shelf as shown in the image



Your Installation Is Complete!