


Installation & Assembly

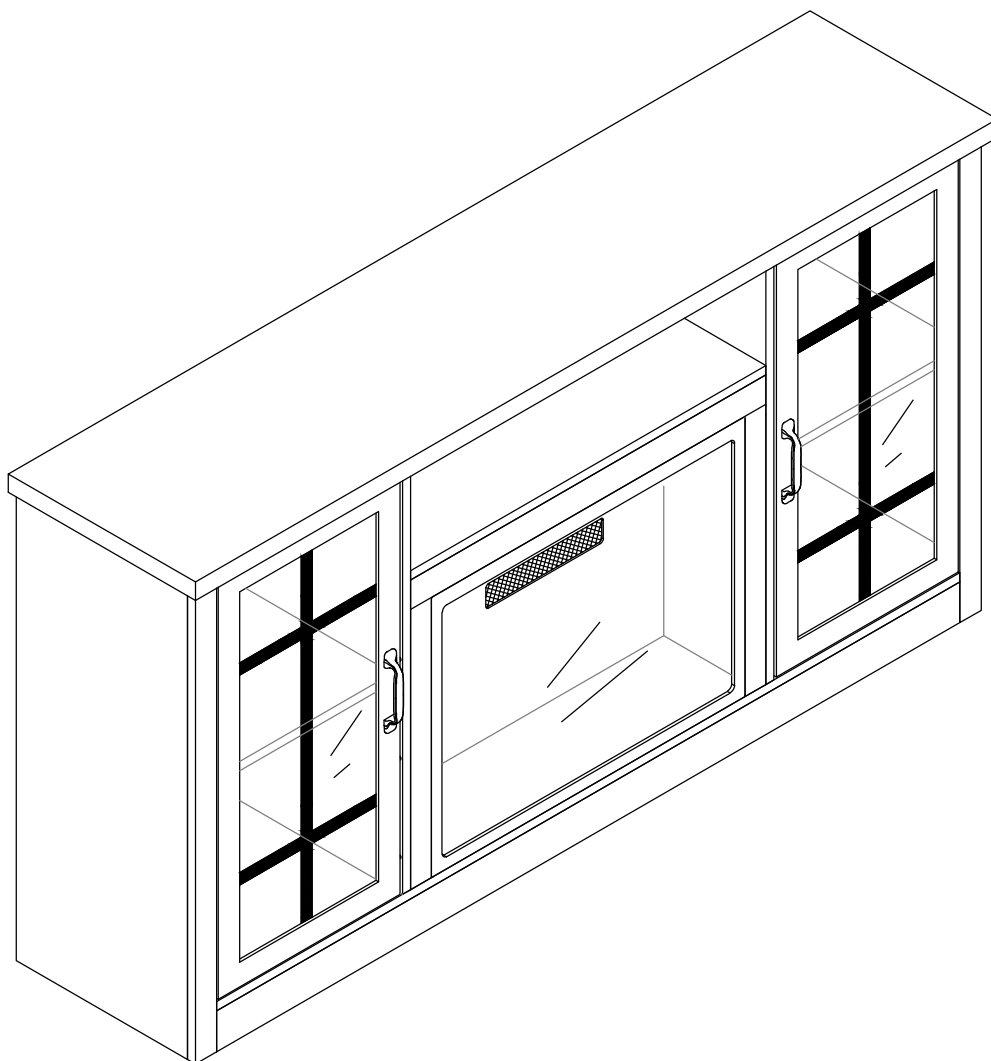

delivered in 2 separate boxes



2 person




tools require




2 hours need

CAUTION:When tightening the screws,tighten sequentially.Do not tighten any screws fully and then towards the next one.When every part is OK, then tighten all the screws.

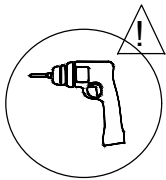


PLEASE BE CAREFUL DO NOT DAMAGE THE
HOLE POSITION WHEN YOU USE POWER TOOLS !


If there are any missing parts, please contact us and we will send you the corresponding replacement part. We also offer an exclusive one-month service where we provide product replacements without the need for repairs, as long as the damage is not caused by human error.

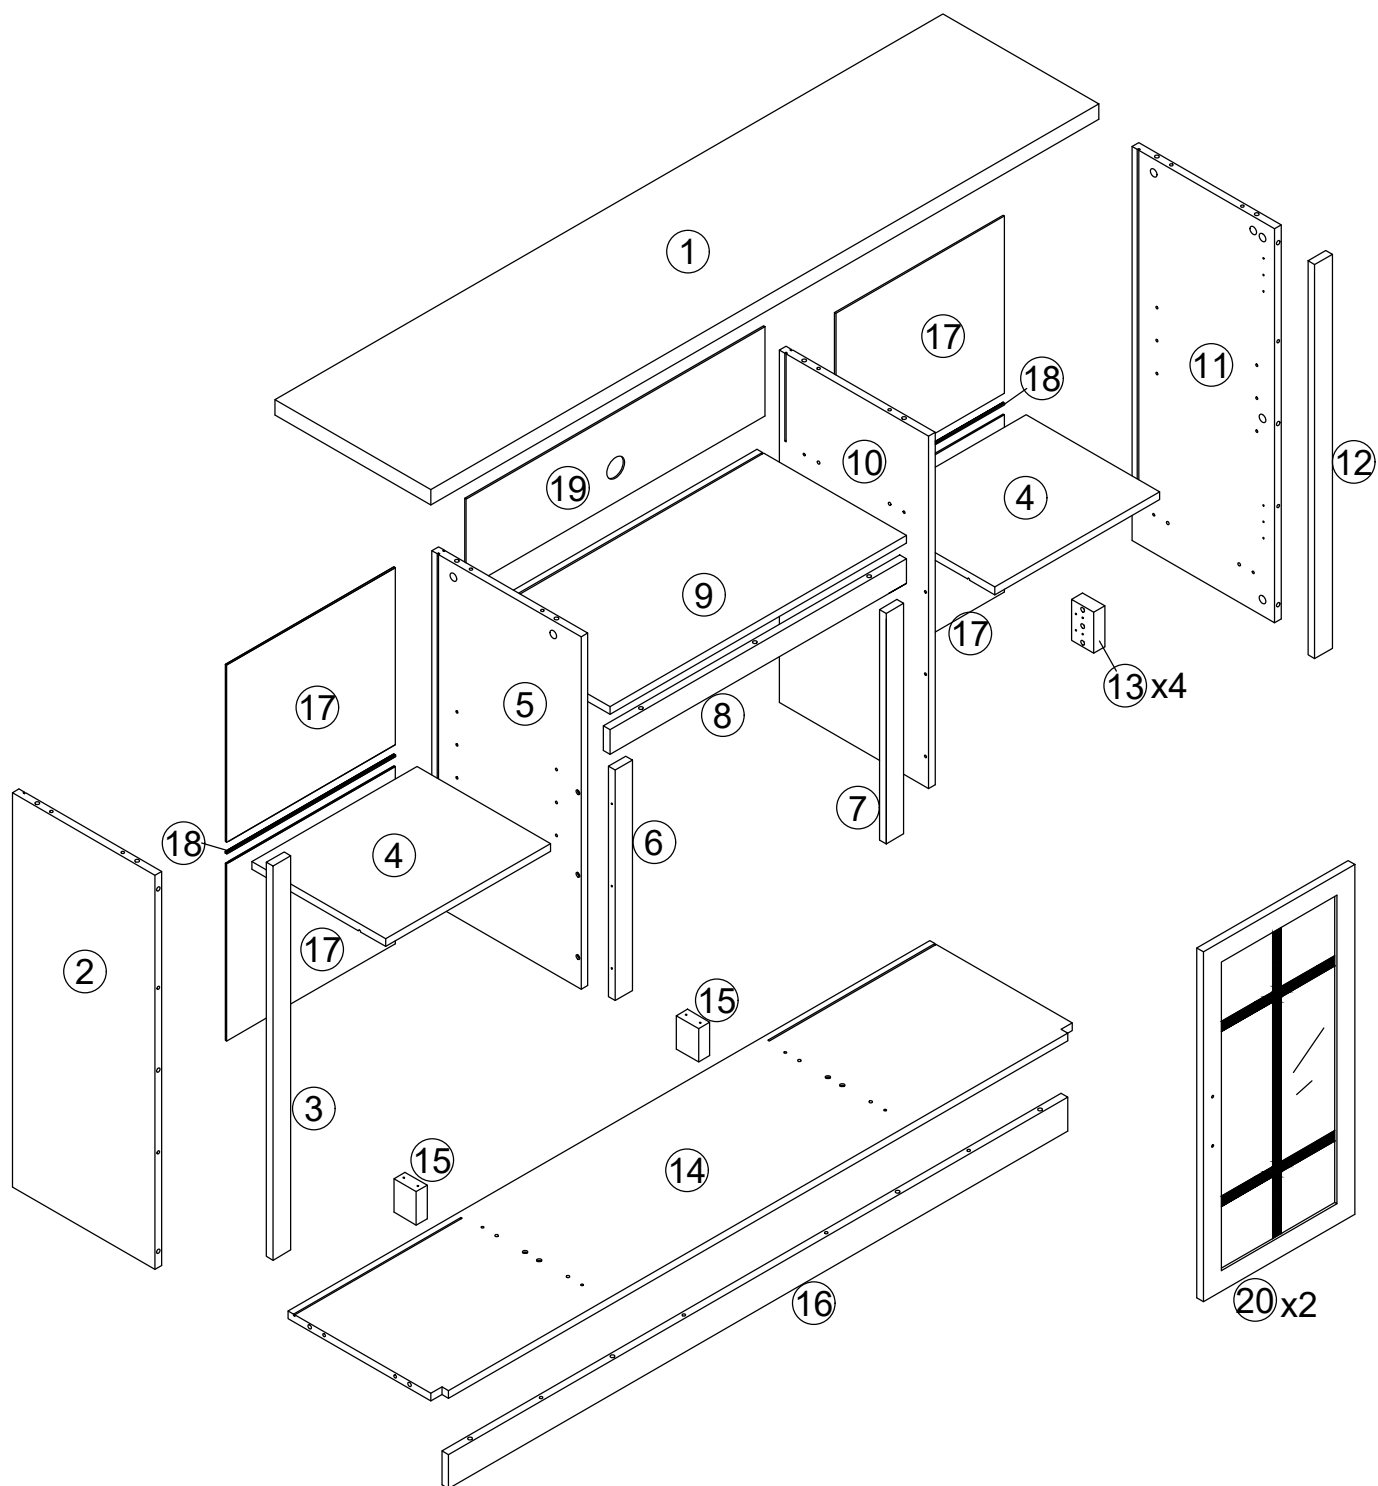


① x1

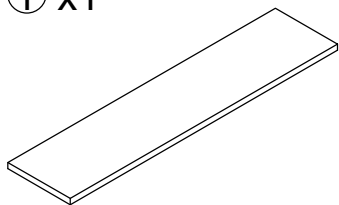


② x1

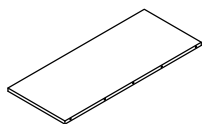


③ x1




④ x2




⑤ x1




⑥ x1




⑦ x1




⑧ x1

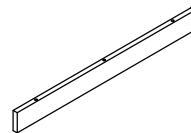


⑨ x1

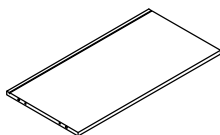


⑩ x1



⑪ x1

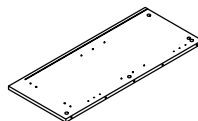


⑫ x1




⑬ x4




⑭ x1

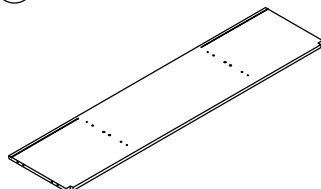


⑮ x2



⑯ x1

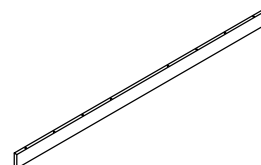


⑰ x4




⑱ x2





⑲ x1



⑳ x2



Ax29(+2)  Ø6x35mm	Bx29(+2)  Ø15x10mm	Cx28(+2)  Ø6x30mm	Dx28(+2)  Ø4x35mm	Ex24(+2)  Ø3.5x12mm
Fx8 	Gx16 G-1  G-2 	Hx2 H-1  H-2 	Ix4 	Jx2  Ø4x16mm
Kx2 	Lx2  Ø6x30mm			


SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

WHEN FITTING CAMLOCK
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING QUICKFIT
TURN CLOCKWISE UNTIL SECURE






↑ CORRECT ↓ WRONG

CAM-LOCK

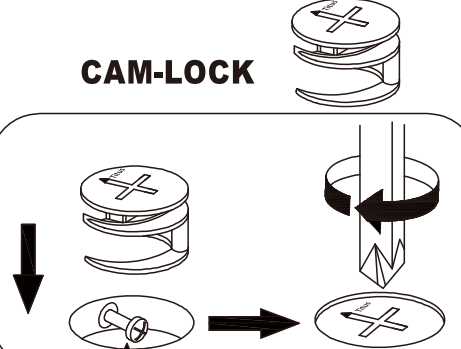






Quickfit head needs to be in centre

QUICKFIT
Tighten until shoulder is flush with panel. DO not overtighten or undertighten (see example below)


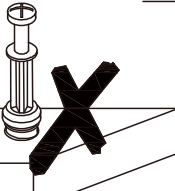
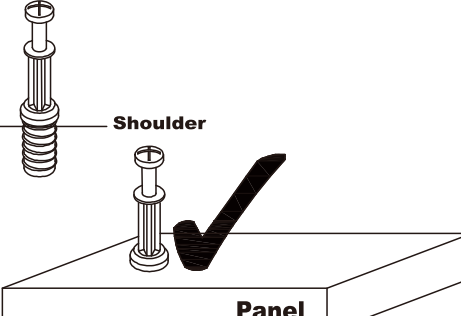



Panel Panel



1

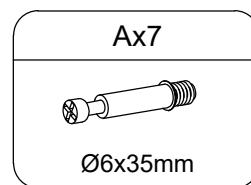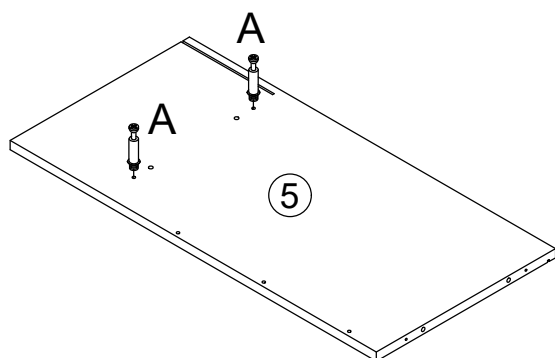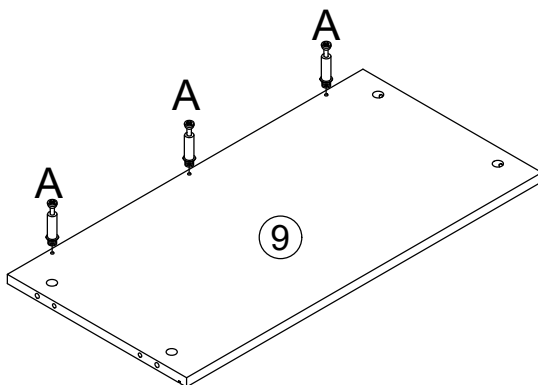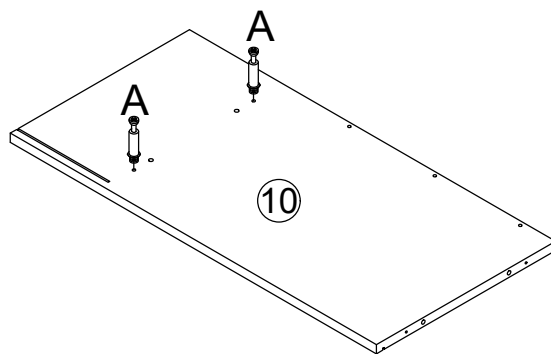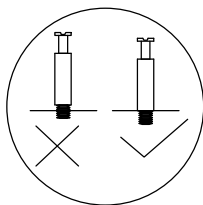

2

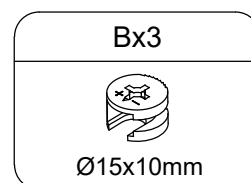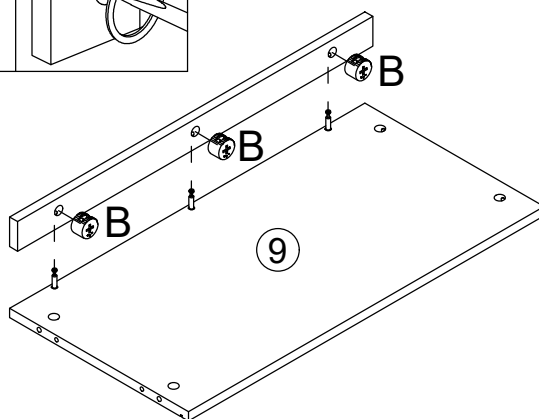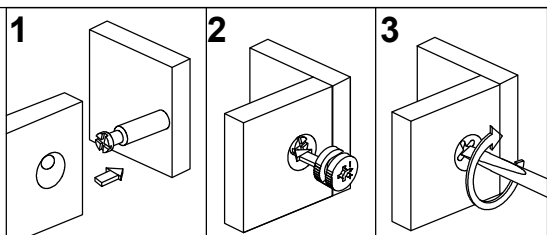

3

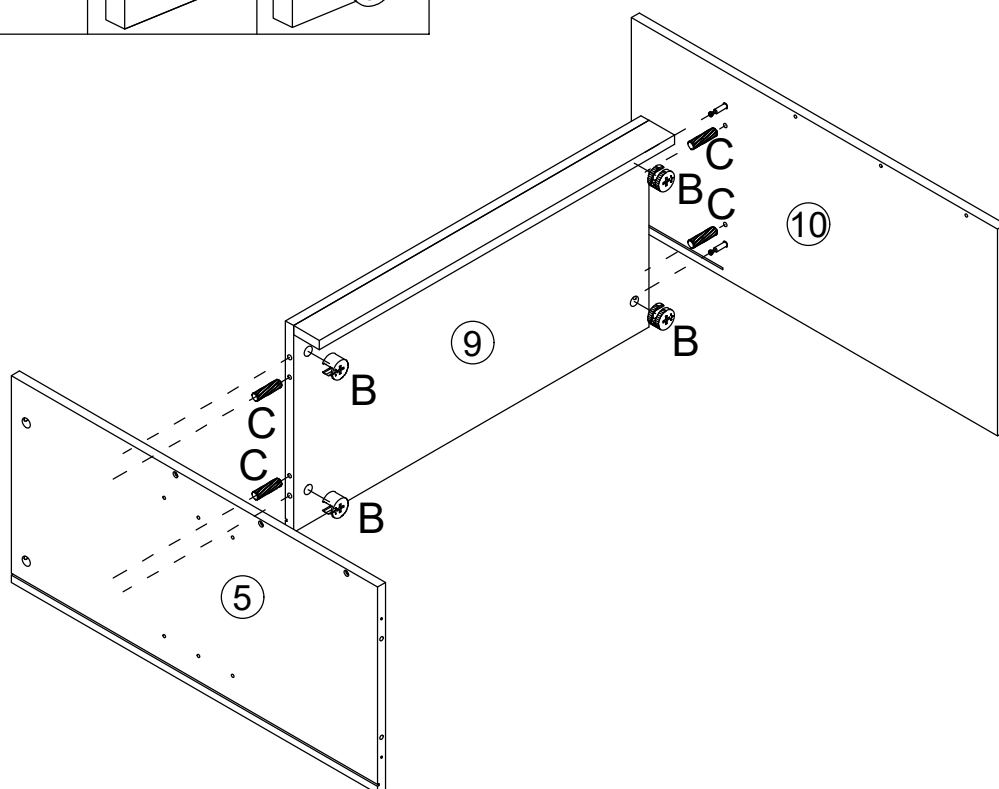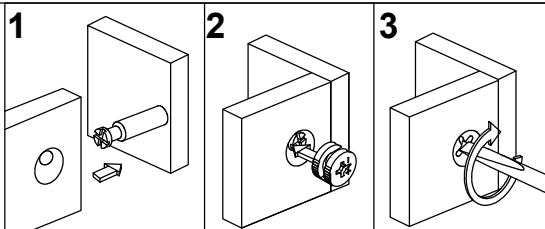

Bx4




Ø15x10mm

Cx4




Ø6x30mm

4

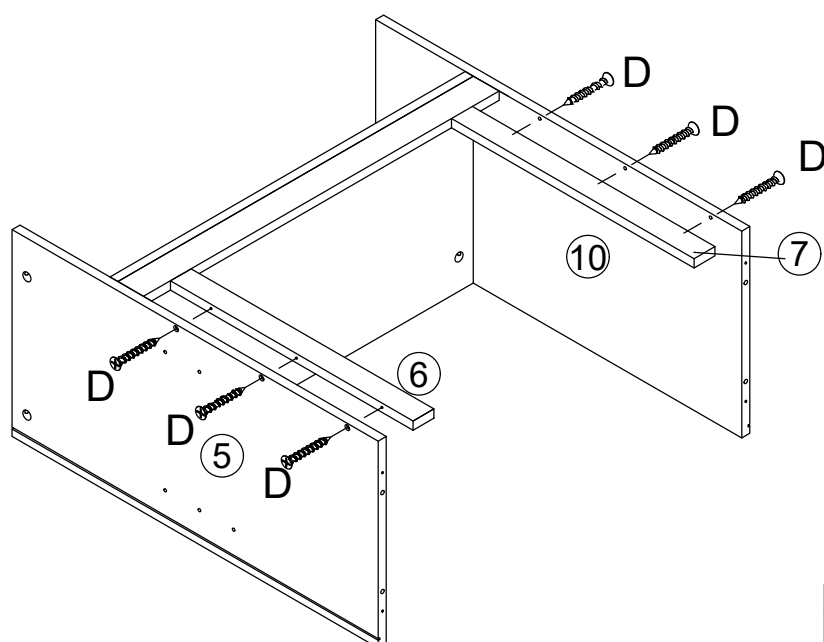


Dx6



Ø4x35mm

5

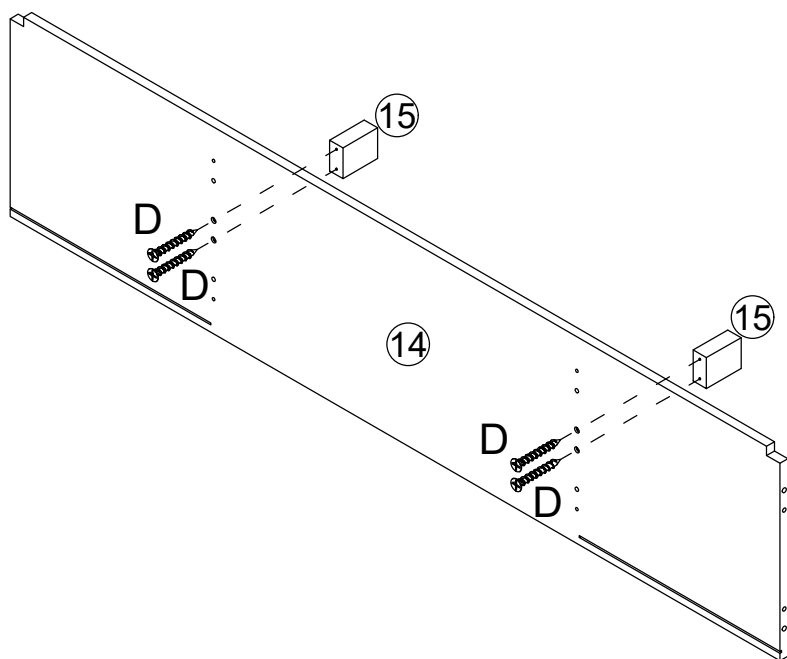


Dx4



Ø4x35mm

6

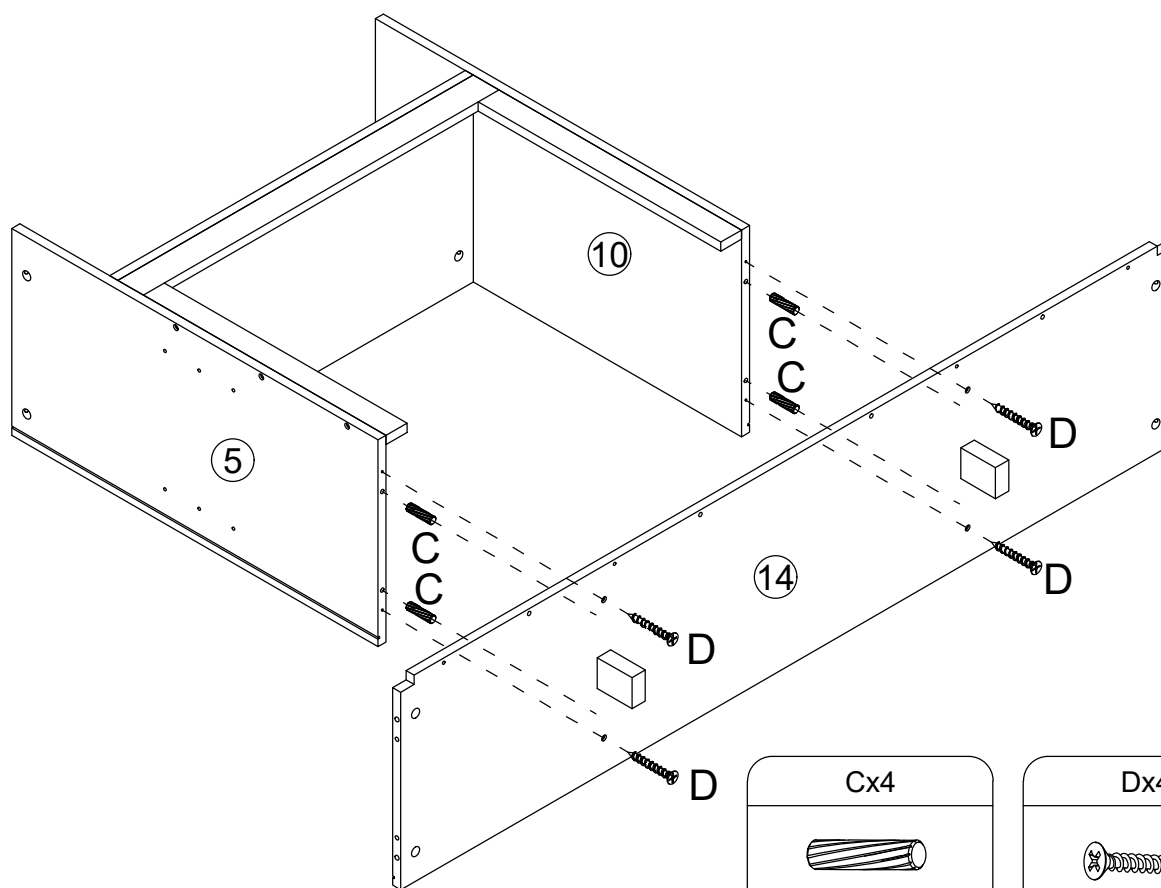

Cx4





Ø6x30mm

Dx4




Ø4x35mm

7

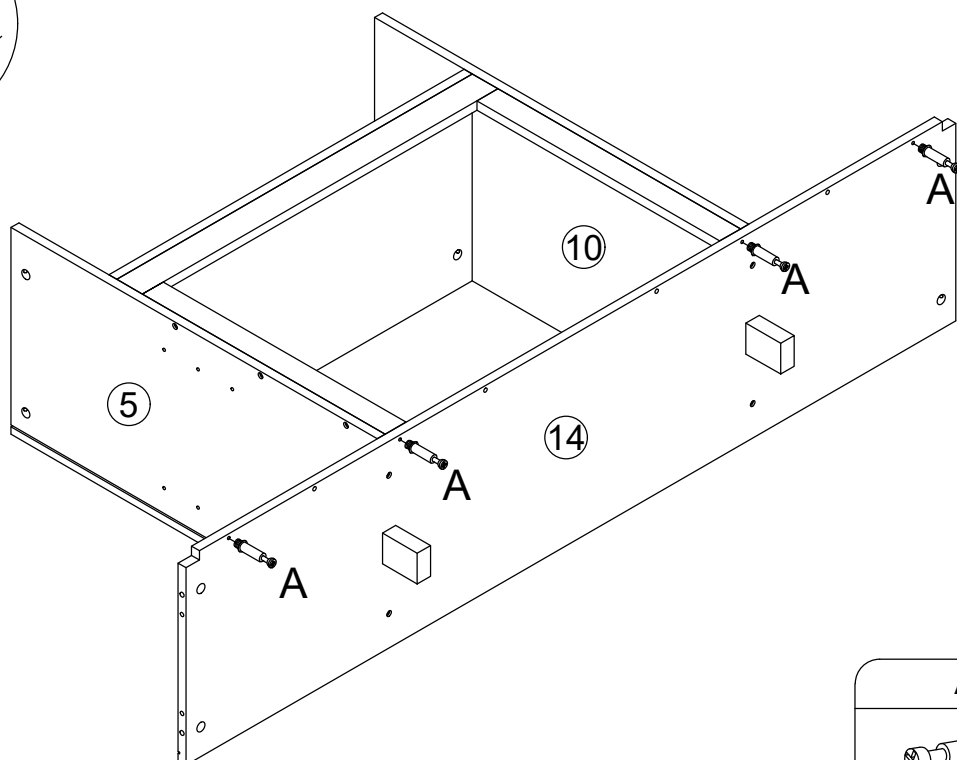
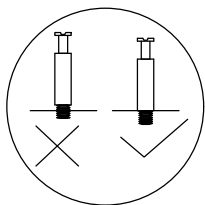


Ax4



Ø6x35mm

8

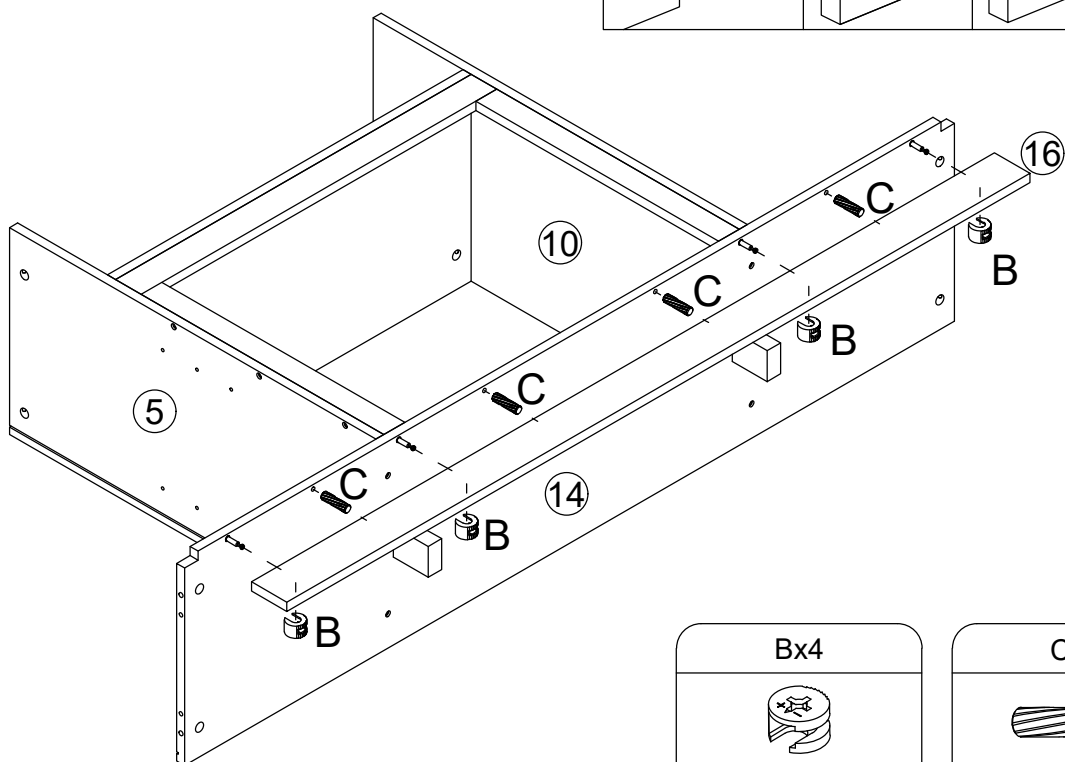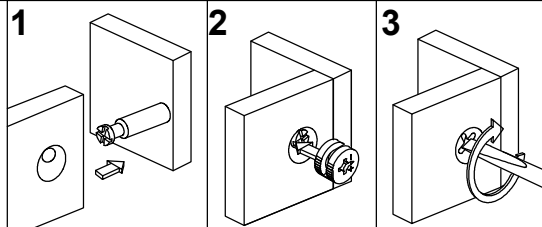

Bx4









Ø15x10mm

Cx4











Ø6x30mm

9

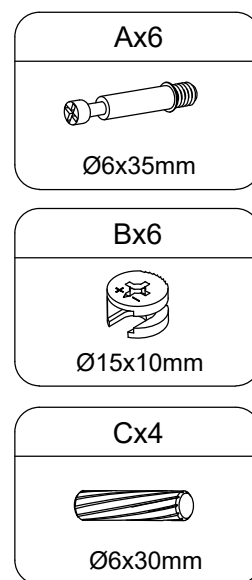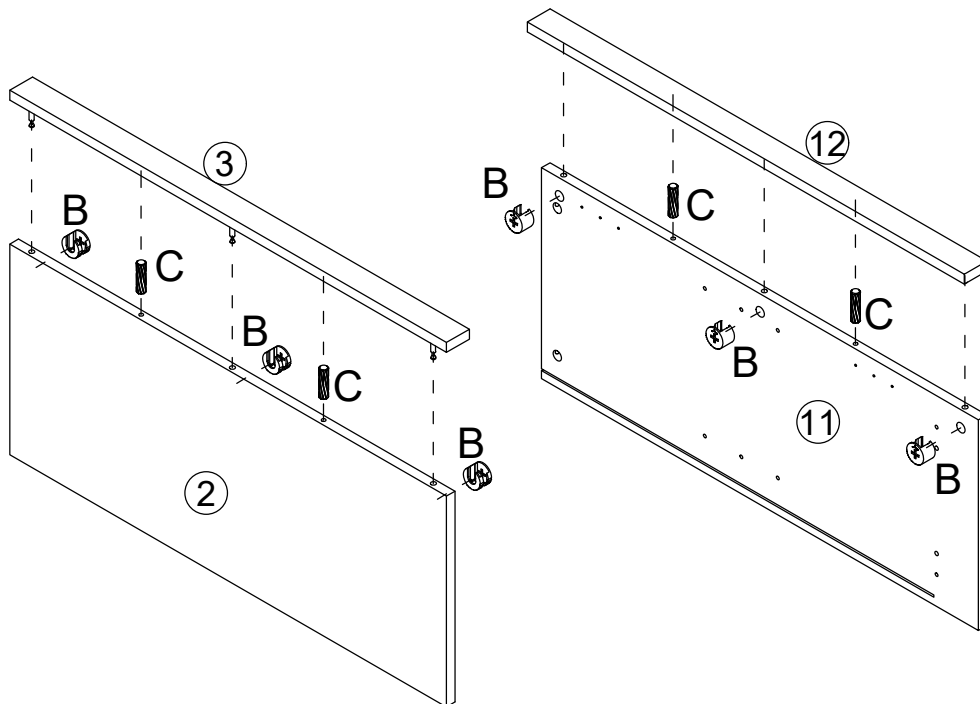
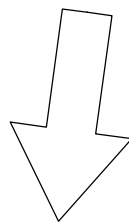
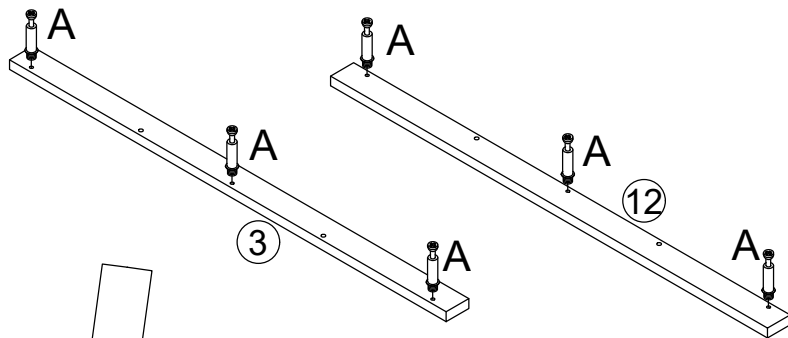
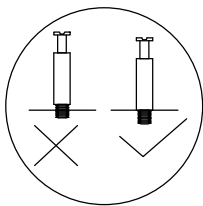
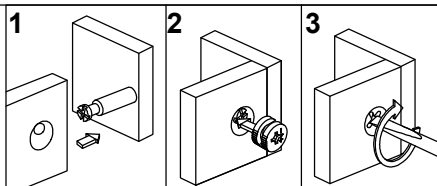


10

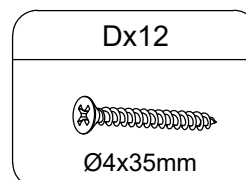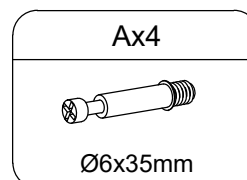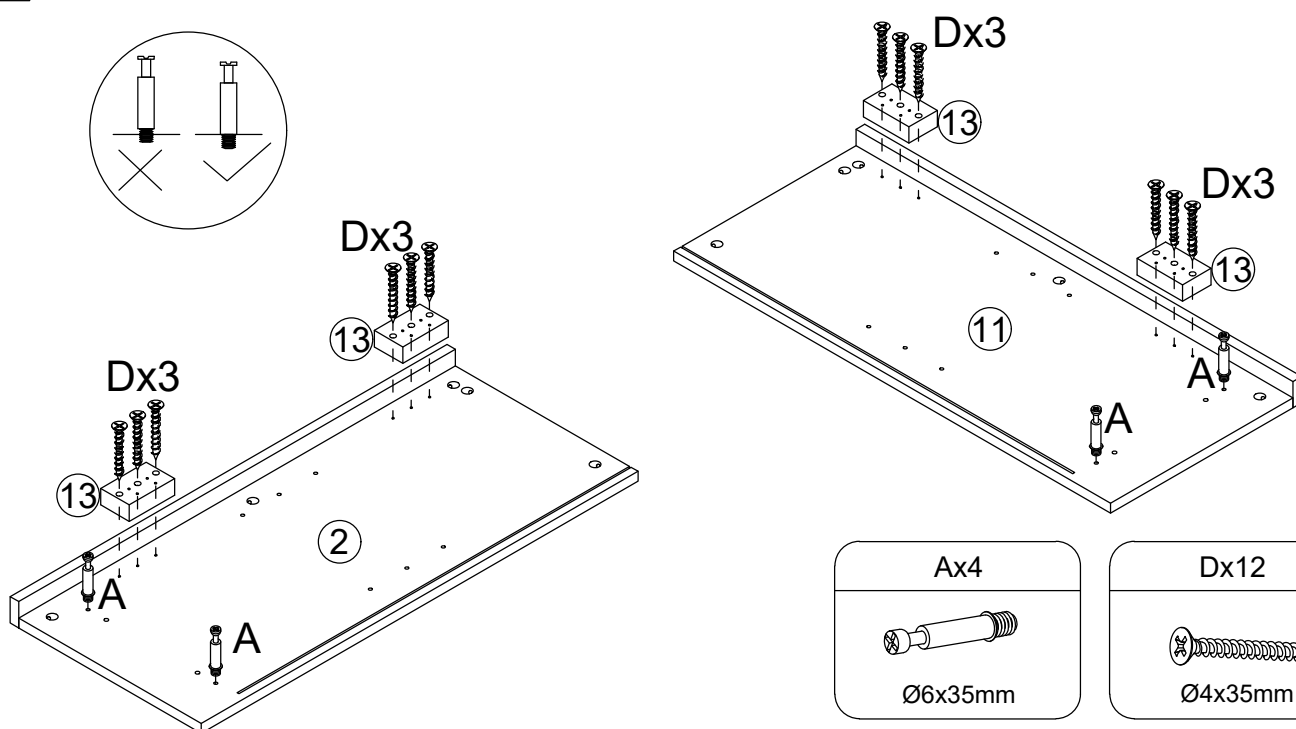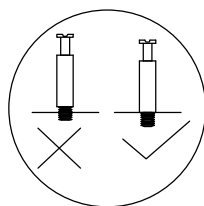


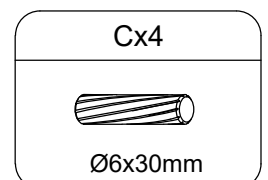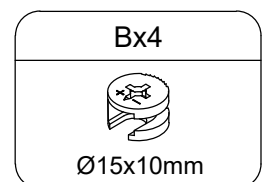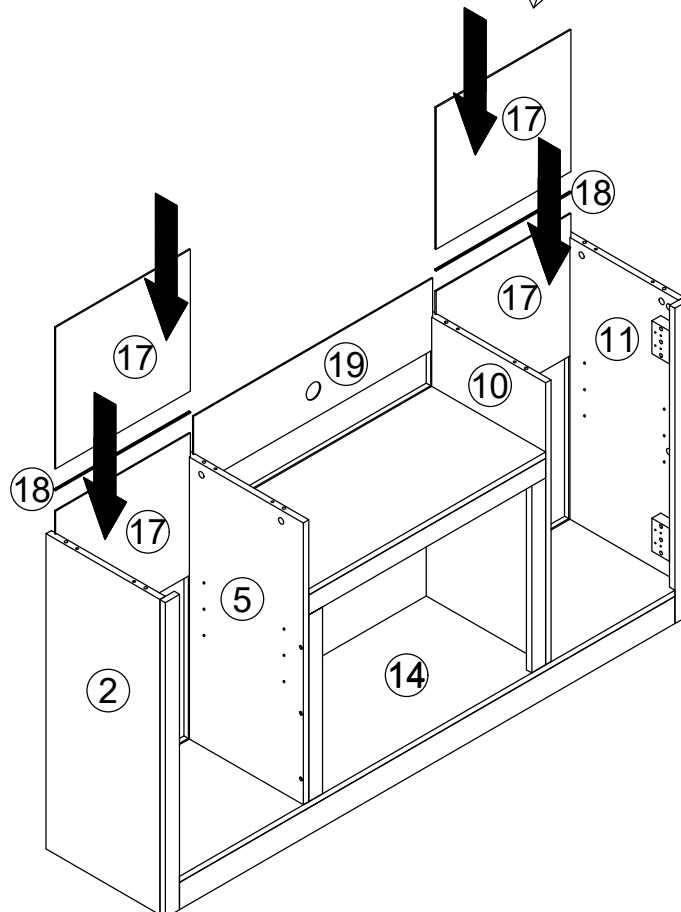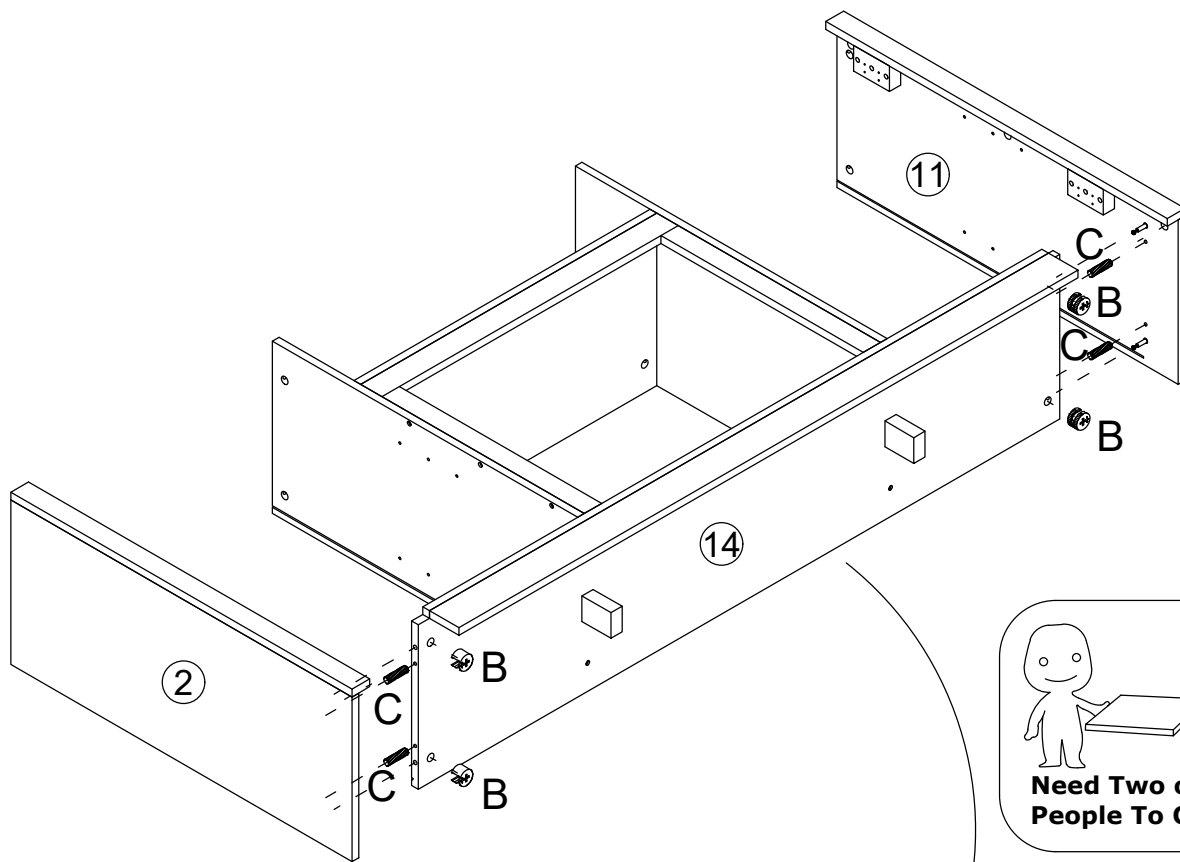

12

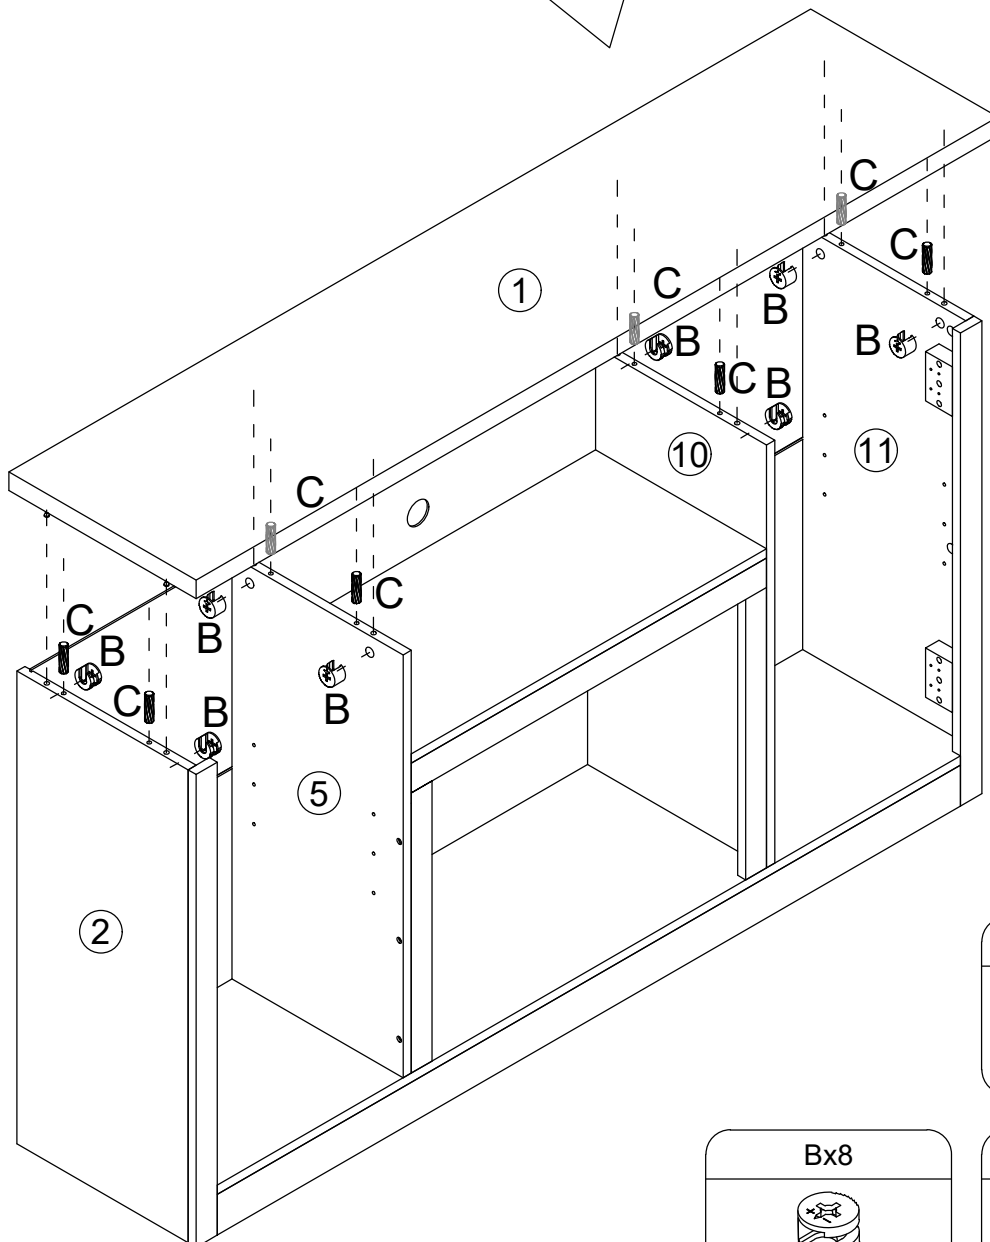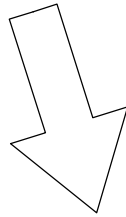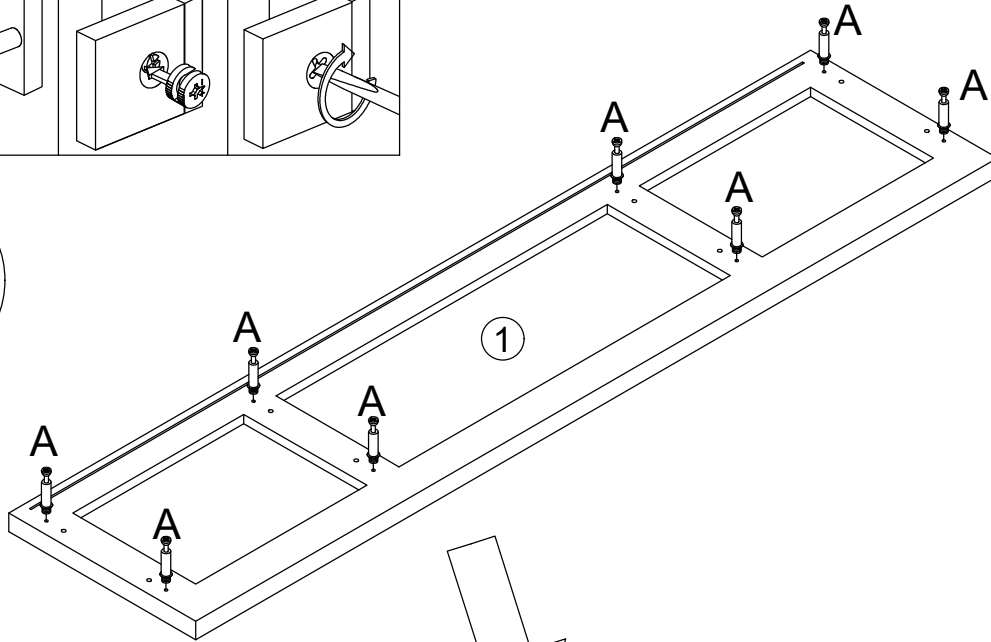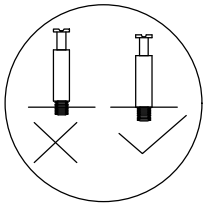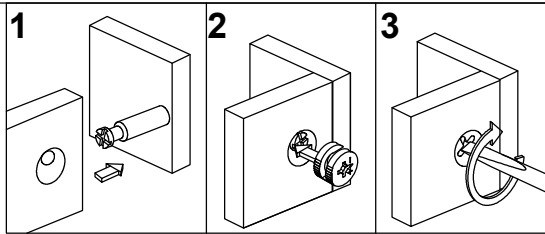

Ax8



Ø6x35mm

Bx8











Ø15x10mm


Cx8



Ø6x30mm

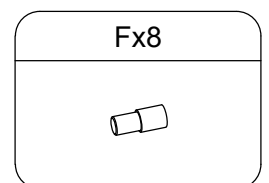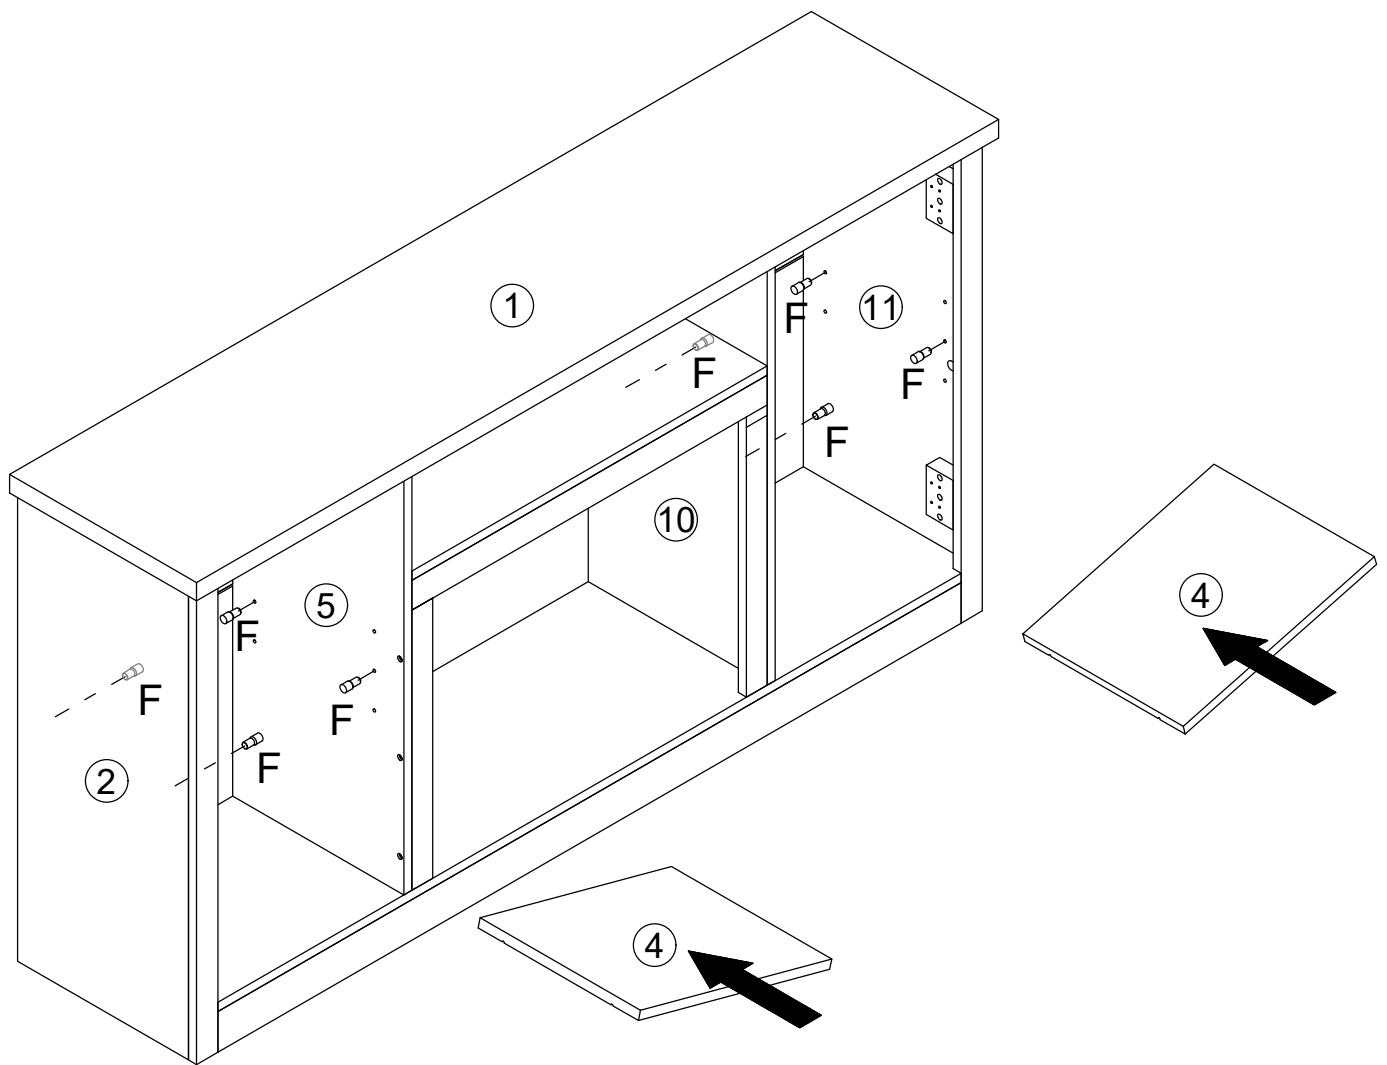

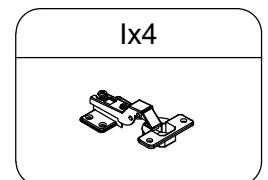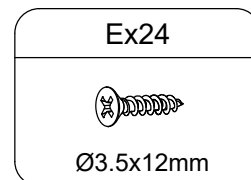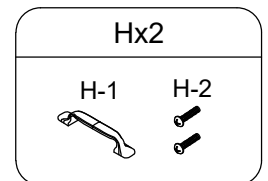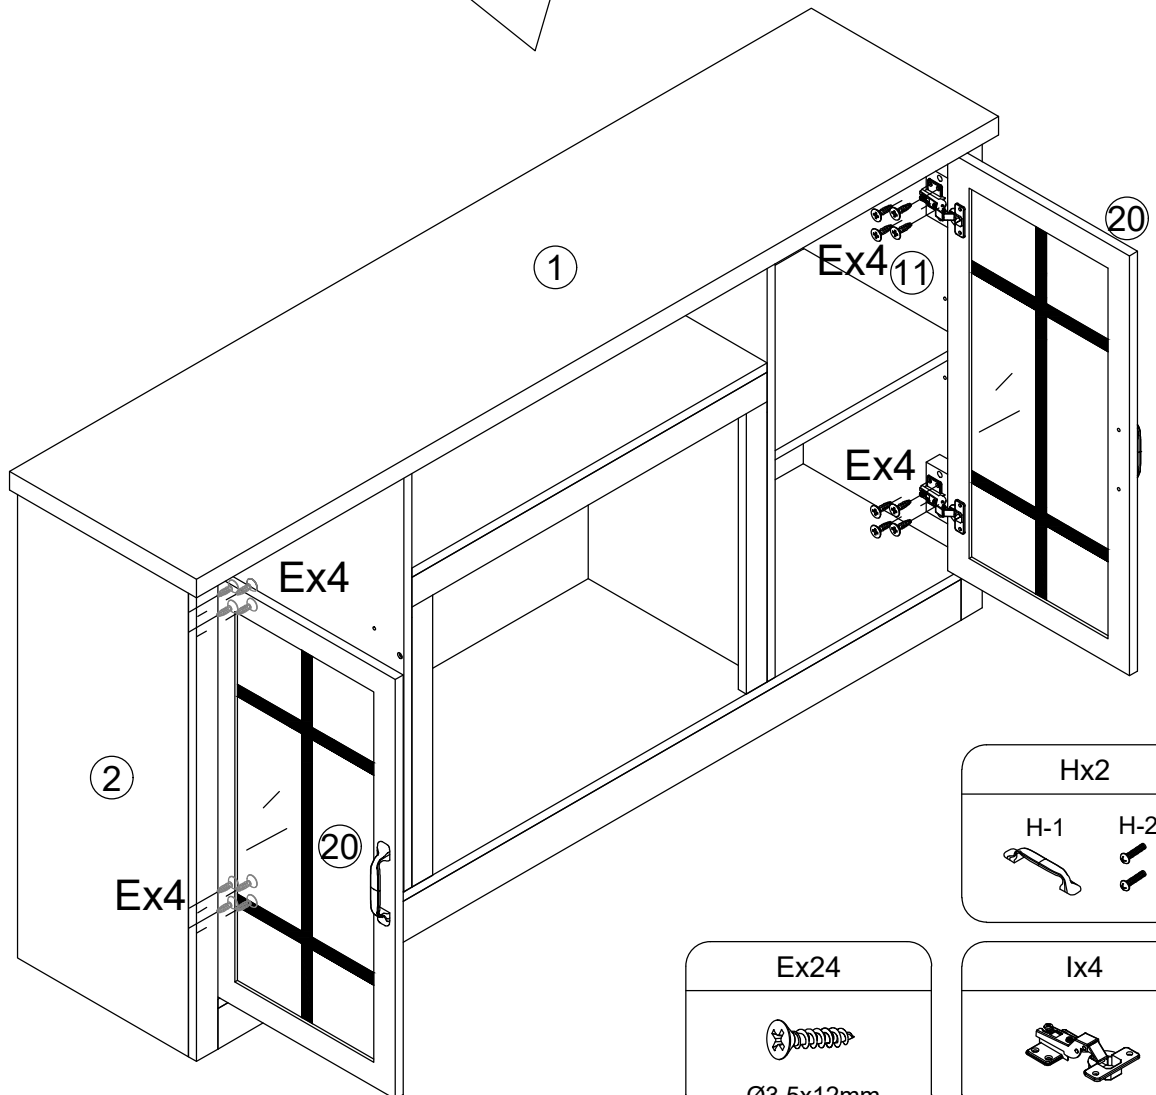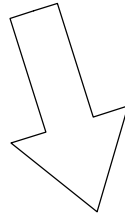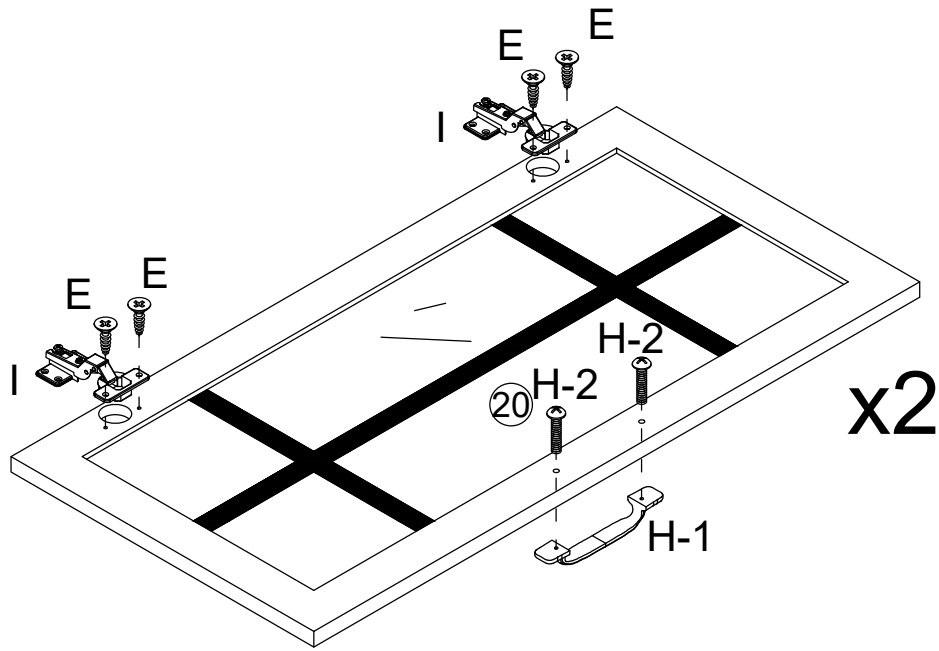

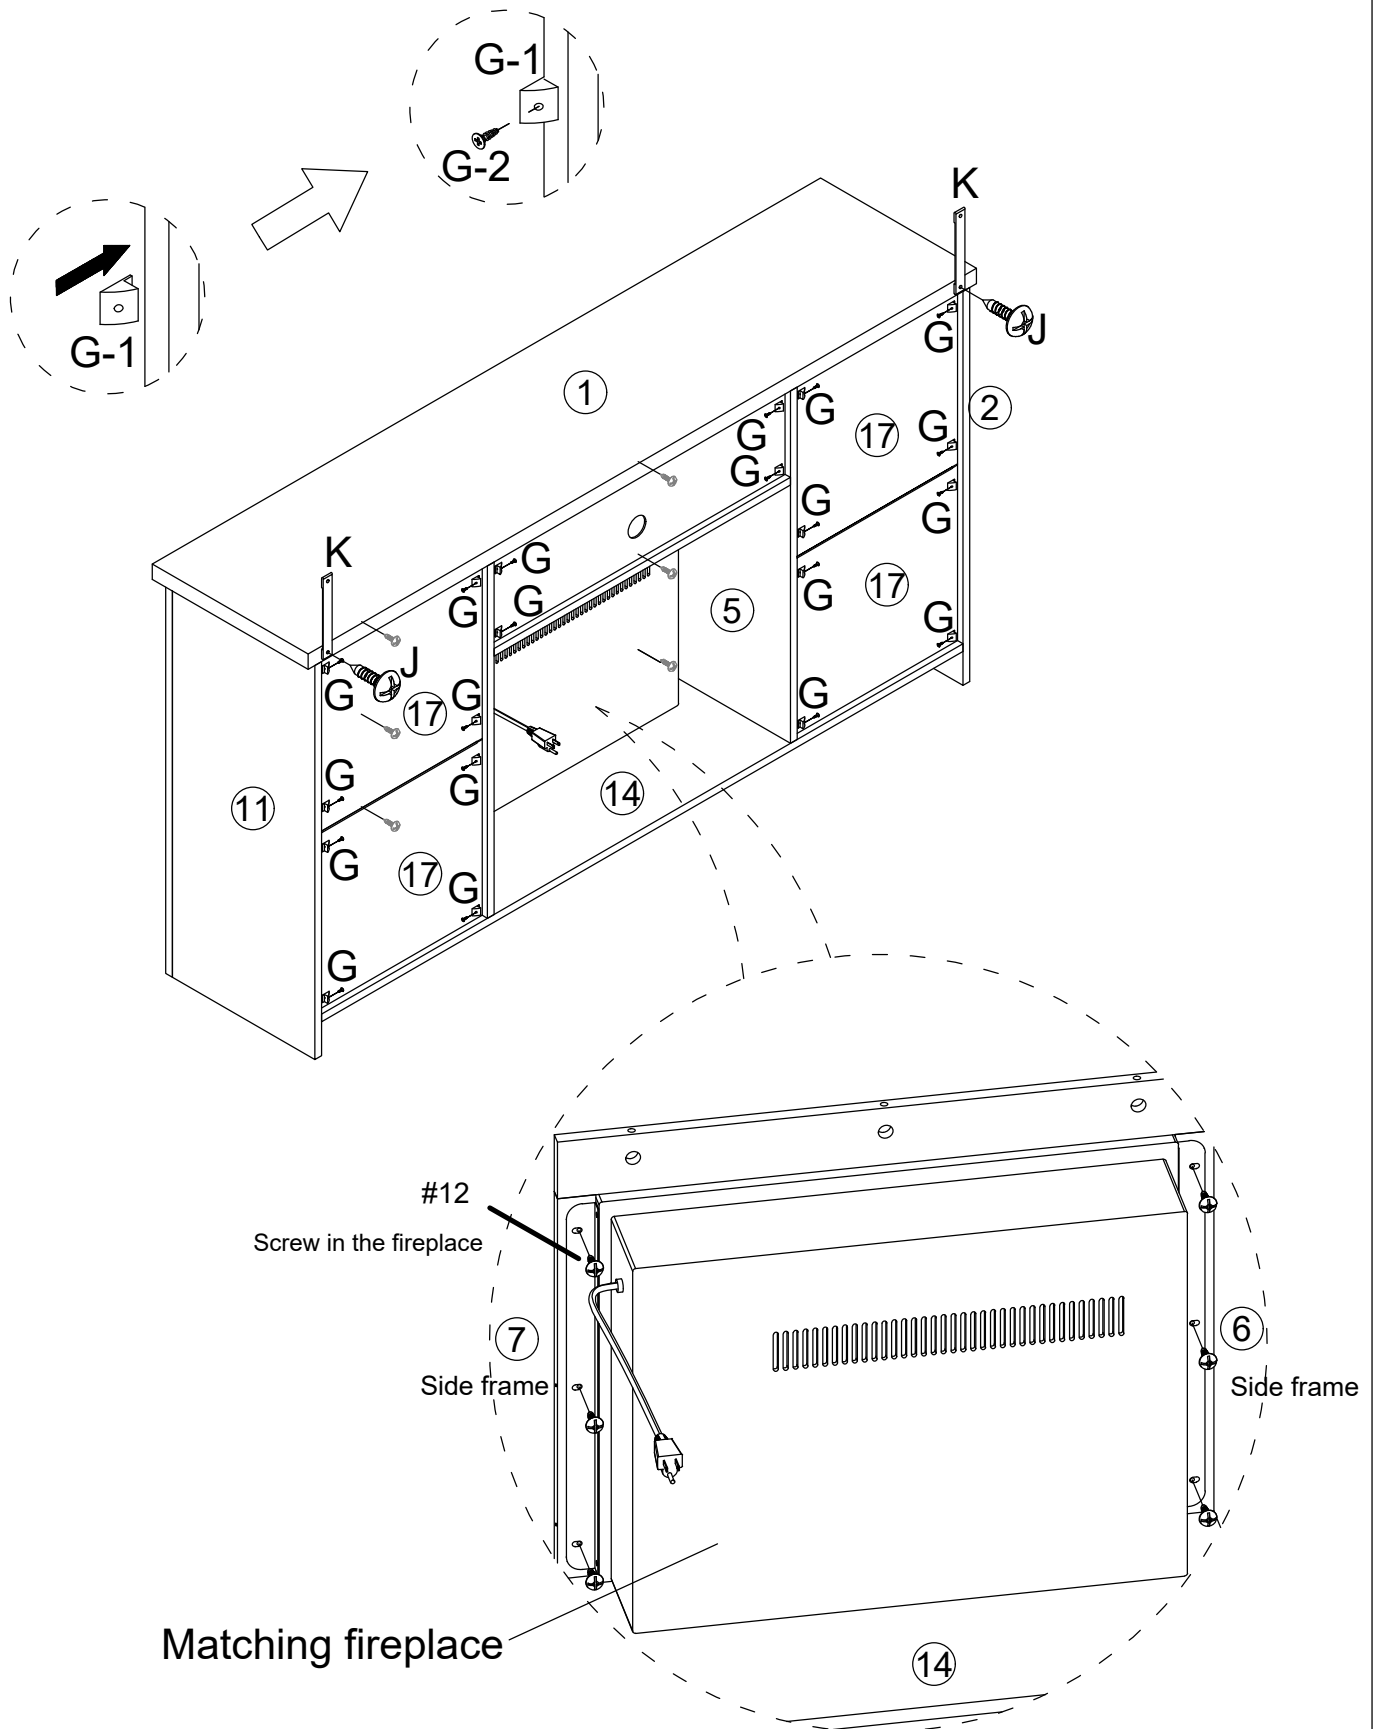

#12x20





Screw in the fireplace

Gx20
G-1 G-2
 

Jx2

Ø4x16mm

Kx2

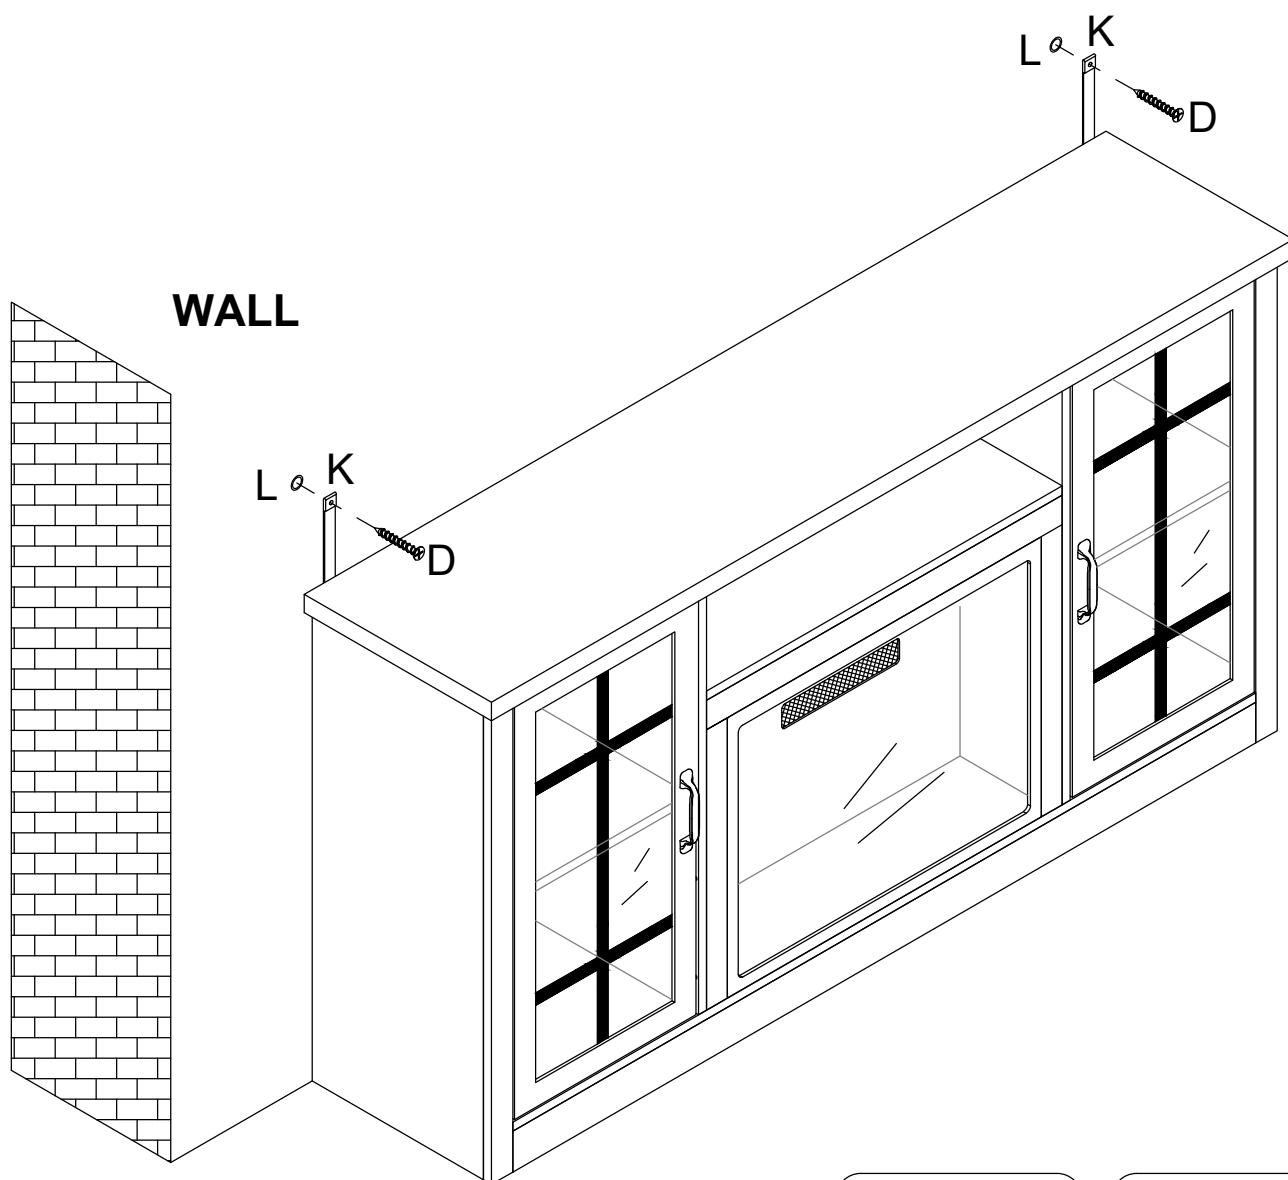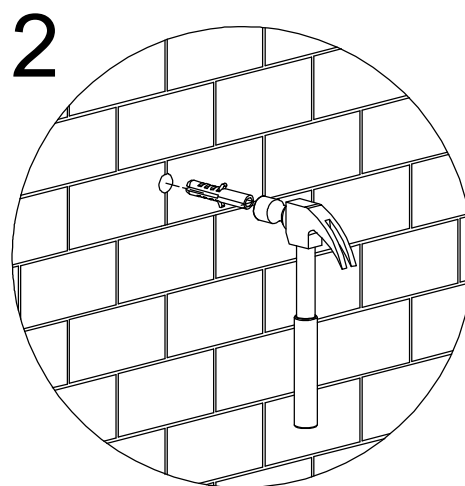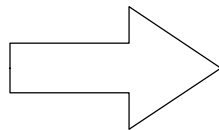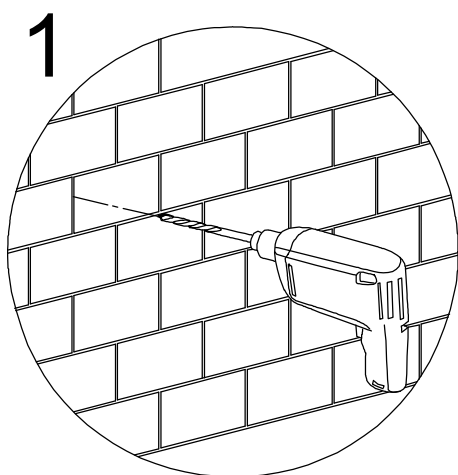



Dx2



Ø4x35mm

Lx2



Ø6x30mm