
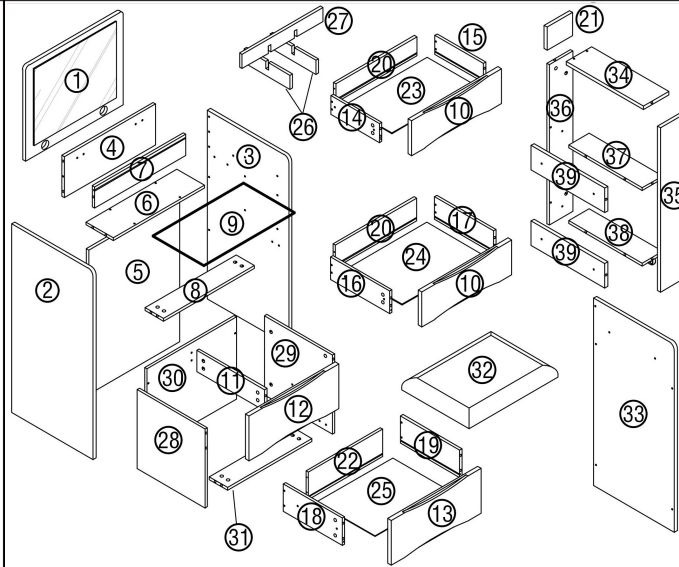


8806 # Vanity installation manual

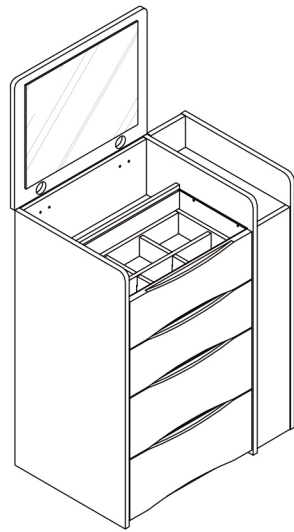

① 1 piece	② 1 piece	③ 1 piece	④ 1 piece	⑤ 1 piece	⑥ 1 piece
⑦ 1 piece	⑧ 1 piece	⑨ 1 piece	⑩ 2 piece(narrow)	⑪ Unnumbered	⑫ 1 piece(Wide)
⑬ 1 piece(Wide)	⑭ 1 piece	⑮ 1 piece	⑯ 1 piece	⑰ 1 piece	⑱ 1 piece
⑲ 1 piece	⑳ 2 piece	㉑ 1 piece	㉒ 1 piece	㉓ 1 piece	㉔ 1 piece
㉕ 1 piece	㉖ 2 piece	㉗ 1 piece	㉘ 1 piece	㉙ 1 piece	㉚ 1 piece
㉛ 1 piece	㉜ 1 piece	㉝ 1 piece	㉞ 1 piece	㉟ 1 piece	㊱ 1 piece
㊲ 1 piece	㊳ 1 piece	㊴ 2 piece			

	(A)	(B)	(C)	(D)	(E)	(F)	(G)	(H)	(I)	(J)	(K)
Name	3-in-1	Wood tip	Door hinge	Silent rail	Shelf support	Self-tapping screws			Small angle code	Foot spikes	Small pulley
Graphic											
Specifications	Φ12/L=40	Φ6*40	直弯	10" 14"	Φ8*18	Φ3.5*12	Φ3.5*14	Φ3.5*35			
Quantity	75 sets	4 piece	2 piece	3 sets 1 sets	5 piece	52 piece	14 piece	13 piece	2 piece	10 piece	2 piece

3 in 1 Instructions

1. The side plate hole is Ø5 in diameter, screw the screw directly into this hole;
2. Insert the other end of the screw into the side hole of the other connecting plate, press the eccentric lock disc into the Ø12 diameter hole, and note that the cross arrow corresponds to the side hole;
3. Use a cross screwdriver to tighten the eccentric lock disc clockwise.

10 Rail Instructions

This part is installed on the side panel of the cabinet

2. Pull the card strip to the bottom with your fingers and pull it in the direction of the arrow to remove it.
1. First, stretch the rail to see the plastic elastic strip (usually black);
- When installing this part, this end is close to the drawer surface.


14 Rail Instructions

This part is installed on the side panel of the cabinet

2. Pull the card strip to the bottom with your fingers and pull it in the direction of the arrow to remove it.
1. First, stretch the rail to see the plastic elastic strip (usually black);
- When installing this part, this end is close to the drawer surface.


Installation steps

Step 1: Use 3-in-1 to connect the partition board and the upper back board to the layer board.

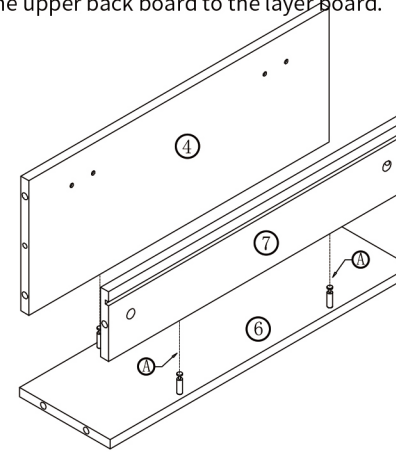


Step 2: Install the brace, lower back panel and left and right side panels.

Note: The side panels are pre-installed with Ø3.5*12 screws to install the 10" rails.

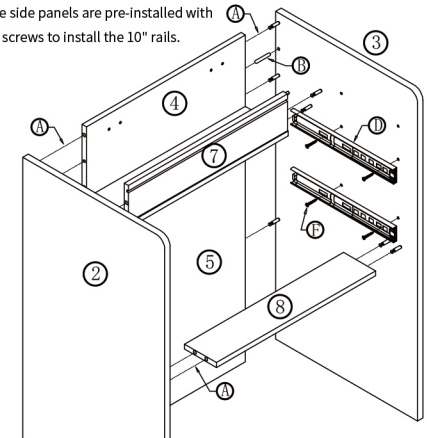


Step 3: Nail the feet first, then install the panel.

Note: Install the door hinge on the panel first, and then use Ø3.5*14 screws to lock the door hinge on the upper back panel.

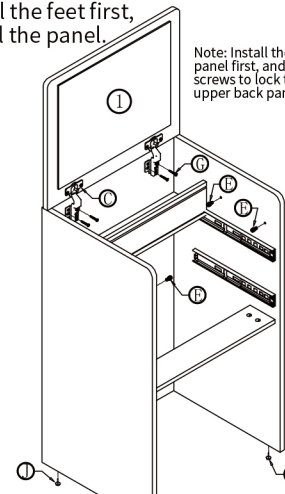


Step 4: Use the 3-in-1 kit to assemble the dressing stool side panels and pull strips according to the diagram.


Note: First nail the foot nails on the side panel of the stool, and use Ø3.5*12 screws to install the rails according to the guide holes. The rails should be flush with the front edge.

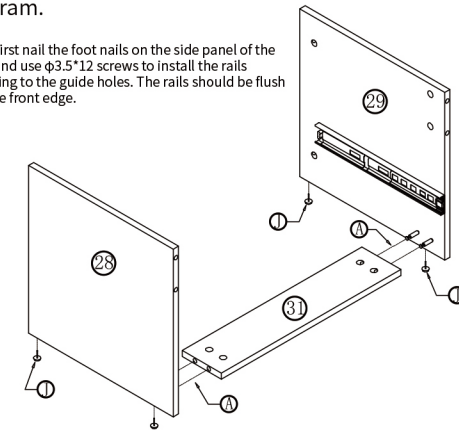

Step 5: Install the dressing stool back panel and false drawer surface.

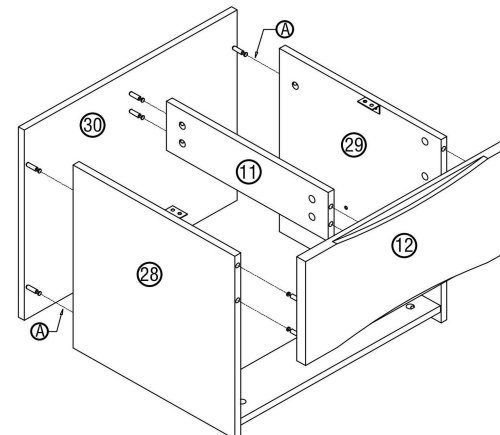

Step 6: Install the seat cushion.

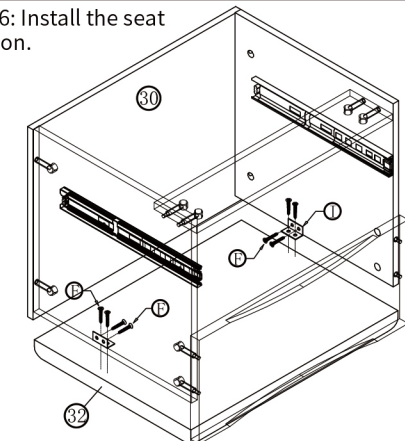

Note: Place the seat cushion in the appropriate position, turn the dressing stool upside down, and fix it to the side panel with screws and small angle brackets.