

# 80126-TWIN BED ASSEMBLY INSTRUCTION

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.

**IMPORTANT : PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY.**

**"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"**

**"DO NOT OVERTIGHT ANY HARDWARE"**

**WARNING : SMALL PARTS AND HARDWARE NOT FOR CHILDREN UNDER 3 YEARS. ADULT ASSEMBLY REQUIRED.**

## TABLE OF CONTENTS


HARDWARES LIST	PAGE 2
PARTS LIST	PAGE 3 - 4
PARTS' LOCATION	PAGE 5
ASSEMBLY STEPS	PAGE 6 - 12
ASSEMBLY COMPLETED	PAGE 12

## ASSEMBLY TOOLS REQUIRED


### 1. Screwdriver (not provide)



### 2. Hammer (not provide)

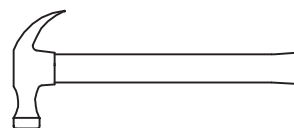





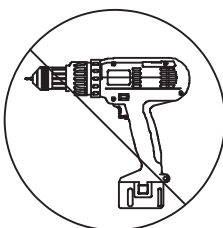






Skip the power drill this time.












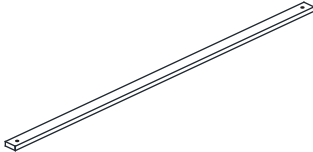
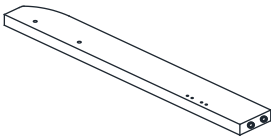
# 80126-TWIN BED ASSEMBLY INSTRUCTION

## HARDWARES LIST

ITEM	DESCRIPTION	DRAWING	QTY
A	JCBC SCREW M8 x 70MM		4 PCS
B	WOOD DOWEL M10 x 30MM		4 PCS
C	JCBC SCREW M6 x 15MM		20 PCS
D	JCBC SCREW M6 x 35MM		8 PCS
E	JCBC SCREW M6 x 50MM		2 PCS
F	SPRING WASHER M6 x 12MM		10 PCS
G	FLAT WASHER M6 x 19MM		10 PCS
H	SPRING WASHER M8 x 13MM		4 PCS
I	FLAT WASHER M8 x 22MM		4 PCS
J	M4 ALLEN KEY (100MM)		1 PC
K	M5 ALLEN KEY (65MM)		1 PC

# 80126-TWIN BED ASSEMBLY INSTRUCTION

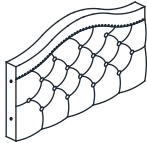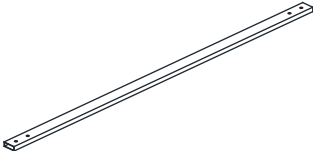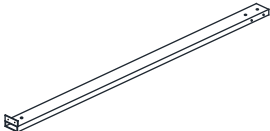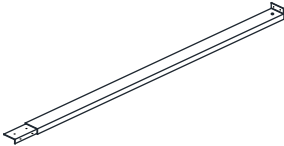

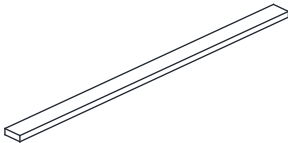



## PARTS LIST

ITEM	DESCRIPTION	DRAWING	QTY
1	HEADBOARD		1 PC
2	FOOTBOARD METAL TUBE		1 PC
3	FOOTBOARD LEG (L)		1 PC
4	FOOTBOARD LEG (R)		1 PC
5	SIDE RAIL		2 PCS
6	SIDE RAIL		2 PCS
7	SIDE RAIL LEG		2 PCS
8	SLAT		12 PCS
9	SOCKET		24 PCS
10	SUPPORT RAIL		2 PCS
11	WING (L)		1 PC

MORE PARTS DETAIL IN NEXT PAGE...


# 80126-TWIN BED ASSEMBLY INSTRUCTION
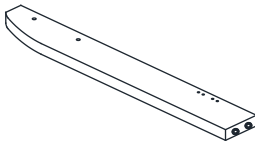
## PARTS LIST

ITEM	DESCRIPTION	DRAWING	QTY
12	WING (R)		1 PC
13	WING SUPPORT (L)		1 PC
14	WING SUPPORT (R)		1 PC
15	SIDE RAIL COVER		2 PCS
16	FOOTBOARD COVER		1 PC
24	SELF-ADHESIVE VELCRO TAPE		1 PC


# 80126-TWIN BED ASSEMBLY INSTRUCTION

## PARTS ' LOCATION

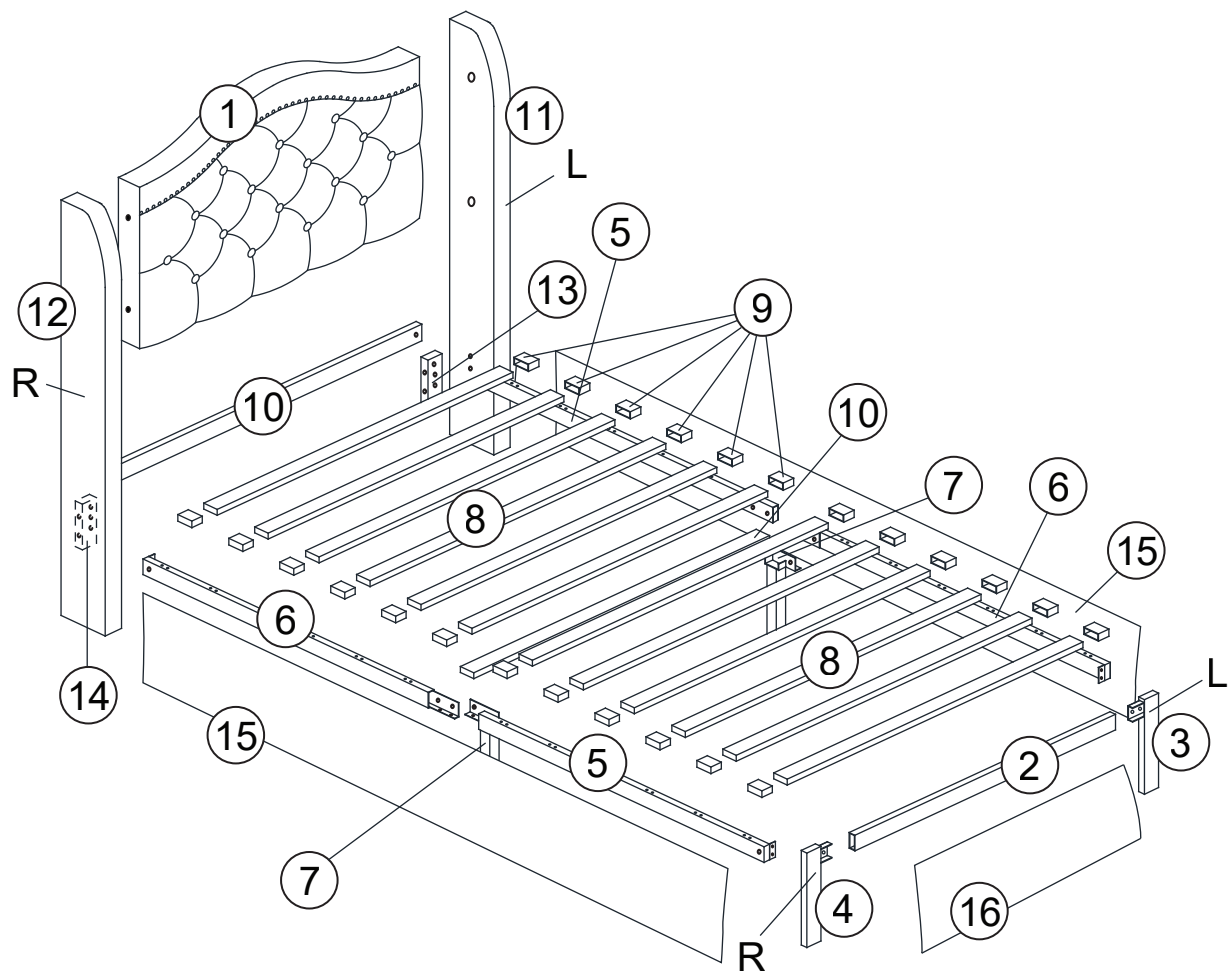


# 80126-TWIN BED ASSEMBLY INSTRUCTION

## STEP 1

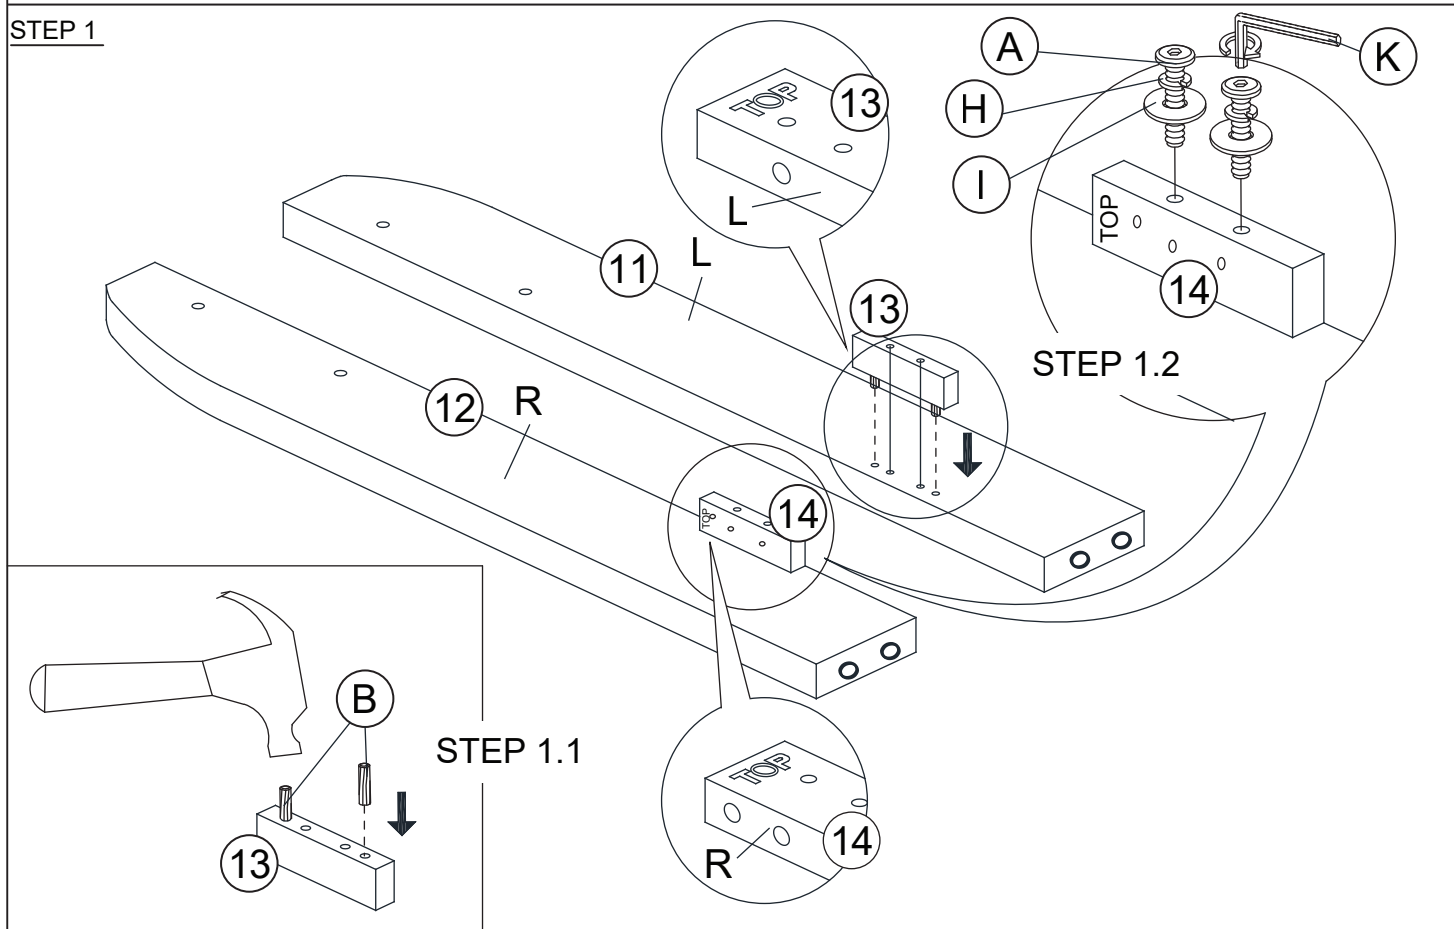


## STEP 2

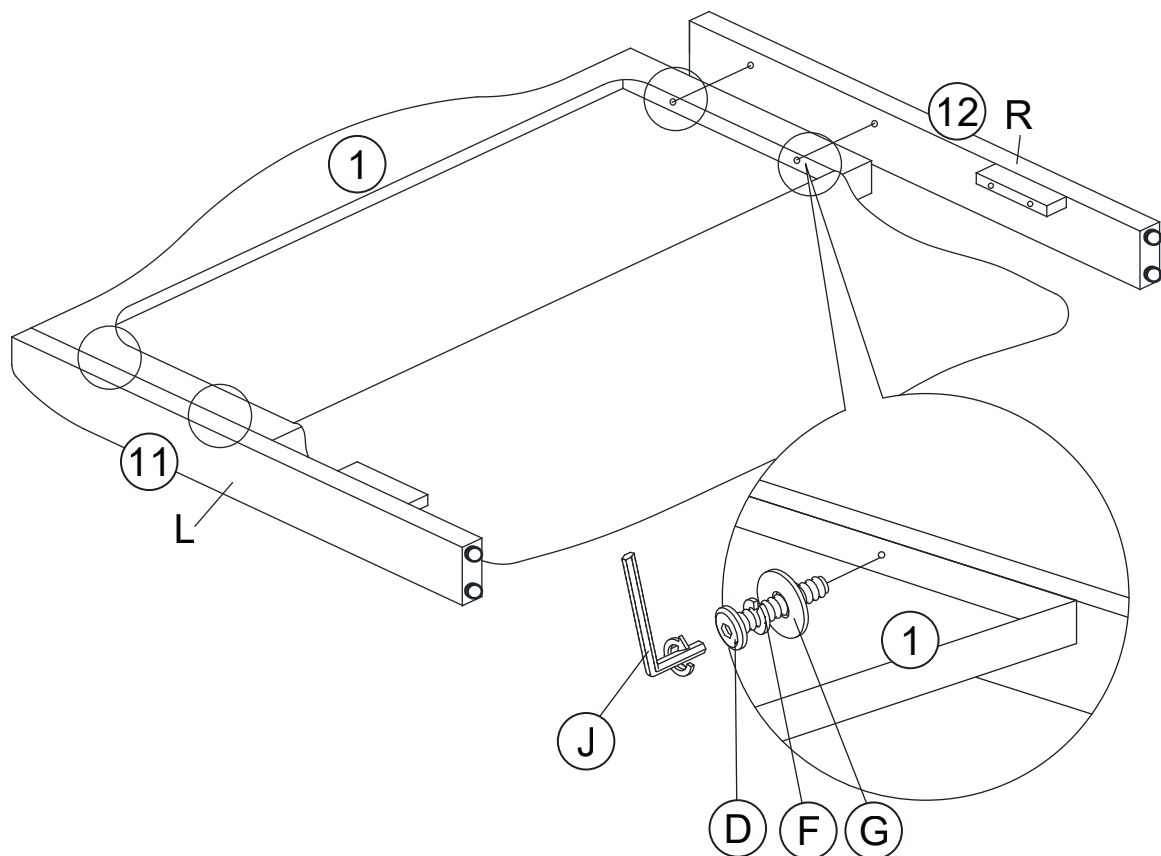


# 80126-TWIN BED ASSEMBLY INSTRUCTION

## STEP 3

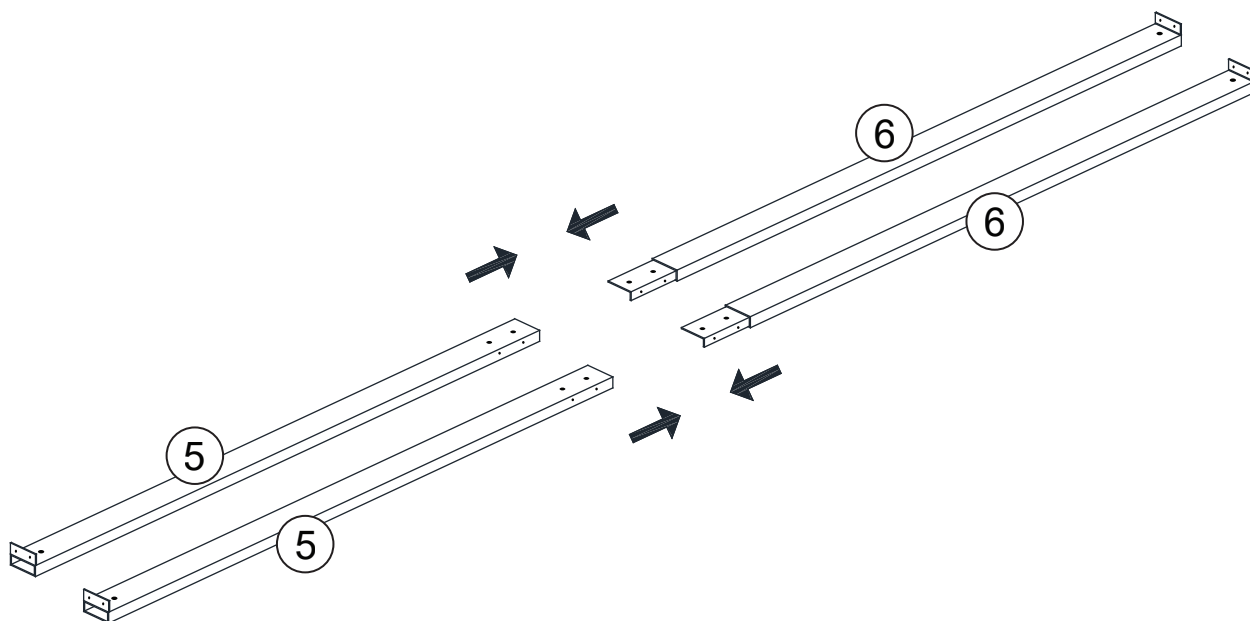


## STEP 4

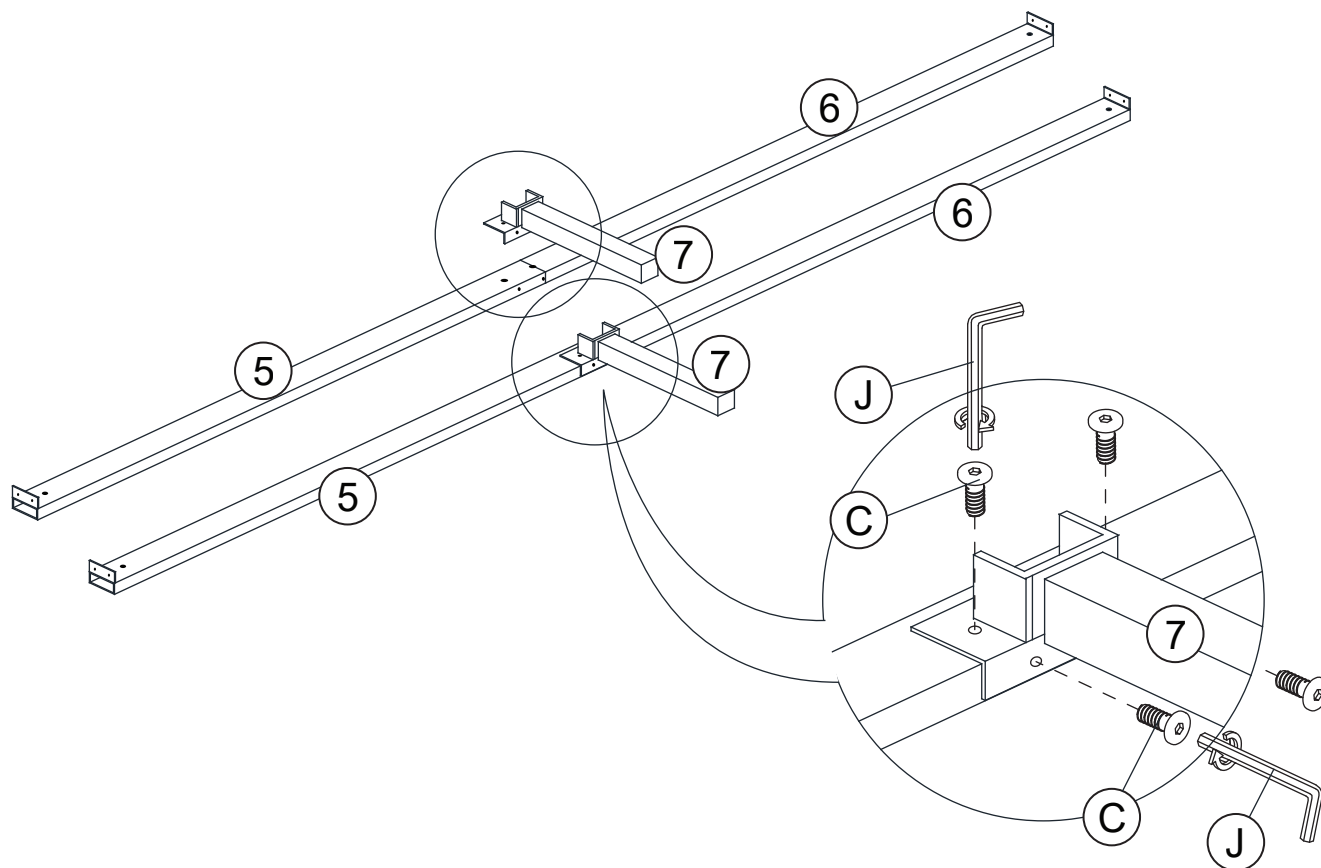


## 80126-TWIN BED ASSEMBLY INSTRUCTION

### STEP 5

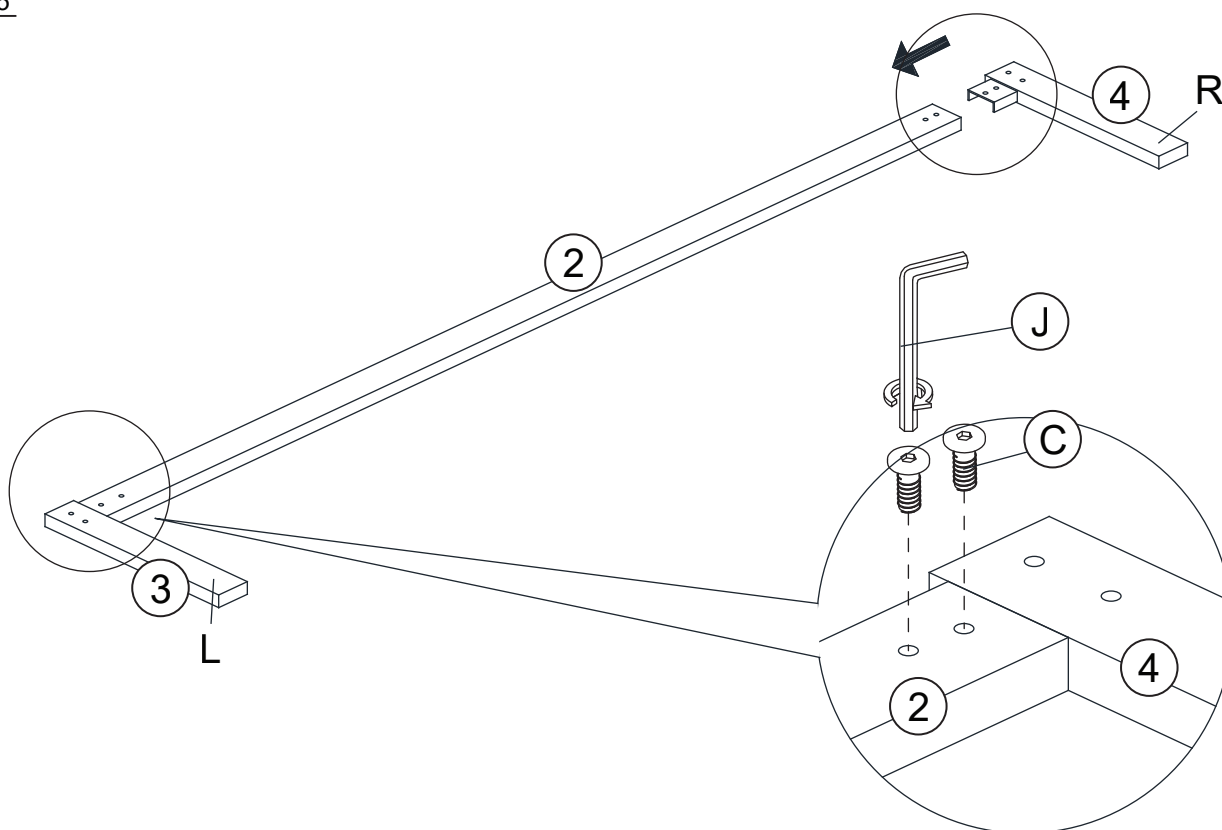

### STEP 6

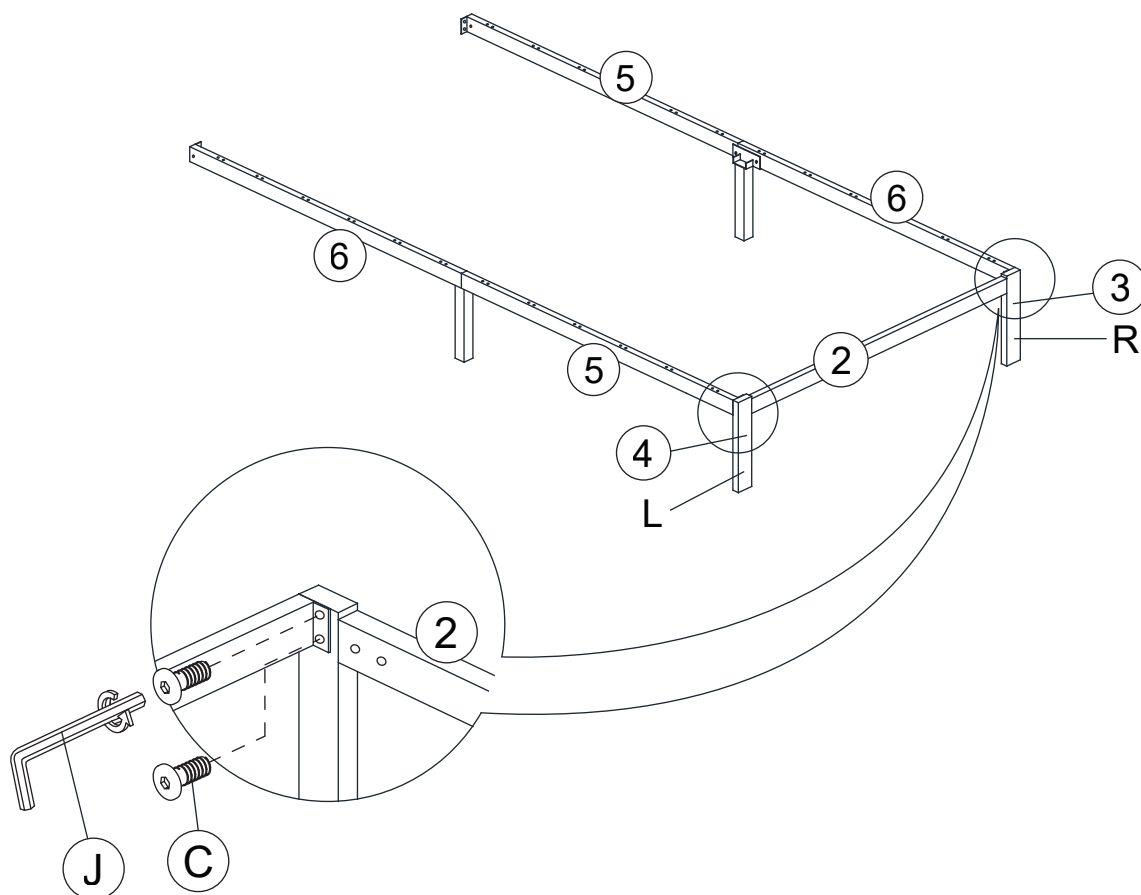

# 80126-TWIN BED ASSEMBLY INSTRUCTION

## STEP 7

### REMARK:

Clean the sticking part and keep it clean before sticking the velcro, to avoid affecting the stickiness.

velcro will be end here

velcro start tape from here

### REMINDER:

Do not cover the holes and paste on the upper position of the side view of the side rail as shown.

24

### STEP 7.2

### REMARK:

Tear off the white isolation paper on the back of velcro hook

### STEP 7.1

24

### STEP 7.3

REMARK:  
Cut off the exceeded tape

## STEP 8

side rail cover will be end here

side rail cover will be end here

side rail cover start tape from here


side rail cover start tape from here

side rail cover will be end here


15

# 80126-TWIN BED ASSEMBLY INSTRUCTION

## STEP 9

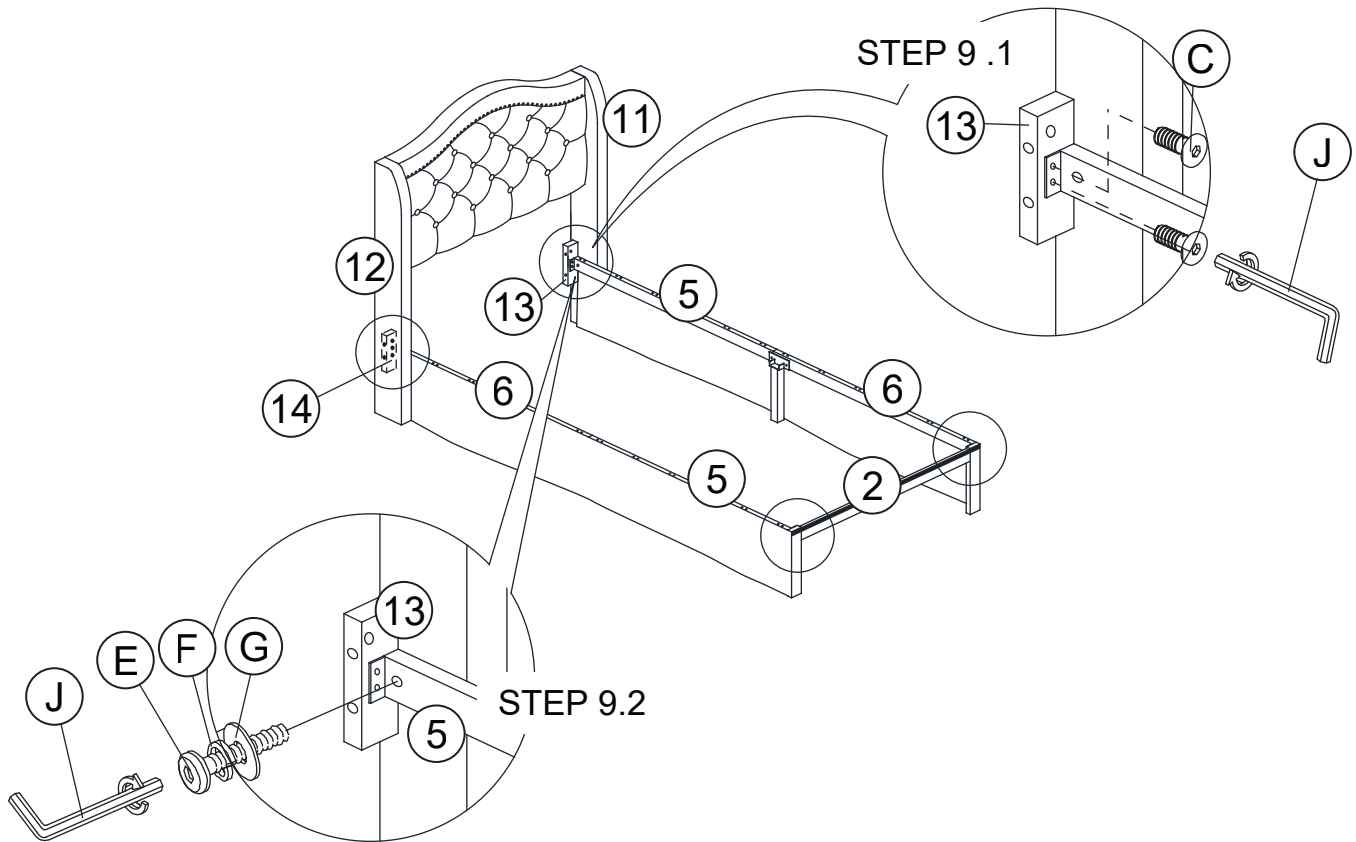


## STEP 10

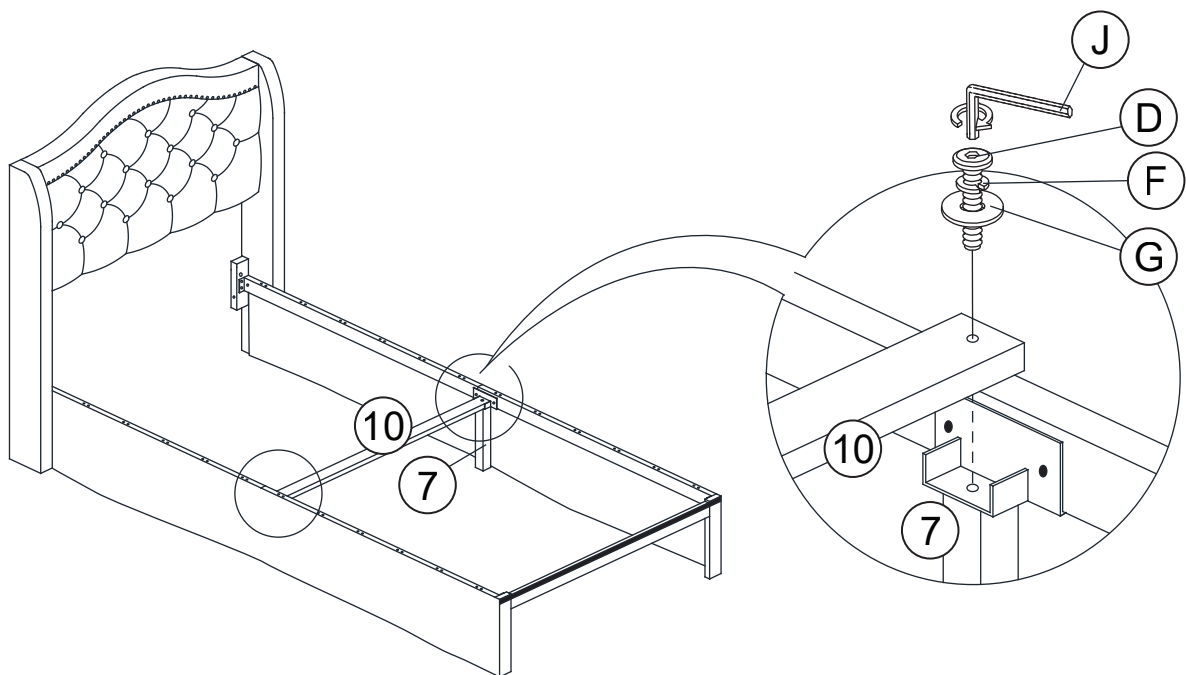


## 80126-TWIN BED ASSEMBLY INSTRUCTION

### STEP 11

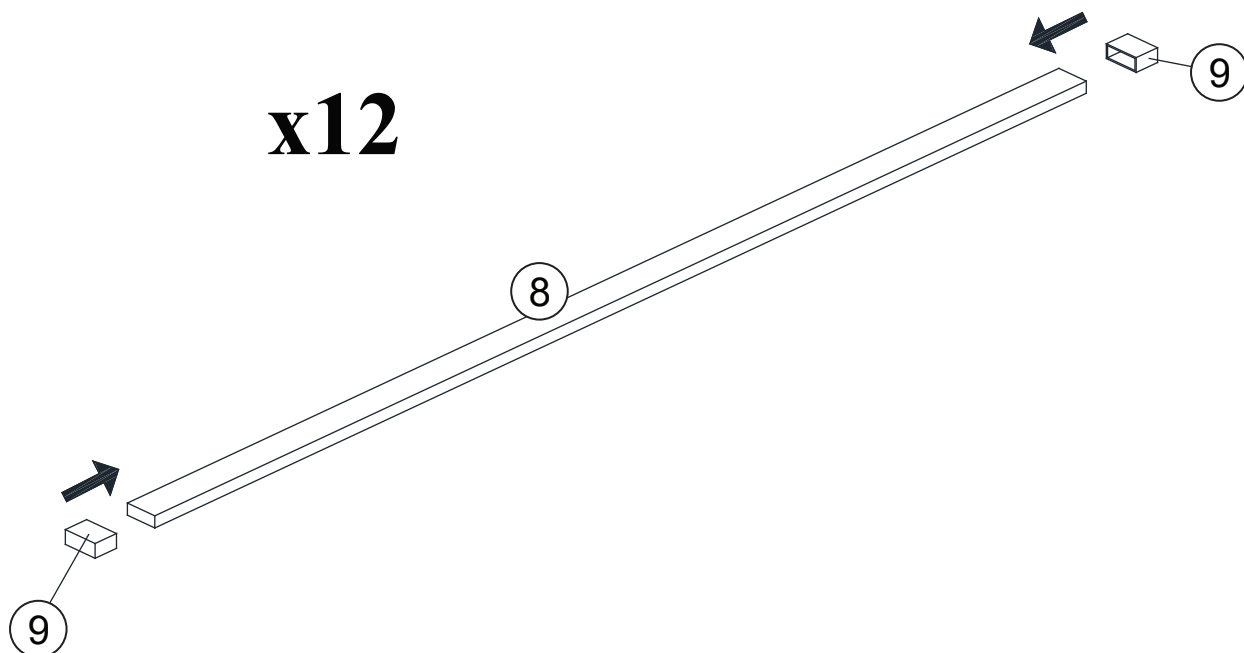

### STEP 12

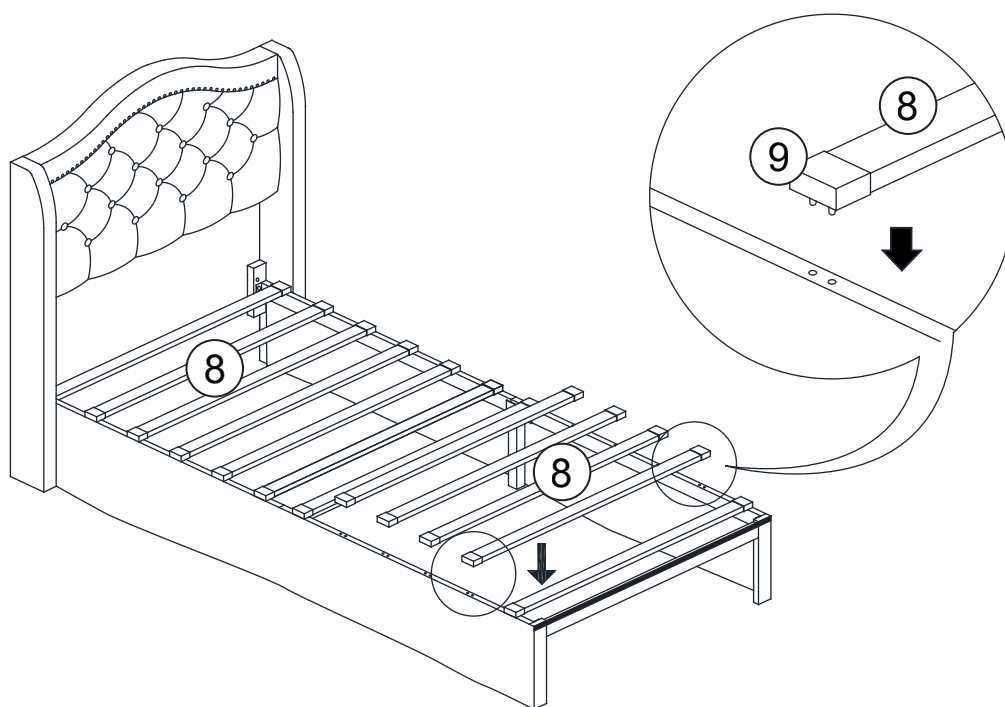

### STEP 13

