




Commercial Work Bench Assembly Instructions

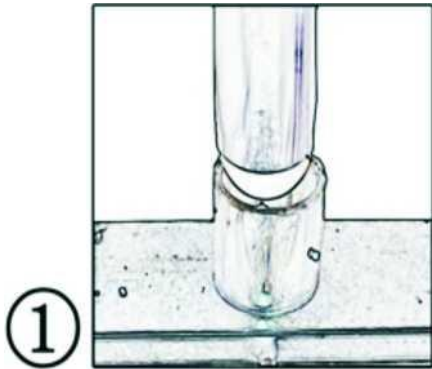


① Let the tabletop upside down on a soft cloth to prevent scratches. Insert one pipe into a corner support.

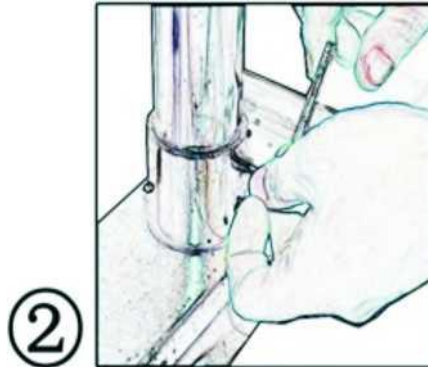


② Remove the Allen screws and Allen wrench.

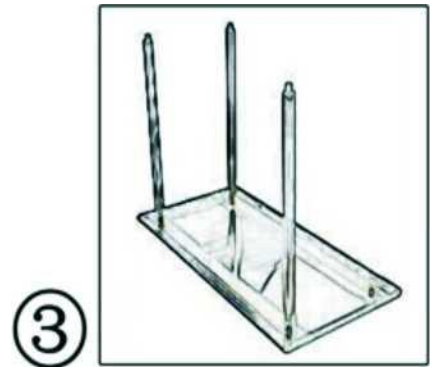


③ Each corner support requires two Allen screws. Wait until the table is completely assembled before securely tightening each Allen screw.

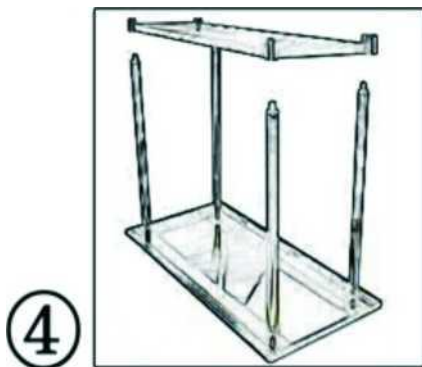

④ After all four pipes have been attached, lower the adjustable table base and let each pipe into the base holes.

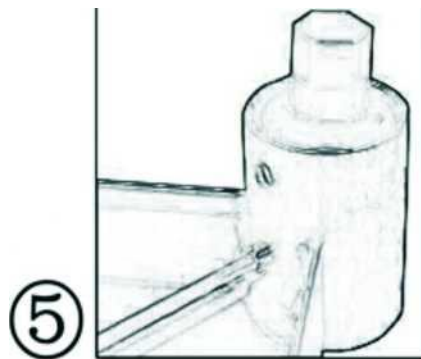

⑤ Each corner support requires two Allen screws. Wait until the table is completely assembled before securely tightening each Allen screw.

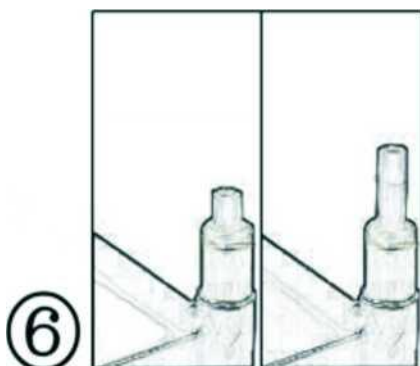

⑥ All four pipes can be adjusted for the surfaces that are not completely level. Rotate the plastic foot pad for differences in floor surface.



⑦ Turn the table over after each screw is securely tightened. Two people should be required to rotate the table.