

Wash Cabinet

Assembly Instructions - Please keep for future reference



Dimensions

Width- 35.83inch

Depth-18.43inch

Height-36.22inch



WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning –
please follow these instructions














To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below



Note: The quantities are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required

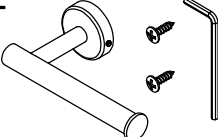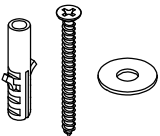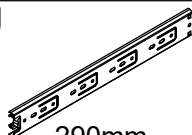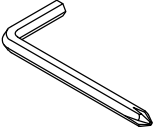A  Cam Bolt × 61+2	B  Cam Bolt × 61+2	C  6×30mm Dowel × 22+2	D  3.5×14mm Door Stopper × 1	E  Bar Handle × 3
F  Towel Rail × 1	G  Knob × 3	H  M4×18mm Screw × 4	I  M4×8mm Screw × 5+1	J  3×12mm Screw × 32+2
K  3.5×14mm Screw × 24+2	L  4×40mm Screw × 22+2	M  4×30mm Screw × 34+2	N  L-Shaped Steel × 2	O  L-Shaped Steel × 2
P  Ø15×4mm EVA Pad × 4	Q  Table Leg Pad × 5	R  Shelf Support × 4	S  Anti-Tip Device × 2	T  3.5×14mm Door Hinge × 4
U  290mm Drawer Runner × 8	V  Flat Hex Key × 1			

Tools required Not Included



Phillips screwdriver
(medium & large)

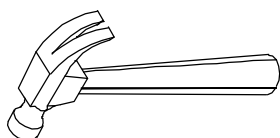


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

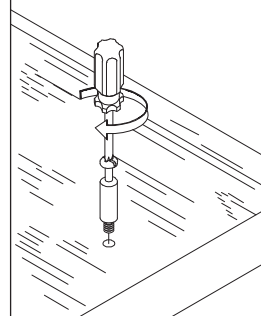

Step 2

Push the male camlock into the entry hole.

2

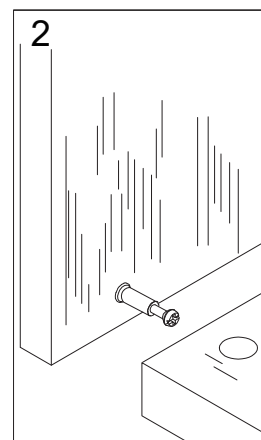


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

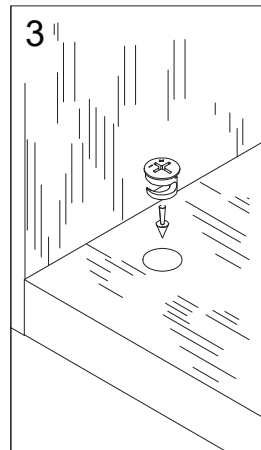


Step 4

Turn the female camlock clockwise with a screwdriver.







You should feel a click when the camlock is locked in place.

The joint is now secure.

4

















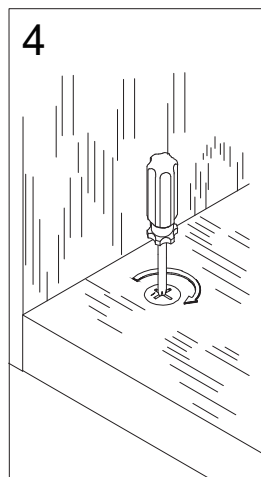


Assembly Instructions

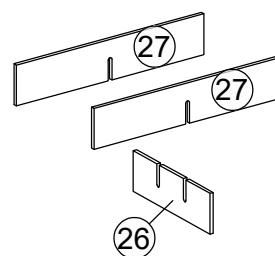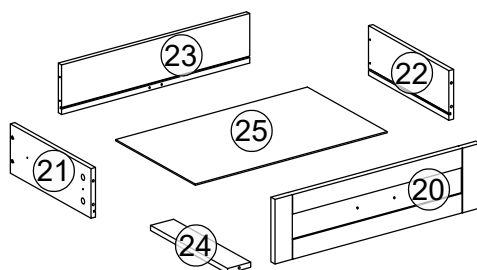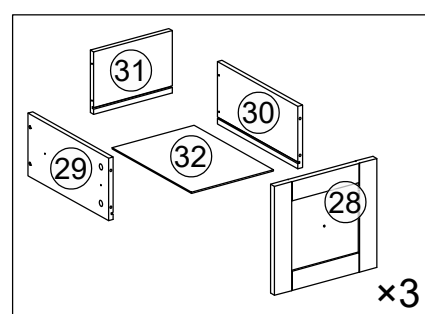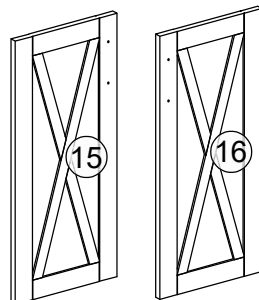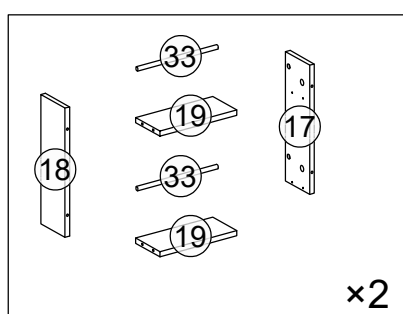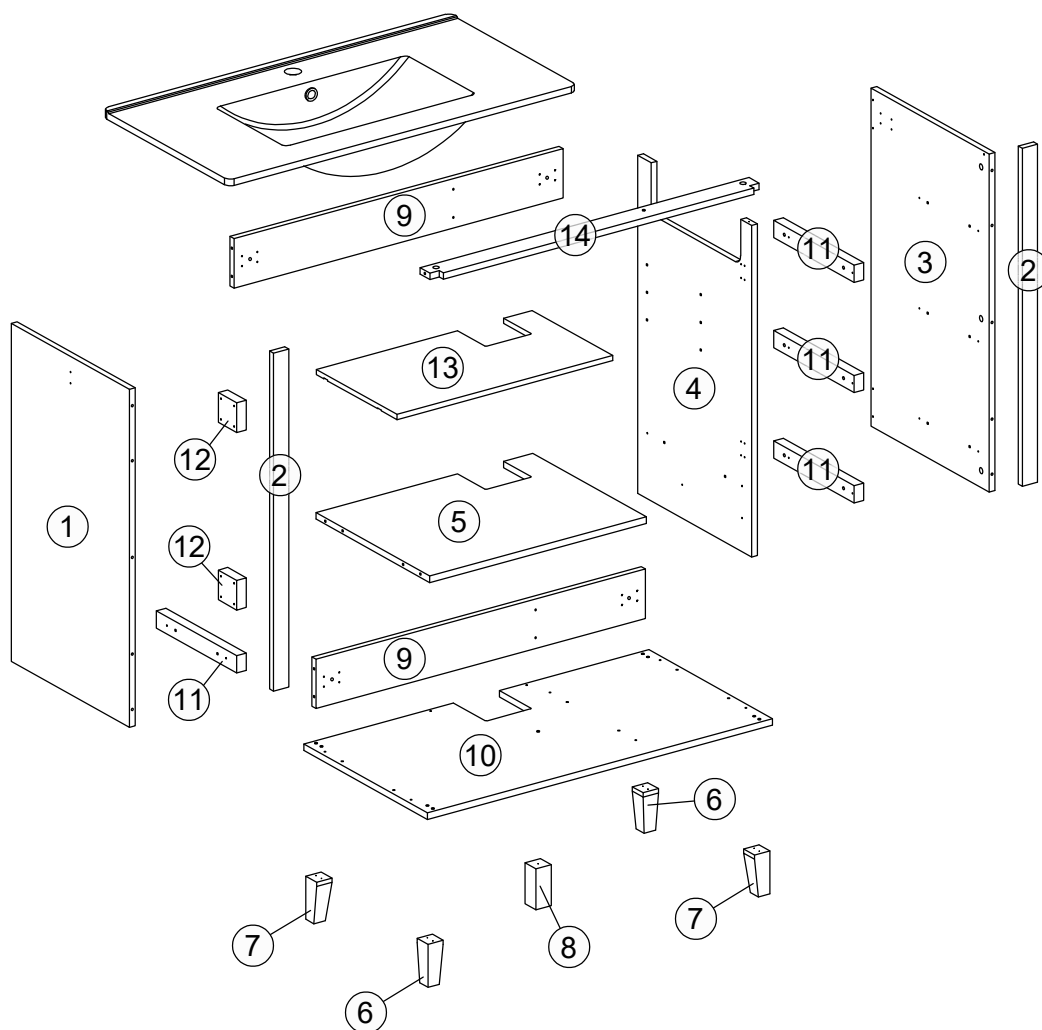













PART LIST

This product comes in 1/2 box.

①  ×1 785*440*15	②  ×2 785*40*15	③  ×1 785*440*15	④  ×1 770*424*15
⑤  ×1 565*424*15	⑥  ×2 40*40*100	⑦  ×2 40*40*100	⑧  ×1 40*40*98
⑨  ×2 859*115*15	⑩  ×1 900*460*18	⑪  ×4 300*40*25	⑫  ×2 68*68*25
⑬  ×1 563*300*12	⑭  ×1 859*52*15	⑮  ×1 610*265*15	⑯  ×1 610*265*15
⑰  ×2 300*90*12	⑱  ×2 300*90*12	⑲  ×4 201*90*12	⑳  ×1 534*150*15


PART LIST

This product comes in 1/2 box.

②①  ×1 300*115*12	②②  ×1 300*115*12	②③  ×1 491*115*12	②④  ×1 287*60*12
②⑤  ×1 500*296*3	②⑥  ×1 286*95*12	②⑦  ×2 489*95*12	②⑧  ×3 267*253*15
②⑨  ×3 300*145*12	③⑩  ×3 300*145*12	③①  ×3 205*145*12	③②  ×3 296*214*3
③③  ×4 Ø10*210			

PART LIST



This product comes in 2/2 box.

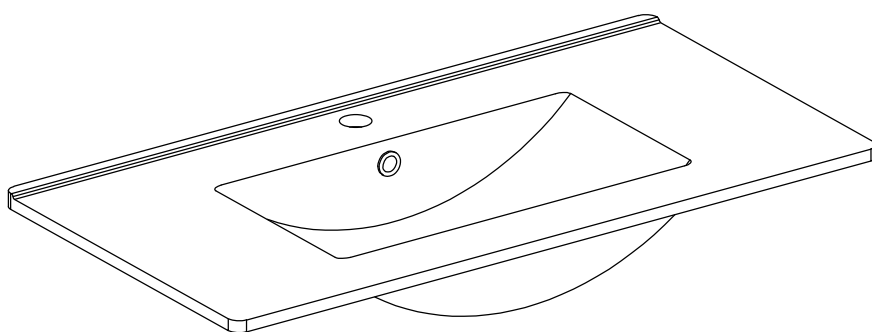



x1

Assembly Instructions

Step 1

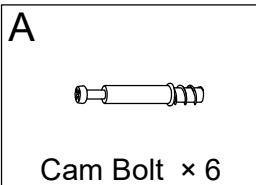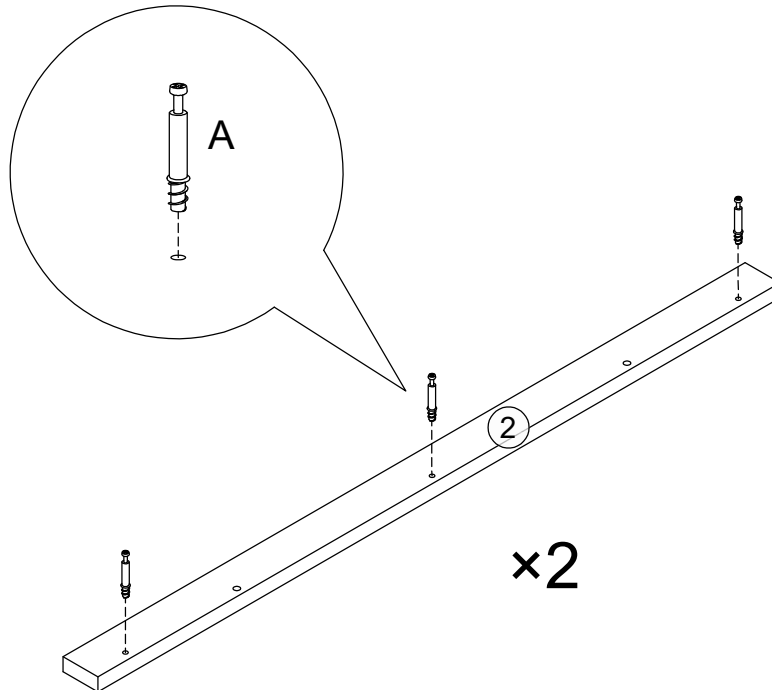


Step 2

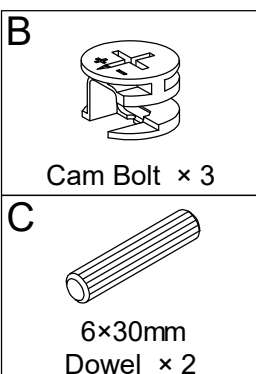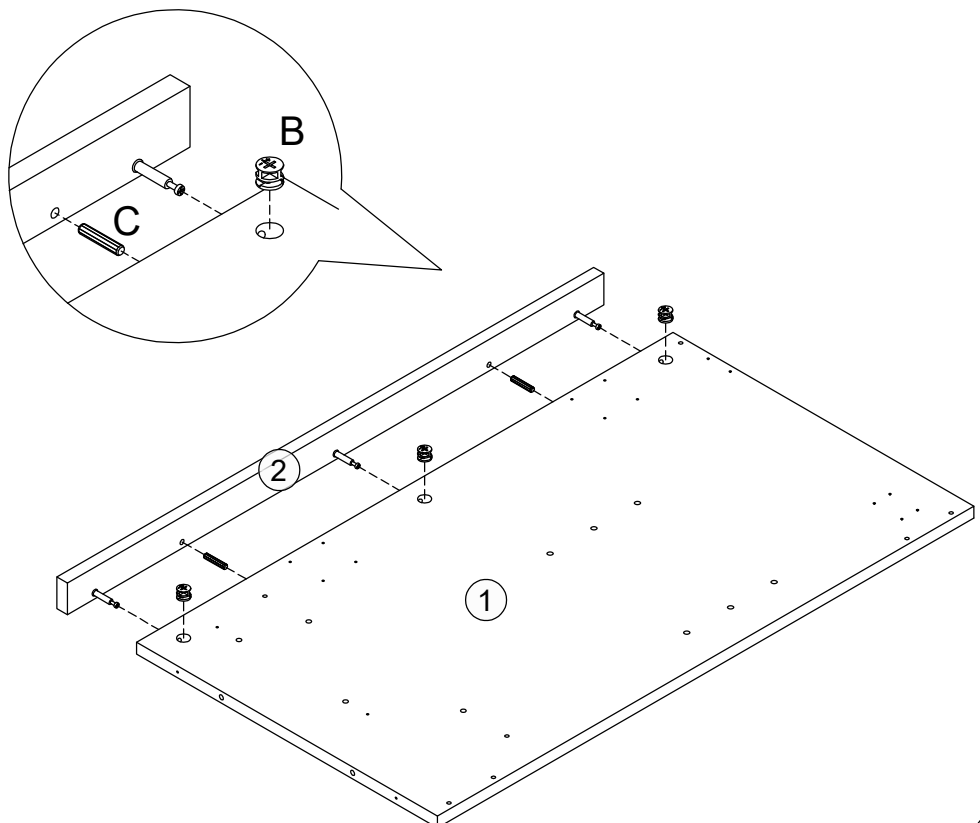


Assembly Instructions

Step 3


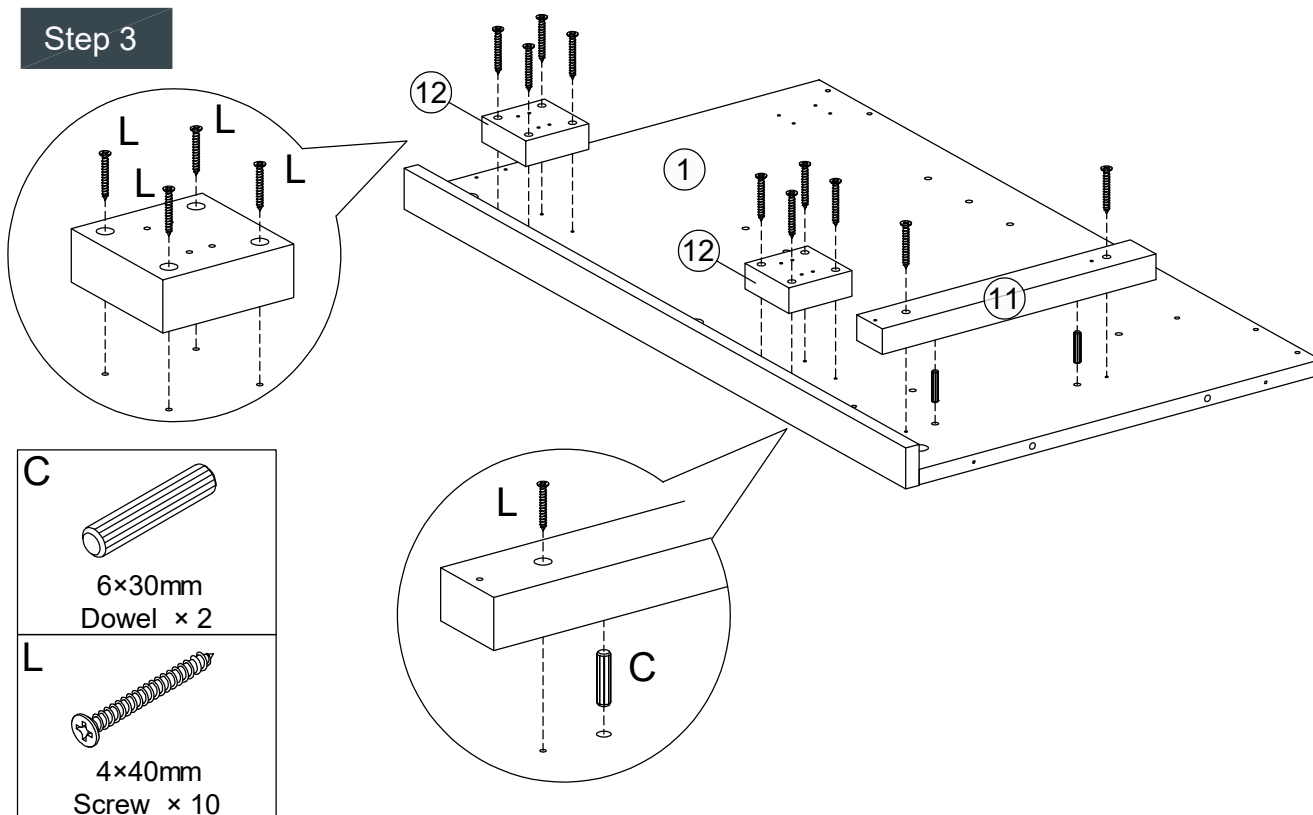


Step 4



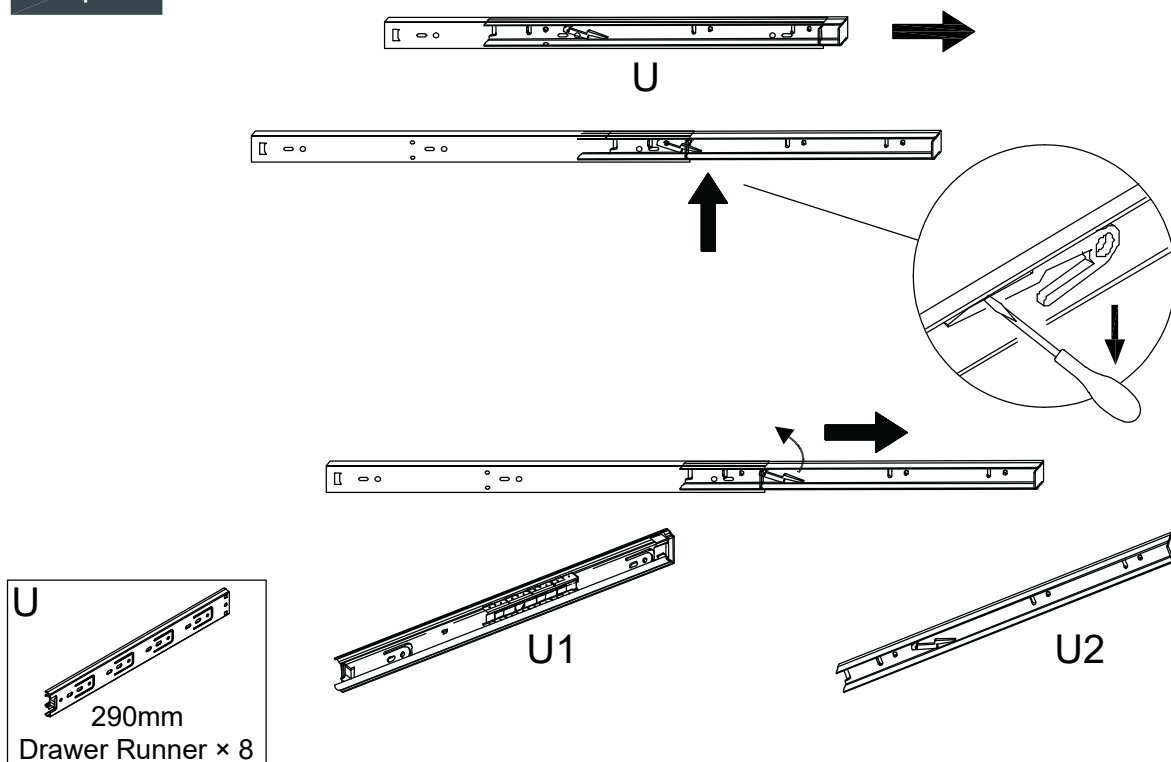


Assembly Instructions

Step 5

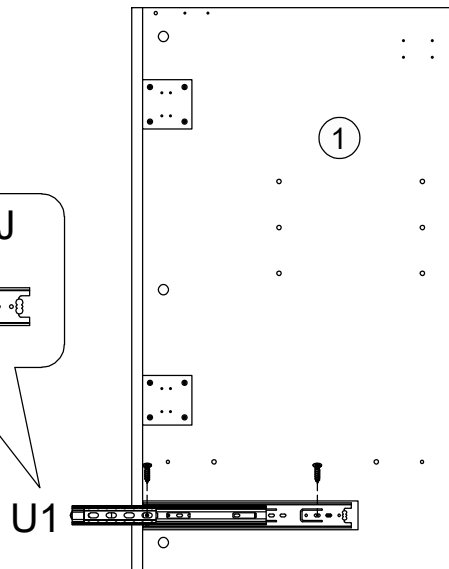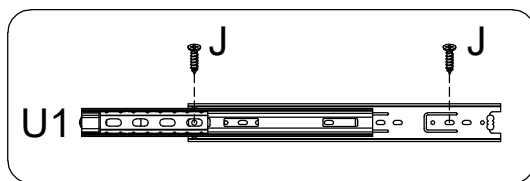


Step 6

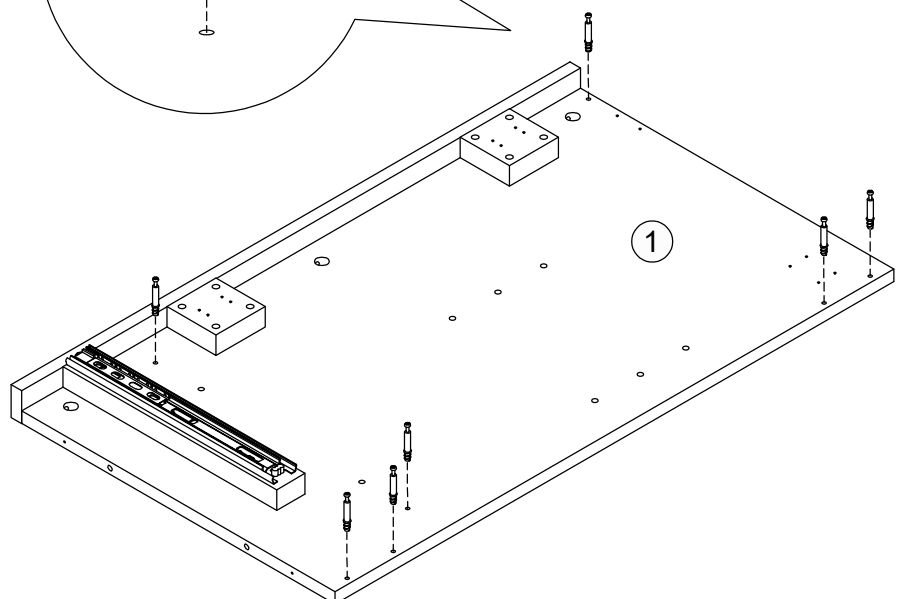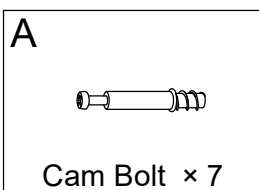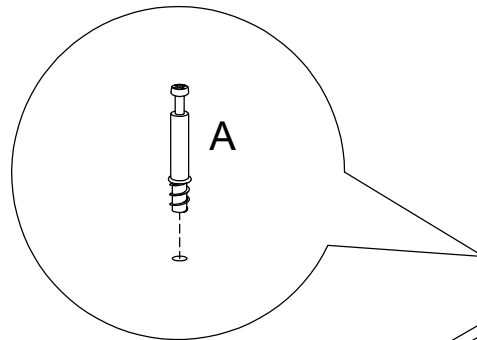


Assembly Instructions

Step 7


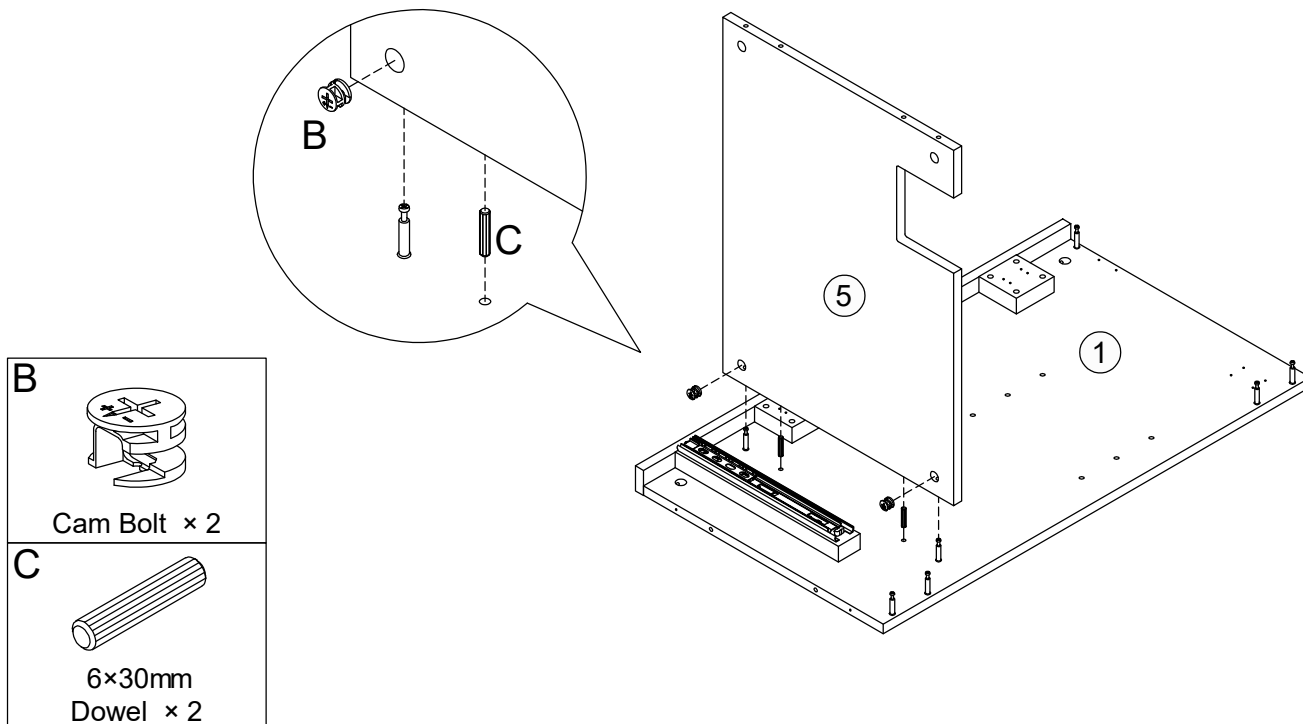


Step 8


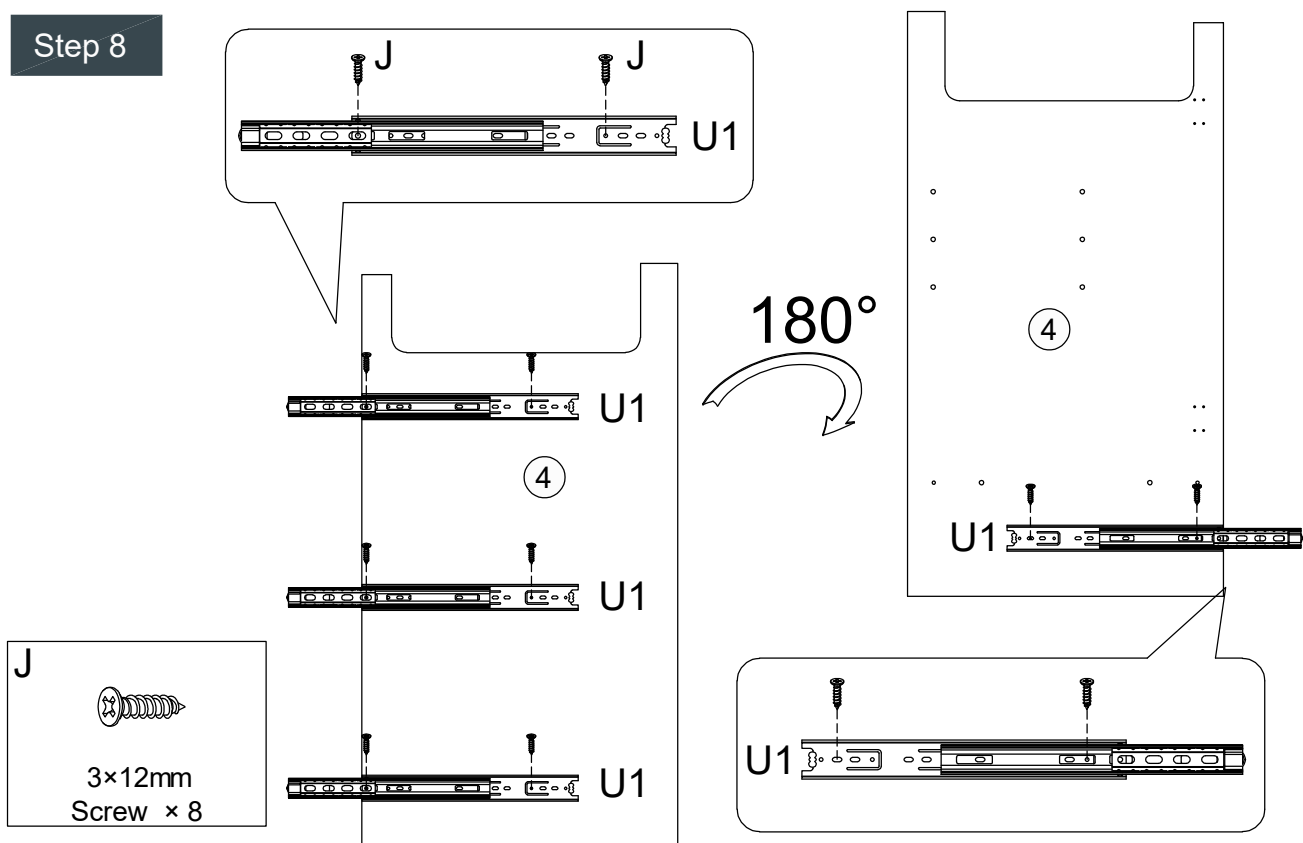


Assembly Instructions

Step 9

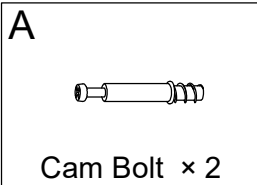
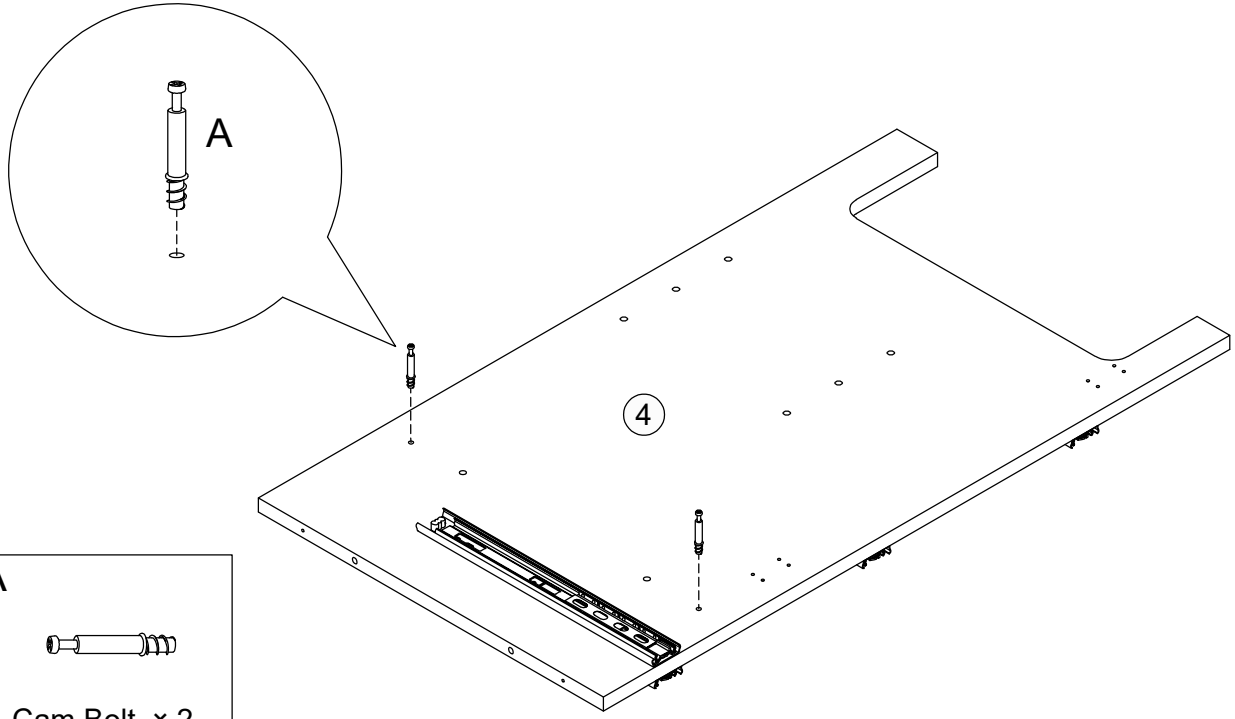


Step 10

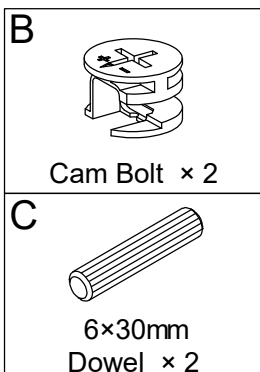
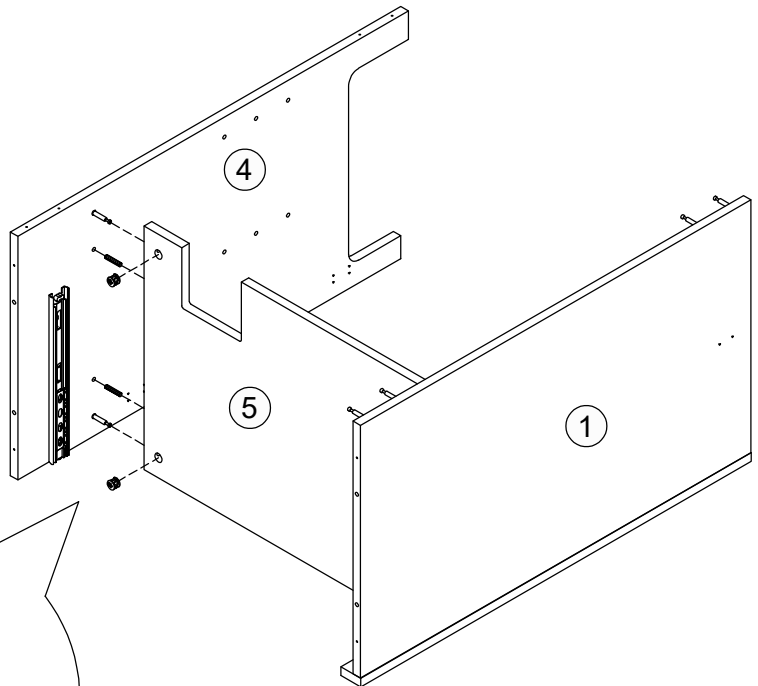


Assembly Instructions

Step 11

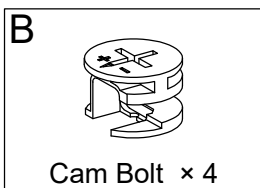
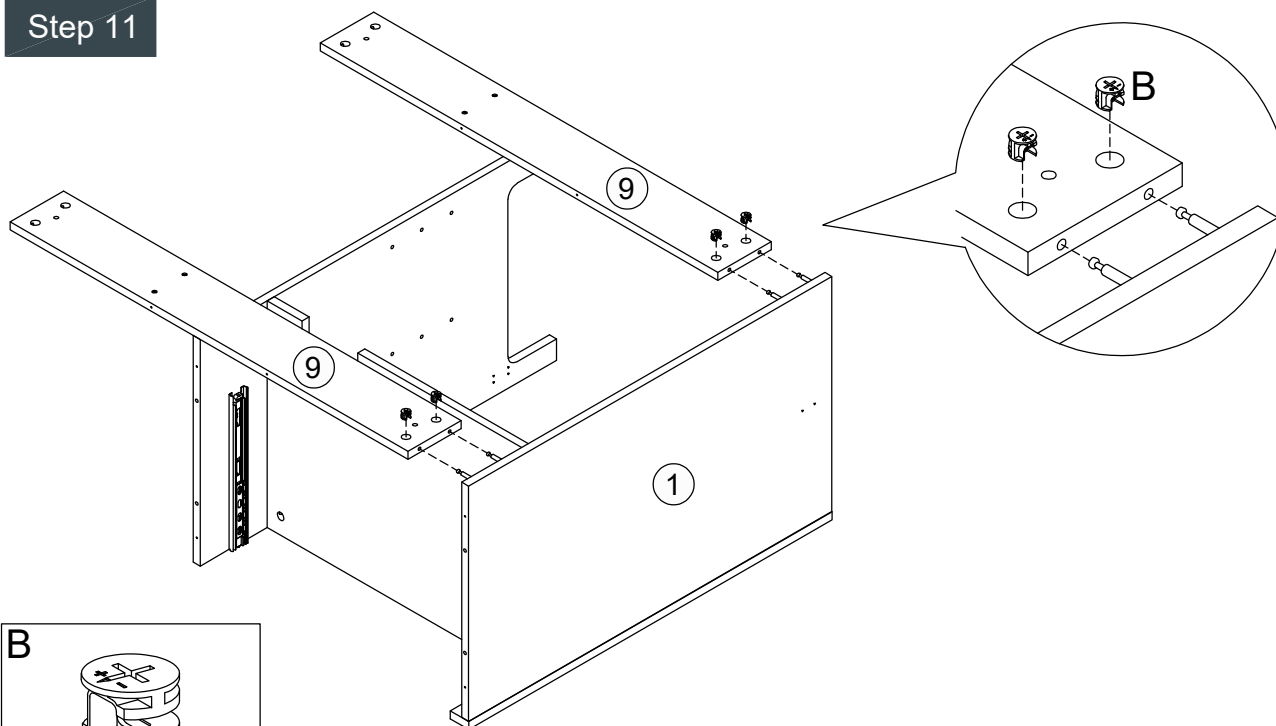


Step 12

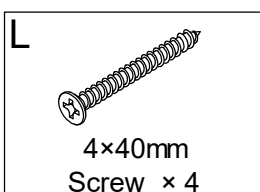
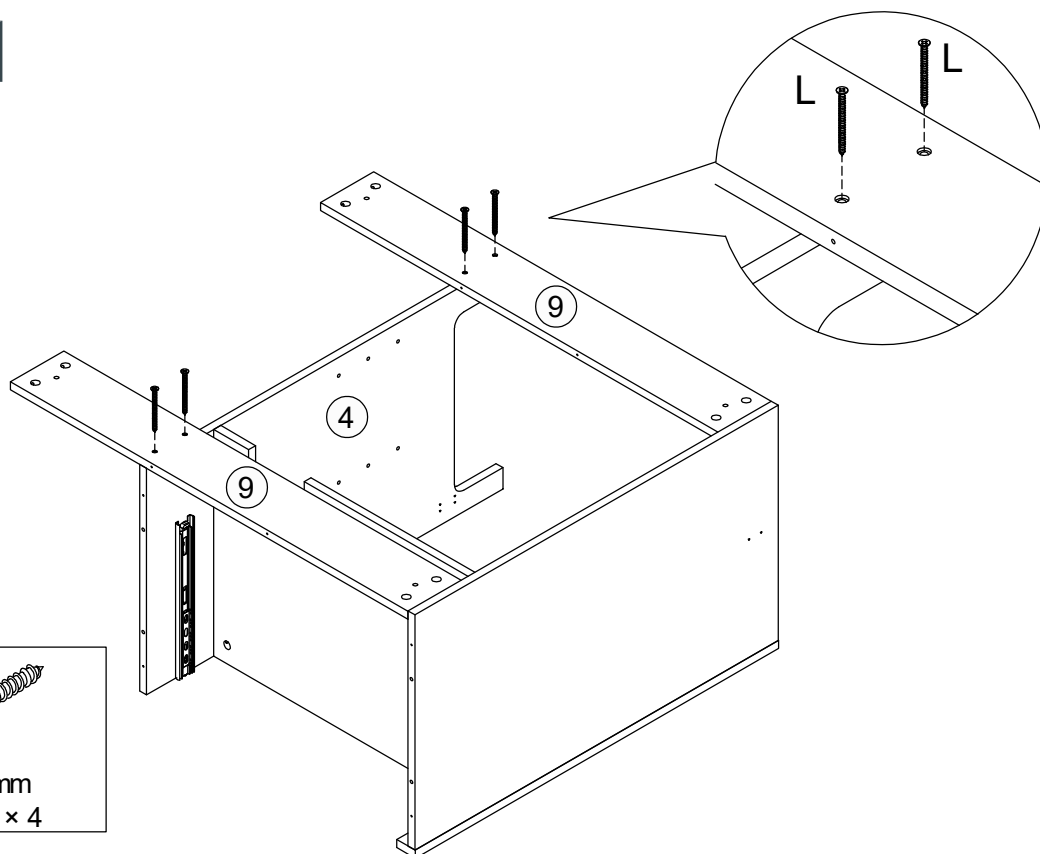


Assembly Instructions

Step 13

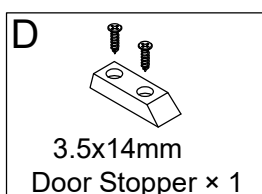
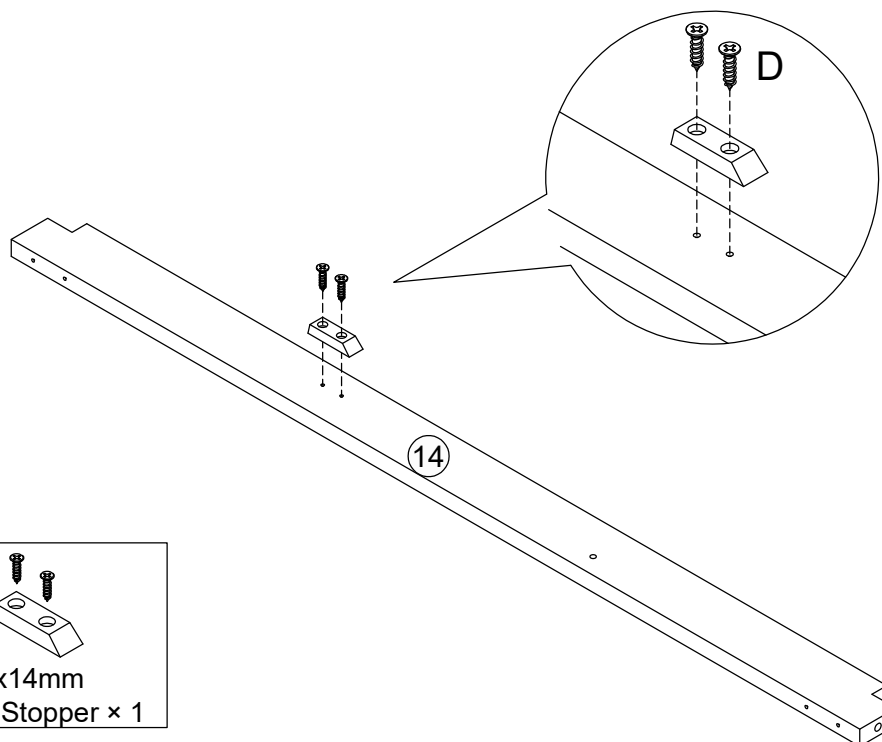


Step 14

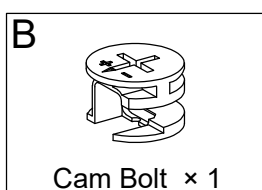
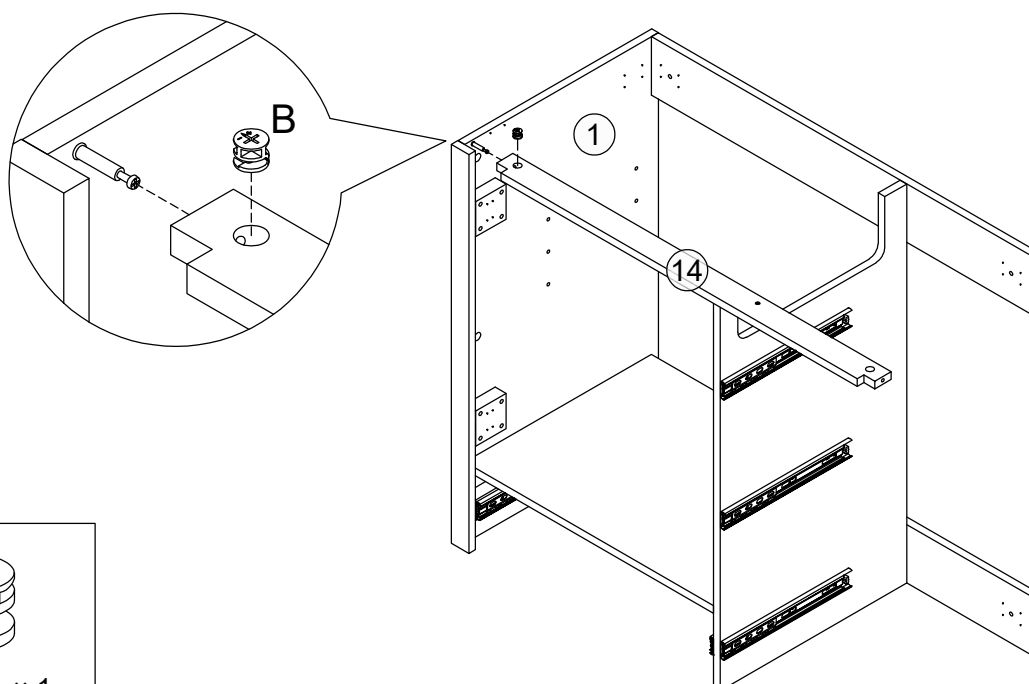


Assembly Instructions

Step 15

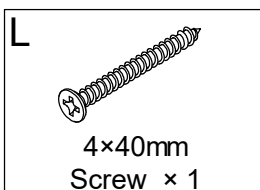
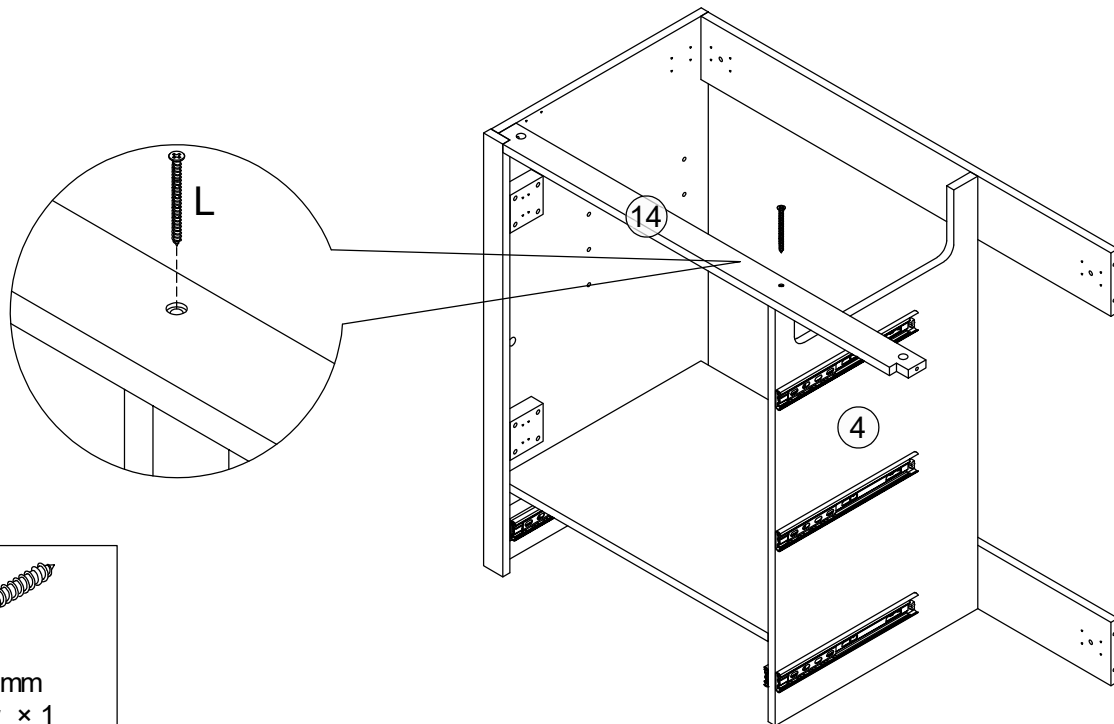


Step 16

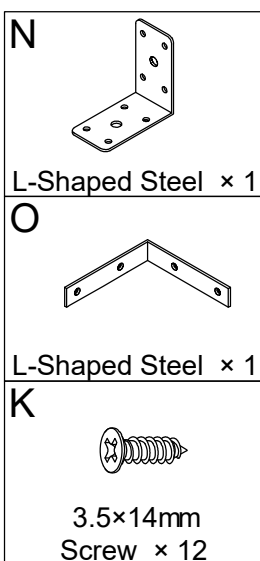
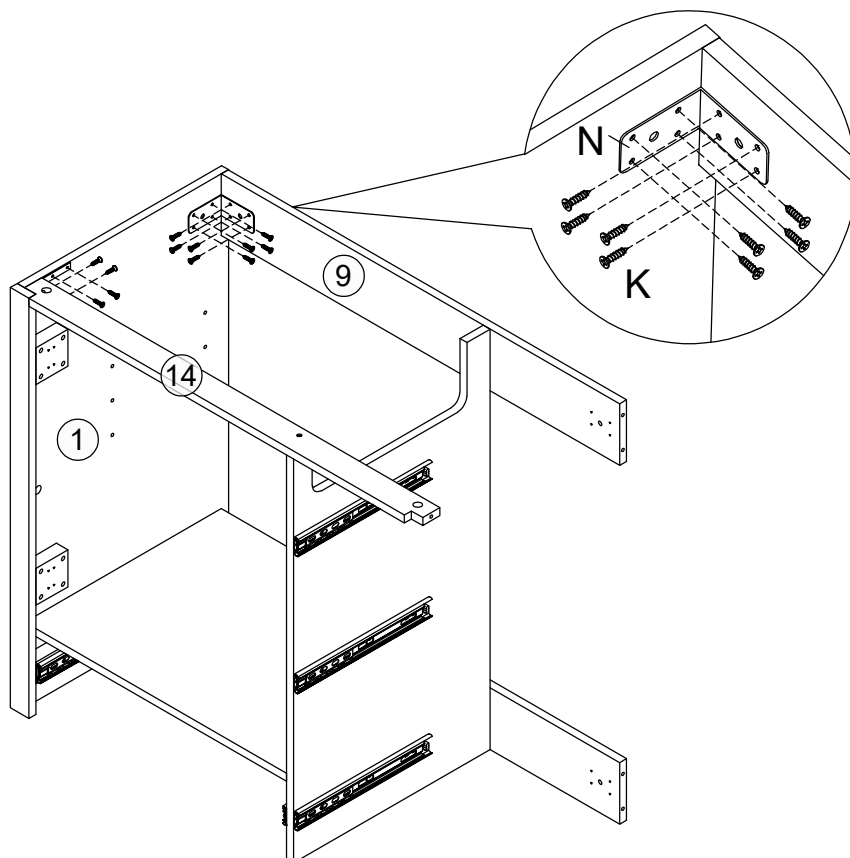


Assembly Instructions

Step 17

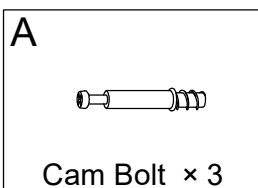
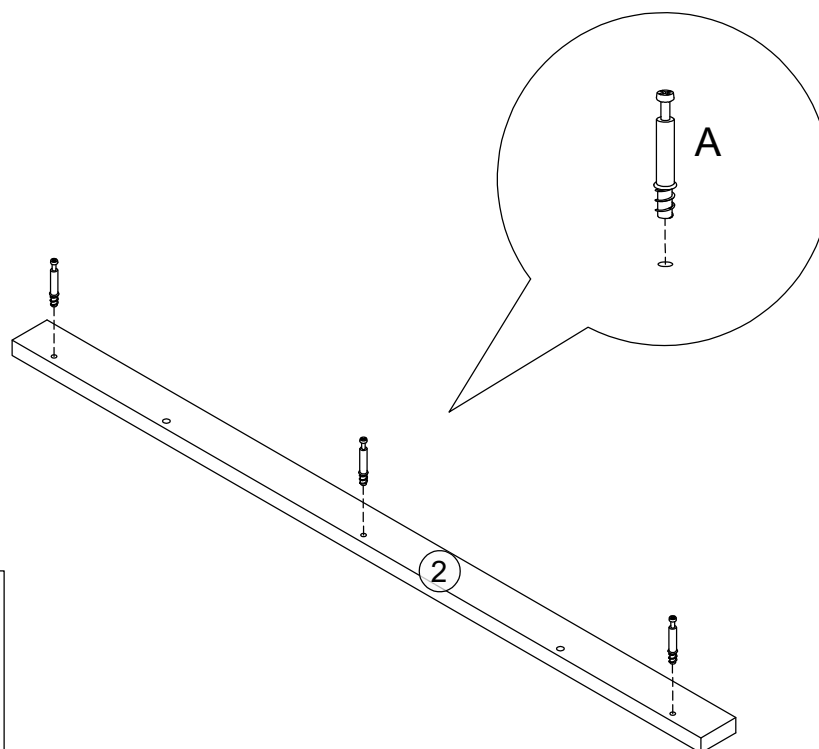


Step 18


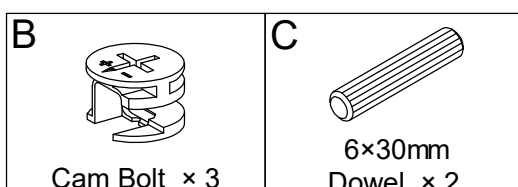
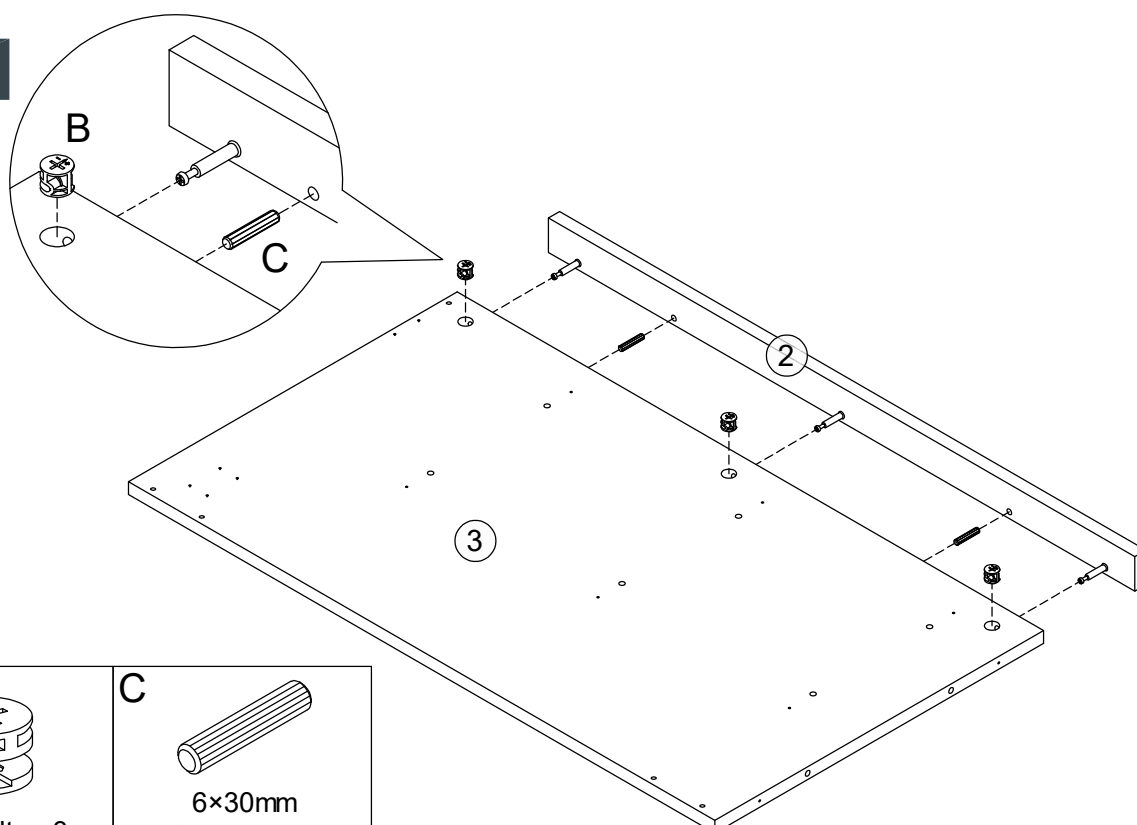


Assembly Instructions

Step 19

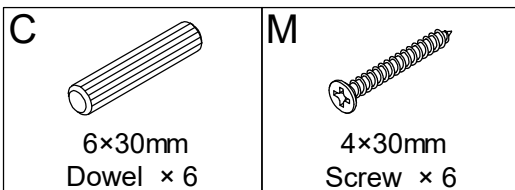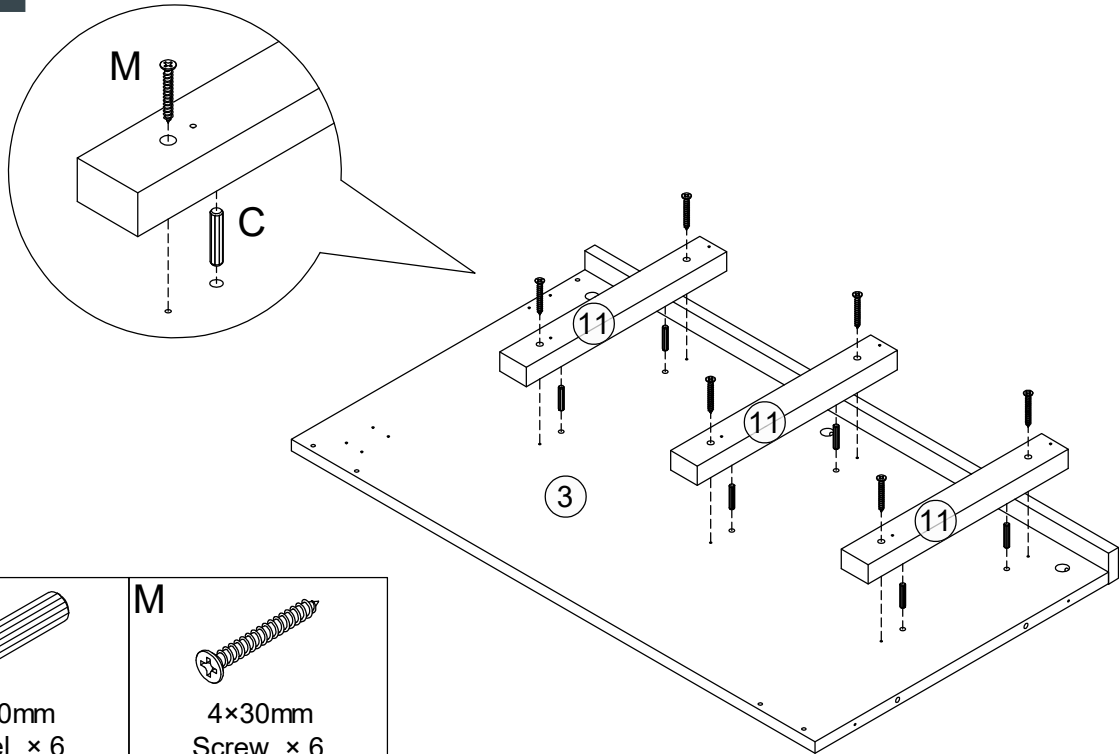


Step 20

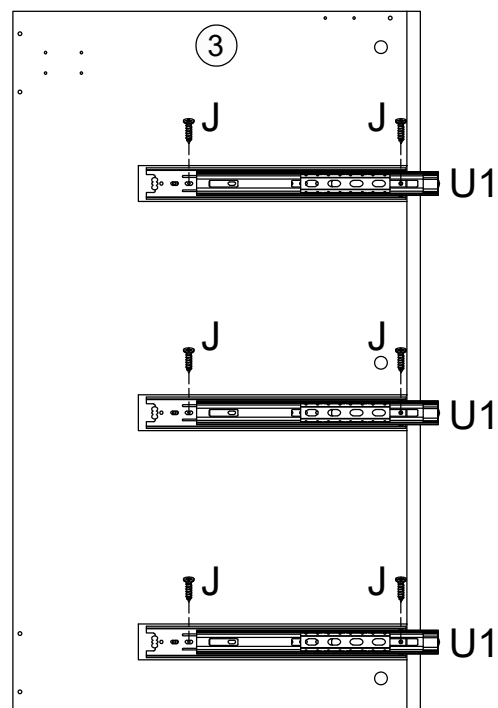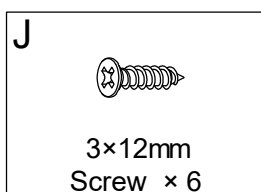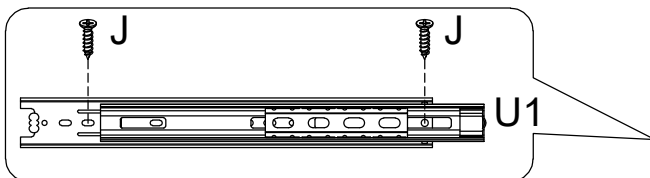


Assembly Instructions

Step 21

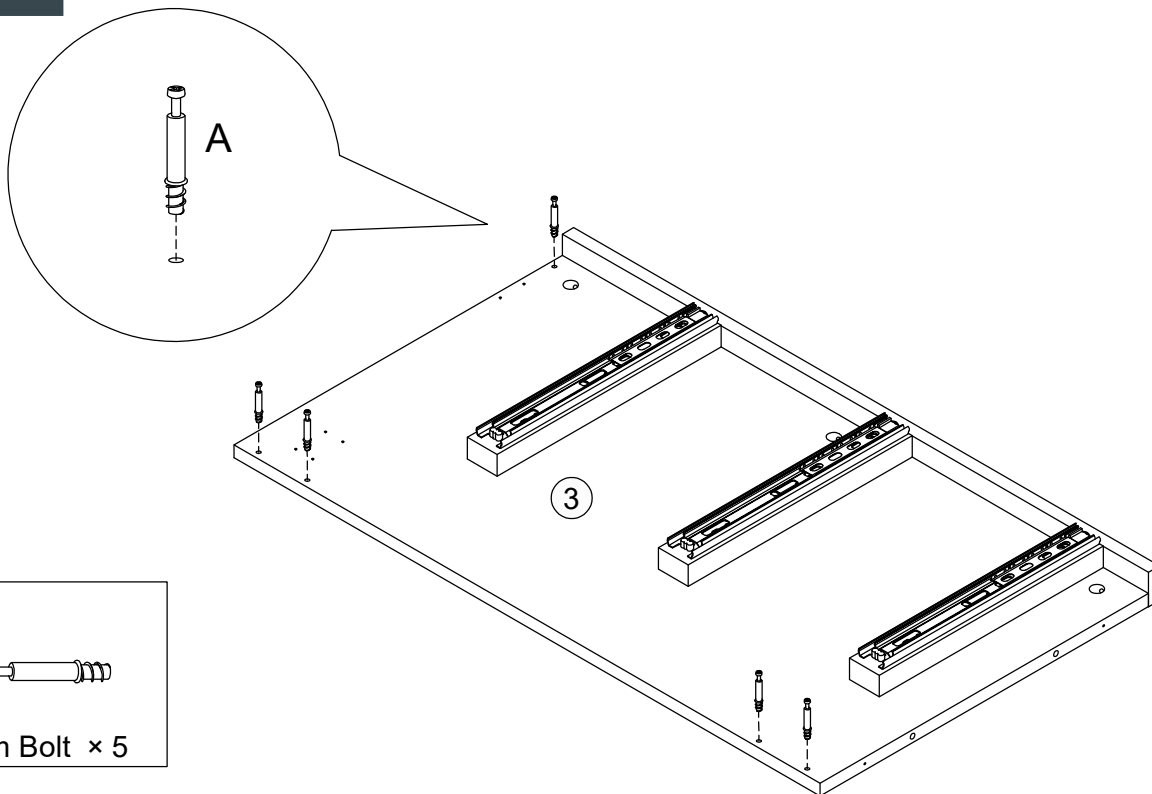


A



Cam Bolt × 5

Step 22

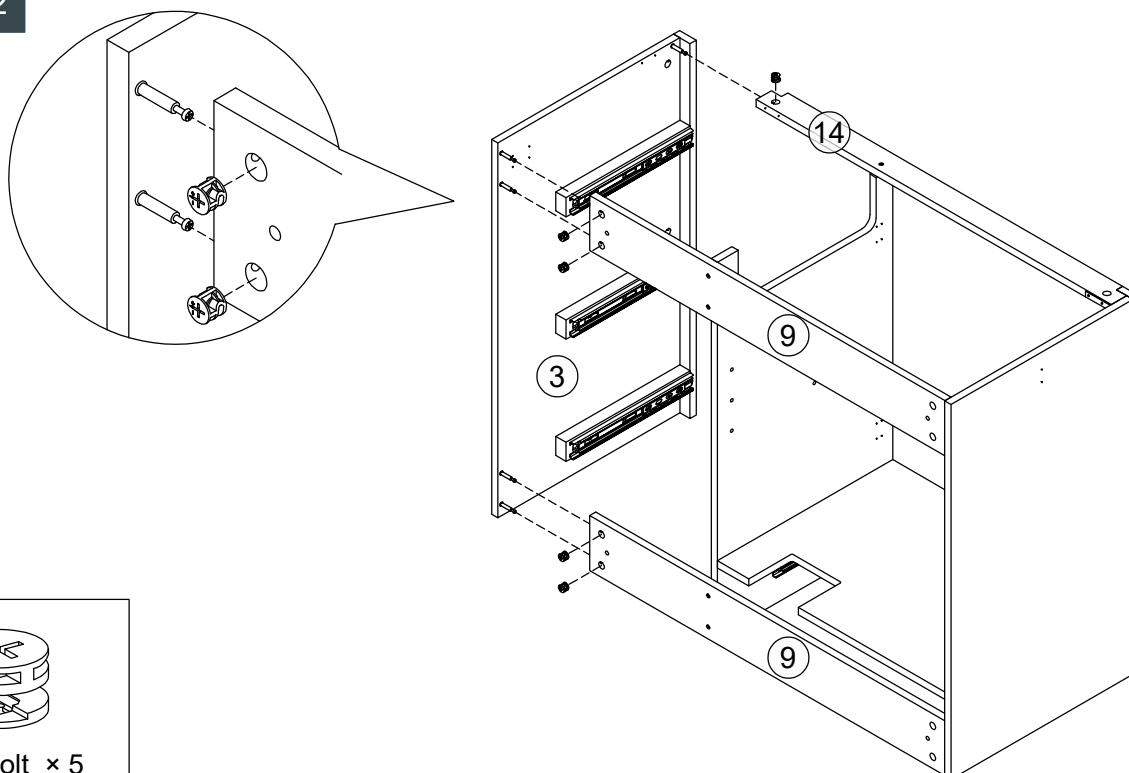



B





Cam Bolt × 5

Assembly Instructions

Step 23

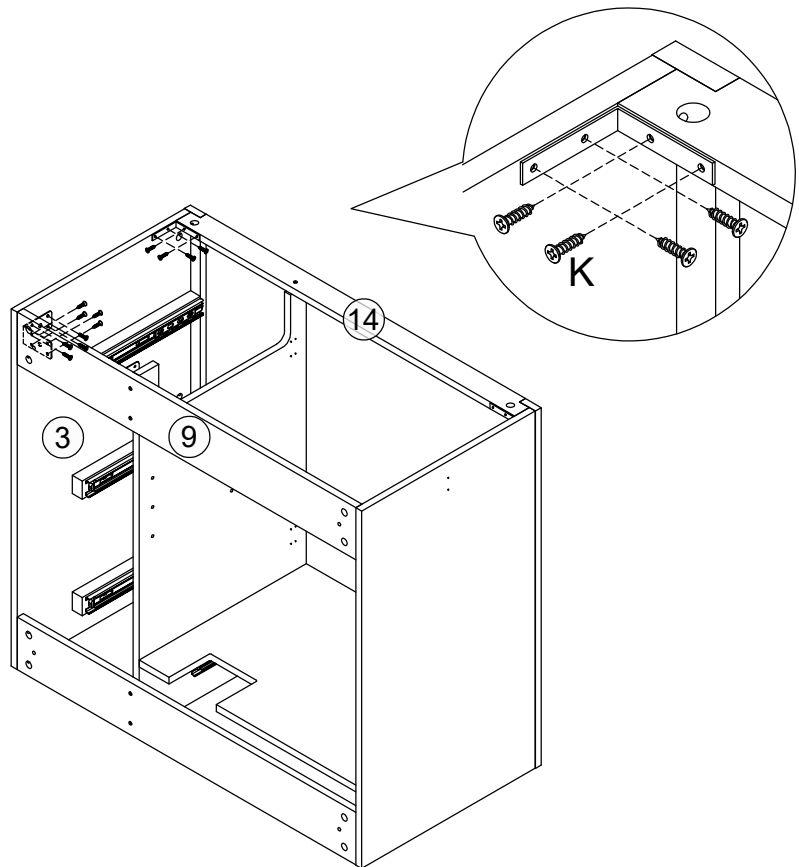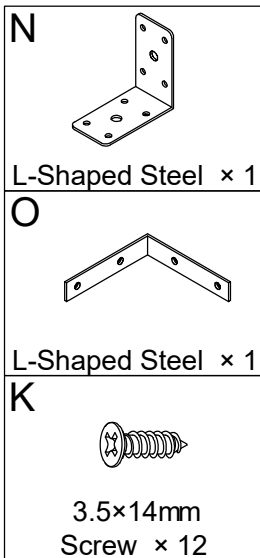


Step 24

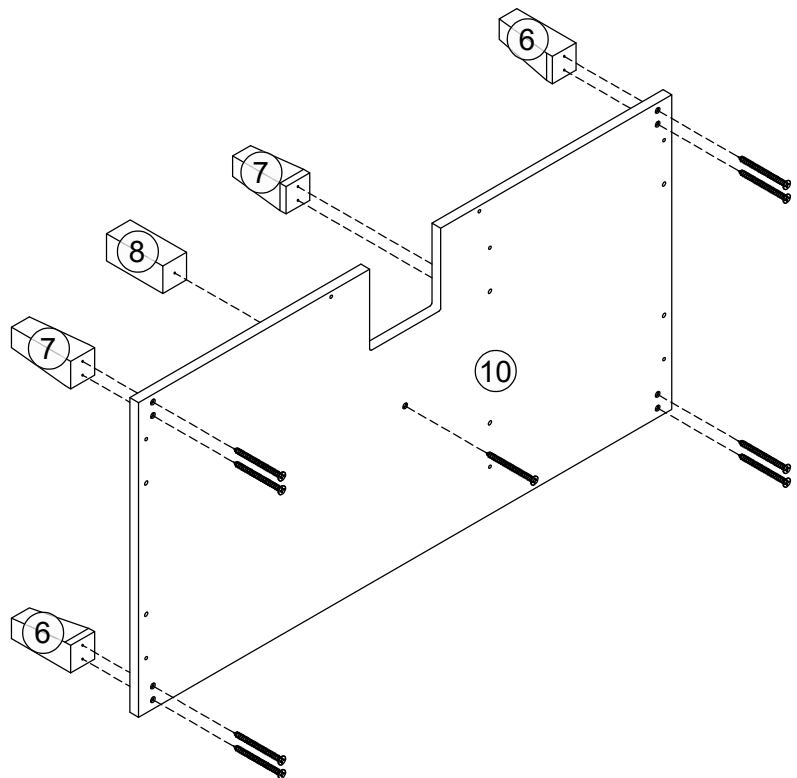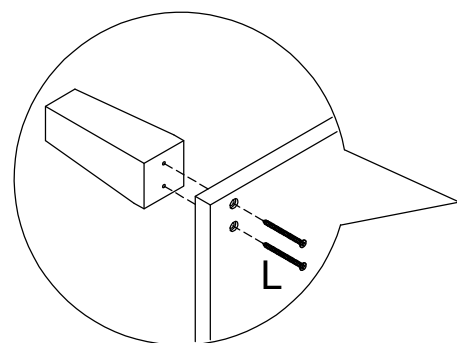


Assembly Instructions

Step 25

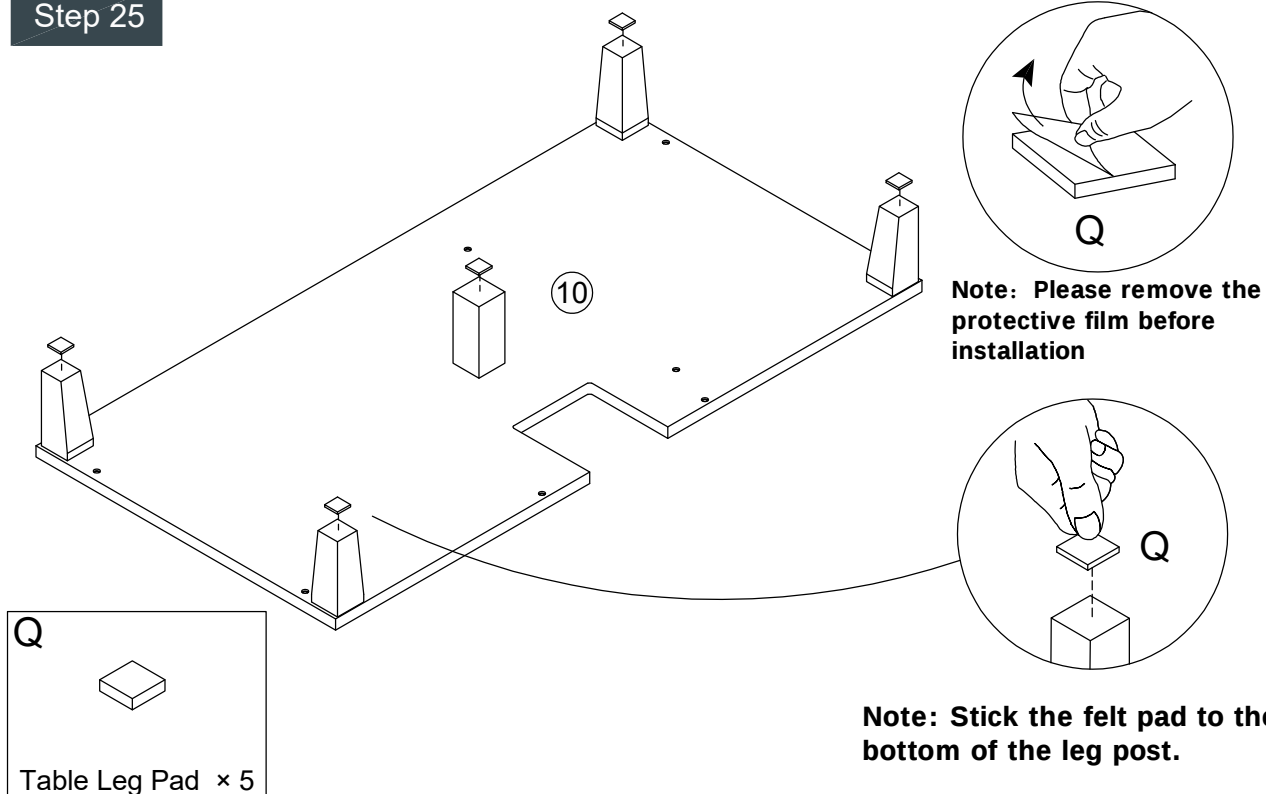


Step 26


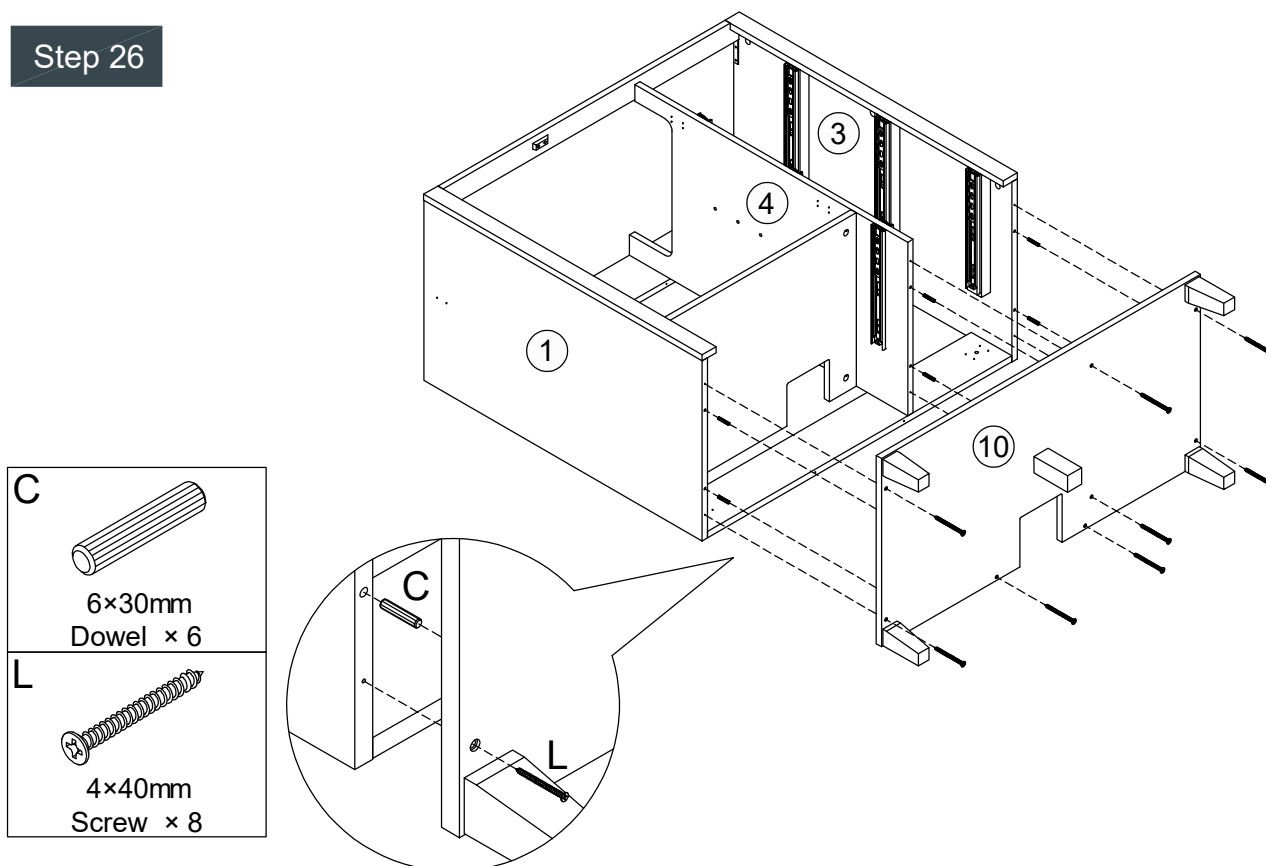


Assembly Instructions


Step 27

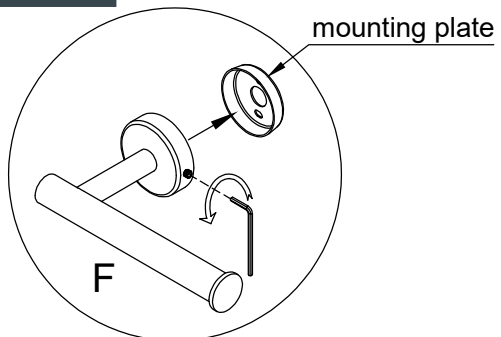




1. First, remove the mounting plate

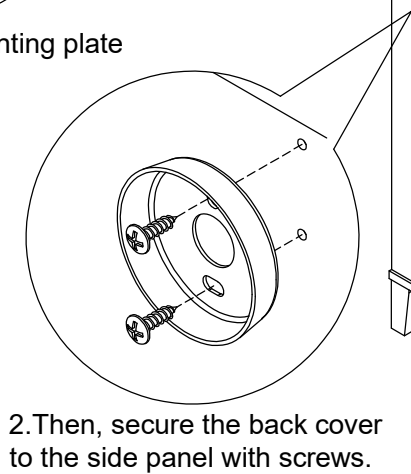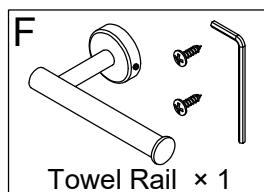

2. Then, secure the back cover to the side panel with screws.

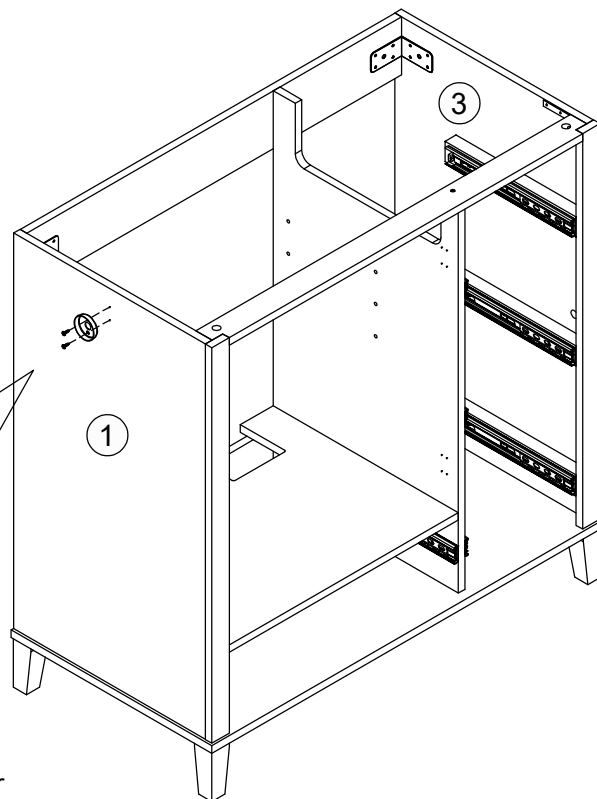


Step 28

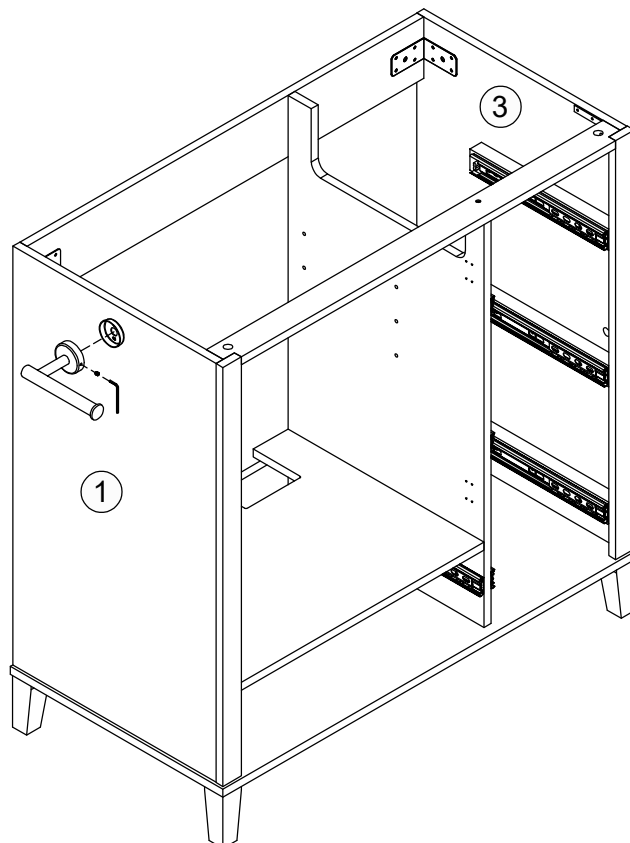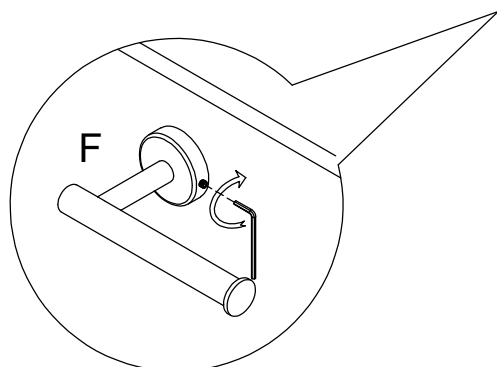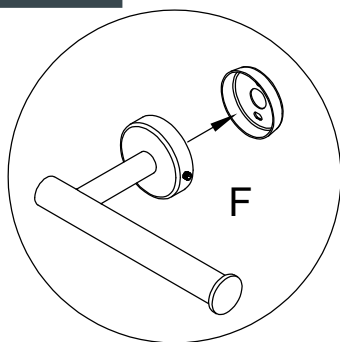


Assembly Instructions

Step 29


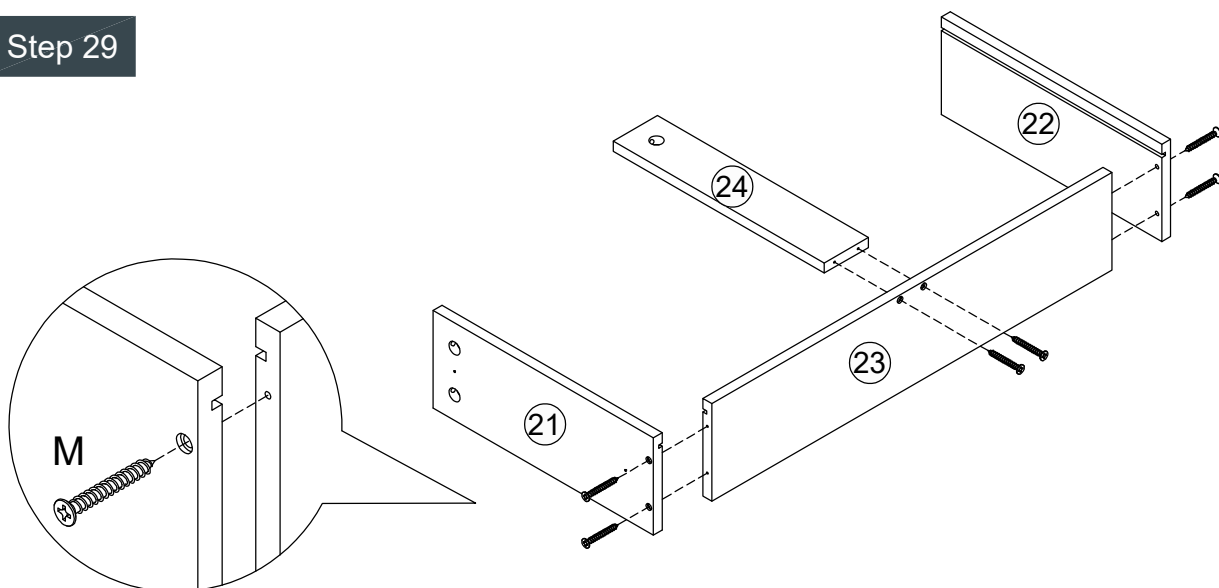


Step 30


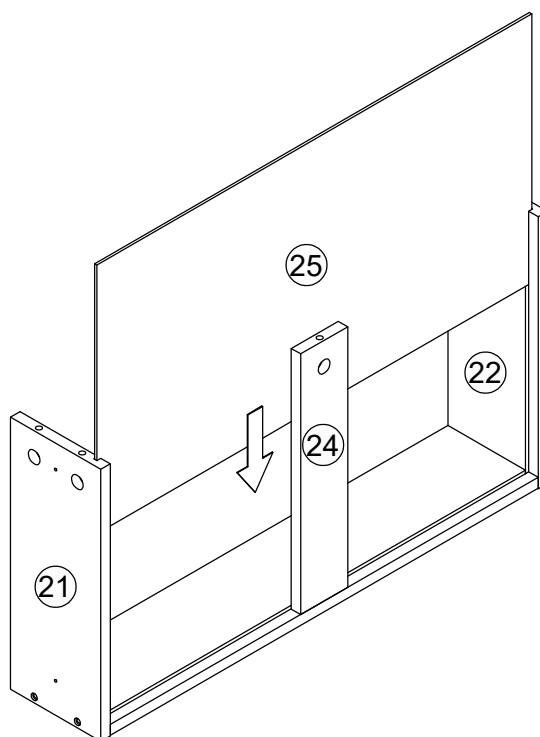


Assembly Instructions

Step 31

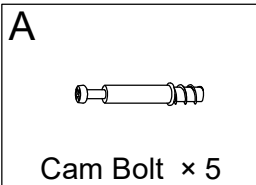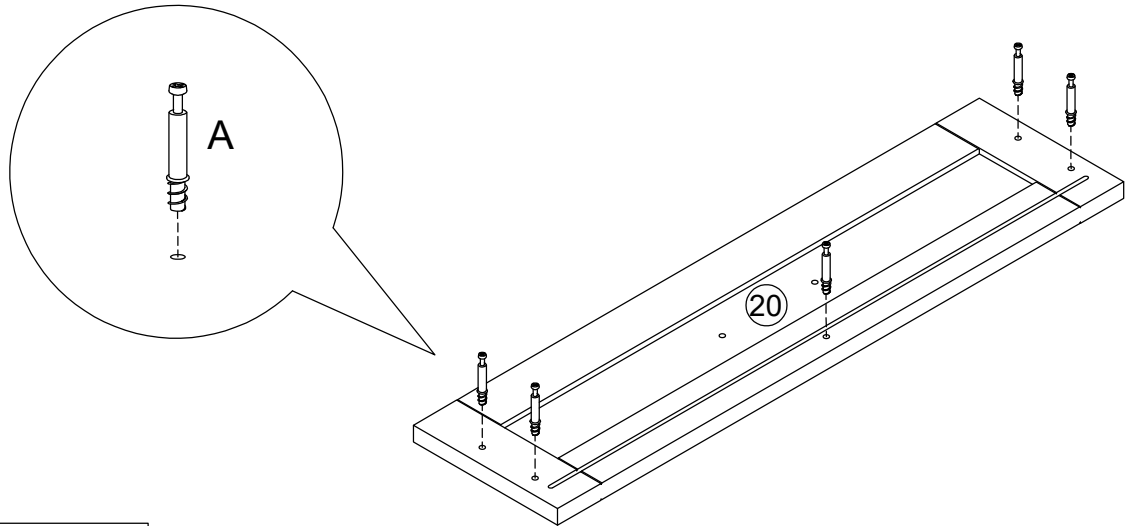


Step 32

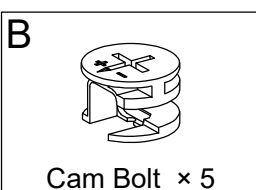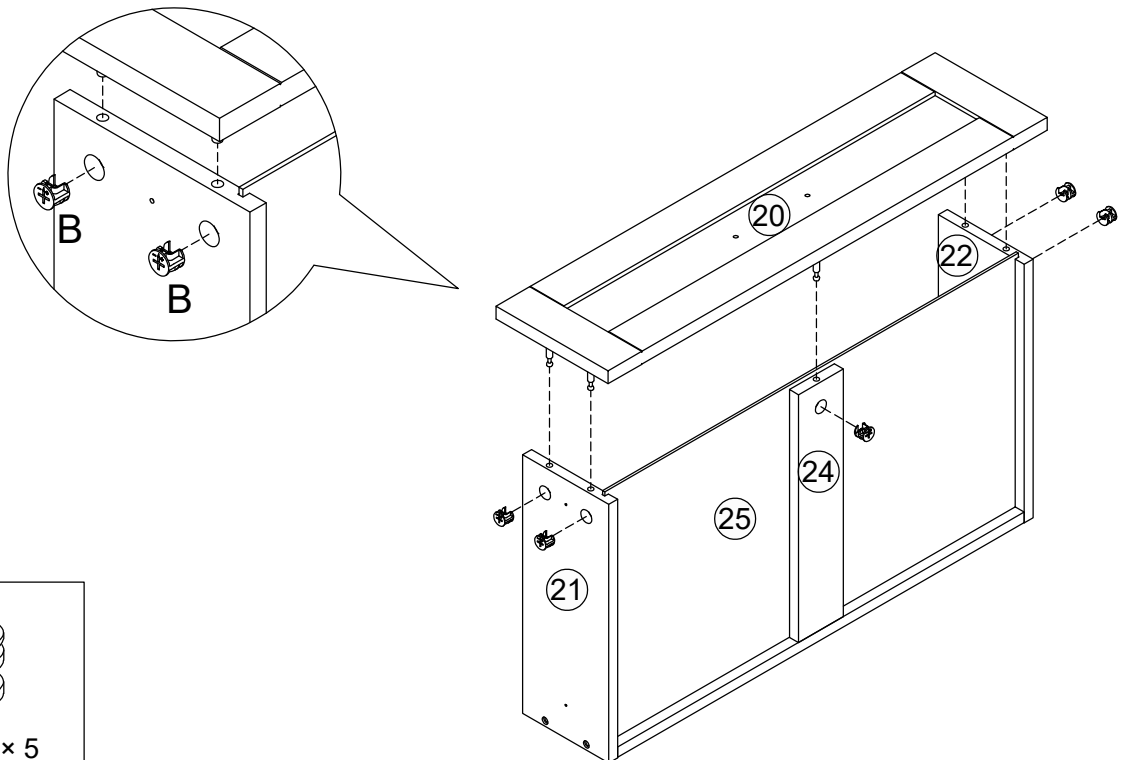


Assembly Instructions

Step 33

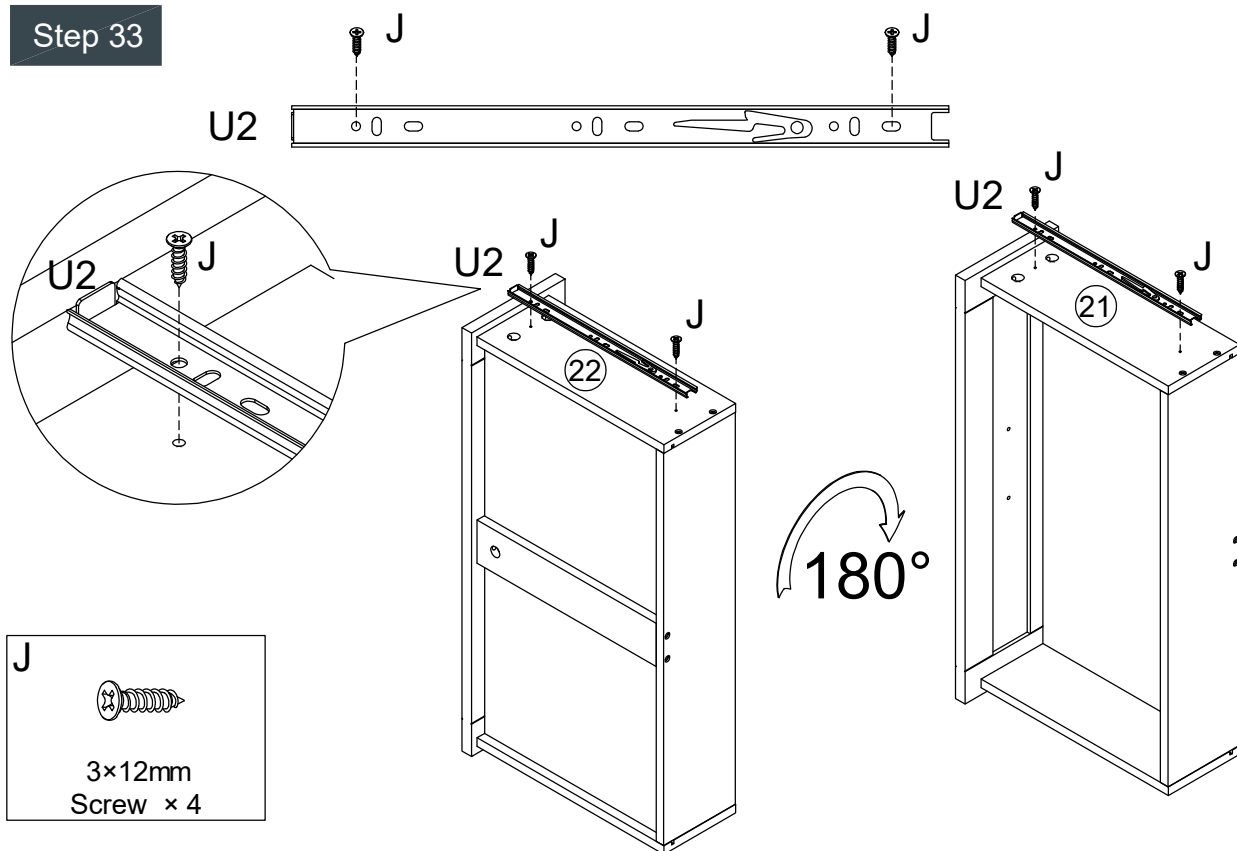


Step 34

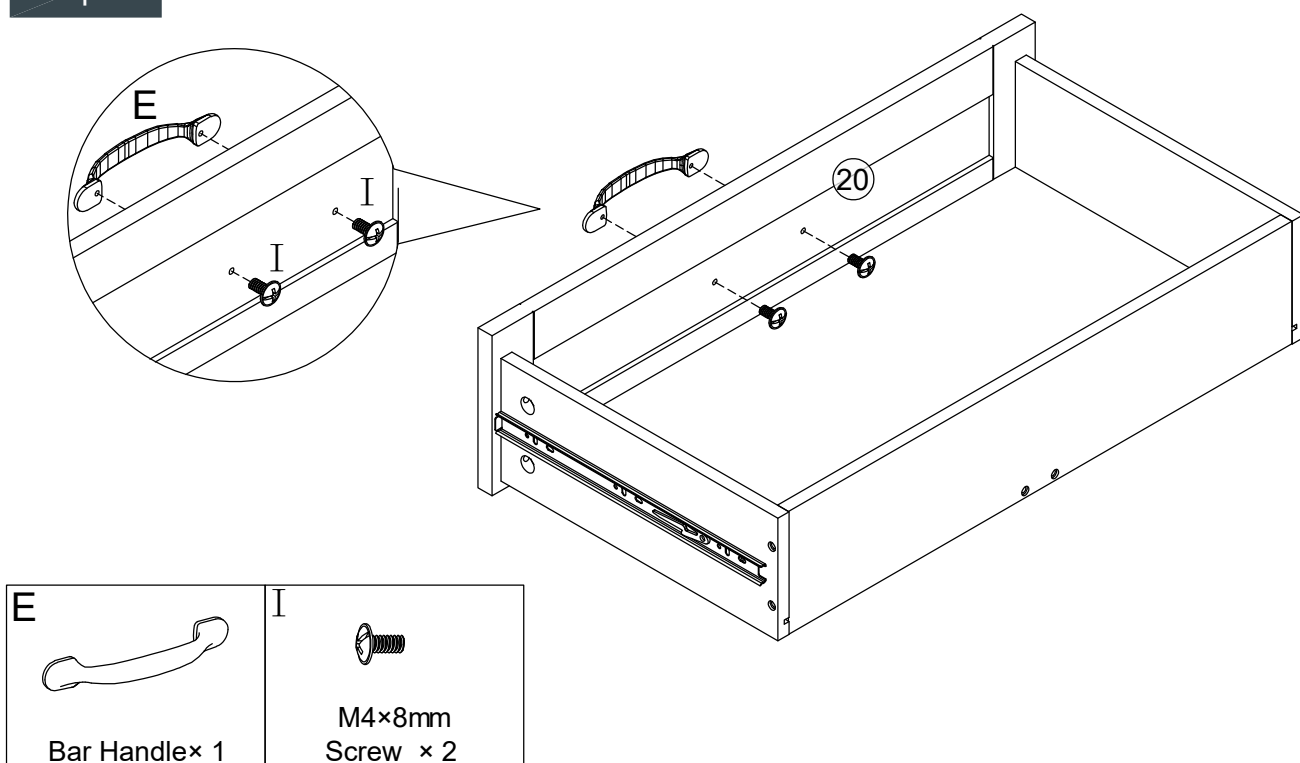


Assembly Instructions

Step 35



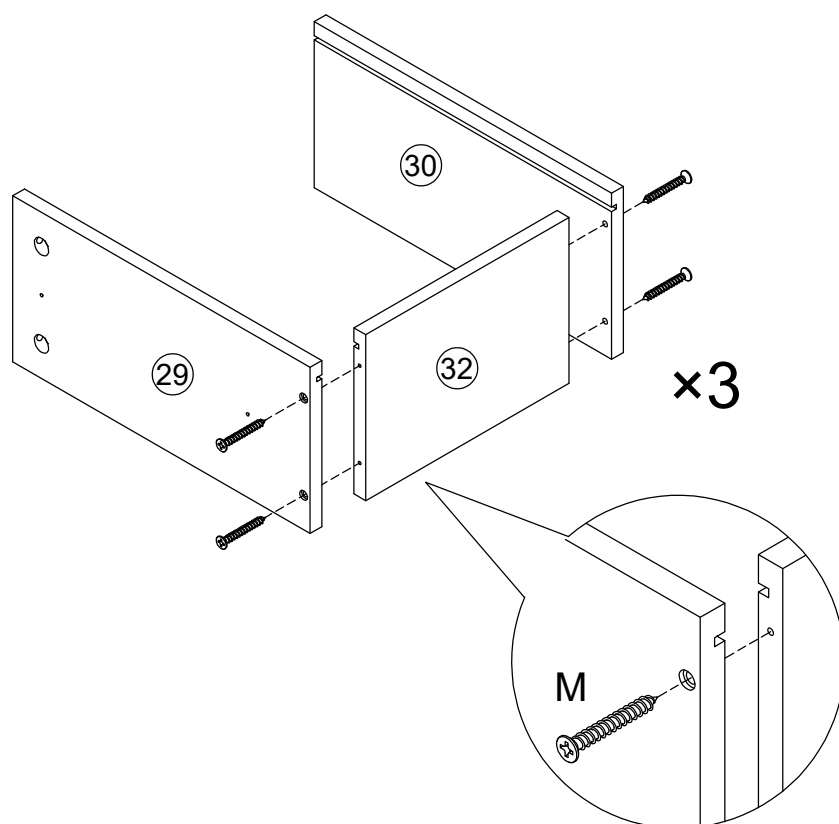


Step 36



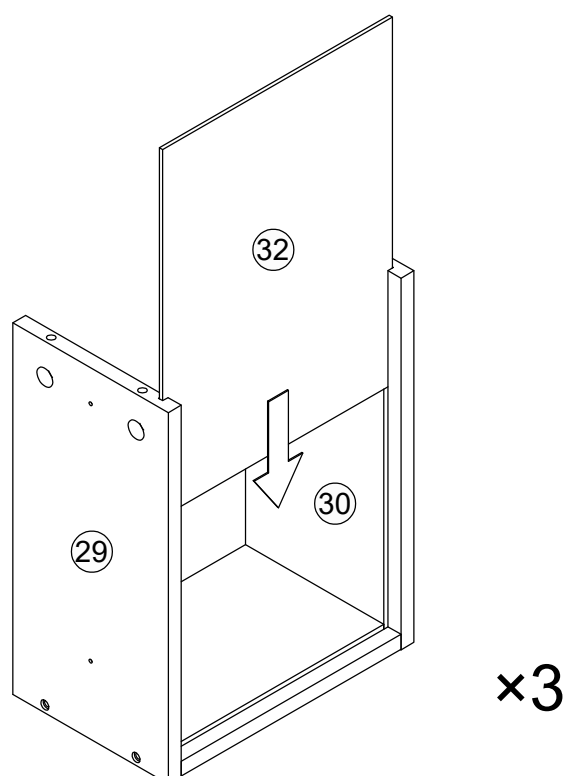


Assembly Instructions

Step 37

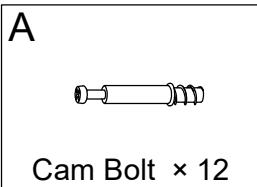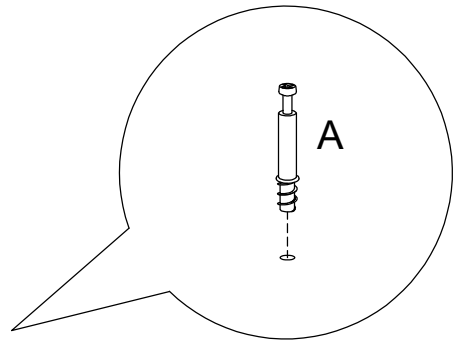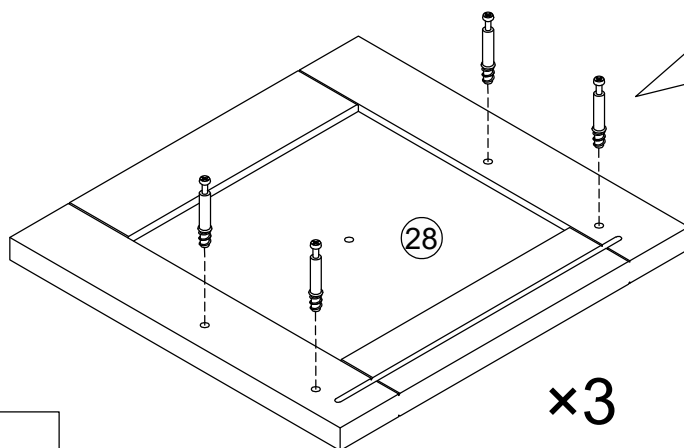


Step 38

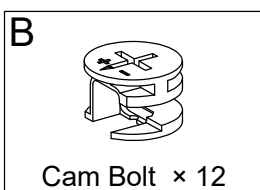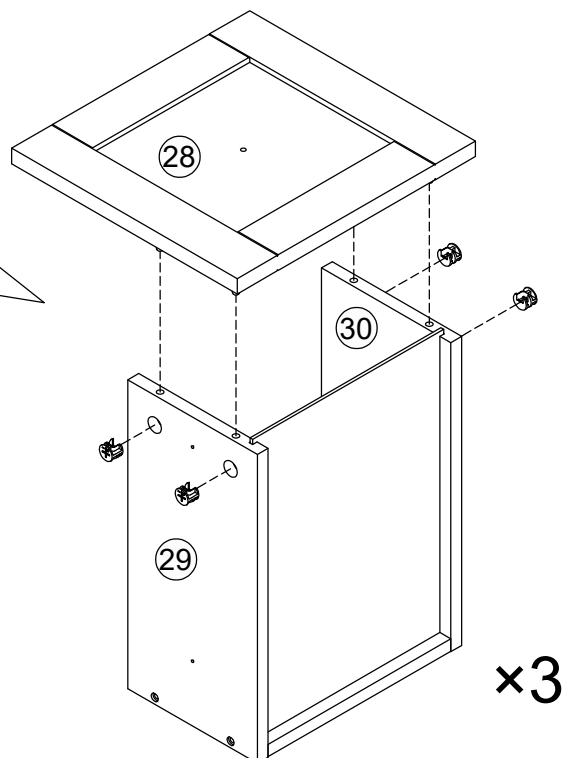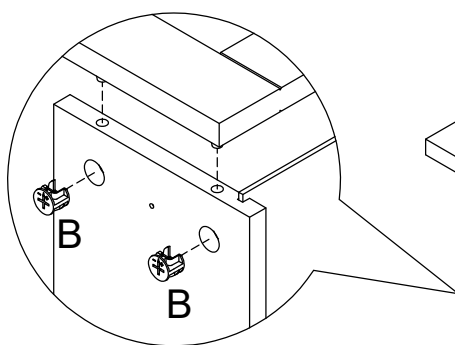


Assembly Instructions

Step 39

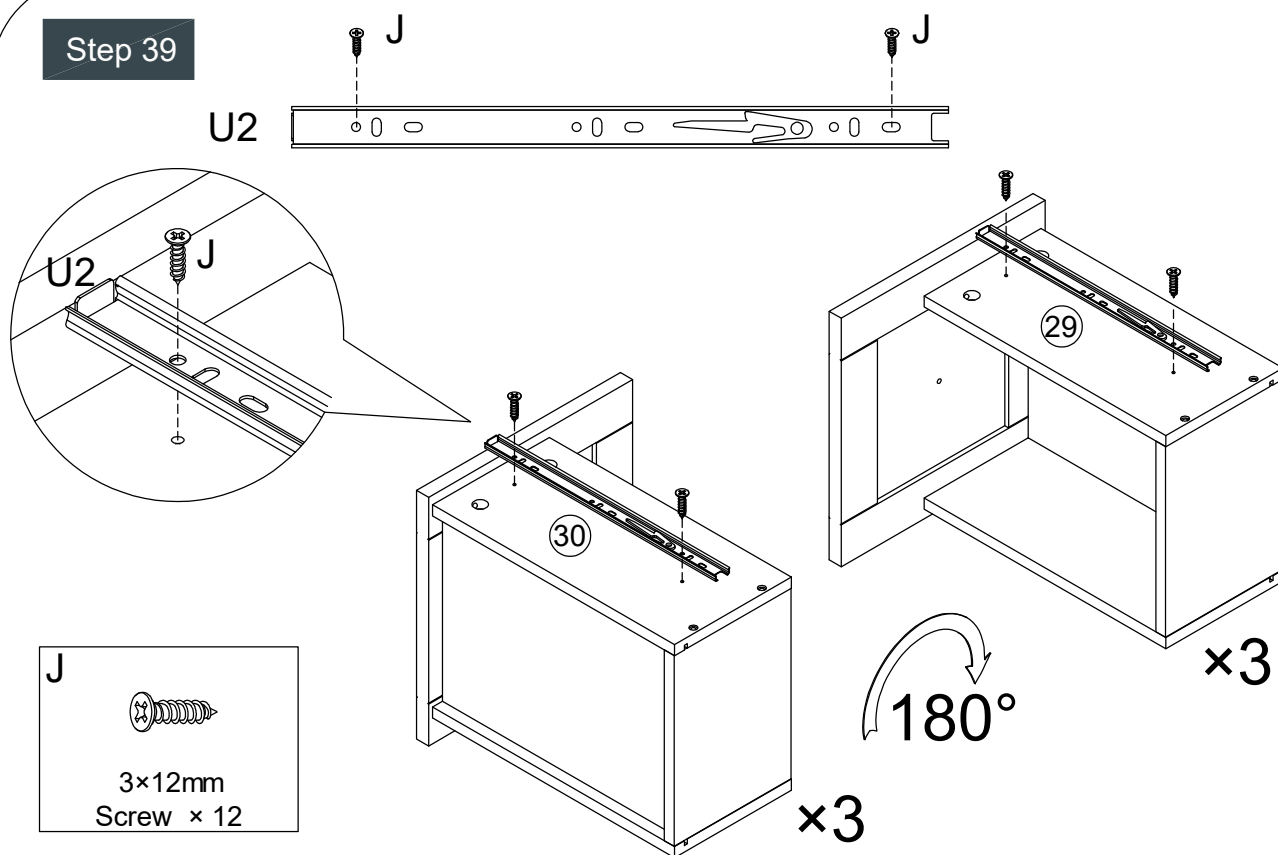


Step 40

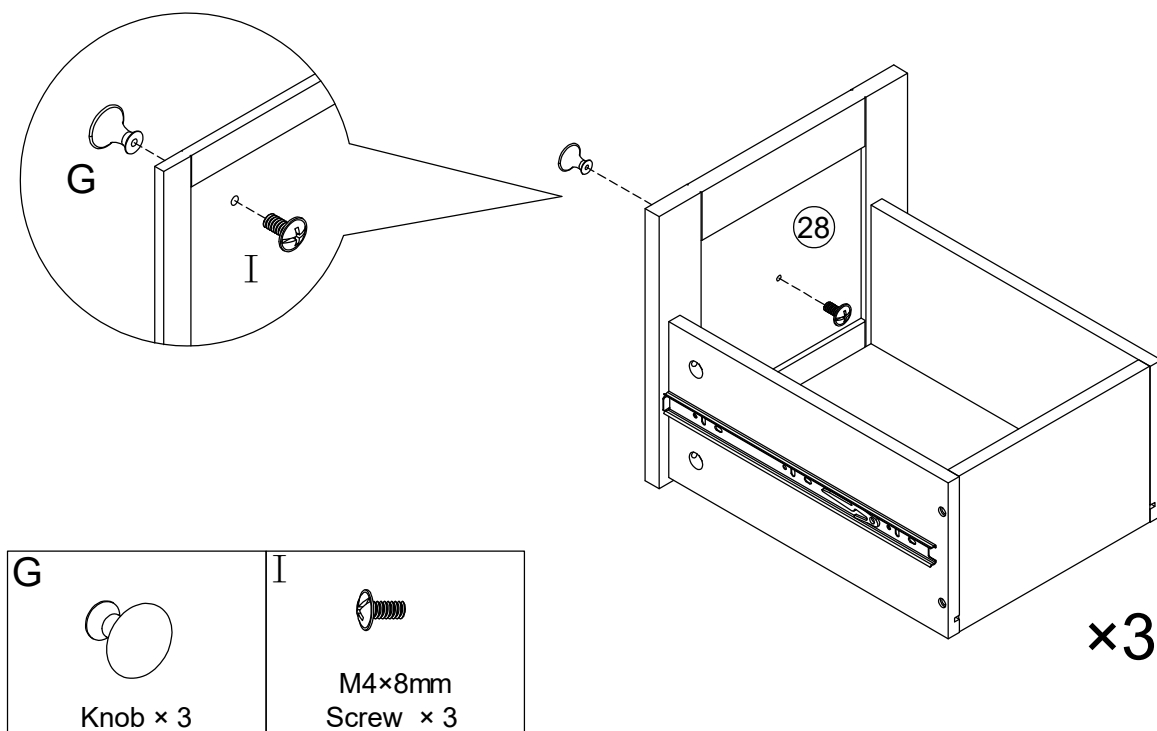


Assembly Instructions


Step 41

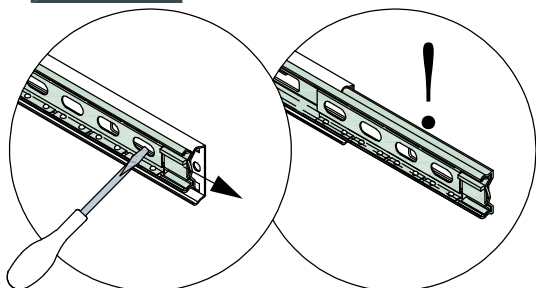


Step 1: Use a screwdriver to pry out the drawer slide's female rail tab.

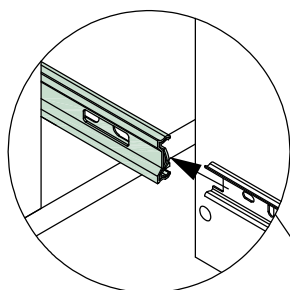

Step 2: Align the drawer's male rail with the female rail tab, then slowly push it in until fully seated.

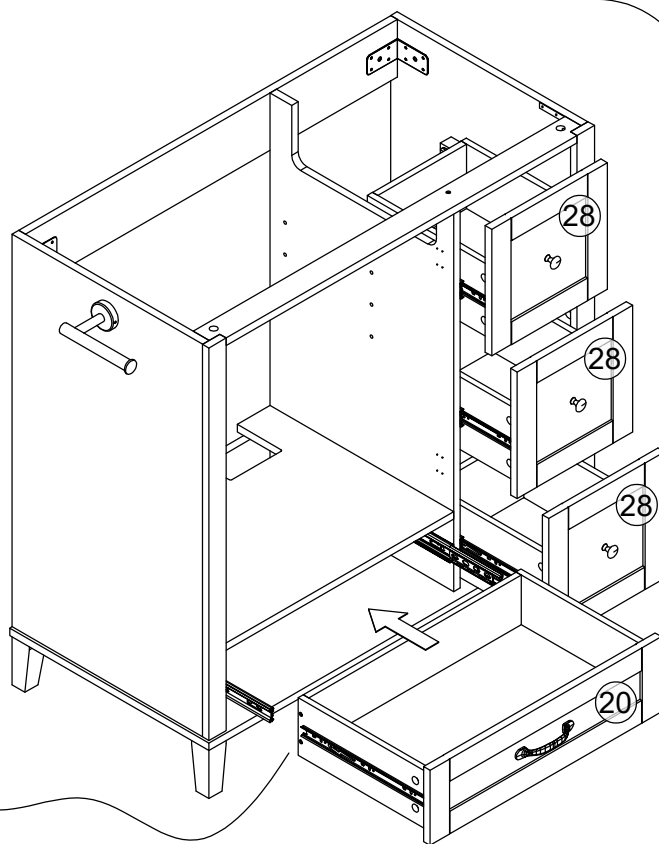


Step 42


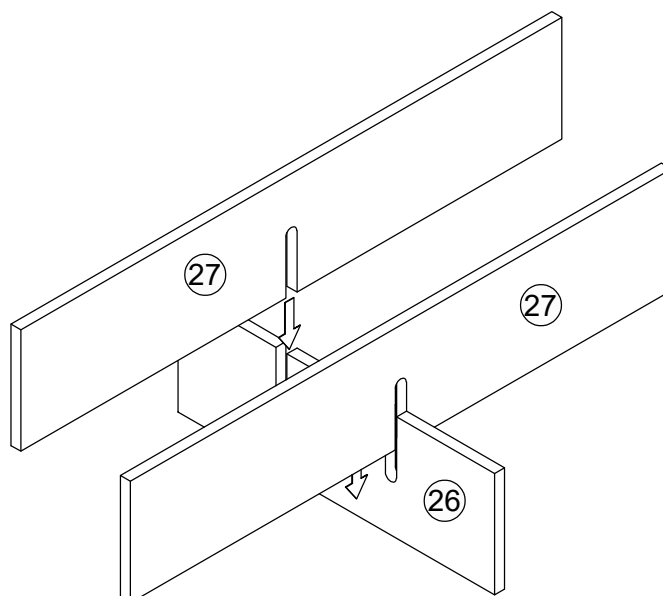


Assembly Instructions

Step 43

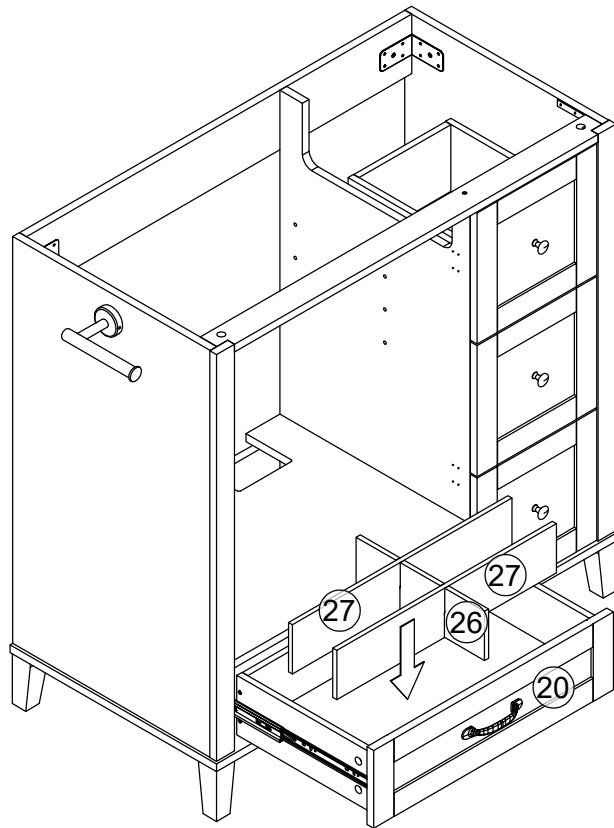


Step 44

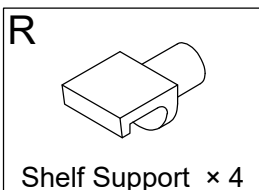
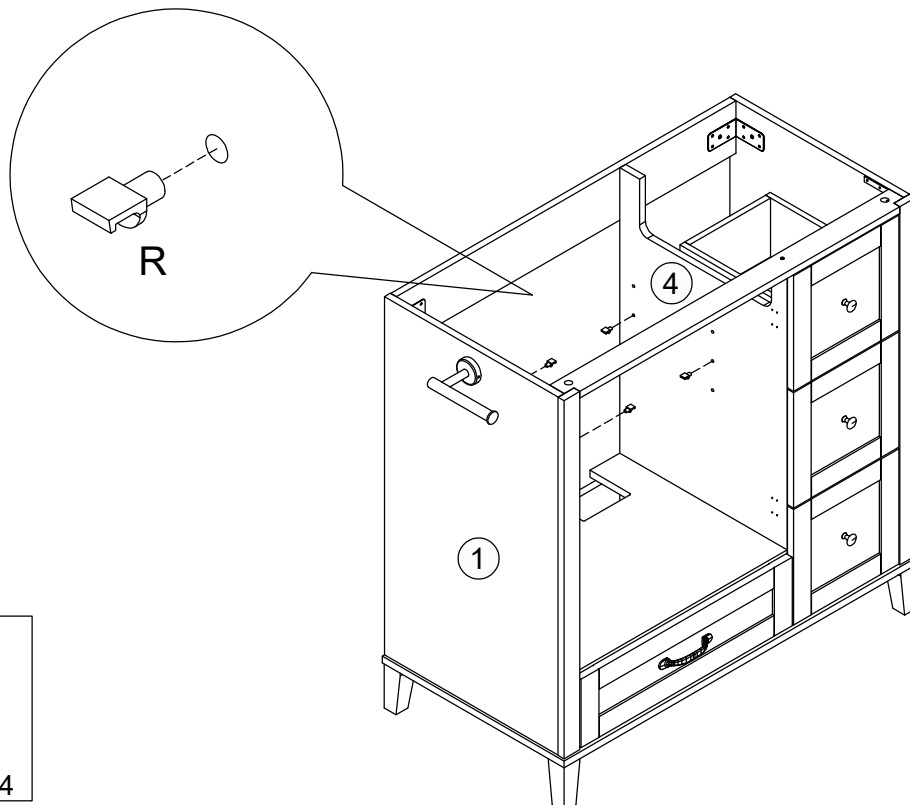


Assembly Instructions

Step 45



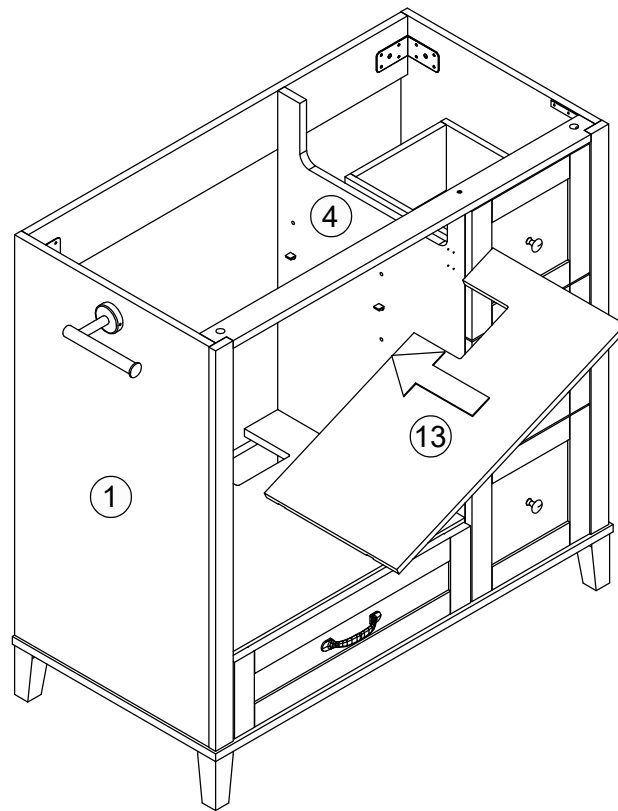


Step 46

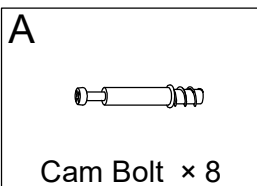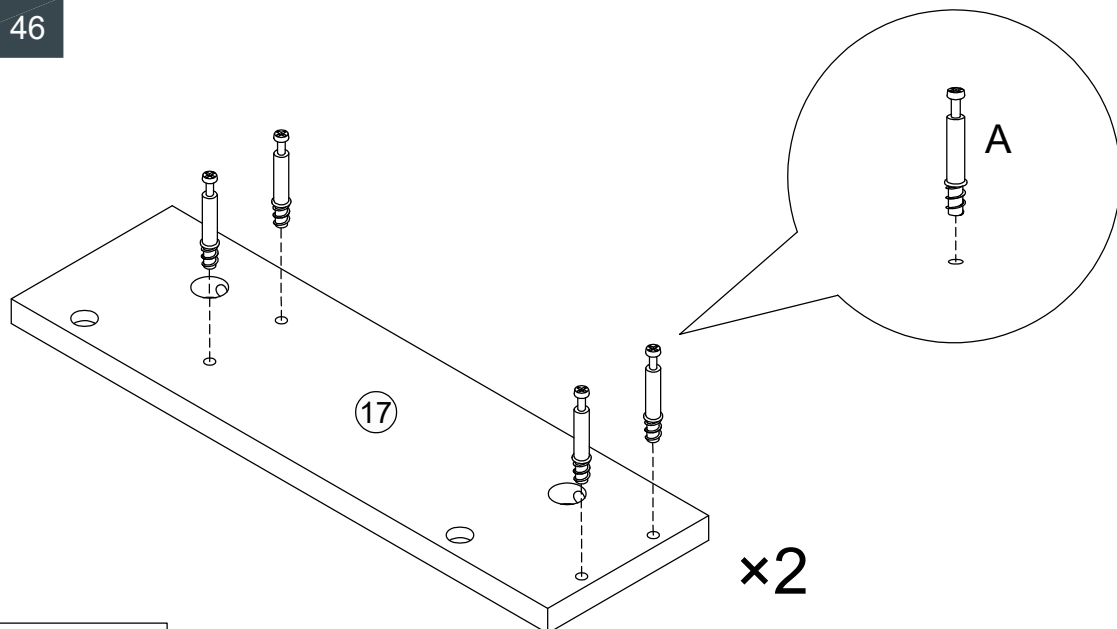

Assembly Instructions




Step 47

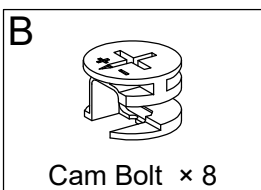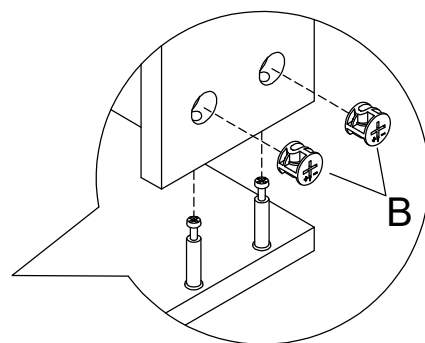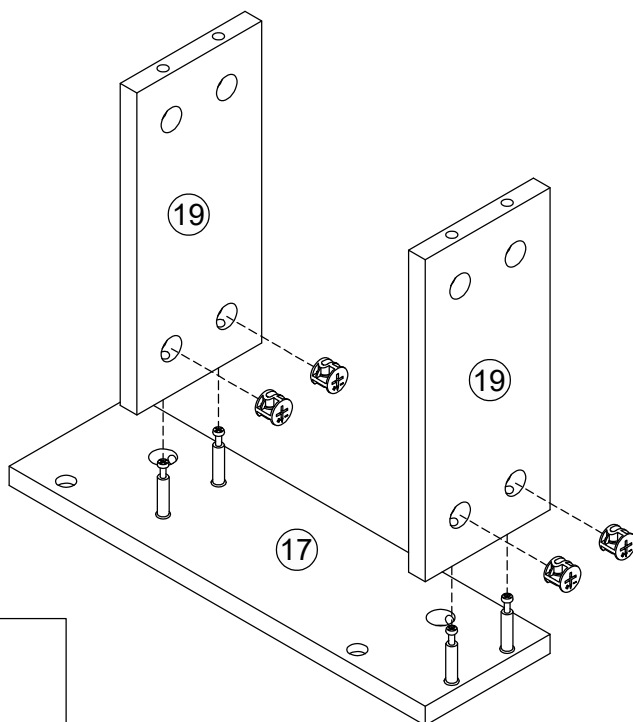

Cam Bolt × 8

×2

Step 48

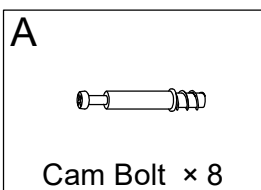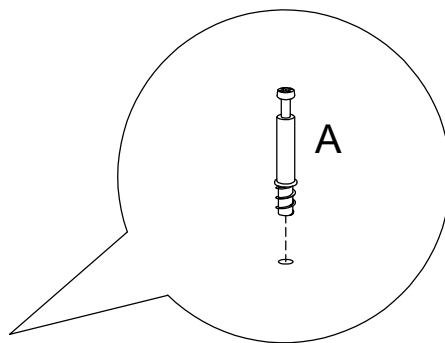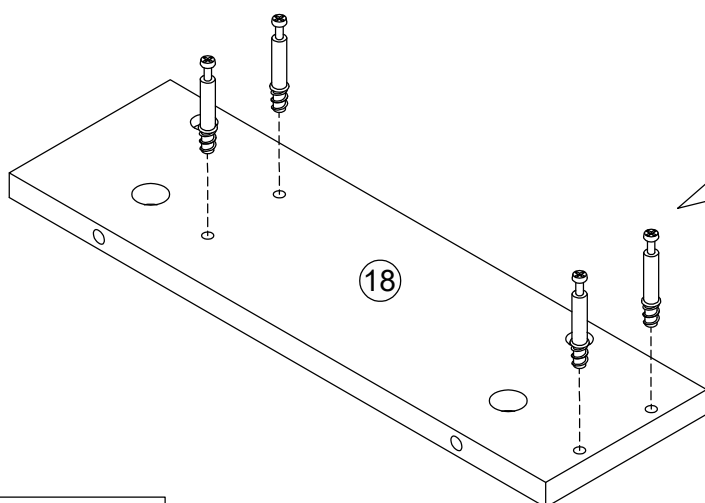


Cam Bolt × 8



×2

Assembly Instructions

Step 49

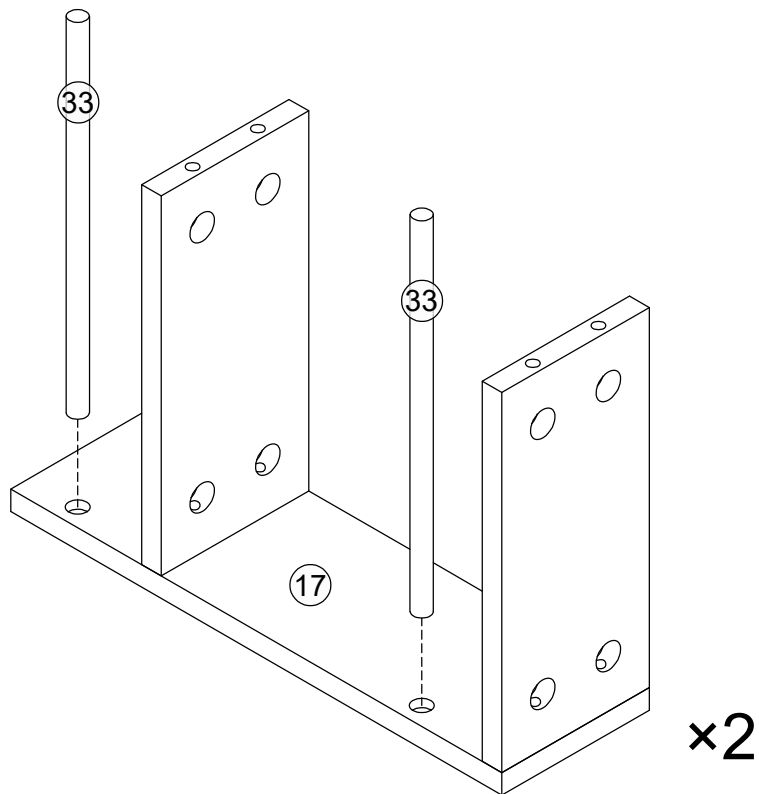


Step 50

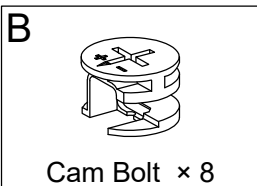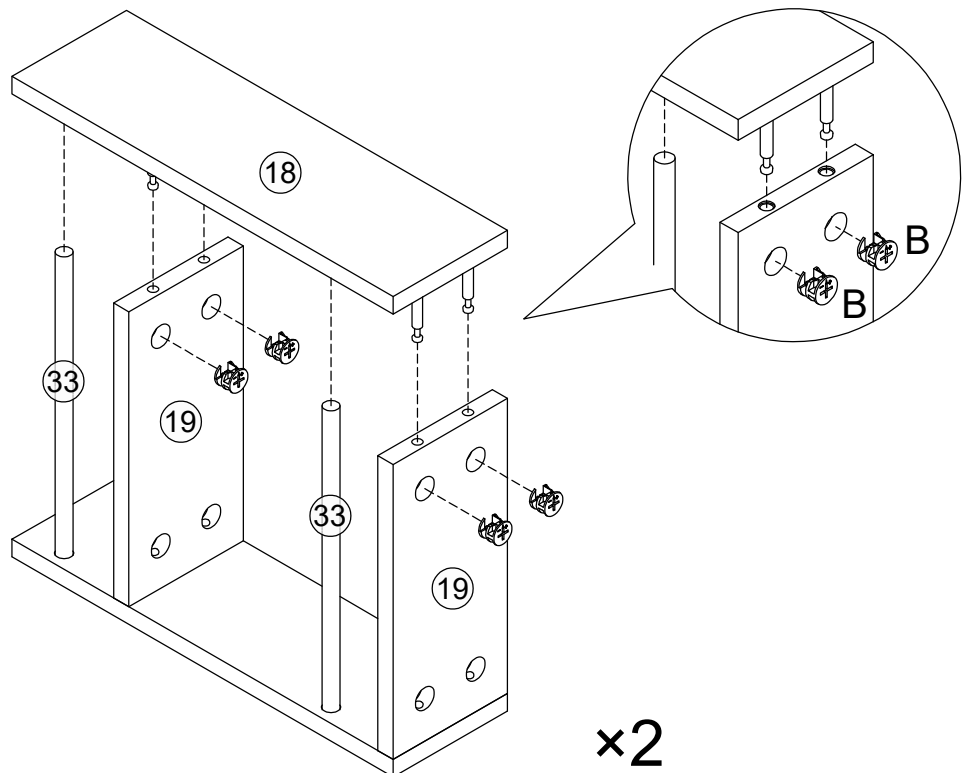


Assembly Instructions

Step 51

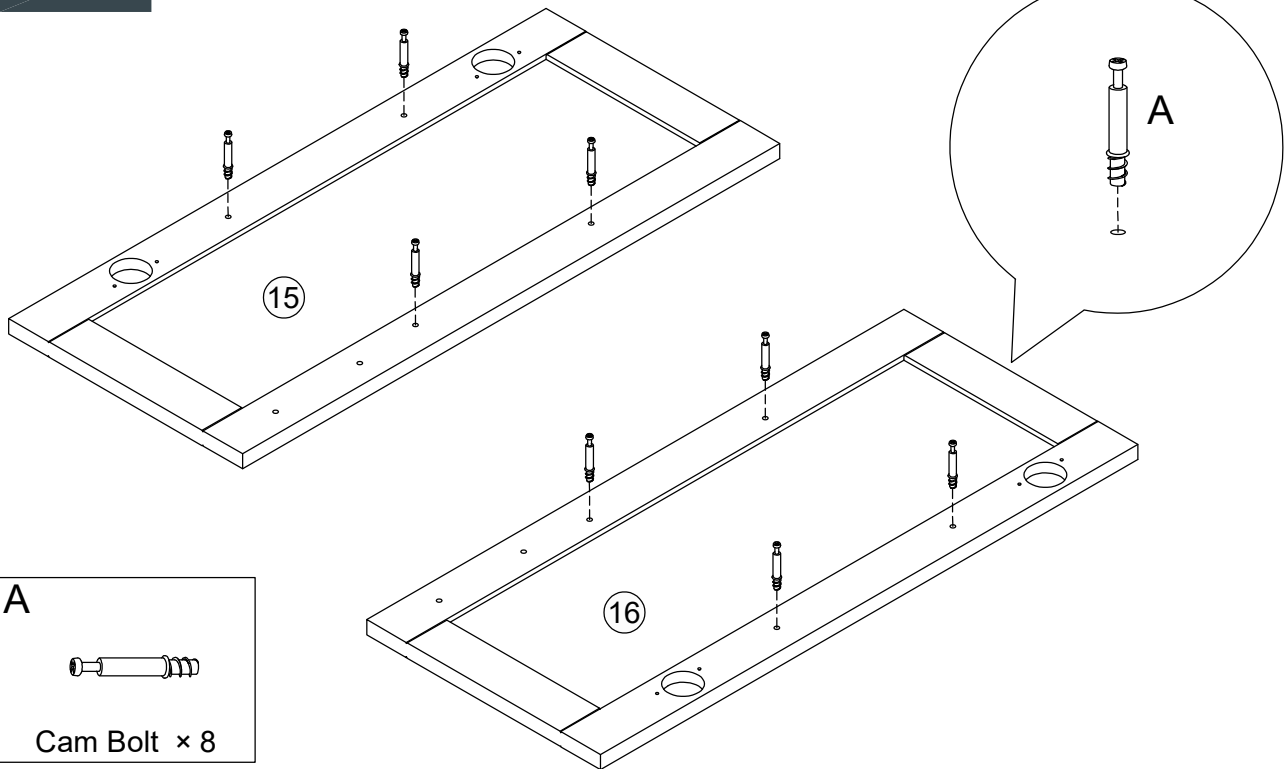


Step 52

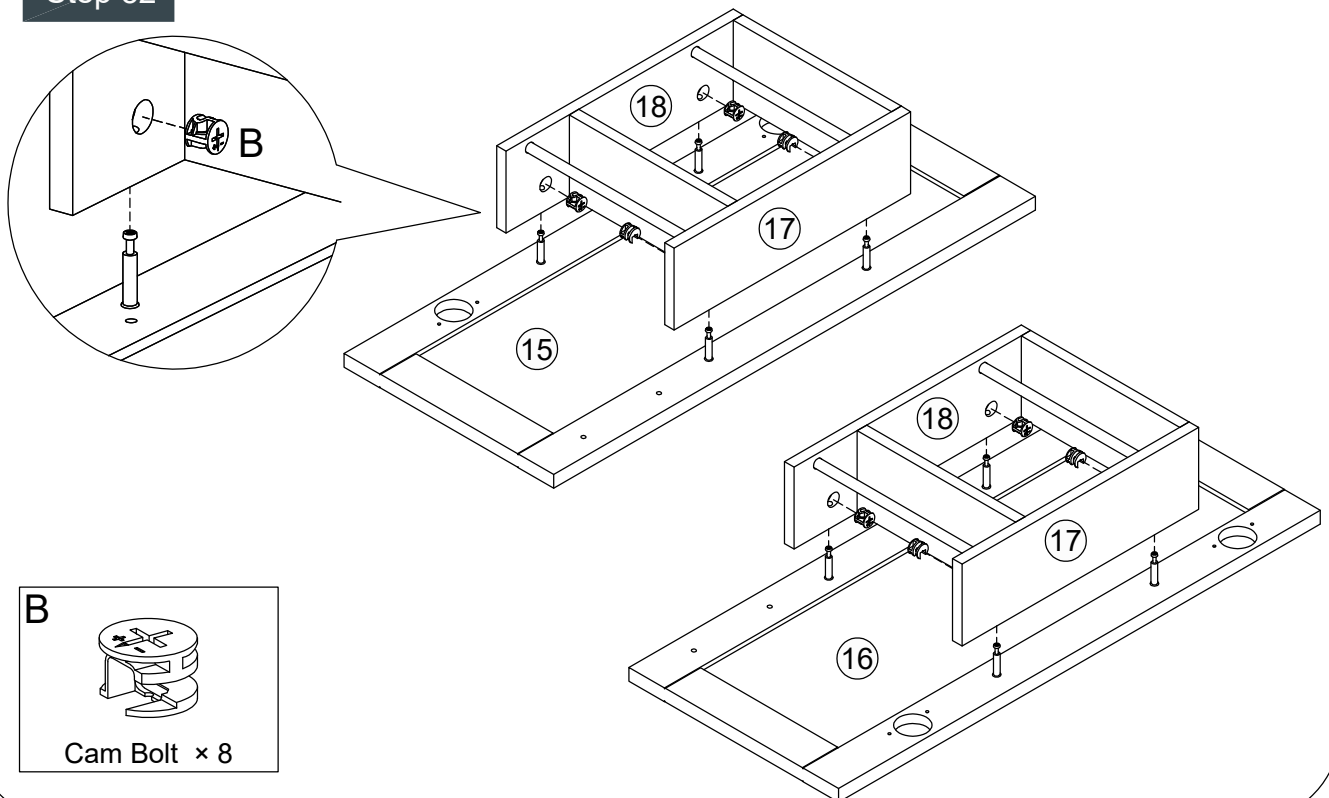


Assembly Instructions

Step 53

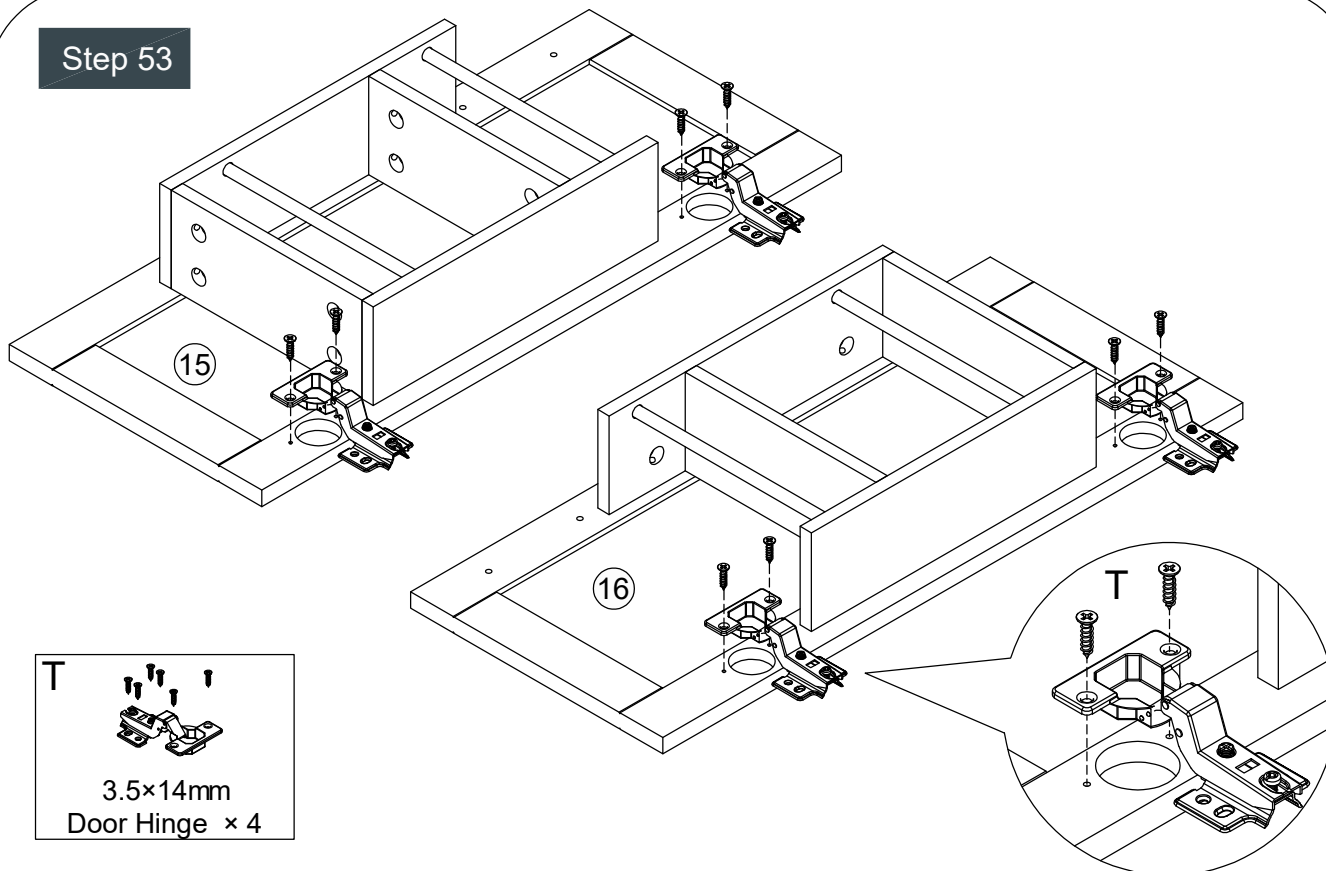


Step 54

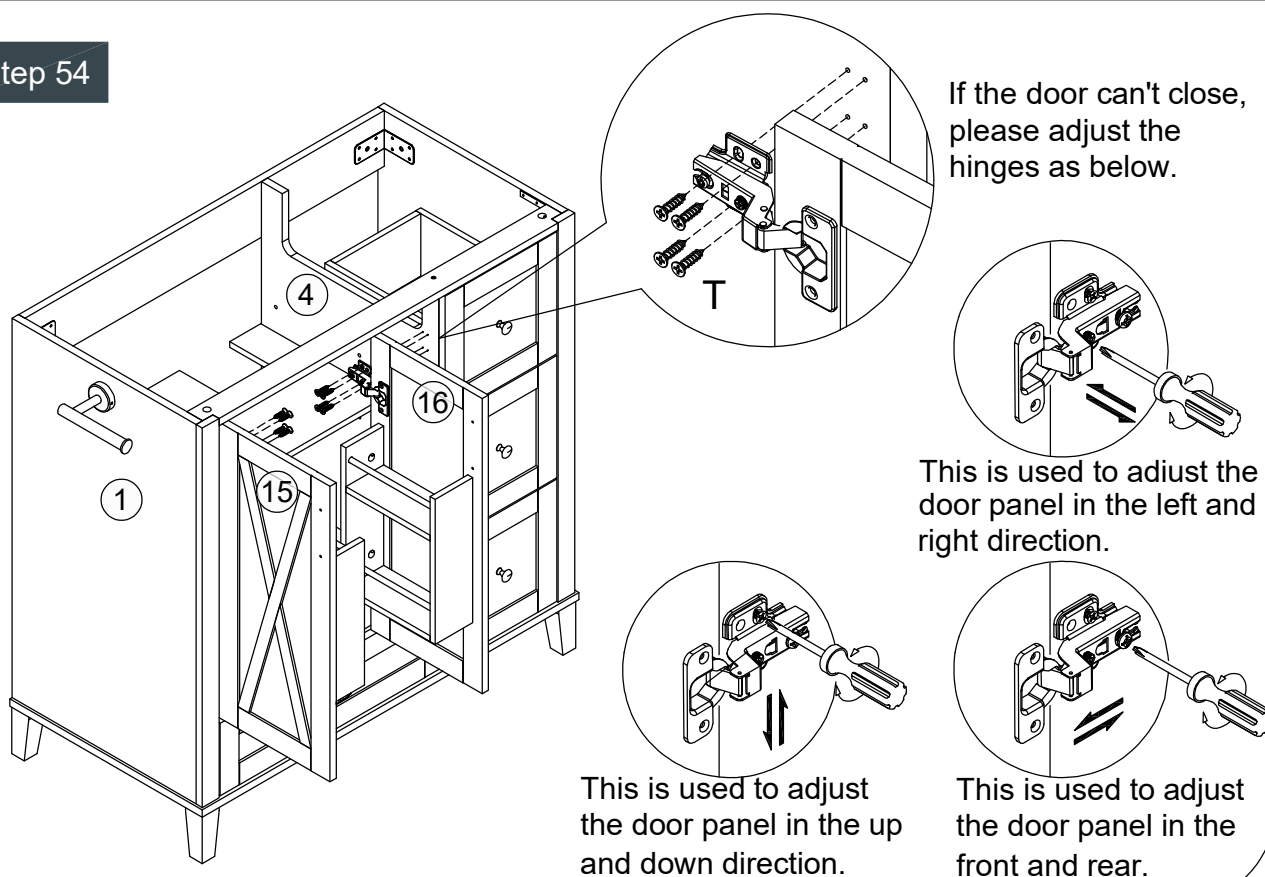


Assembly Instructions

Step 55


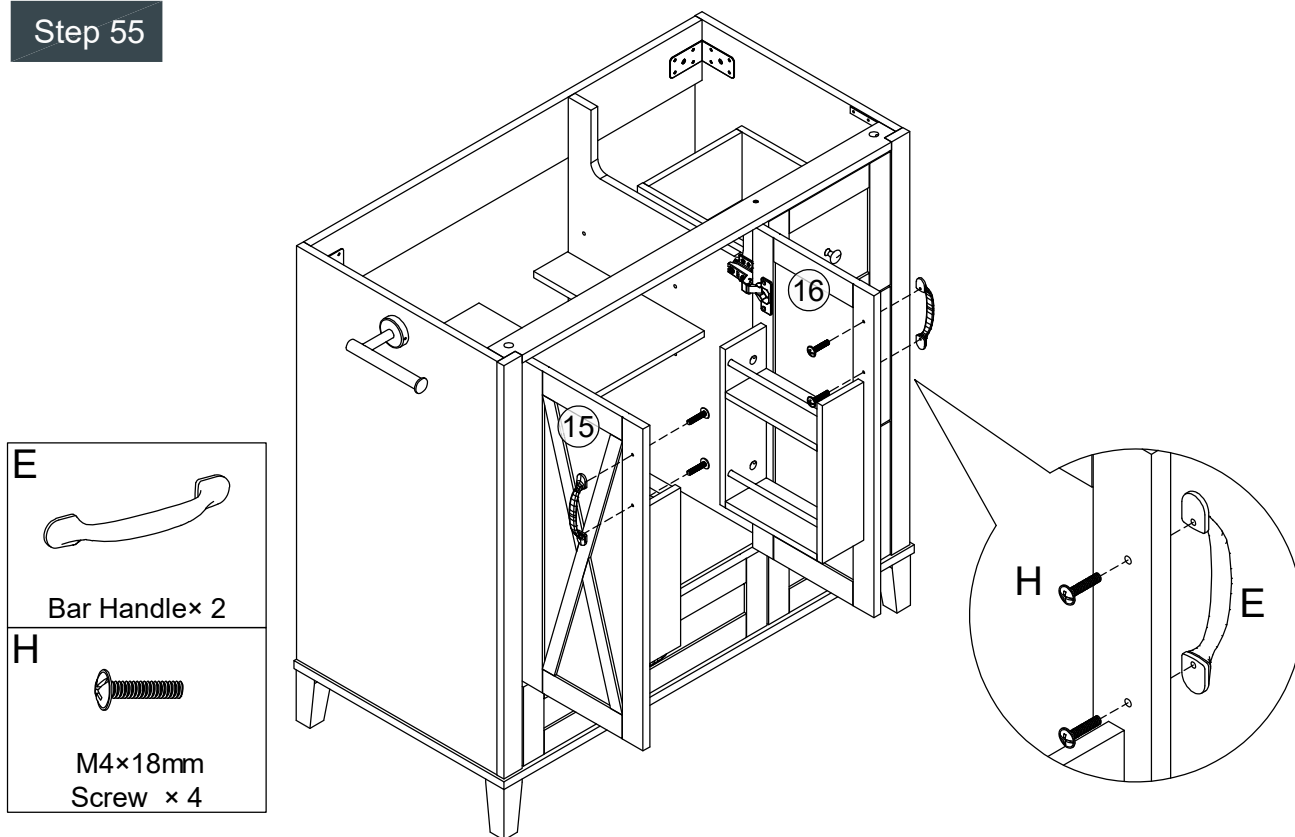


Step 56

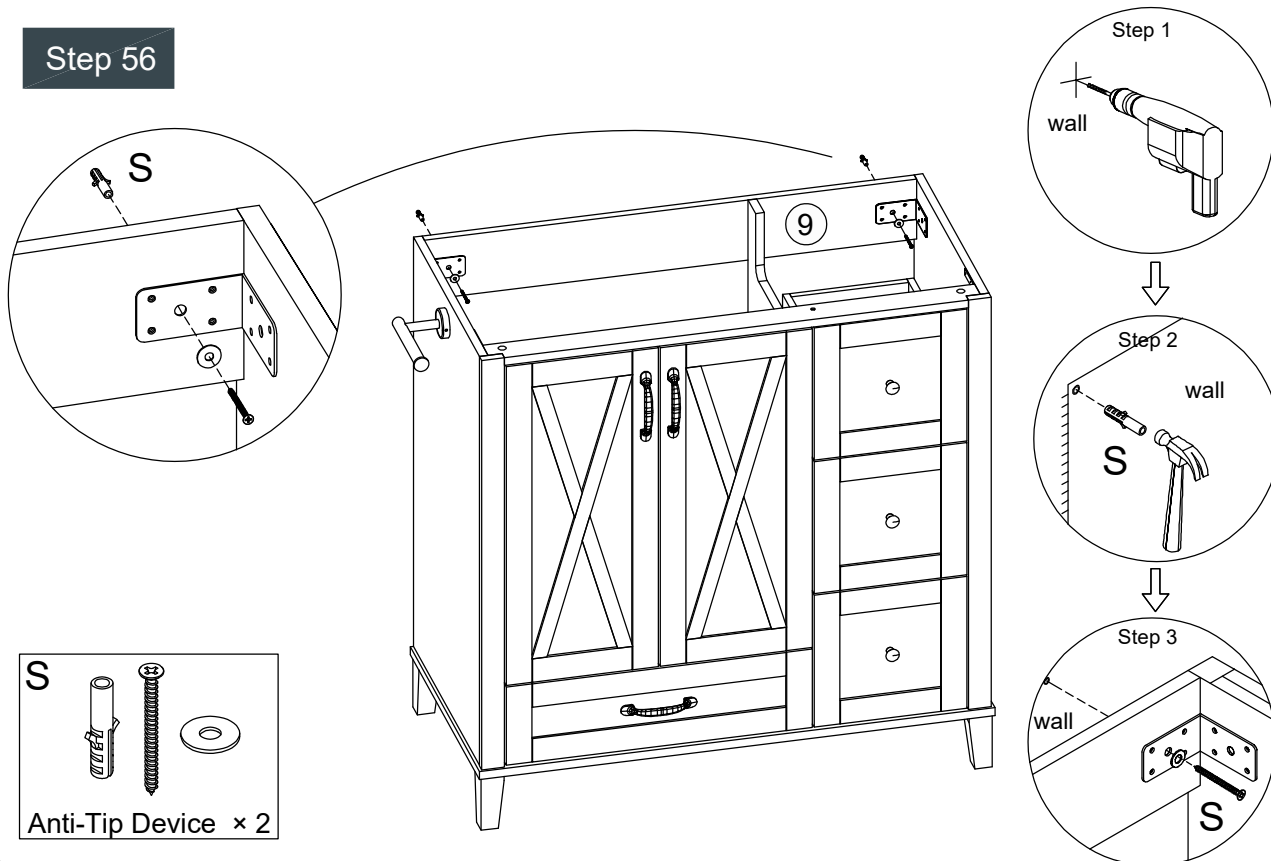

Assembly Instructions

Step 57

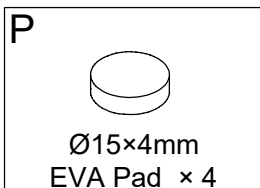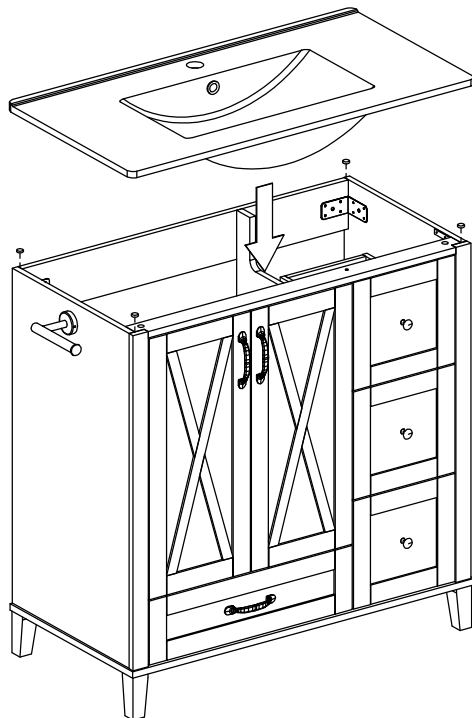

Hinweis: Wenn die Badewanne beim Aufstellen uneben ist, stellen Sie eine runde EVA-Matte darunter, um sie auszugleichen.

Finish

