
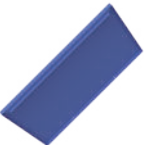


Assembly Manual

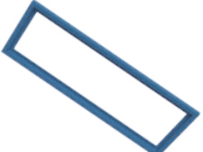


Please follow the assembly instructions to assemble the cabinet,
assembly video is on the purchase link.

Parts List:


Component Encoding - Image	Component Encoding - Image	Component Encoding - Image
A Leg x2 	B Side panel, left x1 	C Back panel, left x1 
D Back panel, right x1 	E Side panel, right x1 	F Bottom panel x1 
G Top cover panel x1 	H Middle frame x1 	I Door, right x1 
J Door, left x1 	K Drawer panel x2 	L Panel frame x2 
M Drawer back panel x2 	N Drawer back panel x2 	O Drawer back panel x2 

Component Encoding - Image	Component Encoding - Image	Component Encoding - Image
⒫ High standing feet x4 		


Accessories List:

Component Encoding - Image	Component Encoding - Image	Component Encoding - Image
Ⓐ L-type anti tilt film x2 	Ⓑ Hanging clothes pole x1 	Ⓒ Sliding rail x2 
Ⓓ Handles x4 	Ⓔ Screws x58 	Ⓕ Magnetic attraction x4 
Ⓖ Door shaft gasket x2 	Ⓗ Door handle screw x8 	Ⓘ Standing foot screw x16 


Step 1 Remove the B and E side panel protective plugs

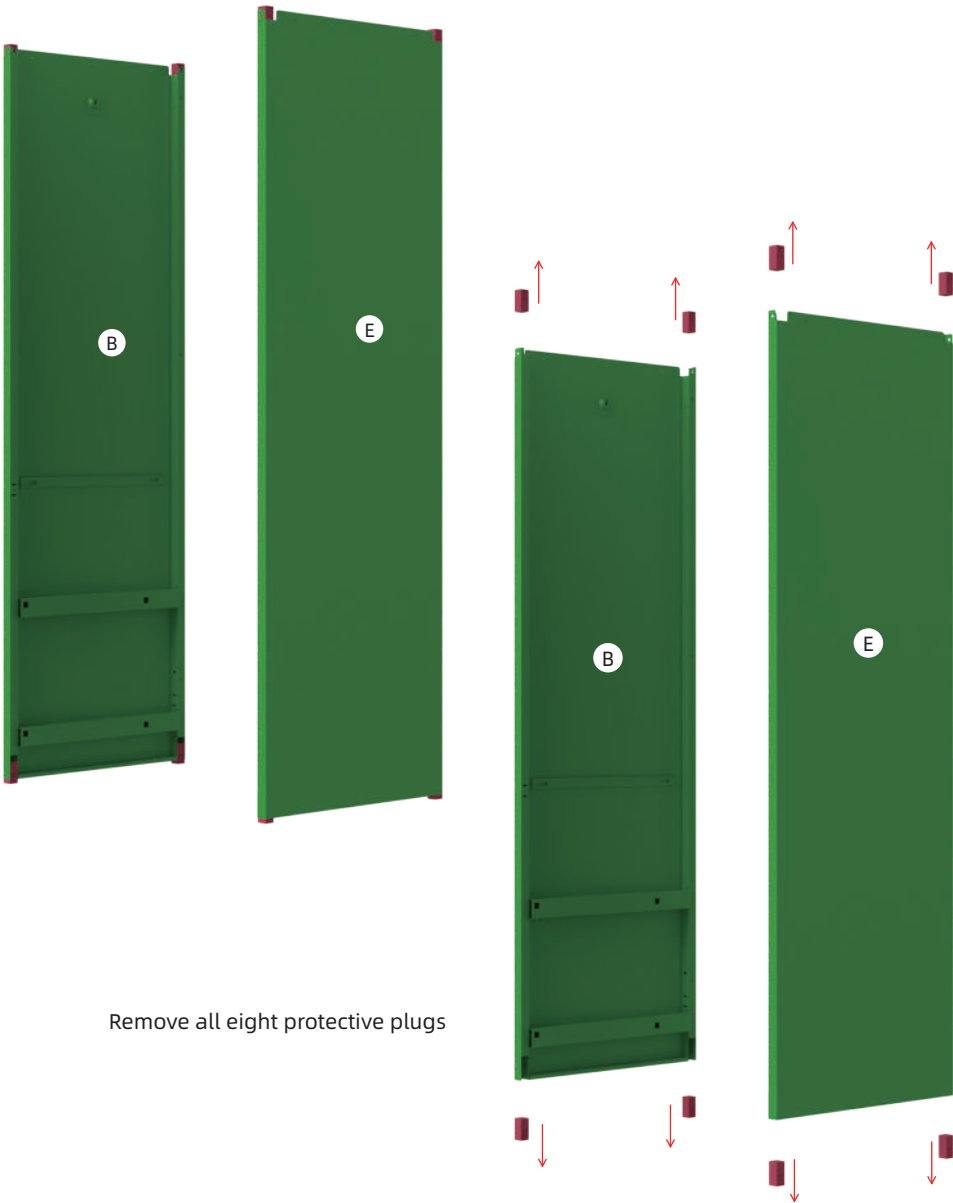


Step 2 Install the side panels,A inserted into B and E.

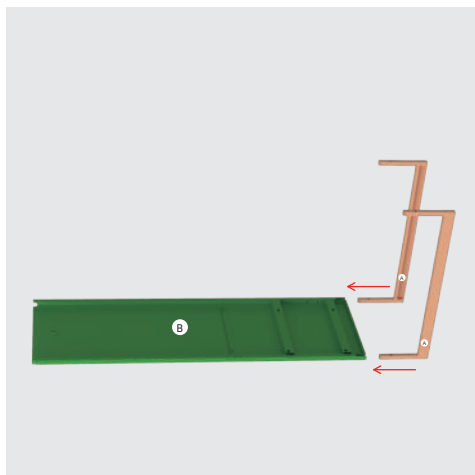


B side panel is placed on the ground and A is connected to B

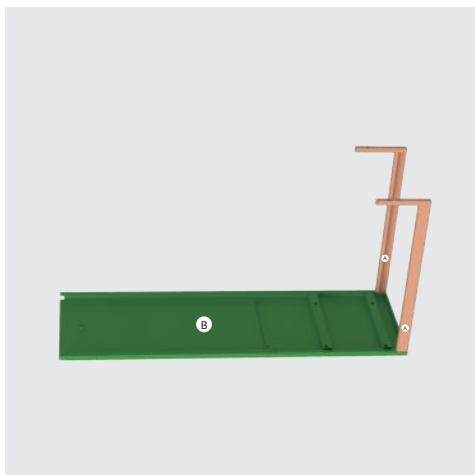

A stands on the ground with its feet

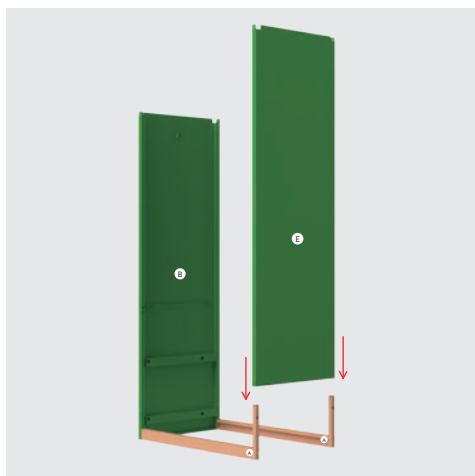


Place E down into the foot of station A

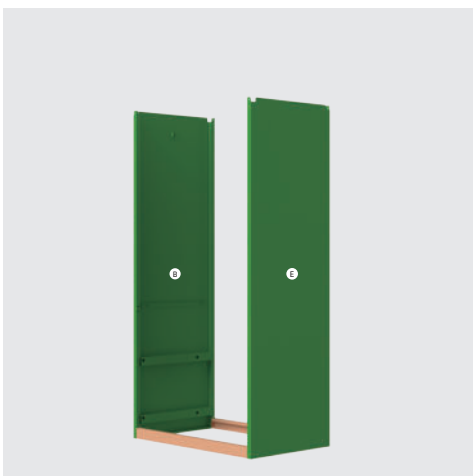


Finish

Step 3 Use screws to fix the side panels,two screws on each side,4 screws in total.

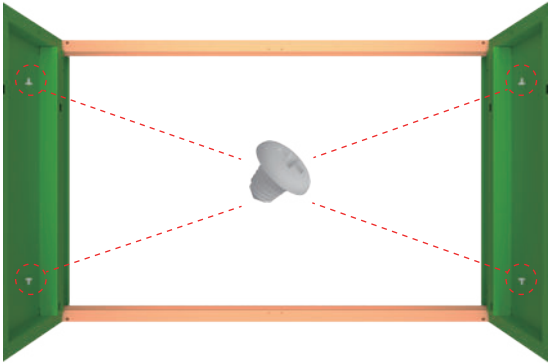


Step 4 Splicing two back panels of D and C,3 screws in total

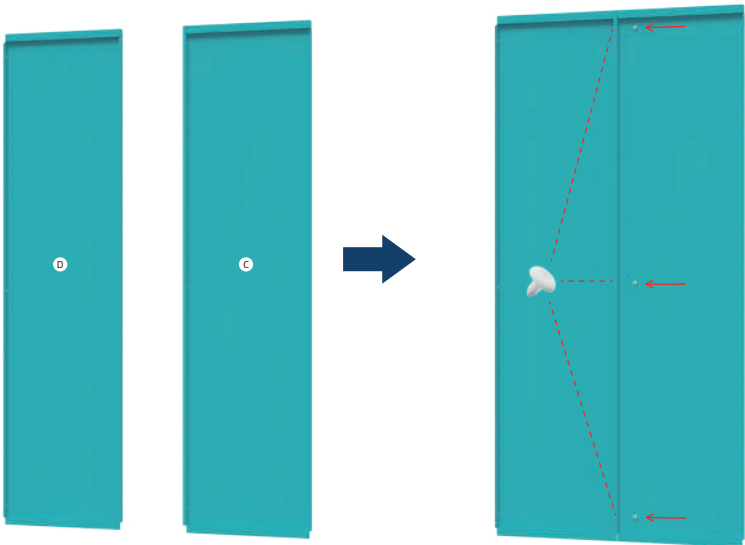



Fix the left and right backboards with label 5 screws

Step 5 Place the spliced back panel C and D on the back side

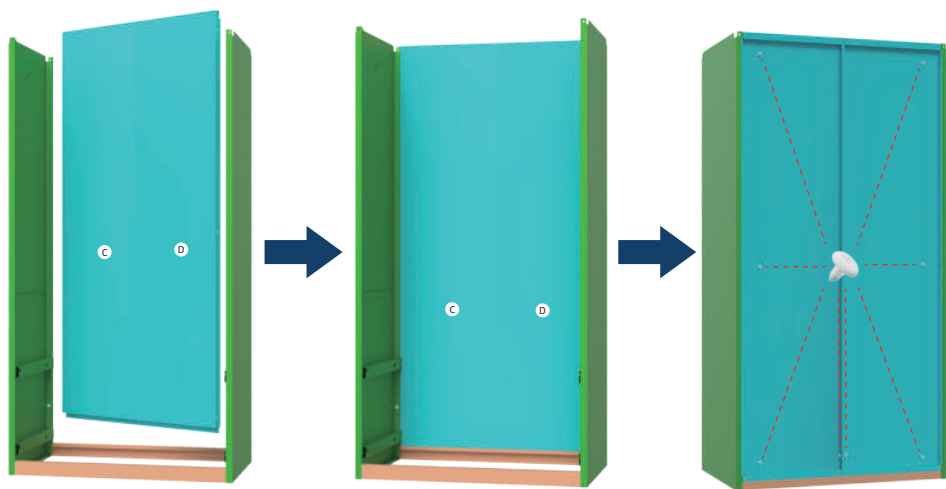


Back panel plane facing forward,Secure the back with label 5 screws.

Step 6 Install the middle frame label H





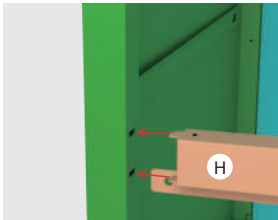
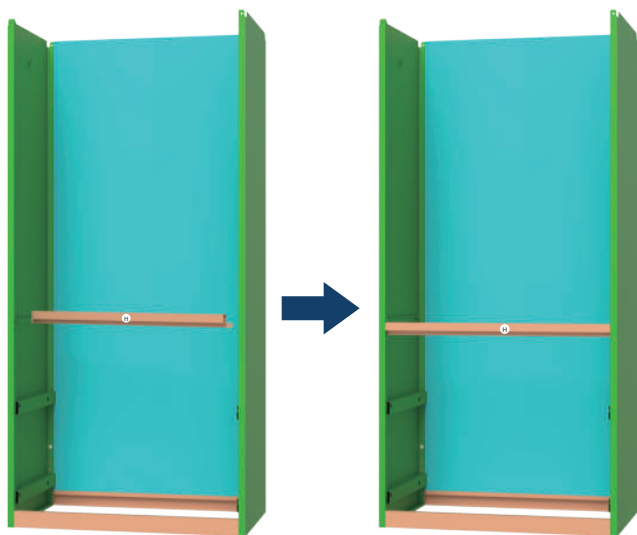


Insert the buckle into the slot on the left and right side panels



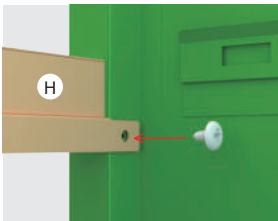


Fix the back with screws

Step 7 Install G the top cover panel

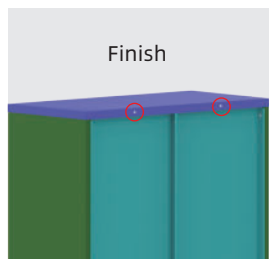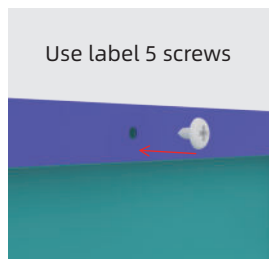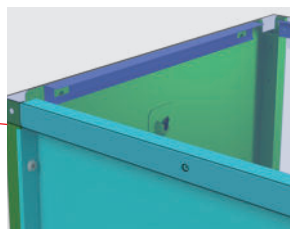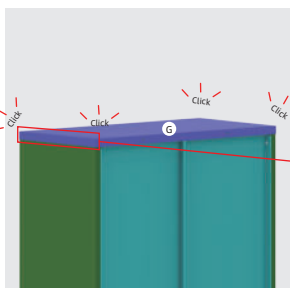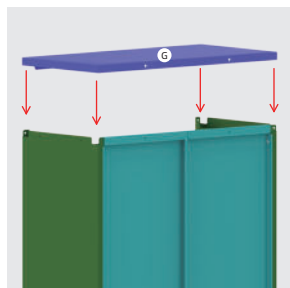
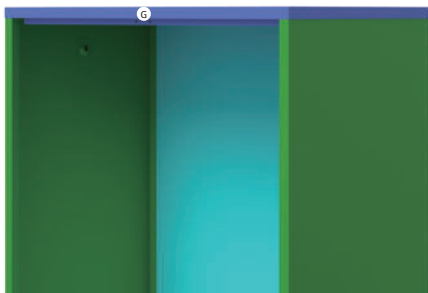


Step 8 Install label P high station foot

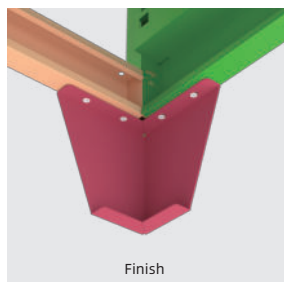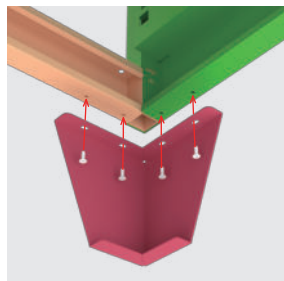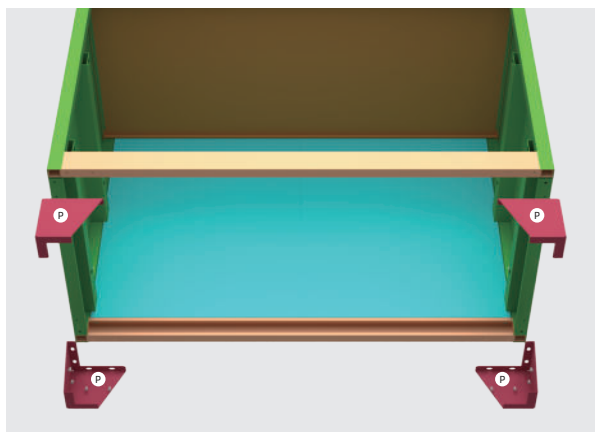

Fix the four triangular pieces with label 9 screws


Step 9 Install upper bottom plate label F

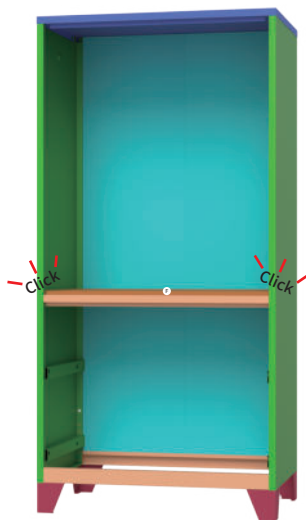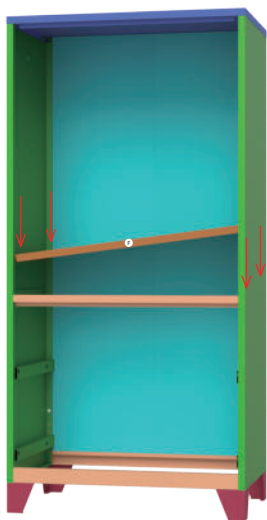


Step10 Install drawer

x2


Open label N drawer pocket panel, Place in label L panel box

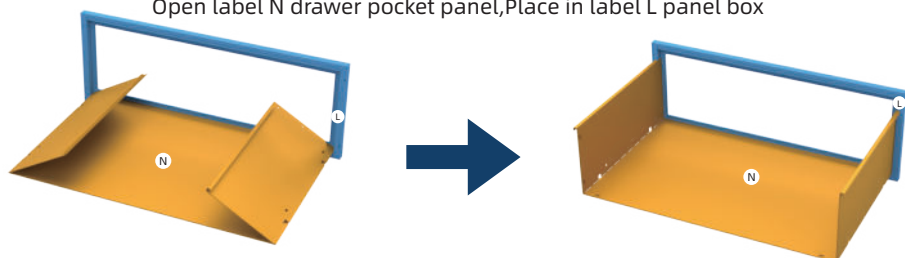


Place the label K panel into the panel box

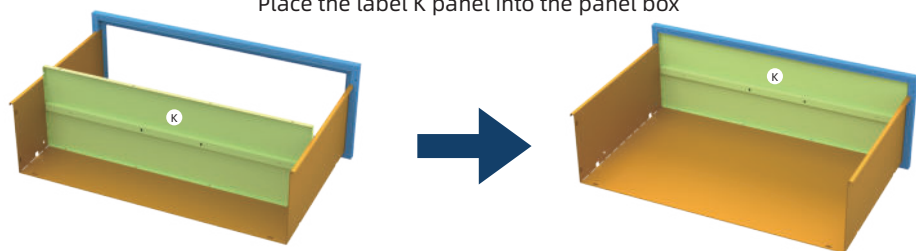


Fix with label 5 screws, a total of 16 screws

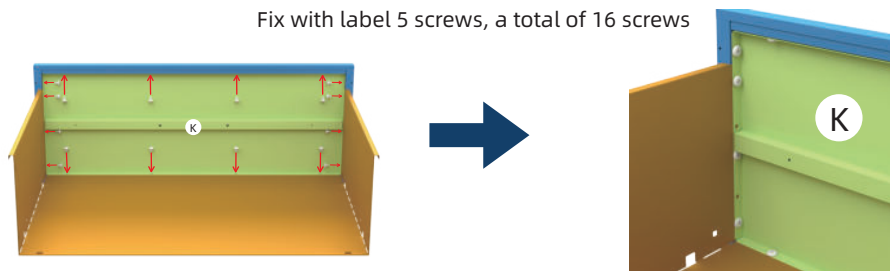


Insert the drawer liner label O into it, Secure with label 5 screws

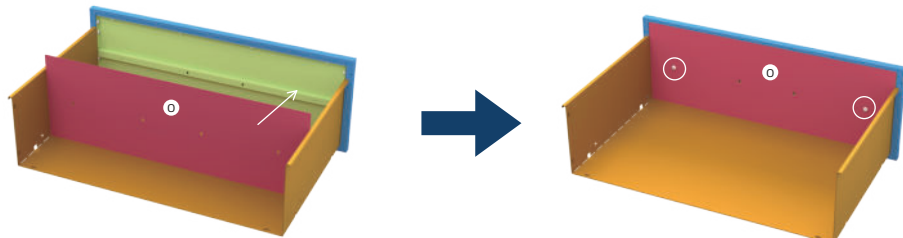

Install drawer label M on the back panel

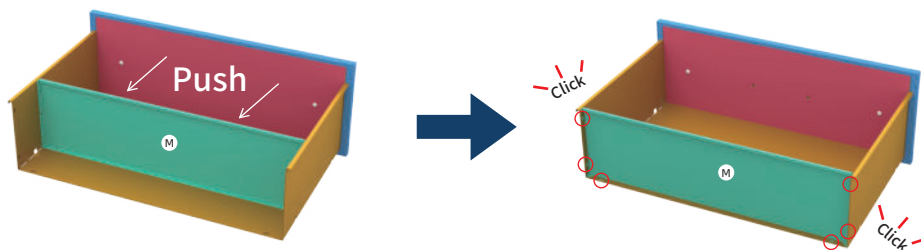


Step 11 Install drawer handles using labels 4 and 8 for installation

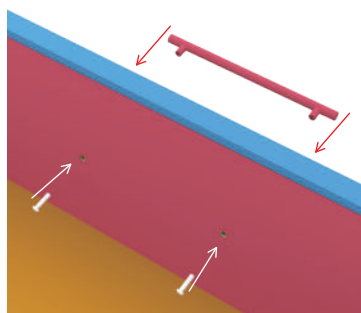


x2




Use label 8 screws

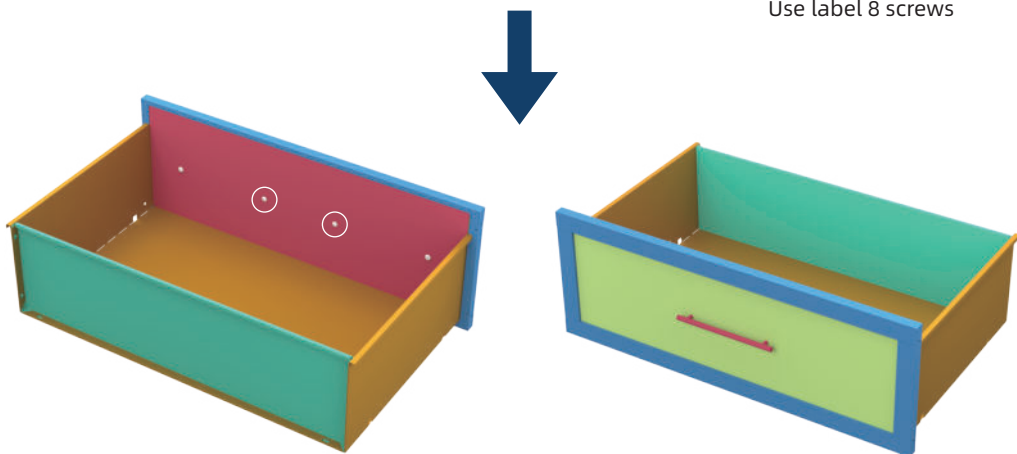


Step 12 Install label 3 slide rail on the left and right side panels

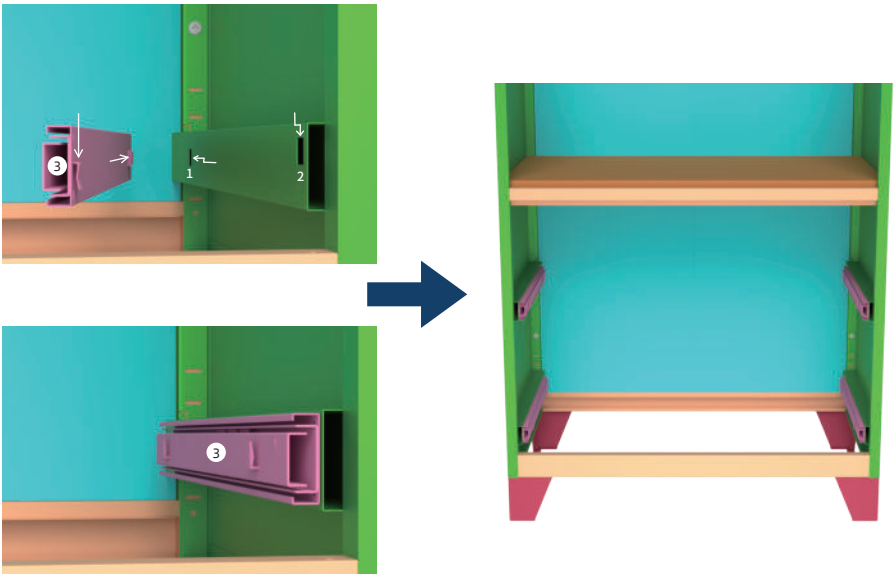

Step 13 Insert the left and right card slots into the drawer,
Insert the slide rail downwards

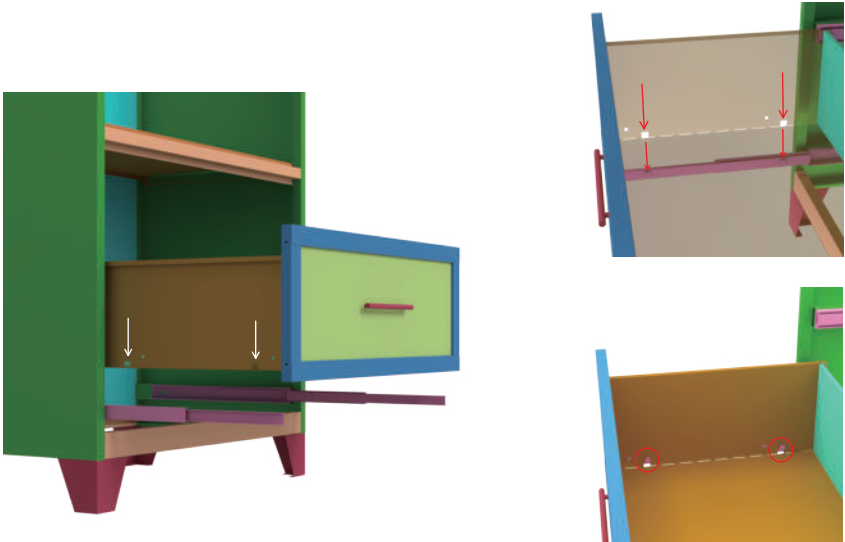



Step 14 Install label 6 magnetic suction

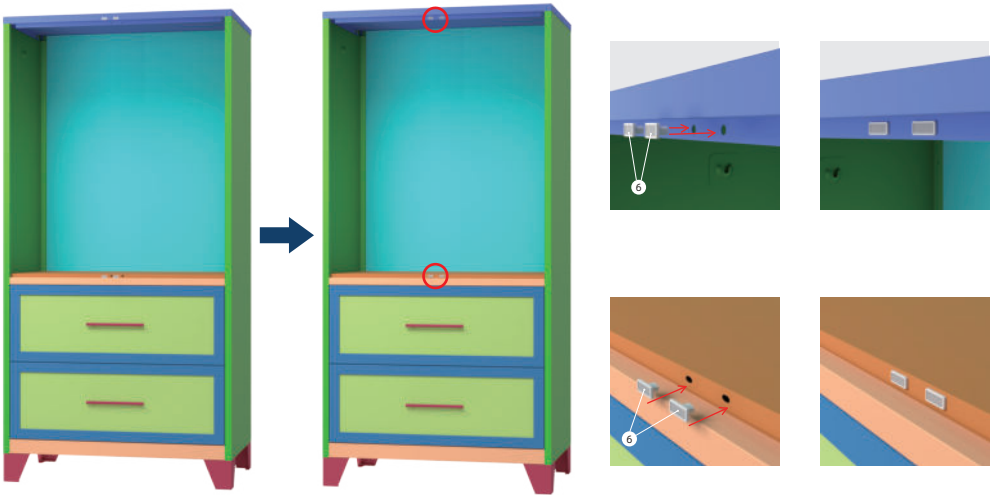



Step 15 Install label 2 clothes hanger rod





Step 16 Install Label I and J door panel to cabinet

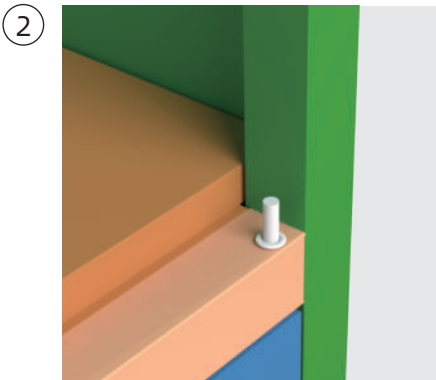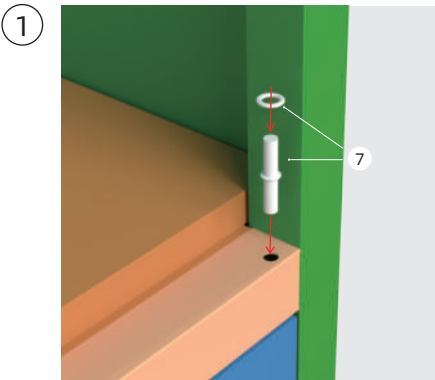

Put the plastic ring on the bolt, then insert the bolt into the hole.
The installation method on the other side is the same

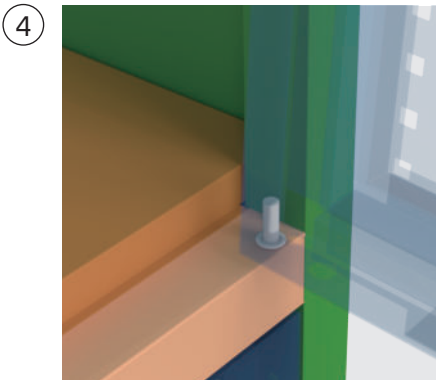
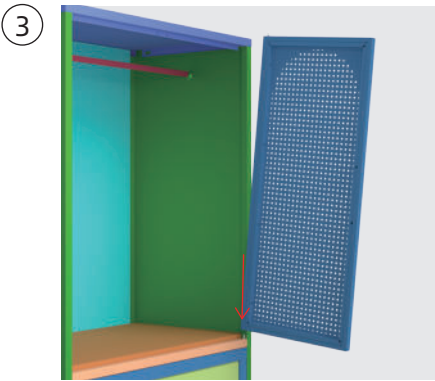


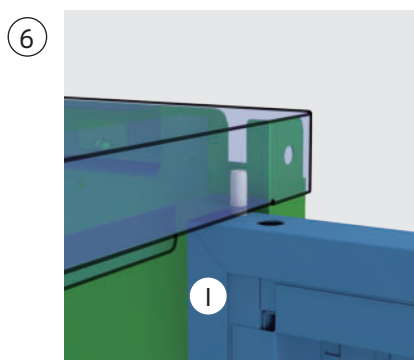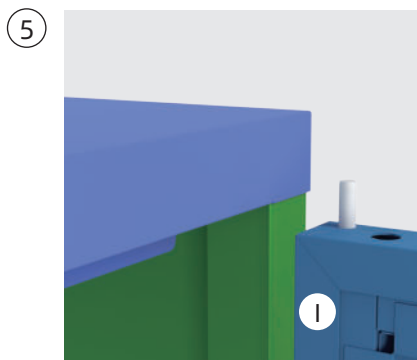



Push the spring bolt and insert it into the hole.

The installation method on the other side is the same


Step 17 Install label 4 on the door panel using label 8

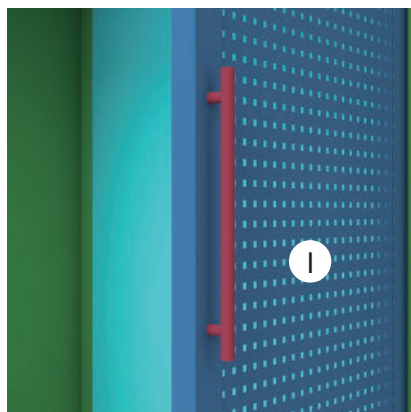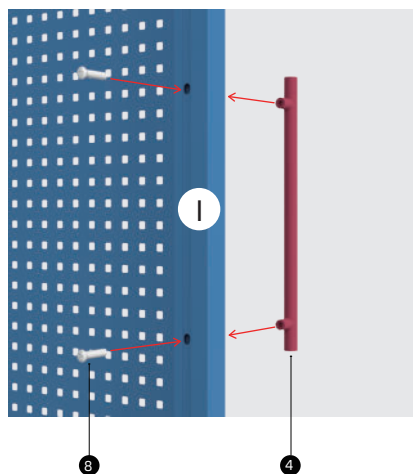


Step 18 Install L-shaped anti tilt plate at the top

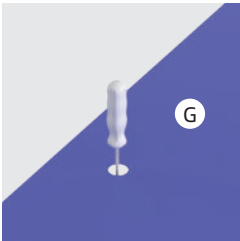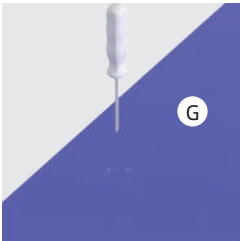


1. Use a screwdriver to open the two micro holes on top G

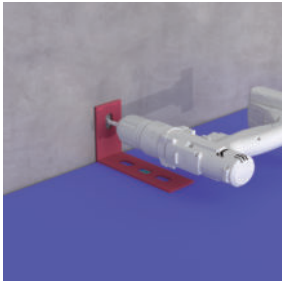


2. Aim the drill at the wall surface
Punch out the hole position

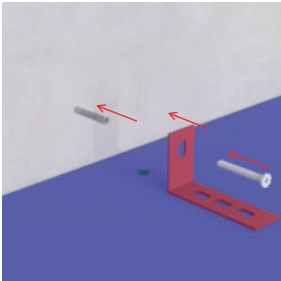


3. Expansion screw and L-shaped
anti tipping connection

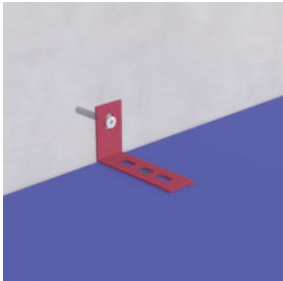


4. Wall fixing completed

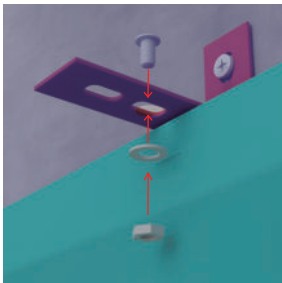

5. Use screws to connect the cabinet
to the L-shaped anti tilt plate

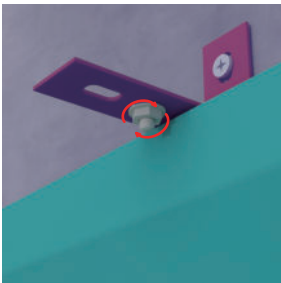

6. Rotate and tighten the screw

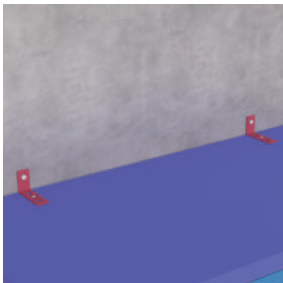

L-shaped anti tipping installation
completed,high safety factor.