

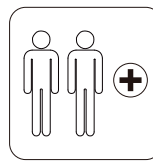
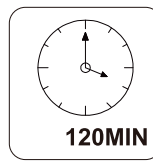
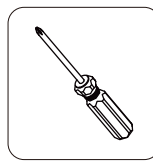
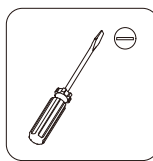


HLG196


Version:1.0

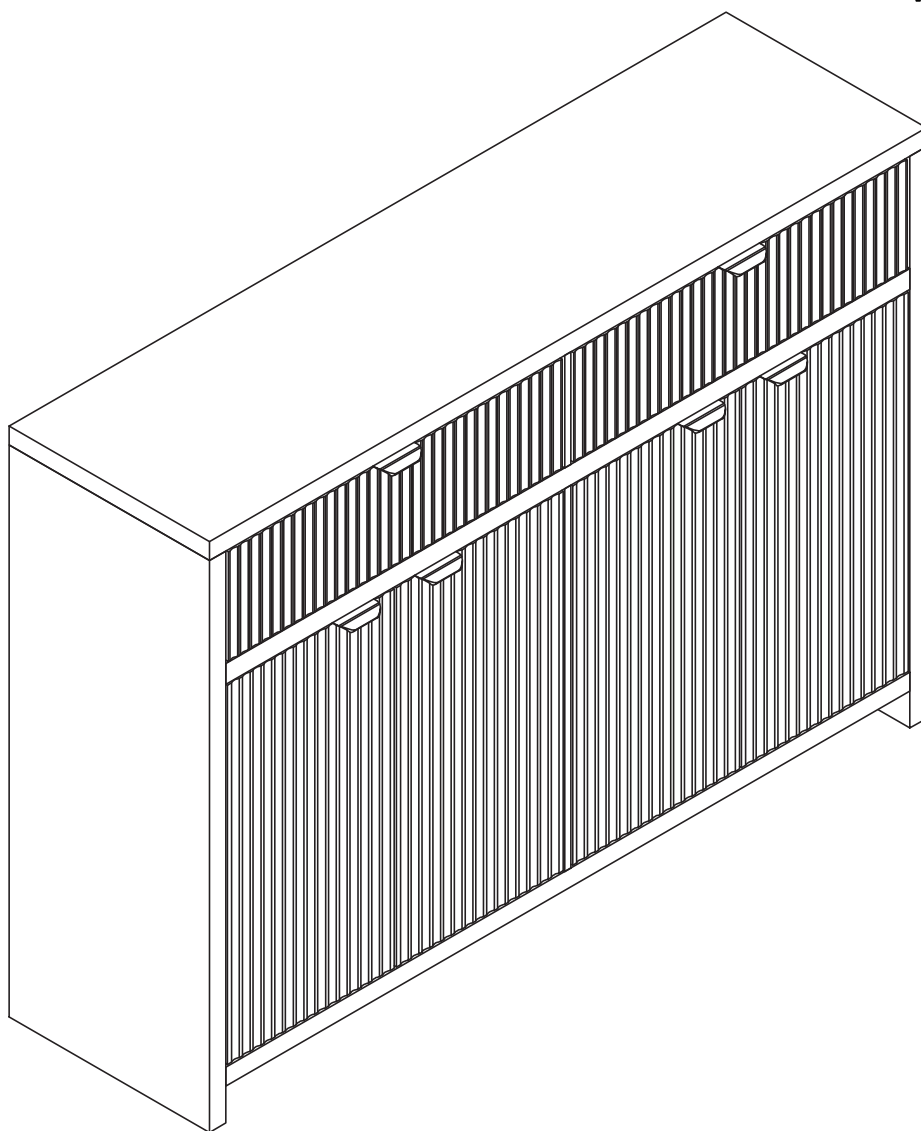


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

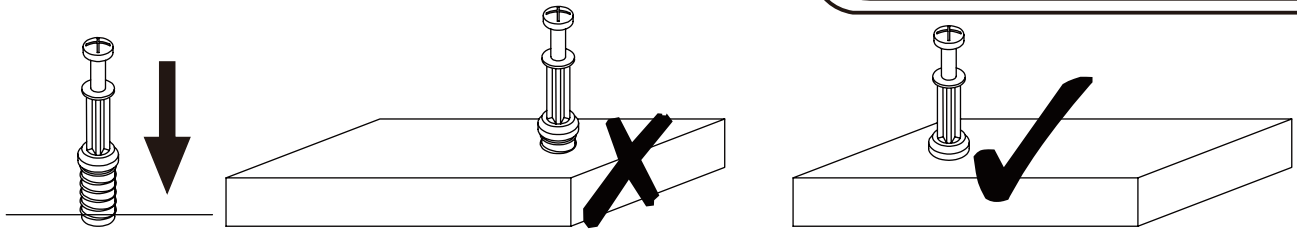


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

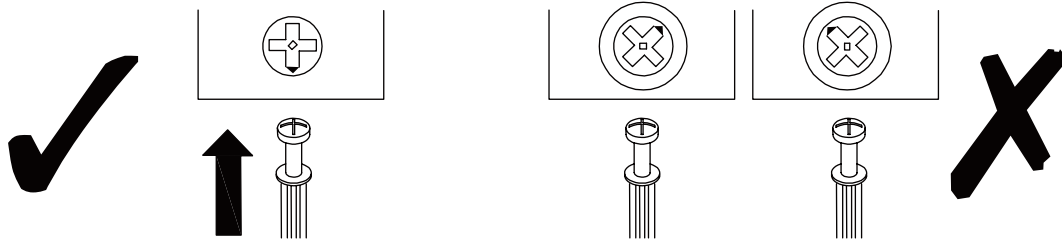






EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.











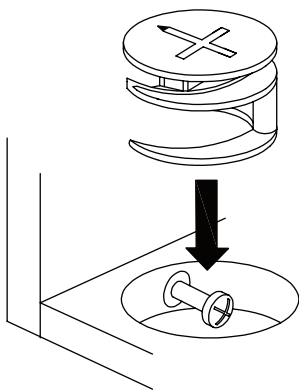





EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.


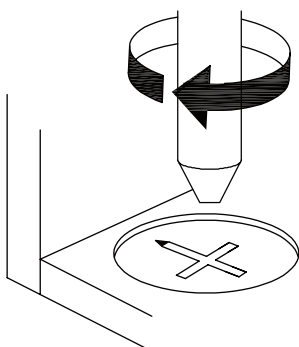














EN_Turn cam lock clockwise to tighten.

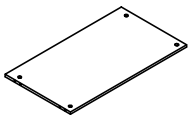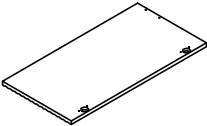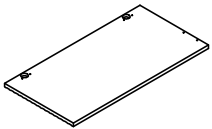
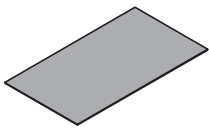
Carton A			
NO.	PARTS	QTY	SPARE
⑥		x2	
⑦		x1	
⑮		x2	
⑮		x2	
⑰		x2	
⑳		x2	

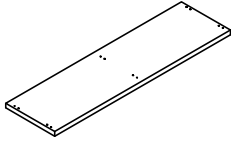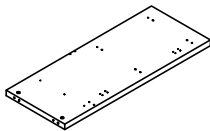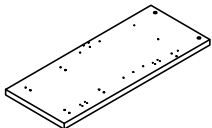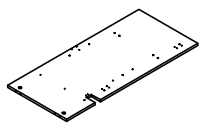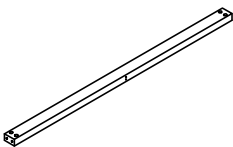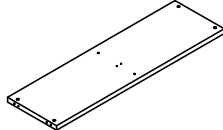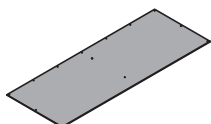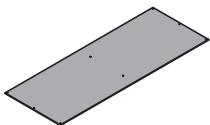
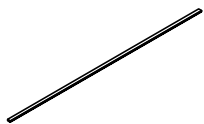
Carton B			
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑧		x1	
⑨		x1	
⑩		x1	
⑪		x1	
⑫		x2	
⑬		x2	
⑭		x2	



Carton B			
NO.	PARTS	QTY	SPARE
⑮		x2	
⑰		x2	
⑳		x2	
㉒		x2	
	 Hardware Kit		

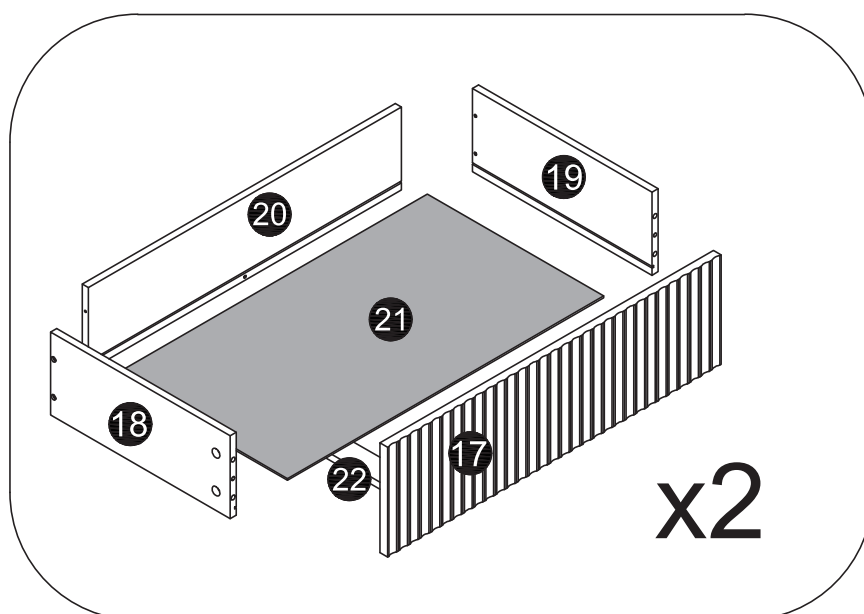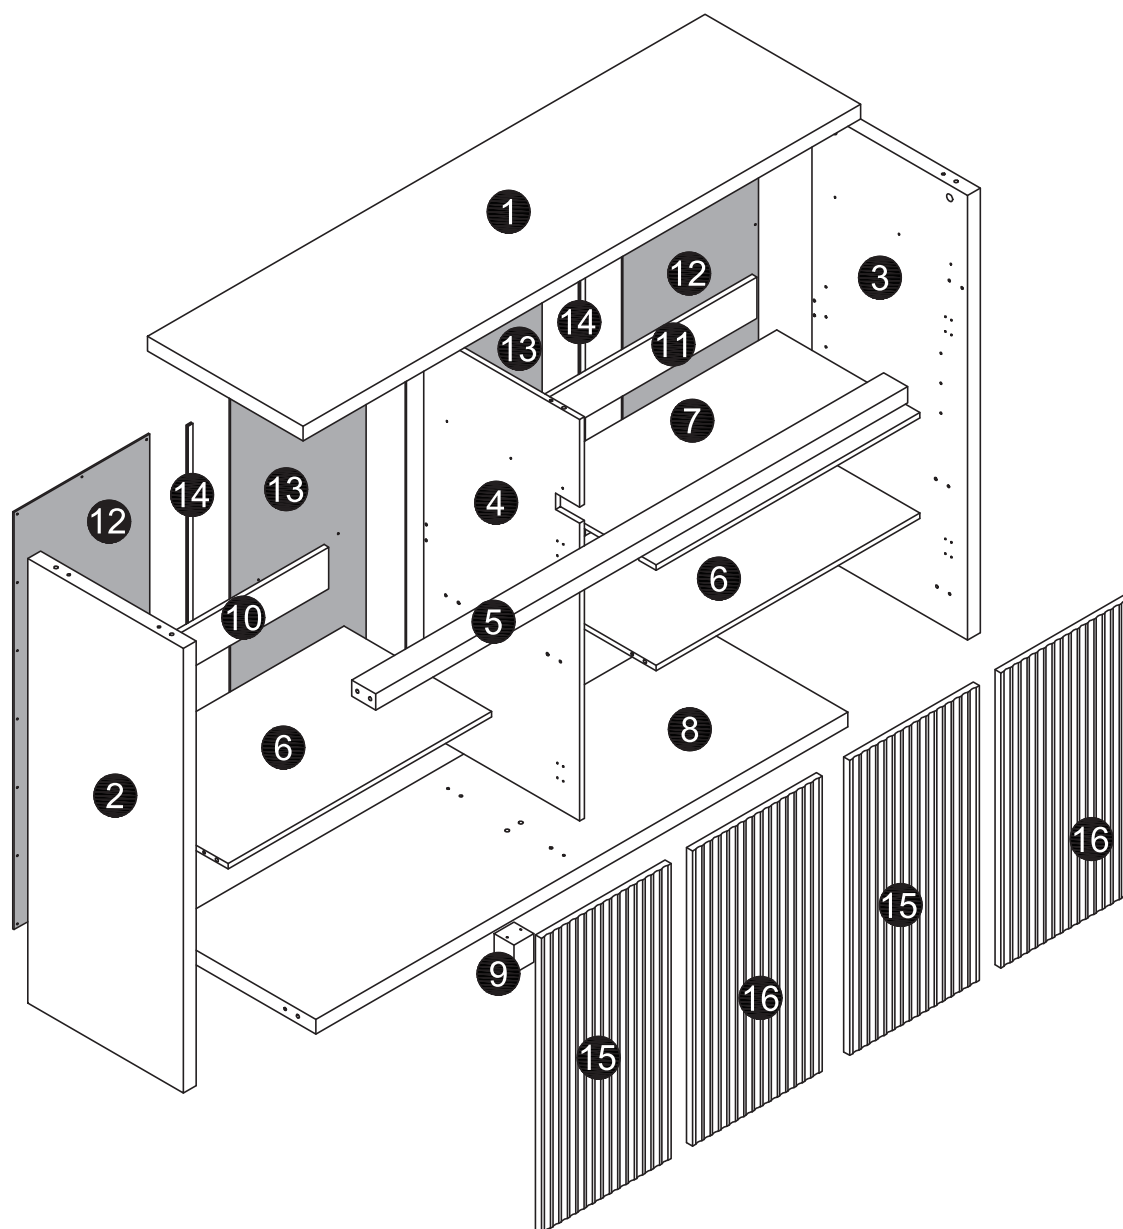

 A x39 Ø6x35mm +3(spare)	 B x39 Ø15x10mm +3(spare)	 C x26 Ø6x30mm +2(spare)	 D x12 Ø4x35mm +1(spare)	 E x88 Ø3.5x12mm +8(spare)	 F x6
 G x4 Ø4x50mm	 H x1	 I x4	 J x8	 K x42 +4(spare)	 L x2 Ø15mm +1(spare)
 M x2	 N x2 Ø4x14mm N-1	 N-2	 O x1		
 CL x2 L350mm	 CR x2 L350mm	 DL x2 L350mm	 DR x2 L350mm		

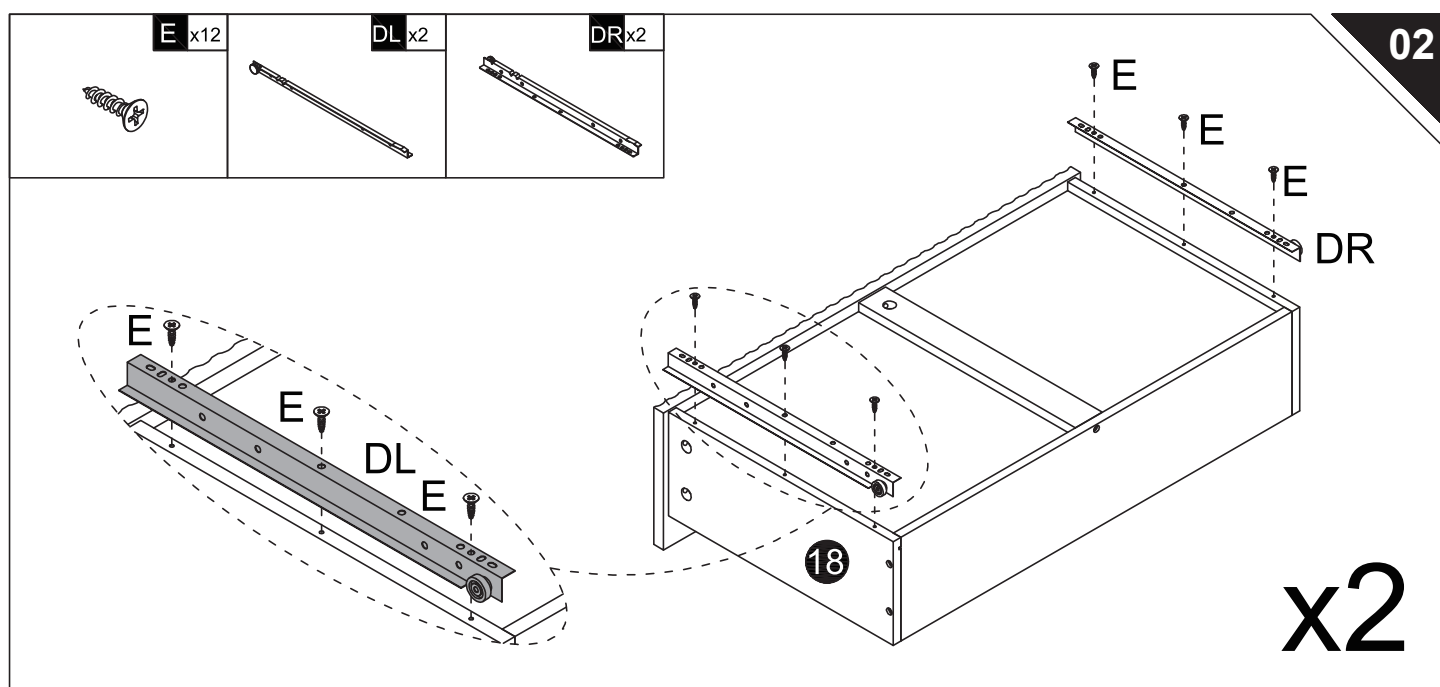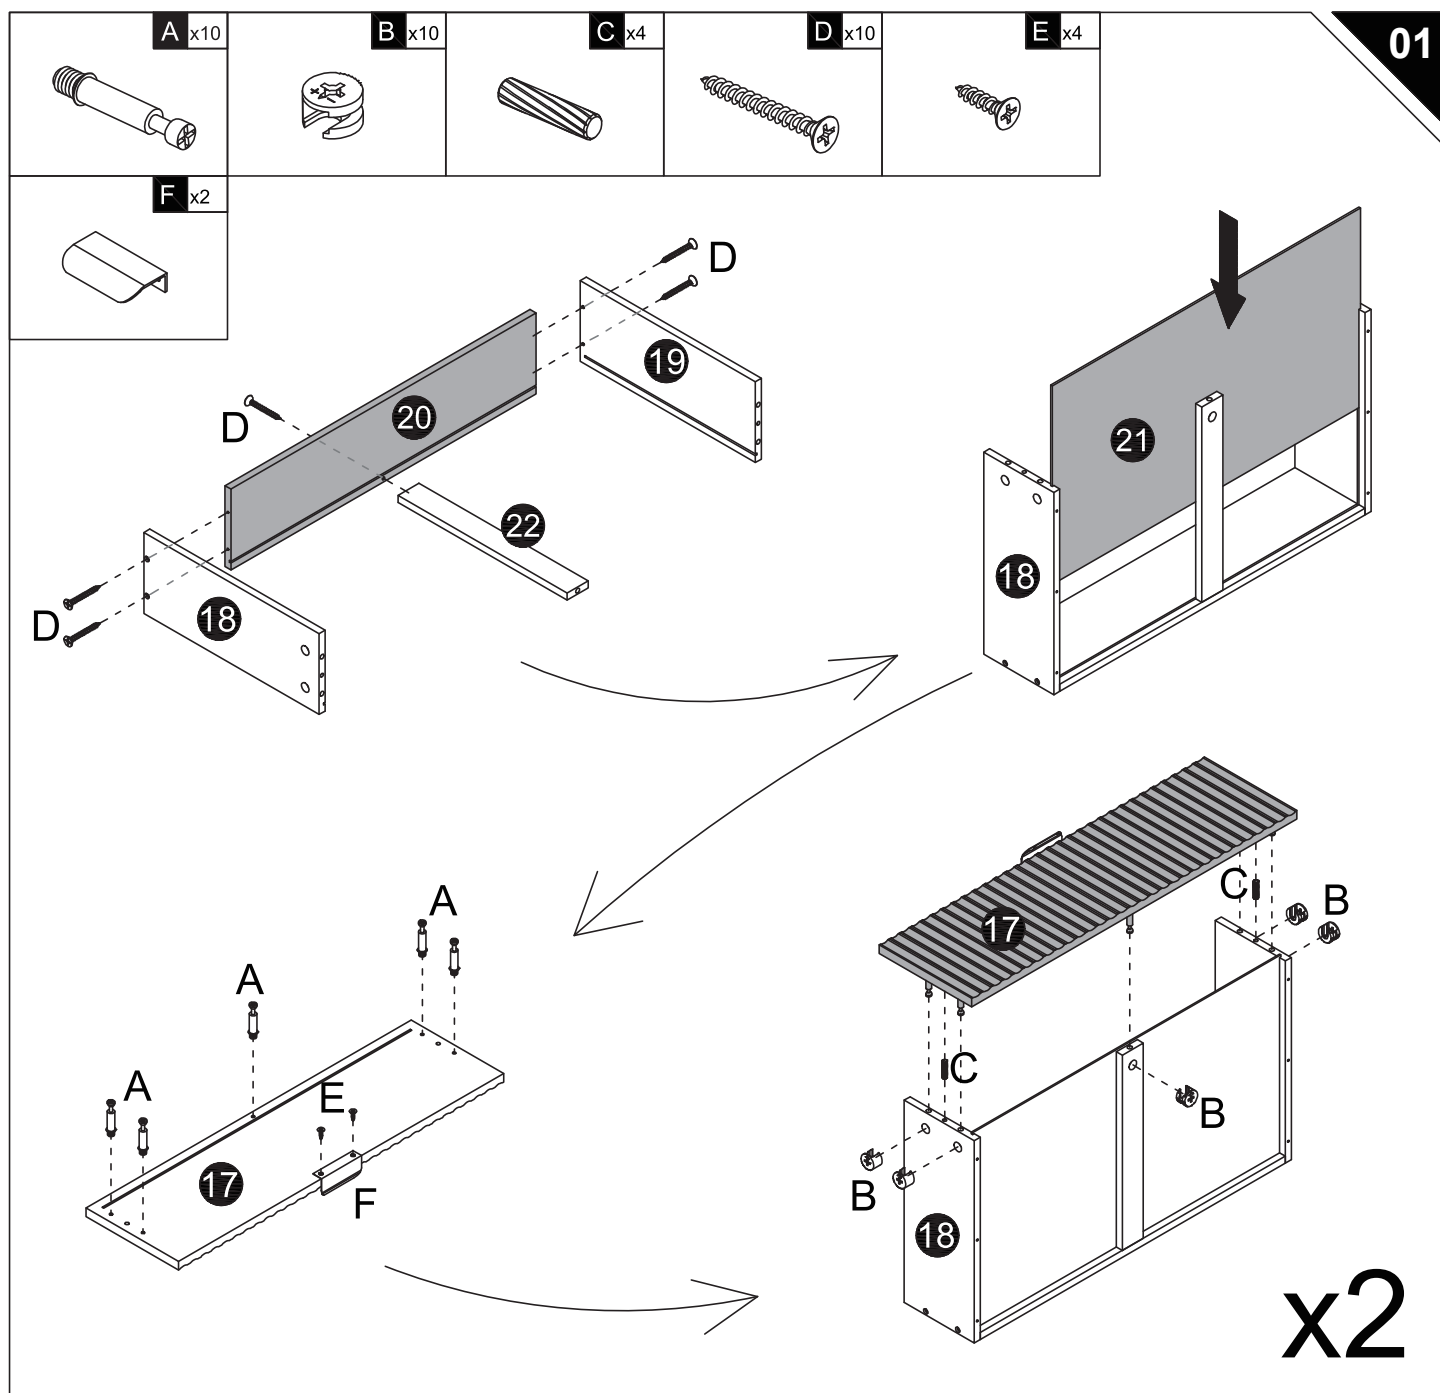

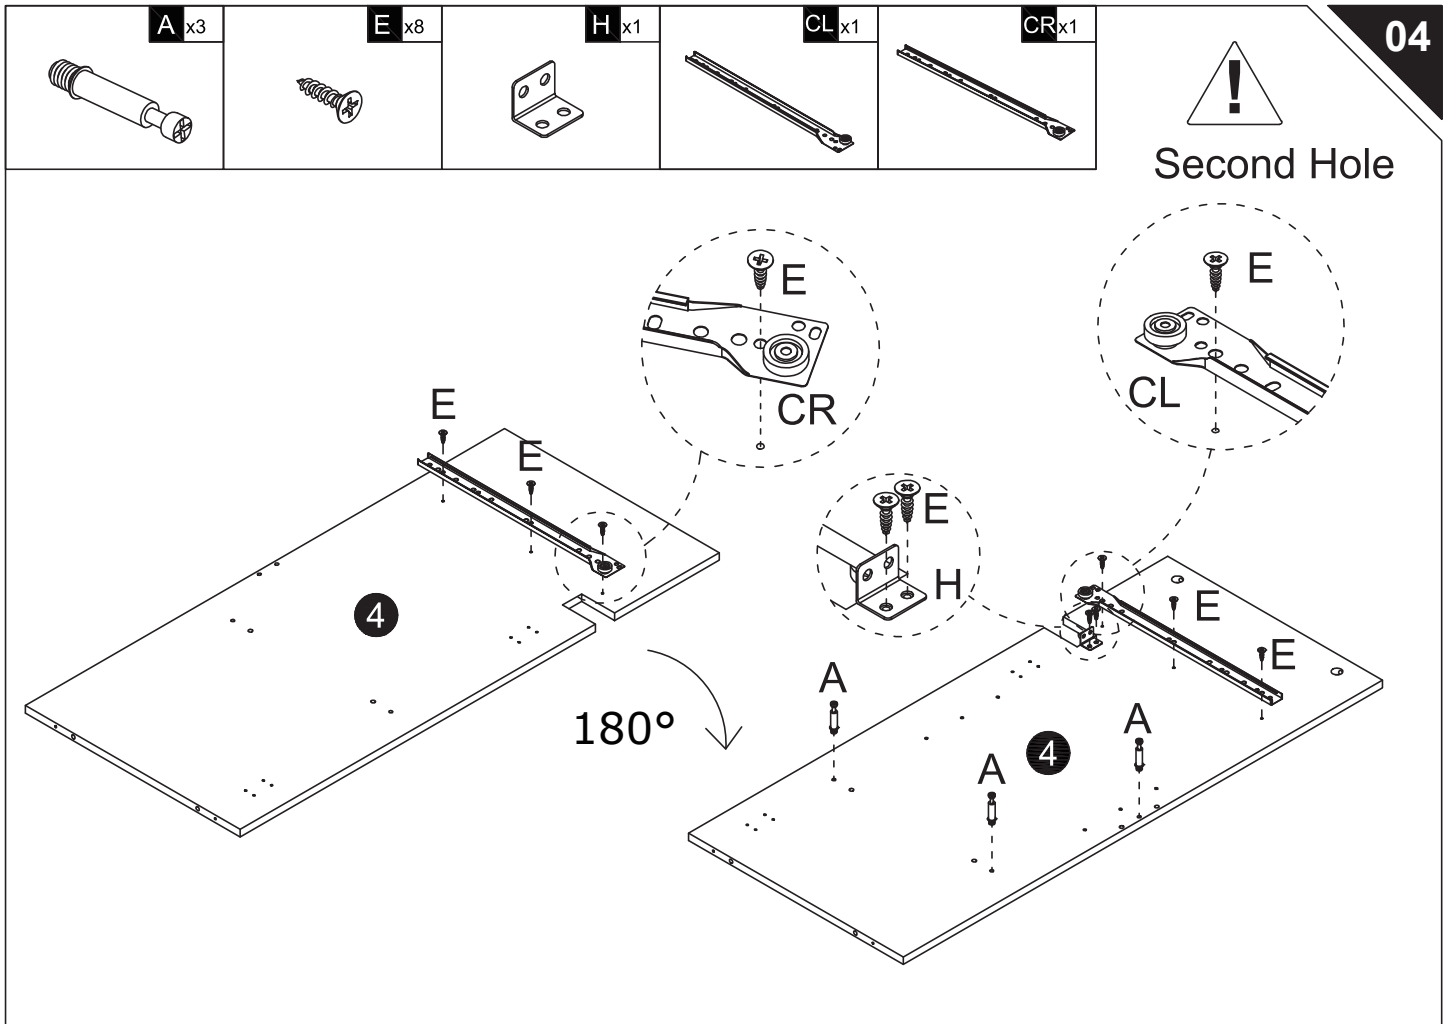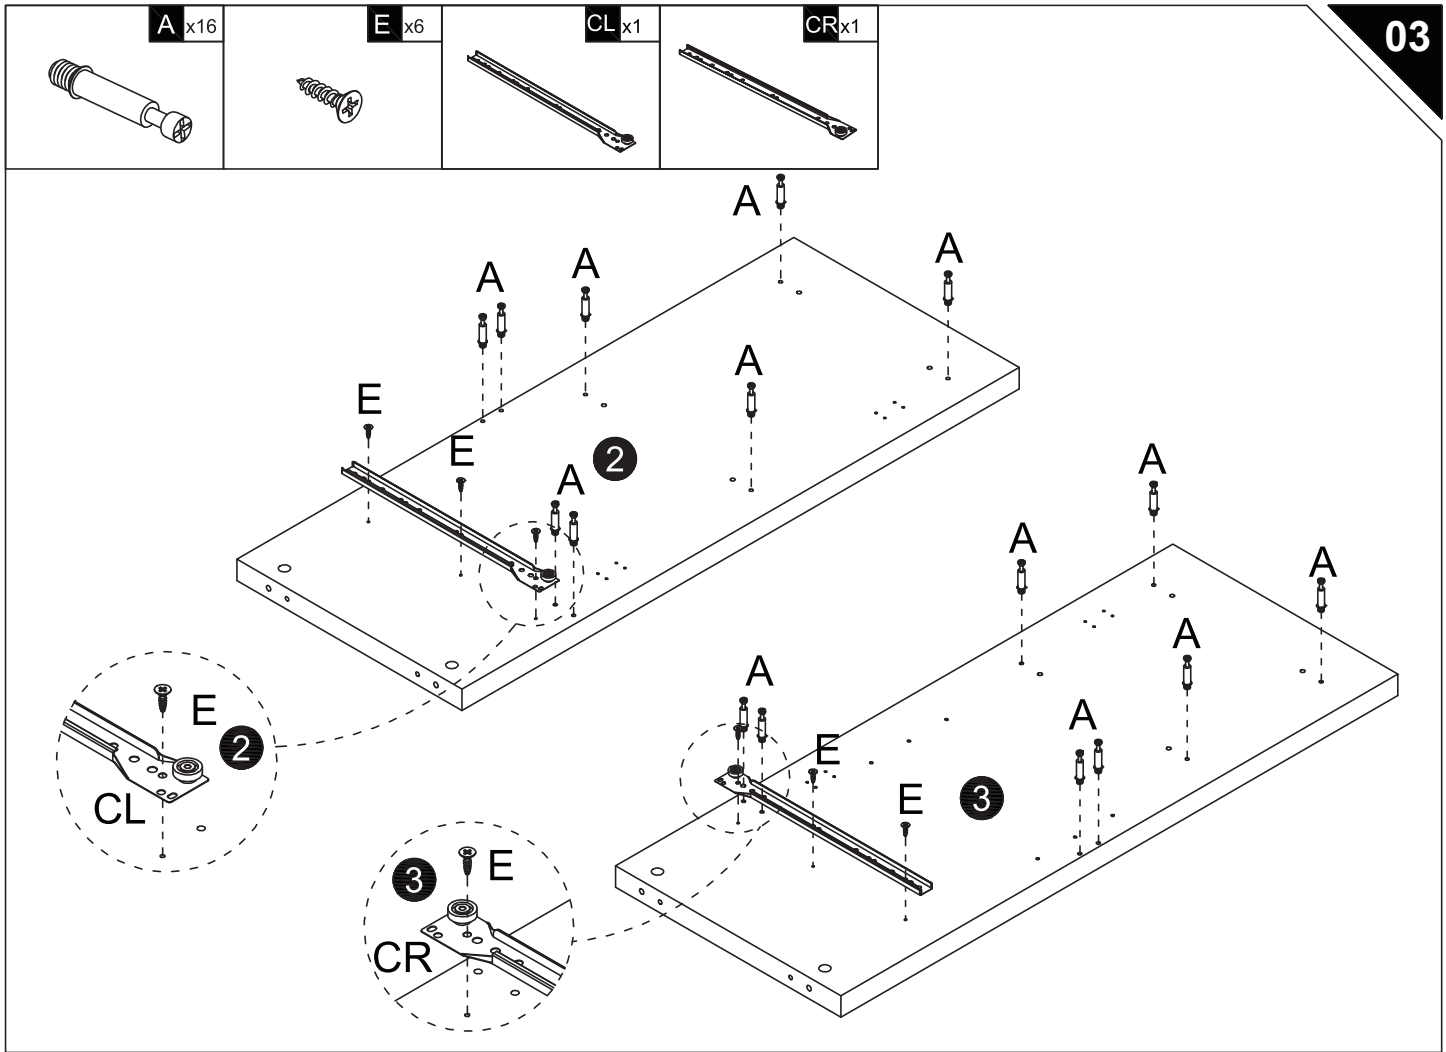


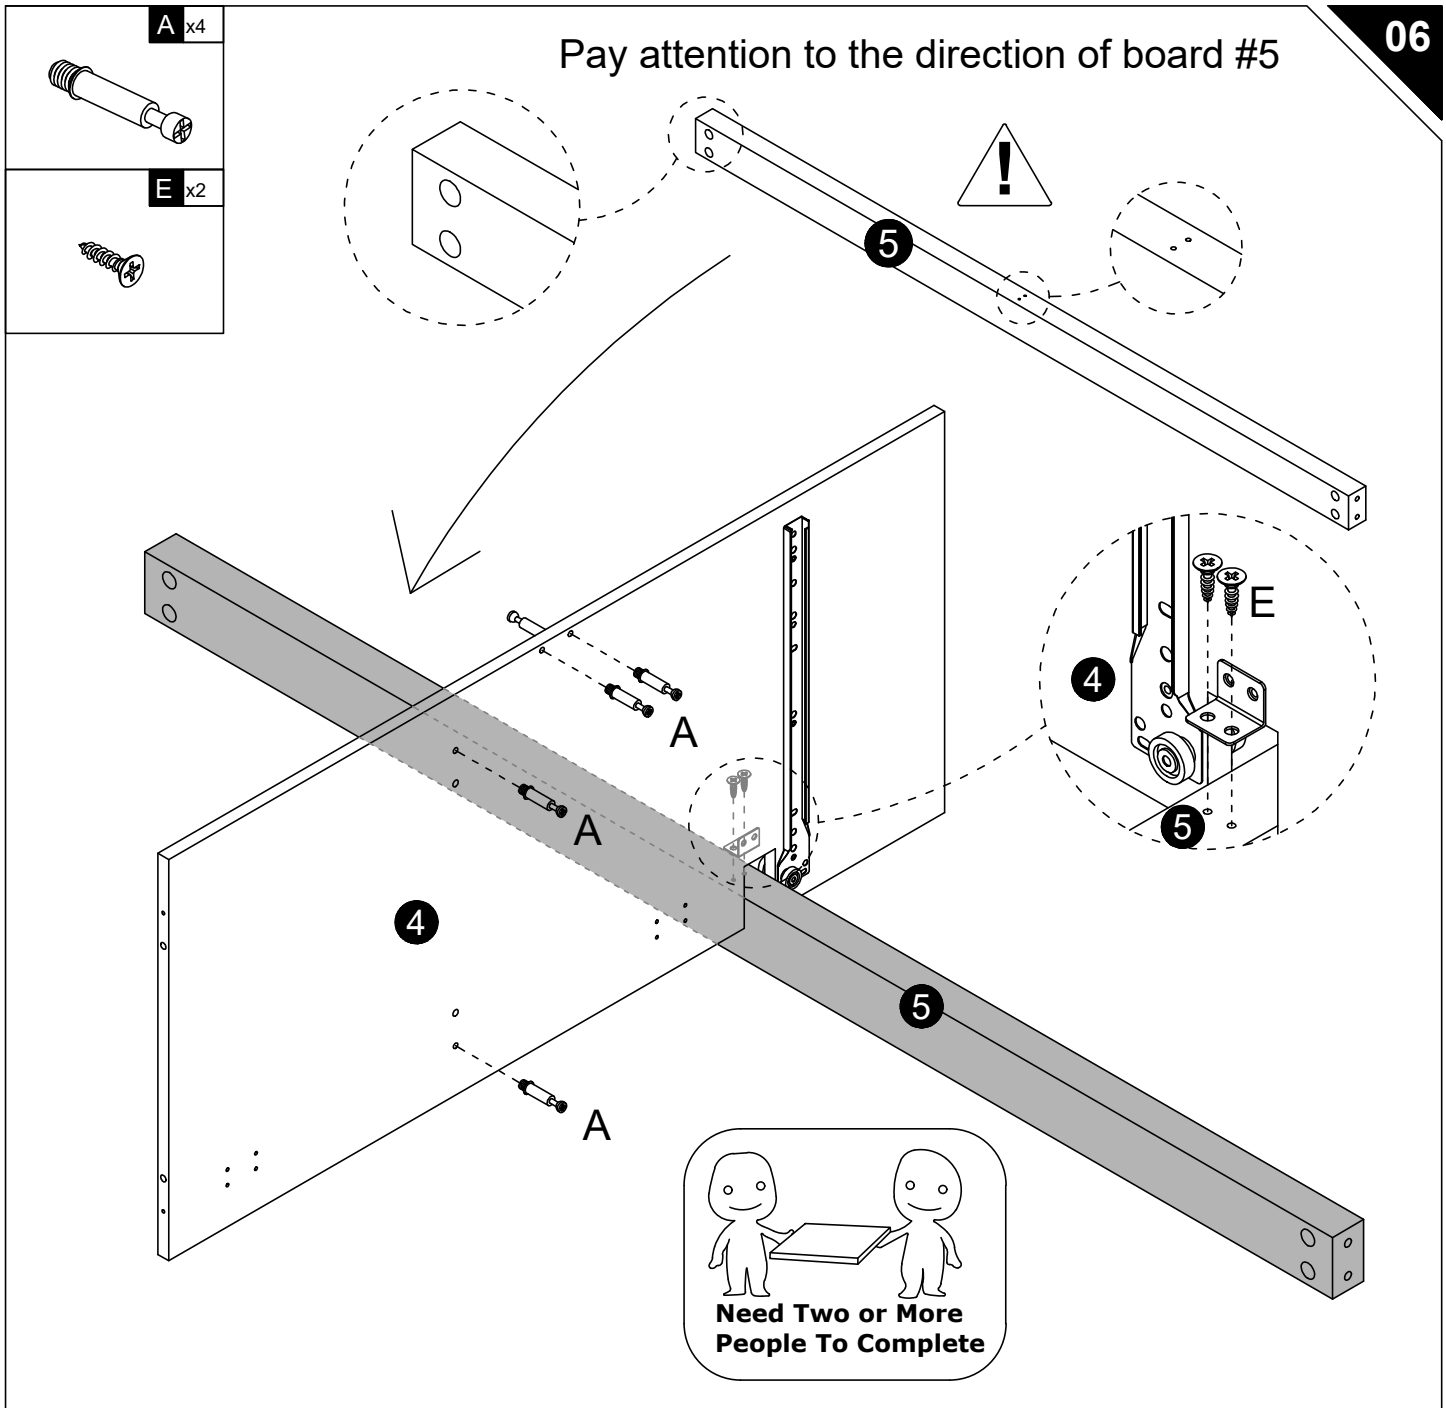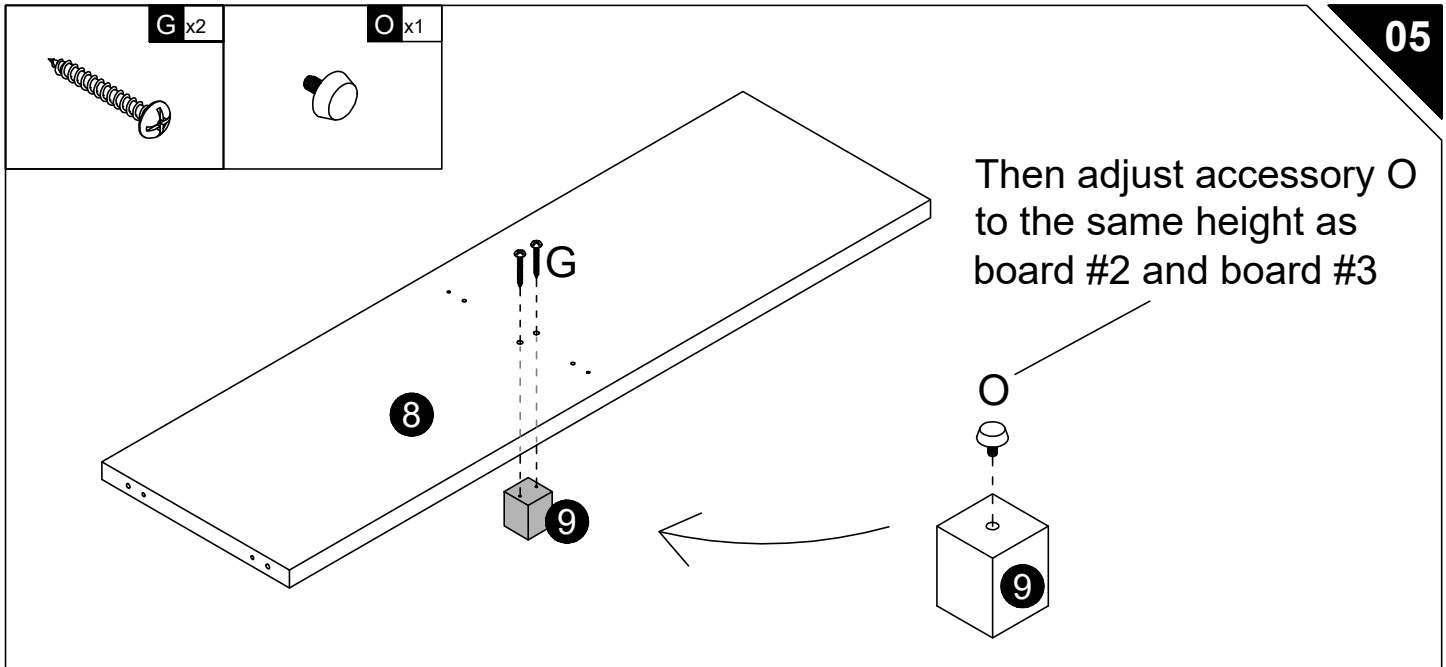

B x4





C x4

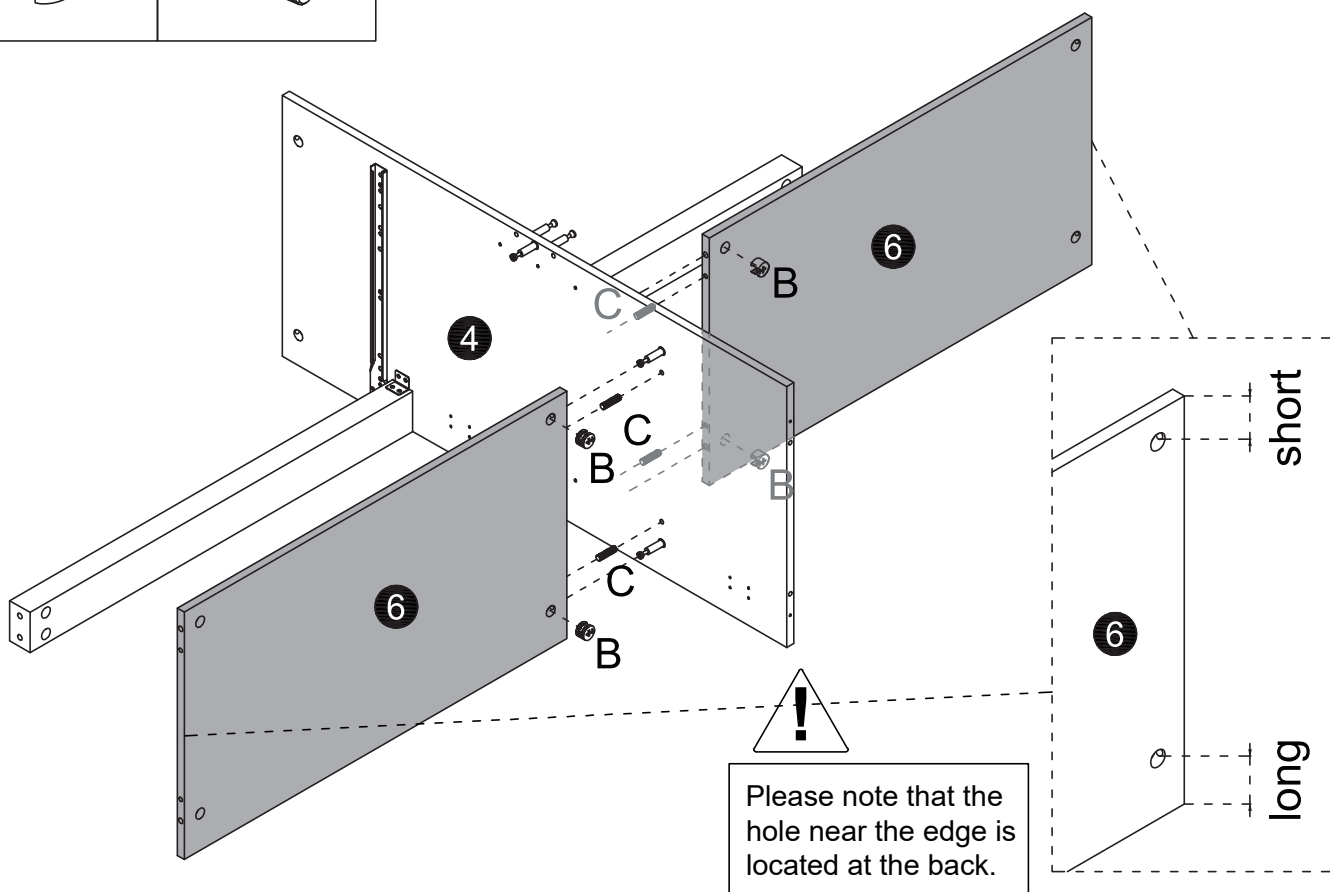

C x2




G x2

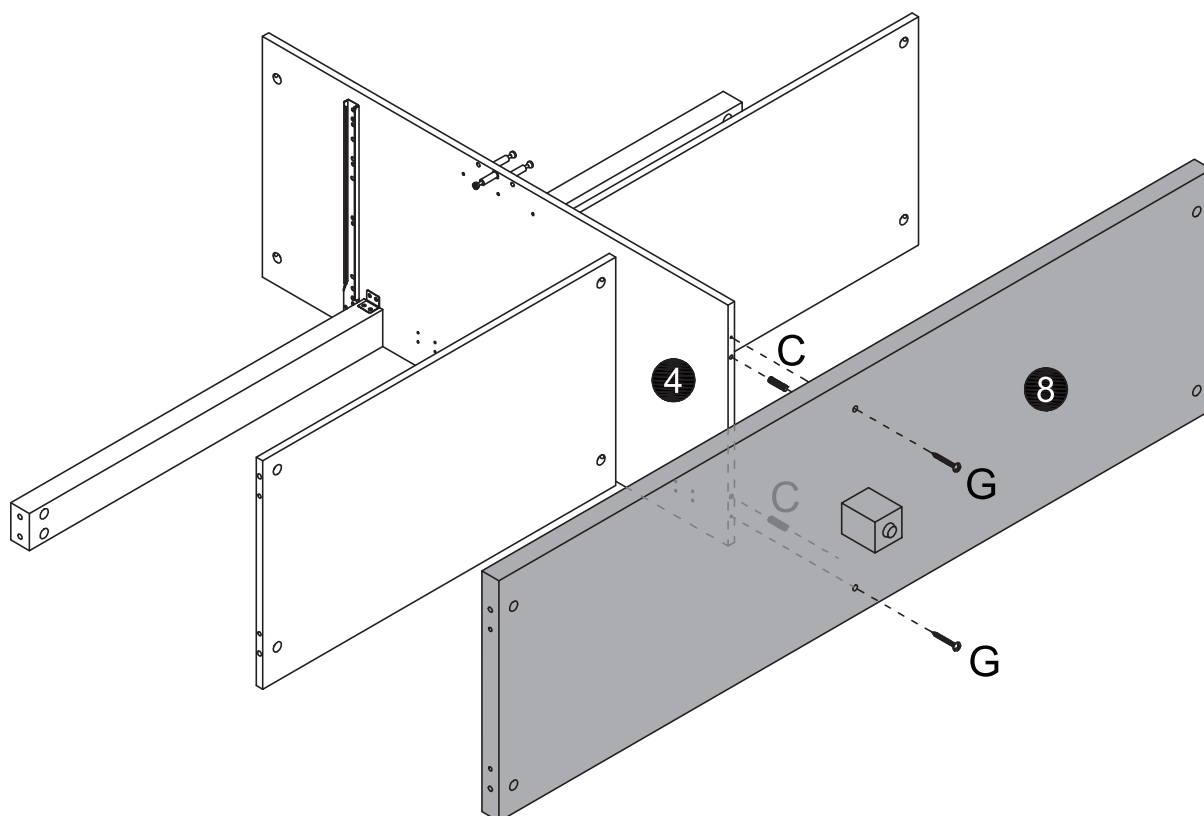

B x9

C x6


09

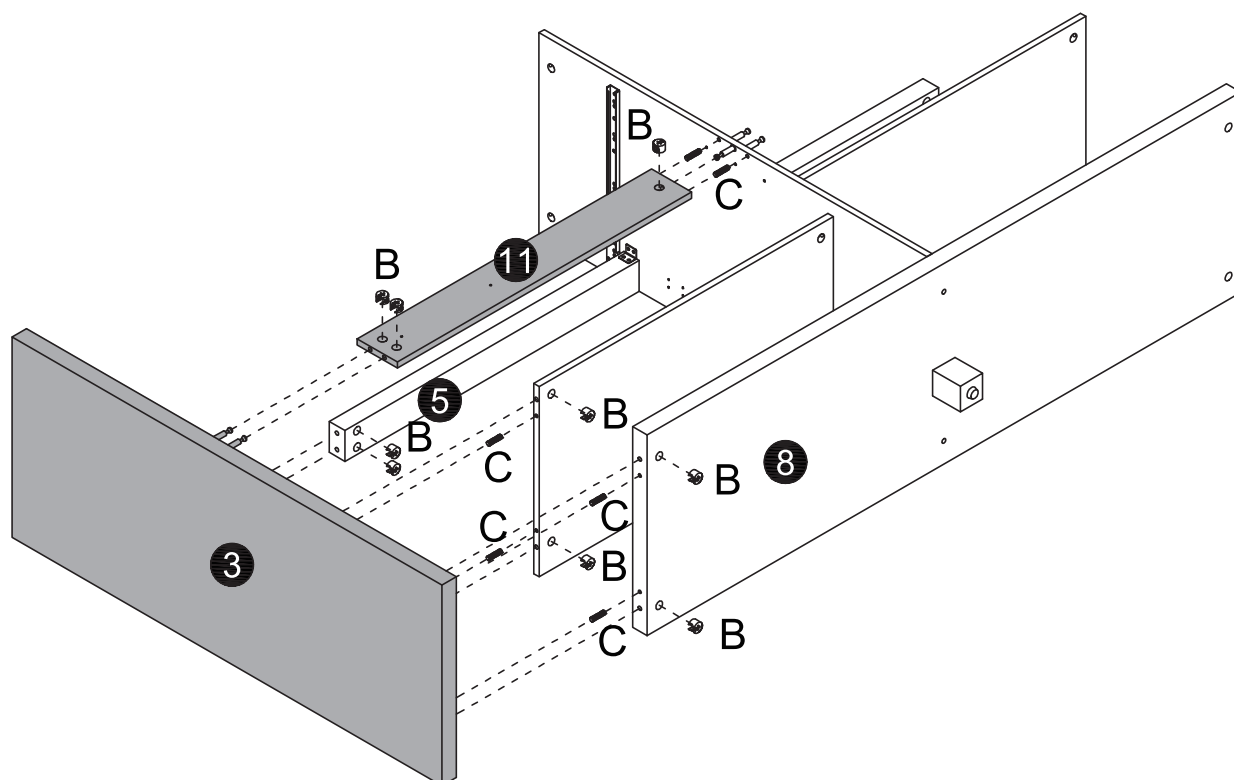


B x10

C x6


10

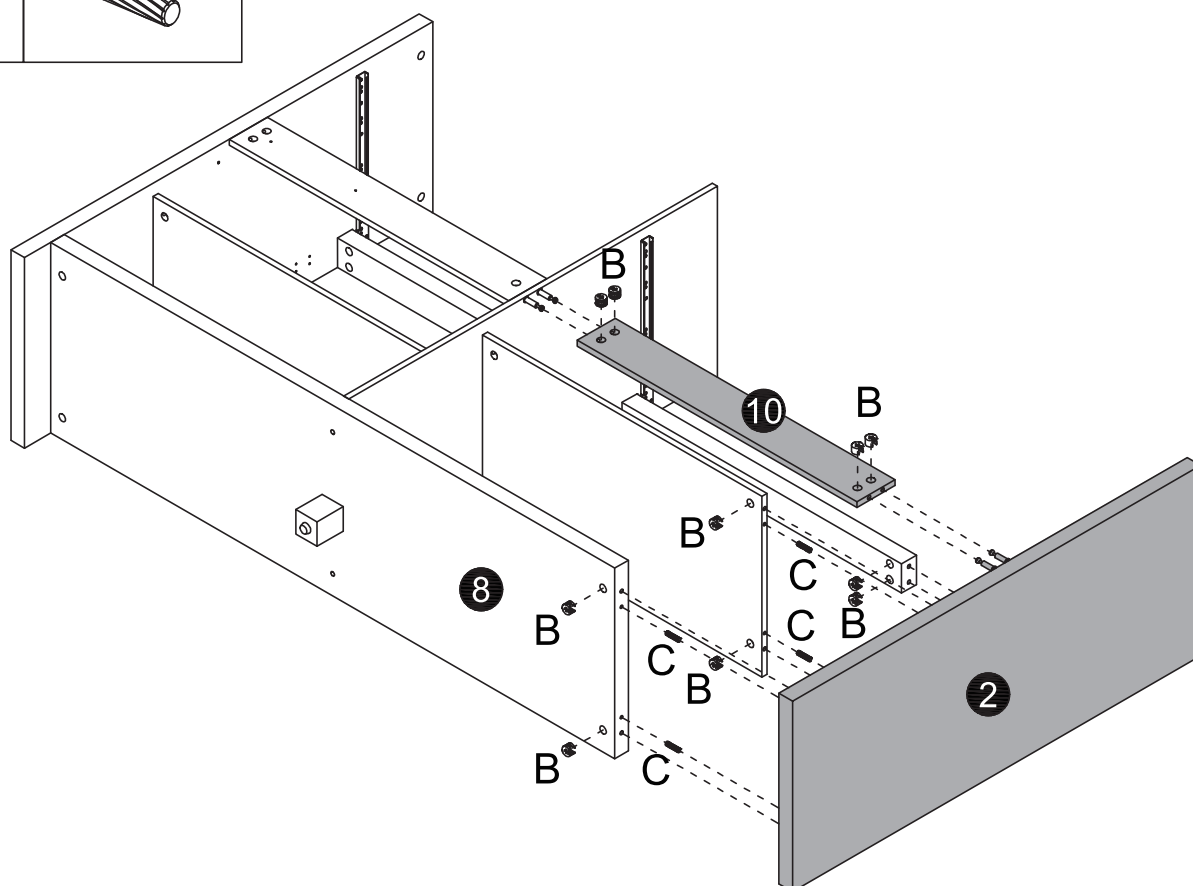

A x6



11

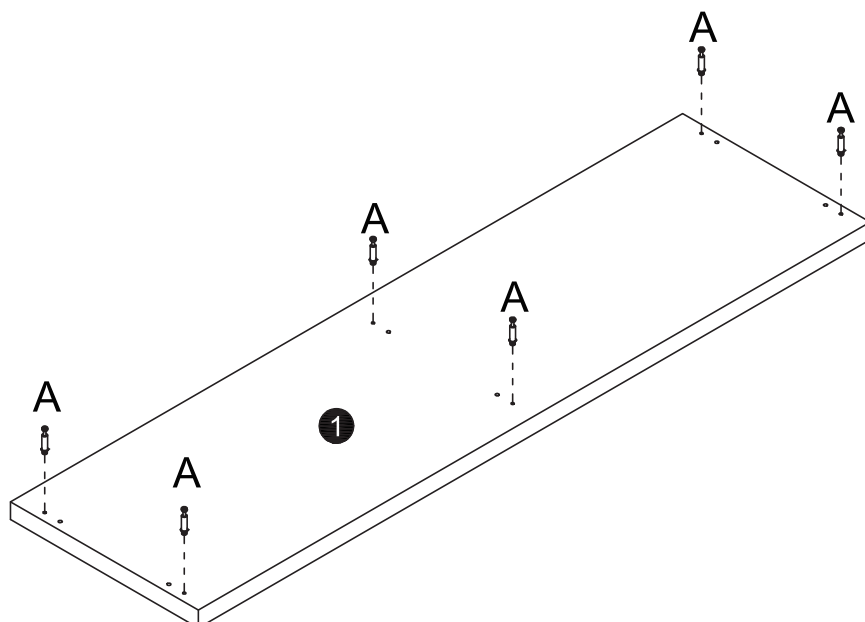


B x6



C x6



12

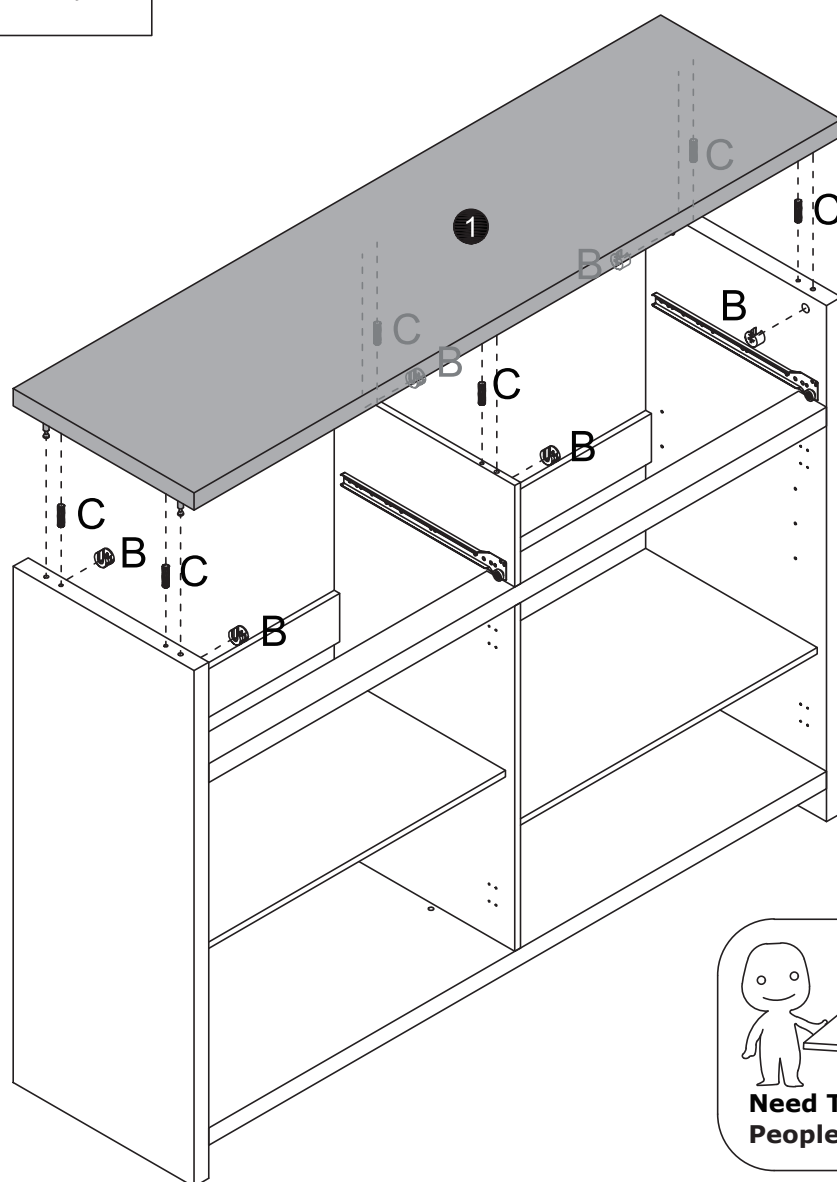


K x40








This is the hole for installing anti tipping straps.

First, fix the two holes in the middle. Then, arrange the rest neatly along the line formed by those two holes and finally lock them. That is to say, these two holes serve as positioning holes and should be fixed first.

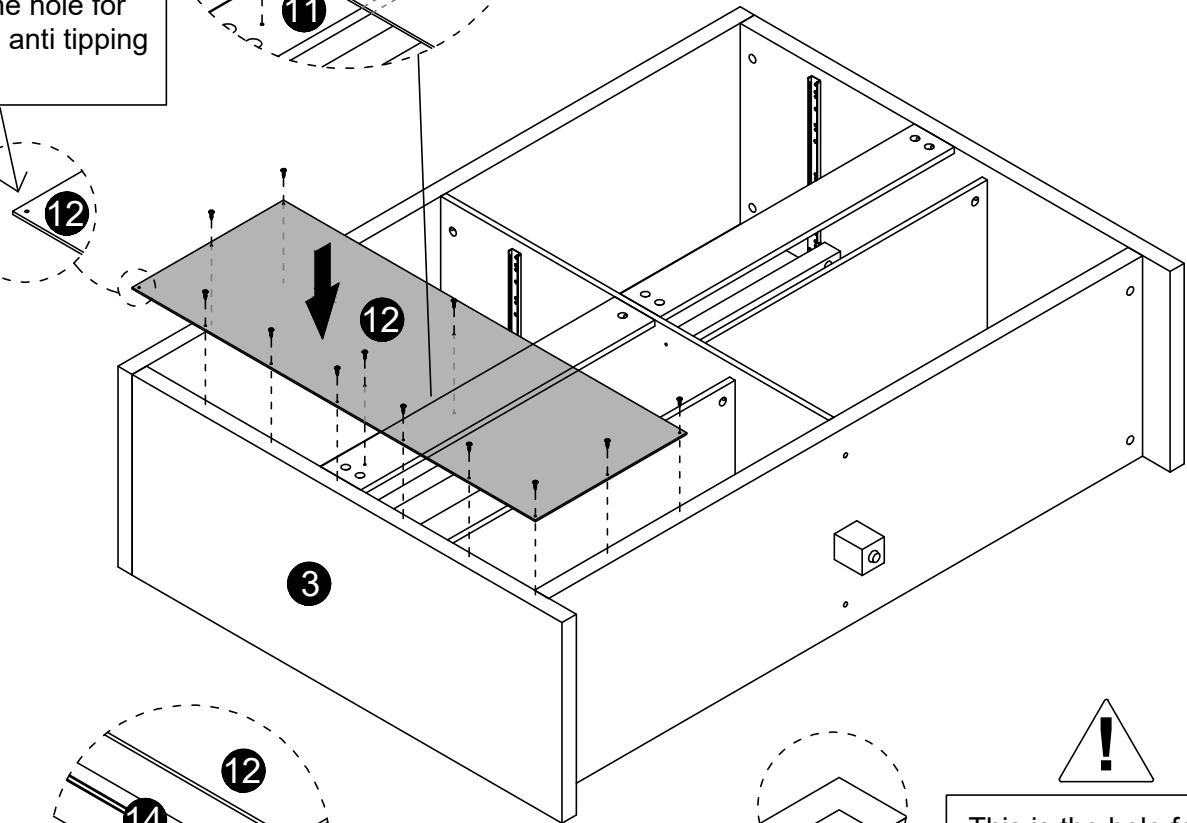

This is the hole for installing anti tipping straps.

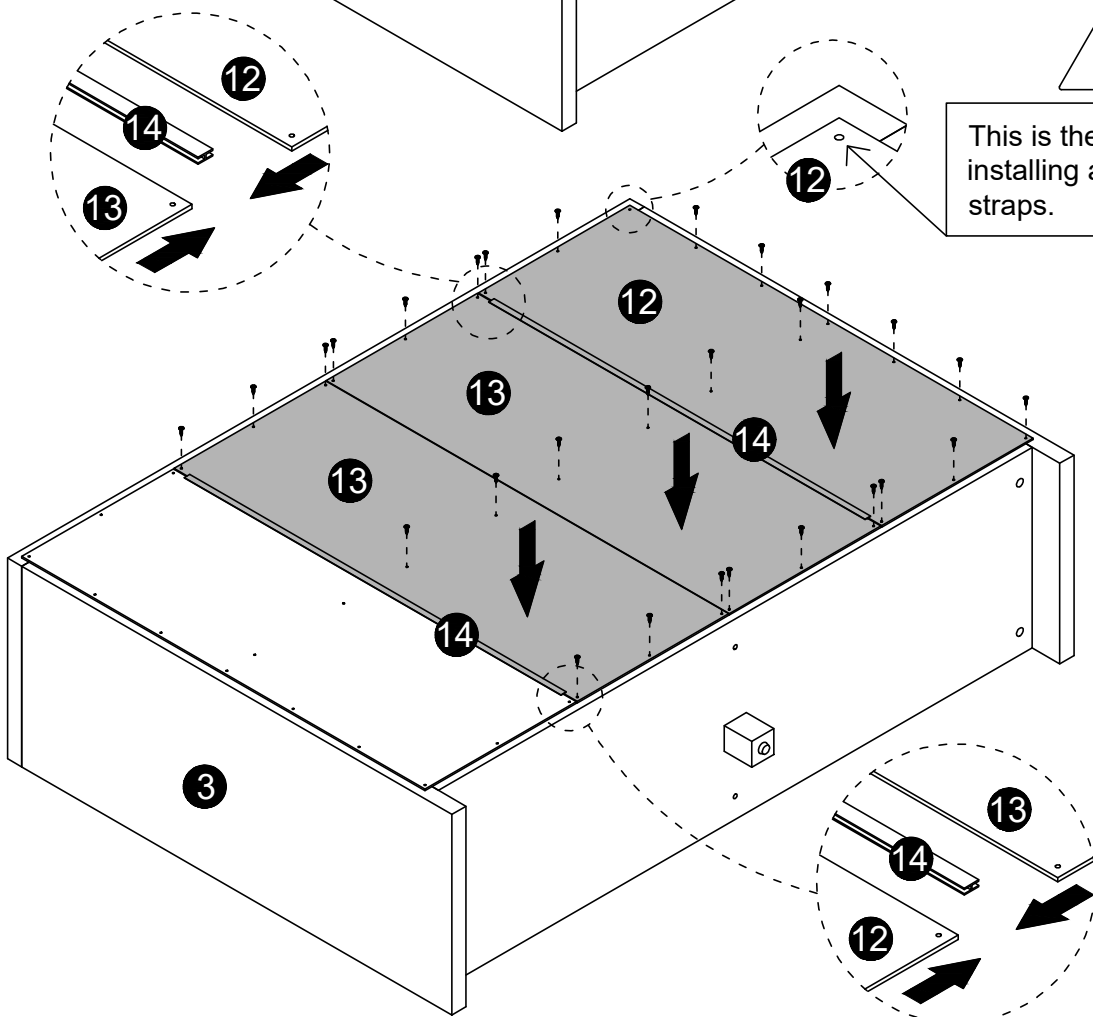


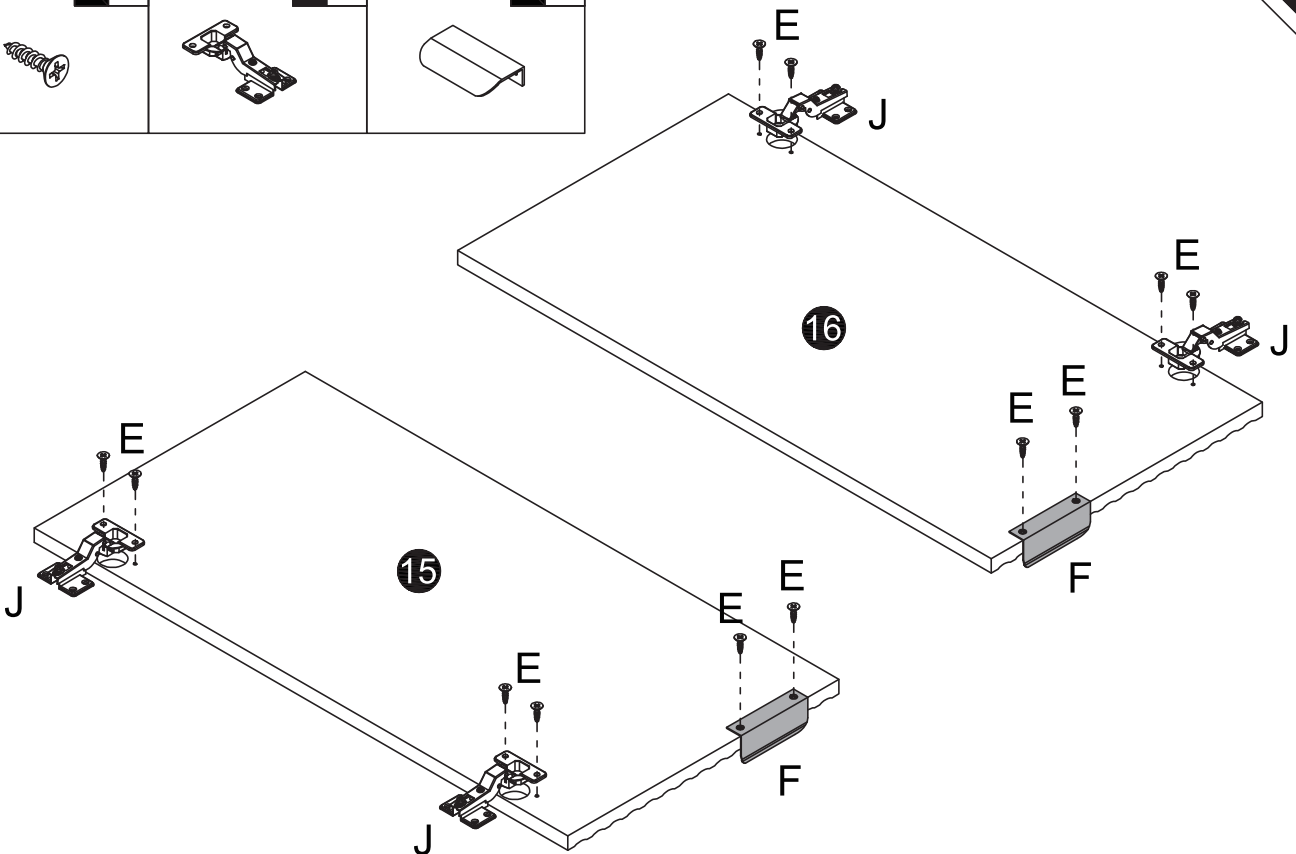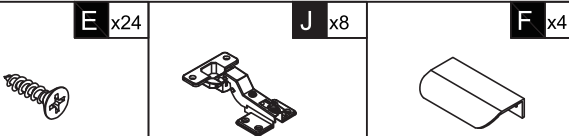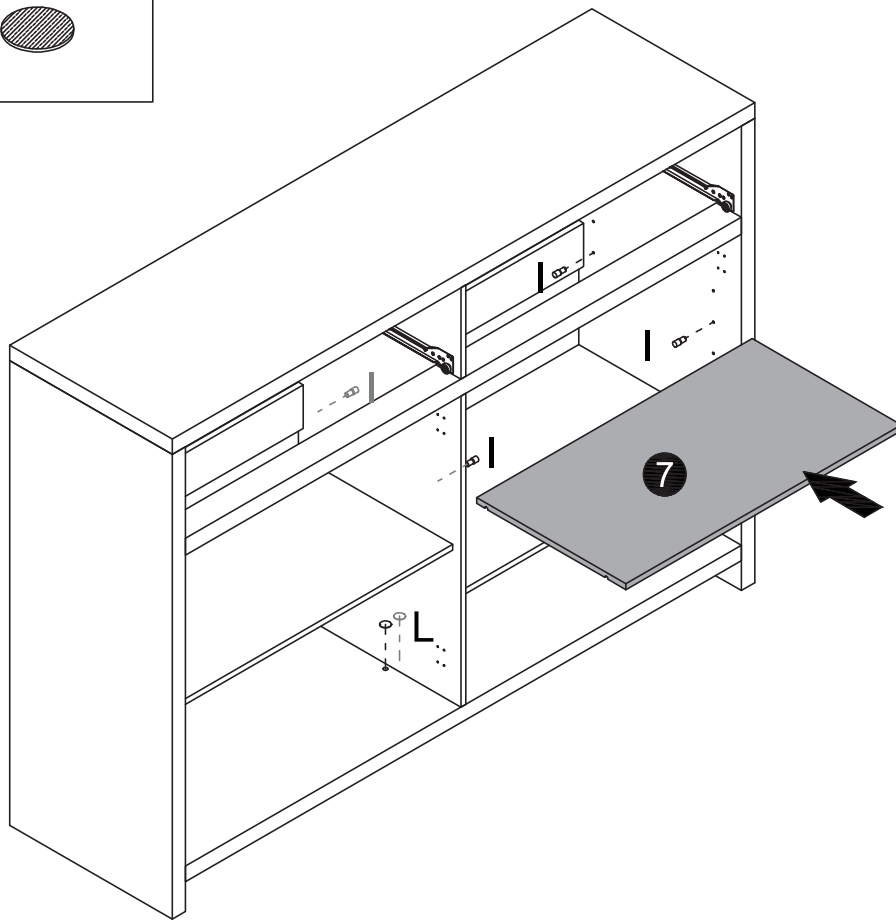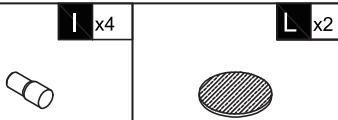

x2


E x16




16

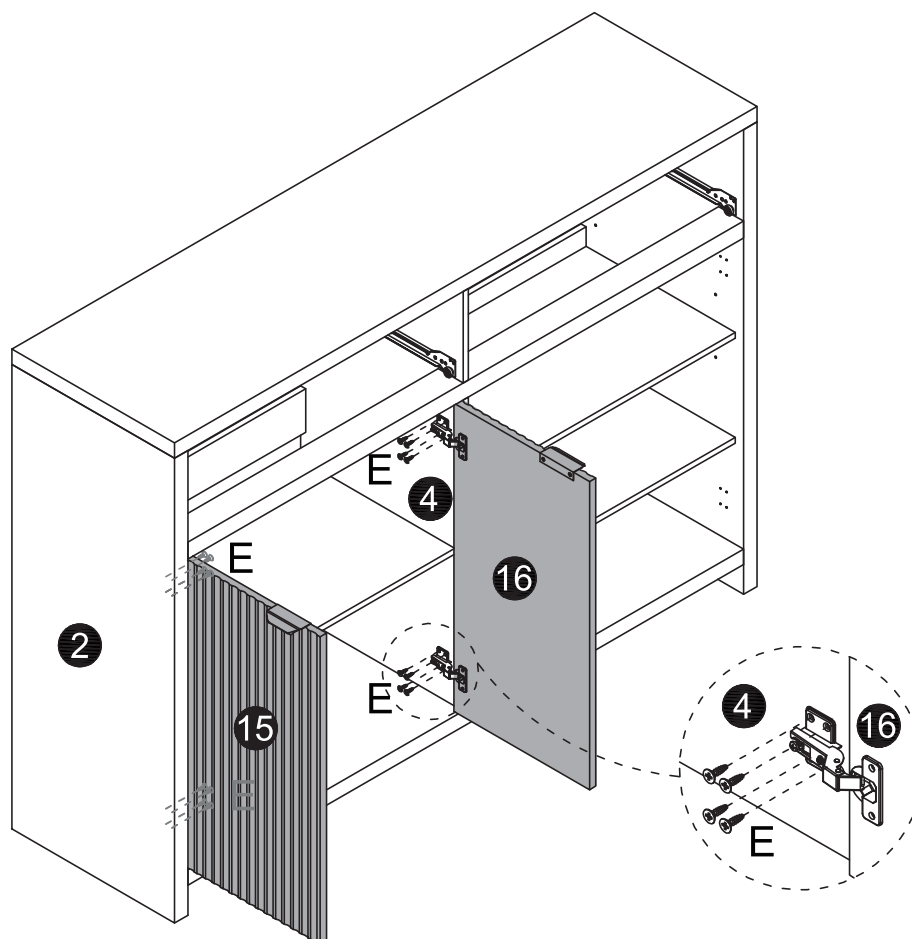

E x16


17

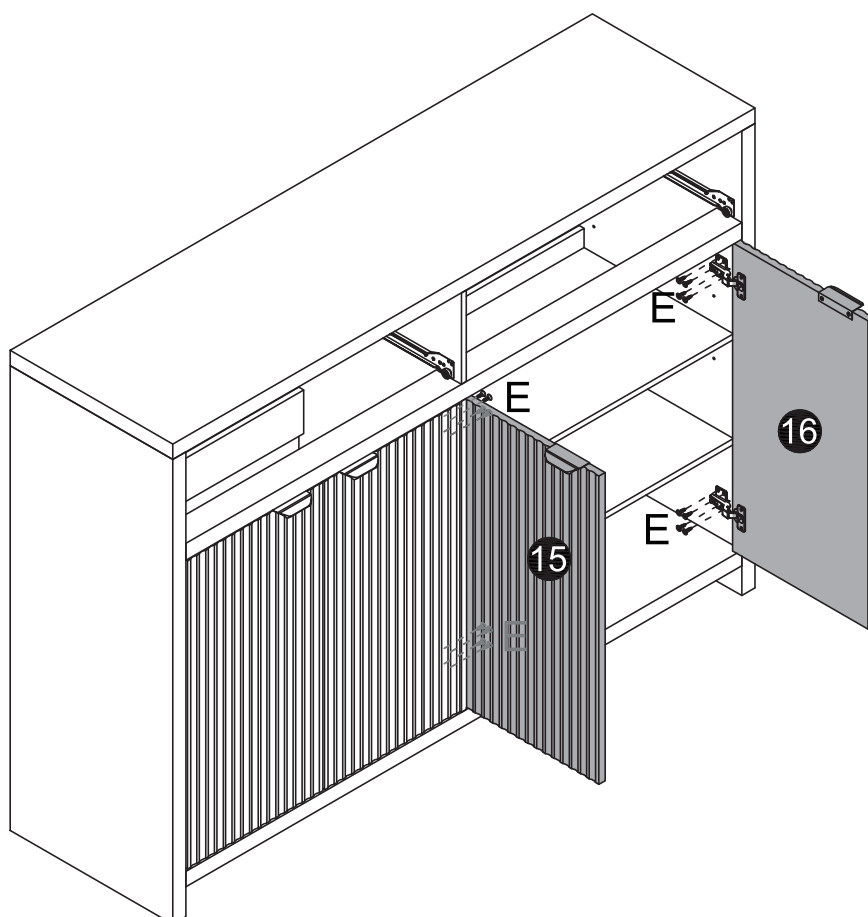

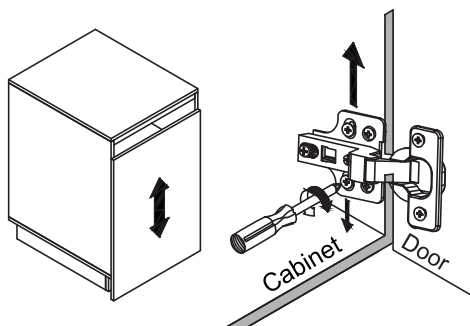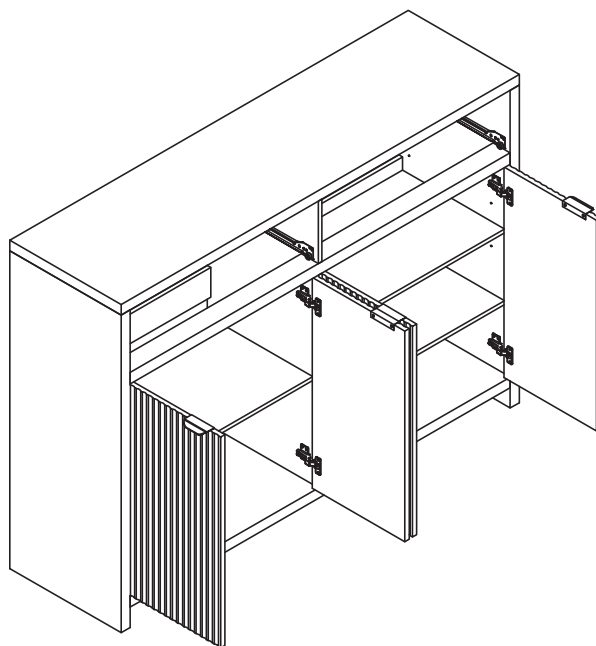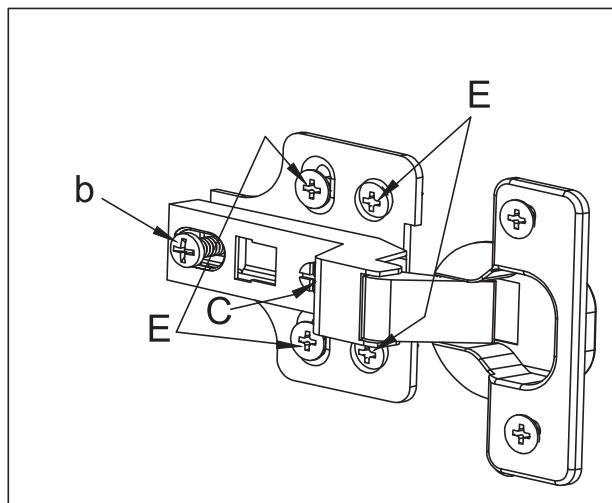


To adjust the vertical height.

Loosen the four screws "E" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

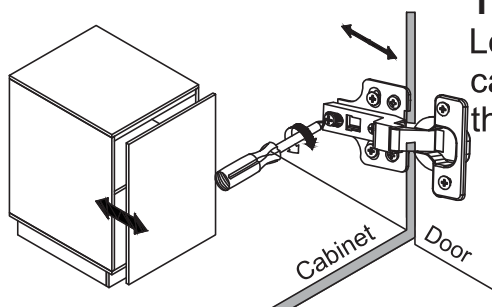



To adjust depth.

Loosen screw "b" and adjust door, if the door can not be adjusted, please loosen screw "c", then try again. Tighten screw "b" and "c".

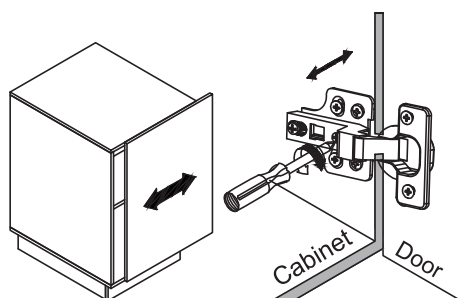


To adjust side ways.


Turning the screw "c" on BOTH hinges on each door.

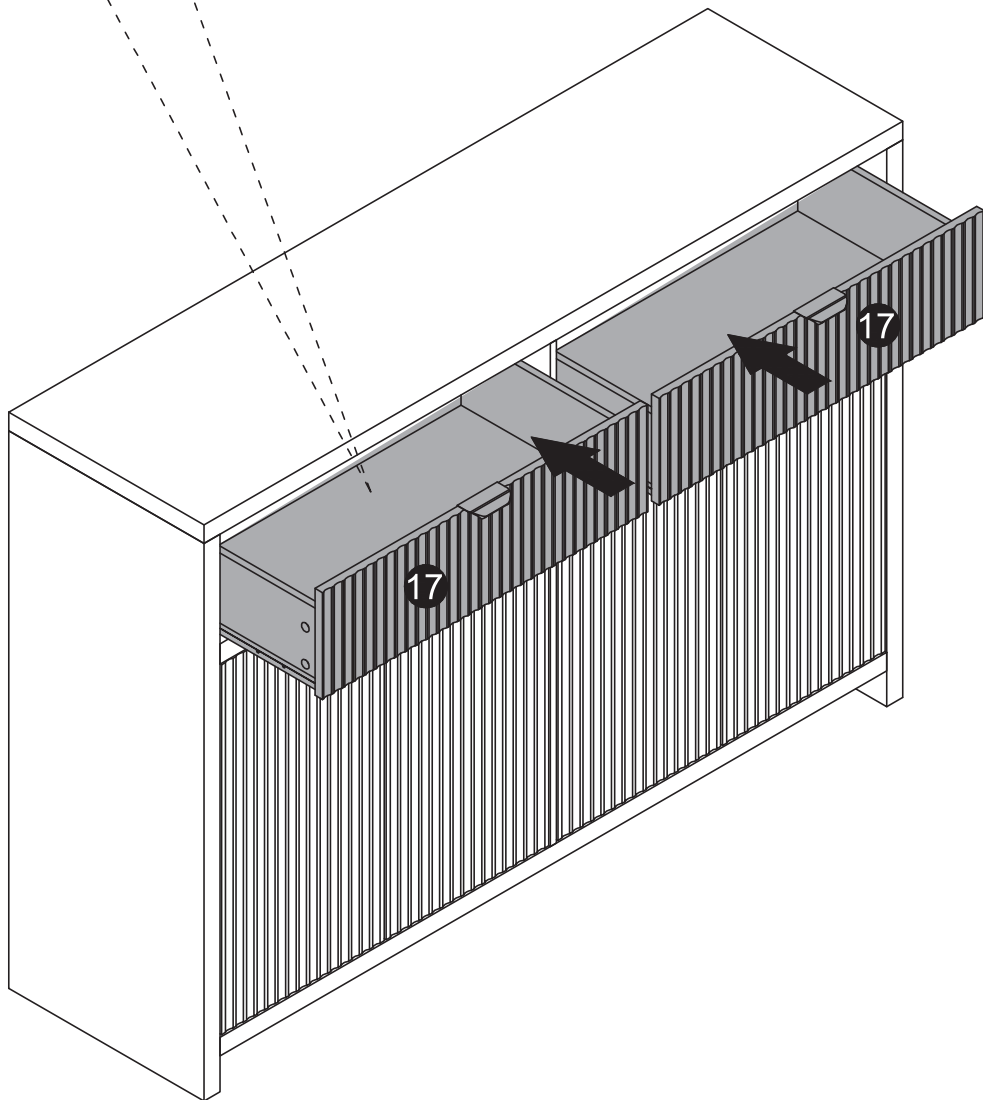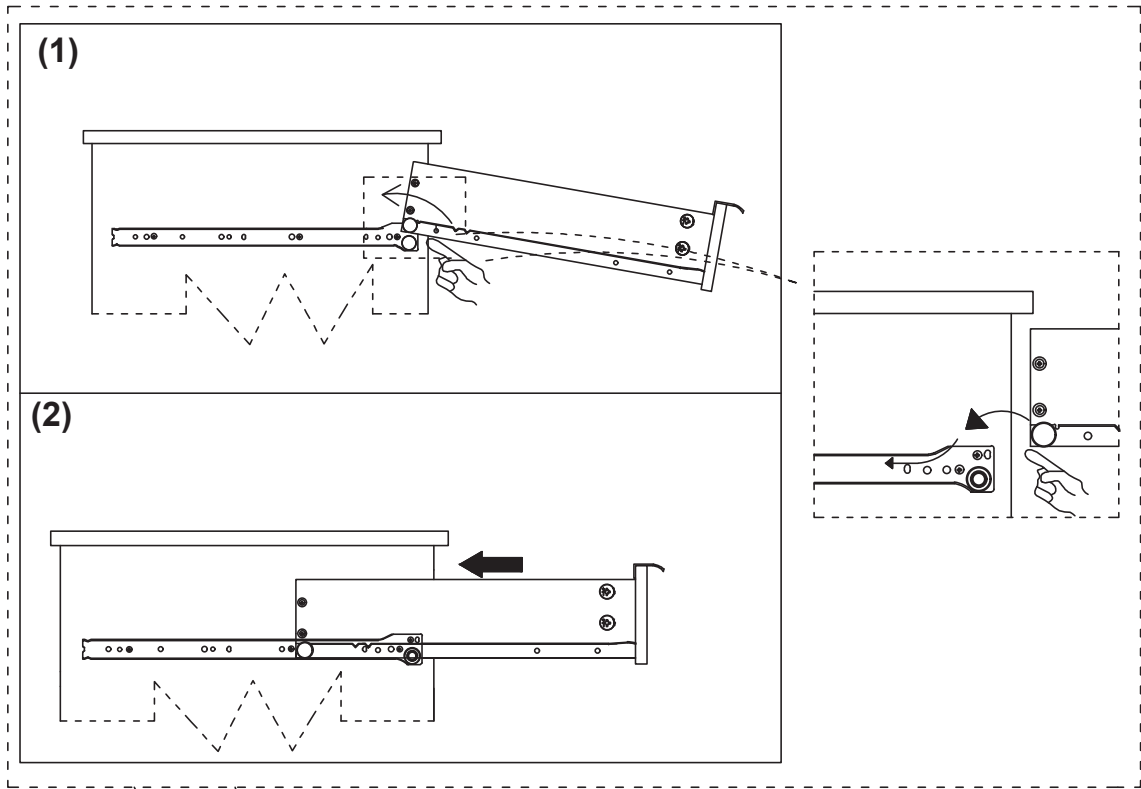

D x2



M x2




N x2




N-1

N-2

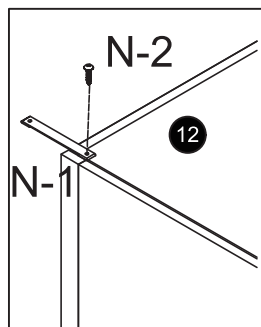


First fix the anti-rewind screw in the reserved hole of the product.

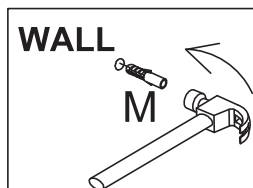


Then, put the expansion bolt into the hole

(4)x2

WALL

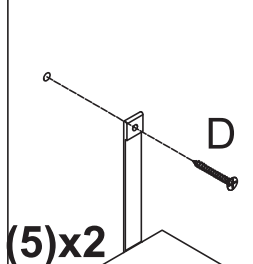


Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

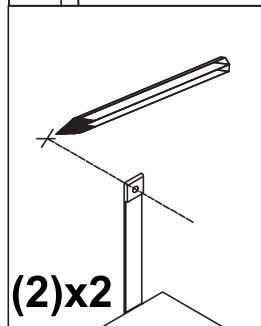

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

(2)x2

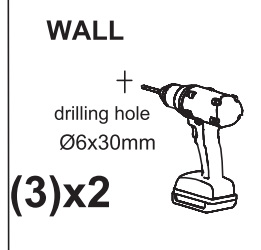

Then use a tape drill to make holes in the wall that are suitable for the product screws.

(3)x2

