
VANITY TABLE

SVV-W, SVV-B, SVV-W-L, SVV-B-L, SVV-W-LS, SVV-B-LS INSTALLATION MANUAL

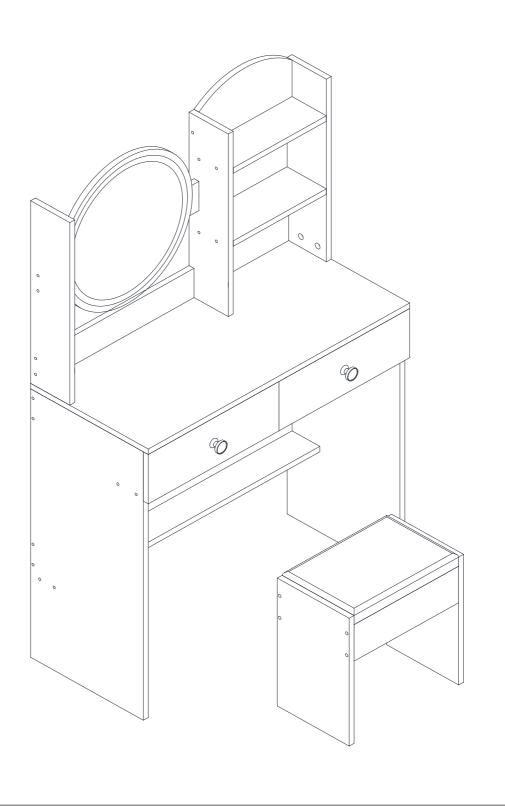





Please scan the code to obtain the installation vide o before assembly

Mirror light installation and adjustment video

This is the unified installation manual for the SVV dressing table, suitable for three versions: simple, basic, and luxury.

Simple version: There is no mirror light, built-in socket or hair dryer stand function. So there is no mirror light power plug, built-in socket or hairdryer bracket in the accessories.

Basic version: With mirror light function, without built-in socket or hair dryer stand function. Therefore, there is no built-in socket or hair dryer bracket in the accessories.

Luxury version: With mirror light, built-in socket, and hair dryer stand function.


Also note that:

1, Screw L is a drawer positioning pin that prevents the drawer from falling off when open. After installation, please confirm that all positioning screws L have been installed.







2, For luxury version, part 12 has rectangular hole for installing build-in socket, and part 3 has mirror light; For basic version, part 12 does not have rectangular hole for installing socket, but part 12 has mirror light; For simple version, part 12 does not have rectangular hole for installing build-in socket, part 31 does not have mirror light.

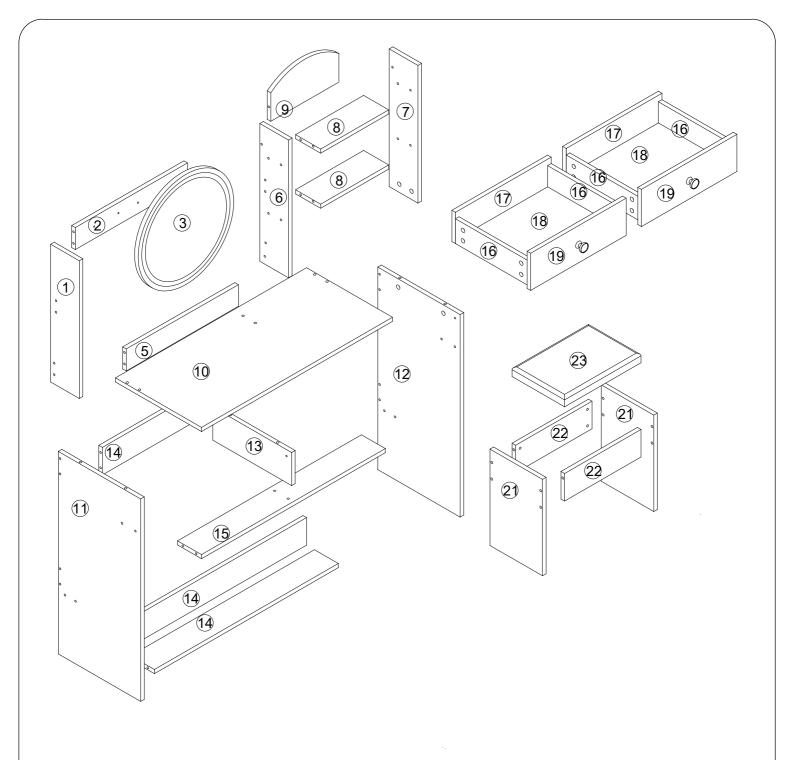



- x	8 - x2	15 - xI	22 - X2
2 - XI	9 - XI	16 - x4	23 - XI
3 - XI	10 - XI	17 - x2	
	II - XI	18 - x2	
5 - xI	12 - XI	19 - x2	
6 - XI	13 - XI		
7 - xI	14 - x3	21 - x2	

Before installation, please use an erasable marker to write the corresponding numbers on each board according to the numbers in the figure below, and arrange all boards according to the method shown in the figure.

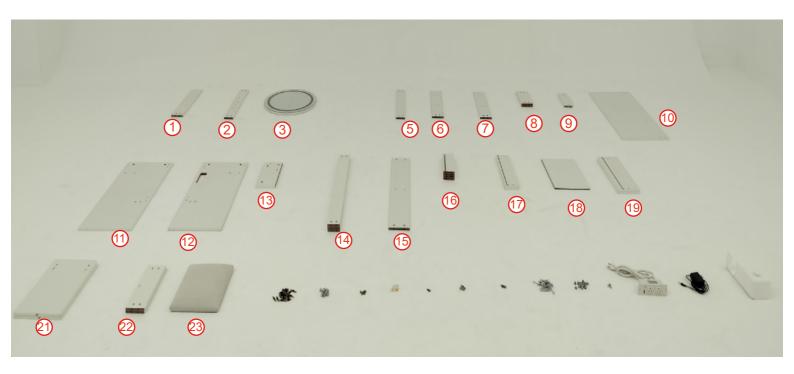

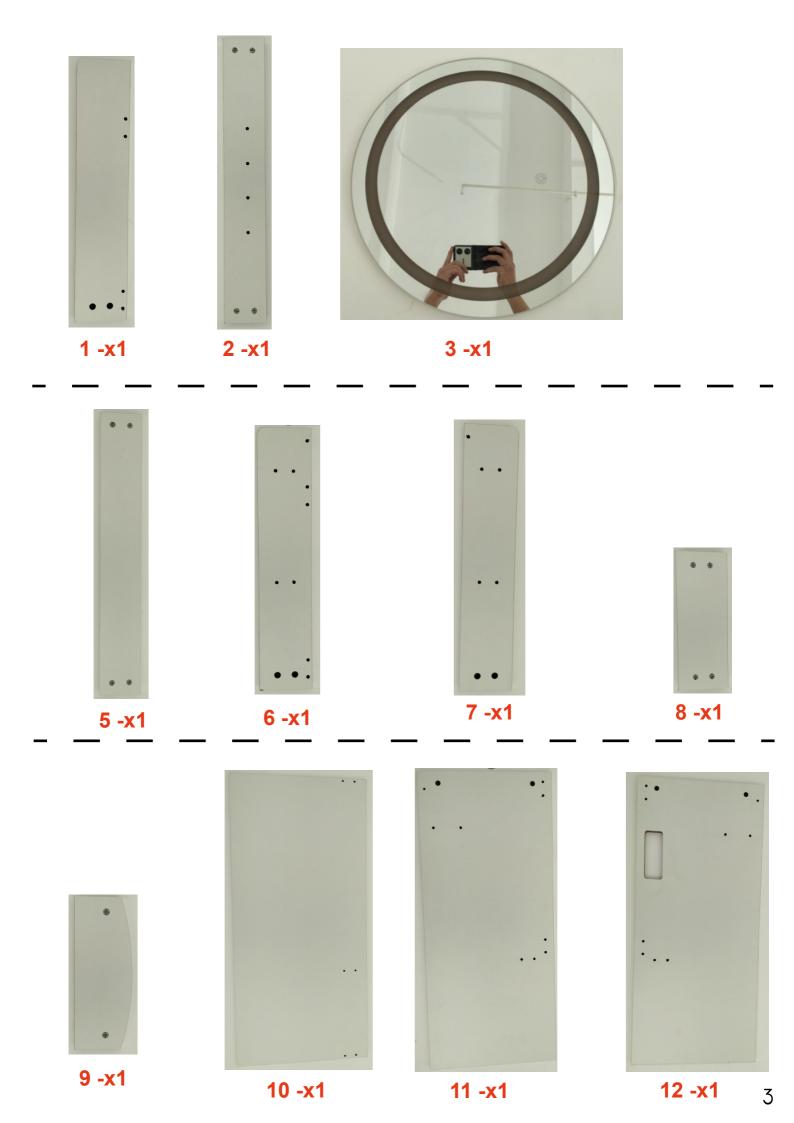

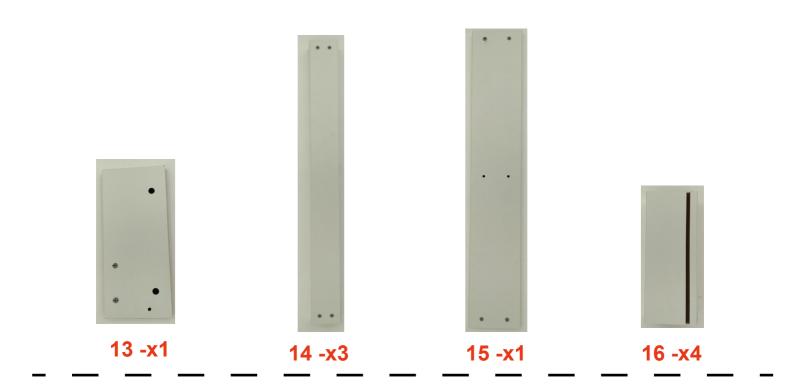

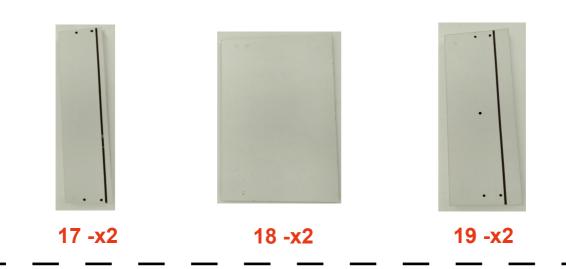



HARDWARE



SCREW & METAL x28 А LOCK



SCREW & METAL x28 В LOCK



С SCREW

X8



D х2 HANDLE



Ε SCREW х2



F L PLATE х2



χ4 Н SCREW



SCREW х44




K PLASTIC LOCK х44




SCREW χ4

1. Screw installation method

When the screw is installed, please keep it in line with the board, and do not tighten it too tightly

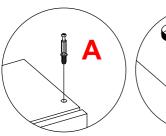




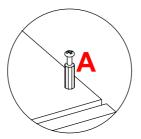


2. Check the Nut direction


This direction of the marked nutis consistent with the direction in which the scre is inserted

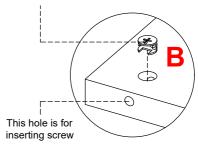


3. Installation on thr board with fixing screws

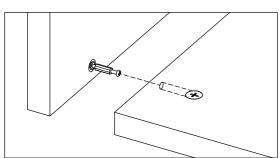


3. Rotate slowlyuntil it stops

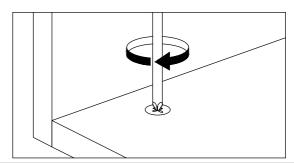


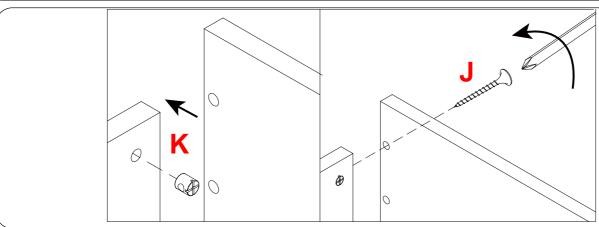


Step 01 Step 02

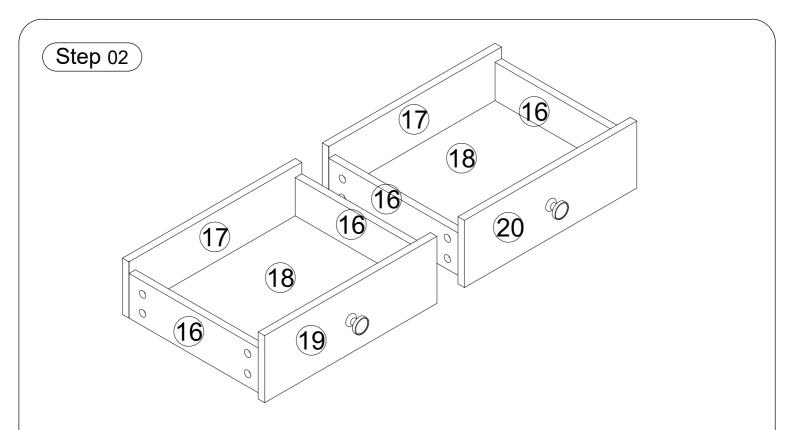



Step 03 K 🦠 14 K & K 12 14 K 11

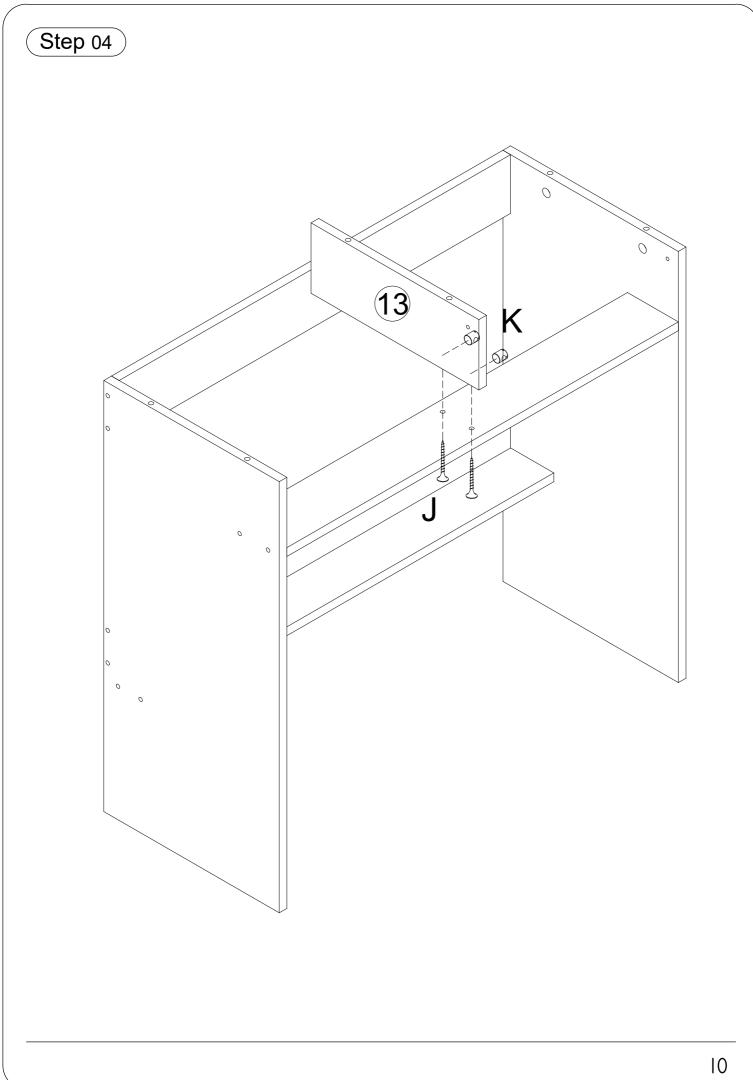


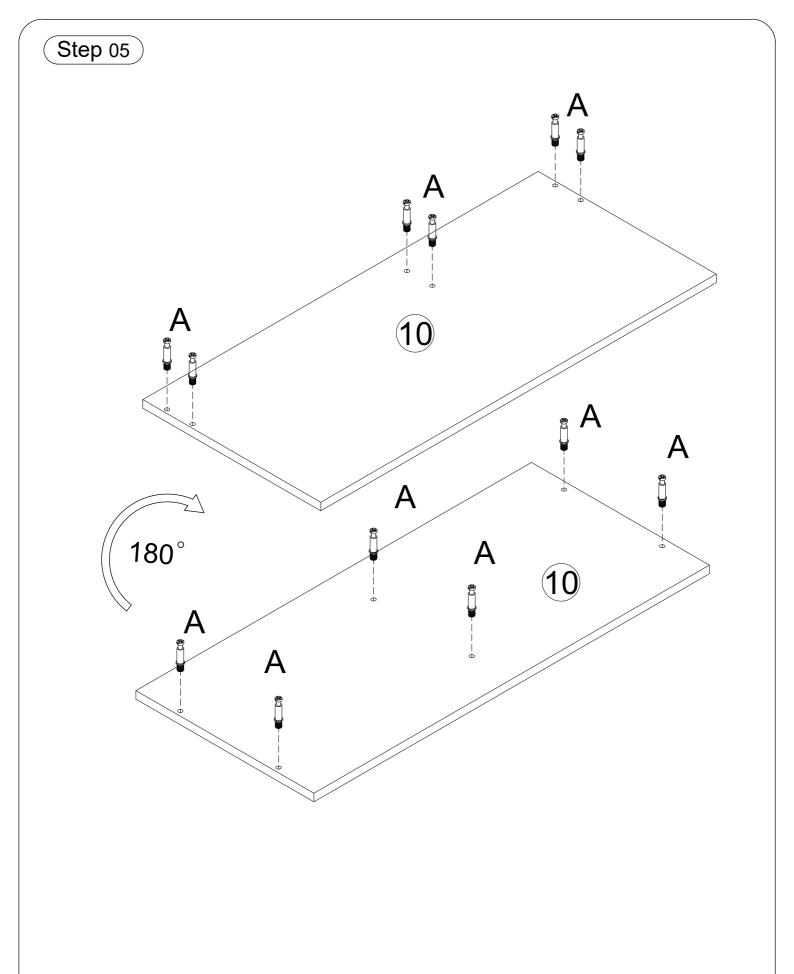


Step 06 10 В В

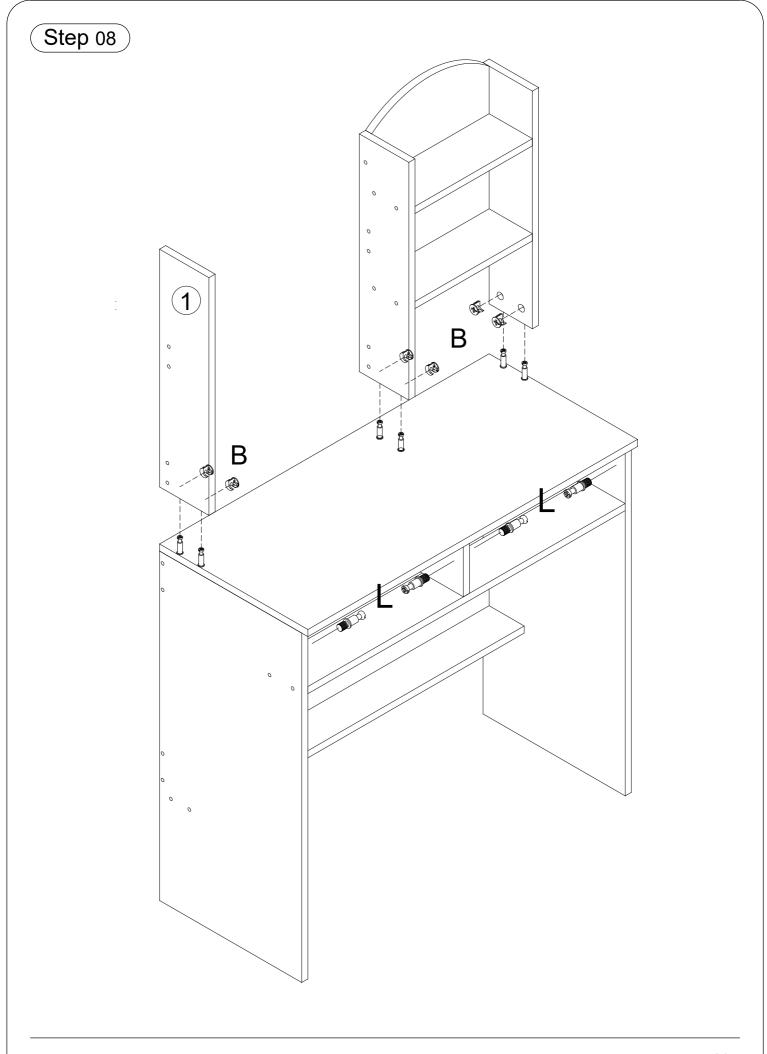


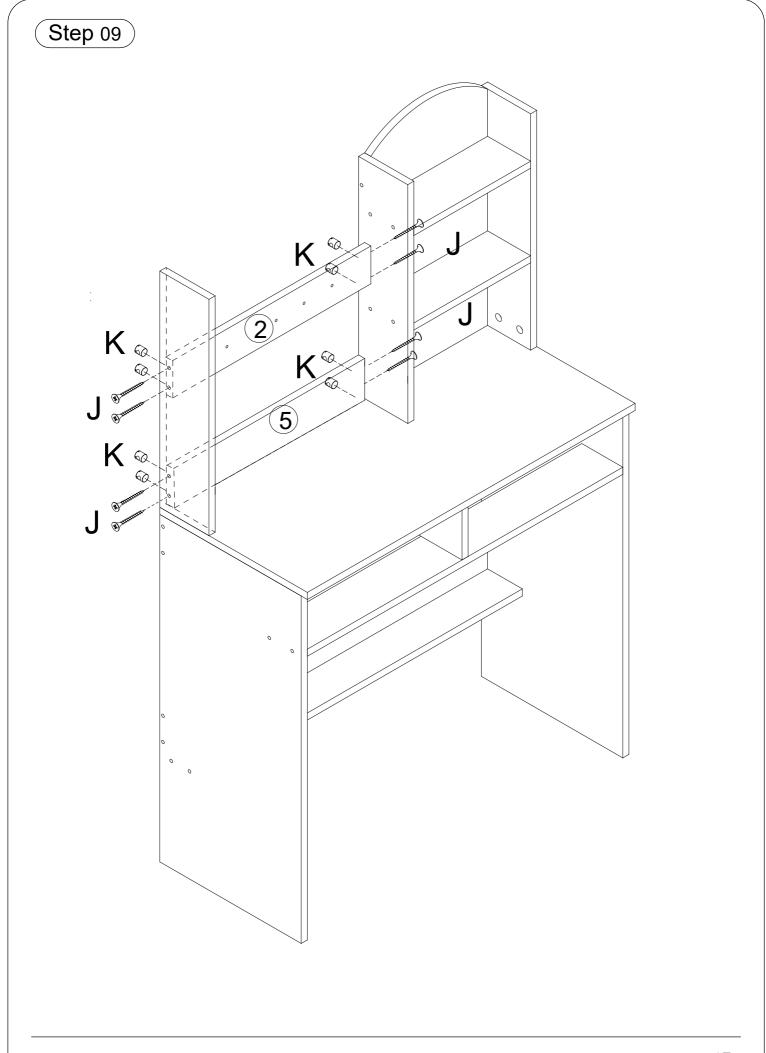

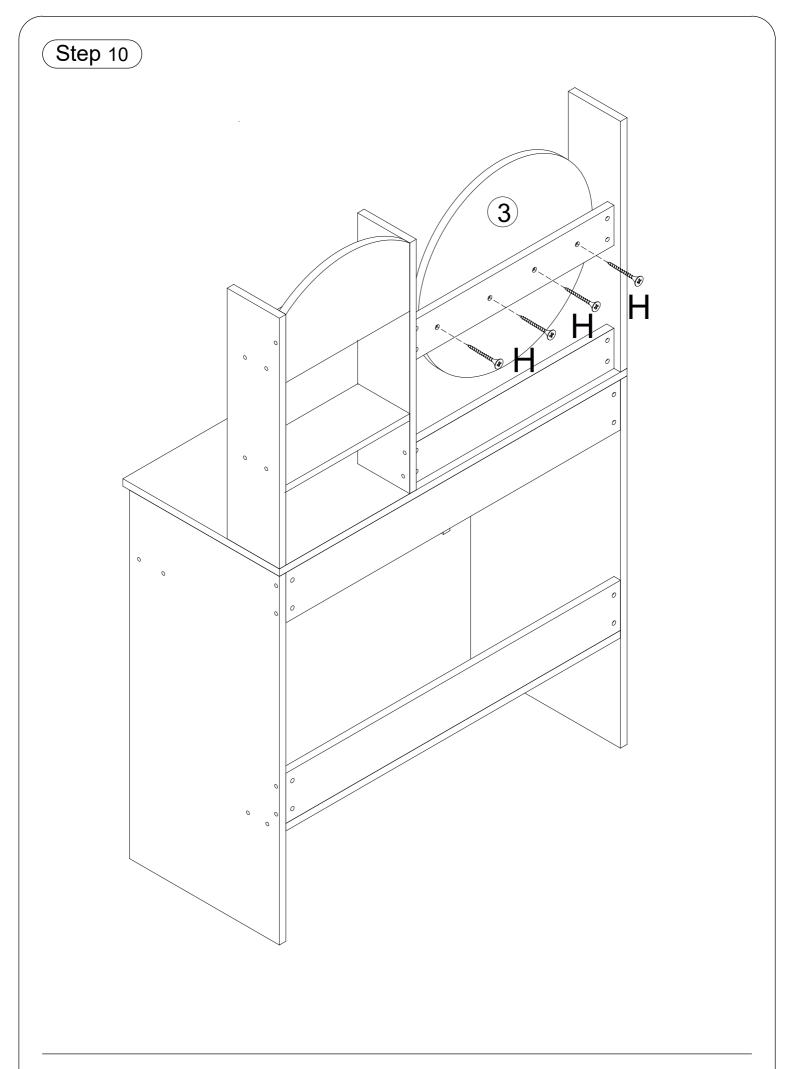

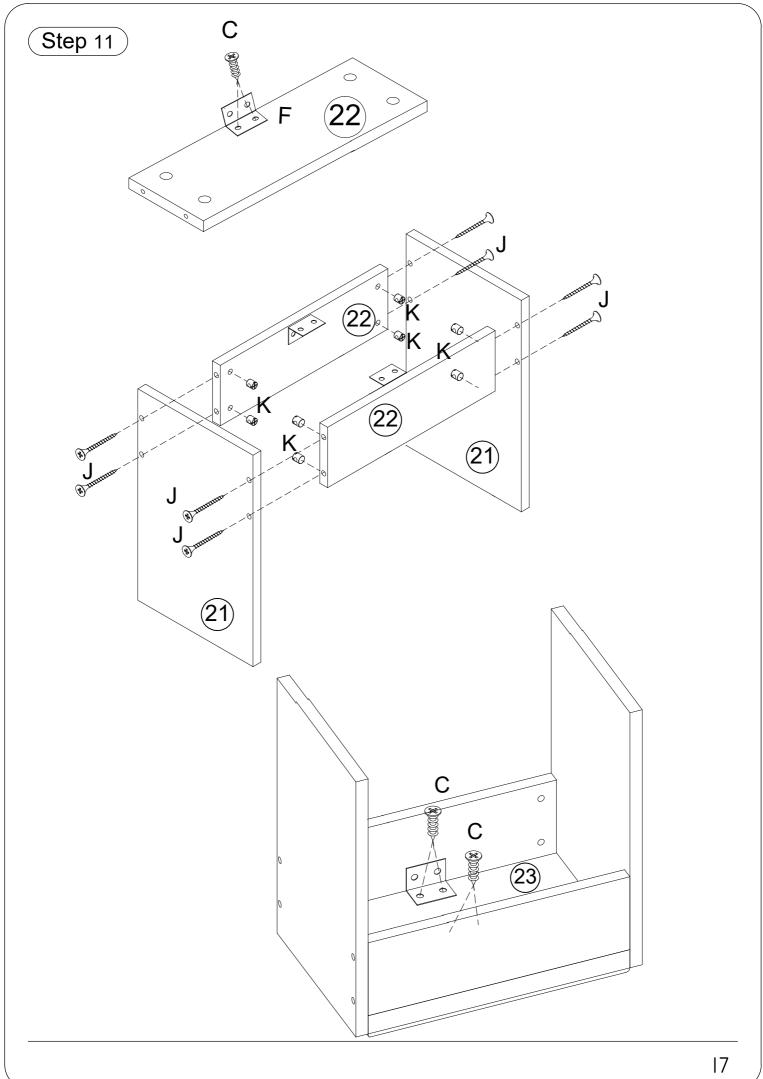

Step 12

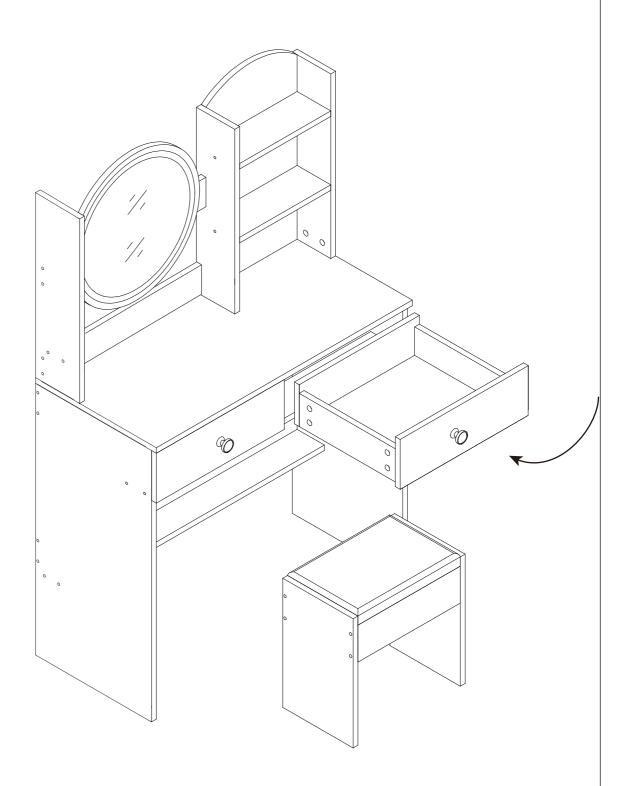

Please note that when placing the drawer in, the drawer positioning pin will block the drawer. Therefore, please follow the diagram to first insert the inner edge of the drawer using a concave method, and then push the drawer flat.