




① X2

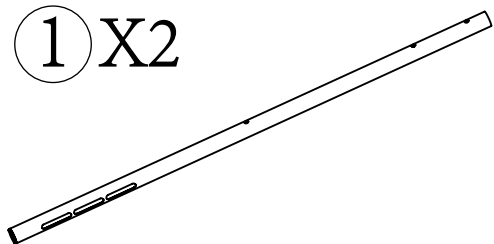


③ X1

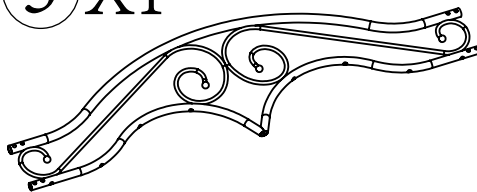


④ X1

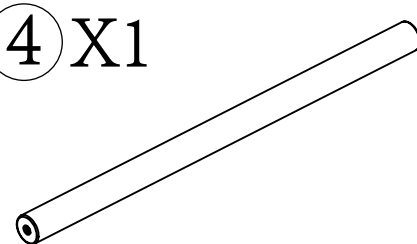


⑤ X1

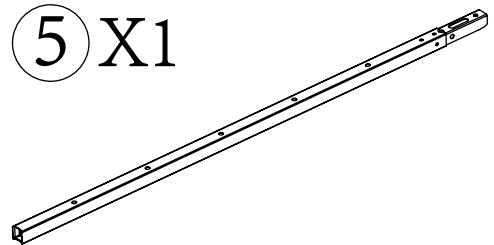



⑥ X1

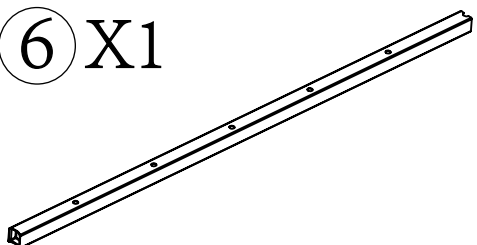

⑦ X2

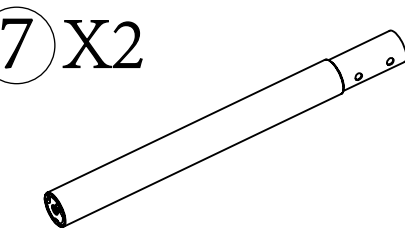


⑧ X2

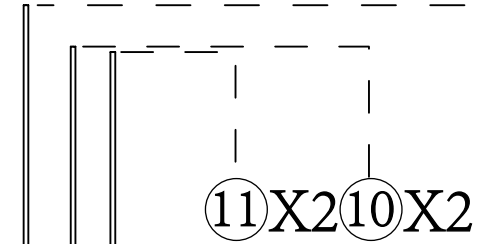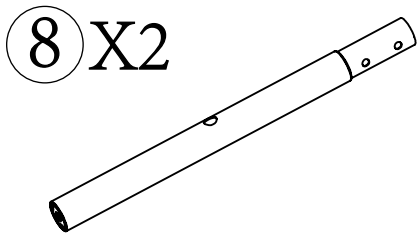


⑪ X2 ⑩ X2 ⑨ X4


⑫ X2

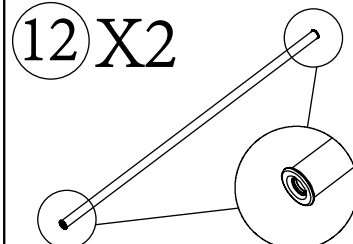


⑬ X2

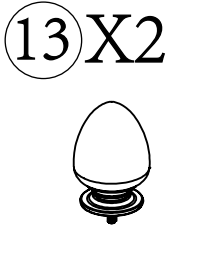


⑭ X4

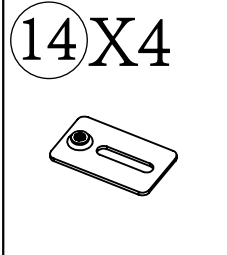


A X1

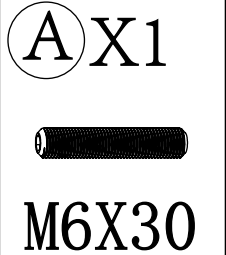


B X4

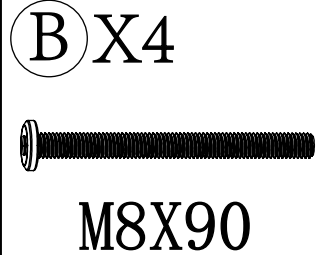

C X4

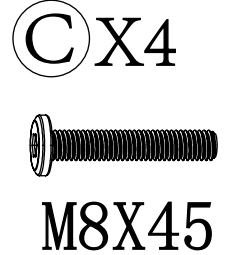


D X6

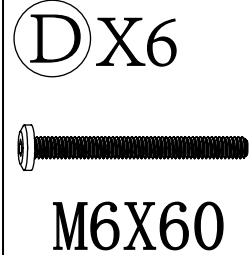

E X13




F X9

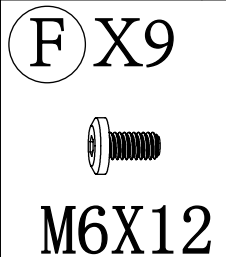



G X4






H X4

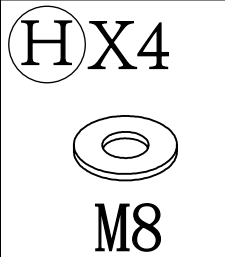

I X4

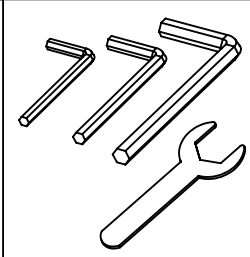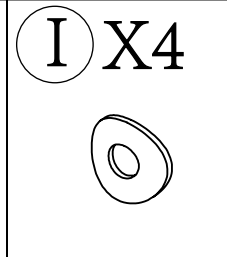


Difference screws display (1:1)

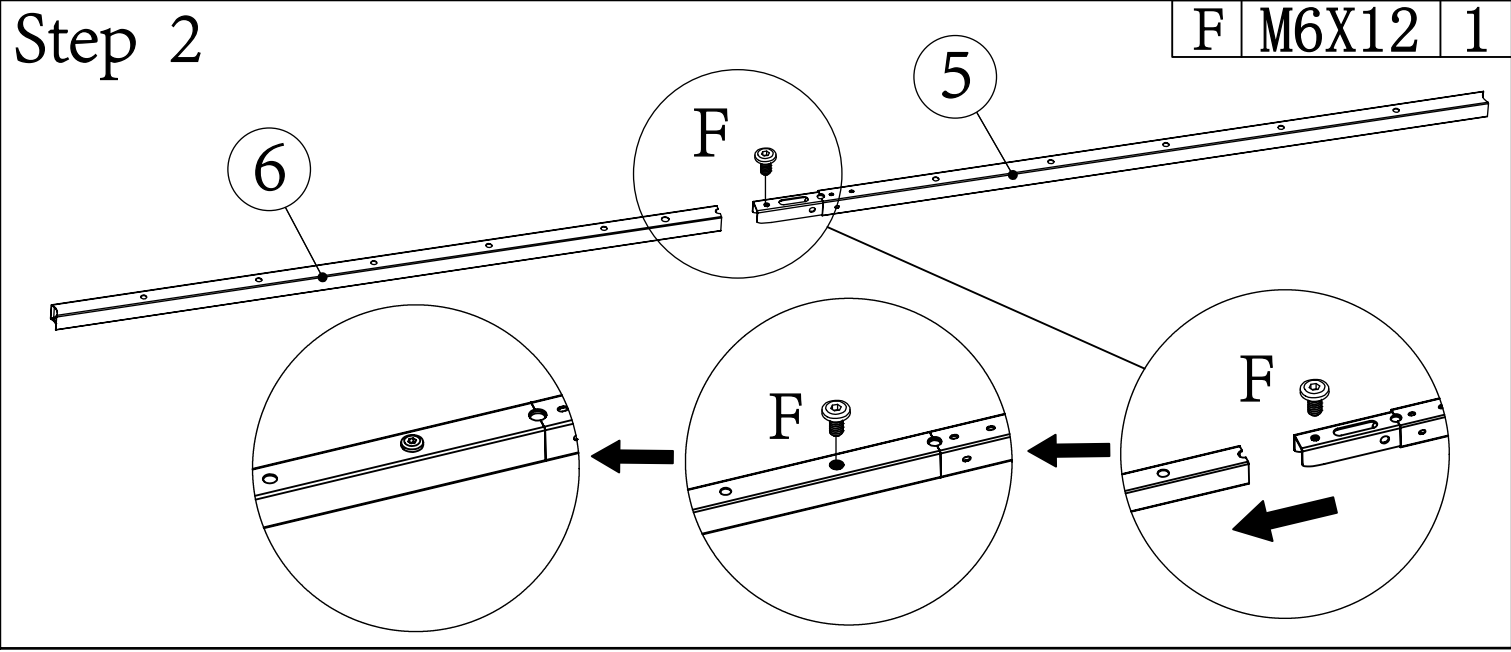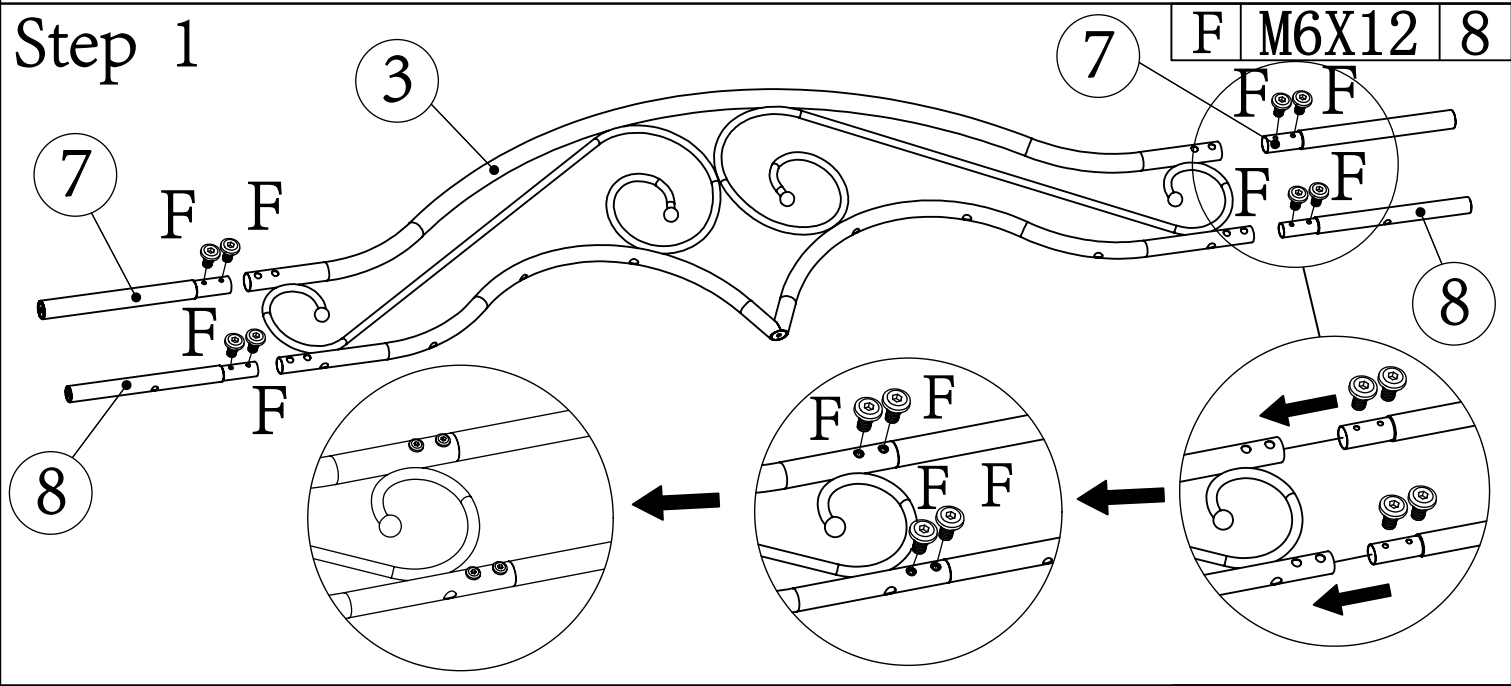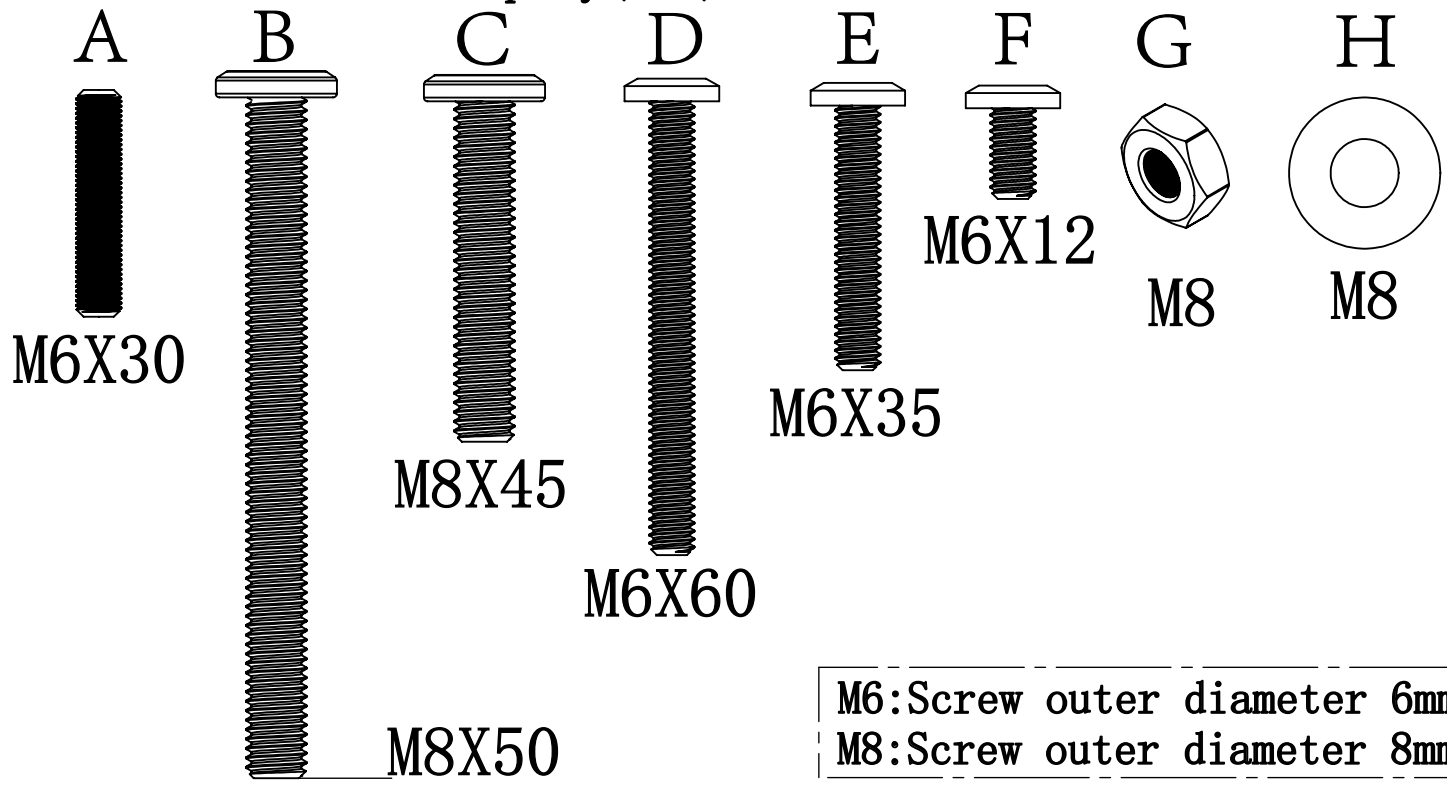

Step 3


A	M6X30	1
E	M6X35	1

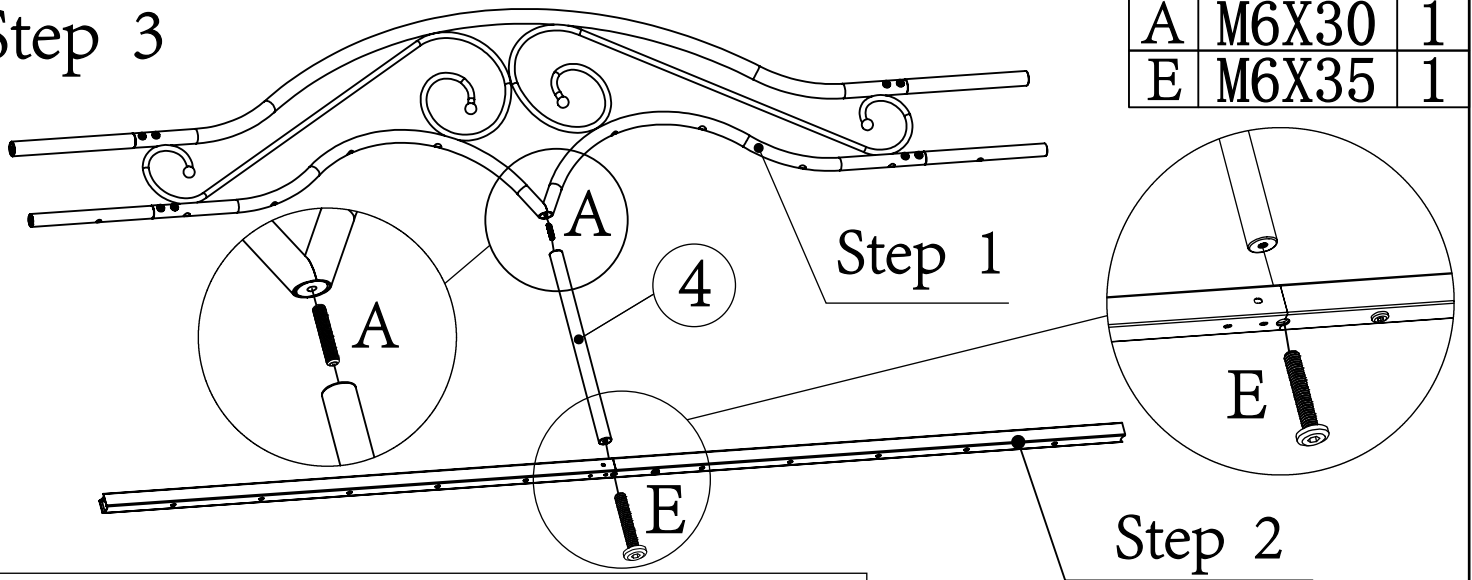

Please do not tighten the screw # E in this step, to prepare for the next step of installation.


Step 4

D	M6X60	6
---	-------	---

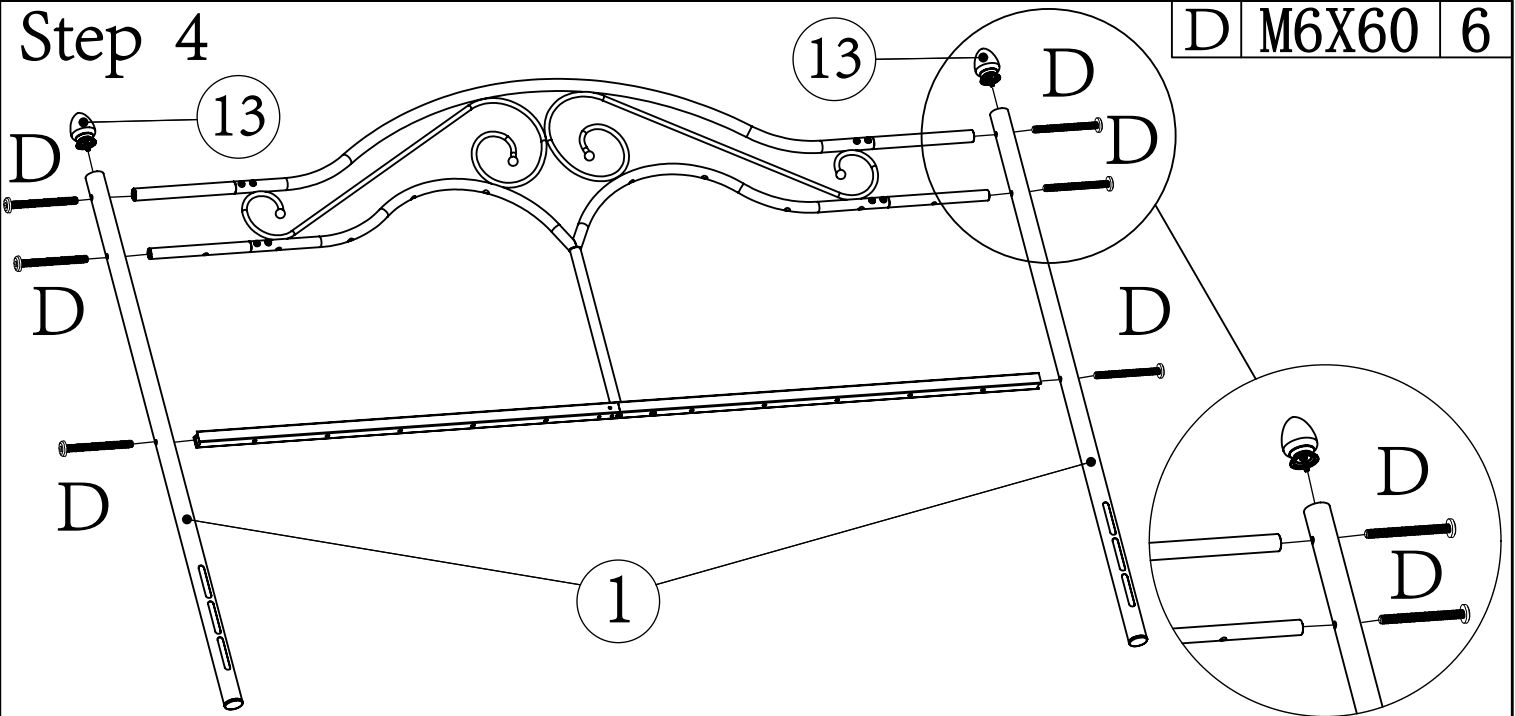


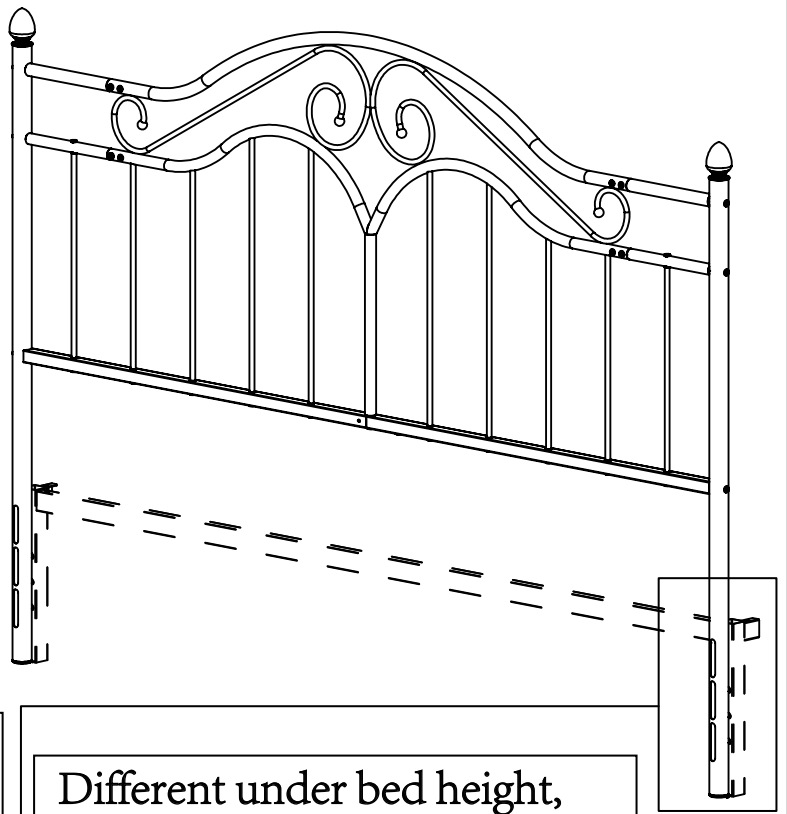
Step 5

E	M6X35	12
---	-------	----

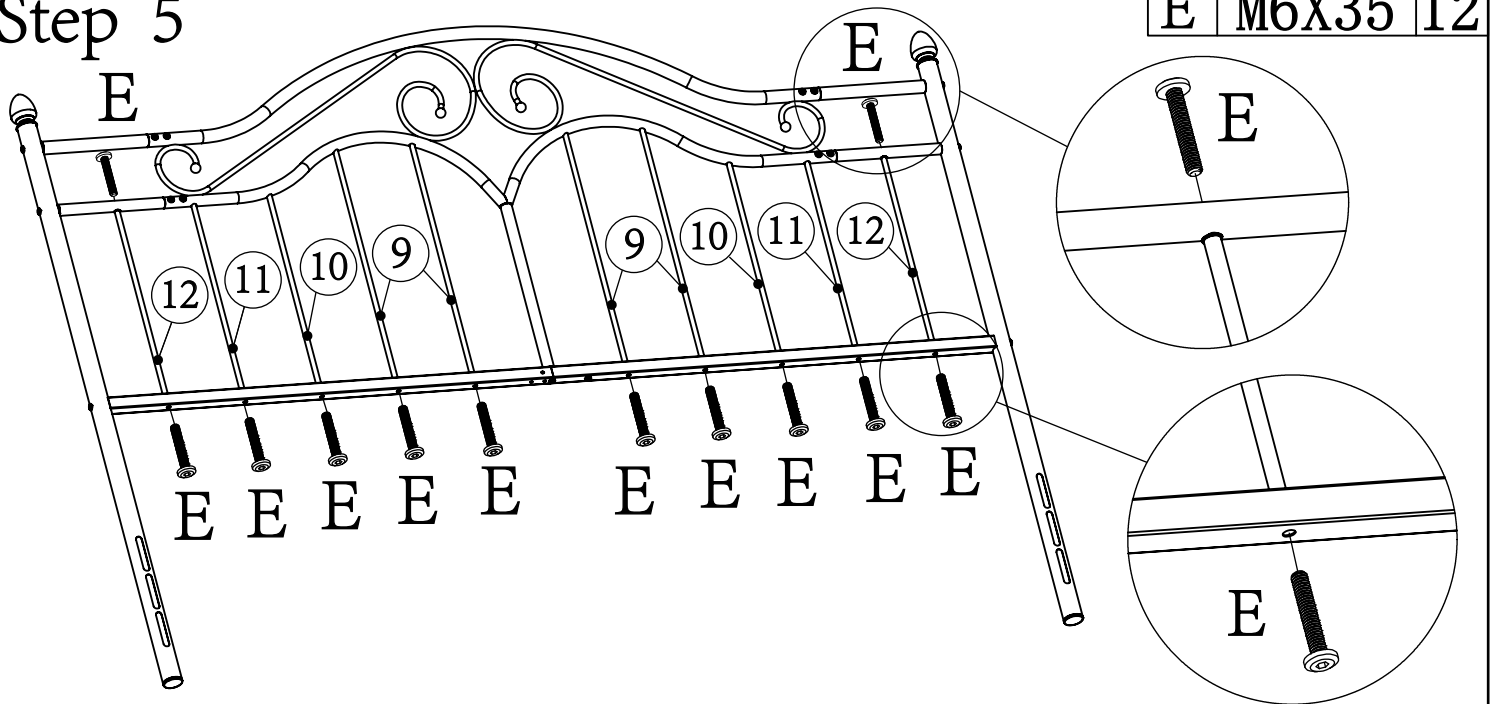

Step 6

B	M8X90	4
C	M8X45	4
G	M8	4
H	M8	4
I		4



Select the suitable assembly scheme based on the requirement.

★ :When assembling Part 14, please pay attention to the direction. The direction to the left or right is adjustable.

Different under bed height, use different assembled height.

1

14

2

3

