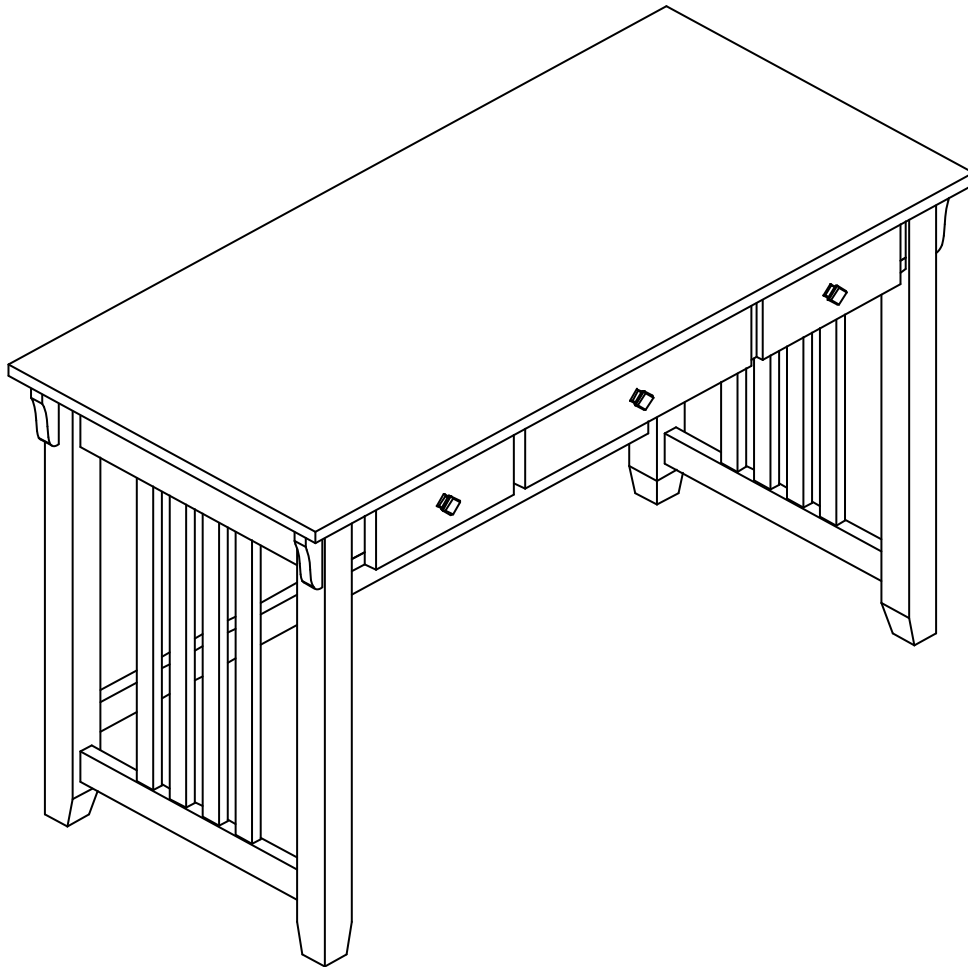


# ASSEMBLY INSTRUCTIONS

---



---

Description : MISSION COMPUTER DESK  
Item No. : OF-45D

ITEM NO.: OF-45D  
REVISED SEP 13, 2019

Printed in Vietnam

## BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. All parts were checked prior to packaging to insure quality. Prior to beginning assembly, however, make sure all parts and hardware are included and free of obvious defect. If a part is missing or defective, please contact the store where purchased. If hardware is missing, or you need help with assembly, please call toll free 888-944-8396.

### IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

### WARNING:

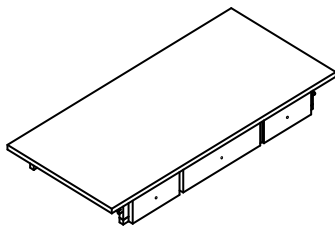
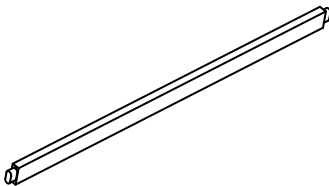
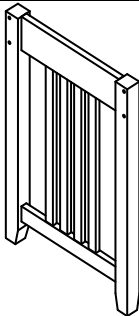

Long exposure to rubber or soft plastic may cause a chemical reaction and damage the finish of your table. Protect the surface of the table with cloth if you are using any product with rubber feet or base.

### ASSEMBLY TOOLS REQUIRED NOT INCLUDED






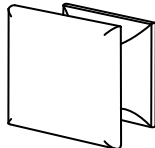



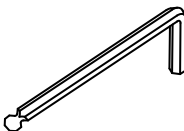
## PART LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
A	Top	1		C	Crossbar	1	
B	Side frame (L-R)	2		D	Side decoration	4	

## HARDWARE LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

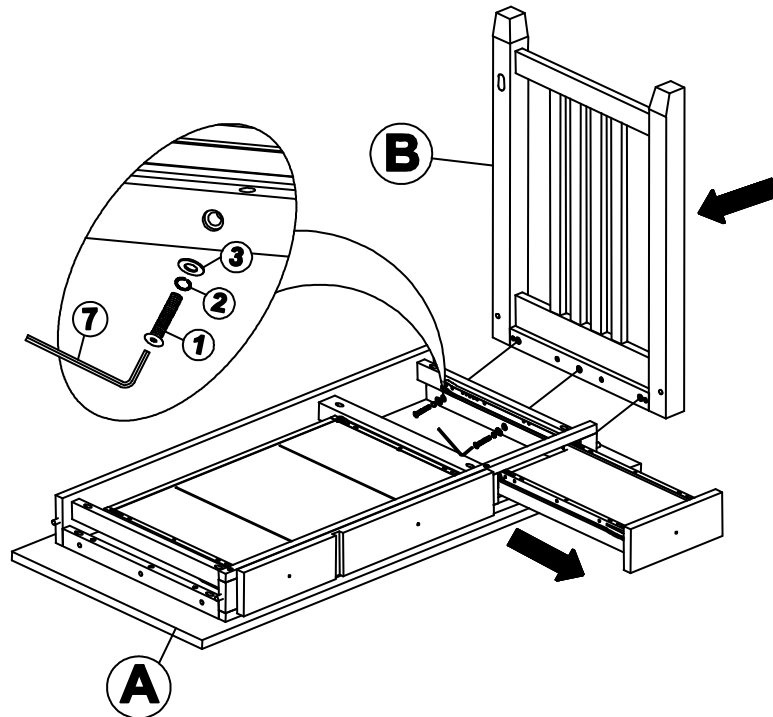
NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Bolt (M6 x 35mm)	6		5	Pan head screw *Metal knob: (M4 x 22mm) *Wooden knob: (M4 x 25mm)	3	
2	Spring Washer (Φ6.5 x 11mm)	6		6	Wooden knob (SQR 32 x 20mm)	3	
3	Flat Washer (Φ6.5 x 19mm)	6			METAL KNOB (Φ30 x 30mm) GOES WITH FINISHED ITEM ONLY.	3	
4	Screw (M4 x 50mm)	2		7	Allen key (M4 x 30mm x 110mm)	1	

ITEM NO.: OF-45D  
REVISED SEP 13, 2019

Printed in Vietnam

## STEP 1

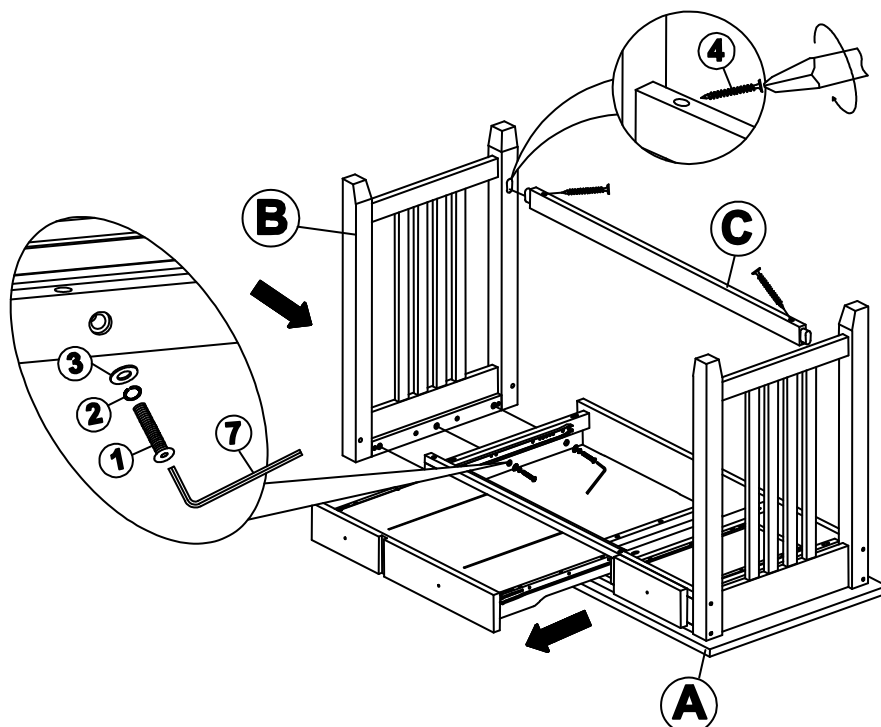
Pull out the drawer as shown below. And then attach side frame (B) to top (A) with bolts (1), and washers (2) and (3) as shown below. Tighten with Allen key (7).



## STEP 2

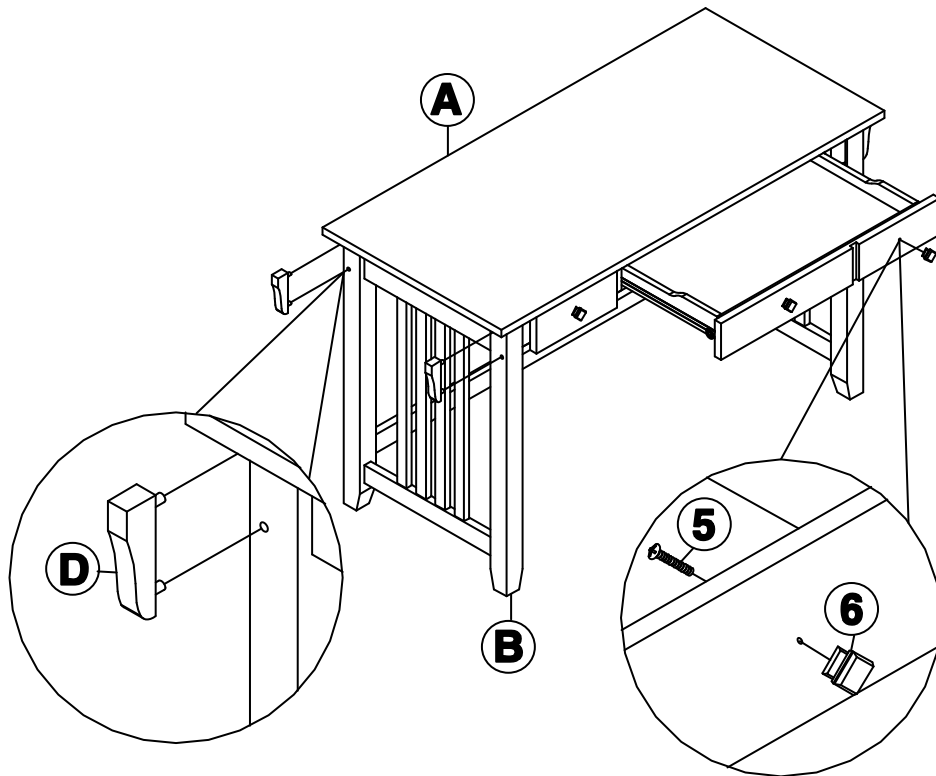
Insert crossbar (C) into side frames (B) and attach with screws (4) as shown below. Tighten with a screwdriver.

Pull out the drawer as shown below. And then attach the other side frame (B) to the top (A) with bolts (1), and washers (2) and (3) as shown below. Tighten with Allen key (7).



## STEP 3

Attach knobs (6) to front of drawers with pan head screws (5) as shown below. Tighten with a screwdriver. Attach side decorations (D) to side frames (B) as shown below.



## STEP 4

NOTE: Put your hands in front of the drawer and open the flip down key board tray as shown below.

