
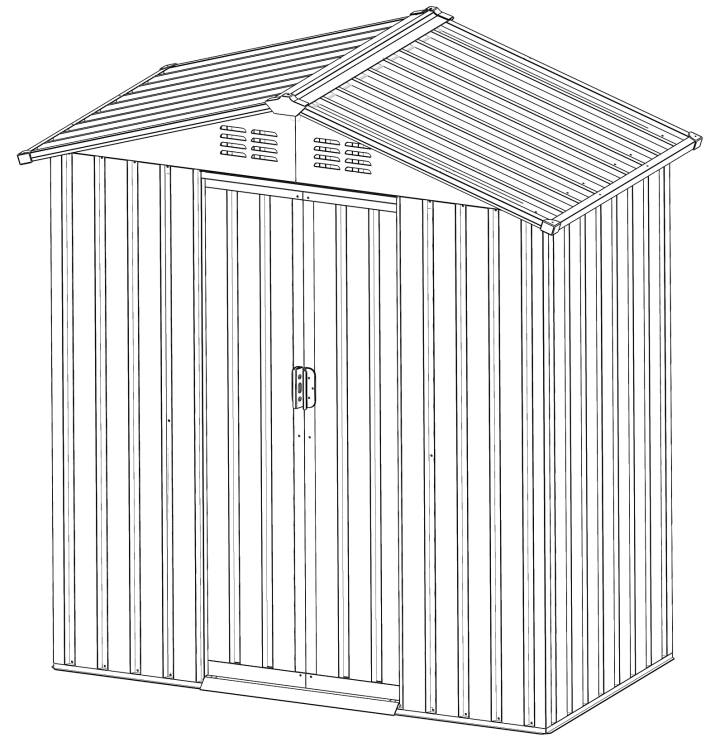


Metal Garden Shed

OWNER'S MANUAL

Size 5 Ft X 3 Ft

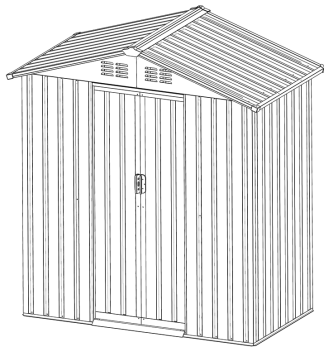

Tall walk in Shed

Quick & Easy Assembly

Ridge Reinforced walls







Wide Double Doors

Available in Various Sizes

Take care of sharp edges;

Please wear gloves;

It will take 2 people 2 - 3 hours to install.

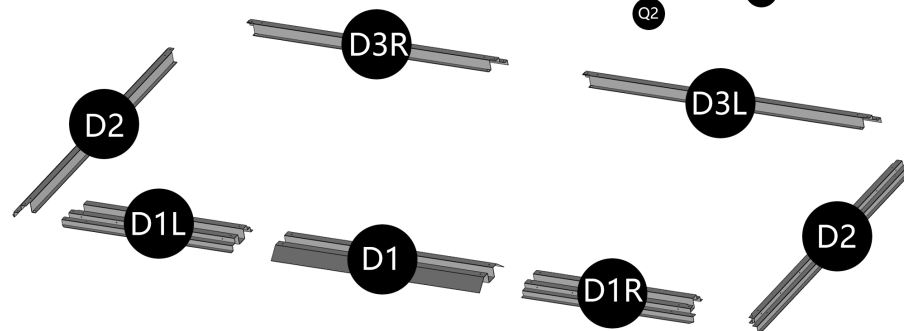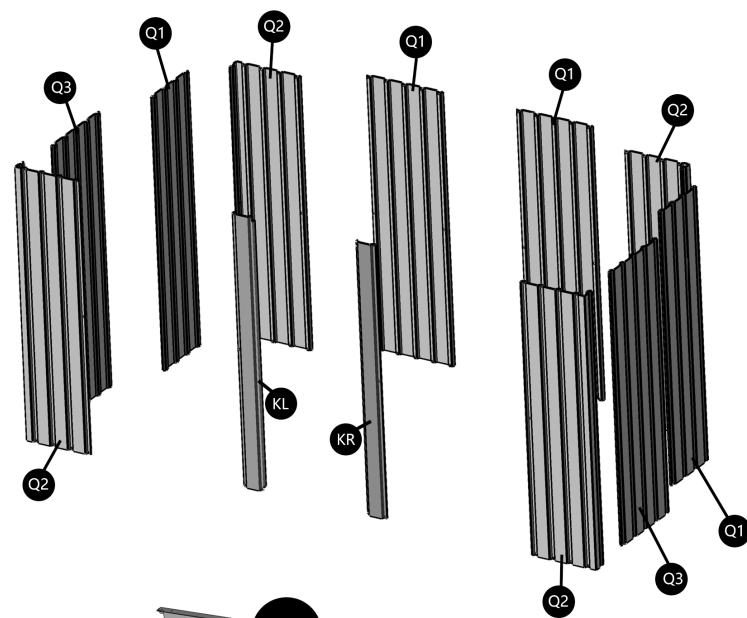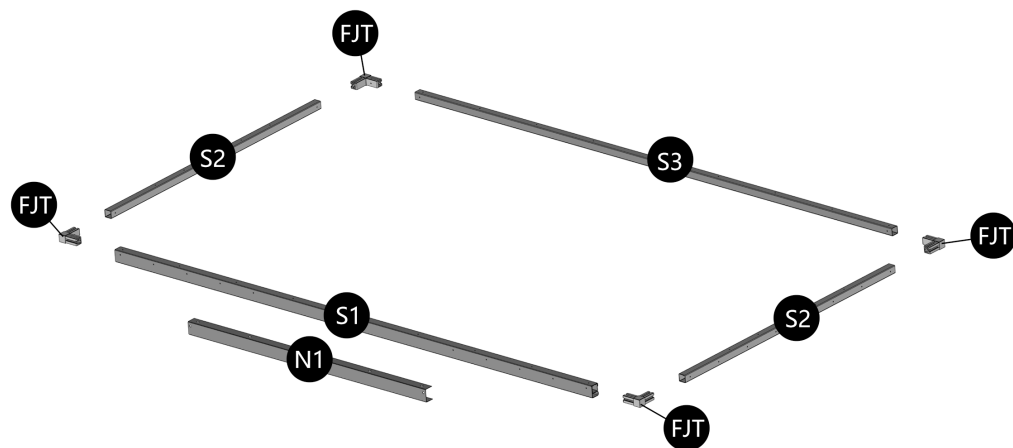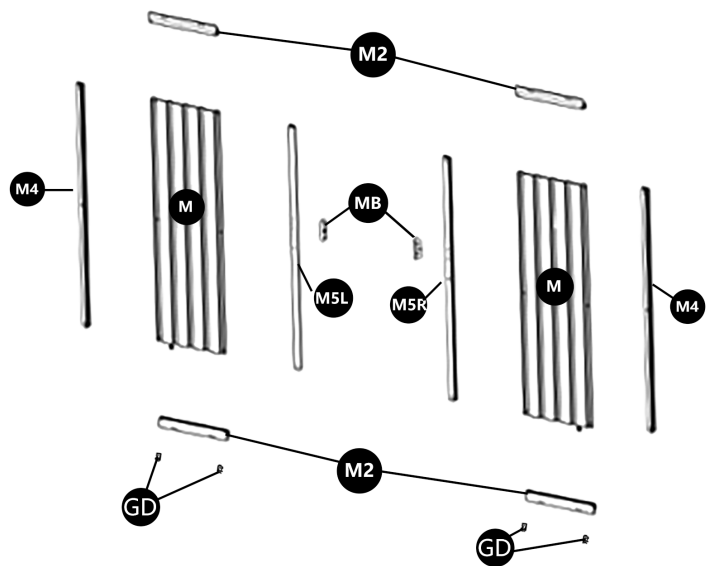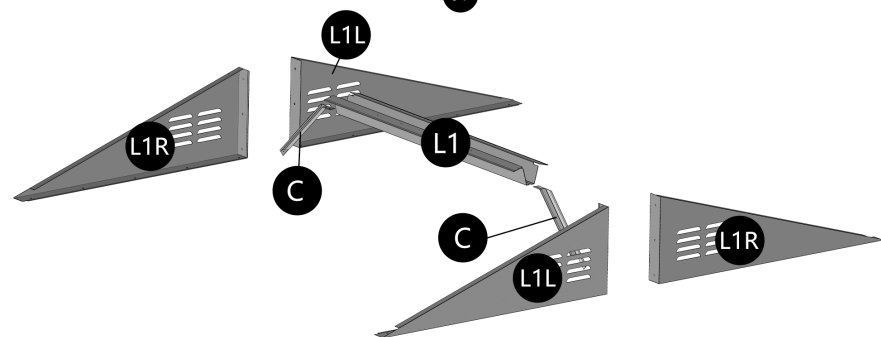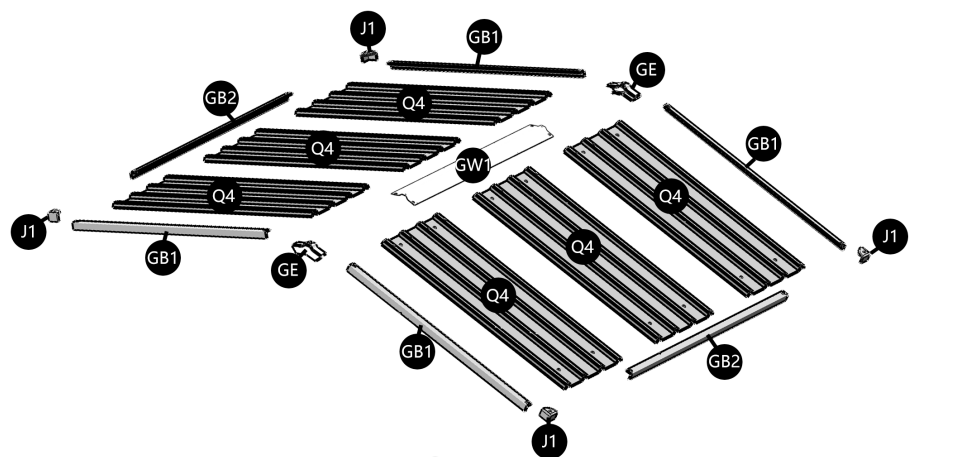

NO1	PART	QTY
D1		1
D1L		1
D1R		1
D2		2
D3L		1
D3R		1
S1		1
S2		2
S3		1
KL		1
KR		1
L1L		2
L1R		2
C		2
L1		1
GB1		4

PARTS LIST

NO1	PART	QTY
GB2		2
GW1		1
M2		4
M3		4
M4		2
M5L		1
M5R		1
Q1		4
Q2		4
Q3		2
Q4		6
M		2
J1		4
MB		2
FJT		4
GE		2

NO1	PART	QTY
G2		4
GD		4
N1		1
F1		182
F1-1		4
F3		10
F4		12
F8		7
F11		11
F16		7

PARTS LIST

NO1	PART	QTY
LSM		
F14		

Install LSM at screw exposure, Prevent collisions.

This component is used together with screws located on the outside for sealing and waterproofing.

Warning & Attention:

-Take care of sharp edges; Please wear gloves;

-You are advised to read the whole procedure before installing it;

-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;

-It would be much easier to assemble the product with three or more people;

-All panels are clearly marked and care should be taken to use the correct one. It is important that these instructions are followed step by step;

Each screw has a surplus quantity, which can be used in reserve

-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.

Tools:



Gloves



Ladder



Electric drill




Phillips screwdriver



Safety Helmet Hat



goggles

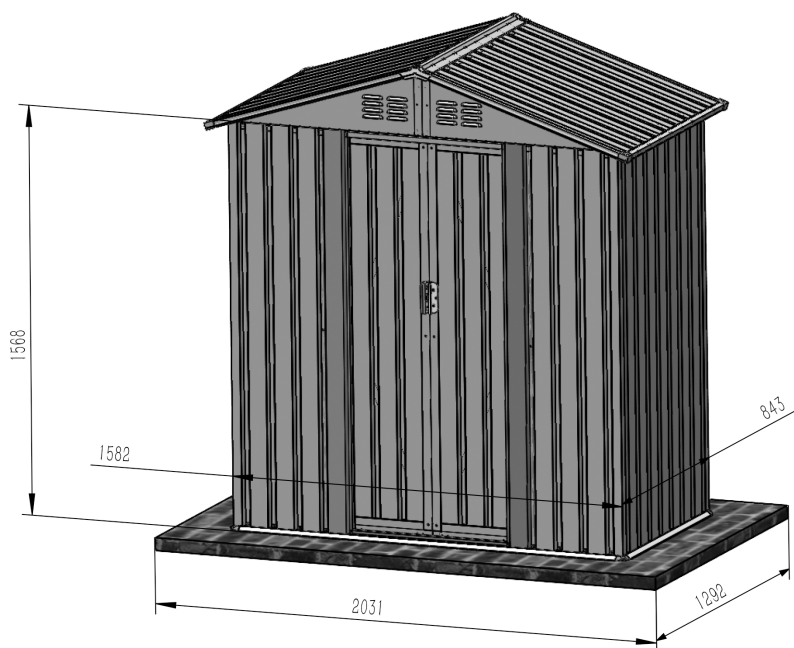

Note: Take care of sharp edges.


All panels are clearly marked and care should be taken to use the bcorrect one. It is important that these instructions are followed step by step.

NO.	PART	Qty.
D1		1
D1L		1
D1R		1

NO.	PART	Qty.
D3L		1
D3R		1

NO.	PART	Qty.
D2		2
F1		8

NO.	PART	Qty.
F1-1		4

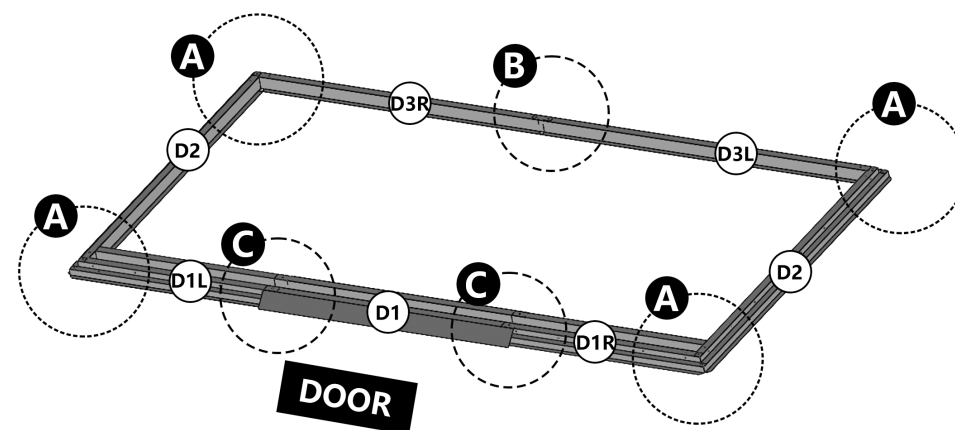


Assemble according to the positions shown in the figure, use F1 to secure the holes at Step A and Step B, and use F1-1 to secure those at Step C.




The installation space should be flat, and at least 2031x1292mm. The foundation is fixed on the ground in this space.


A

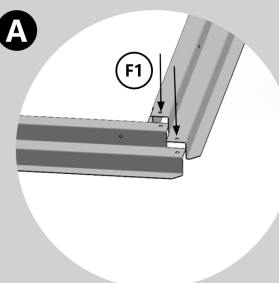

B

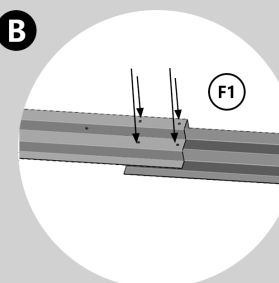

C

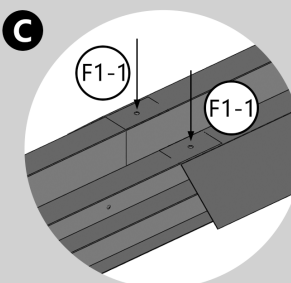





Note: Please wear gloves

NO.	PART	Qty.
F8		7


NO.	PART	Qty.
F16		7

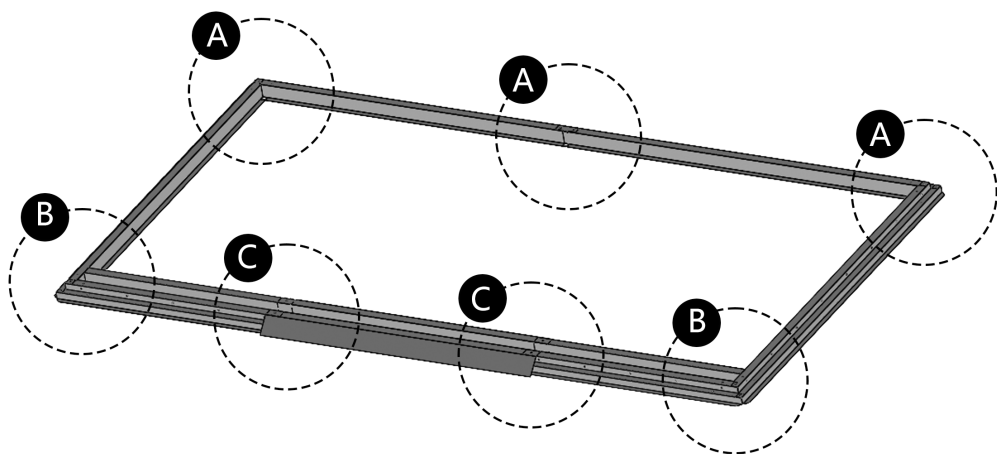

After installing the bottom frame, if the ground is soil, use F8 to secure the holes at the positions shown in the figure. If the ground is stone, you must use F16 expansion bolts.

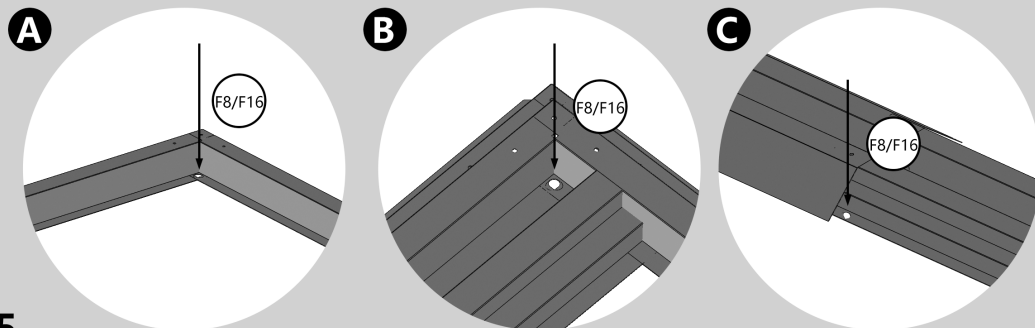


NO.	PART	Qty.
Q2		4
F1		12

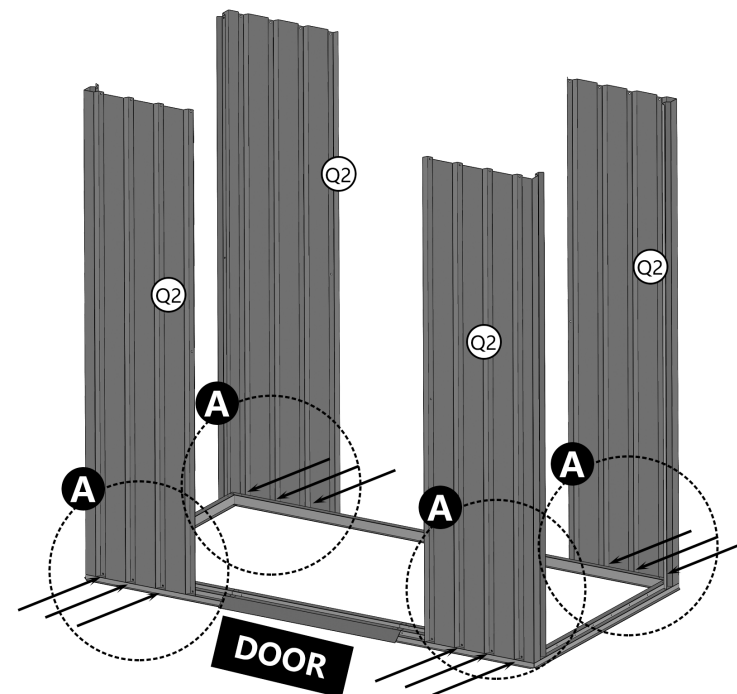


Notice:

In this step, only the three holes in the middle of Q2 need to be installed and reserved on both sides. The reserved holes are shared with the following steps.

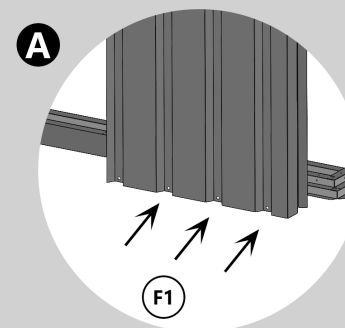


NO.	PART	Qty.
S1		1
G2		4

NO.	PART	Qty.
FJT		2

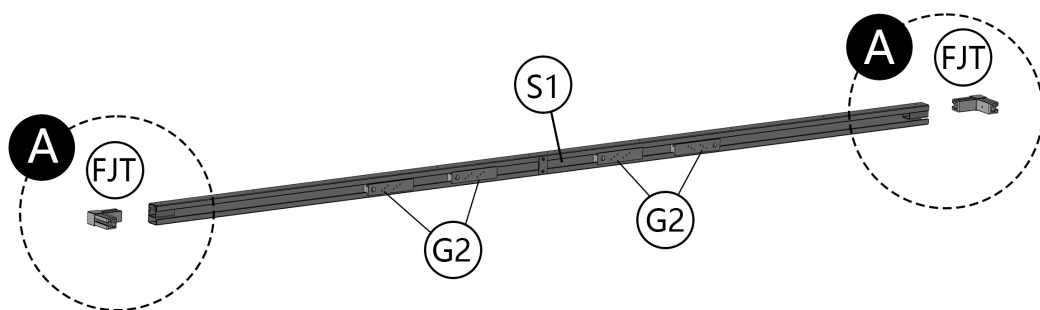

Note:




G2 has been placed at positions S1R and S1L before shipment.
Insert FJT into both sides of S1.

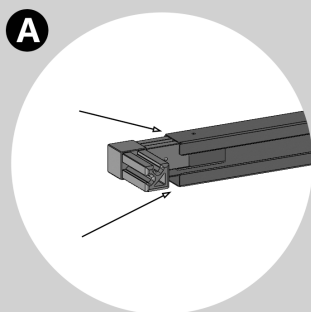




NO.	PART	Qty.
S2		2
S3		1

NO.	PART	Qty.
FJT		2
F1		8


NO.	PART	Qty.
N1		1

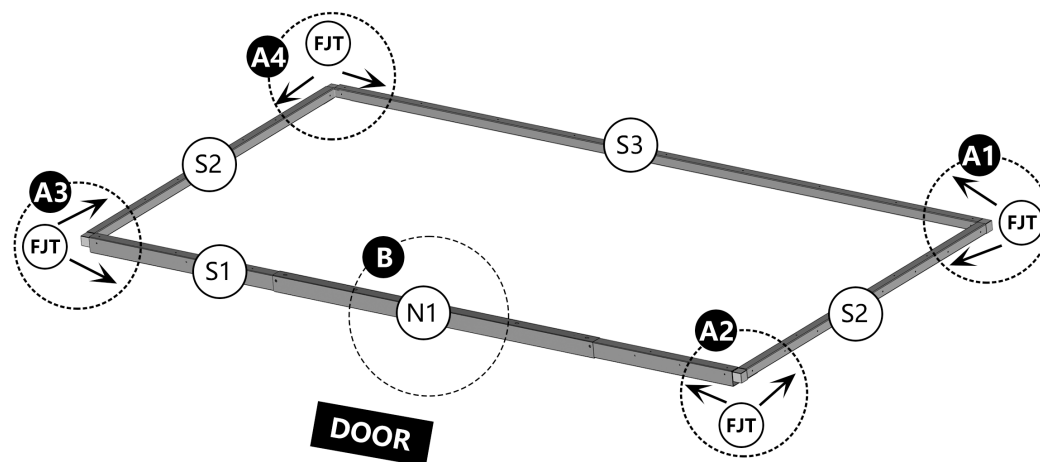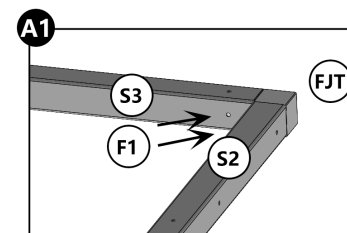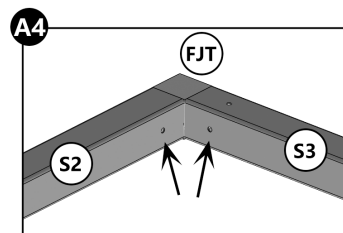

Assemble the components as shown in the diagram, then use F1 to secure the holes at the four corners. Next, position N1 in the corresponding location and align the holes.

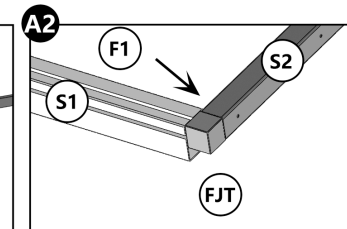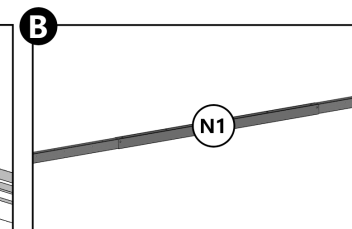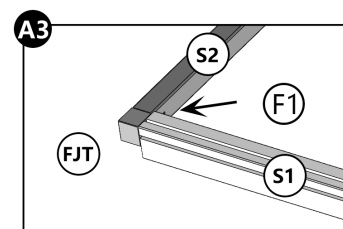


NO.	PART	Qty.
F1		12




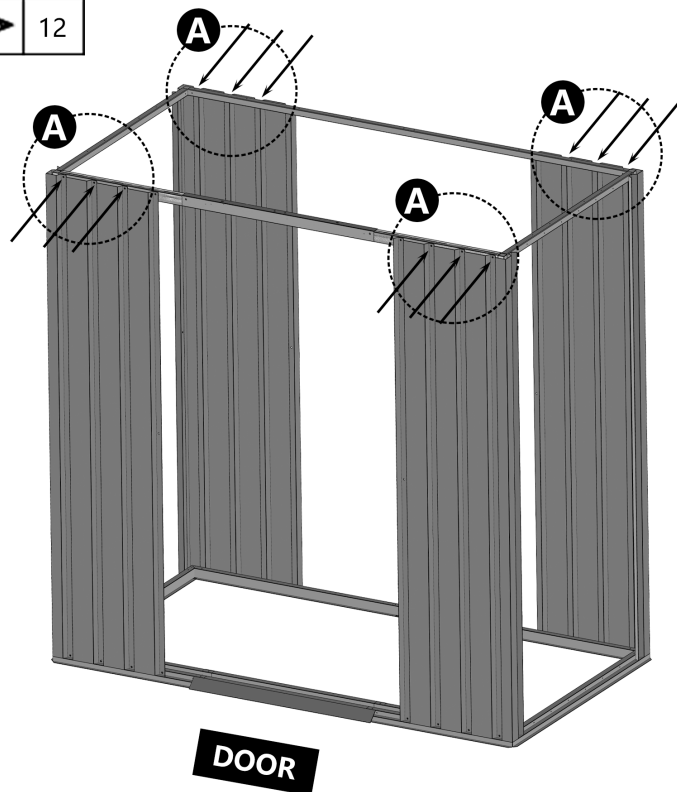


Notice:
In this step, only the middle three holes need to be installed, and both sides need to be reserved.
The reserved hole is shared with other steps.
The walls are tiled on the outside and framed on the inside


NO.	PART	Qty.
Q1		4
Q3		2
F11		11
F1		62

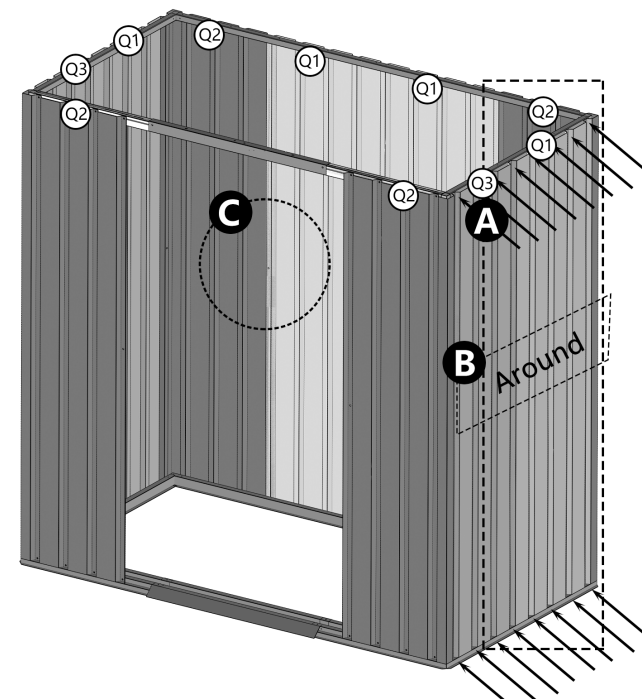

Notice:
As shown in the picture, assemble the wall tiles in turn, Q1\Q3, The top, middle and bottom of the wall tiles need to be screwed,
The upper and lower ends are fixed with F1, and the middle is fixed with F11.

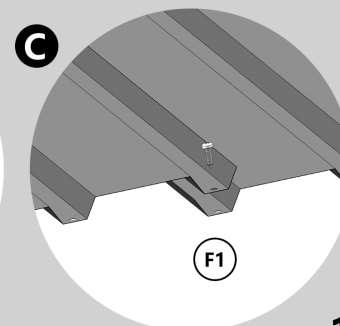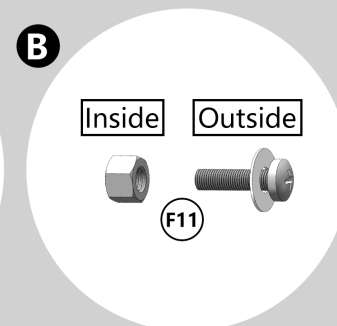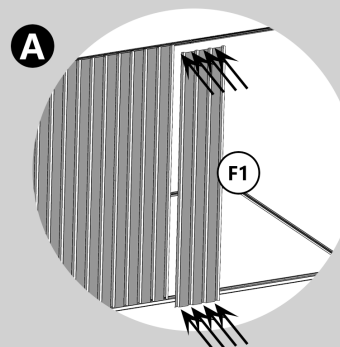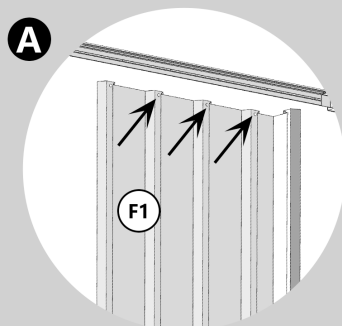

NO.	PART	Qty.
KL		1
KR		1
F1		4
F11		2

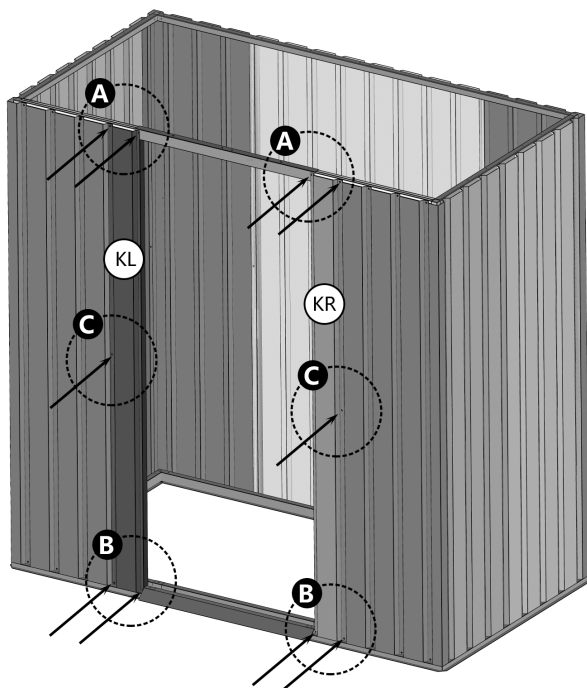


Notice:

As shown in the picture, the steps of door frame and wall tile installation are the same.

The upper, middle and lower parts of KR and KL need screws.



The upper and lower ends are fixed with F1, and the middle is fixed with F11.

NO.	PART	Qty.
L1L		2
L1R		2
F3		4

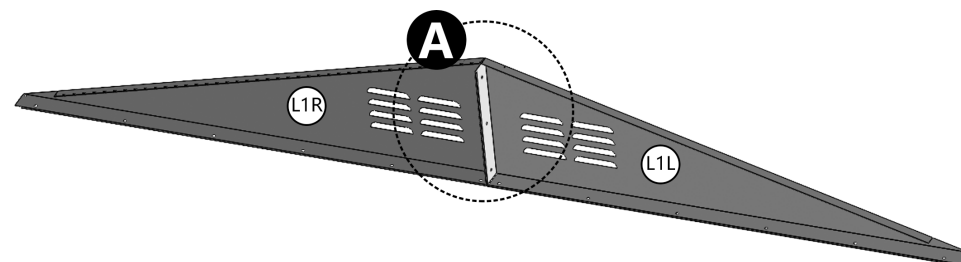


Notice:

Combine L1L and L1R, align the holes, then use F3 to secure the top two holes. The third hole need not be secured for the time being.

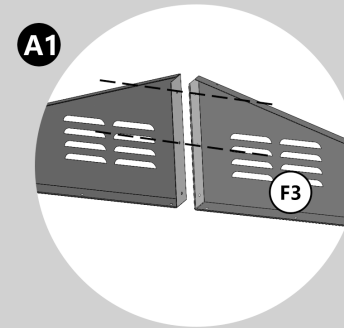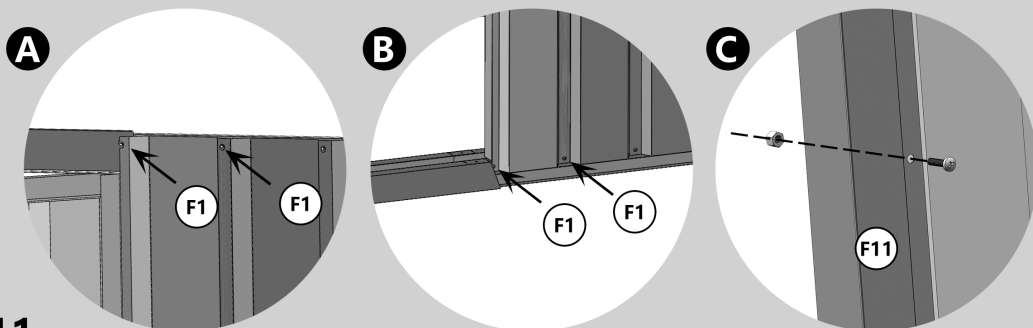


NO.	PART	Qty.
C		2
F3		1

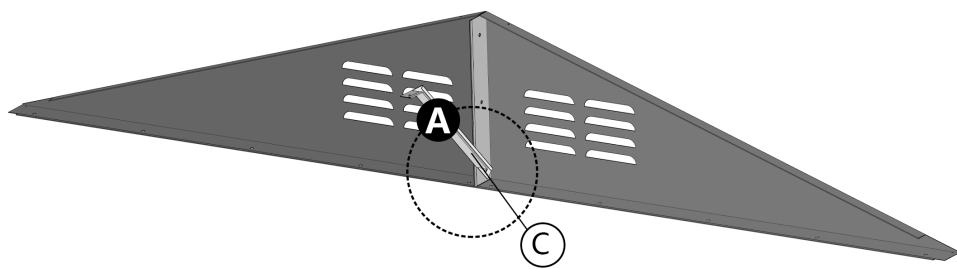

Note:



Connect C to L1L and L1R, and secure with F3. After completing Step A, bend the other end of C approximately 45° and connect it to the bottom of L1.

NO.	PART	Qty.
F1		20

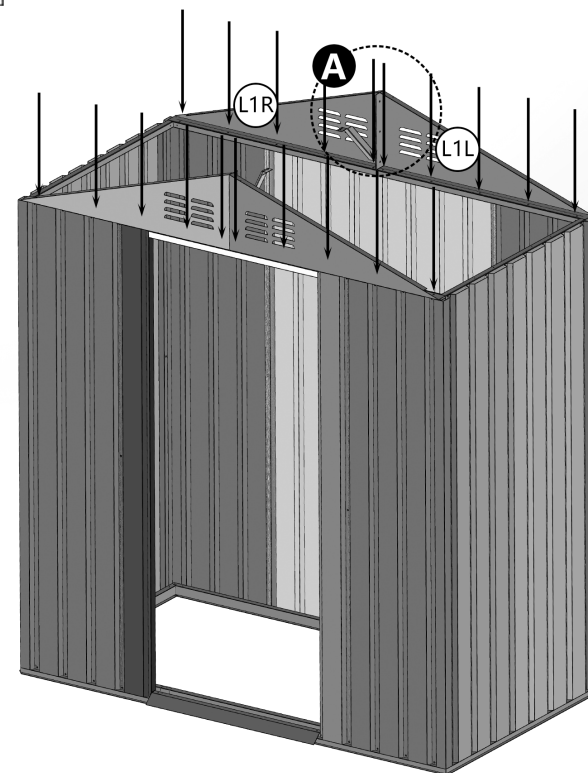


Notice:

The assembled roof support parts are successively installed on the wall tiles with F1

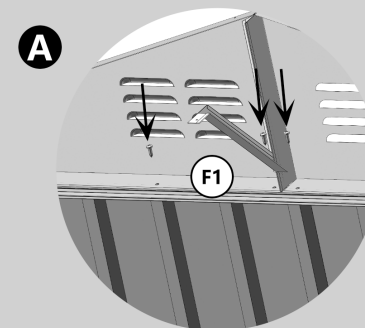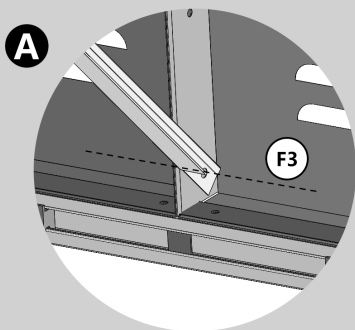


NO.	PART	Qty.
L1		1

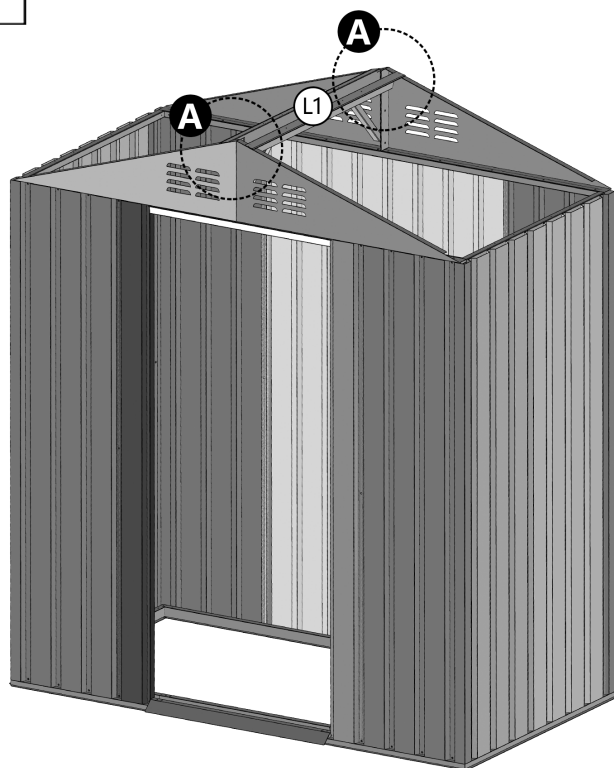

Notice:





Put L1 on L1R and L1L. Position 1 needs to be temporarily installed. This hole is shared with Q4.
To install Q4 needs to be removed and re-fixed. The other end of C needs to be connected to the L1 hole.

NO.	PART	Qty.
Q4		6
F1		24

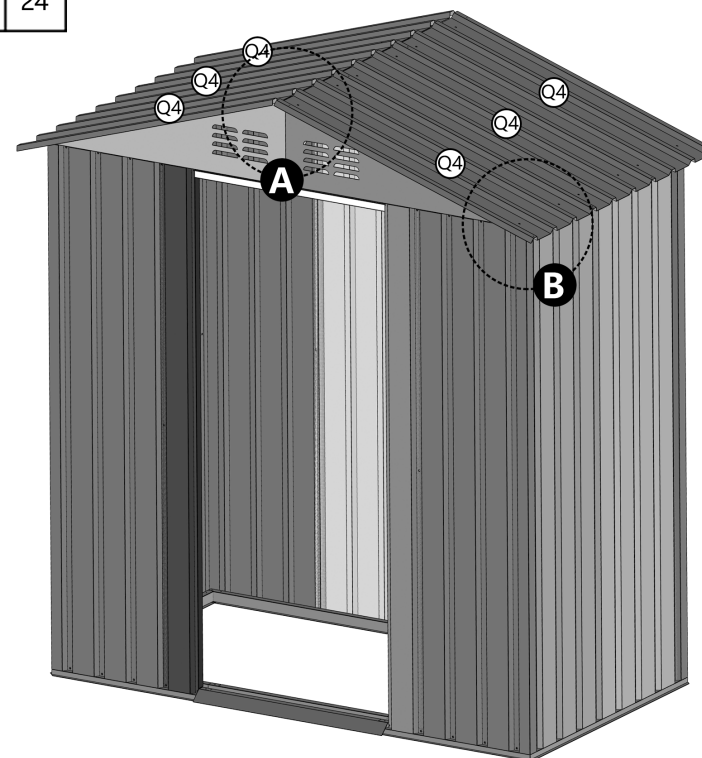


Notice:

Install Q4 in sequence, overlap between every 2 pieces, and each Q4 needs 2 rows of F1 fixed.

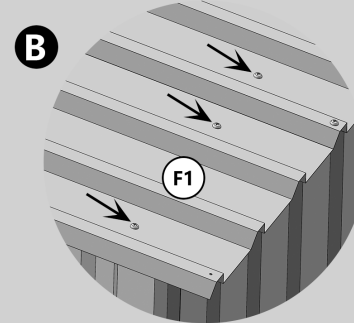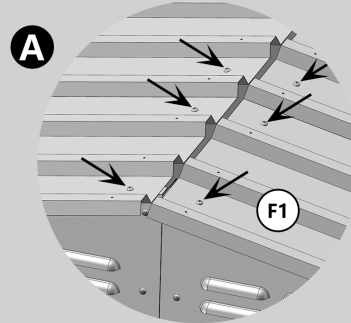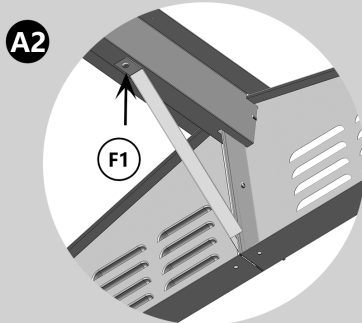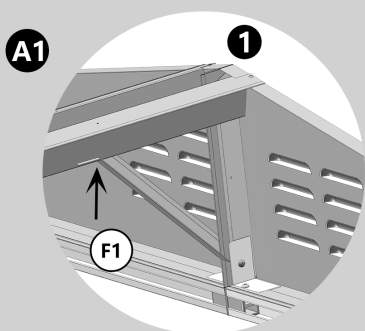


NO.	PART	Qty.	NO.	PART	Qty.
GB1		4	F1		4
GB2		2	J1		4

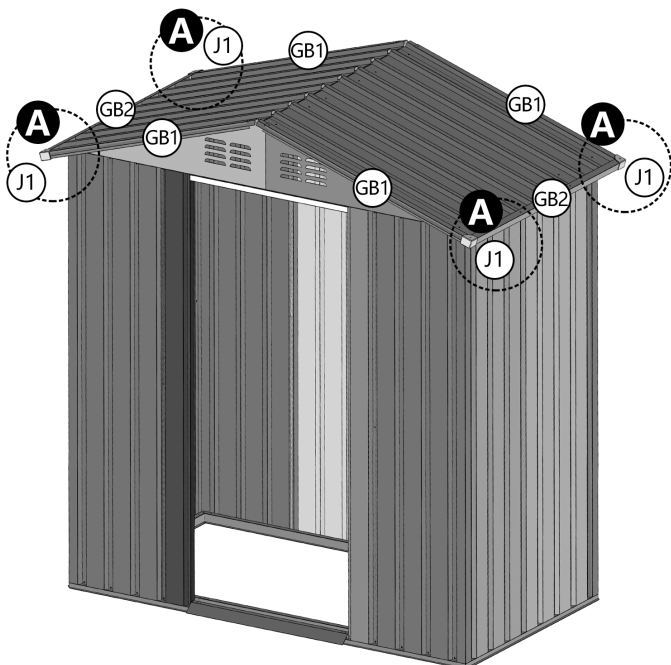


Notice:

As shown in the picture, fix GB1 and GB2 with F1 on the edge,
The four corners GB1, GB2, J1 share the hole position.

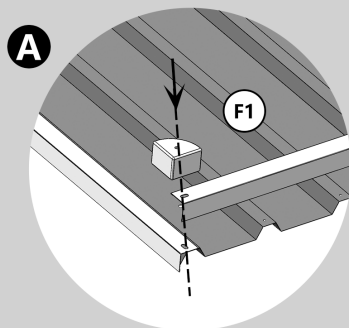


NO.	PART	Qty.
GW1		1
GE		2
F1		2

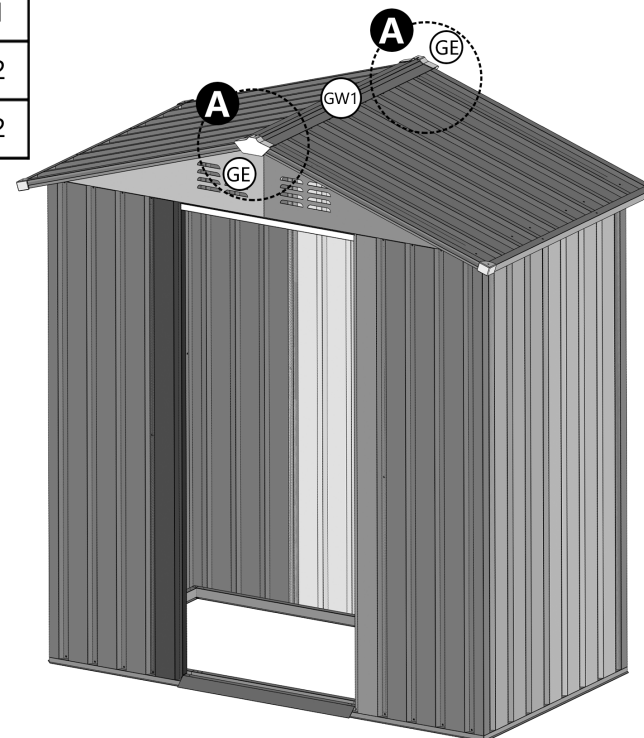



Notice:

Put the GW1 on the roof, install it with the GE, and fasten it at both ends with F1.


① Description :GW1, Q4, GB1 share side holes.

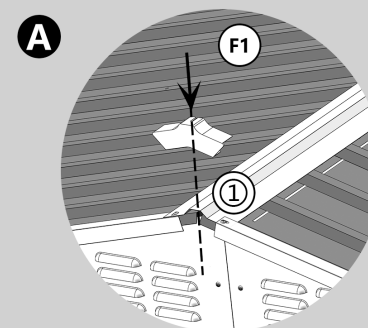


NO.	PART	Qty.	NO.	PART	Qty.	NO.	PART	Qty.	NO.	PART	Qty.
M2		4	M5L		1	M		2	F3		4
M3		4	M5R		1	GD		4	F4		12
M4		2	MB		2	F1		6			

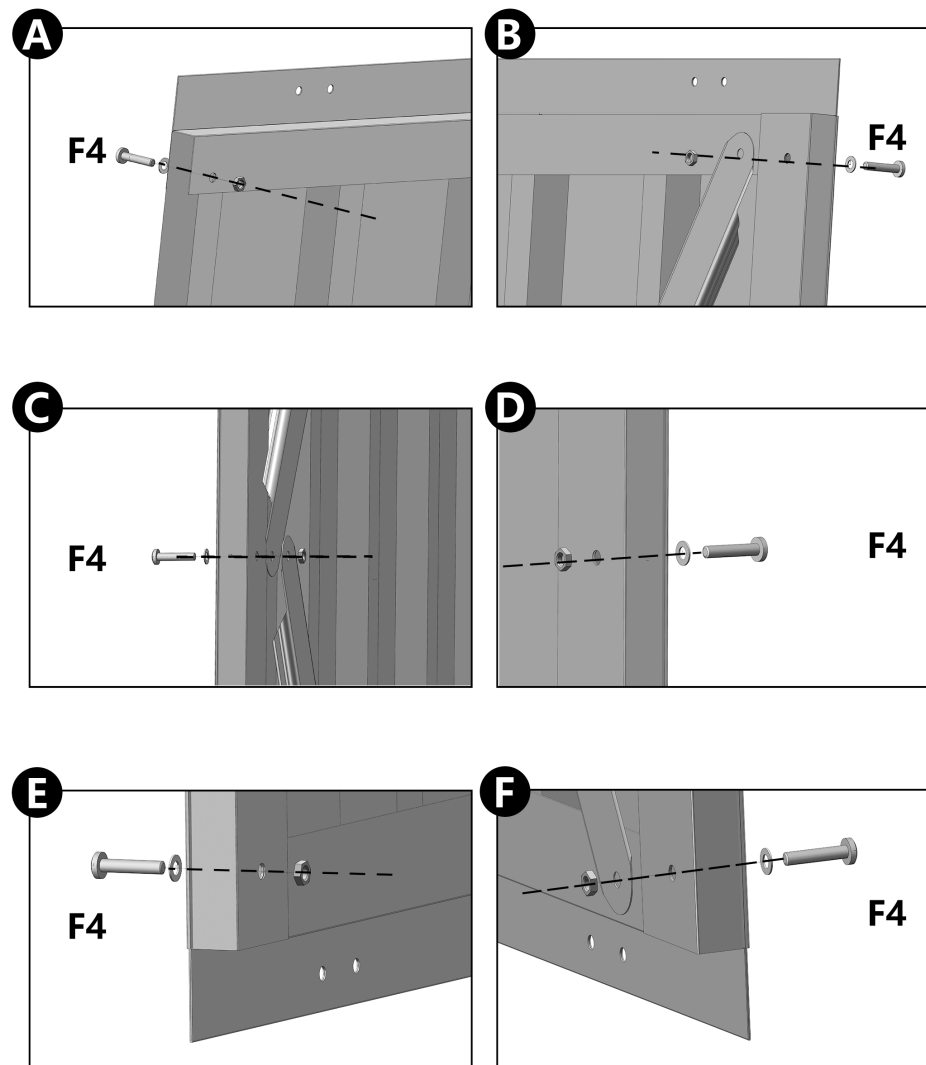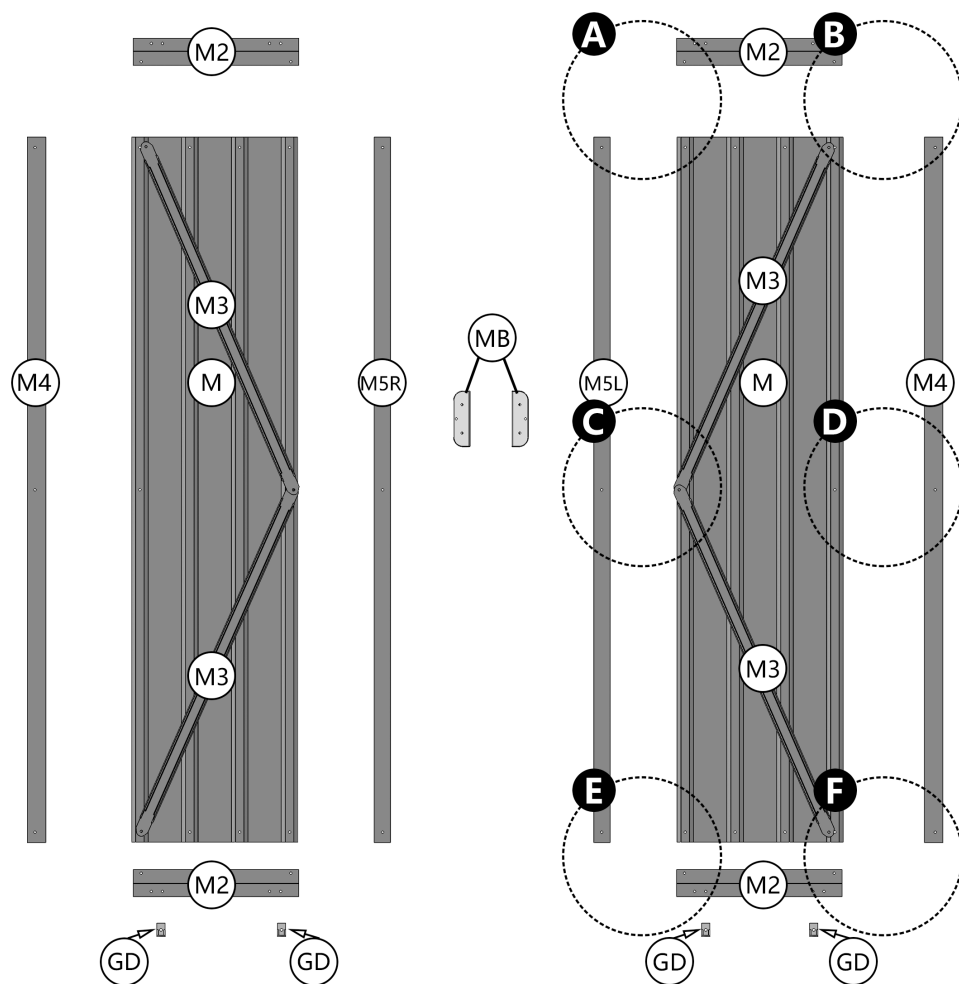


NO.	PART	Qty.
F1		3
F3		2
F4		6

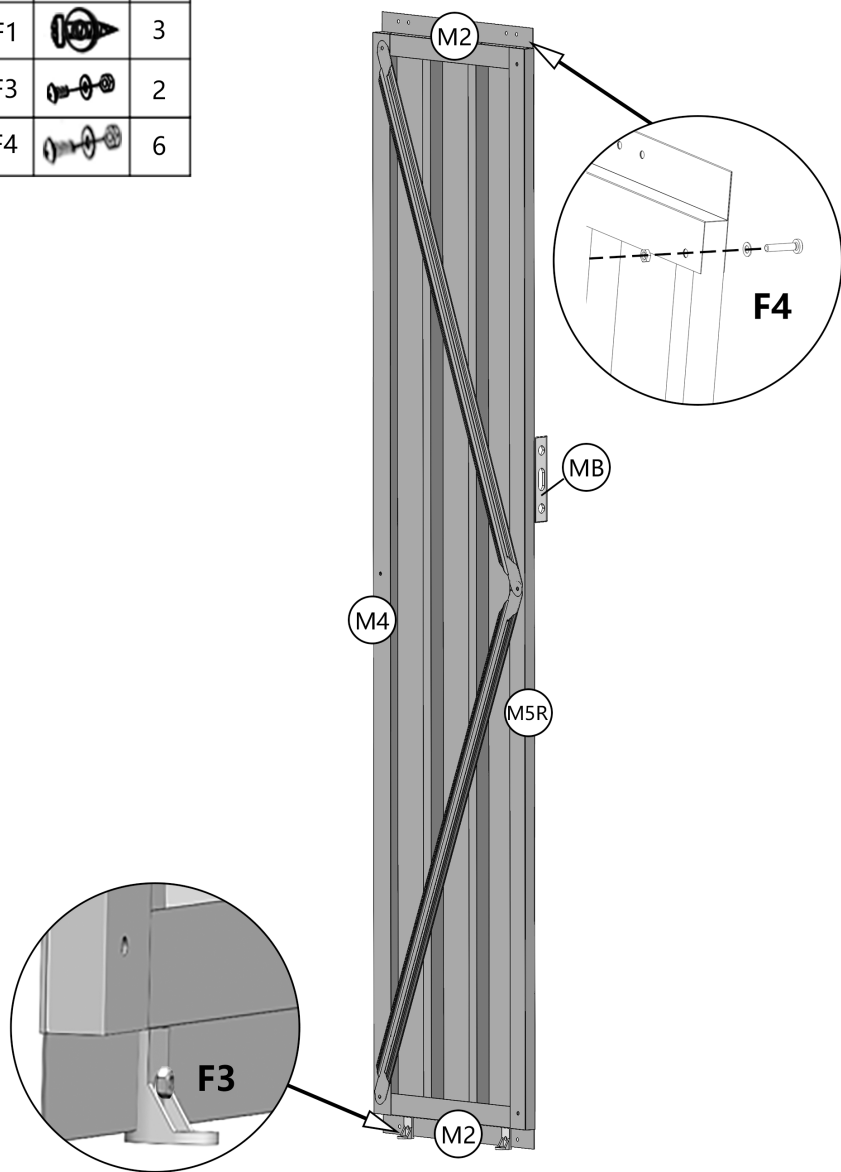

NO.	PART	Qty.
F1		3
F3		2
F4		6

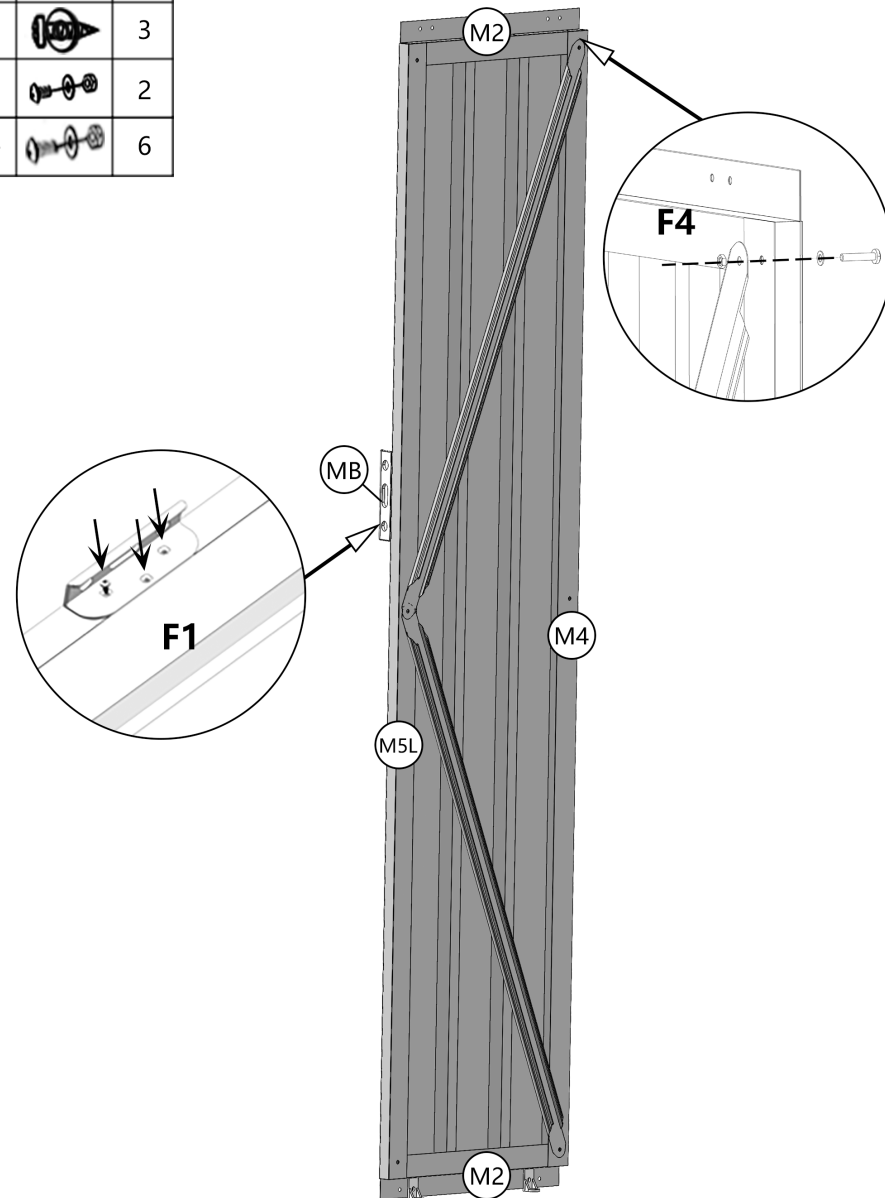

NO.	PART	Qty.
F1		8

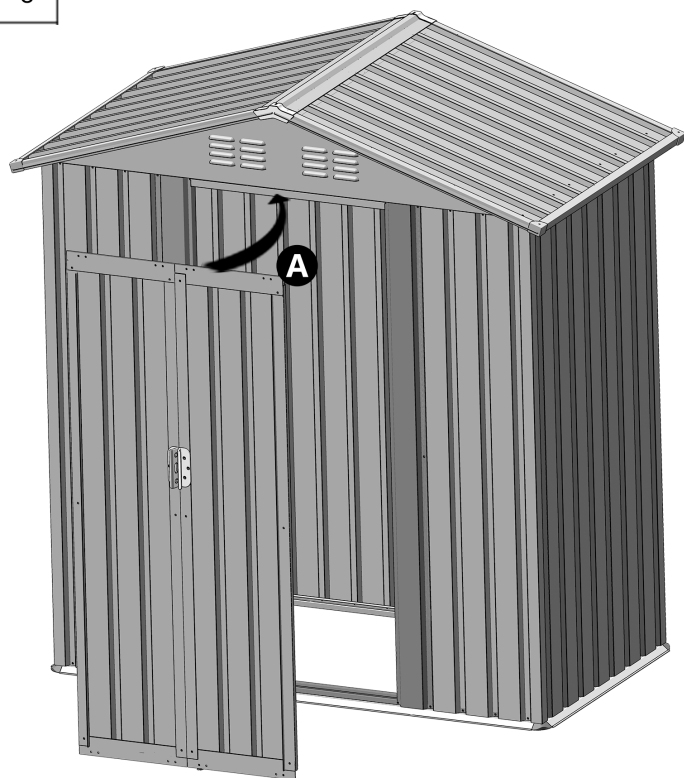

Notice:

Use F1 to secure the installed door to the pulley

The adjustment of the door can be achieved by the three holes of the pulley being at different heights

